 


1. Welcome

Congratulations on your purchase of Micromax X098 handset. This handset offers you the following features:

- Digital Camera
- FM Radio
- LED Torch
- Music Player
- Sound Recorder
- Dual SIM
- 1.7 inch screen
- Bluetooth/WAP
- Memory Card Support (expandable up to 8GB)
- Hindi Language support
- Marathon Battery

2. Phone Layout

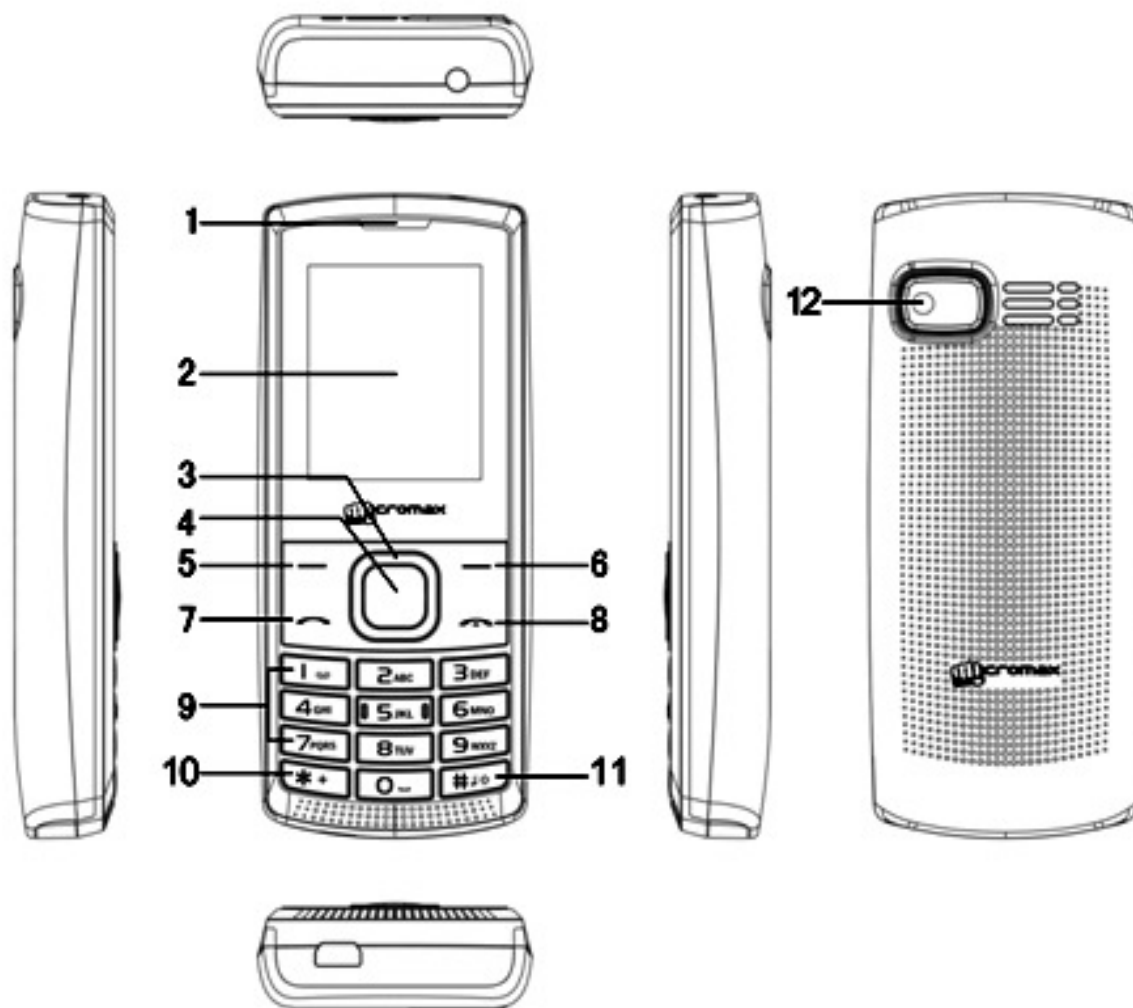

1. Receiver

2. Screen

3. Navigation Key

4. OK Key

5. Menu Left

6. Menu Right

7. Call Key

8. End Key

9. Number(0-9)Key

10. "*" Key

 
11. "#" Key

12. Camera

3. Getting Started

3.1 Insert SIM


1. Switch off the mobile phone and remove the rear cover and battery.
2. Insert the SIM card(s) correctly in the card slot(s) as shown below.

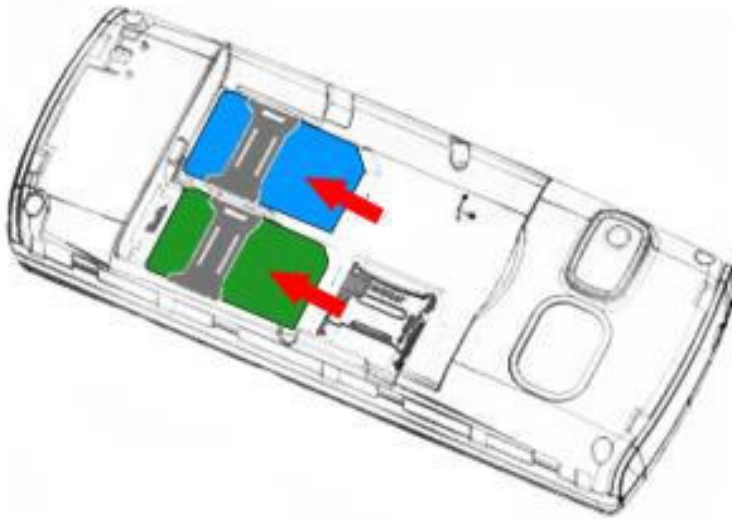

3. Finally, insert the battery and replace the rear cover of the mobile phone.

3.2 Insert Memory Card

 1. Switch off the phone and remove the rear cover and the battery.
2. Insert the memory card in the card slot as shown below.

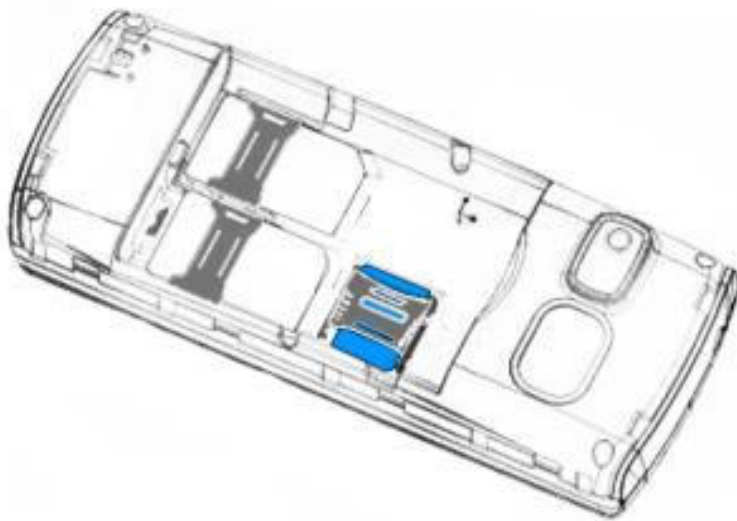

3. Insert back the battery and the rear cover of the mobile phone.



The Memory Card gives you extra storage capacity for content such as pictures, music and video clips.



Do not remove the memory card while reading or writing to the card. Doing so may cause data corruption on the card or on the phone.



Use only compatible memory cards approved by Micromax. Incompatible cards may damage the slot or corrupt the data stored in the card.

3.3 Charging the Battery

You can charge your battery via the charger or the USB cable supplied with this phone.

1. Connect the charger to the charger jack on the phone.



2. Connect the charger to a power socket or connect the USB jack of the cable with the PC or laptop. The charging starts, with the charging icon displayed in an animated state.
3. When the charging icon becomes static, it indicates that the battery is full.
4. Disconnect the charger from the power socket and the phone after charging.



Please charge the battery before you use the newly purchased phone. We suggest you to charge the battery for at least 4 hours continuously for the first time.

4. How to use Your Phone

 
4.1 Switch On/OFF

Long Press the End/Power key to switch on and off your phone.



4.2 Lock/Unlock the phone

From the home screen press Left key and then immediately press * to unlock the phone.

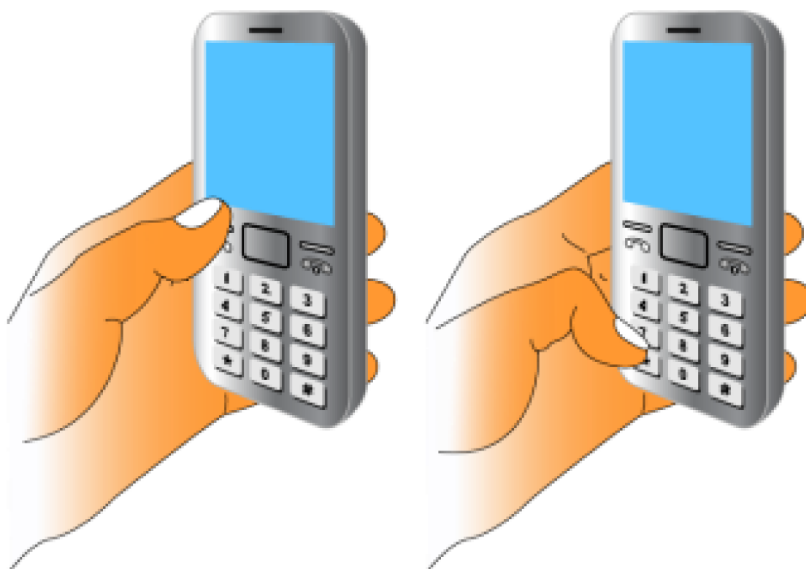

To lock, press **Left** key and then press *****.

4.3 Make a Call

Dial a number and press the **Call** key to make a call.

You can also call a number from the phonebook or dialed or missed call list in the same way.



4.4 Answer/Reject a call

To answer, press the call key.



To reject, press End/Power key as shown in the following figure.



4.5 Make an International call

From the home screen, long press the * key till + displays on screen.

Enter the desired international code and then complete the phone number make the call.

4.6 Change the Volume

Press the Up and Down navigation key as shown below to change the call volume.



4.7 Send Messages

Menu> Messages

You can compose a new message or reply to existing messages in the list. You can also send and receive multimedia messages.

4.8 Add contacts to Phonebook

Menu> Phonebook> Left Key> New

This feature enables you to add new contacts.

You can also save contacts through call logs, messages, dial pad.

4.9 Use Multimedia Features

Menu> Multimedia

You can use camera, Image viewer, Video recorder, Video player, music player, Sound recorder and FM radio.

4.10 FM Radio

Menu> Multimedia>FM Radio

You can listen to your favorite FM channels using the inbuilt FM receiver of your phone.

You need to insert the Earphone to listen to the radio. You can insert the earphone as shown below:



Use the navigation keys and Ok key to use various features in the

FM radio interface.

4.11 FM Radio

Menu> Multimedia> FM Radio

You can listen to your favorite FM channels using the inbuilt FM receiver of your phone.

You need to insert the Earphone to listen to the radio. You can insert the earphone as shown below:



Use the navigation keys and Ok key to use various features in the FM radio interface.

5. Notable Features

5.1 Torch

Long press the 0 key to turn on/off the torch or you can go to Organize to turn on/off the torch.

5.2 Bluetooth

Menu> Connectivity>Bluetooth

Turn on Bluetooth to exchange data with other Bluetooth enabled devices.

5.3 Blacklist

Menu>Settings>Security >Blacklist

This feature allows you to stop receiving calls from the blacklisted numbers.

5.4 Privacy Protection

- a. Go to **Menu> Settings>Security> Privacy Protection**
- b. Enter the default password to set the privacy lock.
- c. Select and enable the desired objects to protect and save the choice.

Each time you access the protected feature such as messages, you will be asked for the password.

Note: The default password to access this feature is 0000.

5.5 Theft Tracker

Menu> Settings> Security > Theft Tracker

You can track your phone in case of loss or thefts by activating the Mobile Tracker mode and configuring an alternate number and message to be received from the unauthorized user. The default password to use this feature is 0000.

5.6 Phone Language

Menu>Settings>Phone Settings>Language Settings

You can change the phone language according to your preference.

5.7 Phone Security

Menu>Settings>Security > Phone Locked

You can set the password to unlock the phone. Default password is 0000.

5.8 Auto Call Recorder

Menu> Settings >Call Settings>Others> Auto Record Voice Call

You can use this feature to automatically record all your calls.

5.9 Music Player

Menu> Multimedia> Music Player

The phone comes with an inbuilt music player that plays all your favorite songs stored in the memory card.

Press the Left key to choose various music options

- Play/Stop: by pressing OK Key.
- Shift Music: by pressing left and right Navigation keys.
- Adjust Volume: by pressing * and # keys.

5.10 Camera

Menu> Multimedia > Camera

Press the left key in camera mode to choose various settings. Press the Ok key to take photos.

5.11 File Manager

Menu> File Manager

Allows you to view and manage files available in your phone or memory card.

Warning: All existing files in the memory card will be deleted after your format the memory card.

5.12 Restore Factory Settings

Menu > Settings> Restore Factory Settings

The phone will prompt you to input password (default is 0000). You can carry on corresponding operation after entering the correct password.

After running “Restore settings”, your phone will be restored to the setting when you purchased the phone.

6. Safety Precautions

Please read these simple guidelines. Not following them may be dangerous or illegal.



Safe Driving

- Do not use the phone while driving. When you have to use the phone, please use the personal hands-free kit.
- Please put the phone safely in the phone stand. Do not put it onto any passenger seat or any place from which it may fall down in case of vehicular collision or emergency braking.



During Flight

Flight is influenced by interference caused by the phone. It is illegal to use a phone on the airplane. Please turn off your phone during a flight.



In Hospitals

- Your Phone's radio waves may interfere with the function of inadequately shielded medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external RF energy. Switch off your device when regulations posted instruct you to do so.
- To avoid potential interference with implanted medical devices such as a pacemaker or cardioverter defibrillator:
- Always keep your phone at least 15.3 centimeters (6 inches) from the medical device.
- Do not carry the wireless device in a breast pocket.
- Turn off the phone if there is any reason to suspect that interference is taking place.
- Follow the manufacturer directions for the implanted medical device.
- If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.



Unsafe Areas

Please turn off your phone when you are close to a gas station or in the vicinity of any place where fuel and chemical preparations, or any other dangerous goods are stored.

7. Taking Care of Your Device

Your device is a product of superior design and craftsmanship and should be handled with care: The following suggestions will help you protect your phone:

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will rust electronic circuits. If your device does get wet, remove the battery without turning on the device, wipe it with a dry cloth and take it the service center.
- Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not attempt to open the device other than as instructed in this guide. Repairing this phone by yourself other than our authorized service agents/centers goes against the warranty rules.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not store your device near magnetic fields or allow your device to come in contact with magnetic fields for extended period of time.
- Location: The socket-outlet shall be installed near the equipment and shall be easily accessible.



Battery Recommendations

- Please put the battery in a cool and well-ventilated place out of direct sunlight. We recommend you to charge the battery at room temperature range.
- Batteries have life cycles. If the time that the battery powers equipment becomes much shorter than usual, the battery life is at an end. Replace the battery with a new battery of the same make and specification.

- Use manufacturer approved batteries, chargers, accessories and supplies. Micromax will not be held responsible for user's safety when using unapproved accessories or supplies.
- Do not discard the battery with household trash. Please dispose of used battery according to your local environmental laws and guidelines.
- Warnings on Battery:
 - Please use appointed battery in case of explosion risk.
 - Please dispose of lifeless battery under guidance.

Recycle Your Phone



The WEEE logo (shown at the left) appears on the product (battery, handset, and charger) to indicate that this product must not be disposed off or dumped with your other household wastes. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling of such hazardous waste.

Collection and proper recovery of your electronic waste equipments at the time of disposal will allow us to help preserve the environment. Recycling of the electronic waste equipment will ensure safety of human health and environment. For more information on best practices for disposal of electronic and electrical waste, please visit to our web site: www.micromaxinfo.com/weee.php.

Disclaimers

- The colors and specifications shown/mentioned in the user manual may differ from the actual product. Images shown are for representation purpose only. Other product logos and company names mentioned herein may be trademarks or trade names of their respective owners.
- Micromax keeps the right to make modifications to the content in this user guide without any prior notice.

- The functions explained or listed in this manual may differ from the actual functions appearing in the mobile phone. In such a case, the latter shall govern. We do not guarantee the absolute accuracy of the User Guide Vis-a vis the actual handset.

Copyright

All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Micromax is strictly prohibited.