



X118
User Guide

Micromax Informatics Ltd

1. Legal Information.....	4
2. Important Notice	5
3. Getting Started	6
3.1. Packing Contents	6
Memory Card Installation	7
Left Soft Key	9
Right Soft Key	9
Call Key	9
End Key	9
Up and Down Direction Keys	9
Left and Right Direction Keys	10
0-9 Keys	10
* & # Key	10
3.2. Important Phone Icons.....	10
Signal Strength Icon.....	10
Battery Meter Icon	10
Keypad Lock Icon	10
3.3. Basic Functions	11
Making a Call Using Call Logs	11
Answering a Call	11
Call Option	11
3.4. Menu Layout.....	12
4. Function Menu.....	14
4.1. Multimedia	14
Video Player:.....	14
Audio Player.....	14
Sound Recorder.....	15
FM Radio.....	15
FM Radio Receiver.....	15
Schedule FM Recorder	15
4.2. Phonebook	16
Phonebook List:.....	16

Search Contact:	16
Add New Contact:	16
Caller Group:	16
Phonebook Settings:.....	16
4.3. Call Logs.....	17
4.4. User Profiles	17
4.5. Messages	18
Text Message:	18
Chat:	19
Voice Mail Server:	19
Broadcast Message:.....	19
4.6. File Manager	19
Memory Card	19
4.7. Applications.....	19
Games.....	19
STK:.....	20
Calculator:.....	20
Converter:.....	20
Stopwatch:.....	20
Flash Light:	20
Missed Call Alert	20
SMS Received Alert	20
4.8. Organizer	20
Calendar.....	20
Alarm	21
To Do List	21
World Clock.....	21
4.9. Settings.....	21
Dual SIM Settings	21
Phone Setup.....	22
Network Setup	23
Security Setup	23
Call Setup	23

Restore Factory Settings	24
4.10. Applications	24
Games	24
STK:.....	24
Calculator:.....	24
Converter:.....	24
Stopwatch:.....	24
Flash Light:	24
Missed Call Alert	24
SMS Received Alert	24

1. Legal Information

All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Micromax is prohibited.

Micromax operates on a policy of continuous development. Micromax reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall Micromax be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Micromax reserves the right to revise this document or withdraw it at any time without prior notice.

The availability of particular products may vary by region. Please check with the Micromax Executive or by email at info@micromaxinfo.com

Disclaimer: Micromax will not bear any responsibility for any incompliance with the guidelines mentioned below; or improper use of the mobile phone. Our company keeps the right to make modifications to any of the content here in this user guide without public announcement in advance. The content of this manual may vary from the actual content displayed in the mobile phone. In such case, the latter shall govern.

2. Important Notice

Important Safety Precautions

 
- Do not use the device while driving. Please see that in some countries, it is illegal to use such devices while driving.
- Switch off when refueling. Do not use the device at a refueling point (service station) or near fuels or chemicals.
- Switch off in aircraft. Mobile phones and GSM devices can cause interference. Using them on aircraft is both illegal and dangerous.

Follow Special Regulations

- **Special Regulation.** Follow any special regulations in force in any area and always switch off your device whenever it is forbidden to use it, or when it may cause interference to the surrounding.
- **Radio Interference.** All mobile phones cause radio interference within the specified Limits of GSM standards.
- **Qualified Service.** Only qualified service personnel must repair the equipment. Use only approved accessories and batteries.
- **Emergency calls.** Ensure that the phone is switched on and in service. Enter the emergency number (112 or another official emergency number) and press the "Dial" key.
- **Use only approved accessories.** The use of any other power accessory will violate warranty conditions that apply to the phone.

Safe Operation Instructions

- Before Installing or operating this product, read this manual carefully.
- Do not expose unit to rain or moisture.
- Do not place unit on or close to any heat source.

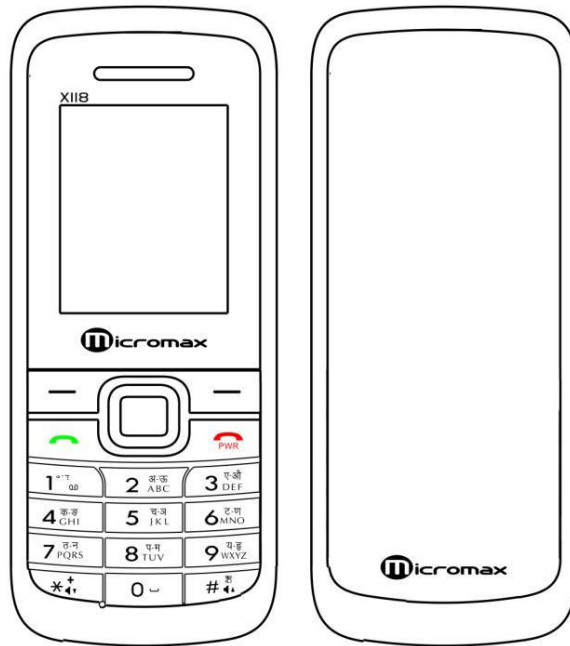

3. Getting Started

3.1. Packing Contents

Before using Micromax X118 mobile phone, carefully remove the contents from the shipping carton and check for any damages or missing contents. In case you found any, contact your Authorized Distributor or Shipping agent immediately. The standard packing contents are as follows:

- Base Transceiver
- Standard Battery(850mAh)
- User Guide
- Service Guide
- Charging Adaptor
- Hands-Free Unit

INSTALLING SIM, BATTERY AND ATTACHING OTHER ACCESSORIES SIM CARD & BATTERY INSTALLATION (FIGURE 2)

Always turn off the phone and detach the charger when you insert or remove a SIM card or Battery from the phone.

1. Remove the battery cover by pulling it as shown in Figure 2.
2. Slide the SIM Cards into their holder. Make sure that the gold contacts of the SIM Cards are facing down, and the cut off corner is correctly aligned as shown in the embedded picture.

3. Place the battery in the back of the phone with the label side up and the connectors facing each other.
4. Place the battery cover as shown in the picture and press it into place.

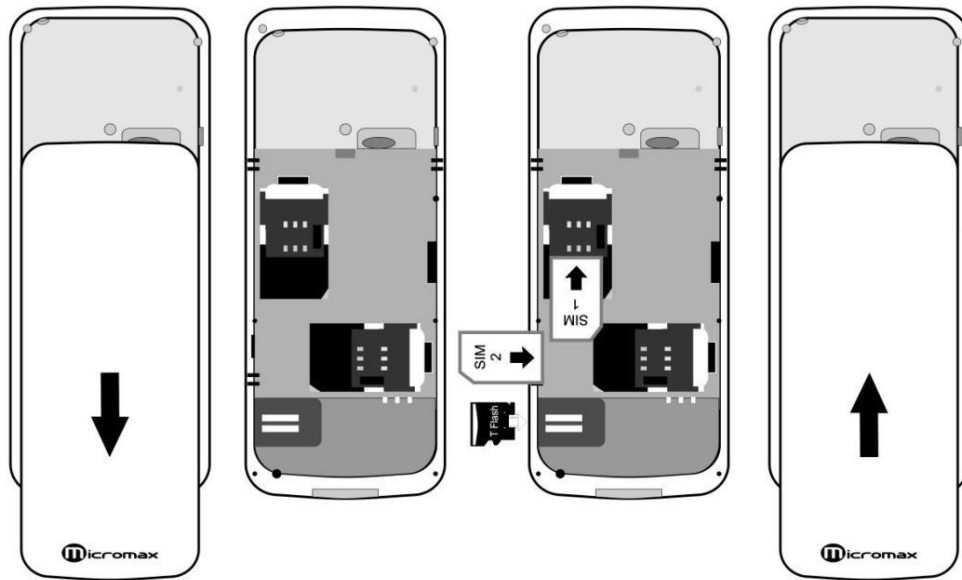 


Figure 2

Memory Card Installation

The Memory Card gives you extra storage capacity for content such as pictures, music and video clips. To install:

1. Remove the battery cover by gently pulling and remove the battery as shown.
2. Slide open the memory card cover as shown and place the card inside the slot.

NOTE: Do not remove the memory card while reading or writing to the card. Doing so may cause data corruption on the card or on the phone.

CONNECTING HANDS-FREE KIT (REF FIGURE 3)

You are provided with a hands-free earpiece set with your phone. The same can be used to listen to your mp3 songs and listen and speak while on a call. To connect the hands-free earpiece, simply connect the connector into the connecting socket as shown in figure. When properly connected, the phone will display a message 'Earphone Plugged In!' with an icon displayed on top of the screen.

NOTE: Only use Micromax specified accessories.

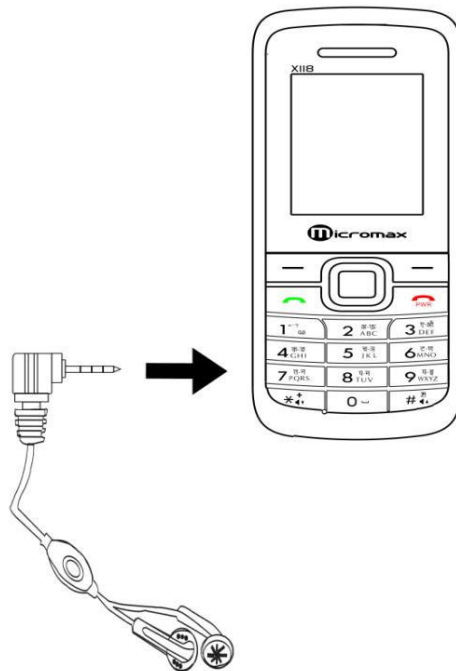 


Figure-3

CONNECTING THE CHARGER/CHARGING THE BATTERY (REF FIGURE 4)

1. Plug the charger's transformer into a standard AC outlet.
2. Insert the charger's output plug into the phone's connecting socket as shown in figure.

NOTE: It may take up-to 30 minutes before the battery icon/charging icon appears on the screen when charging.

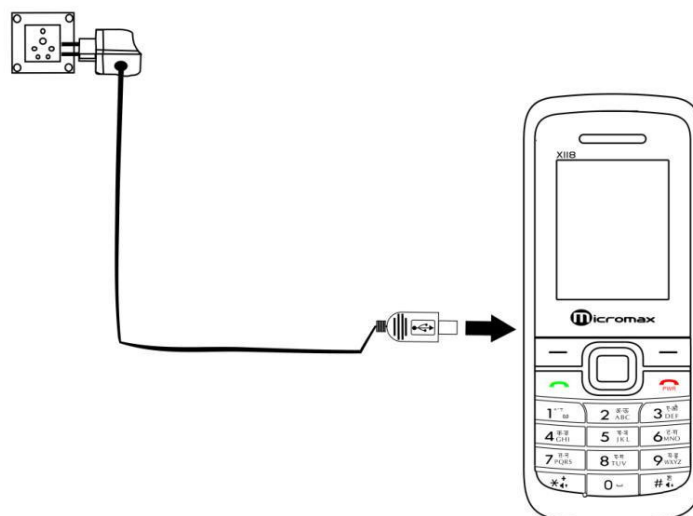 


Figure-4
POWERING ON AND OFF THE PHONE

To Power your phone ON or OFF, press and hold the End (RED) key for at least 3 seconds or until the display lights goes up or goes off. Enter the lock code if necessary and select OK to Power ON.

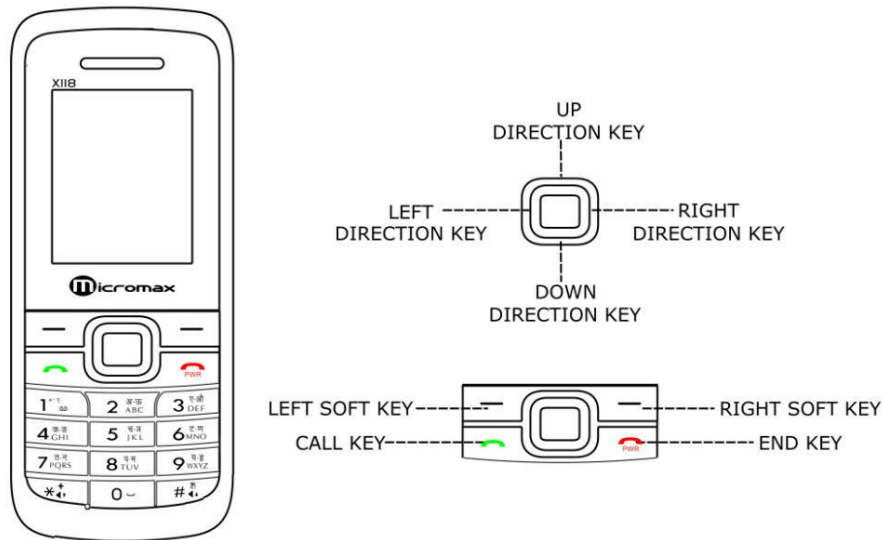 


Figure-5
PHONE KEYPAD LAYOUT (FIGURE 5)

Left Soft Key

Performs functions in lower left display. In standby mode, press OK key to open shortcut functions

Right Soft Key

Performs functions in lower right display.

Call Key

- Make calls
- Answer calls
- Press when idle to see the list of calls.

End Key

End or reject calls; Press and hold this key to turn phone ON/OFF.

Up and Down Direction Keys

- Scroll to select options
- In standby mode press to open corresponding applications.

- In edit message status, press to select the required word.
- In function menu, scroll to open corresponding function.

Left and Right Direction Keys

- Scroll to select options
- In standby mode press to open corresponding applications
- In edit message status, press to select the required word.

0-9 Keys

In standby mode, press number keys to input dialing number. In standby mode, press and hold 1-8 key to directly call the number set before, in the speed dial list. In edit status, press to input numbers, characters and phonetic notation. In edit mode, except input number, press 0 key to input space. In functional menu, press numbers to speed select submenu items.

*** & # Key**

Functions vary in different situations or function menus: On Input Screen, press "*" for symbols. On Input Screen, press "#" to switch between different inputting methods. In standby and dial mode, press and hold "*" to input +. In standby mode, input "+" for an international call.

3.2. Important Phone Icons

Signal Strength Icon

The Signal Strength Icon is seen on the top leftmost corner of the screen. The icon helps you to identify the strength of the network; the phone has latched on to, at that particular instance. It has a maximum of 4 bars and with a minimum as no bar. 4 bars signify strongest network strength and subsequently minimizes with each diminishing bar. No bar signifies least or no network strength.

Battery Meter Icon

The Battery Meter Icon is seen on the top rightmost corner of the screen. The icon signifies the battery strength available at that instance. The icon will signify the maximum battery strength by 3 bars and no bar will signify least battery strength.

NOTE: At very low battery levels, the phone will prompt 'Low Battery' message on the screen.

Keypad Lock Icon

The Keypad Lock Icon is seen on top of the screen at various positions depending on the number of icons displayed. An Open Lock signifies that the phone's keypad is unlocked and a closed lock signifies that the keypad is locked.

You can unlock the keypad by pressing Lock/ Unlock by pressing the **RSK** on the phone, followed by the *** key**. Similarly for locking the keypad, press the End (RED) key, to be followed by the Send key.

3.3. Basic Functions

Making a Call Using Call Logs

All dialed and incoming numbers are saved in call logs and categorized into Missed Calls, Received Calls and Dialed Calls. To check the logs, please follow these steps:

In standby mode, press the Send (GREEN) key to view Call Logs. Use the scroll keys to scroll between Missed Calls, Received Calls and Dialed Calls.

Or else, you can go to Call Logs>Call History>Select the appropriate SIM to view the missed, received and dialed calls.

Answering a Call

- To receive an incoming call, press the Option key and select 'Answer' or receive it directly by pressing the Send (GREEN) key.
- If headset is available, user can choose headset keys to answer the call or turn on auto answer.

Call Option

The Micromax X118 phone offers multiple functions during a call. During a call, following functions can be actualized if you operate according to the instructions on the screen. Press up and down direction keys to choose the wanted function and press select key to enter.

- Hold a Call: To hold an Active call.
- Swap between Held/Waiting and Active: Swap among the calls. This option is network dependent.
- End: End the present active call only.
- New call: To make a new call.
- Phone Book: To explore the Phonebook for phone numbers.
- Message: To explore the SMS menu (Inbox, outbox, etc)
- Sound Recorder: To record the present active call for later listening/review.
- Mute: Turn off the Microphone during an active call.
- DTMF (Dual-tone Multi-frequency): You can choose on/off; which is to send dual-tone multi-frequency sound. This can offer dialing to the telephone numbers with extensions or IVR systems installed for menu driven options.
- Conference: By multi-way conferencing, you can answer an incoming call and add new participants according to the prompt. Keep the ongoing multi-way

conference, have a private conversation while keeping all the others on hold, get through one participant with another one, quit yourself from the conference.

NOTE: This feature is network dependent.

3.4. Menu Layout

3.4.1 Multimedia

- Video Player
- Audio Player
- Sound Recorder
- FM Radio

3.4.2 Phonebook

- Phonebook List
- Add New Contact
- Group
- Send Vcard
- Phonebook Settings

3.4.3 Call Logs

- SIM1 call logs

3.4.4 User Profile

- General
- Meeting
- Outdoor
- Indoor
- Headset

3.4.5 Messages

- SMS

- Chat
- Voice Mail Server
- Broadcast Message

3.4.6 File Manager

- Memory Card

3.4.7 Organizer

- Calendar
- Alarm
- To Do List
- World Clock

3.4.8 Settings

- Reception Mode
- Phone Setup
- Network Setup
- Security Setup
- Call Settings
- Restore Factory Settings

3.4.9 Applications

- Fun & Games
- STK
- Calculator
- Converter
- Stopwatch
- Flash Light

- Missed Call Alert
- SMS Received Alert

4. Function Menu

4.1. Multimedia

The Micromax X118 comes with a host of multimedia applications to provide you with unlimited entertainment.

Video Player:

The Video Player plays all your video files stored in the phone (Phone Memory or on the Memory Card). The video player gives you the following options:

- **Play** – To start playing the video file.
- **Rename** - To rename an already saved file.
- **Delete** – To delete an existing file.
- **Delete All Files** – To delete all files at once.
- **Sort** – To sort the already saved files by Name, Type, Time and Size.

Audio Player

The Micromax X118 comes with an inbuilt audio player that plays all your favorite songs stored in the micro SD memory card. It gives you a host of setting options to make your listening experience interesting.

The player gives you an option to select from a list of songs already stored in the memory card, to be played, added to your ring tones or deleted.

The player has the following setting options:

- **Repeat:** You can also select to repeat the song or complete play list (Off/One/All).
- **Shuffle:** You can shuffle the order of your songs to be played. If you put this mode ON, then the songs will be played in a random fashion otherwise, a sequential pattern will be followed.
- **Back Ground Play:** Back Ground play option allows you to enjoy your music even if the player is minimized to use other functions of the phone.
- **Lyrics Display:** Micromax X118 offers you an exciting feature of displaying you sing with the song while the lyrics are displayed on the phone screen when the song plays. Once the Lyrics Display is put ON and the lyrics file of the song is stored in the same folder as the song is, you can play the song and sing with it, reading from the display.

Sound Recorder

You can record sound/voice on your Micromax X118 phone. Just select sound recorder, go to options and press record. Select Stop to rename the file and save it. Select pause to 'pause' the recording and 'continue' to resume the recording.

FM Radio

The Micromax X118 comes with an in-built FM Radio Receiver/Schedule FM Recorder. The X118 comes with a built-in FM Receiver antenna. Hence, you don't need to plug the hands-free to listen to radio anymore. Press Options to find:

The FM Radio also gives you an option to change the settings through short-cut keys available on the main window. Such as 'To Power ON', to 'Skip to next channel', to 'skip to previous channel' etc.

FM Radio Receiver

You can schedule the FM Receiver to automatically start playing according to the schedule fed in the player. You can save as many as 5 preset settings in the player.

- **Channel List:** Store all the channels that the FM Radio can receive. You get options to play or edit them.
- **Manual Input:** You can store and register your channel frequency and play it by pressing OK.
- **Preset Auto Search:** On selecting this, the FM tries to scan all the available channels provided by the network. To start the search, make sure that the radio is powered ON.
- **Settings:** Under settings, you have options for Back Ground Play (ON/OFF), Loud Speaker (ON/OFF), Recording Format (AMR/WAV) and Record Storage (Phone or Memory card).
- **Record:** You can record your favorite music or program. To record, make sure that the radio is powered ON.
- **File List:** Select File List to check your previously stored files.
- **Append:** The append option enables you to continue recording further to a pre recorded sound file.

Schedule FM Recorder

Micromax X118 comes with a unique feature of FM Scheduling. This feature enables you to schedule the radio to power ON itself and record your favorite program. You can set the time, date, and channel and record functions to record the desired program. It can record 4 programs for you to enjoy them anytime later at your own wish. On pressing Edit, you will have following functions to set:

- Power ON/OFF
- Date and Time

- Repetition Cycle
- Channel setting
- Record Setting

4.2. Phonebook

Phonebook List:

Allows you to call a number stored in your phonebook list.

Search Contact:

Unlike Quick search, Search option enables the user to search an entry by its complete name.

Add New Contact:

Select this option in order to add a new entry into the SIM memory or to the phone memory.

Caller Group:

Caller Group contains five default groups:

- Friends
- Family
- VIP
- Business
- Others

Selecting any group allows you to edit the options available with it. For example:

- Setting the ring tone associated with the group.
- Picture associated with the group.
- **Send VCard:** The phone gives you 2 vCard Versions.
- **My vCard:** My vCard gives you an option to edit and send your business card to the selected recipients.

Phonebook Settings:

The following fields are listed under settings:

- **Extra Number:** It has the following options to edit
 - **Owner Number**
Owner Number lets you input your own phone number and name. If set to ON, the phone's main screen displays the name or your number on the screen.
NOTE: This is a SIM Card dependant service.

- **Memory Status:** This option enables you to check the memory status of the phone and the SIM card.
- **Fields:** Gives you an option to select the fields to be edited at the time of adding a new entry in the Phone book. The fields include:
 - Home Number
 - Company Name
 - Email Address
 - Company Number
 - Fax Number
 - Birthday
 - Caller Picture
 - Caller Ringtone
 - Caller Group
- **Send VCard:** The phone gives you 2 vCard Versions.

4.3. Call Logs

Calls Logs gives you the option to check missed calls, received calls, dialed calls etc in SIM1 and SIM2

4.4. User Profiles

All the different profiles are listed under this option:

- **General:** The Profile gives you an option to activate and customize the settings. You can customize the following features:
 - **Tone Setup:** Tone Setup enables you to set up different music tones to different functionalities of the phone like, Incoming Call, Power ON, Power OFF, Message Tone and Keypad tone.
 - **Volume:** You can vary the volume levels for Ring Tone and Key Tone.
 - **Alert Type:** Alert Type lets you choose the way you want to be alerted. You can choose from, Ring, Vibration only, Vibration and Ring, Vibration then Ring and Light only.
 - **Ring Type:** Ring Type lets you select the type of ring to alert you. You can choose from Single, Repeat and Ascending.
 - **Extra Tone:** Extra Tone is added to a number of incidences such as Warning, Error, Camp On and Connect.
 - **Answer Mode:** Answer Mode gives you the choice to select 'Any' key answer mode. Any key enables you to receive a call using any key of the phone except the End (RED) key.
- **Meeting:** These modes are similar to General Mode and can be customized according to your own preference.

- **Outdoor:** These modes are similar to General Mode and can be customized according to your own preference.
- **Indoor:** These modes are similar to General Mode and can be customized according to your own preference.
- **Headset:** These modes are similar to General Mode and can be customized according to your own preference.

4.5. Messages

Your phone supports various messaging services. You can create, send, receive, edit and organize text messages.

Messages contain the following folders:

- SMS
- Chat
- Voice Mail Box
- Cell Broadcast

Text Message:

Under SMS, the phone has the following folders listed.

- **Write Message:** On selecting Write Message, the screen will pop up to ask you to input the contents of the message using different input methods (Templates, Insert Number, Insert Object etc).
- **Inbox:** This folder stores all the received messages.
- **Outbox:** This folder contains all the messages sent from your phone as well as the unsent messages.
- **Drafts:** This folder stores the unsent messages.
- **Templates:** Templates stores 10 preloaded/pre-written text messages for ready usage. You can edit the templates according to your wish and also store the messages that you send more often.
- **Message Settings:** Message settings stores all the different settings responsible for sending and receiving messages.
 - **Profile Setting:** It contains 4 default profiles which includes Profile name, Service Centre Address, Validity Period and Message type.
 - **Common setting:** These settings include the following - Delivery Report and Reply Path
 - **Memory Status:** Memory status gives you the information about the storage status of the phone memory as well as the SIM memory.
 - **Preferred Storage:** Lets you select the default storage location of the messages between Phone and SIM.

•**Save Sent Message:** Selecting this will enable you to save the message in the Outbox

Chat:

Chat enables you to enter 2 different user's default settings (Chat Room 1 and Chat Room 2) to enable sending and receiving the messages. Chat option enables you to see the complete conversation on a single window as in a messenger window.

Voice Mail Server:

The Voice Mail is an interactive system for storing, processing and reproducing verbal messages through a voicemail server. The service is operator dependant and the settings are provided by the operator upon activating the service on the SIM card.

Broadcast Message:

Your phone is capable to receive and store broadcast messages. You can set the receive status to ON/OFF. Read Message folder stores the received messages.

4.6. File Manager

Memory Card

As the name suggests, File manager allows you to manage all the files stored in the external memory card.

You can view the remaining memory and available memory in phone and micro-SD card.

You can open and navigate the directories and files in the storage.

You can View, Play and Setup files in the storage disks.

4.7. Applications

Games

To win the game the player has to move the designed boxes to the appointed locations. The player controls the man who stands by the box via navigation keys (Up, Down, Right or Left) or the number keys (2, 8, 4 and 6). To cancel the previous move, press number key 5, OK key or left function key.

Game Settings:

These settings enable you to vary the settings in Audio to ON/OFF, allow you to put the vibration mode to ON/OFF and to increase/decrease the volume levels.

STK:

STK stands for SIM Tool Kit. Please contact your service provider for more details.

Calculator:

Keep your calculations on your finger tips with the easy to use calculator.

Converter:

Make your calculations/conversions simpler and accurate.

Stopwatch:

Calculate any time duration with Typical stopwatch and Nway stopwatch.

Flash Light:

Select this to enable/disable the Dual LED Torch Light.

Missed Call Alert

Choose this option to set as a 'reminder'. If you have missed a call the phone will ring according to a time chosen by you to remind you to check the pending call.

SMS Received Alert

Choose this option to set as a 'reminder'. If you have received a message the phone will ring according to a time chosen by you to remind you to check the pending message.

4.8. Organizer

Calendar

You can use the calendar to keep track of important meetings. After entering the calendar function menu you can select year, month and date using direction keys. On a selected date you can select to view:

- **View Today/View All:** If there is a special background color on a date which means there is some task on that day. You can also view any Note / Remark mentioned by you for a task stored by you previously.
- **Add Task:** When you add a new task, you can do the following:
 - Input task duration time.
 - Add a Note for that task.
 - Set alarms on/off.
- **Jump to date:** Input a date, and then press OK to go to a specific date for entry/edit/viewing of task for that date.
- **Go to Weekly View:** Select this option to view tasks in weekly format.

Alarm

The Alarm can be set to ring at a specific time on several days. There are five different default alarms. You can set these alarms to alarm you at different time in specific day(s) of a week. The alarm can use radio as an alarm tone also.

To set an alarm:

- Press edit to enter alarm settings menu.
- Select edit option using up and down direction keys
 - **ON/OFF:** Select alarm on or off using left and right direction key
 - **Alarm time:** Input alarm time
 - **Repeat Setting:** Press left and right direction keys to select alarm types which consists of one time, everyday and weekdays.
 - **Alarm Tone:** Select the alarm that you wish to listen.
 - **Snooze:** To set Snooze duration in minutes.
 - **Alert Type:** To select between Ring/Vibrate combinations.

To Do List

All tasks saved in calendar, can be viewed in To-Do list.

World Clock

World clock can be used to know the time in various cities across the world. You can see a world map and instantaneous time in those cities using world clock. Enter world clock to view world cities time using the direction keys.

4.9. Settings

Under settings, the phone gives you the option to change the settings for various features of the phone.

The following list is available in Settings:

Dual SIM Settings

Dual SIM settings allows you to select the mode in which you want the phone to be. The Modes of the Phone are:

- **Dual SIM Active**

This mode allows you to access the services of both the SIM'S i.e. Dual SIM Dual Standby.
- **Only SIM1 Active**

Only the SIM1 is functional whereas the SIM2 is not accessed.
- **Only SIM2 Active**

This mode is used to enable the situation where you want only the SIM2 to be functional.

- **Flight Mode**

This mode is used to set the phone in Flight Mode. In this mode the phone will be out of signal reception but you will be able to use other functions of the phone in standby mode.

Phone Setup

You have following options listed under phone settings:

- **Language:** The Micromax X118 currently supports English/Hindi languages.
- **Time and Date:** Lets you set the Time and Date on the phone including the Home City.
- **Auto Update of Date & Time:** This feature automatically updates the date and time on the phone, receiving it from the network.
- **Set Time and Date:** Enables you to set the time and date in the handset.
- **Set Format:** You can select between 24 hour and 12 hour format.
- **Set Home City:** You can select the Home City timings according to the GMT.
- **Display Characteristic:** Under Display characteristics, you can set a host of different characteristics of the phone. Like
 - **Wallpaper** – Set your favorite wallpaper on the phone
 - **Screen Saver** – Lets you set an image as a screen saver.
 - **Show Date and Time** – Enables you to see the date and time on the idle screen.
 - **Show Owner Number** – It helps you set your own number on the display for your ready reference.
 - **Show Operator Name** – You can put this to ON/OFF state. It lets you see the Operator name on the idle screen
 - **Greeting text** - Lets you set your own greeting message when you power ON the phone.
 - **LCD Backlight** – Allows you to set the parameters for the LCD Brightness etc.
- **Preferred Input Method:** This enables you to select the text input method from 5 options. They are – Multitap ABC, Multitap Hindi, Multitap abc, Numeric, Smart ABC, Smart abc.
- **Shortcuts:** Shortcuts help you use certain key features of the phone instantly. You can choose the features at your own wish and set them in the menu. You can add new features to the list, delete, edit, disable and change the order.

- **Dedicated Key:** This option helps you dedicate/map certain key features of the phone with the Directional keys (UP/DOWN/LEFT/RIGHT) of the phone. At anytime you can change the mapping and select a new feature from the list of features available.

Network Setup

Network setup gives the user the ability to select a desired network and addition of a new network to the network list. The network setup gives you the follow options:

- Network Selection (Automatic/Manual)
- Preferred Networks – Will list down all the network IDs (depending on the SIM card used)

Security Setup

Under Security Setup, you can change the security settings of SIM1 or SIM2.

- **SIM Lock:** SIM Lock protects illegal usage of the SIM card. SIM is protected by a password.
 - **Fixed Dial:** Outgoing calls from your phone can be restricted by making a fixed dialing list that allows only numbers on that list to be dialed from the phone.
 - **Barred Dial:** Barred Dialing is a SIM card/Network dependant feature. If your operator supports it, then you can use the facility in the phone.
 - **SIM PIN:** You can use this to change the SIM PIN Lock for both SIM1 and SIM2.

Change Password: Change Password option gives you the options to change PIN, PIN2 and Phone Lock password

- **Phone Lock:** You can set the “Auto Keypad Lock”, “Phone Lock Encryption” and can also change the Phone Lock Password. Press the ‘right soft key and *’ to lock and unlock the phone.

Call Setup

- **Call Settings:** You can choose from the following options
- **SIM1 Call Settings**
 - Caller ID
 - Call Waiting
 - Call Divert
 - Call Barring
 - Line Switching
- **Auto Redial**
- **Call Time Display**
- **Call Time Reminder**

- **Auto Quick End**
- **Speed Dial:** Set the desired entries corresponding to the digits from 1 to 9. once set, you can long press the corresponding key to call the desired number.

Restore Factory Settings

Selecting this option will ask you to enter the password to restore the phone to factory settings. The default password is '0000'

4.10. Applications

Games

To win the game the player has to move the designed boxes to the appointed locations. The player controls the man who stands by the box via navigation keys (Up, Down, Right or Left) or the number keys (2, 8, 4 and 6). To cancel the previous move, press number key 5, OK key or left function key.

Game Settings:

These settings enable you to vary the settings in Audio to ON/OFF, allow you to put the vibration mode to ON/OFF and to increase/decrease the volume levels.

STK:

STK stands for SIM Tool Kit. Please contact your service provider for more details.

Calculator:

Keep your calculations on your finger tips with the easy to use calculator.

Converter:

Make your calculations/conversions simpler and accurate.

Stopwatch:

Calculate any time duration with Typical stopwatch and Nway stopwatch.

Flash Light:

Select this to enable/disable the Dual LED Torch Light.

Missed Call Alert

Choose this option to set as a 'reminder'. If you have missed a call the phone will ring according to a time chosen by you to remind you to check the pending call.

SMS Received Alert

Choose this option to set as a 'reminder'. If you have received a message the phone will ring according to a time chosen by you to remind you to check the pending message.

The contents of the manual may differ/vary from the actual product. The contents in this manual may be updated without any prior notices. For latest updates please refer to Micromax website at www.micromaxinfo.com

Micromax Informatics Ltd