



X260

User Guide



1. Legal Information.....	4
2. Important Notice.....	4
3. Getting Started.....	5
3.1. Packing Contents	5
3.2. Installing SIM, Battery and Attaching other Accessories	5
SIM Card & Battery Installation (Figure 2)	5
Memory Card Installation (Ref Figure 2)	6
Connecting Hands-free Kit (Ref Figure 3)	6
Connecting the charger/Charging the Battery (Ref Figure 4).....	7
Powering ON and OFF the Phone	8
3.3. Phone Keypad Layout (Figure 5).....	8
Left Soft Key.....	8
Right Soft Key.....	8
Call Key	9
End Key	9
Up and Down Direction Keys.....	9
Left and Right Direction Keys	9
0-9 Keys	9
* & # Key	9
3.4. Important Phone Icons.....	9
Signal Strength Icon.....	9
Battery Meter Icon	9
Keypad Lock Icon	10
3.5. Basic Functions.....	10
Make a Call	10
Making a Call Using Call Logs	10
Answering a Call.....	10
Call Option.....	10
3.6. Menu Layout	11
4. Function Menu	12
4.1. Phonebook.....	12
Quick Search:	12
Search Contact:	13
Add New Contact:	13
Multi Operation:.....	13
Import and Export:	13
Caller Group:	13

Settings:	13
4.2. Messages	14
Text Message:.....	14
MMS:	15
Chat:.....	15
Voice Mail Server:.....	15
Broadcast Message:.....	15
Voice MMS:	15
4.3. Call Logs	15
4.4. Organizer	16
Calendar	16
Alarm.....	16
To Do List	17
World Clock	17
Schedule Power ON/OFF.....	17
4.5. Services	17
STK.....	17
WAP.....	17
Data Accounts	17
Bluetooth.....	18
4.6. Settings	18
Reception Mode	18
Time and Date	19
Display Characteristics	19
Phone Setup	19
User Profiles.....	20
Network Setup.....	20
Security Setup	21
Restore Factory Settings	21
4.7. Multimedia	21
Photos:	21
Camera:	22
Video Player:	22
Video Recorder	22
Audio Player	22
Sound Recorder	23
FM Radio Receiver	23
Schedule FM Recorder	24

Schedule FM Player	24
4.8. Extra Function	24
File Manager	24
Converter:	24
Calculator:	24
Torch:	24
4.9. Applications	24
Games	24
Game Settings:	25
4.10. Bluetooth:	23

1. Legal Information

All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Micromax is prohibited.

Micromax operates a policy of continuous development. Micromax reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall Micromax be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Micromax reserves the right to revise this document or withdraw it at any time without prior notice.

The availability of particular products may vary by region. Please check with the Micromax Executive or by email at info@micromaxinfo.com

2. Important Notice

Important Safety Precautions

- Do not use the device while driving. Please see that in some countries, it is illegal to use such device while driving.
- Switch off when refueling. Do not use the device at a refueling point (service station) or near fuels or chemicals.
- Switch off in aircraft. Mobile phones and GSM devices can cause interference. Using them on aircraft is both illegal and dangerous.

Follow Special Regulations

- **Special Regulation.** Follow any special regulations in force in any area and always switch off your device whenever it is forbidden to use it, or when it may cause interference to the surrounding.
- **Radio Interference.** All mobile phones cause radio interference within the specified Limits of GSM standards.
- **Qualified Service.** Only qualified service personnel must repair the equipment. Use only approved accessories and batteries.
- **Emergency calls.** Ensure that the phone is switched on and in service. Enter the emergency number (112 or another official emergency number) and press the "Dial" key.
- **Use only approved accessories.** The use of any other power accessory will violate warranty conditions that apply to the phone.

Safe Operation Instructions

- Before Installing or operating this product, read this manual carefully.
- Do not expose unit to rain or moisture.
- Do not place unit on or close to any heat source.

3. Getting Started

3.1. Packing Contents

Before using Micromax X260 mobile phone, carefully remove the contents from shipping carton and check for any damages or missing contents. If found any, contact your Authorized Distributor or Shipping agent immediately. The standard packing contents are as follows:

- Base Transceiver
- Standard Battery(1300mAh)
- User Guide
- Service Guide
- Charging Adaptor
- Hands-Free Unit

3.2. Installing SIM, Battery and Attaching other Accessories

SIM Card & Battery Installation (Figure 2)

Always turn off the phone and detach the charger when you insert or remove a SIM card or Battery from the phone.

1. Remove the battery cover by pulling it as shown in Figure 2.
2. Slide the SIM Cards into their holder. Make sure that gold contacts of the SIM Cards are facing down, and the cut off corner is correctly aligned as shown in the embedded picture.
3. Place the battery in the back of the phone with the label side up and the connectors facing each other.
4. Place the battery cover as shown in the picture and press it into place.

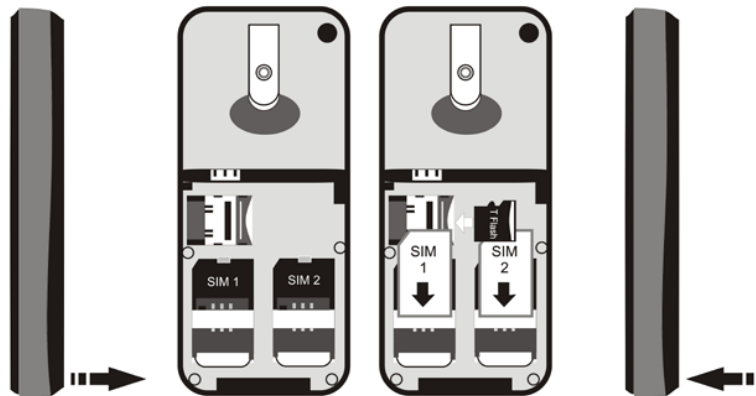 


Figure 2

Memory Card Installation (Ref Figure 2)

The Memory Card gives you extra storage capacity for content such as pictures, music and video clips. To install:

1. Remove the battery cover by pulling and remove the battery as shown.
2. Slide open the memory card cover as shown and place the card inside the slot.

NOTE: Do not remove the memory card while reading or writing to the card. Doing so may cause data corruption on the card or on the phone.

Connecting Hands-free Kit (Ref Figure 3)

You are provided with hands-free earpiece set with your phone. The same can be used to listen to your mp3 songs and listen and speak while on a call. To connect the hands-free earpiece, simply connect the connector into the connecting socket as shown in figure. When properly connected, the phone will display a message 'Earphone Plugged In!' with an icon displayed on top of the screen.

NOTE: Only use Micromax specified accessories.

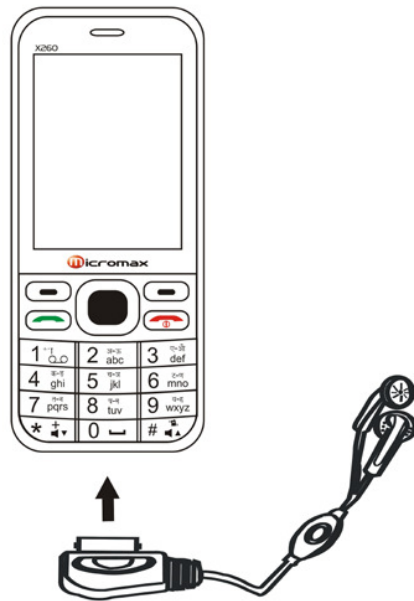 


Figure-3

Connecting the charger/Charging the Battery (Ref Figure 4)

1. Plug the charger's transformer into a standard AC outlet.
2. Insert the charger's output plug into the phone's connecting socket as shown in figure.

NOTE: It may take up-to 30 minutes before the battery icon/charging icon appears on the screen when charging.

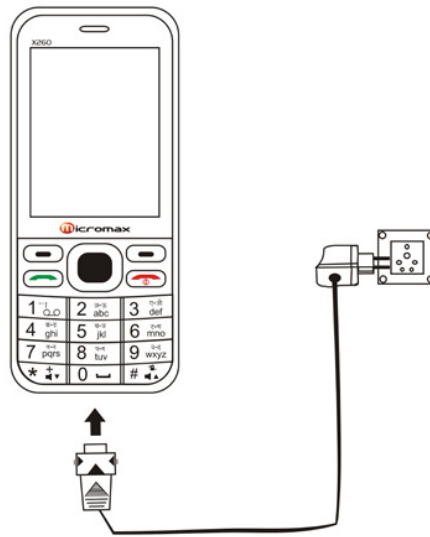 


Figure-4

Powering ON and OFF the Phone

To Power your phone ON or OFF, press and hold the End (RED) key for at least 3 seconds or until the display lights up or goes off. Enter the lock code if necessary and select OK to Power ON.

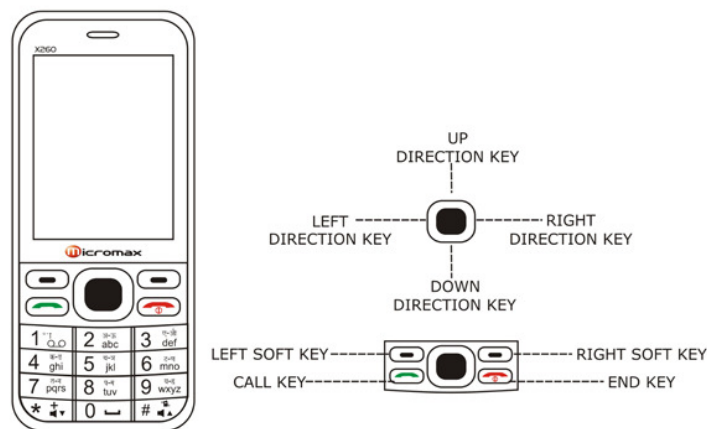 


Figure-5

3.3. Phone Keypad Layout (Figure 5)

Left Soft Key

Performs functions in lower left display. In standby mode, press OK key to open shortcut functions

Right Soft Key

Performs functions in lower right display.

Call Key

- Make calls
- Answer calls
- Press when idle to see the list of calls.

End Key

End or reject calls; Press and hold this key to turn phone on/off.

Up and Down Direction Keys

- Scroll to select options
- In standby mode press to open corresponding applications.
- In edit message status, press to select the required word.
- In function menu, scroll to open corresponding function.

Left and Right Direction Keys

- Scroll to select options
- In standby mode press to open corresponding applications
- In edit message status, press to select the required word.

0-9 Keys

In standby mode, press number keys to input dialing number. In standby mode, press and hold 1-8 key to directly call the number set before, in the speed dial list. In edit status, press to input numbers, characters and phonetic notation. In edit mode, except input number, press 0 key to input space. In functional menu, press numbers to speed select submenu items.

*** & # Key**

Functions vary in different situations or function menus: On Input Screen, press "*" for symbols. On Input Screen, press "#" to switch between different inputting methods. In standby and dial mode, press and hold "*" to input +. In standby mode, input "+" for an international call.

3.4. Important Phone Icons

Signal Strength Icon

The Signal Strength Icon is seen on the top leftmost corner of the screen. The icon helps you to identify the strength of the network; the phone has latched on to, at that particular instance. It has a maximum of 4 bars and with a minimum as no bar. 4 bars signify strongest network strength and subsequently minimizes with each diminishing bar. No bar signifies least or no network strength.

Battery Meter Icon

The Battery Meter Icon is seen on top rightmost corner of the screen. The icon signifies the battery strength available at that instance. The icon will signify the maximum battery strength by 3 bars and no bar will signify least battery strength.

NOTE: At very low battery levels, the phone will prompt 'Low Battery' message on the screen.

Keypad Lock Icon

The Keypad Lock Icon is seen on top of the screen at various positions depending on the number of icons displayed. An Open Lock signifies that the phone's keypad is unlocked and a closed lock signifies that the keypad is locked. You can unlock the keypad by pressing Unlock (by right soft key) on the phone, followed by the Send (GREEN) key. Similarly for locking the keypad, press the End (RED) key, to be followed by the Send key.

3.5. Basic Functions

Make a Call

To make a call, unlock the keypad, if locked, enter the desired phone number, press the Send (GREEN) key and select the appropriate SIM.

NOTE: Your service provider programs one or more emergency phone numbers, such as 112, 100, that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted. Check with your service provider, as emergency numbers vary by country. Your phone may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental or interference issues.

Making a Call Using Call Logs

All dialed and incoming numbers are saved in call logs and categorized into Missed Calls, Received Calls and Dialed Calls. To check the logs, please follow these steps:

In standby mode, press the Send (GREEN) key to view Call Logs. Use the scroll keys to scroll between Missed Calls, Received Calls and Dialed Calls.

Or else, you can go to Call Logs>Call History>Select the appropriate SIM to view the missed, received and dialed calls.

Answering a Call

- To receive an incoming call, press the Option key and select 'Answer' or receive it directly by pressing the Send (GREEN) key.
- If headset is available, user can choose headset keys to answer the call or turn on auto answer.

Call Option

The Micromax X260 phone offers multiple functions during a call. During a call, following functions can be actualized if you operate according to the instructions on the screen. Press up and down direction keys to choose the wanted function and press select key to enter.

- Hold a Call: To hold an Active call.
- Swap between Held/Waiting and Active: Swap among the calls. This option is network dependent.
- End: End the present active call only.
- New call: To make a new call.
- Phone Book: To explore the Phonebook for phone numbers.
- Message: To explore the SMS menu (Inbox, outbox, etc)
- Sound Recorder: To record the present active call for later listening/review.

- **Mute:** Turn off the Microphone during an active call.
- **DTMF (Dual-tone Multi-frequency):** You can choose on/off; which is to send dual-tone multi-frequency sound. This can offer dialing to the telephone numbers with extensions or IVR systems installed for menu driven options.
- **Conference:** By multi-way conferencing, you can answer an incoming call and add new participants according to the prompt. Keep the ongoing multi-way conference, have a private conversation while keeping all the others on hold, get through one participant with another one, quit yourself from the conference.

NOTE: This feature is network dependent.

3.6. Menu Layout

- **Contacts**
 - Quick Search
 - Search Entry
 - Add New Entry
 - Multi Operation
 - Import & Export
 - Caller Group
 - Settings
- **Messages**
 - SMS
 - MMS
 - Chat
 - Voice Mail Server
 - Broadcast Message
 - Voice MMS
- **Call Logs**
 - Call History
 - Speed Dial
 - Call Settings
- **Organizer**
 - Calendar
 - Alarm
 - To Do List
 - World Clock
- **Services**
 - STK
 - WAP
 - Data Account
 - Bluetooth
- **Settings**
 - Reception Mode
 - Time and Date
 - Display Setup
 - Phone Setup
 - User Profiles
 - Network Setup
 - Security Setup
 - Restore Factory Settings
- **Multimedia**

- Photos
- Camera
- Video Player
- Video Recorder
- Audio Player
- FM Radio
- Sound Recorder
- **Extra Function**
 - File Manager
 - Converter
 - Calculator
 - Torch
- **Applications**
 - Games
 - Game Settings

4. Function Menu

4.1. Phonebook

Quick Search:

Quick search allows you to quickly search an entry in the Phonebook by entering the key letters or words of the name. After finding the desired number the user gets the following options:

- **Call:** Selecting the option will dial the number found by quick search.
- **Send Text Message:** Selecting this option will enable the user to send an SMS on the number selected.
- **Send MMS:** Selecting this option will enable the user to send an MMS on the number selected.
- **View:** View option gives you the details of the number selected.
- **Edit:** Edit option gives you the option to edit the details of the selected number. The details include- Name, number, Home number etc.
- **Add New Entry:** Selecting this option will enable you to add a new entry in the Phonebook.
- **Delete:** The option allows you to delete the selected entry.
- **Copy:** The option allows you to Copy the entry selected to the phone or to the SIM card depending on where the entry was stored before.
- **Move:** The option allows you to move the entry from Phone to SIM or from SIM to phone depending on where the entry was selected from. The moving entry will be automatically deleted from the last storage device.
- **Duplicate:** The duplicate option enables you to duplicate the same entry in the same storage device (Phone or SIM) depending on the last storage device.
- **Send vCard:** This option is same as 'send Business Card'. It will enable you to send a business card of the selected entry as an SMS.

Search Contact:

Unlike Quick search, Search option enables the user to search an entry by its complete name.

Add New Contact:

Select this option in order to add a new entry into the SIM memory or to the phone memory.

Multi Operation:

Multi Operation has the following options

- **Select All from SIM:** This option allows you to select all the entries stored in the SIM. After selecting the desired entries, you can Copy or Delete them as per requirement.
- **Unselect All from SIM:** This option allows you to unselect all the entries stored in the SIM. After selecting the desired entries, you can Copy or Delete them as per requirement.
- **Select All from Phone:** This option allows you to select all the entries stored in the Phone. After selecting the desired entries, you can Copy or Delete them as per requirement.
- **Unselect All from Phone:** This option allows you to unselect all the entries stored in the SIM. After selecting the desired entries, you can Copy or Delete them as per requirement.

Import and Export:

Selecting this entry would enable you to import and export your contacts from phone memory card or vice versa in different styles (Phone Suite Style/Outlook Style/Text Style).

Caller Group:

Caller Group contains five default groups:

- Friends
- Family
- VIP
- Business
- Others

Selecting any group allows you to edit the options available with it. For example:

- Setting the ring tone associated with the group.
- Picture associated with the group.

Settings:

The following fields are listed under settings:

- **Memory Status:** This option enables you to check the memory status of the phone and the SIM card.
- **Extra Number:** It has the following options to edit
 - **Owner Number**

Owner Number lets you input your own phone number and name. If set to ON, the phone's main screen displays the name or your number on the screen.

NOTE: This is a SIM Card dependant service.

- **Fields:** Gives you an option to select the fields to be edited at the time of adding a new entry in the Phone book. The fields include:
 - Home Number
 - Company Name
 - Email Address
 - Office Number
 - Fax Number
 - Birthday
 - Associate Picture
 - Associate Sound
 - Caller Group
- **My vCard:** My vCard gives you an option to edit and send your business card to the selected recipients.
- **vCard Version:** The phone gives you 2 vCard Versions.

4.2. Messages

Your phone supports various messaging services. You can create, send, receive, edit and organize text messages.

Messages contain the following folders:

- SMS
- MMS
- Chat
- Voice Mail Box
- Cell Broadcast

Text Message:

Under SMS, the phone has the following folders listed.

- **Inbox:** This folder stores all the received messages.
- **Outbox:** This folder contains all the messages sent from your phone as well as the unsent messages.
- **Write Message:** On selecting Write Message, the screen will pop up to ask you to input the contents of the message using different input methods (Templates, Insert Number, Insert Object etc).
- **Drafts:** This folder stores the unsent messages.
- **Templates:** Templates stores 10 preloaded/pre-written text messages for ready usage. You can edit the templates according to your wish and also store the messages that you send more often.
- **Message Settings:** Message settings stores all the different settings responsible for sending and receiving messages.
 - **Profile Setting:** It contains 4 default profiles which includes Profile name, Service Centre Address, Validity Period and Message type.

- **Common setting:** These settings include the following - Delivery Report and Reply Path
- **Memory Status:** Memory status gives you the information about the storage status of the phone memory as well as the SIM memory.
- **Preferred Storage:** Lets you select the default storage location of the messages between Phone and SIM.
- **Save Sent Message:** Selecting this will enable you to save the message in the Outbox

MMS:

The phone has the capability to support Multi Media Services. You can send and receive multimedia files by using this feature, provided, you have this service activated on your SIM card. It has the following folders listed:

Write Message
Inbox
Outbox
Draft
Template
MMS Settings

Chat:

Chat enables you to enter 2 different user's default settings (Chat Room 1 and Chat Room 2) to enable sending and receiving the messages. Chat option enables you to see the complete conversation on a single window as in a messenger window.

Voice Mail Server:

The Voice Mail is an interactive system for storing, processing and reproducing verbal messages through a voicemail server. The service is operator dependant and the settings are provided by the operator upon activating the service on the SIM card.

Broadcast Message:

Your phone is capable to receive and store broadcast messages. You can set the receive status to ON/OFF. Read Message folder stores the received messages.

Note: Broadcast messages are received through a predefined channel-050.

Voice MMS:

Using this option you can send a Voice MMS after recording the desired sound using the sound recorder.

4.3. Call Logs

Calls Logs gives you the following options:

- **Call History:** You can check the missed calls, received calls, dialed calls, Rejected Calls etc.
- **Speed Dial:** Set the desired entries corresponding to the digits from 1 to 9. once set, you can long press the corresponding key to call the desired number.
- **Call Settings:** You can choose from the following options

- **SIM Call Settings**
 - Caller ID
 - Call Waiting
 - Call Divert
 - Call Barring
 - Line Switching
 - Auto Redial
- **Auto Redial**
- **Call Time Display**
- **Call Time Reminder**
- **Auto Quick End**

4.4. Organizer

Calendar

You can use the calendar to keep track of important meetings. After entering the calendar function menu you can select year, month and date using direction keys. On a selected date you can select to view:

- **View Today/View All:** If there is a special background color on a date which means there is some task on that day. You can also view any Note / Remark mentioned by you for a task stored by you previously.
- **Add Task:** When you add a new task, you can do the following:
 - Input task duration time.
 - Add a Note for that task.
 - Set alarms on/off.
- **Jump to date:** Input a date, and then press OK to go to a specific date for entry/edit/viewing of task for that date.
- **Go to Weekly View:** Select this option to view tasks in weekly format.

Alarm

The Alarm can be set to ring at a specific time on several days. There are five different default alarms. You can set these alarms to alarm you at different time in specific day(s) of a week. The alarm can use radio as an alarm tone also.

To set an alarm:

- Press edit to enter alarm settings menu.
- Select edit option using up and down direction keys
 - **ON/OFF:** Select alarm on or off using left and right direction key
 - **Alarm time:** Input alarm time
 - **Repeat Setting:** Press left and right direction keys to select alarm types which consists of one time, everyday and weekdays.
 - **Alarm Tone:** Select the alarm that you wish to listen.
 - **Snooze:** To set Snooze duration in minutes.
 - **Alert Type:** To select between Ring/Vibrate combinations.

To Do List

All tasks saved in calendar, can be viewed in To-Do list.

World Clock

World clock can be used to know the time in various cities across the world. You can see a world map and instantaneous time in those cities using world clock. Enter world clock to view world cities time using the direction keys.

Schedule Power ON/OFF

As the name suggests, this option allows you to Power ON/OFF your phone as per a predefined schedule. You are given 4 different options to schedule.

4.5. Services

STK

STK stands for SIM Tool Kit. Please contact your service provider for more details.

WAP

WAP or Wireless Application Protocol browser provides all the basic services of a computer based web browser but simplified to operate within the restrictions of a mobile phone. The WAP Browser has the following options:

- **Homepage:** Homepage allows you to enter the default URL on the phone. This will enable you to go to the same page every time you access the homepage.
- **Bookmarks:** Bookmarking enables you to mark a place in an electronic document or a pointer (primarily to an internet URL) in an Internet web browser.
- **Recent Pages:** Recent Pages stores the list of URLs which have been recently visited by you on the WAP browser.
- **Enter Address:** Enter the desired address (URL) of the website or webpage in this column.
- **Service Inbox:** Service Inbox receives and stores URLs through text messages from the operator. You can read them and accept to go to the web page and browse.
- **Settings:** You can vary the following settings:
 - **Edit Profile:** You can edit the different profiles listed and stored under WAP profiles.
 - **Browser Options:** Browser option enables you to edit the Time out seconds and Show Images options. You can change the Time out timing of the page and enable or disable images on the web page.
 - **Service Message Settings:** You can set them to ON/OFF. Set it to ON/OFF to enable or disable receiving service messages.
 - **Clear Cache:** Select to clear/delete the cache memory of the phone.
 - **Clear Cookies:** Select to clear/delete the cookies or temporary files stored in the phone.

Data Accounts

Data Accounts contain two types of accounts used to establish GSM/GPRS connections for WAP, MMS and WWW browsing.

GSM Data

GPRS Data.

NOTE: Select the appropriate setting from the list for using a particular feature depending on the availability of the operator services. Data Accounts contain two types of accounts used to establish GSM/GPRS connections for WAP, MMS and WWW browsing.

1. GSM Data
2. GPRS Data

Bluetooth

The following options are available in the Bluetooth menu :

- **Power** : On/Off.
- **Inquiry Audio Device** : Search for devices.
- **My Device** : Inquiry new device or display paired devices and take the options. **Active Device** : Display all connected devices.
- **Setting** : Configure the settings of Bluetooth. For example, change device name, shared folder, receive Folder etc.
- **About** : It lists the information of Device Name, BD address and support service.
- **Transfer File** : Transfer the files in the phone memory or memory card to other mobile or PC via Bluetooth. (Different models support different features; please refer to the actual model)
- **Help** : Bluetooth user manual. (Different models support different features, please refer to the actual model)

Use of Bluetooth: Instruction for answering Call via Bluetooth, listening MP3 via Bluetooth or transferring a file. (Different models support different features, please refer to the actual model)

4.6. Settings

Under settings, the phone gives you the option to change the settings for various features of the phone.

The following list is available in Settings:

Reception Mode

The Reception Mode allows you to select the mode in which you want the phone to be. The Modes of the Phone are:

- **Dual SIM Active**

This mode allows you to access the services of both the SIM'S i.e. Dual SIM Dual Standby.

- **Only SIM1 Active**

Only the SIM1 is functional whereas the SIM2 is not accessed.

- **Only SIM2 Active**

This mode is used to enable the situation where you want only the SIM2 to be functional.

- **Flight Mode**

This mode is used to set the phone in Flight Mode. In this mode the phone will be out of signal reception but you will be able to use other functions of the phone in standby mode.

Time and Date

Lets you set the Time and Date on the phone including the Home City.

- **Auto Update of Date & Time:** This feature automatically updates the date and time on the phone, receiving it from the network.
- **Set Time and Date:** Enables you to set the time and date in the handset.
- **Set Format:** You can select between 24 hour and 12 hour format.
- **Set Home City:** You can select the Home City timings according to the GMT.

Note: This feature is network dependant.

Display Characteristics

Under Display characteristics, you can set a host of different characteristics of the phone. Like

- **Wallpaper** – Set your favorite wallpaper on the phone
- **Switch Pic** - Lets you change the wallpaper while you shake your phone, till the time screen is locked.
- **Screen Saver** – Lets you set an image as a screen saver.
- **Power ON Display** – Lets you select a pre-defined animation.
- **Power OFF Display** - Lets you select a pre-defined animation.
- **Show Date and Time** – Enables you to see the date and time on the idle screen.
- **Show Owner Number** – It helps you set your own number on the display for your ready reference.
- **Show Operator Name** – You can put this to ON/OFF state. It lets you see the Operator name on the idle screen
- **Greeting text** - Lets you set your own greeting message when you power ON the phone.
- **LCD Backlight** – Allows you to set the parameters for the LCD Brightness etc.

Phone Setup

You have following options listed under phone settings:

- **Language:** The Micromax X260 currently supports only English language.
- **Preferred Input Method:** This enables you to select the text input method from 5 options. They are – Multitap ABC, Multitap abc, Numeric, Smart ABC, Smart abc.

- **Shortcuts:** Shortcuts help you use certain key features of the phone instantly. You can choose the features at your own wish and set them in the menu. You can add new features to the list, delete, edit, disable and change the order.
- **Dedicated Key:** This option helps you dedicate/map certain key features of the phone with the Directional keys (UP/DOWN/LEFT/RIGHT) of the phone. At anytime you can change the mapping and select a new feature from the list of features available.

User Profiles

All the different profiles are listed under this option:

General: The Profile gives you an option to activate and customize the settings. You can customize the following features:

Tone Setup: Tone Setup enables you to set up different music tones to different functionalities of the phone like, Incoming Call, Power ON, Power OFF, Message Tone and Keypad tone.

Volume: You can vary the volume levels for Ring Tone and Key Tone.

Alert Type: Alert Type lets you choose the way you want to be alerted. You can choose from, Ring, Vibration only, Vibration and Ring, Vibration then Ring and Light only.

Ring Type: Ring Type lets you select the type of ring to alert you. You can choose from Single, Repeat and Ascending.

Extra Tone: Extra Tone is added to a number of incidences such as Warning, Error, Camp On and Connect.

Answer Mode: Answer Mode gives you the choice to select Any key answer mode. Any key enables you to receive a call using any key of the phone except the End (RED) key.

Meeting: These modes are similar to General Mode and can be customized according to your own preference.

Outdoor: These modes are similar to General Mode and can be customized according to your own preference.

Indoor: These modes are similar to General Mode and can be customized according to your own preference.

Headset: These modes are similar to General Mode and can be customized according to your own preference.

Bluetooth: These modes are similar to General Mode and can be customized according to your own preference.

Network Setup

Network setup gives the user the ability to select a desired network and addition of a new network to the network list. The network setup gives you the follow options:

- Network Selection (Automatic/Manual)
- Preferred Networks – Will list down all the network IDs (depending on the SIM card used)

Security Setup

Under Security Setup, you can change the security settings of SIM1 or SIM2.

- **SIM Lock:** SIM Lock protects illegal usage of the SIM card. SIM is protected by a password.
 - **Fixed Dial:** Outgoing calls from your phone can be restricted by making a fixed dialing list that allows only numbers on that list to be dialed from the phone.
 - **Barred Dial:** Barred Dialing is a SIM card/Network dependant feature. If your operator supports it, then you can use the facility in the phone.
 - **SIM PIN:** You can use this to change the SIM PIN Lock for both SIM1 and SIM2.

Change Password: Change Password option gives you the options to change PIN, PIN2 and Phone Lock password.

- **Phone Lock:** You can set the "Auto Keypad Lock", "Phone Lock Encryption" and can also change the Phone Lock Password.
- **Self Help:** Self Help is a unique feature that helps you in an emergency situation to contact on any predefined number without having to dial that number. State: You can put it to ON/OFF state.

Number List: You can save as many as 5 numbers in the list. Ensure that these numbers have the facility to receive an SMS.

Self Help Content: You can edit the contents of the SMS that will send to the emergency number list.

Note: When an SMS is sent to the emergency numbers set, the MCC-MNC, LAC ID and the BTS ID of the place you are in are also sent along. This ensures that the SMS receiver can easily track down your coordinates.

Restore Factory Settings

Selecting this option will ask you to enter the password to restore the phone to factory settings.

4.7. Multimedia

The Micromax X260 comes with a host of multimedia applications to provide you with unlimited entertainment.

Photos:

Image Viewer stores all your pictures which are preloaded as well as those taken by the phone camera. It gives you the options.

- **View** – To view the selected file.
- **Browse Style** – Gives you an option to store your images in List or Matrix style.
- **Rename** – You can rename the image according to your own choice.
- **Delete** – To delete the selected file or all files.
- **Delete All Files**
- **Sort** – The images stored can be sorted by Name, Type, Time and Size.

Camera:

The Micromax X260 comes with a digital camera to take pictures and record videos. It has a number of setting options to capture quality images.

- **Camera Settings**
 - **Banding** – To select between 50Hz and 60 Hz band.
 - **Delay Timer** – Delay Timer enables you to set the time (Off, 5sec, 10sec, 15sec) before a picture is taken after pressing the capture key.
 - **Cont Shot** – If selected the camera will start taking pictures in the continuous mode, one after the other. It can be set for taking 1, 3 or 5 shots at a time.
- **Image Settings**
 - **Image Quality** – Image quality can be set as High, Normal and Low to save space in memory as a Low quality images takes less space.
 - **Image Size** – The size of the image can be varied from 176*144 to 352*288.

- **Scene Mode**

Scene mode can be selected between Auto or Night depending on the lighting conditions available at that moment.

- **Restore Default** – The Camera settings can be set to default.

Video Player:

The Video Player plays all your video files stored in the phone (Phone Memory or on the Memory Card). The video player gives you the following options:

- **Play** – To start playing the video file.
- **Rename** – To rename an already saved file.
- **Delete** – To delete an existing file.
- **Delete All Files** – To delete all files at once.
- **Sort** – To sort the already saved files by Name, Type, Time and Size.

Video Recorder

You can record all your precious moments with the Micromax X260's digital camera. The recorder not only records videos but also gives you the power to enhance the quality of the picture using its different settings.

- **Camcorder Settings** – This includes White Balance (Auto / Daylight / Tungsten / Fluorescent / Cloud etc, LED light (ON/OFF), Exposure Value, Night Mode etc.
- **Restore Default** – This option restores the original settings of the Video Recorder.

Audio Player

The Micromax X260 comes with an inbuilt audio player that plays all your favorite songs stored in the micro SD memory card. It gives you a host of setting options to make your listening experience interesting.

The player gives you an option to select from a list of songs already stored in the memory card, to be played, added to your ring tones or deleted.

The player has the following setting options:

- **List Auto Gen:** It also offers to generate the play list automatically.
- **Repeat:** You can also select to repeat the song or complete play list (Off/One/All).
- **Shuffle:** You can shuffle the order of your songs to be played. If you put this mode ON, then the songs will be played in a random fashion otherwise, a sequential pattern will be followed.
- **Back Ground Play:** Back Ground play option allows you to enjoy your music even if the player is minimized to use other functions of the phone.
- **Lyrics Display:** The Micromax X511 offers you an exciting feature of displaying you sing with the song while the lyrics are displayed on the phone screen when the song plays. Once the Lyrics Display is put ON and the lyric file of the song is stored in the same folder as the song is, you can play the song and sing with it, reading from the display
- **Switch Music by Shaking:** The Micromax X260 offers you with this unique feature of controlling your music with the shake of your phone. You shake the phone to change the song. You shake it again and the next song starts playing.

Sound Recorder

You can record sound/voice on your Micromax X260 phone. Just select sound recorder, go to options and press record. Select Stop to rename the file and save it. Select pause to 'pause' the recording and 'continue' to resume the recording.

FM Radio Receiver

The Micromax X260 comes with an in-built FM Radio Receiver/Schedule FM Recorder/Schedule Player. The X260 comes with a built-in FM Receiver antenna. Hence, you don't need to plug the hands-free to listen to radio anymore. Press Options to find:

- **Channel List:** Store all the channels that the FM Radio can receive. You get options to play or edit them.
- **Manual Input:** You can store and register your channel frequency and play it by pressing OK.
- **Preset Auto Search:** On selecting this, the FM tries to scan all the available channels provided by the network. To start the search, make sure that the radio is powered ON.
- **Settings:** Under settings, you have options for Back Ground Play (ON/OFF), Loud Speaker (ON/OFF), Recording Format (AMR/WAV) and Record Storage (Phone or Memory card).
- **Record:** You can record your favorite music or program. To record, make sure that the radio is powered ON.
- **File List:** Select File List to check your previously stored files.
- **Append:** The append option enables you to continue recording further to a pre recorded sound file.

The FM Radio also gives you an option to change the settings through short-cut keys available on the main window. Such as 'To Power ON', to 'Skip to next channel', to 'skip to previous channel' etc.

Schedule FM Recorder

Micromax X4i comes with a unique feature of FM Scheduling. This feature enables you to schedule the radio to power ON itself and record your favorite program. You can set the time, date, and channel and record functions to record the desired program. It can record 4 programs for you to enjoy them anytime later at your own wish. On pressing Edit, you will have following functions to set:

- Power ON/OFF
- Date and Time
- Repetition Cycle
- Channel setting
- Record Setting

Schedule FM Player

You can schedule the FM Receiver to automatically start playing according to the schedule fed in the player. You can save as many as 5 preset settings in the player.

4.8. Extra Function

File Manager

As the name suggests, File manager allows you to manage all the files stored in the external memory card.

You can view the remaining memory and available memory in phone and micro-SD card.

You can open and navigate the directories and files in the storage.

You can View, Play and Setup files in the storage disks.

Converter:

Make your calculations/conversions simpler and accurate.

Calculator:

Keep your calculations on your finger tips with the easy to use calculator.

Torch:

Select this to enable/disable the Dual LED Torch Light.

4.9. Applications

Games

To win the game the player has to move the designed boxes to the appointed locations. The player controls the man who stands by the box via navigation keys (Up, Down, Right or Left) or the number keys (2, 8, 4 and 6). To cancel the previous move, press number key 5, OK key or left function key.

Game Settings:

These settings enable you to vary the settings in Audio to ON/OFF, allow you to put the vibration mode to ON/OFF and to increase/decrease the volume levels.

The contents of the manual may differ/vary from the actual product. The contents in this manual may be updated without any prior notices. For latest updates please refer to Micromax website at www.micromaxinfo.com

Micromax Informatics Ltd.