

Contents

WELCOME	3
GET TO KNOW YOUR PHONE.....	4
INSERT SIM AND MEMORY CARD	5
CHARGE THE BATTERY VIA POWER SOCKET OR USB.....	6
HELPFUL KEYS AND SHORTCUTS	7
SWITCH PHONE ON/OFF	8
LOCK/UNLOCK THE PHONE	9
MAKE A CALL.....	10
MAKE AN INTERNATIONAL CALL.....	10
ANSWER A CALL	10
SEND AND VIEW MESSAGES	11
INCREASE/DECREASE VOLUME.....	11
BLACKLIST	11
AUTO REDIAL	12
CALL TIME REMINDER.....	12
PHONE LANGUAGE	12
PHONE SECURITY	12
AUTO CALL RECORDER.....	12
MUSIC PLAYER.....	13
CAMERA.....	13
THEFT TRACKER.....	13
PRIVACY PROTECTION.....	13

User Guide

ANSWER MODE.....14

RESTORE FACTORY SETTINGS14

MULTIMEDIA14

BLUETOOTH15

USE THE TORCH15

HEALTH & SAFETY INFORMATION15

TAKING CARE OF YOUR DEVICE17

BATTERY RECOMMENDATIONS.....17

RECYCLE YOUR PHONE18

DISCLAIMERS.....19

COPYRIGHTS19

User Guide

Welcome

Thank you for purchasing the Micromax X264 mobile phone. You are now the proud owner of the X264 which offers you these exciting features:

- 2.4 inch screen
- Digital Camera
- LED Torch
- Theft Tracker
- Privacy Protection
- Sound Recorder
- Video Recorder/Player
- FM Radio
- Music Player
- Dual SIM
- Bluetooth
- Memory Card Support (expandable up to 4GB)
- Hindi Language support

Notes:

- Please read the contents of this manual to fully utilize the features of this phone.
- Please read the health & safety information provided in this guide.

Get to Know Your Phone



1. LED

2. Receiver

3. Menu Key

4. Call 1 key [SIM1]

5. Call 2 key [SIM2]

6. Back Key

7. Power On/Off Key

8. Keypads



9. Earphone jack

10. USB jack

11. Camera lens

Insert SIM and Memory Card

- 1 Open the back cover and remove the battery.
- 2 Insert the SIM card correctly in the card slot as shown below.

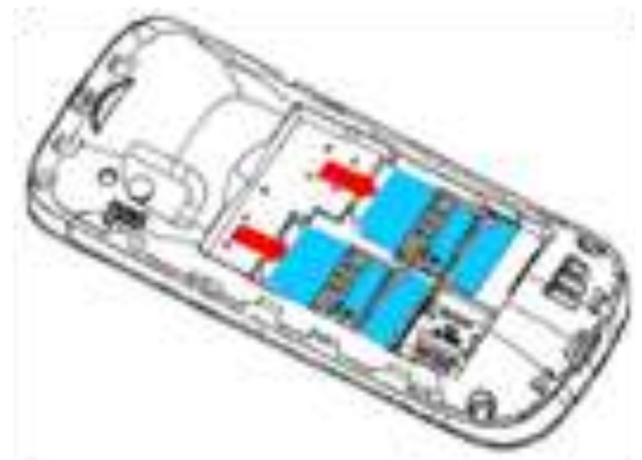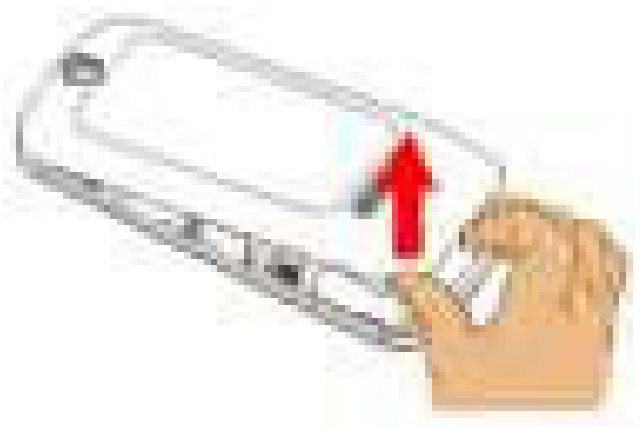

- 3 Insert the memory card into the memory card slot with the gold colored contacts facing down (as shown in figure).



The Memory Card gives you extra storage capacity for content such as pictures, music and video clips.



Do not remove the memory card while reading or writing to the card. Doing so may cause data corruption on the card or on the phone.



Use only compatible memory cards approved by Micromax. Incompatible cards may damage the slot or corrupt the data stored in the card.

Charge the Battery via Power Socket or USB

1

Connect the charger to the charger jack on the phone as shown below.



2 When charging is finished, unplug the USB adaptor.



While connecting your phone to a PC its SD card inserted, you must follow your computer’s instructions for connecting and disconnecting USB devices, to avoid damaging or corrupting the files on your SD card.



Please charge the battery before you use the newly purchased phone. We suggest you to charge the battery for at least 4 hours continuously for the first time.

Helpful Keys and Shortcuts

Keys	Effect
#	Long press to activate silent mode; in editing mode, short press to switch input method.

User Guide

*	Press along with Left key to lock/unlock the keypad.
Left key	Performs functions in the lower left display.
Right key	Enter phonebook from Home Screen. Acts as right function key in all interfaces
End key	Hang up a call; reject an incoming call; go back to standby screen; long press to switch on/off the phone.
Number keys	In radio mode, press 1-9 to access the existing channels.

Switch Phone ON/OFF

- To switch ON your phone, press and hold the **End key** for a few seconds.
- To turn OFF your phone, press and hold down the **End key** for a few seconds.



If the phone lock has been activated in the phone's security settings, you need to enter the 4-digit password to unlock the phone. Go to **Settings>Security Settings> Phone Security> Phone Lock** (The preset unlock code is 0000).

Lock/Unlock the Phone

To unlock the phone, press the **Left** key and then the * key. Follow the same method to lock the phone as shown in the following figure.



Make a call

You can make a call in the following ways:

- Enter the desired number from Home screen and press the **Call Key**.
- **Menu> Phonebook** and then select and dial the desired number.
- Just press the **Call key** from Home screen to dial the contacts listed in Call logs.
- You can also dial a contact from the messages.

Make an International Call

- 1** Press and hold '*' Key till '+' appears on the screen.
- 2** Enter the country code, area code and phone number, and press the dial key.

For example, to dial a number in France, press and hold the '*' key (until the "+" sign appears), input 33 (French code) and then enter the complete phone number.

Answer a Call

Press the **Call Key** to answer a call.



Send and View Messages

You can read messages and compose/send messages. You can forward, delete, back up or delete selected messages and so on. You can read messages in the inbox, drafts folders and so on.

Increase/Decrease Volume

Press the up or down navigation key to increase or decrease the volume during a call.



Blacklist

Menu>Settings>Call Settings>Advanced settings>Blacklist

This feature allows you to stop receiving calls from the blacklisted numbers.

Auto Redial

Menu> Settings >Call Settings>Advanced settings>Auto Redial

Switching this feature on will automatically redial a number.

Call Time Reminder

Menu> Settings >Call Settings>Advanced Settings>Call Time Reminder

You can activate or deactivate call time reminder. This can be on a single or periodic basis. If activated, the phone beeps at the time interval you have set, during a call.

Phone Language

Menu>Settings>Phone Settings>Language

You can change the phone language according to your preference.

Phone Security

Menu>Settings>Security settings> Phone security

You can set the password to unlock the phone. Default password is 0000.

Auto Call Recorder

Menu> Settings >Call Settings>Advanced settings>Auto Call Recorder

You can use this feature to automatically record all your calls.

Music Player

Menu> Multimedia> Music Player

The phone comes with an inbuilt music player that plays all your favorite songs stored in the phone memory or memory card.

Press the Left key to choose various music options.

Camera

Menu> Multimedia>Camera

Press the left key in camera mode to choose various settings.
Press the Ok key to take photos.

Theft Tracker

Menu> Settings> Security Settings> Theft Tracker

You can track your phone in case of loss or thefts by activating the Mobile Tracker mode and configuring an alternate number and message to be received from the unauthorized user. The default password to use this feature is 0000.

Privacy Protection

- a. Go to **Menu> Settings>Security Settings> Privacy Protection**
- b. Enter the default password to set the privacy lock.

- c. Select and enable the desired objects to protect and save the choice.

Each time you access the protected feature such as messages, you will be asked for the password. The default password to access this feature is 0000.

Answer Mode

Menu>Settings>Call Settings > Advanced Settings> Answer Mode

This feature lets you to automatically answer call when any key is pressed or when Headset is inserted.

Restore Factory Settings

Settings>Security> Factory Reset

Lets you restore your phone settings to the original setting when you purchased the phone:

The default password to use this feature is 0000.

Multimedia

Menu ■ Multimedia

You can use Music Player, Camera, FM Radio, Sound Recorder, Video Player and Video recorder in multimedia.



Bluetooth

Menu> Multimedia> Bluetooth

Your phone enables you to connect the phone wirelessly to other Bluetooth devices and exchange data with them.

Use the Torch

Long Press '0' key to switch ON/OFF the Torch.

Health & Safety Information

Please read the following guidelines regarding the use of your phone. Not following them may be dangerous or illegal.

Safe Driving

- Do not use the phone while driving. When you have to use the phone, please use the personal hands-free kit.

User Guide

- Please do not put the phone onto any passenger seat or any place from which it may fall down in case of vehicular collision or emergency braking.

During Flight

Flight is influenced by interference caused by the phone. It is illegal to use a phone on the airplane. Please turn off your phone or switch to flight mode during a flight.

In Hospitals

- Your Phone's radio waves may interfere with the functioning medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external Radio Frequency. Switch off your device when regulations posted instruct you to do so.
- To avoid potential interference with implanted medical devices such as a pacemaker or cardioverter defibrillator:
- Always keep your phone at least 15.3 centimeters (6 inches) from the medical device.
- Do not carry the wireless device in a breast pocket.
- Turn off the phone if there is any reason to suspect that interference is taking place.
- Follow the manufacturer directions for the implanted medical device.
- If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

Unsafe Areas

Please turn off your phone when you are close to a gas station or in the vicinity of any place where fuel and chemical preparations, or any other dangerous

goods are stored.

Taking Care of Your Device

- Your device is a product of superior design and craftsmanship and should be handled with care: The following suggestions will help you protect your phone:
- Keep the device dry. If your device gets wet, remove the battery without turning on the device, wipe it with a dry cloth and take it the service center.
- Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not attempt to open the device other than as instructed in this guide. Repairing the phone by yourself other than our authorized service agents/centers goes against the warranty rules.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not store your device near magnetic fields or allow your device to come in contact with magnetic fields for extended period of time.
- Location: The socket-outlet shall be installed near the equipment and shall be easily accessible.

Battery Recommendations

- Please put the battery in a cool and well-ventilated place out of direct


User Guide

sunlight. We recommend you to charge the battery at room temperature range.

- Batteries have life cycles. If the time that the battery powers equipment becomes much shorter than usual, the battery life is at an end. Replace the battery with a new battery of the same make and specification.
- Use manufacturer approved batteries, chargers, accessories and supplies. Micromax will not be held responsible for user's safety when using unapproved accessories or supplies.
- Do not discard the battery with household trash. Please dispose of used battery according to your local environmental laws and guidelines.
- Warnings on Battery:
 - Please use appointed battery in case of explosion risk.
 - Please dispose of lifeless battery under guidance.

Recycle Your Phone

The WEEE logo (shown at the left) appears on the product (battery, handset, and charger) to indicate that this product must not be disposed off or dumped with your other household wastes. You are liable to dispose of all

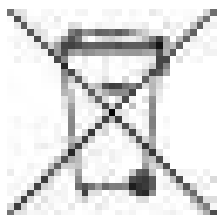

your electronic or electrical waste equipment by relocating over to the specified collection point for recycling of such hazardous waste.

Collection and proper recovery of your electronic waste equipments at the time of disposal will allow us to help preserve the environment. Recycling of the electronic waste equipment will ensure safety of human health and environment. For more information on best practices for disposal of electronic and electrical waste, please visit to our web site: www.micromaxinfo.com/weee.php.

Disclaimers

- The colors, images and specifications shown/mentioned in the user manual may differ from the actual product. Images shown are for representation purpose only. Other product logos and company names mentioned herein may be trademarks or trade names of their respective owners.
- Micromax keeps the right to make modifications to the content in this user guide without any prior notice.
- The functions explained or listed in this manual may differ from the actual functions appearing in the mobile phone. In such a case, the latter shall govern.

Copyrights

All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Micromax is strictly prohibited.