

- 1. WELCOME 2
- 2. PHONE LAYOUT 4
- 3. GETTING STARTED 5
 - 3.1 Insert SIM.....5
 - 3.2 Insert Memory Card5
- 4. HOW TO USE YOUR PHONE 6
 - 4.1 Switch On/OFF6
 - 4.2 Lock/Unlock the phone6
 - 4.3 Make a Call.....7
 - 4.4 Answer/Reject a call.....7
 - 4.5 Make an International call.....7
 - 4.6 Send Messages.....7
 - 4.7 Add contacts to Phonebook7
 - 4.8 Browse the Net8
 - 4.9 Use Multimedia Features8
- 5. NOTABLE FEATURES..... 9
 - 5.1 Torch.....9
 - 5.2 Bluetooth9
 - 5.3 Blacklist.....9
 - 5.4 Auto Redial.....9
 - 5.5 Call Time Reminder9
 - 5.6 Phone Language10
 - 5.7 Phone Security10
 - 5.8 Text reader.....10
 - 5.9 Useful Tips10
- 6. SAFETY PRECAUTIONS..... 11

7. TAKING CARE OF YOUR DEVICE 13

1. **Welcome**

Congratulations, you are now the proud owner of Micromax X272 which offers you a rich array of exciting and dramatic features designed to transform your mobile experience.

- Dual SIM

- 2.4 inch screen
- 0.3 MP Camera
- FM Radio
- Torch
- Bluetooth
- WAP
- MMS
- Memory Card Support (expandable to 16Gb)


2. Phone Layout



3. Getting Started

3.1 Insert SIM

1. Switch off the mobile phone and remove the rear cover and battery.
2. Insert the SIM card(s) correctly in the card slot(s) as shown below.

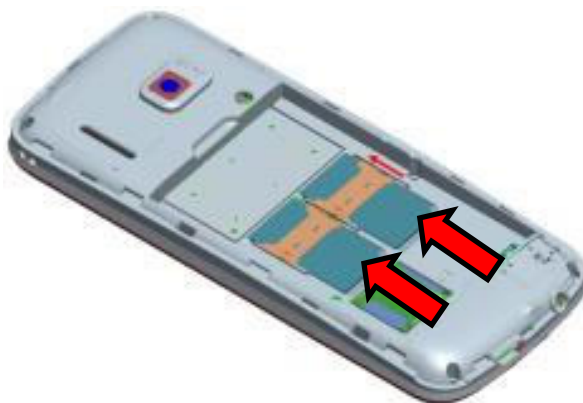

3. Finally, insert the battery and replace the rear cover of the mobile phone.



Please charge the battery before you use the newly purchased phone. We suggest you to charge the battery for at least 4 hours continuously for the first time.

3.2 Insert Memory Card

1. Switch off the phone and remove the rear cover and the battery.
2. Open the memory card slot and insert the memory card in the

card slot as shown below.



3. Insert the battery and the rear cover of the mobile phone.



The Memory Card gives you extra storage capacity for content such as pictures, music and video clips.



Do not remove the memory card while reading or writing to the card. Doing so may cause data corruption on the card or on the phone.



Use only compatible memory cards approved by Micromax. Incompatible cards may damage the slot or corrupt the data stored in the card.

4. How to use Your Phone

4.1 Switch On/OFF

Long Press the End key to switch on and off your phone.

4.2 Lock/Unlock the phone

From the home screen press Left key and then immediately press * to lock the phone.

To unlock, press Left key and then press *.

4.3 Make a Call

Dial a number and press the call key to make a call.

You can also call a number from the phonebook or dialed or missed call list in the same way.

4.4 Answer/Reject a call

To answer, press the call key. To reject, press End key.

4.5 Make an International call

From the home screen, keep pressing the * key till + displays on screen.

Enter the desired international code and then complete the phone number make the call.

4.6 Send Messages

You can compose a new message or reply to existing messages in the list.

You can also send and receive multimedia messages.

4.7 Add contacts to Phonebook

Phonebook>Options>New

This feature enables you to add new contacts.

You can also save contacts through call logs, messages and so on.

4.8 Browse the Net

You can use WAP for browsing your favorite websites.

You can connect to the Internet via GPRS connection. For this you need to set up a data account.

1. Go to **Menu> Connectivity> Browser>Options>Settings**

Select the desired data account from the list of data accounts listed by your network provider's SIM.

By default, your network provider sends the data account and WAP settings via SMS, or it comes with your SIM card. You can thus choose from the listed data accounts. If the Data accounts are not listed by default, please contact your network provider for the same.

After this you can browse your favorite websites.

4.9 Use Multimedia Features

Menu>Multimedia

You can use Camera, Image viewer, Video recorder, Video player, Music Player, Sound recorder and FM radio.

5. Notable Features

5.1 Torch

Long press the Ok key to turn on/off the torch.

5.2 Bluetooth

Menu>Connectivity>Bluetooth

Turn on Bluetooth to exchange data with other Bluetooth enabled devices.

5.3 Blacklist

Settings>Security>Blacklist

This feature allows you to stop receiving calls from the blacklisted numbers.

5.4 Auto Redial

Settings >Call Settings>Others>Auto Redial

Switching this feature on will automatically redial a number.

5.5 Call Time Reminder

Settings >Call Settings>Others>Call Time Reminder

You can activate or deactivate call time reminder. If activated, the phone beeps at the time interval you have set, during a call.

5.6 Phone Language

Settings>Phone Settings>Language settings

You can change the phone language according to your preference.

5.7 Phone Security

Settings>Security

You can set the password to unlock the phone. Default password is 0000. You can also set preferences to lock the phone.

5.8 Text reader

Application>Text reader

This feature allows you to read e-books.

5.9 Useful Tips

Tips	Description
IMEI Number	You can find the IMEI Number of your phone by pressing *#06#.
Msg. Templates	To save time writing messages, you can use message template.
Timed ON/OFF	You can set time to automatically switch ON/OFF

	your phone.
SAR Value	You can find the SAR values by pressing *#07# (applicable to India users only).

6. Safety Precautions

Please read these simple guidelines. Not following them may be dangerous or illegal.



Safe Driving

- Do not use the phone while driving. When you have to use the phone, please use the personal hands-free kit.
- Please put the phone safely in the phone stand. Do not put it onto any passenger seat or any place from which it may fall down in case of vehicular collision or emergency braking.



During Flight

Flight is influenced by interference caused by the phone. It is illegal to use a phone on the airplane. Please turn off your phone during a flight.



In Hospitals

- Your Phone’s radio waves may interfere with the function of inadequately shielded medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external RF energy. Switch off your device when regulations posted instruct you to do so.
- To avoid potential interference with implanted medical devices such as a pacemaker or cardioverter defibrillator:
- Always keep your phone at least 15.3 centimeters (6 inches) from the medical device.
- Do not carry the wireless device in a breast pocket.

- Turn off the phone if there is any reason to suspect that interference is taking place.
- Follow the manufacturer directions for the implanted medical device.
- If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.



Unsafe Areas

Please turn off your phone when you are close to a gas station or in the vicinity of any place where fuel and chemical preparations, or any other dangerous goods are stored.

7. Taking Care of Your Device

Your device is a product of superior design and craftsmanship and should be handled with care: The following suggestions will help you protect your phone:

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will rust electronic circuits. If your device does get wet, remove the battery without turning on the device, wipe it with a dry cloth and take it the service center.
- Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not attempt to open the device other than as instructed in this guide. Repairing this phone by yourself other than our authorized service agents/centers goes against the warranty rules.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not store your device near magnetic fields or allow your device to come in contact with magnetic fields for extended period of time.
- Location: The socket-outlet shall be installed near the equipment and shall be easily accessible.



Battery Recommendations

- Please put the battery in a cool and well-ventilated place out of direct sunlight. We recommend you to charge the battery at room temperature range.
- Batteries have life cycles. If the time that the battery powers equipment becomes much shorter than usual, the battery life is at an end. Replace the battery with a new battery of the same make and specification.
- Use manufacturer approved batteries, chargers, accessories and supplies. Micromax will not be held responsible for user's safety when using unapproved accessories or supplies.
- Do not discard the battery with household trash. Please dispose of used battery according to your local environmental laws and guidelines.
- Warnings on Battery:
 - Please use appointed battery in case of explosion risk.
 - Please dispose of lifeless battery under guidance.



Recycle Your Phone



The WEEE logo (shown at the left) appears on the product (battery, handset, and charger) to indicate that this product must not be disposed off or dumped with your other household wastes. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling of such hazardous waste.

Collection and proper recovery of your electronic waste equipments at the time of disposal will allow us to help preserve the environment. Recycling of the electronic waste equipment will ensure safety of human health and environment. For more information on best practices for disposal of electronic and electrical waste, please visit to our web site: www.micromaxinfo.com/weee.php.



Disclaimers

- The colors and specifications shown/mentioned in the user manual may differ from the actual product. Images shown are for representation purpose only. Other product logos and company names mentioned herein may be trademarks or trade names of their respective owners.
- Micromax keeps the right to make modifications to the content in this user guide without any prior notice.
- The functions explained or listed in this manual may differ from the actual functions appearing in the mobile phone. In such a case, the latter shall govern. We do not guarantee the absolute accuracy of the User Guide Vis-a vis the actual handset.



Copyright

All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Micromax is strictly prohibited.