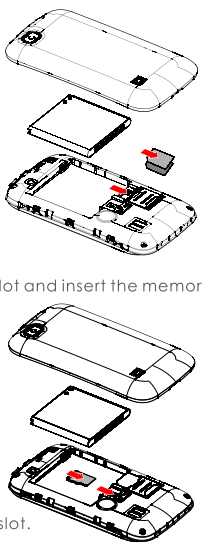


Keys and Parts (Front and Back)		Insert SIM Card/Memory Card		Basic Operations	
 1. Headset 2. USB socket 3. Receiver 4. LCD 5. Menu 6. Home 7. Back 8. Camera lens 9. Speaker 3		Insert SIM Card The X446 is a dual SIM handset that allows you to use two SIM cards. 1. Switch off the handset and remove the rear cover and battery. 2. Insert the SIM card correctly in the SIM slot (s) as shown below.  Insert memory Card 1. Open the memory card slot and insert the memory card into the correct slot as shown below. 4		1. Start a Call Conference You can talk with more than one person at the same time through call conference. 1. While on a call, dial another contact. Once the new call gets connected, the first call will be put on hold. 2. After this, press Options and then choose Conference. Note: This is network dependent and you may need to contact your network operator to activate this feature. 2. Safeguard your Phone Menu> Settings> Security Settings> Theft Tracker You can track your phone in case of loss by activating Theft Tracker mode and then providing an alternate number. The default password to use this feature is 0000. 3. Secure your Phone Menu> Settings> Security Settings> Phone Security> Phone lock Lets you lock your phone via a security password. The default security code to unlock the phone is 0000. Note: After you activate the phone lock, you would be asked for a password when you power on your phone next time. 5	

Safety Guidelines		Taking Care of Your Device	
SAR Information - Your phone is designed not to exceed the limits of emission of radio waves recommended by international guidelines. - SAR (specific absorption rate) is the unit of body-absorbed RF energy when the phone is in use. - The Highest SAR value of the handset at the head and body are 0.531 and 0.428 W/kg @ 1 gm respectively. SAR Recommendations - Use a wireless hands-free system (headphone, headset) with a low power Bluetooth emitter. - Please keep your calls short and use SMS whenever convenient. This advice applies especially to children, adolescents and pregnant women. - Prefer to use your cell phone when the signal quality is good. - People having active medical implants should preferably keep the cell phone at least 15 cm away from the implant. Safe Driving - Do not use the phone while driving. When you have to use the phone, please use the personal hands-free kit. - Please put the phone safely in the phone stand. Do not put it onto any passenger seat or any place from which it may fall down in case of vehicular collision or emergency braking. Unsafe Areas - Please turn off your phone when you are close to a gas station or in the vicinity of any place where fuel and chemical preparations are used.		During Flight - Flight is influenced by interference caused by the phone. It is illegal to use a phone on the airplane. Please turn off your phone during a flight. In Hospitals - Your Phone's radio waves may interfere with the function of inadequately shielded medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external RF energy. Switch off your device when regulations posted instruct you to do so. - To avoid potential interference with implanted medical devices such as a pacemaker or cardioverter defibrillator: - Always keep your phone at least 15.3 centimetres (6 inches) from the medical device. - Do not carry the wireless device in a breast pocket. - Turn off the phone if there is any reason to suspect that interference is taking place. - Follow the manufacturer directions for the implanted medical device. - If you have any questions about using your wireless device with a implanted medical device, consult your health care provider.	
Disclaimer Micromax keeps content here in this manual may mobile phone. In		4. Privacy for Me - Go to Menu> Settings> Privacy - Enter the default password. - Select and enter your choice. - Next time you power on the phonebook or dial pad, you will be asked for your choice. - Note: You can protect your choice. 5. Lock your SIM Card Menu> Setting> Security Settings> Lock SIM Lets you lock your SIM card. You can change anytime. The default security code is 0000. Note: After you activate the SIM lock, you would be asked for a password when you power on your phone next time. 6. Activate Bluetooth Menu>Bluetooth You can use Bluetooth to connect with other Bluetooth devices.	