

MOTOROLA PRO+

LIFE. M. POWERED.

WELCOME

- Part business, part casual and all smartphone.
- **Speed**—1 Ghz processor for fast web browsing.
 - **Easy viewing**—emails, documents and calendar.
 - **Business ready**—enterprise level security.

YOUR PHONE

Most of what you need is on the touchscreen and four keys on the front:

- **Menu**: Open menu options.
- **Home**: Go to the home screen.
- **Back**: Go back a screen.
- **Search**: touch for text search.

Note: Certain apps and features may not be available in all countries.

Use the **full keypad** for texting, emailing or searching.

Tip: To lock the screen, press the Power key (⏻). To unlock, press the Power key (⏻), then drag (⬆) right.

Note: Your touchscreen might stay dark if the sensor just above it is covered. Don't use covers or screen protectors (even clear ones) that cover this sensor.

START HERE

Let's get you up and running.

Caution: Before assembling, charging or using your phone for the first time, please read the important safety, regulatory and legal information packaged with your product.

Create or log into a MOTOBLUR account. Use an existing email account and a memorable password—these will become your MOTOBLUR account ID and password. Registration is secure and should only take a few minutes.

Note: This phone supports data-intensive apps and services. It is strongly recommended that you purchase a data plan that meets your needs. Contact your service provider for details.

TOUCH TIPS

It's all in the touch:

- **Touch**: Choose an icon or option.
- **Touch & hold**: Open options.
- **Drag**: Scroll or move slowly.
- **Flick**: Scroll or move quickly.
- **Pinch**: To zoom maps, webpages or photos, slide fingers apart or together.

HOME SCREEN



The home screen gives you all your latest information in one place. It's what you see when you turn on the phone or touch Home (⌂) from a menu. Add widgets and shortcuts to your home screen to see what's important to you. To make the home screen yours, see "PERSONALISE".

APPS

All your apps, all together:

- **App menu**: To open the app menu, touch (⌂) on the home screen. To close the app menu, touch Home (⌂) or Back (⬅).
- **Want more?**: No problem. To download more apps, touch (⌂) > (M) **Market**.

Tip: Choose your apps carefully, from trusted sites like (M) **Market**, as some may impact your phone's performance.

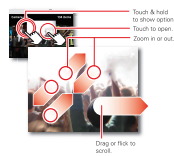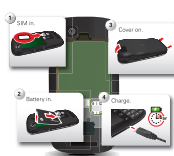

Certain features, services and applications are network-dependent and may not be available in all areas; additional terms, conditions and/or charges may apply. Certain use may require a data plan.

All features, functionality and other product specifications, as well as the information contained in this guide, are based upon the latest available information and are subject to change or modification without notice or obligation.

Note: Not all features in this guide are available in all countries.

MOTOROLA and the Motorola M logo are trademarks or registered trademarks of Motorola Trademark Holding, Inc. Google, the Google logo, Google Maps, Google Talk, Google Analytics, Gmail, YouTube, Gmail, Android and Android Market are trademarks of Google, Inc. All other product or service names listed are the property of their respective owners.

© 2011 Motorola Mobility Inc. All rights reserved.
Product ID: MB002 (Rev. 08/2011)
Manual number: 60004750013

PERSONALISE

Go ahead, add your personal touch. Change your widgets, wallpaper, ringtones and more—make it yours.

- **Home screen:** Touch and hold an empty spot until you see the **Add to Home screen** menu.
Tip: To move or delete something, touch and hold it to drag it to a new location or to the bin at the top of the screen.
- **Ringtones & sounds:** Touch menu > **Settings** > **Sound**

CALLS

Your dial pad, call lists, contacts and favourites are just a touch or two away — no menus needed. Just touch **Dialler** on the Home screen.
Tip: During a call, touch Home or Back to hide the active call display and use other apps. To reopen it, touch **Dialler**.

CONTACTS

Contacts like you've never had before, downloaded from your accounts and backed up on MOTOBLUR.
Touch > **Contacts** or **Dialler** > **Contacts**.

- **Scroll:** Flick or drag the list. Touch a letter on the right (A-Z) to jump to entries.
- **Search:** touch **Q** to open, then type the contact name.
- **More:** To transfer your contacts to your phone, or organise your contacts, go to www.motorola.com/motorola.

UPDATES

Find out what everyone is doing. Touch your **Social networking** or **Messages** widgets to see the newest updates, then:

- **See more:** Flick left to see more updates or messages.
- **See details:** touch **Social networking**, then touch the social network's icon for more access.

Tip: To add social network accounts, touch Menu > **Settings** > **Accounts** > **Add account** and follow the instructions.

MESSAGES

All of your messages stay in one place — text, IM, email, Facebook™ and more. Touch > **Messaging** > **universal inbox**. To edit the message types shown in the Universal inbox, touch Menu > **Edit universal inbox**.
Tip: To add email and Gmail™ accounts, just touch Menu > **Settings** > **Accounts** > **Add account** and follow the instructions.

MEDIA

See it, capture it, share it! You'll even have time to relax to some music.

- **Photos:** Touch **Camera**. To take the photo, touch .
- **Videos:** Touch > **Camcorder**. To start and stop the video, touch .
- **Music:** Touch > **Music**, then touch a category. Play your songs or listen to an online radio station.

GALLERY

Your photos and videos plus your friends' photos and videos all in one place, touch > **Gallery**.

- **View:** touch **Camera** roll to see the photos and videos you have taken, or touch **My library** to sort photos and videos by **Albums**, **Locations**, **Tags** or **Timeline**.
- **Share:** touch **Online** or **Friends**.

WEB & MAPS

Browse, download and search. And if you need to know where you are or where you're going, we've got that covered too.

- **Browser:** Touch > **Browser** and surf to your heart's content.
- **Rich web content:** With Adobe® Flash™ Player 10.1 support you can access your favourite websites.
- **Maps:** Touch > **Maps** to use the Google Maps™ you know and love. With built-in GPS, you'll have pinpoint turn-by-turn navigation all the way.

WIRELESS







Lose the wires—touch Menu > **Settings** > **Wireless & networks**.

- **Bluetooth™:** For hands-free calls and wireless music, touch Bluetooth settings and connect to your accessory.
- **Wi-Fi:** For fast Internet access, touch Wi-Fi settings and connect to a home, office or hotspot network. For connection details, touch Menu > **Advanced**.

MORE

Want more? You got it:

- **Answers:** Touch > **Help centre**. You can also flick your home screen left or right to see the Getting started and Tips & tricks widgets.
- **Support:** Phone updates, PC software, user guides, online help and more at www.motorola.com/motorola.
- **MOTOBLUR:** When you create a MOTOBLUR™ account, open it at www.motorola.com/motorola.
- **Accessories:** Find optional accessories for your phone at www.motorola.com/products

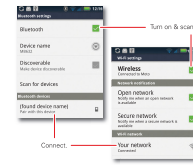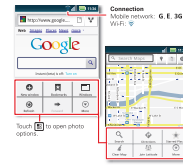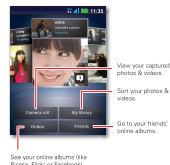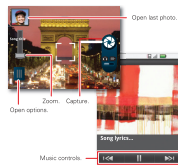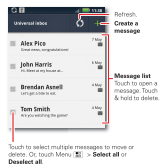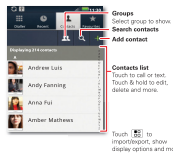

SAR This product meets the applicable SAR limits of 1.8 W/kg (E12) and 2.0 W/kg (E15). The limits and guidelines include a substantial safety margin designed to ensure the safety of all users, regardless of age and health. The highest SAR value measured for this device is located in the right and safety information package in this product.
Note: When carrying the product or using it with your body, often use an approved accessory such as a headset or speakerphone to reduce SAR. To help keep the body to wireless equipment and RF exposure requirements. Note that the product may be transmitting even if you are not making a phone call.