



motorola W230

Getting started guide

accessories

more information

GOTO
accessories: www.motorola.com
user guide: www.motorola.com/support



congratulations!

Congratulations on your purchase of the cool Motorola W230 mobile phone.

Whether you're a talker, a texter or just love listening to music on the move, the W230 does it all.

We've crammed all the main features of your phone into this handy guide - you can even take the guide with you.

If you'd like even more information about how to use your new W230, visit www.motorola.com/support/W230. So, let's go.

your phone

left soft key

Performs the function shown on the display above the key.

right soft key

Performs the function shown on the display above the key.

send/answer key

Make and answer calls. Press from the home screen to see list of recently dialled calls.

power/end key

Make and answer calls. Press from the home screen to see list of recently dialled calls.

centre key

Select a highlighted option or open a menu when you see in the display.

navigation key

Scroll through lists and menus. Press left to access QuickTEXT.

shortcuts

A few shortcuts we think you'll find really useful: voicemail

Press and hold . If your voicemail number is pre-set, you will connect. If not, press then **Star**. Give your operator a call if you don't know the number.

recent calls

Quickly view your call history by pressing > **Recent calls**. You can then choose to access your **Recent calls**, **Star** calls or **Call times**.

lock/unlock keys

Prevent accidental calls by pressing followed by . Your screen will go black and your keys are locked. Repeat to unlock.

music player

Press **Max** (left soft key) from the home screen. Press to set quick text on your home screen press > **Personalise** > **Home screen** > **Home keys** > **Up/Down/Left/Right** > **Quick Text**.

calls

Yes, your phone makes calls too! And it's very good at it.

make a call

Enter a number and press .

answer a call

When your phone rings or vibrates, press .

end a call

Press .

radial a number

From the home screen, press to view a list of recently dialled calls.

quick text

To set quick text on your home screen press > **Personalise** > **Home screen** > **Home keys** > **Up/Down/Left/Right** > **Quick Text**.

emergency calls

To call an emergency number, enter the emergency number and press .

Your service provider programs emergency phone numbers, such as 999, that you can call under any circumstances, even when your phone is locked. Emergency numbers vary by country. Your phone's pre-programmed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental or interference issues.

radial a number

- From the home screen, press to view a list of recently dialled calls.
- Scroll to the entry you want to call and press .

music

You love your new phone. You love your music. Imagine combining these two passions...imagine no longer:

what you need

To use the music player, insert a microSD memory card, which is an optional accessory. The music player supports MP3, MIDI, Melody and AMR music file formats. You can copy music from a computer to your phone, where the music is stored on the memory card (see "USB drag & drop" later in this guide).

TIP: To access music stored on your microSD memory card, press > **Media** > **Music library** > > **Switch storage device**.

play music

Press > **Media** > **Music library**. Scroll to a song, playlist or album, and press **Play**. **TIP:** From the home screen, press your phone's left soft key to access the music player faster.

music player controls

function	
scroll up/down through list	Before music playback, press up or down.
play/pause	Press .
fast forward	Press & hold right (for at least two seconds).
skip to next song	Press right.
rewind	Press & hold left (for at least two seconds).
return to start of song	After first two seconds of song, press left.
return to last song	Within first two seconds of song, press left.

Note: Please use only Motorola approved accessories with this product. For further support: www.motorola.com

menu map

Contacts

- Recent calls
- Received calls
- Dialled calls
- Notepad
- Call times
- Call cost *
- Data times

WebAccess

- Pictures
- Music library
- FM radio

Personalise

- Home screen
- Main menu
- Colour setting
- Greeting
- Wallpaper
- Screen saver
- Speed dial

Settings

- Ring style
- Call divert
- In-call setup
- Initial setup
- Phone status
- Headset
- Network
- Security
- Easy prefix

Extras

- Calculator
- MyMenu
- Alarm clock
- Stop watch
- Chat *
- Dialling services *
- STK *
- Calendar

Games

This is a standard main menu layout. Your phone's menu may be a little different. *Network dependent

let's go

1. Insert the SIM card into the SIM slot.

2. Insert the microSD card into the microSD slot.

3. Insert the battery into the battery compartment.

4. Press the power/end key to turn the phone on/off.

5. Press the navigation key up, down, right or left to highlight a menu option.

6. Press or **Star** (left soft key) to select the highlighted option.

7. Press when you see in the display to show menu options.

basics

You may have mastered these already, but here are a few essential basics:

turn it on & off

Press and hold for a few seconds to turn the phone on/off.

menu navigation

Press the centre key to open the Main menu.

Press the navigation key up, down, right or left to highlight a menu option.

Press or **Star** (left soft key) to select the highlighted option.

Press when you see in the display to show menu options.

customise

Here's your chance to make your phone easier and more enjoyable to use. So go on, add your personal touch.

create shortcuts

Choose the features you want to access with a single key press from the home screen - really useful stuff!

Press > **Personalise** > **Home screen** > **Home keys**

set your screensaver and wallpaper

Change the wallpaper and screensaver images to ones that make you smile.

Press > **Personalise** > **Screensaver** or **Wallpaper**

set ringtone and volume

There are times when you want to hear your ringtone in all its glory, and there are times when you don't.

Press > **Settings** > **Ring style**

Choose from the pre-programmed styles, including **Vibrate** and **Silent**.

change front cover

Remove the battery cover. From the top of the device, wedge a thin object (eg.: your fingernails) between the cover and the main housing of the device until the two parts detach. Then, working down the phone, release the cover and slide off.

1. Remove the battery cover.

2. Replace the cover.

contacts

Made a new friend? Urgently need to contact someone? No problem, saving and calling your contacts is effortless.

save contact

1. Enter the number on the home screen and press **Star**.

2. Enter the contact details.

3. Press **Star** when you're finished.

call a contact

1. Press > **Contact**.

2. Scroll through the list to highlight the contact's number.

3. Press .

messages

Messaging is great, everyone thinks so. Here are a few basics to get you going:

send a message

1. Press > **Message** > **Send**.

2. Select the message type.

3. Enter your message.

TIP: In a text entry screen, press to switch entry modes.

4. Press **Star** and scroll to a contact.

5. Press **Star** and scroll to any other contact's you wish to add.

6. Once you have added the contact's, press **Star**.

7. Press **Star** to send the message.

Send messages in only 5 clicks! In the home screen, press the left arrow of the navigation key to enter directly into the text message editor. Type the text and press **Star**. In the **Star** screen, select or enter the number you want to send your message to. Then click **Star**. It's that easy!

read a message

When you receive a message you will see **New message** on your screen. Press **Star** to open the message. You can reply to the message by pressing **Reply**.

FM radio

Listen to your favourite music or news programme.

1. Plug a 2.5 mm headset into your phone.

Note: The FM radio works only when the headset is plugged in.

2. Press > **Media** > **FM radio**

To tune in a station, press left or right.

To scan available stations, press and hold left or right. Repeat to go to more stations.

To adjust volume, press up or down.

To turn off the radio, press > **FM radio off**.

store favourite stations

When listening to a station, press and hold a number key through to store the station as a preset for that number key. To select a preset station, press the number key for the station you want.

TIP: To share your favourite radio station press > **Media** > **FM radio** > **Options** > **Send station info**.

USB drag & drop

Use the USB cable to connect your phone and PC, then simply drag & drop.

1. Insert one end of the USB cable into your phone and the other into your PC.

2. Press **Star** to connect your phone as a storage device.

3. Use the **My Computer** window to find **Removable Device**.

4. Drag and drop your music, photos and other stuff that you want to copy.

Two folders are available **Music** and **Picture**. Copy music files into the **Music** folder and images into the **Picture** folder.

When you're done, use the **Safely Remove Hardware** feature to finish.

Note: This product is compatible with Microsoft® Windows®, but may not work correctly with Mac® and Linux® OS. For further support: www.motorola.com/support/W230

status indicators

The home screen displays when you turn on the phone. Status indicators can appear across the top of the home screen:

Signal Strength Indicator

Active Call

Battery Level

Headset

Alert type

Roaming

New Message

Note: Your phone's home screen may be different than the one shown.

