

MOTOROLA WX306

LIFE.  POWERED.



SAR

This product meets the applicable limit for exposure to radio waves known as SAR of 2.0 W/kg (ICNIRP). The limits and guidelines include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health. The highest SAR values measured for this device are listed in the legal and safety information packaged with your product.

Note: When using the product while worn on your body, either use an approved accessory such as a headset or maintain a distance of 2.5 cm (1 inch) from the body to ensure compliance with SAR requirements. Note that the product may be transmitting even if you are not making a phone call.

60016404016

WELCOME

Whether you're a talker, a texter or just love surfing the web, the WX306 does it all. Listening to music or taking photos and videos on the move, is just a key press away. We've crammed all the main features of your phone into this handy guide—you can even take the guide with you. If you'd like even more information about how to use your new WX306, visit www.motorola.com/support. So, let's go.

Note: Your phone may not appear exactly as the images in this guide. However, all key locations, sequences and functions are the same.

Caution: Before assembling, charging or using your phone for the first time, please read the important safety, regulatory and legal information in this guide.

YOUR PHONE



LET'S GO



BASICS

Turn it on & off

Press and hold  for a few seconds to turn the phone on/off.

Menu navigation

Press  to open the main menu.
Tip: You can also press **Menu** (right soft key).

Press the navigation key  up, down, right or left to highlight a menu option.

Press  to select the highlighted option.

PERSONALISE

Set your wallpaper

Change the wallpaper to one that makes you smile.
Press  > **Settings** > **Phone settings** > **Display** > **Wallpaper**.

Press  > **Settings** > **Phone settings** > **Time and date**.

Set ringtone & volume
Play it loud or keep it quiet, you choose.
Press  > **Settings** > **User profiles**.

Choose a profile. Press **Options** > **Customise** to edit a profile.

Set auto power
Choose when to receive calls and messages—really useful stuff!
Press  > **Settings** > **Phone settings** > **Schedule power off**.

MESSAGES

Send an SMS or MMS

Press  > **Messaging** > **Write message** > **Text message** > **Multimedia message**.

Enter your message.
Tip: Press **Options** > **Input method** to switch text entry modes. Press  to switch capitalisation modes. Press  to enter a space.

Press .
Select **Enter number**, enter a number and press  or select **Add from Phonebook** and scroll to a contact. Press  to select a contact.

Press .
Read messages
When you receive a message you will see . Press **View** >  to open the message.

CALLS

Make calls

Enter a number and press .

Answer calls

When your phone rings or vibrates, press .

End a call

Press .

Redial number

From the home screen, press  to see a list of **All calls**.
Scroll to the entry you want and press .

Emergency calls

To call an emergency number, enter the emergency number and press .

Your service provider programs one or more emergency phone numbers that you can call under any circumstances, even when your phone is locked. Emergency numbers vary by country. Your pre-programmed emergency number(s) may not work in all locations and sometimes an emergency call cannot be placed due to network, environmental or interference issues.

TIPS & TRICKS

Ringtone

To quickly change your ringtone, press and hold  from the home screen.

Voicemail

Press and hold  if your voicemail number is preset, you will connect.

Backlight time

To set how long your backlight stays on, press  > **Settings** > **Phone settings** > **LCD backlight**.

Torch on

To turn on the torch, press and hold  again, to turn it off.

Tip: To download PC suite, go to: <http://www.motorola.com/trymy306>

MUSIC

To use the music player, insert a microSD memory card (optional). The music player supports MP3, WMA and AMR music formats.

Play music

Press  > **Multimedia** > **Media player**

Controls

function	
play/pause/	Press 
fast forwards/	Press 
rewind song	Press 
volume	Press  up or down.

Tip: To view music stored on your microSD memory card, press  > **File manager** > **Memory card**. To transfer music to/from your memory card, plug your USB cable into your phone & computer, then drag & drop files.

MENU MAP

Multimedia - Camera - Image viewer - FM radio - Sound recorder - Schedule FM record - Media player - Settings Phonebook - Call centre - Call history - Call settings Messaging - Text message - Links - Drafts - Send messages - Receive messages - Email - Broadcast message - Templates - Message settings Tools - Alarm - World clock - Calendar - Calculator - Tables - Currency converter Fun & Games - Settings - Phone settings - Network settings - Security settings - Connectivity - Factory data reset - User profiles - Shortcuts	Browser - Homepage - Bookmarks - Input address - Last web address - Recent pages - Secret pages - Connect online - Settings Social Networks - Facebook - Twitter - Orkut - Google Search - MySpace - YouTube File manager - Memory card
---	---

This is a standard home screen layout. Your phone's home screen may be a little different.

PHOTOS & VIDEOS

Take photos & videos

To use the camera press  > **Camera**. Press **Settings** > **Video recorder** to switch to video.

Press  to take your photo or to start/stop the video. Then:

- To send your photo by MMS, press .
- To delete the photo, press **Options** > **Delete**.

To return to the viewfinder, press **Cont.**
Tip: To set where your photos are stored press **Settings** > **Photo album** > **Options** > **Photos** > **Options** > **Storage** > **Phone or Memory card**. To set where your videos are stored press **Options** > **Storage** > **Phone or Memory card**.

To transfer photos or videos to/from your memory card, plug your USB cable into your phone & computer, then drag & drop files.

RADIO

Listen to the radio

Plug a headset into your phone.
Note: The FM radio works only when the headset is plugged in.

From the home screen, press  > **Multimedia** > **FM radio**.

To tune in a station, press  left or right or press **Options** > **Auto-search**.

Your phone lists the devices it finds within range. Press a device name to connect with it.

If necessary, press **Yes**, **OK** or enter the device passkey such as 0000 to connect to the device.

To automatically reconnect your phone with a paired device, simply turn the device on.

To automatically disconnect your phone from a paired device, simply turn the device off.

To send a media file or contact, open the item that you want to transfer, then press **Options** > **Send** > **Via Bluetooth**.

BLUETOOTH™

Connect new devices

Make sure the device you are pairing with is in discoverable mode.

Press  > **Settings** > **Connectivity** > **Bluetooth** > **Search audio device**.

Your phone lists the devices it finds within range. Press a device name to connect with it.

If necessary, press **Yes**, **OK** or enter the device passkey such as 0000 to connect to the device.

To automatically reconnect your phone with a paired device, simply turn the device on.

To automatically disconnect your phone from a paired device, simply turn the device off.

To send a media file or contact, open the item that you want to transfer, then press **Options** > **Send** > **Via Bluetooth**.

WEB

Surf the web

If you can't connect, contact your service provider. Use your phone's browser to surf your favourite web sites.

Press  > **Browser**.

To go to your homepage, press **Homepage**.
To go to a webpage, press **Input address**.
To bookmark a page, press **Options** > **Add to Bookmarks**.

DISPLAY

The home screen shows when you turn on the phone. Status indicators can appear across the top of the home screen.



Note: Your phone's home screen may be different from the one shown.

