



myPhone

USER'S MANUAL

myPhone FUN 5

(smartphone)

ENG

Thank you for choosing your myPhone device. The purpose of this User Manual is to explain the device operation to the User. You will find full version of it under the QR code located on the back cover of this manual.

No part of this User Manual shall be copied, distributed, translated or transmitted in any form by use of any electronic or mechanical means, including photocopies, registering or storing in any storage systems without prior written consent of myPhone company.

Using this User Manual

The device and screenshots depicted in this User Manual may vary from your device. The accessories of the myPhone FUN 5 may look differently from pictures in this User Manual.

This User Manual describes the options present in the Android™ system. The descriptions may vary depending on the operating system version owned by the User.

Important information

Most apps that may be installed on this device are mobile apps. The operation of those apps may vary from their counterparts installed on a PC.

Apps installed on the device may vary depending on the country, region and technical characteristics of the equipment. The myPhone company is not responsible for any problems with efficiency caused by third party software.

The myPhone company is not responsible for any abnormalities that may occur during register setting editing and operating system software modification. Any attempts to modify the operating system may lead to improper device and app operation and will void any warranty.

Manufacturer's data

myPhone Sp. z o. o.

ul. Nowogrodzka 31

00-511 Warsaw Poland

Homepage: <http://myphone.pl>

Infolinia: (+48 71) 71 77 400

E-mail: pomoc@myphone.pl

ENG

The appearance of the smartphone

1. Mini jack 3,5mm
2. Multifunctional micro-B USB connector
3. Front camera
4. Turn on/off and locking button
5. Buttons: Back / Home / Menu
6. Volume increase/decrease buttons



SIM card and memory card installation

SIM card installation

The myPhone FUN 5 is a Dual SIM technology smartphone that enables the use of two cellular networks simultaneously. It supports SIM cards. To install a SIM card properly:

- Turn the phone off, remove the cover using your fingernail or fingertip. Remove the cover from the smartphone, paying attention not to damage the buttons at the side of the device.
- Insert the SIM card(s) into the slot(s) as shown in pictograms above the slot(s).

microSIM cards

SIM card slots on the phone support only standard size SIM card, trying installing microSIM cards can cause mechanical damage to the phone when removing them. To put a microSIM in the phone use a microSIM adapter. In the event of a deadlock in the microSIM slot, you should immediately contact an authorized myPhone service!

microSIM adapters

Do not install hollow (with no card) microSIM card adapter in your smartphone. This will cause a jam. Attempt to draw jammed adapter back from the slot can cause mechanical damage of the phone. If SIM card adapter deadlocks in the socket, you should contact an authorized myPhone service!

Memory card installation

Use only compatible and company-approved memory cards. Incompatible memory cards may damage the card itself and/or the device and lead to data loss. Memory card incompatibility means an unsupported card format (microSD format is required) or an unsupported card capacity (above 32 GB). To install a memory card properly:

- Turn the phone off, remove the cover using your fingernail or fingertip. Remove the cover from the smartphone, paying attention not to damage the buttons on the side of the device.
- Insert the memory card into the slot that is located above the SIMcards slots as shown in the pictogram under the slot.

Desktop screen

On the main screen you can access the notification apps, voice commands and many other functions.

Addition of shortcuts to the desktop screen: hold your finger on the selected application, and then drag it onto the screen.

Custom settings: to change the Wi-Fi, brightness, etc., Drag the status bar down with two fingers.

1. Slide one finger down to view the notification or two fingers to display the settings.
2. To start the search, type the password, or use voice search.
3. Tap Applications icon to display all applications.



Safety related

notes

SAFETY

Read carefully all guidelines below. Non-compliance with these obligations may be considered to be dangerous or law-violating.

DO NOT RISK

Do not turn on the device where use of electronic devices is forbidden and when it might lead to interferences or other risks.

SAFETY ON THE ROAD

Do not use the device while driving vehicles.

LIMITED ACCESS AREAS

Turn off the phone aboard aircraft, as it may interfere with other onboard systems. The phone may influence operation of medical equipment at hospitals and other healthcare establishments. Please obey any prohibitions, regulations and warnings given by the medical staff.

ENG



SAFETY AT GAS STATIONS

Turn off the phone during refilling at gas stations. Do not use it close to chemicals.



PROFESSIONAL SERVICE

The product may be repaired only by qualified myPhone personnel or an authorized service center. Repair of the device by unauthorized or an unqualified service could cause damage to the device and will void any warranty.



BATTERIES AND ACCESSORIES

Avoid exposing the battery to very low or very high temperatures (below 0°C / 32°F or above 40°C / 100°F). Extreme temperatures may negatively influence the capacity and life of the battery. Avoid contact of the battery with fluids and metal objects. Such contact may lead to total or partial battery damage. Only use the battery in accordance with the intended use. Do not destroy, damage or throw the battery into fire – it may be dangerous and lead to explosion. Used or damaged battery should be stored in a special container.

Overloading the battery may lead to damage. Therefore the battery should not be charged continuously for longer than 3 days. If the wrong type of battery is used, an explosion may occur. Do not open the battery. The battery should be disposed of in accordance with instructions. An unused adapter should be unplugged from the mains socket. Whenever an adapter cable is damaged, it should not be repaired - use a new adapter. Use only original myPhone accessories.



WI-FI (WLAN)

In European Union countries the WLAN may be used freely indoors. In France WLAN must not be used outdoors.



CHILDREN

This device is not a toy. Memory card and SIM card are small enough to be easily swallowed by a child and cause choking. Store the device and its accessories beyond the reach of small children.



INTERFERENCES

All wireless devices may cause interferences that influence the operation of other equipment.



PERSONS WITH DISABILITIES

The device should not be operated by people (including children) with limited movement or mental abilities, as well as by persons who have no experience in the use of electronic equipment. They can only use it under the supervision of persons responsible for their safety.



WATER AND OTHER FLUIDS

Do not expose to the action of water and other fluids. This may adversely affect the work and life of electronic devices. Avoid working in an environment with high humidity - steamy kitchens, bathrooms, rainy weather. Particles of water can cause the appearance of moisture in the device, and this is not a positive impact on the work of electronic components.

**NOTE**

To avoid hearing damage do not use the device with a high volume level for a prolonged time and do not place the operating phone directly to the ear.

Troubleshooting

If you have any problems with your device, make a backup of your important data (contacts, SMS messages, pictures, videos, music, etc.) and then restart your phone or restore default settings. If the problem persists, read the tips below and follow the suggestions in the case of a particular type of problem.

- SD memory card - verify if it is properly installed in the SD card slot. If the problem persists, use another SD card with proper class and capacity.
- USB – verify if the phone is properly connected to another device. Check the USB connection type in your phone settings (the shortcut is available on the notification screen). If the problem persists, use a different cable.
- Internet / Wi-Fi – check whether the phone works in airplane mode, it disables any wireless network functions. Check the network range. Check if the function is turned on in the phone and if the settings are set properly. Verify the correctness of the WiFi login password.
- Bluetooth – check Bluetooth device visibility options. Make sure that none of the devices are in range of Bluetooth connection and that there are no obstacles between them (please note – some LCD monitors absorb magnetic waves). Make sure that both devices have enough free memory to share files. Make sure that both devices work in airplane mode (airplane mode blocks Bluetooth).
- Sounds – make sure that the sound in the phone is not muted and check other sound settings. Verify if the plug is properly plugged in the miniJack 3.5 mm socket. Some miniJack plugs may vary and this might be a reason – try another cable. Verify another cable or use an adapter (not included).
- Pictures and screenshots – verify if the camera lens is not covered. Verify if the device has sufficient free memory on the SD card or on the internal memory (depending on the memory where pictures or screenshots are stored). Verify if the SD card is properly fitted.
- Although the battery is charged, its level of charge drops continuously – turn off all options such as Wi-Fi, Bluetooth, Location and decrease the screen brightness (those options are the most power consuming), then use the airplane mode. Those simple steps speed up the phone charging. It is recommended to charge the device using the adapter, not the PC USB socket.
- If the problem persists, contact the device manufacturer.

Memory card operation

- Do not remove the memory card, when information is moving on it or used by the device. This may lead to data loss or card/device damage.
- Do not touch the gold memory card pins with your fingers or any other metal objects. If the phone is dirty, wipe it with a soft cloth.

Personal data and information protection

- We recommend making regular backup copies of important data. The myPhone company is not responsible for any data loss.
- Before the device is disposed of, erase all data ([App Menu] [Settings] [Copy and data erase] [Factory settings] [Reset phone]). In this way you can protect your personal information from being stolen by unauthorized persons.
- When downloading apps, read any information on the screen. Pay special attention to apps that require access to many functions or personal information.
- Check the accounts regularly for unauthorized or suspicious use. If you find any trace of improper use of personal information, contact the service provider to delete or change the account details.
- If your phone is lost or stolen, immediately change the passwords to accounts (Google, e-mail, social media, etc.) to protect personal information.
- Try not to use apps from unknown sources. Lock the phone using a pattern, password or PIN code.
- Do not distribute copyright protected materials.
- Do not distribute any copyrighted contents without permission from the copyright owner. Failing to do so may lead to copyright infringement. The producer is not responsible for any legal consequences of illegal distribution of any copyright protected materials.

Notes on proper battery use

- The battery in this device may be charged using the USB socket. It is, however, not recommended due to the low voltage offered by the USB port and even if the battery is connected, it may be eventually discharged. If you want to charge the battery using USB, turn off the phone. If the battery is low, charge it to continue using the phone. If you want to prolong the battery life, let it discharge below 20% of full level and then fully recharge.
- If you are not using the adapter, unplug it from the phone. Overcharging leads to shortened battery life.
- The battery temperature influences charging quality. Before the charging process is initiated, the battery may be cooled or heated to reach the temperature close to room temperature. If the battery temperature exceeds 40 degrees, the battery cannot be charged!
- Do not use a damaged battery!
- The battery life can be shortened when it is exposed to very low or very high temperatures; it leads to device malfunctions even if the battery was properly charged.

Device maintenance

To prolong the device life:

- Store the device and its accessories beyond the reach of small children.
- Avoid contact with liquids; it may lead to damage of electronic parts.
- Avoid very high temperatures; it may shorten the life of electronic components, melt plastic parts or destroy the battery.

ENG

- Do not attempt to dismantle the phone. Unprofessional interference in the device may lead to damage or destruction.
- To clean use only a dry cloth. Do not use any acidic or corrosive.
- Use only original accessories; breaking this rule may void the warranty.
- The device packaging may be recycled in accordance with the provisions.

**Safety during listening to music/making calls.**

The phone is able to generate loud sounds that may damage your hearing. If you use the phone or speakers, keep a safe distance from your ear and do not listen to high levels of sound for a long time.

Environmental safety

Turn off the device in places where using phones is forbidden or where it may cause interferences and risks. Use of any devices using radio waves causes interference in the operation of medical devices (ex. a pacemaker) if not properly secured (in case of doubts consult the doctor or medical equipment producer).

Note	Declaration
The producer is not responsible for any consequences of situations resulting from improper use of the device or failure to follow the recommendations. The software version may be updated without previous notification.	The software version may be updated without previous notification.

Proper disposal of the device

The device has a crossed-out wheeled bin symbol, according to the European Directive 2012/19/EC on Waste Electrical and Electronic Equipment – WEEE. The products with this symbol should not be disposed of with other household waste. The user is responsible for disposal of used electrical and electronic equipment, delivering it to the reception point where such equipment is recycled. Storing this kind of waste in designated places and proper recovery processes help protect the natural resources. Proper recycling of used electrical and electronic equipment has a good influence on human health and the environment. To learn about the place and method of proper disposal of electrical and electronic equipment, the user should contact the proper authorities, waste collection point or vendor.

Proper disposal of batteries

ENG



According to 2006/66/EC Directive on battery disposal, the product is marked with a symbol located on the left of this paragraph. The symbol means that batteries used in the device should not be disposed of with household waste, but this should be done in accordance with the directive and local regulations. Do not dispose of the batteries with unsorted municipal waste. Battery users should use available reception points of such elements that ensures return, recycling and disposal. Within the EU separate procedures of collection and recycling apply. To learn more about existing procedures of battery recycling, contact municipal authorities, the waste management institution or a landfill site.

Trademarks

- Android, Google, Google Play, Google Play logo and other brands are trade marks of Google Inc.
- Oracle and Java are registered trademarks of Oracle and/or its branches.
- Wi-Fi® and Wi-Fi logo are registered trademarks of Wi-Fi Alliance.
- All other trademarks are property of their respective owners.

ENG

Declaration of conformity with European Union directives



myPhone Sp. z o.o. ensures and declares that the product complies with all relevant provisions of the European Directive 2014/53/EC

DEKLARACJA ZGODNOŚCI UE Nr 01/08/2016
EU DECLARATION OF CONFORMITY No. 01/08/2016

My/We, myPhone Sp. z o. o.
(nazwa importera / importer's name)

ul. Nowogrodzka 31, 00-511 Warszawa
(adres importera / importer's address)

niniejszym deklarujemy, że następujący wyrób:
declare under our responsibility, that the electrical product:

Telefon komórkowy/GSM Mobile phone
(nazwa wyrobu / name)

FUN 5
(typ wyrobu / type of model)

jest zgodny z postanowieniami następujących dyrektyw:
following the provisions following directives:

Dyrektywa 1995/5/EC
Directive 1995/5/EC

spełnia wymagania następujących norm:
complies with the following standards:

EN 60950-1:2006+A11:2009+A1:2010+A12:2011+A2:2013
EN 62479:2010
EN 50360:2001+A1:2012
EN 50566:2013/AC:2014
EN 62209-1:2006
EN 62209-2:2010
EN 301 489-1 V1.9.2:2011
EN 301 489-3 V1.6.1:2013
EN 301 489-7 V1.3.1:2005
EN 301 489-17 V2.2.1:2012
EN 301 489-24 V1.5.1:2010
EN 301 511 V9.0.2:2003
EN 300 328 V1.9.1:2015
EN 301 908-1 V6.2.1:2013
EN 301 908-2 V6.2.1:2013
EN 300 440-1 V1.6.1:2010
EN 300 440-2 V1.4.1:2010

1-08-2016 Warszawa
(data i miejscowość / date, place)


(podpis sygnatariusza)
(signature, of the signatory)