

User Manual

HAMMER 3



Lot number:201703

Thank you for choosing myPhone Hammer 3 device.
Please read the manual carefully.

Hammer 3 phone is intended for use on the GSM 2G frequencies 850/900/1800/1900 MHz. It has a durable, waterproof and dust-proof casing, a contrasting, colour display, a torch, Bluetooth and support for dual SIM.

Without prior written consent of the manufacturer, no part of this manual may be photocopied, reproduced, translated or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording or storing in any systems of storing and sharing information.

SAFETY

Read these guidelines carefully. Not following them may be dangerous or illegal.

—DO NOT RISK—

Do not switch on the phone when the use of mobile phones is prohibited or when it might cause interference or danger.

— ROAD SAFETY—

Do not use this device while driving any kind of vehicle.—

INTERFERENCES—

All wireless devices may cause interferences, which could affect the performance of other devices.

— RESTRICTED AREAS—

Switch OFF your telephone in an airplane since it may disturb the operation of other equipment located therein. The telephone may interfere with operation of the medical equipment in hospitals and health protection entities. Abide by any kinds of prohibitions, regulations and warnings conveyed by the medical staff.

— ALARM CALLS—

Making alarm calls may not be possible in some areas or circumstances. It is recommended to find an alternative way to notify emergency services if you are going to undeveloped or remote areas.

—CHILDREN—

This device is not a toy. Memory card and SIM card are small enough to be swallowed by a child and cause choking. Keep the device and its accessories out of reach of children.

—PETROL STATIONS—

Always turn off the phone while refueling your car on petrol station. Do not use your phone close to chemicals.

— QUALIFIED SERVICE—

Only qualified personnel or an authorized service center may install or repair this product. Repairing by an unauthorized or unqualified service may cause phone damage and warranty loss.

— PHYSICALLY OR MENTALLY DISABLED PEOPLE—

This device should not be operated by people (including children) with limited physical or mental abilities, as well as by people with no earlier experience in operation of

electronic equipment. They may use the device only under supervision of people responsible for their safety.

—WATER AND OTHER LIQUIDS—

The device has resistance certificate IP68. It means that the device is dustproof and waterproof when all of the rubber seals are intact and properly put in place, as well as when the cover is properly tightened with screws and the speakers membranes are intact (not contaminated with i.e. metal dust). We also advice not to expose the phone to water or other fluids for no good reason. Water and other dusts do not have a positive effect on phone electronic components. If wet, wipe and dry the device as soon as possible. If the following rules are not obeyed and a case of improper use is observed all the complaints concerning the device not being water- or dustproof will not be taken into consideration.

— BATTERY AND ACCESSORIES—

Avoid exposing the battery to very high/low temperatures (below 0°C/32°F and over 40°C/104°F). Extreme temperatures may influence capacity and battery life. Avoid contact with liquids and metal objects as it may cause partial or complete battery damage. The battery should be used according to its purpose. Do not destroy, impair or throw the battery into flames - it is dangerous and may cause fire. Worn-out or impaired battery should be placed in a dedicated container. Excessive charging the battery can cause damage. Therefore, a single battery charge should not last longer than 12 hours (1 day an

absolute max.). Installing an incorrect battery type can cause explosion. Never open the battery. Please dispose of battery according to the instructions. Disconnect an unused charger from power grid. In case of the charger wire damage, it should not be repaired but replaced with a new one. Use the original manufacturer's accessories only.



–HEARING–

To avoid hearing damage, do not use the device at high volume levels for a long period of time, do not put operating device directly to the ear.



– EYESIGHT–

To avoid eyesight damage do not look closely onto the flash light during its work. A strong beam of light may cause permanent eye damage.

Manufactured by:

myPhone Ltd.

Nowogrodzka 31 street

00-511 Warszawa

Polska

Customer service:

myPhone Ltd.

street Krakowska 119

50-428 Wrocław

Polska

Helpline: (+48 71) 71 77 400

E-mail: pomoc@myphone.pl

Website: <http://www.myphone.pl/produkty/hammer/>

Designed in UE

Manufactured in China

Table of contents

Table of contents	6
Technical Specifications	9
1. Appearance of the phone, its functions and buttons	10
2. Introduction	11
Turning the phone on and off.....	11
Charging the battery	12
Battery discharge indicator	13
3. Using the basic functions.....	13
Keyboard lock	13
Phone menu access.....	14
Customize your phone	14
Turning the „silent” mode on and off.....	14
Sounds and user profiles	14
Call handling functions.....	16
Calling.....	16
Answering	16
Text messages.....	16
Sending the message.....	16
Messages display.....	17

Contacts	17
Adding a new contact	17
Search for a contact.....	18
4. Advanced phone features.....	19
Connect with a contact from the phone book.....	19
Missed calls.....	19
Speakerphone	20
Speed dial.....	20
Dual SIM.....	20
Connecting your phone to the computer	21
International calls	21
5. Other phone features	22
Time and date settings	22
Menu language settings.....	22
Display settings.....	22
Call settings	23
Configuration of the alarm / alarms.....	23
Use of calculator.....	24
Factory settings	24
Torch	24
Call log	25
Audio player	25
Radio	26
Calendar	27
Bluetooth	27
Pairing bluetooth devices.....	28
Sending files via Bluetooth.....	28
Camcorder.....	29
Taking pictures.....	29
Recording videos.....	29
Phone icons	29

Troubleshooting	30
6. Proper phone maintenance	31
Proper use of the battery	31
Device maintenance	32
Safety information	33
Road safety	33
Surroundings security	34
Technological criteria	34
Information on certificates (SAR)	35
Correct disposal of electrical and electronic equipment.....	36
Correct disposal of used batteries.....	37
Declaration of conformity with European Union Directives.....	37

Package content

Before you start using your phone, make sure all of the following items are included in the box:

- HAMMER 3 phone,
- battery,
- charger (adapter + USB cable),
- user manual,
- warranty card.
- A tool for opening the battery cover.

 *If any of the above items is missing or damaged, please contact your dealer. There is a sticker containing the IMEI and serial number on the packaging of Hammer 3 set.*

 *It is recommended to keep the packaging in case of any complaint. Keep the container out of reach of children.*

Technical Specifications

- Display: TFT 2,4" 320x240 px
- GSM Connectivity 2G: 850/900/1800/1900 MHz
- Battery: 2000 mAh Li-ion
- Camera: VGA
- Bluetooth 2.0, Wi-Fi, Dual SIM, FM radio
- MicroUSB
- Water- and dustproof standard – IP68
- Dimensions: 133,5 x 58 x 18 mm
- Weight (battery included): 156 g

 *The newest version of the manual can be found on our company website:*

<http://www.myphone.pl/produkty/hammer/>

 *Depending on the installed version of the software, service provider, SIM card or country, some of the descriptions in this manual may not match your phone.*

 *Depending on the country, service provider, SIM card or device version, the phone and its accessories may differ from the illustrations included in manual.*

 *The descriptions contained in this manual are based on the default settings of the phone.*

1. Appearance of the phone, its functions and buttons



1. Display

2. Audio connector
(under the rubber plug)

3. Speaker

4. LED flashlight

5. Camera lens

6. Torch on/off

7. Volume control

buttons <+>, <->

8. Bolts securing casing

9. <menu> button

10. <contacts> button

11. <green headset>
button

- | | |
|---|--|
| 12. <red handset>
button | 16. Microphone |
| 13. Navigation buttons
<up>, <down>, <left>,
<right>, and <OK>. | 17. <#> button switching
sound profiles |
| 14. Phone keypad | 18. Rear speaker (buzzer) |
| 15. <*> button | 19. MicroUSB socket
(under a rubber plug) |

2. Introduction

Turning the phone on and off

 **Attention:** *Do not switch on the phone in places where it is prohibited to use cell phones, or when it may cause interference or danger.*

To turn the phone on or off press and hold the <red handset> button. If directly after turning the phone on you will see the code request, (in form of “****”) enter the code and press <OK>.

 
Installation of the SIM card, memory card and battery

If the phone is on – turn it off. Take off the back lid of the cover – unscrew the screws fixing the lid by using a flat screwdriver or the tool attached.

Insert the SIM card with its gold contacts facing down, the way in which the slot is embossed. Insert the memory card with its gold contacts facing down, the way in which the slot is embossed.

(see the adjacent illustration). The maximum memory card supported capacity is **32 GB**. Insert the battery - the battery should be placed in such a way that the gold contacts touch the connector placed to the left from micro SD card (see the illustration above). Replace the battery cover: put it back in place - pay attention to rubber gasket – and tighten the screws.

MicroSD memory card slot

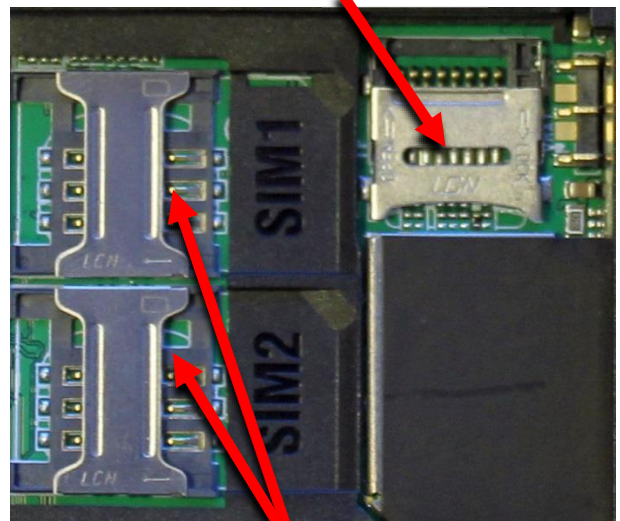

SIM card slots

Charging the battery

To expose the telephone connectors on the side, pry the rubber plug on the phone with your nail. Plug in the microUSB cable to microUSB connector in the phone then connect USB connector to the adapter and to a low voltage grid.

 ***Attention:** *Improper connection of the charger can cause serious damage to the phone. Damages caused by an improper use of the phone are not covered by the warranty.*

While charging, a static icon of battery state located in upper right corner of the screen will become animated. When charging is complete unplug the charger from the power outlet. Unplug the cable from the socket on the phone.

Battery discharge indicator

When the battery gets discharged, a message of the need to charge it will be displayed. Battery icon will be "empty". If the charge level is too low, the phone will turn off automatically. To use the phone one has to charge the battery.

3. Using the basic functions

Keypad lock

The keypad locks itself automatically after the time set by the user. It can also be locked manually. To do that one has to push and hold the <*> button. To unlock the keyboard (when the display is blanked) one should press any key to activate the screen then press <unlock> button (located at the bottom left corner of the display), followed by the <*> button on the keyboard. The keypad is unlocked.

Phone menu access

To gain access to the phone menu one should press **<OK>** button. By pressing navigation buttons **<up>**, **<down>**, **<left>** or **<right>**, move to the wanted menu icon. Press **<OK>** button to confirm your choice (and enter the menu item) or **<Back>** to return to previous menu/desktop.

Customize your phone

HAMMER 3 phone can be customized to your needs. This makes its use more enjoyable and easier.

Turning the „silent” mode on and off

To turn off sounds use **<#>** button. Press it and hold for about 3 seconds, until „XXXXX mode activated” announcement is displayed, Where XXXXX is either: General, Silent or Meeting.

Sounds and user profiles

To set ringtones and volume use **[Profiles]** option. To launch it press **<OK>** and enter the phone menu. Subsequently, with use of navigation buttons choose **[Profiles]** option and press **<OK>**. Select the chosen sound profile and enter **[Options]** → **[Activate]** → **[Select]**, to activate the chosen profile or **[Options]** → **[Customize]** → **[Select]**, to edit the profile according to your own preferences. Available sound profile options:

- **[Alert type]** – enter **[Options]** → **[Change]** → **<Select>** and select the chosen alert type.

- **[Ring type]** – enter **[Options]** → **[Change]** → **<OK>** and select the chosen ringtone type.
- **[SIM 1 Ringtone]** or **[SIM 2 Ringtone]** – option allows you to change incoming call ringtone melody for SIM 1 or SIM 2 – enter **[Options]** → **[Change]** → **<Select>**, choose the melody and confirm with **<OK>** button.
- **[Ringtone volume]** - enter **[Options]** → **[Change]** → **<Select>** and adjust the volume with **<+>** and **<->** buttons, located at the left side of the phone cover, and confirm with **<OK>** button.
- **[SIM 1 message]** or **[SIM 2 message]** – change the ringtone for messages incoming to SIM1 or SIM2 - enter **[Options]** → **[Change]** → **<Select>** and select the chosen ringtone.
- **[Message volume]** - enter **[Options]** → **[Change]** → **<Select>** and adjust the volume with **<+>** and **<->** buttons, located at the left side of the phone cover, and confirm with **<OK>** button.
- **[Keypad]** - enter **[Options]** → **[Change]** → **<Select>** and choose with **<right>** or **<left>** buttons mode of the keyboard sound (Silent, Click, Tone) and confirm with **<OK>** button.
- **[Keytone volume]** – adjust the volume with **<+>** and **<->** buttons, located at the left side of the phone cover, and confirm with **<OK>** button.
- **[Power on]** - option allows you to set a ringtone for turning on the phone.

- **[Power off]** - option allows you to set a ringtone for turning off the phone.
- **[System alert]** - options allows you to turn on or off system sounds of the phone.

Call handling functions

Calling

Enter the number to the main screen using the numeric keypad.

 *We recommend that you enter the area code prior to the telephone number.*

Press **<green handset>**, to start the call.

Press **<red handset>**, to finish the call

Answering

Press **<green handset>** or **[answer]** to answer an incoming call.

Press **<red handset>** to reject / finish the call.

Text messages

Sending a message

Enter: **[Menu] → [Messages] → [Write message]**. Type in the message using the keyboard. Sings are typed in letter by letter. **<#>** button is used to change the input method. The following are possible:

- **Abc** – The first letter capital, the rest lower case.
- **abc** – Only lower case letters,
- **ABC** – Only uppercase letters

- **Numeric** – Only digits.

To enter a special character i.e. period, comma, dash, etc., press <*> and choose from the list, or press the <1> a number of times (in a mode other than "Numeric"). To enter a space between the words press <0>button. To enter the letter "b" press <2> button twice. To enter the letter "d" one should press <3> button once etc. When typing the message content is done one should press [Options] button and choose an option [Send to]. A selection list will appear:

- [Enter number] – Enter the number using the numeric keypad and press <OK>.
- [Add from Contacts] – after choosing that option all you need to do is enter a few first letters of the contact to find it in the contact list.

Select <OK> or <Add>, to confirm the choice. After *entering the number/choosing a contact* enter: [Options] → [Send], to send the message.

Messages display

Enter: [Menu] → [Messages] → [Inbox], choose a message from the list and select [Options] → [View] → <Select>, to see the message itself.

Contacts

Adding a new contact

To add a contact enter the main phone screen and press [Names] button in the bottom right corner of the display, and then choose [Add new contact] by pressing

<OK> button and choose the storage [**to SIM1**], [**to SIM2**] or [**to Phone**] confirm by **<OK>** button. Insert contact data by selecting the name or number with the cursor and pressing **<Edit>**. After inserting the number/the name press **<OK>**. Choose [**Options**] → [**Save**], to save new contact. If you choose [**to Phone**] you can sign in an additional number to the contact. To move a chosen contact between a SIM card and a phone memory enter: [**Menu**] → [**Contacts**] → [**Options**] → [**Copy**] and [**To SIM1**], [**To SIM2**] or [**to phone**] and confirm by **<Select>**.

Search for a contact

To search contacts choose: [**Menu**] → [**Contacts**]. Enter the first letter of the contact. A full list of contacts starting with given letter will appear on screen. To narrow the search enter consecutive letters. To search for another contact use navigation buttons **<up>** or **<down>**.

After searching the contact and choosing [**Options**] a list of operations will appear:

- [**View**] – to see the details of the contact (name and number)
- [**Send text message**] – to send text messages
- [**Call**] – to call a number from contact.
- [**Edit**] – to edit the contact.
- [**Delete**] – to delete the contact.
- [**Copy**] – to copy a contact inbetween the phone, SIM cards or to file.

- **[Add to blacklist]** – to add to phone blacklist
- **[Mark several]** – to send an SMS to several contacts or delete some of them.
- **[Phone book settings]** – to enter additional options menu like: speed dialling, fixed numbers, memory status

4. Advanced phone features

Calling a contact from the phone book

To connect with a phone number saved in a submenu **[Contacts]** search and mark a proper contact (by inserting the name of the contact using keyboard), then execute the call by pressing the **<green handset>** on the phone keyboard.

Missed calls

Missed calls are displayed on the screen of the phone. An appropriate message and an icon on the top of the screen will inform you about a missed call. Additionally, if the screen is off, the keyboard backlight will flash from time to time, to remind about a missed call. To check who called, press **[View]**. Another solution is to enter **[Menu] → [Calls] → [Call history] → [Missed calls] → <OK>**. To call the person whose call you missed choose it from the list and press the **<green handset>** on the phone keyboard.

Speakerphone

During a call press **[Speaker]**, to activate speakerphone mode.

Speed dial

Choose option **[Contacts]** → **[Options]** → **[phone book settings]** → **[Speed dial]**. A list of options will appear: **[Status]**, to check the state of service **[Set numbers]**, to program speed dialling numbers. Choose option **[Status]**, and press **<OK>** and set **[Status]** to: **[On]**. Choose option **[Set numbers]**. On the left side of the screen there are digits which correspond with keyboard buttons. Using edit options: **[Edit]** → choose an entry from the contact list which can be assigned to one of the numeric buttons (2 to 9). When you set the numbers press **<red handset>**, to return to the main phone screen. To establish connection by speed dialling function press and hold for about 2 seconds the programmed button of phone numerical keyboard.

Dual SIM

Dual SIM function enables using 2 SIM cards simultaneously. To use that function one should mount two SIM cards in the phone (SIM slots are placed beneath the phone battery). Subsequently enter **[Menu]** → **[Settings]** → **[Dual SIM settings]**. You have the following options to choose from:

- **[Dual SIM open]** - to use both SIM cards simultaneously
- **[Only SIM 1 open]** - To use SIM 1 only

- **[Only SIM 2 open]** – To use SIM 2 only
- **[Flight mode]** – To turn off all wireless connections.

If the Dual SIM option has been chosen the phone, each time a call is made or a message sent, will ask the user which SIM card to use.

Connecting your phone to the computer

MyPhone Hammer 3 can be plugged to the PC computer using USB cable. This allows you to view and exchange data between your computer and your phone, when a microSD card is installed. To do this, you must:

- 1) Connect the microUSB connector to USB port in your phone (placed at the bottom of the phone), then connect the USB connector to a USB port on your computer.
- 2) An information about USB connection should be displayed on your phone screen.
- 3) Choose **[Mass storage]** from the displayed list.
- 4) The phone is now connected to the computer. The contents of the phone memory can be viewed using Windows Explorer.

International calls

Starting from the main screen press twice <*> until “+” will appear. Enter the full phone number of the recipient

(the country code and the telephone number), and then press **<green handset>** to make a call.

5. Other phone features

Time and date settings

To set time and date enter: **[Menu] → [Settings] → [Phone settings] → [Time and date]**. Select **[Set time/date]** confirm with **<OK>** button and type in the current time using the keyboard. Press **<down>** button to type in the current date, confirm with **<OK>** button or by choosing **[Save]**. Enter **[Menu] → [Settings] → [Phone settings] → [Time and date] → [Set format]** to choose a handy format of time and date display.

Menu language settings

To set or change the language of menu enter: **[Menu] → [Settings] → [Phone settings] → [Language]** and select your preferred language from the list.

Display settings

Enter: **[Menu] → [Settings] → [Phone settings] → [Display]**:

- **[Wallpapers] → [System]** if you want to choose from system wallpapers or **→ [User defined]** if you want to add your own wallpaper from microSD memory card and choose a picture from the list. To see a preview of given picture select **[OK]**. To set

the chosen picture as a wallpaper press: **[OK]** → **[OK]**.

- **[Screen saver]** – enables to choose screen saver, turn it on and off.
- **[Show date and time]** – switch on/off display of the date and time on the main screen of the phone.
- **[Show operator name]** – switch on/off display of the operator name on the main screen of the phone.
- **[LCD backlight]** – You can select a level of LCD backlight as well as the time after which the screen will turn black.

Call settings

Enter **[Menu]** → **[Call]** → **[Call settings]** → **[Advanced settings]**. There are available call settings like black list, auto redial, call time reminder, possibility to reject a call by SMS, connect notice and answer mode.

Configuration of the alarm / alarms

From main menu enter **[Organizer]**. Enter **[Alarm]**, and confirm your choice by pressing **<OK>** button.

Choose any alarm and press **[Edit]** button. You can turn the alarm on or off, moving downwards, pressing **<down>** you can set the alarm time using the phone numerical keyboard. Another option is to set in which days the alarm should be active- **[Repeat]** -available options are: Once, Every day, Custom. Beneath an option **[Alarm tone]** is situated where you can define

alarm ringtone and **[Alarm type]**, where you can choose between a ringtone, vibration and the two conjoined. To confirm alarm settings press **[Save]**.

Use of calculator

Enter **[Menu]** → **[Organizer]** → **[Calculator]** and press **<OK>**. Basic arithmetic operations can be performed using the numeric keypad (typing numbers, digits). Actions can be set using navigation keys **<Up>** - addition, **<Down>** - subtraction, **<Left>** - multiplication and **<Right>** - division. To see the result press **[OK]**.

Factory settings

To get back to factory settings enter **[Menu]** → **[Settings]** → **[Restore factory settings]**, input the phone password and confirm by pressing **<OK>**. Password required to restore the factory settings is: 1122.

Torch

The torch can be switched on by pressing (**torch**) button on the keypad of the phone. Press the same button again to switch it off.

The torch can be switched on also by entering **[Menu]** → **[Organizer]** → **[Torch]** and then by choosing **[On]** or **[Off]**.

 **Attention:** *The light emitted by the LED has a strong focus therefore it is unadvisable to look directly into the*

light. Not following this instruction may cause damage to your eyesight.

Call log

There is a **[Call history]** option available on the phone. It is placed at **[Menu] → [Calls] → [Call history]**. Through the call history you can check the call log like missed, received calls etc. The following positions are placed in submenu:

- Missed calls
- Dialed calls.
- Received calls.
- All calls.
- Delete call history.

To enter one of the listed options one has to select it from the list and press **<OK>**.

Audio player

Audio player is located in: **[Menu] → [Audio player]**. This application allows you to play music files in AAC, MP3, AMR, WAV formats. To play a music file it has to be saved on the microSD memory card folder named "My music". All music files placed there will be automatically added to audio player playlist.

 **Attention:** *Listening to the audio player too long or too loud can cause hearing damage.*

To enjoy the audio player use the following buttons:

Button	Function
+	Louder
-	Quieter
<Right>	Next song
<Left>	Previous song

<OK>	Play/Pause
<Up>	Play/Pause
<Down>	Stop
<*>	Loop
<#>	Order

When the audio player is on, in the bottom left corner an option **[List]** is available. Use it to show all available tracks.

More audio player options can be found in **[List]** → **[Options]** → **[Settings]** . Available options:

- **[List auto gen.]** – choose the source – memory card or the phone memory
- **[Repeat]** – Repeat tracks.
- **[Shuffle]** – shuffling of track on/off.
- **[Background play]** – playing songs in the background.

FM Radio

⚠ Attention: *Listening to FM radio requires plugging in headphones with minijack 3,5 mm connector. Headphones are used as an external antenna.*

Enter **[Menu]** → **[FM Radio]**. Choose **[Options]** → **[Auto search]** → **<OK>**, and confirm your choice to search for radio stations. All found radio stations will

be saved and available at **[Options]** → **[Channel list]**.

Radio control is done using the following buttons:

Przycisk	Funkcja
+ or <#>	Louder
- or <*>	Quieter
<down>	0.1 MHz up.
<up>	0.1 MHz down.
<OK>	To turn the radio on/off.
<right>	To search for the next channel
<left>	To search for the previous channel

Calendar

MyPhone HAMMER 3 is equipped with calendar option. It allows you to preview the current or any date. To enter the calendar, select **[Menu]** → **[Organizer]** → **[Calendar]**.

Bluetooth

MyPhone Hammer 3 is equipped with Bluetooth. It is used to exchange files with other devices equipped with Bluetooth. To use Bluetooth enter: **[Menu]** → **[Settings]** → **[Connectivity]** → **[Bluetooth]**. The following options are available:

- **[Power]** – by pressing **<OK>** the Bluetooth signal is switched on. It is signalled with a Bluetooth icon displayed on the upper status bar on the phone main screen.

- **[Visibility]** – Enabling this feature allows the visibility of your phone on the list of available devices other phones, tablets and computers equipped with Bluetooth.
- **[My device]** – an option **[Search new device]** is situated here. A list of available Bluetooth devices can be shown through that option. Function enables connecting to the devices which appear on the list.
- **[My name]** – the name visible to other bluetooth devices can be typed in here. Default name is **Hammer_3**.
- **[My address]** – MAC address of the phone can be found here.

Pairing Bluetooth devices

To connect to a Bluetooth device choose it from a list of available devices by entering **[Menu]** → **[Settings]** → **[Connectivity]** → **[Bluetooth]** → **[My device]** → **[Search New Device]**, and then select a device from the list and press **[Pair]**. Both devices will display a request for password compliance. Press **[OK]** to pair devices.

Sending files via Bluetooth.

To send files situated on the memory card to a paired (connected) device enter: **[Menu]** → **[File manager]** → **[Memory card]** → and choose a file you want to send. Then choose **[Options]** → **[Send]** → **[via Bluetooth]** and search the device you wish to send

the file to or add it from the list of paired devices. The file will be send after recipient' approval.

Camcorder

HAMMER 3 is equipped with a camera with the possibility of taking pictures and recording videos.

Taking pictures

 
To take a picture one has to open the camcorder application by entering: **[Menu] → [Camcorder]**. When you start the camera, place the subject you wish to photograph in the frame, and then press **<OK>** to take a photo that will be saved automatically in the phone memory or a microSD card in the "Photos" file. You can view the pictures you have taken and all other by entering **[Menu] → [Multimedia] → [Image viewer]**.

 
Recording videos.

To record a video one has to enter **[Menu] → [Camcorder] → [Options] → [Switch to video recorder]**. Then place the subject you wish to record in the frame, and then press **<OK>** to start the recording. Videos are saved default in a "Videos" file on the microSD memory card. To watch recorded videos enter: **[Menu] → [Multimedia] → [Video player]**.

Phone icons



	"General" mode on
	"Silent" mode on
	"Meeting" mode on
	Missed call
	microSD memory card

	Battery charge level
	Unread SMS or MMS message
	Headset plugged
	Computer connection

Troubleshooting

Message	Possible solution
Insert SIM	Make sure SIM card has been correctly installed.
Input PIN	If the SIM card is secured with the PIN code you have to enter the PIN when turning the phone on and press <OK> .
Network error	In areas where signal or reception is weak, calls may not be possible. Also receiving calls may not be possible. Move to another location and try again.

No one can call me:

- The phone has to be on.

I cannot hear the caller. /The caller cannot hear me.

- The mic. should be close to mouth
- Check if the built-in mic is not covered.

- When a headset is in use, check if it has been connected correctly.
- Check if the built in speaker isn't covered.

Poor sound quality while on the phone:

- Make sure that the speaker and microphone are not covered.

The connection cannot be established

- Check if the typed in phone number is correct.
- Check if the phone number entered to the [Phonebook] is correct.
- If necessary enter the correct phone number.

6. Proper phone maintenance

Proper use of the battery

Battery in this device can be powered by a charger. If the battery level is low, recharge it. To prolong battery life, let it discharge before connecting the charger. If not used, unplug the charger from the phone. Excessive charging causes shortened battery life. The temperature of the battery has an impact on its charging cycle. Prior to the charging process, cool the battery or raise its temperature so that it is similar to the room temperature (approx. 20 °C).

If the battery temperature exceeds 40°C the battery **must not** be charged! Use the battery only according to its intended purpose. Avoid leaving the

battery within a magnetic field range, because it shortens its life. Do not use damaged battery. The battery lifespan can be shortened, if it has been exposed to very low or very high temperatures - this causes interference to the phone, even when the battery has been properly charged.

Do not throw the battery into flames! Do not throw a worn-out battery – send it or return it to an authorized recycling point!

Device maintenance

To prolong life of the device obey the following rules:

Keep the phone and its accessories out of reach of children.

Avoid exposing the phone to high and low temperatures; it can shorten life of phone electronic components, melt the plastic parts and destroy the battery.

Do not try to disassemble the phone. Tampering with its structure in an unprofessional manner may cause serious damage to the phone or destroy it completely.

For cleaning use only a dry cloth. Never use any agent with a high concentration of acids or alkalis .

Use only original accessories; violation of this rule may result in invalidation of the warranty.

Exposing the phone to extreme temperatures can reduce the level of protection. It is recommended that the phone is not used at temperatures below 0 ° C / 32 ° F or higher than 40 ° C / 104 ° F.



The packaging of the device can be recycled in accordance with local regulations.

Safety information

While using the phone, take into account the legal regulations concerning safety and the safety of its surroundings.

Road safety

Apart from emergency situations, using the phone while driving should be carried out only with use of a headset or a speakerphone, which ensures safety and does not limit motor abilities of the user. If one does not own a headset and still wants to use the phone, one should pull over and stop the car. Pay attention to the legal regulations concerning the use

of mobile phone while driving. Some electronic components of the car can be affected by waves emitted by the phone without adequate protection; it is therefore advisable to use the phone in the car only when the external antenna of the vehicle is secured. Use the services of a professional when installing the phone in the car.

Surroundings security

Familiarise yourself with legal regulations concerning the use of mobile phones. Turn off the phone in areas where its use is forbidden or when it may cause interference or danger. Use of any devices that transmit radio waves causes interferences with medical devices (i.e. cardiac pacemaker), if they are not properly secured (if in doubt, consult your doctor or medical device manufacturer).

 **Attention:** *In places where there is a risk of explosion (i.e. Petrol stations, chemical factories etc.), it is advisable to turn off the phone. Please refer to regulations governing the use of GSM equipment in these places.*

Technological criteria

Network: GSM 2G 850/900/1800/1900 MHz

Some services may depend on your provider, the state of your local cellular network, version of the SIM card used and the way you use your phone. For more information, please contact your service provider.

Attention	Statement
The manufacturer is not responsible for any consequences caused by improper usage of the phone and not obeying the above instructions.	The software version can be upgraded without earlier notice. The representative retains the right to determine the correct interpretation of the above instructions.

Information on certificates (SAR)

Your mobile phone is a transmitter and receiver of radio waves. It is designed and manufactured according to current safety standards, so that exposure to radio waves never exceeds the limits set by the Council of European Union. Those limits establish the permitted levels of RF energy for the general population and were developed by independent scientific organizations on the basis of detailed scientific studies, including a large safety margin. Their purpose is to ensure the safety of all people, regardless of age and health. With regard to

cell phones the level of exposure to radio waves is measured by the value (**Specific Absorption Rate**). The SAR limit recommended by the Council of the European Union is 2 W / kg and refers to the averaged value for 10 grams of tissue.

The highest SAR value for the phone Hammer 3 equals **1,725 W/kg**.

Correct disposal of electrical and electronic equipment



The device is marked with a crossed-out garbage bin, in accordance with the  European Directive 2012/19 / EU on used electrical and electronic Equipment (Waste Electrical and Electronic equipment - WEEE). Products marked with this symbol should not be disposed of or dumped with other household waste after a period of use. The user is obliged to get rid of used electrical and electronic equipment by delivering it to a designated recycling point in which dangerous waste are being recycled. Collecting this type of waste in designated locations, and the actual process of their recovery contribute to the protection of natural resources. Proper disposal of used electrical and electronic equipment is beneficial to human health and environment. To obtain information on where and how to dispose of used electrical and electronic equipment in an

environmentally friendly manner user should contact their local government office, the waste collection point, or point of sale where the equipment was purchased.

Correct disposal of used batteries



According to the EU directive 2006/66 / EC on the disposal of batteries, this product is marked with crossed-out garbage bin symbol. The symbol indicates that the batteries used in this product should not be disposed with normal household waste, but treated according to the legal directives and local regulations.

It is not allowed to dispose of batteries and accumulators with unsorted municipal waste. Users of batteries and accumulators must use the available collection points of these items, which allows them to return and recycle.

Within the EU, the collection and recycling of batteries and accumulators is a subject to separate procedures. To learn more about existing procedures of recycling of batteries and accumulators please contact your local office or an institution for waste disposal or landfill.

Declaration of conformity with European Union

Directives

CE 0700

MyPhone Ltd.

ensures and declares that the product complies with all relevant provisions of the European Directive 1999/5/EC.

DEKLARACJA ZGODNOŚCI UE Nr 02/04/2017
EU DECLARATION OF CONFORMITY No 02/04/2017

My/We, myPhone Sp. z o. o.
(nazwa importera / importer's name)

ul. Nowogrodzka 31, 00-511 Warszawa
(adres importera / importer's address)

niniejszym deklarujemy, że następujący wyrób:
declare under our responsibility, that the electrical product:

Telefon komórkowy/GSM Mobile phone
(nazwa wyrobu / name)

HAMMER3
(typ wyrobu / type of model)

 
jest zgodny z postanowieniami następujących dyrektyw:
following the provisions following directives:

Dyrektywa 1999/5/EU
Directive 1999/5/EU

spełnia wymagania następujących norm:
complies with the following standards:

EN 60950-1:2006+A11:2009+A1:2010+A12:2011+A2:2013
EN 50566:2013/AC:2014
EN 62311:2008
EN 50360:2001+A1:2012
EN 62209-1:2006
EN 62209-2:2010
EN 62479:2010
EN 301 489-1 V1.9.2:2011
EN 301 489-7 V1.3.1:2005
EN 301 489-17 V2.2.1:2012
EN 301 511 V12.1.1:2015
EN 300 328 V1.9.1:2015

Prezes Zarządu


Sebastian Sawicki

19-04-2016 Warszawa
(data i miejscowość / date, place)

(podpis sygnatariusza)
(signature, of the signatory)