

INSTRUKCJA OBSŁUGIUser manual **myPhone POCKET PRO**



We create for you.

Thank you for choosing myPhone device. This product has been designed especially for you. We are doing everything to make its use pleasurable and comfortable. We made sure that elegance, functionality and convenience of use were combined with an affordable price. For the sake of your safety, please read this manual carefully.

 
Manufacturer
mPTech Ltd.
Nowogrodzka 31 street
00-511 Warsaw
Poland
www.myphone-mobile.com
Manufactured in China

User manual

The actual product, accompanying accessories and some of its features may differ from the presented in this manual images and descriptions. The latest manual or its more detailed version is available on the product website:

www.myphone.pl/qr/myphone-pocket-pro

To open this page, simply scan this QR Code.

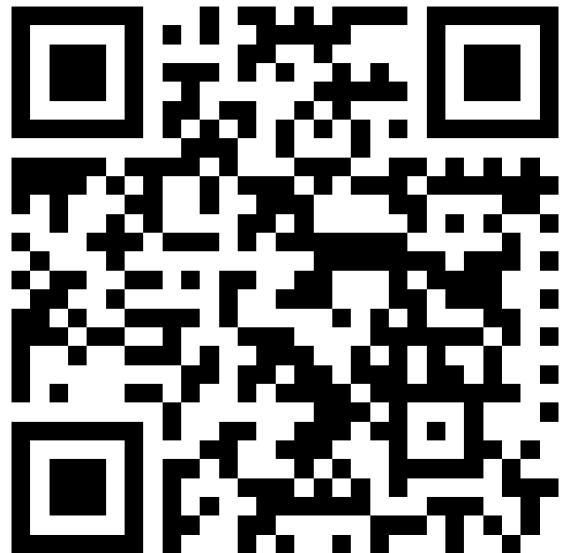

1. Table of contents

1. Table of contents	2
2. Safety	5
3. The use of the manual	6
4. Important information	7
5. Technical Specification	7
5.1 Technical data	8
5.2 Package content	9
6. Appearance of the phone	10
7. Before the first start	12
7.1 Installation of the SIM card (s) and/or microSD memory card	12
7.2 Charging the battery	12
8. Buttons	13
9. Using the touch screen	14

9.1. Touch.....	14
9.2 Swipe	14
9.3 Triple click	14
9.4 Hold and swipe.....	14
9.5 Slide in and out.....	14
9.6 Screen lock	15
9.7 Device desktop screen	16
9.8 Indicators icons	17
9.9 Removing elements from desktop screen.....	17
9.10 Creating folders	18
10. Computer connection	18
11. Text input	19
11.1 Text input - the virtual keyboard.....	19
11.2 Copy and paste the text.....	20
12. Applications	20
12.1 Application download	21
12.2 Launching and disabling applications.	21
12.3 Uninstall applications	21
12.4 Managing applications	22
13. Settings	22
13.1 Network and internet.....	22
Wi-Fi.....	22
Mobile network.....	22
Data Usage.....	22
Hotspot and tethering	22
SIM cards.....	23
Aeroplane mode.....	23
VPN.....	23
Private DNS	23
13.2 Connected devices.....	23
13.3 Applications and notifications.....	23
13.4 Battery	23
13.5 Display	23
13.6 Navigation bar.....	24
13.7 Profiles.....	24
13.8 Internal memory	24
13.9 Security and location	24
13.10 Accounts	24
13.11 Accessibility	24
13.12 Google	25
13.13 System.....	26

14. Phonebook	26
14.1. Adding contacts	26
14.2 Editing contacts	26
14.3 Deleting contacts	27
14.4 Contacts import/export.....	27
15. Communication	27
15.1 Making calls	27
15.2 SMS - Messages.....	28
Generating message	28
16. Multimedia	30
16.1 Camera.....	30
16.2 Photos.....	31
16.3 FM Radio	32
17. Bluetooth.....	33
17.1 Sending files	33
17.2 Receiving files	33
17.3 Connection a bluetooth headset	33
18. Internet	34
18.1 Wi-Fi.....	34
18.2 Connecting with 3G/LTE (4G) network	34
19. Adding APN access points.....	35
20. Location	36
21. Smartphone software update by OTA.....	36
22. Safety remarks.....	37
22.1 Troubleshooting	37
22.2 Protection of memory card data.....	38
22.3 Protection of personal data and important information	38
22.4 Correct battery use remarks.	39
23. Maintenance of the device	39
24. Surroundings security	39
25. The use of the manual	40
25.1 Consents.....	40
25.2 Appearance.....	40
25.3 Trademarks.....	40
26. Correct disposal of used equipment.....	40
27. Correct disposal of used battery	41
28. Specific absorption rate (SAR)	41
29. Declaration of conformity with European Union Directives	41

2. Safety

Read these guidelines carefully. Not following them may be dangerous or illegal.

–DO NOT RISK–

All wireless devices may cause interferences, which could affect the quality of other connections. *Do not switch the device on in places which are prohibited from using cell phones, or when it may cause interferences or other dangers.* Always abide by any kinds of prohibitions, regulations and warnings conveyed by the staff.

–PETROL STATIONS–

Do not use your mobile phone while refuelling at a petrol station or in the vicinity of chemicals.

CAUTION! *In places where there is a risk of explosion (i.e. Petrol stations, chemical factories etc.), it is advisable to turn off the phone. Please refer to regulations governing the use of GSM equipment in these places.*

–ALARM CALLS–

Making alarm calls may not be possible in some areas or circumstances. It is recommended to find an alternative way to notify emergency services if you are going to this type of remote areas.

–QUALIFIED SERVICE–

Only qualified personnel or an authorized service center may install or repair this product. Repairing the device by an unqualified or unauthorized service technician may result in damage to the device and void the warranty.

–CHILDREN AND PHYSICALLY OR MENTALLY DISABLED PEOPLE–

This device should not be operated by people (including children) with limited physical or mental abilities, as well as by people with no earlier experience in operation of electronic equipment. They may use the device only under supervision of people responsible for their safety. This device is not a toy. Memory card and SIM card are small enough to be swallowed by a child and cause choking. Keep the device and its accessories out of reach of children.

–WI-FI (WLAN)–

In the European Union Member States, a WLAN network may be used indoors without any restrictions.

–WATER AND OTHER LIQUIDS–

Protect the device from water and other liquids. It can influence work and the life span of electronic components. Avoid using the device in environments with high humidity like kitchens, bathrooms or during rainy weather. Particles of water can cause the liquefaction of moisture in the device, and this may have a negative impact on the work of electronic components.

–ROAD SAFETY–

Apart from emergency situations, using the phone while driving should be carried out only with use of a headset or a speakerphone, which ensures safety and does not limit motor abilities of the user. If one does not own a headset and

still wants to use the phone, one should pull over and stop the car. Pay attention to the legal regulations concerning the use of mobile phone while driving. Some electronic components of the car without adequate protection can be affected by waves emitted by the phone; it is therefore advisable to use the phone in the car only when the external antenna of the vehicle is secured. Use the services of a professional when installing the phone in the car.

—BATTERY AND ACCESSORIES—

Avoid exposing the battery to very high/low temperatures (below 0°C/32°F and over 40°C/104°F). Extreme temperatures may influence capacity and battery life. Avoid contact with liquids and metal objects as it may cause partial or complete battery damage. The battery should be used according to its purpose. Do not destroy, impair or throw the battery into flames - it might be dangerous and may cause fire. Worn-out or impaired battery should be placed in a dedicated container. Excessive charging the battery can cause damage. Therefore, a single battery charge should not last longer than 1 day. Installing an incorrect battery type can cause an explosion. Never open the battery. Please dispose of battery according to the instructions. Disconnect an unused charger from power grid. In case of the charger wire damage, it should not be repaired but replaced with a new one. Use the original manufacturer's accessories only.

—SOUNDS—



To avoid hearing damage, do not use the device at high volume levels for a long period of time, do not put operating device directly to the ear.

—EYESIGHT—



To avoid eyesight damage do not look closely onto the flash light during its work. A strong beam of light may cause permanent eye damage!

3. The use of the manual

The device and screen shots contained in this manual may differ from the actual product. Accessories attached to the smartphone set may differ from the illustrations included in manual. Options described in the manual are found in Android system. Those descriptions may differ, depending on the version of the operating system and applications installed on the device.

Without prior written consent of the manufacturer, no part of this manual may be photocopied, reproduced, translated or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording or storing in any systems of storing and sharing information.

4. Important information

The majority of applications which can be installed on the device are mobile apps. Modus operandi of such applications may be different from their counterparts installed on a personal computer. Apps installed on the device may vary depending on country, region, and hardware specifications. The manufacturer is not liable for problems caused by third party software. The manufacturer is not responsible for anomalies that may occur when editing the registry settings and modifying the operating system software. Attempts to modify the operating system can cause malfunctions and problems with applications. It may cause a loss of warranty.

5. Technical Specification



Touchscreen 5.7" and 720x1520 px resolution

The modern display provides deep colors and a wide viewing angle, allowing you to appreciate movies, photos and games in real and juicy colors.



Dual SIM

The technology applied in the smartphone enables incredibly comfortable use of Dual SIM function - using 2 SIM cards simultaneously.



Octa Core Processor

Super efficient octa-core processor for high efficiency of the phone. Demanding games, websites, emails - multitasking makes everything runs smoothly.



Wi-Fi

Smartphone myPhone POCKET PROis equipped with Wi-Fi technology, providing data transmission at speeds compatible with 802.11 a/b/g/n, so you can wirelessly connect to the the omnipresent hot spots and home network. Receive and send data, programs, and files to the network and other devices without restrictions.



Rear camera (main) 13 Mpx + auxiliary camera / Front (selfie) camera 5 Mpx

The front camera allows easy video calls and taking a high-quality photos (selfies). The rear camera allows taking pictures and making high resolution films wherever you are.



MicroSD card reader - up to 128 GB.

MyPhone POCKET PRO smartphone does not have problems with storage capacity. Use microSD cards and do not worry about where you save the music, movies and photos.



Android System

Android operating system - incredible opportunities are within your hand - all applications are available at any time; the latest Gmail™ email client or browser, it is only the beginning of what you can find in this device - the rest you will find in the online Google™ Play.



Google Play

All manufacturer's smartphones can use the applications purchased in Google Play. To do this you should register a individual Google™ account providing e-mail and password. After registration and acceptance of the rules you can use paid and free applications listed in the Google Play.

5.1 Technical data

Display	5.7" IPS, 720 x 1520 px
Processor (CPU / GPU)	Octa Core / Mali500 MP
Rear Camera (main)	13 Mpx with LED lamp (interpolated up to 16 Mpx) + auxiliary unit
Front Camera (selfie)	5 Mpx (interpolated up to 8 Mpx)
RAM / Internal memory	3 GB / 32 GB
The card reader	microSD (up to 128 GB)
Operating system	Android 9 Pie
Dual SIM open	nanoSIM + nanoSIM

Connectors	microUSB, minijack 3.5 mm
Connectivity	Wi-Fi 802.11 b/g/n 2.4 GHz Bluetooth 4.0, GPS with A-GPS
GSM	850/900/1800/1900 MHz
UMTS (3G)	900/2100 MHz
LTE (4G)	800/900/1800/2100/2600 MHz
Battery	Li-ion 2700 mAh built-in
Input/output parameters chargers	100-240 V~ 50/60 Hz, 0.2A
Output parameters chargers	5V == 1A
Dimensions	5.6 x 2.8 x 0.3 inch
Net weight	130g / 4.6 oz

5.2 Package content

- Smartfon myPhone POCKET PRO
- Charger (adapter + USB cable)
- Tool for opening the SIM card/microSD tray
- User manual



If any of the above items is missing or damaged, please contact your dealer.

 


 
We advise to keep the container in case of any complaints. Keep the container out of reach of children.



Dispose of container in accordance with local regulations when it is no longer needed.

6. Appearance of the phone

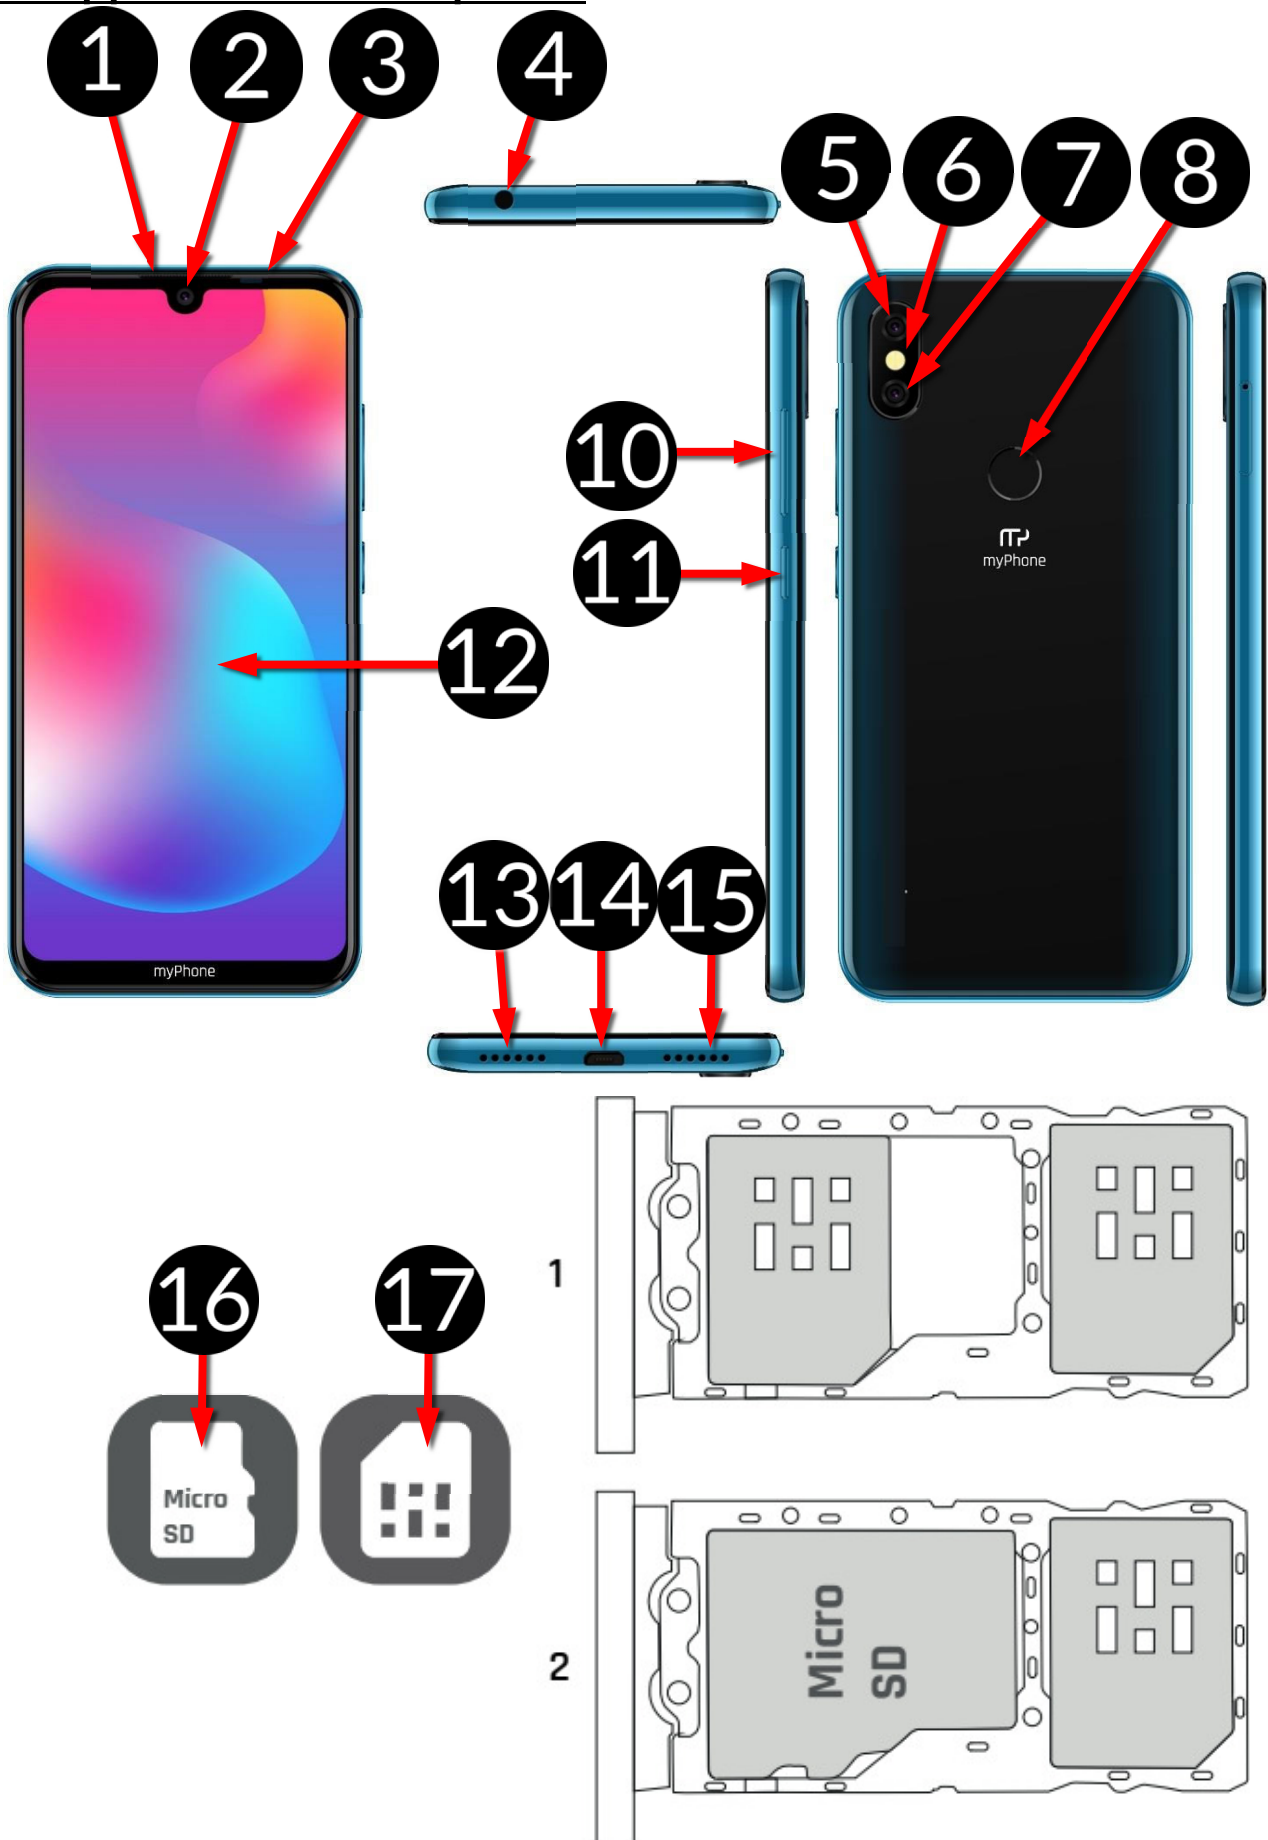


		Function
1		Internal speaker
2		5 Mpx digital camera lens - resolution interpolated up to 8 Mpx (selfie)
3		Brightness and proximity sensors
4		Headphone port minijack 3.5 mm
5		13 Mpx digital camera lens - interpolated resolution up to 16 Mpx (main)
6		Camera flash/flashlight
7		Digital camera lens (auxiliary)
8		Fingerprint reader
9		The tray for SIM cards/ microSD
10		Volume increase/decrease buttons
11		Blockade on/off button
12		Additional display 5.7"
13		Microphone
14		Multifunctional microUSB port
15		External speaker
16		microSD card
17		SIM card

7. Before the first start

7.1 Installation of the SIM card (s) and/or microSD memory card

The device is a cellular phone made in Dual SIM technology (2 SIM cards handling) allowing the use of two mobile networks simultaneously.

 To insert the SIM card(s) correctly, turn off your smartphone. Use the supplied tool to open (insert the tip energetically into the hole) and slide out the card tray. Insert the SIM card/s into the slot in accordance with the pictures placed above the slot/s and slide the tray back in.

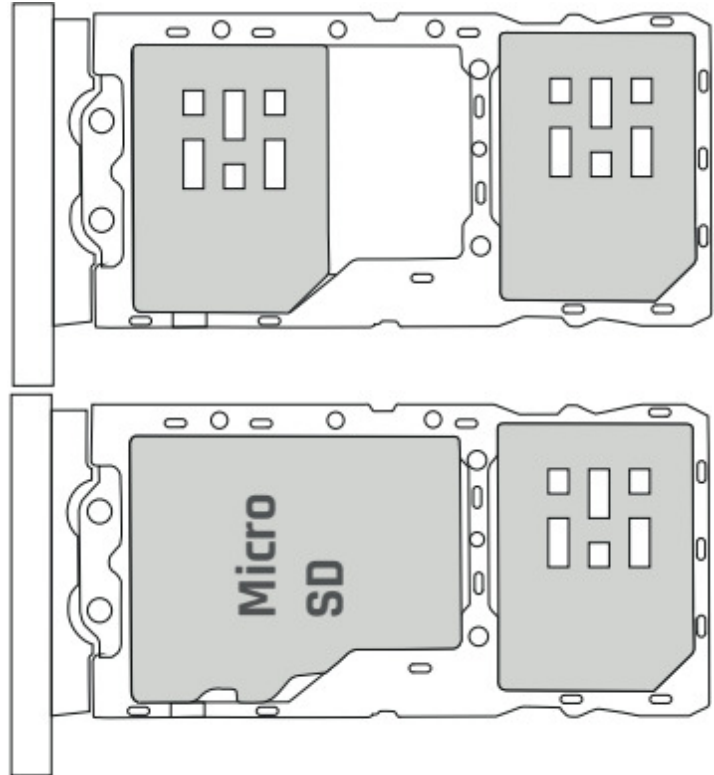

Turn off the phone to insert the memory card correctly. Using the supplied tool, open and slide out the card tray and insert the memory card into the slot as shown (instead of the SIM card). Now, gently slide the card tray back into the slot.

! Use only memory cards recommended by the manufacturer. Pay attention to the selection of the proper format-the microSD card, capacity and type/class. Incompatible memory cards may damage the device and cause the stored data to be destroyed as well. Incompatibility of memory card can be caused, among others, by an incorrect card format (required format microSD) or an unsupported card capacity - above the value recommended by the manufacturer.

7.2 Charging the battery

! Use only chargers and wires recommended by the manufacturer. Using incompatible chargers or cables can cause explosion of the battery or damage to your device.

! Incorrect charger connection (USB cable) can cause damage to the AC adapter or the device. The damages resulting from improper handling are not covered by the warranty.

! The device can heat up during charging. It is a regular occurrence and should not affect the stability or performance of the device.

! If the phone does not charge properly deliver it (with the charger) to a service center of the manufacturer.

! The battery may only be replaced by an authorised service centre.

Charge the battery before the first use.

The battery should be charged by the attached charger or another charger, intended for this type of equipment. **If in doubt, contact your dealer or the manufacturer's Authorized Service Center.**

When the battery is near a complete discharge, the notification is displayed on a low battery charge. To continue use of the device charge the battery. If the battery is completely discharged the device can not be switched on even when the loading process is ongoing.

Before the device can be turned on again, the battery has to be charged for at least a few minutes. In case of any problems with the battery or if in need of a replacement, the device should be delivered to the manufacturer's service center.

To charge the battery one should:

1. Plug the microUSB plug of the cable from the set into the socket on the device.
2. Plug the USB plug of the cable from the set into the charger and this plug into the mains socket. When charging has started, a lightning symbol will appear in the top right corner of the screen on the battery icon, and when the device is turned off, an animation showing the battery charge level should appear.
3. When the charge reaches 100% it means that the battery is fully charged. Finish the charging.
4. Disconnect the charger from the mains socket and the cables from the charger and the phone.

8. Buttons

Menu (virtual)

- Pressing it will cause the list of open apps to appear, where you can switch in-between or turn them off.

Home (virtual)

- One quick press takes you to phone desktop. A longer press launches Google Assistant.

Back (virtual)

- Press to exit the application / return to the previous screen.

Blockade on/off button

- One quick press locks/unlocks the screen.
- Pressing the button for about 2 sec. will cause:
 - If the smartphone is off - the device would switch on.
 - if the smartphone is switched on - calling up a menu that allows you to switch off the device, restart the system, take a screenshot.

Volume increase and decrease buttons

- Pressing during a voice call will cause an increase or decrease of the audio

 
connection volume.

9. Using the touch screen

The touchscreen can be controlled by the following actions:


9.1. Touch

Touch one to start options, app, menu.

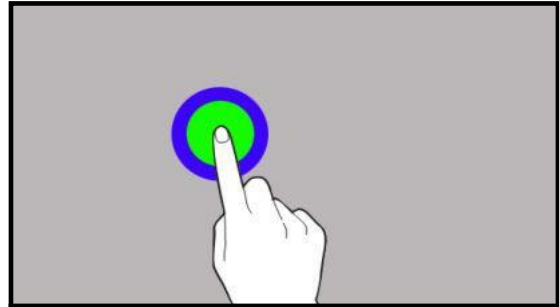


9.2 Swipe

 Quickly swipe up, down, to the left or to the right, to scroll the list or the screen.

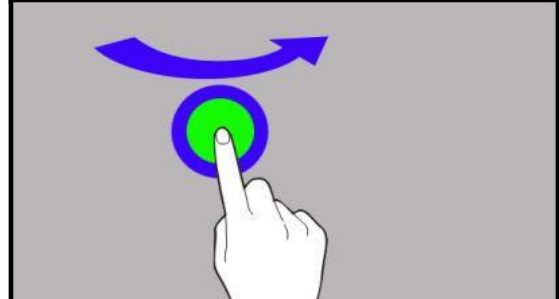


9.3 Triple click

 Quickly tap the screen three times to start zooming - if this option is enabled in your smartphone settings.

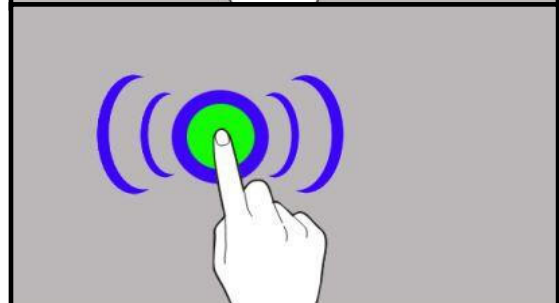


9.4 Hold and swipe

 Touch an element (an icon perhaps) and hold it for about 1 second. Then you can delete/uninstall that element.

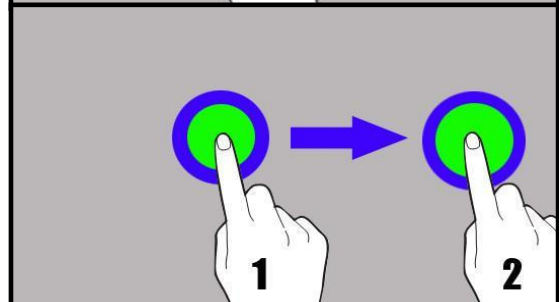

9.5 Slide in and out

 Touch the screen with two fingers and slide them together or apart to zoom in or out a photo or a map.

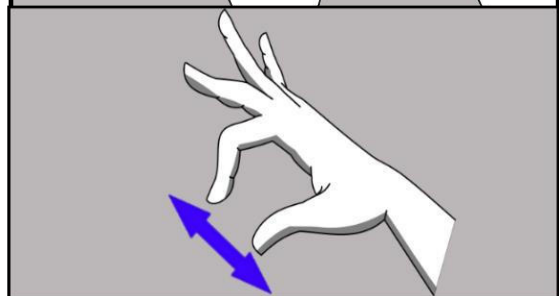

The touch screen will be turned off after some time of inactivity. To turn off the screen press the blockade button.



In most smartphones, you can set how long your device waits before turning off the screen. From the list of applications, it is usually enough to select [Menu] > [Settings] > [Display] > [Advanced] > [Sleep].

9.6 Screen lock

To lock the device press the blockade button shortly. The screen will be blanked. To unlock the screen press the lock button and a screen similar to the following will appear:

 


On the display, in lock mode the following information appear:

1. Information on SIM cards status/Network operator name.
2. A bar with status icons.
3. Current time and date.
4. An icon illustrating a locked device. To unlock the device touch the lock icon with your finger and move it upwards or put your finger on the fingerprint reader.

9.7 Device desktop screen

1. Google search tool.

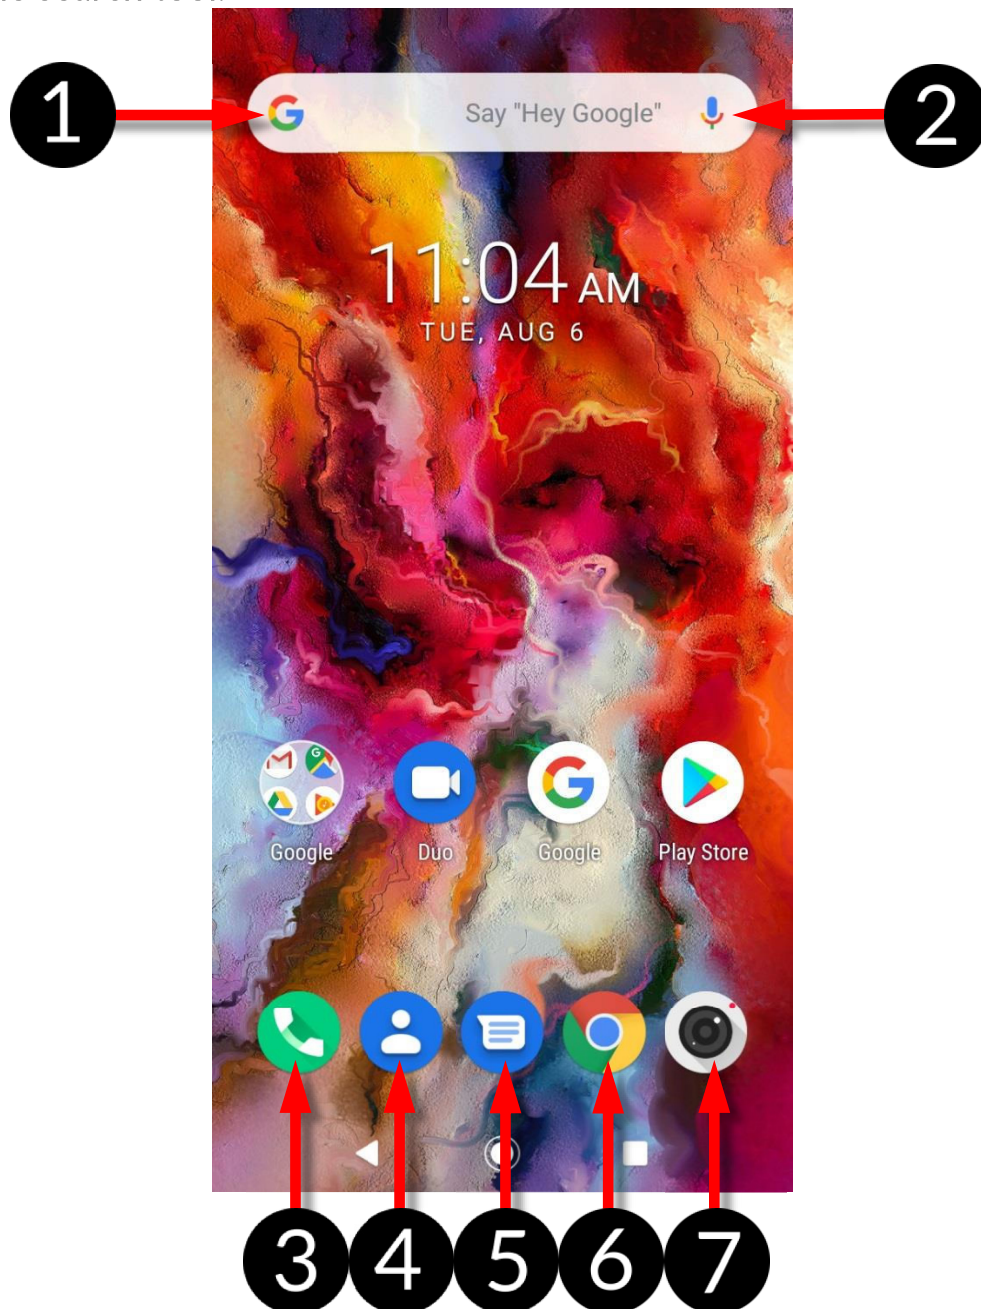

2. Voice search. After pressing this icon, say out loud what you want (i.e. the word from the web page address, etc.), and the search engine will display the found results.

! In order for the search function (also voice search) to work, you need to connect your phone to the Internet.

- 3. An app to make calls
- 4. Phonebook application.
- 5. Text messages application.
- 6. Web browser
- 7. Camera app.

Swiping downwards from the bottom edge of the screen will maximize the

display window. Notification box appears. Dragging again will bring up a tool menu where you can configure and/or preview the basic parameters, i.e:

- LCD backlight
- Wi-Fi
- Bluetooth
- Default operator data transmission / Use of data
- Torch
- Auto-rotate
- Smart saving mode
- Aeroplane mode
- Location
- Audio profile
- SIM1 and SIM2 cards
- Hotspot
- Do not disturb

When you touch the **[Settings]** icon  in the lower right corner of the expanded window, you will be taken to the **[Settings]** menu, which is described in detail in the section that starts later in this user manual.

9.8 Indicators icons


Icon	Description
	Battery charge level
	Active Wi-Fi connection icon
	New email message
	New sms message
	Mobile network signal strength icon
	Missed call
	Ongoing call

	Held call
	The device plugged into computer
	Active Bluetooth icon
	Alarm active
	Aeroplane mode
	Speakerphone mode
	Roaming active
	Sound profile set to vibrations.

 The icons presented above might differ from the one that appear in the phone, depending on the OS and used system patch.

9.9 Removing elements from desktop screen

 Touch & hold the item you want to delete, and then move to the top bar of the device instead of "X Delete".

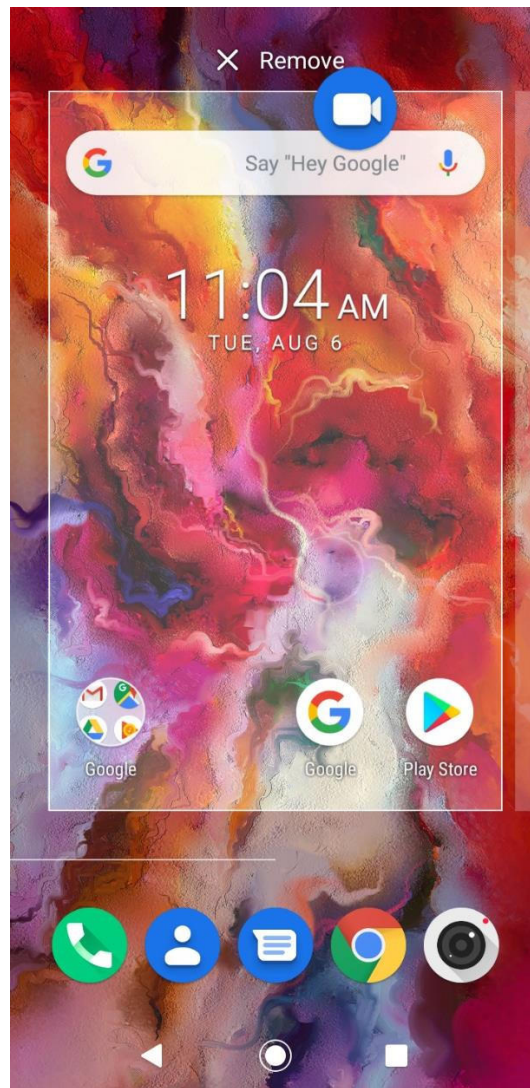

You can "drop" the icon, it will be removed.

9.10 Creating folders

You can create folders on the desktop where the user can place apps of his choice. So he/she can have frequently used applications in one place, not littering the desktop on your smartphone.



The image opposite shows the Google folder, located on the main phone desktop. To create one, click and hold an application and then drag it onto another application. As a result a folder containing two applications will be created. A few applications may be situated in one folder. To set or edit its name touch it with your finger. When the folder is open touch its name or "Unnamed folder" inscription, insert a new name and press OK.

10. Computer connection

To connect to PC computer with Microsoft Windows XP/Vista/7/8/10 using USB you should plug the included USB cable to multifunctional USB socket in smartphone. Plug the other end of the cable into the socket in your computer. When the device is plugged in, a screen will appear on your computer with the

 
name of the smartphone and operations possible to perform. If that does not happen swipe from the top edge of the bottom of the smart phone and click **"USB charging mode"**. More options will appear. To send file select **"Send (MTP) files"**. To exchange files between the computer and the phone choose: "Open device to view files". Now you can exchange files between your phone and the computer.

! If the OS does not recognize the phone memory, check if the installed driver operating the smartphone is correct. *Search the driver list manually and choose "MTP USB device".*

11. Text input

11.1 Text input - the virtual keyboard.

The text is usually entered using alphanumeric keyboard. If the selected language contains diacritical signs or any special characters, you can enter any sign by pressing a corresponding key a little longer. I.e. If the chosen language is Polish and you want to enter letter "ą" you have to hold "a" key a little longer until a list appears from which you can choose "ą". The virtual alphanumeric Android keyboard of the device is as follows (note: the appearance of the keyboard may vary slightly depending on the program, in which it is used):

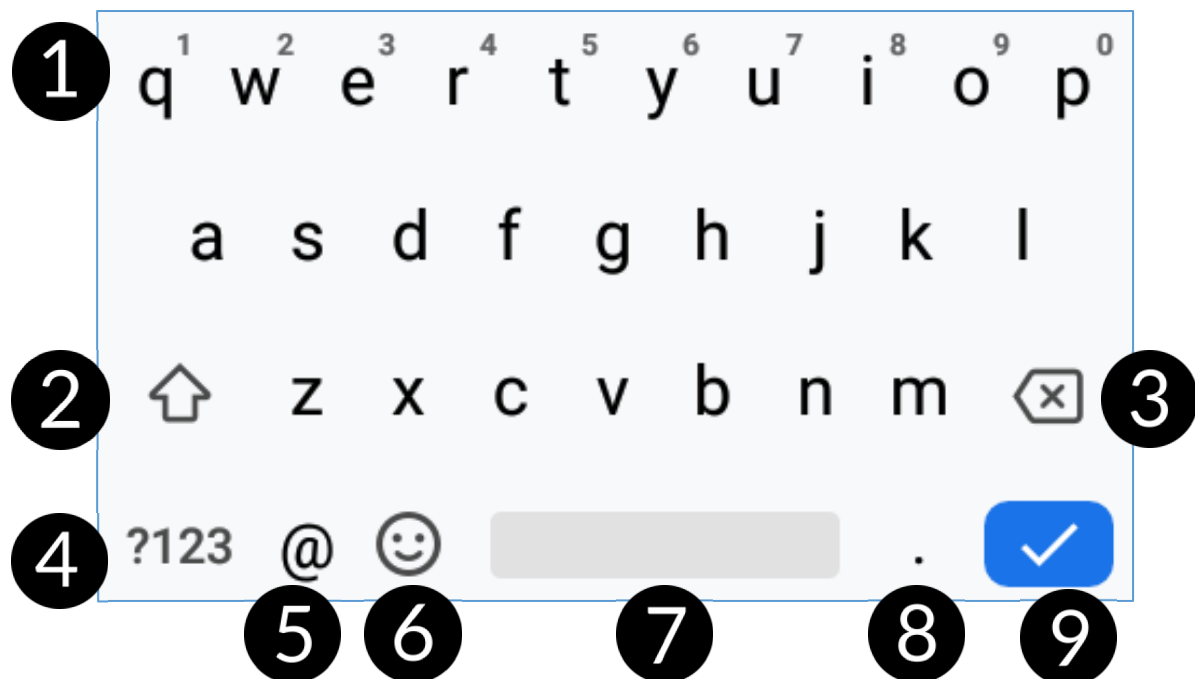

No.	Function
1	Virtual keyboard keys. Holding the keys Q to P to enter the digits from 0 to 9 and letters with diacritical marks characteristic for that language, i.e. ó, ö, õ, ô.


2	Shift/Caps Lock - a single click will cause a change in the key meaning / you can enter one uppercase letter, a double-click (signaled by turning on a highlight) will cause the text to be written in capital letters.
3	Backspace – will erase the sign behind which the cursor is placed.
4	The transition to the panel with numbers and symbols.
5	A single click enters the "@" symbol. Longer press allows you to activate the language and keyboard settings, including its on-screen location.
6	The transition to bookmarks with a variety of emoticons, including pictorial.
7	Insert spaces (spacing between characters).
8	Insert a full stop. Press and hold to activate additional options, e. g. one of the popular extensions of Internet addresses, e. g. .com, special characters, etc.
9	Confirmation of the entered text, address, number, etc.

The functions of some keys may vary depending on the application you are running the keyboard in.

11.2 Copy and paste the text

The text written in the text field can be copied into another app:

 1. Press and hold you finger onto the word you wish to copy.
2. A screen similar to the one beneath appears:

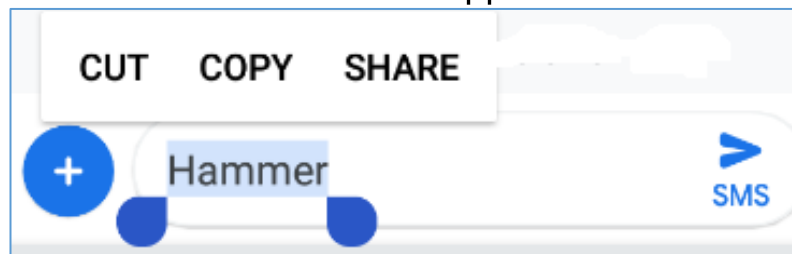

3. To mark more than one word use the sliders.
4. Choose **[Copy]** to copy and **[Cut]** to cut the marked signs.
5. Place the cursor in another application in place into which you wish to paste the copied text, press and hold your finger (for about 2 seconds).
6. Select **[Paste]** to insert the text.
7. Select **[Share]** to share the text with other applications.

12. Applications

When running applications, you can make the most of the device. On the desktop screen, drag the screen from bottom to the top to access the installed applications. To add a shortcut to an application on the desktop screen, press the application icon in the application menu and hold it, then when you change the view to the desktop view, select the place where you wish to create a shortcut and "drop" it in there.

12.1 Application download



To use [Google Play] service you have to own or create a Gmail account.

To use [Google Play] option choose an [Play] application from the menu. Search for the application you need using icon with a magnifier or through moving the tabs in [Google Play], then click [Install] > [Accept]. Downloading and installing process will begin as soon as you accept your choice.



If the notifications are enabled, the end of downloading and installing the application is indicated by a notification in the system bar.

To open a newly installed application select [Open]. To install applications downloaded from other sources, select: [Application Menu] > [Settings] > [Applications and Notifications] > [Special Access to Applications] > [Installing Unknown Applications] and grant appropriate rights to the applications from which you can install these applications (web browsers, file managers, mail programs, virtual disks, etc.).

12.2 Launching and disabling applications.

To launch an application touch its icon on the desktop or in apps menu. To access the Application Menu, drag the main desktop screen up. If you wish to exit an application press "Home" button - app will be minimalized but will still work in the background and you will see the desktop. If you wish to go back to previously used app press "Menu" button. A list of recently used, active applications will appear. Choose the application you need and press it to use it again. If you wish to close the application drag it up in the list. You can also usually disable all applications running in the background by clicking the "CLEAR ALL" button on the left side of the list of windows (if there are more windows, you need to scroll through the list).

12.3 Uninstall applications

There are a few ways to uninstall an app. Beneath the 3 most common ways are presented:

1. Enter: [Applications menu] > [Settings] > [Apps and notifications] and from the list that appear select the app you wish to uninstall, tap it and choose option [Uninstall] > [OK].
2. Enter: [Applications menu] > [Play store] choose the magnifier and type-in the name of an app you wish to uninstall, tap it and choose option:[Uninstall] > [OK].
3. In [Menu Applications] touch and hold an application icon, drag it to the upper right corner and drop it on the "Uninstall" inscription. When we move the icon to the inscription, it will turn to red. "Drop" it at that exact moment. Then confirm uninstalling.

You can uninstall apps installed by the user and some apps installed by the manufacturer. You cannot uninstall system applications.

12.4 Managing applications

You can manage the applications using the task manager. **Enter:** [Applications menu] > [Settings] > [Apps and notifications]. A manager containing a list of applications will be launched. To stop an application touch its name and choose an option [Force stop].

13. Settings

Enter: [Applications menu] > [Settings]. A window will appear containing the search engine (you can enter a part of the name of the searched resource to display a list of topics containing the typed text), suggestions on how to perform important user actions and settings of individual parameters of the device.

13.1 Network and internet

Wi-Fi

Take a look at the **Internet - Wi-Fi** chapter, which is situated further in the manual.

Mobile network

You can, for example, connect to the Internet via a mobile network, select a mobile network operator, select a network type and enable data roaming, select a preferred network type, automatically select a network, and select access points.

Data Usage

Estimated calculations allowing to control the limits of data downloaded via mobile Internet, presentation of download speed.

It is also possible to enable data-saving mode - applications that the user does not select will not download data in the background, which saves Internet package data.



Attention: transfer limits indicated here are measured by the phone software. *The operator may calculate the data transfer otherwise.*

There are also estimates to control the limits of data downloaded over Wi-Fi.

Hotspot and tethering

Providing a mobile data connection when setting up the phone as a portable Wi-Fi hotspot, Bluetooth, USB.

SIM cards

You can enable or disable the operation of one or both SIM cards, activate or disable a data connection, determine whether to make calls and send SMS from a specific card, or leave a choice each time you activate these features.

Aeroplane mode

Disables radio transmissions on the device, i.e. Wi-Fi, Bluetooth and Mobile Networks.

VPN

Allows you to add and manage virtual private networks (Virtual Private Network).

Private DNS

Allows you to enter the address of the selected DNS server manually (option for advanced users).

13.2 Connected devices

Application for switching on short-range radio transmissions, i.e. Bluetooth, printing and USB support.

13.3 Applications and notifications

Displays a list of all applications installed on your smartphone. You can also manage Notifications, Default apps, App permissions, and set up Special app access: Device admin apps, Display over other applications, Do not Disturb access, Modify system settings, Notification access, Picture-in-picture, Premium SMS access, Unrestricted data, Install unknown apps, Usage access and more.

13.4 Battery

Display of information about how your device uses battery power, Battery manager (allows you to detect applications that consume power quickly and set limits), the ability to enable percentage display of charge, battery optimization (power saving modes, battery saving schedule, saving battery while charging), automatic shutdown of applications when the screen is locked, as well as basic approximate statistics (when there was the last charge, how much power the screen used since the last time it was turned on), etc

13.5 Display

Settings regarding the device display. You can set, among others:

- Brightness level (also adaptive),
- night backlight,
- wallpaper,
- sleep,

- auto-rotate screen,
- font size and display size,
- screen saver,
- ambient display
- device theme.

13.6 Navigation bar

Settings for displaying the navigation bar and the layout of buttons on the navigation bar.

13.7 Profiles

Customize your sound profiles to suit your tastes. You can select one of those defined by the manufacturer or create your own. It is also possible to set the volume of multimedia, calls, ringtones, alarms.

13.8 Internal memory

Display information about the device's internal memory and microSD card memory status, as well as the ability to clear space and use an automatic space manager that removes copies of photos and videos.

13.9 Security and location

Settings and information from Google Play Protect (checks your applications for harmful operation). Activation of option of finding a lost smartphone. Enables screen lock (Swipe, pattern, PIN code, password, fingerprint, face recognition).

Smart Lock (leaves the device unlocked when it is near the owner - paired with trusted devices, placed in a trusted location, detects contact with the body, face and voice recognition).

Here, you can permit applications to use data and GPS satellites to determine the approximate location of the device. Also the possibility to allow Google to use location data in order to improve search results, etc. Device management applications can be managed, SIM card lock, monitoring applications, encryption, trust agents, screen clip-on.

13.10 Accounts

Possibility to assign a user account to Android OS. You can also view user account information, change account settings, and more. Possibility to activate automatic data synchronization.

13.11 Accessibility

Accessibility service are special features for people who are visually and/or auditory impaired. Changing the settings provides better access to the interface

and device functions.

Among others, the following options are available:

- **[Select to Speak]** - reads descriptions and content when selected on the screen.
- **[TalkBack]** - reads aloud information useful to the visually impaired and the blind when operating the device.
- **[Text to speech output]** text-to-speech options. The configuration of text-to-speech Google mechanism. Speech speed options and possibility to listen to an example.
- **[Font size]** - selecting the size of the font.
- **[Display size]** - Selecting the size of the interface.
- **[Magnification]** - magnifying the image on the screen.
- **[Large mouse pointer]** - mouse cursor will be larger. It works when you connect the mouse to your device.
- **[Colour inversion]** - inverts the interface colours.
- **[Colour correction]** - function helps people who have problems recognizing colors.
- **[Remove animations]** - enable or disable animations in the interface.
- **[Accessibility Menu]** - control the phone via a large menu.
- **[Switch Access]** - Allows you to scan for items and select them using one or more switches.
- **[Assistant]** - Launches a floating icon on the screen (it can be moved freely), which, when held down, opens a menu with quick access to selected shortcuts or applications.
- **[Dwell timing]** - activates the auto-click function and its delay when the pointer is being moved. It works when you connect the mouse to your device.
- **[Power button ends call]** - Ending phone calls using power on/off button
- **[Auto-rotate screen]** - set automatic screen rotation.
- **[Touch and hold delay]** - setting the recognition time for tapping and holding the options on the display.
- **[Vibration]** - Turns vibrations on or off when ringing and alerting, and when touching.
- **[Mono audio]** - Combine channels when playing audio.
- **[Captions]** - facilitating function which allows you to turn subtitles on the device and specify their options (regarding i.e. the language, style, font).
- **[High contrast text]** - all colourful fonts become black.

13.12 Google

It gives you control over your Google Account, including login data, personal information and privacy, settings, backup, instant apps, Google Fit™, Google

Pay™, location, Nearby, device phone number, connected apps, contact recovery, and advertising. You can configure your business profile, nearby devices, SmartLock for passwords, search engine, control media transfer.

13.13 System

The following options are available:

- **About phone** - displays device information such as: System updates, Phone status, Legal information, Model, Android version, Security update status, Basic band version, Kernel version, Compilation number.
- **[Languages and input]** - allows you to customize your device's language settings, spell correction, personal dictionary, virtual and physical keyboard, and speech.
- **[Gestures]** - to set the possibility of switching the camera on by double-clicking on the power button.
- **[Date and time]** - Android date and time settings.
- **[Backup]** - Back up and restore settings.
- **[Reset options]** - Resets DRM securities, Wi-Fi, mobile network and Bluetooth, application settings, and erase all data from the device.
- **[Multiple users]** - gives you the ability to control your smartphone user accounts.

14. Phonebook

14.1. Adding contacts

 


One way is to enable the **[Phone]** application and enter the phone number you want to add. Then press **"Create a new contact"** . A contact tab for the fields to be filled will appear. It is up to the user which fields one will fill - as a standard it is enough to enter a name. In addition to your name, you can also enter a second telephone number and describe it (home, work, business, etc.), your E-mail address, your personal data (name day, birthday). Enter <Save> to save the contact. All data is saved in the Google account.

14.2 Editing contacts

To edit a contact:

- Run application **[Contacts]**.
- Choose and press the contact you wish to edit.



- Select icon .
- Insert changes in the fields you wish and press **"Save"** to save changes.

14.3 Deleting contacts

To delete a contact:

- Run application **[Contacts]**.
- Choose and press the contact you wish to delete.
- Press  button and choose **"Delete"**, confirm with **"OK"**.

14.4 Contacts import/export.

To copy/export contacts:

 
- Run application **[Contacts]**.
- Press the button  in the upper left corner and select **[Settings] > [Import]** or **[Export]**.
- Choose a source from which you wish to copy/export contacts.
- Choose a place into which you wish to import/export contacts.
- Choose the contacts you wish to copy.
- Press **"OK"** placed in the right upper corner to start copying.

15. Communication

15.1 Making calls

To make a call:

- Touch **[Phone]**  icon placed on the main screen or in Android applications menu.
- Enter the phone number you want to call or select it from the list - phone book  or call history .
- Press "handset" placed at the bottom of the screen and choose which SIM card you wish to use.

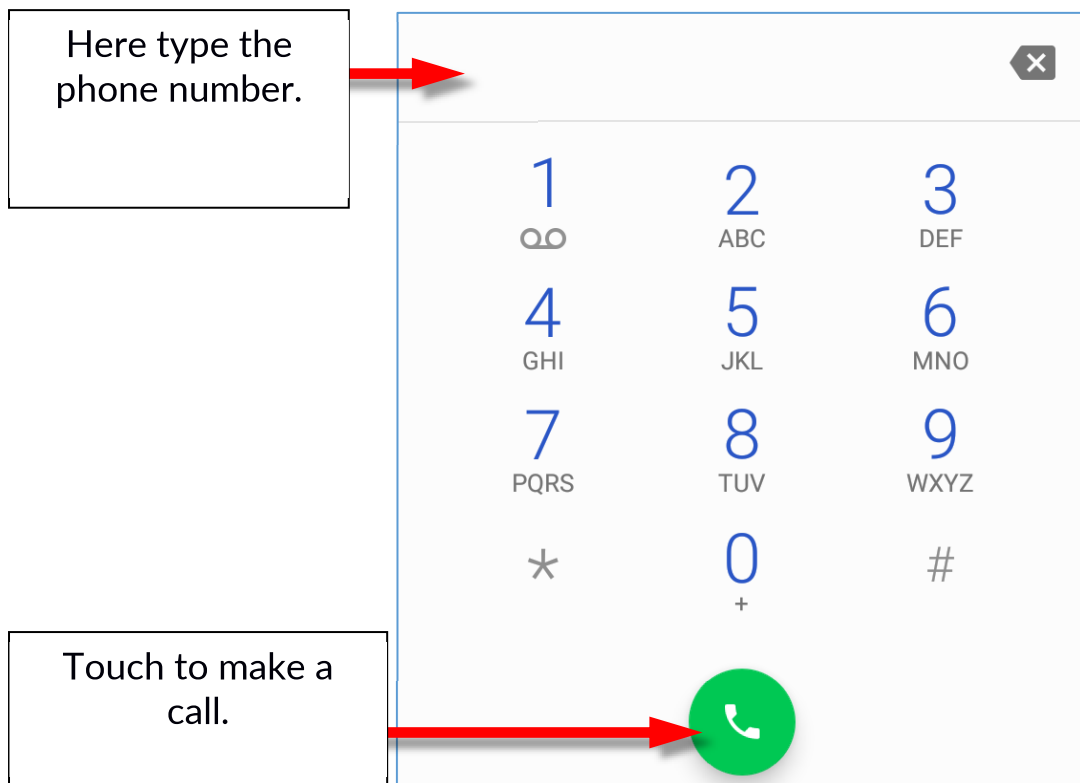

15.2 SMS - Messages

This smartphone can be used to exchange text and multimedia messages with

other cellphones. You can manage your messages using the **[Messages]**  application in the home screen or smartphone menu. Incoming and received messages will be saved as a one conversation for each contact. In this way you can look through the whole conversation with given contact in a comfortable way.

 
To be able to send an SMS, insert a SIM card into the slot in the device. Enter: **[Applications menu] > [Settings] > [Network & Internet] [SIM cards] > [SMS messages]** and tick the SIM card which is going to be used to send SMS messages. (When you exchange SIM card you have to repeat the whole process).

Generating message

You can manage your messages using the **[Messages]**  application in the home screen or smartphone menu.



Run an application and touch icon , insert phone number or name. When you have chosen the contact a screen will appear where you type the message itself.

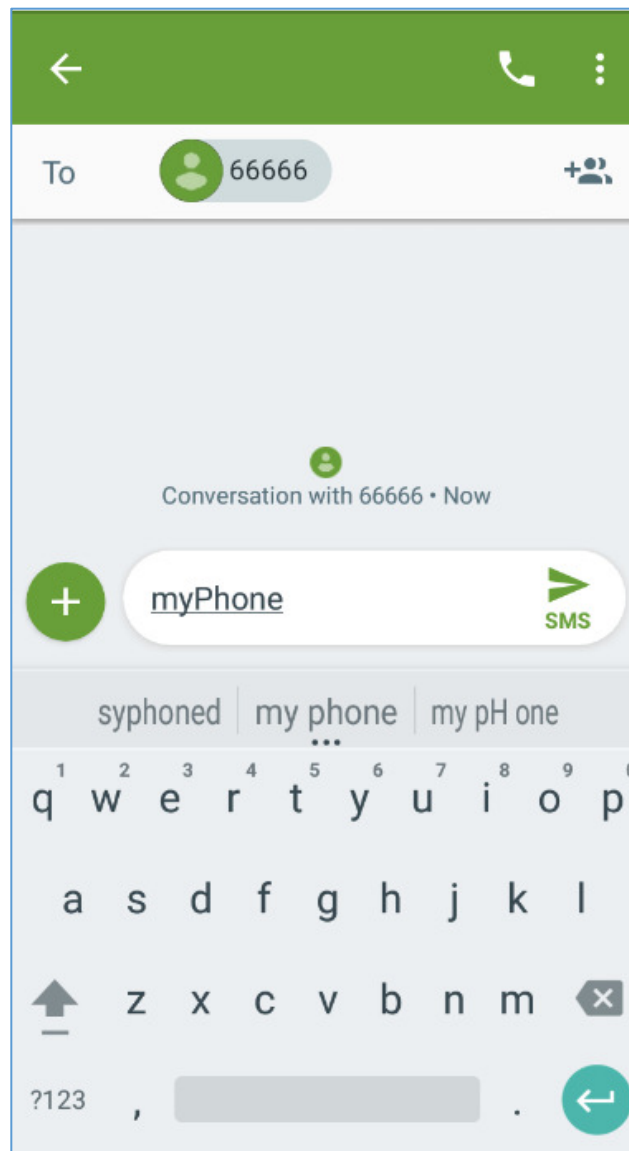


Type the message body. To send the message press **SMS**. Before you send a text message, you can change it to multimedia by pressing



the symbol  on the left side of the content window and adding a sticker, photo, video, audio.

16. Multimedia

 16.1 Camera

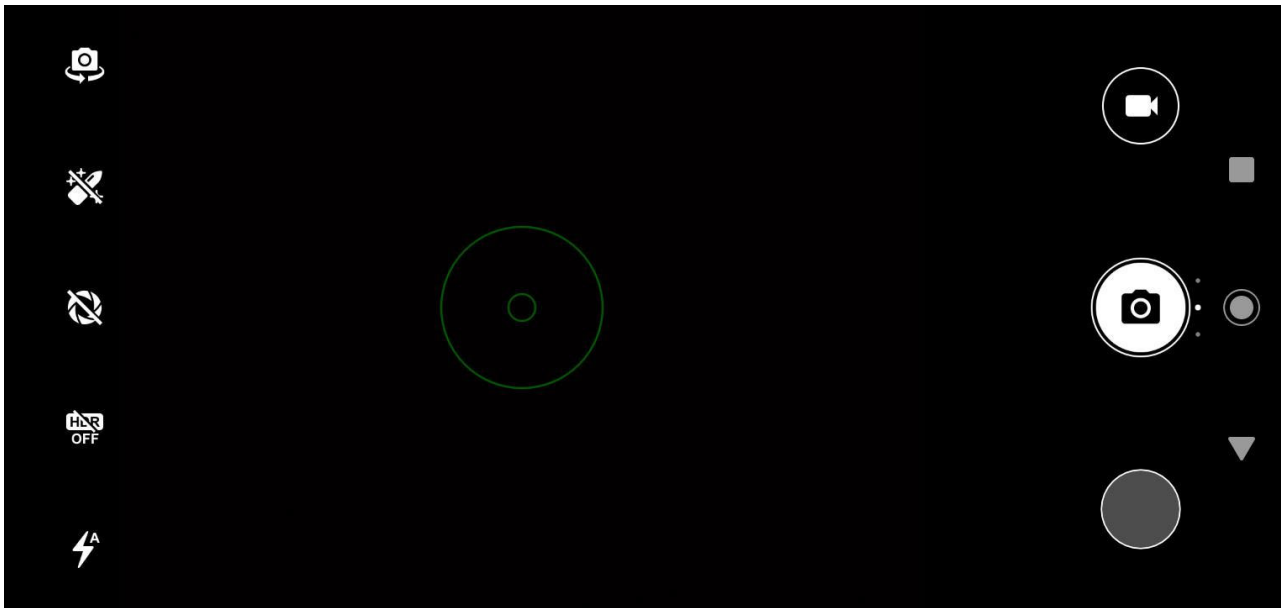

Icon	Description
	HDR mode - high dynamic range.
	Flash mode
	Activates the front or rear camera.
	Activates the camera and the shutter of the camera.
	Activates the camera - video recording.

	Effects that beautify objects on the screen.
	Manual control of the aperture values.
Mode	Selective shooting mode, with sound, night-shot, QR code reading, auto, panoramic, filter overlay, scene selection, manual parameter control, and for camera time lapse, slow motion, night mode.
Settings	Camera settings

To take a photo place the photographed object in the frame and touch shutter

button . If necessary you can adjust exposure, flash and other settings or leave them in automatic mode (options available in settings).

Move the screen to the right to open the camera mode menu and to the left to go to the settings (depending on the selected camera / video mode):

- **Camera**
 - Storage path
 - Volume key function
 - Quick capture by double-click vol down key when screen off

- Camera Sound
- Save Location
- Picture size
- Picture quality
- Self timer
- Composition line
- AI Detect
- Antibanding
- AI scene recognition
- Save normal pic for HDR
- Touching photograph
- Restore Default

- **Camcorder**

- Volume key function
- Quick capture by double-click vol down key when screen off
- Camera Sound
- Save Location
- Video size
- Composition line
- White balance
- Antibanding
- Microphone
- Restore Default

16.2 Photos

Touch the **[Photos]** icon in the Application Menu to view photos and videos. Application displays pictures and videos stored in your smartphone and the SD memory card, including those that have been taken with the camera, downloaded from the web or from other locations. The following options are available in the application, among others:

1. **Photo sharing:** you can share the image you are viewing via Bluetooth, an

email client, and more by tapping the icon .

2. **Deleting photos:** You can delete the photo you are viewing by pressing



 
icon and confirming that you have moved the image to the bin.


3. **Google Lens:** you can copy text from an image/photos, search for products on the Internet, recognize plants and animals, discover books and multimedia, scan barcodes in the image you are viewing by clicking the



4. **Edit photos** - While viewing the pictures in the **Photos** you can edit it any picture you want to. To do that touch  icon.

16.3 FM Radio

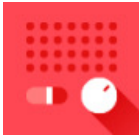  [FM Radio] app is situated in the main menu.

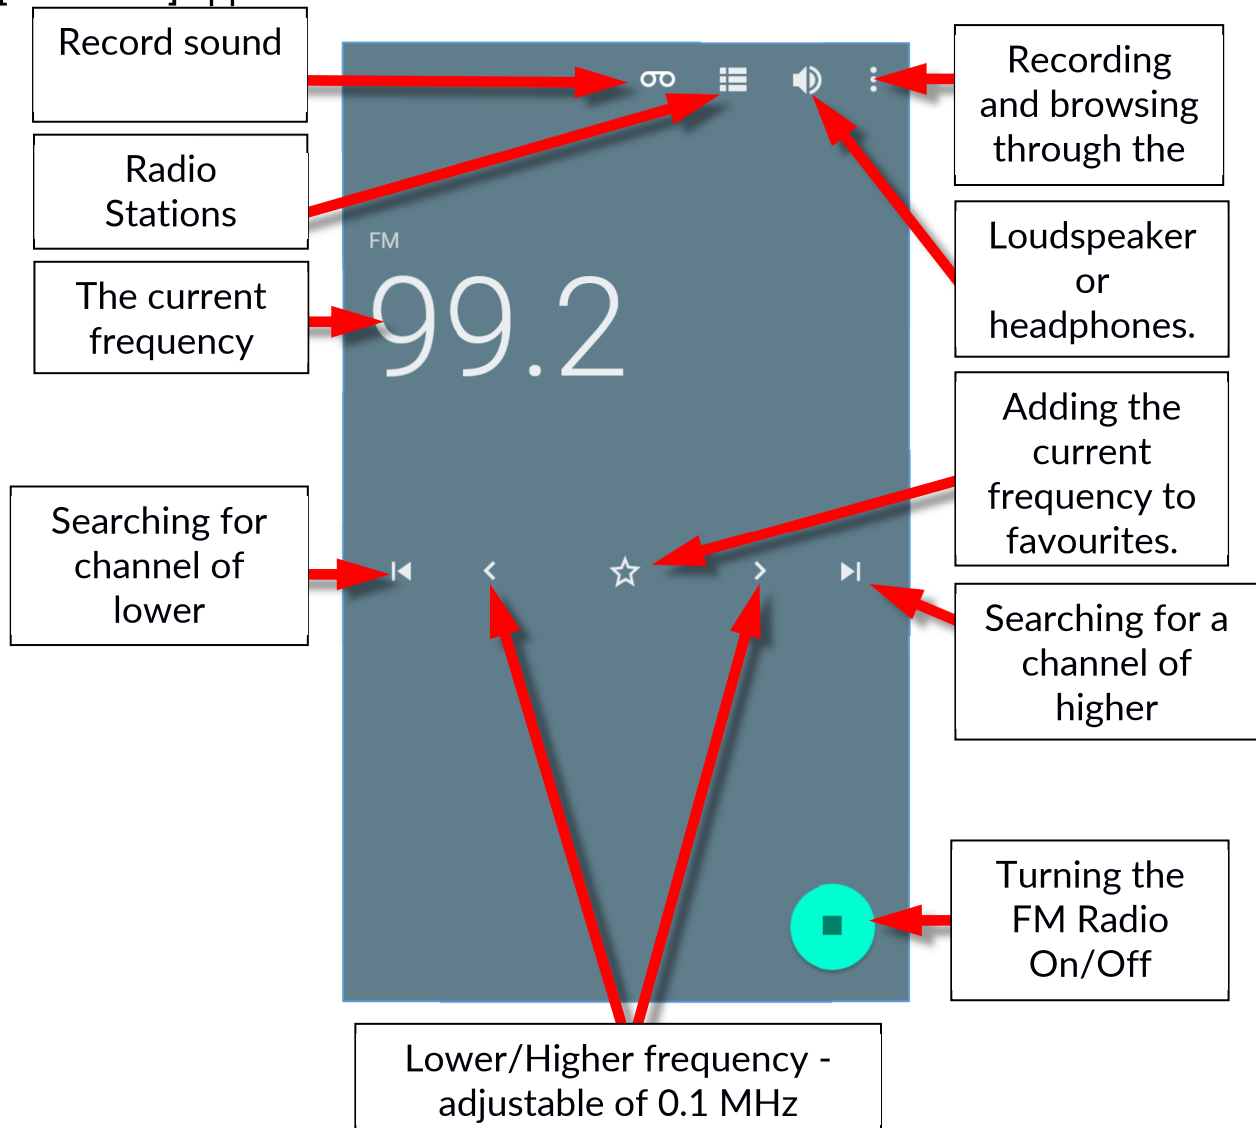


Touching  button will open a dialog window in which the following options appear:

- **Saved recordings** - It allows you to go to the list of recorded files and listen, add to the playlist or edit them.
- **Scheduled off** - allows you to set the time after which the radio switches itself off.
- **Enable RDS** - allows you to enable or disable RDS.

A radio station can be listened to in the background, so at this time other applications can be used on your smartphone.

17. Bluetooth

 A built-in Bluetooth module uses a wireless, short-range communication technology used to exchange data up to 10 meters distance. The most commonly used Bluetooth devices are headphones or wireless speakers used to make voice calls and listening to music. Also car kits and other wireless mobile devices such as laptops, tablets, and mobile phones are often used.

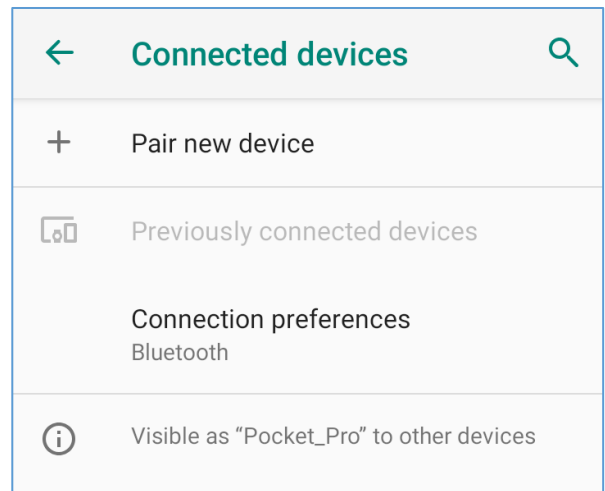

17.1 Sending files

To send the file, select **[Application Menu] > [Settings] > [Connected Devices] > [Bluetooth]**, slide the **[Bluetooth]** slider to the right to enable the module. Enter **[File manager]** search and hold a little longer the file you wish to share.



Then touch an icon and choose **Bluetooth** from the list. In the list, touch the device ID to start pairing. When pairing is complete and transfer is confirmed on the target device, the file will be send.

17.2 Receiving files

 
To receive the file, select **[Application Menu] > [Settings] > [Connected Devices] > [Bluetooth]**, slide the **[Bluetooth]** slider to the right to turn on the module. When paired, the smartphone will receive a file send from another device and will save it in its memory, when confirmed.

17.3 Connection a bluetooth headset

To connect a headset to your smartphone enter: **[Application menu] > [Settings] > [Connected devices] > [Bluetooth] >** and select headset ID from the list. When pairing is active you will be able to listen to music and pick/make calls.

18. Internet

18.1 Wi-Fi

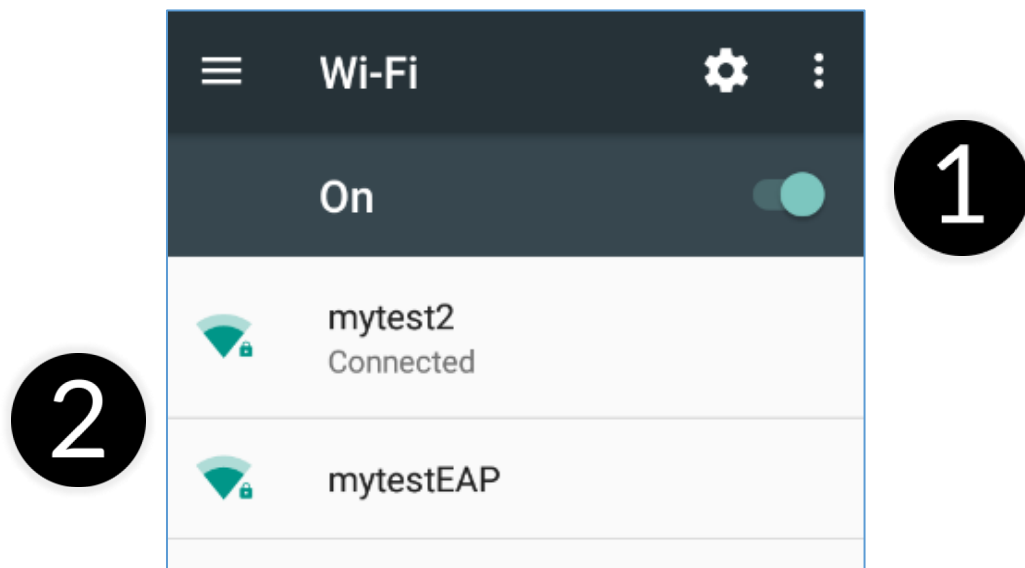

An option used to connect the device to an Wi-Fi network.

1. Select **[Applications menu] > [Settings] > [Network and Internet] > [Wi-Fi]** and slide the slider (1) to the right (turn it on). If you want to add or specify a new Wi-Fi network, press the **[Add Network]** button and enter the SSID, select the type of security, and if necessary set the proxy server and the IP type.
2. In this field you can see a list of available Wi-Fi (2) networks, connection status between the device and given network, an icon depicting network signal strength, security (a padlock visible).

! If a Wi-Fi network is secured then on an attempt to connect an enquiry for password will appear, which is to be entered by a virtual alphanumeric keyboard.

18.2 Connecting with 3G/LTE (4G) network

Using a smartphone you can use the mobile internet offered by your mobile operator. To use the Internet on your smartphone, your SIM card should be able to connect to a 3G/LTE (4G) network, and your smartphone must be within range of that network. If you are not sure if the SIM card has the ability to connect to above mentioned network, or you are not sure if your smartphone is in 3G/LTE (4G) network range contact you cellular network operator. To turn on the mobile internet, the SIM card must be inserted into the slot on the device. Enter: **[Applications menu] > [Settings] > [Network & internet] > [SIM cards] > [Mobile data]** and tick the SIM card with which you are going to connect to the Internet. (When you change SIM card you have to repeat the whole process). Subsequently, expand the notification bar (starting at the top edge) and press



icon and device should connect to the 3G/LTE (4G) internet.

! If you do not have the Internet enable it in: **[Applications menu] > [Settings]**

 
> [Networks & Internet] > [Mobile network] roaming of national calls or all calls.

19. Adding APN access points

A correct configuration of APN settings is needed for the proper functioning of MMS service and the mobile Internet network.

 The best option is checking data which should be in APN on the website of cellular operator, whose SIM card is being installed. In some cases those data can be received via SMS or email.

If you need to add them manually, after finding information about the values to be recorded in APN, you must usually enter: [Applications menu]> [Settings]> [Networks & internet]> [Mobile network]> [Access point names].

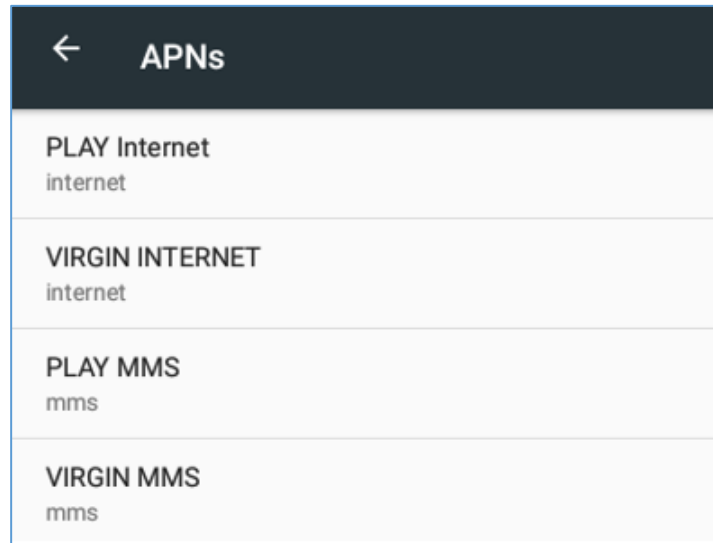

Subsequently touch the upper right corner  which will add an APN point. An ability to fill in some fields will appear. Below are examples of screens filled with fields for APN random operators.

For MMS:

Edit access point	Edit access point	Edit access point
Name T-Mobile.pl MMS	MMSC http://mms/servlets/mms	APN type mms
APN mms	MMS proxy 213.158.194.226	APN protocol IPv4/IPv6
Proxy Not set	MMS port 8080	APN roaming protocol IPv4/IPv6
Port Not set	MCC 260	APN enable/disable APN enabled ☒
Username Not set	MNC 02	Bearer Unspecified
Password Not set	Authentication type Not set	MVNO type None
Server Not set	APN type mms	MVNO value Not set

For the Internet:

Edit access point	Edit access point	Edit access point
Name T-Mobile.pl INTERNET	MMSC Not set	APN type default,supl
APN internet	MMS proxy Not set	APN protocol IPv4/IPv6
Proxy Not set	MMS port Not set	APN roaming protocol IPv4/IPv6
Port Not set	MCC 260	APN enable/disable APN enabled ☒
Username Not set	MNC 02	Bearer Unspecified
Password Not set	Authentication type Not set	MVNO type None
Server Not set	APN type default,supl	MVNO value Not set

After filling them (not all have to be given values), you need to click the icon  in the upper right corner of the screen and select **[Save]**, if you want to keep the APN in the device memory or **[Reject]**, when you want to exit the window without saving.

20. Location

There is a possibility to permit applications to use data and GPS satellites to determine the approximate location of the device. Also the possibility to allow Google to use location data in order to improve i.e. search results. Before using location services, such as map and navigation applications, or internet services, ensure that there is an active wireless connection to the Internet and the function of the GPS satellites in the **[Application Menu]> [Settings]> [Location and blockades]**.

21. Smartphone software update by OTA

From time to time, the manufacturer provides system software update, so that the devices receive new possibilities, patches, etc.

There is an application in the system **[System update]** . It allows you to check whether any update is available and if so, you can download it from the Internet and install on the device.

 *The internal memory of the device is used to update the system software, so the process may stop during the update process or there may be a message that there is too little memory available. It means that the update file is so large that it*

does not fit in the available memory of the device. Therefore, in order to correctly perform the update process, you need to provide the necessary data storage and repeat the update.



Remember that updates tend to have an expected size counted in hundreds of megabytes, so we recommend that you carry them out when connected via Wi-Fi. Updating via the GSM network may contribute to the operator charging for data downloaded from the Internet.



Please remember that before upgrading, the battery charge level should be higher than 30%. If it is lower, plug the device to the power grid and charge the battery **at least** to 30%.



While updating the device might restart on its own a few times. You should not remove the battery or use any of device features, as this may cause the device to stop working.

22. Safety remarks

22.1 Troubleshooting



In case of any problems with the device we strongly advice to make a copy of an important data (contacts, SMS, photos, videos, music etc.) and restart the phone or restore default factory settings.

If the problem continues, read the following tips and follow the given suggestions in case of problems with a particular section:

- **MicroSD Memory Card** - Make sure that the microSD memory card is installed correctly in the correct slot for the microSD cards. If it does not help use another memory card of appropriate class and capacity.
- **USB** - check the cable, by plugging another device. Check the form of a USB connection in smartphone settings (shortcut available in screen notifications). If it doesn't help, use another cable.
- **Bluetooth** - check whether the connection is active and Bluetooth visibility options are enabled. Make sure that both devices are in Bluetooth connection range and there are no obstacles between them (interesting fact - some LCDs absorb magnetic waves). Make sure that the devices have a sufficient amount of memory to exchange files. Make sure both devices have disabled the aeroplane mode. It blocks Bluetooth, Wi-Fi, and cellular networks.
- **Internet/Wi-Fi** - Check if the aeroplane mode is not on, because it disables using any wireless network functions. Check network range. Check if the function is activated in the device and the parameters set correctly. Check if the password to the Wi-Fi network is correct.
- **Sounds** - make sure that the sound in the phone is not muted. Check other smartphone sound settings. Check if the plug at the end of the cable is connected correctly to the 3.5 mm minijack socket. Some minijack plugs differ from each other which also might be a reason. Try another cable or use an

adapter.

- **Photos and screenshots** - check if the camera lens is not somehow obscured. Check if the device has a sufficient amount of memory on the SD card or internal memory (depending on the carrier, in which photos or screenshots are stored). Check if the microSD memory card has been mounted correctly.
- **Although the battery is charging, the battery charge continues to drop** - turn off all options, such as Wi-Fi, Bluetooth, Location, and then reduce the brightness of the screen (these options consume the most power from the battery of the device), then turn Aeroplane mode on the device. Those simple steps will accelerate the charging process. It is recommended to charge the device with the charger, and not through a USB port on your computer.

If the problem persists, contact your dealer.

22.2 Protection of memory card data

- Do not take out a memory card while information are being transferred or used by the device. This may cause data loss or damage to the card or device.
- Do not touch the pins with your fingers or metal objects. In case of any dirt, wipe the card with a soft dry cloth.

22.3 Protection of personal data and important information

- It is recommended to regularly back up important data. The manufacturer is not liable for any loss of information.
- **Before selling or donating the device, delete all data [Application menu] > [Settings] > [System] > [Reset options] > [Erase all data (factory reset)]**. This way you can protect yourself from accessing your personal information by unauthorized people.
- Downloading applications, refer to the on-screen information. Particular caution should be exercised in the case of applications that have access to many functions or to a significant amount of personal information.
- Regularly check your account in terms of unauthorized or suspicious use. If traces of misuse of personal information are discovered, contact your service provider to delete or change your account information.
- In the case of loss or theft of the device immediately change the passwords for the accounts (Google, email, social networking, etc.).
- Try not to use applications coming from unknown sources. Lock the device using the pattern, password or PIN code.
- Do not distribute copyright-protected material.
- Do not distribute copyrighted content without permission of the copyright holder. Failure to do so may result in copyright infringement. The manufacturer is not liable for any legal consequences of illegal use by the user of copyrighted material.
- Use anti-virus software, which regularly update the virus signature database.

22.4 Correct battery use remarks.

- The battery may be charged with USB port in the computer or laptop. Nevertheless, it is not a recommended form of charging an operating device due to the low charging current offered by the USB - even though the device is connected to a power source battery can still get discharged. If you wish to charge your device this way turn off the device.
- If the battery level is low, recharge it to continue the use of the device. If you wish to prolong the battery life span, discharge the battery beneath 20% of the battery capacity and charge it back to 100%.
- If not used, unplug the charger from the device. Excessive charging might cause shortened battery life.
- The temperature of the battery has an impact on its charging cycle. Prior to the charging process, cool the battery or raise its temperature so that it is similar to the room temperature. If the battery temperature exceeds 40°C/104°F it must not be charged!
- Do not use a damaged battery!
- The battery life span can be shortened, if it has been exposed to very low or very high temperatures - this causes interference to the device, even when the battery has been properly charged.

23. Maintenance of the device

To prolong the life span of the device act according to these instructions.

- Keep the device and its accessories out of reach of children.
- Avoid contact with liquids; it can cause damage to electronic components of the device.
- Avoid very high temperatures for it can shorten the life of device electronic components, melt the plastic parts and destroy the battery.
- Do not try to disassemble the device. Tampering with the device in an unprofessional manner may cause serious damage to the phone or destroy it completely.
- For cleaning use only a dry cloth. Never use any agent with a high concentration of acids or alkalis.
- Use only the original accessories. Violation of this rule may result in an invalidation of the warranty.



The packaging of the device can be recycled in accordance with local regulations.

24. Surroundings security

Turn off the device in areas where its use is forbidden or when it may cause

interference or danger. The use of any devices that radio waves causes interference with medical devices (i.e. cardiac pacemaker), if they are not properly secured (if in doubt, consult your doctor or medical device manufacturer).

Attention	Statement
The manufacturer is not responsible for any consequences caused by improper usage of the device and not obeying the above instructions.	The software version can be upgraded without earlier notice.

25. The use of the manual

25.1 Consents

Without prior written consent of the manufacturer, no part of this manual may be photocopied, reproduced, translated or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording or storing in any systems of storing and sharing information.

25.2 Appearance

The device and screen shots contained in this manual may differ from the actual product. Accessories attached to the set may differ from the illustrations included in manual.

25.3 Trademarks

- Google, Android, Google Play, Google Play logo and other brands are Google LLC trademarks.
- Oracle and Java are a registered trademarks of Oracle and / or its affiliates.
- Wi-Fi® Wi-Fi logo are a registered trademarks Wi-Fi Alliance association.
- All other trademarks and copyrights belong to their respective owners.

26. Correct disposal of used equipment



The device is marked with a crossed-out garbage bin, in accordance with the European Directive 2012/19/WE on used electrical and electronic Equipment (Waste Electrical and Electronic equipment - WEEE). Products marked with this symbol should not be disposed of or dumped with other household waste after a period of use. The user is obliged to get rid of used electrical and electronic equipment by delivering it to designated recycling point in which dangerous waste are being recycled. Collecting this type of waste in designated locations, and the actual process of their recovery contribute to the protection of natural resources. Proper disposal of used electrical and electronic equipment is beneficial to human health and

environment. To obtain information on where and how to dispose of used electrical and electronic equipment in an environmentally friendly manner user should contact their local government office, the waste collection point, or point of sale, where the equipment was purchased.

27. Correct disposal of used battery



In accordance with Directive 2006/66/EC as amended by Directive 2013/56/EU on the disposal of batteries and accumulators, this product is marked with the symbol of a crossed-out waste bin. The symbol indicates that the batteries used in this product should not be disposed with regular household waste, but treated according to the legal directives and local regulations. It is not allowed to dispose of batteries and accumulators with unsorted municipal waste. Users of batteries and accumulators must use the available collection points of these items, which allows them to return, recycle and disposal. Within the EU, the collection and recycling of batteries and accumulators is a subject to separate procedures. To learn more about existing procedures of recycling of batteries and accumulators please contact your local office or an institution for waste disposal or landfill.

28. Specific absorption rate (SAR)

SAR is a value indicating the amount of radiation emitted by the phone. The SAR limit recommended by the Council of the European Union is 2 W/kg. The maximum SAR value for myPhone POCKET PRO is **0.840 W/kg** for GSM.

The maximum radio frequency power emitted in the frequency range.	
Frequency Range	Transmit Power
GSM 850/900/1800/1900 MHz	2 W/1 W
UMTS 900/2100 MHz	0.25 W
Wi-Fi 2412-2472 MHz	14.7 dBm EIRP
Bluetooth 2402-2480 MHz	5.62 dBm EIRP

29. Declaration of conformity with European Union Directives

mPTech Ltd. hereby declares that myPhone POCKET PRO cellular phone is compliant with Directive 2014/53/EU. The full text of the EU Declaration of Conformity is available at the following Internet address:

www.myphone.pl/qr/myphone-pocket-pro