

USER MANUAL

myPhone Rumba



Lot number: **201703**

Thank you for choosing **myPhone Rumba** device. Please read this manual carefully.

SAFETY

Read these guidelines carefully. Not following them may be dangerous or illegal.

DO NOT RISK

Do not switch on the phone when the use of mobile phones is prohibited or if it might cause interferences or danger.

ROAD SAFETY

Do not use this device while driving any kind of vehicle.

INTERFERENCES

All wireless devices may cause interferences, which could affect the performance of other devices.

RESTRICTED AREAS

Switch OFF your telephone in an airplane since it may disturb the operation of other equipment located therein. The telephone may interfere with operation of the medical equipment in hospitals and health protection entities. Abide by any kinds of prohibitions, regulations and warnings conveyed by the medical staff.

QUALIFIED SERVICE

Only qualified personnel or an authorized service centre may install or repair this product. Repairing by an unauthorized or unqualified service may cause phone damage and warranty loss.

CHILDREN

The phone is not a toy. Keep the device and its accessories out of reach of children.

ALARM CALLS

Making alarm calls may not be possible in some areas or circumstances. It is recommended to find an alternative way to notify emergency services if you are going to undeveloped or remote areas.

BATTERY AND ACCESSORIES

Avoid exposing the battery to very high/low temperatures (below 0°C/32°F and over 40°C/104°F). Extreme temperatures may influence capacity and battery life. Avoid contact with liquids and metal objects as it may cause partial or complete battery damage. Do not destroy, impair or throw the battery into flames - it is dangerous and may cause fire. Never open the battery. Installing an incorrect battery type can cause explosion. Worn-out or impaired battery should be placed in a dedicated container. The battery should be used according to its purpose. Excessive charging the battery can cause damage, therefore a single battery charge should not last longer than 12 hours (1 day an absolute max.). Please dispose of battery according to the instructions. Disconnect an unused charger from power grid. In case of the charger wire damage, it should not be repaired but replaced with a new one. Use only the original MyPhone accessories available with your phone.

WATERPROOF

This device is not waterproof. Protect it from liquids and moisture.

USING THE MANUAL

Before you use the device refer to information about safety precautions and instructions for using the phone. The descriptions in this manual are based on the default settings of the phone. The latest version of the user manual can be found on website: www.myphone.pl.

Depending on the installed version of the software, service providers, SIM card or country, some of the descriptions in this manual may not match your phone.

PETROL STATION SAFETY

Always turn off the phone while refuelling your car on a petrol station. Do not use your phone close to chemicals.

HEARING



To avoid hearing damage, do not use the device at high volume levels for a long period of time, do not put operating device directly to the ear.

Manufacturer:

myPhone Sp. z o. o.
ul. Nowogrodzka 31
00-511 Warszawa
Polska

Customer service:

myPhone Sp. z o. o.
ul. Krakowska 119
50-428 Wrocław
Polska

Helpline: (+48 71) 71 77
400

E-mail:

pomoc@myphone.pl

Website:

www.myphone.pl

Table of contents

Table of contents	5
Package content	7
Technical Specifications	7
1. Introduction	8
Appearance of the phone	8
Turning the phone on and off	9
Installation of the SIM card, memory card and battery	10
Charging the battery	10
Battery discharge indicator	11
The first start of the phone	11
2. Basic functions	11
Access to the menu	11
Customize your phone	12
Ringtones and user profiles	12
Turning "Meeting" profile on and off	13
Call handling functions	14
Calling	14
Answering an incoming call	14
Messages	14
Sending SMS	14
Message display	15
Phonebook in myPhone Rumba	15
Adding a new contact	15
Search for a contact	16
Deleting contacts	16
3. Advanced functions	17
Calling a contact from the phonebook	17
Missed calls	17
SOS	17

Speakerphone mode	18
Speed dial.....	18
Favourite numbers	18
Photo contacts.....	19
Connecting your phone to the computer.....	19
International calls	20
4. Other phone features.....	20
Time and date settings	20
Menu language settings	20
Display settings	20
Call settings	21
Configuration of the alarm / alarms.....	22
Torch.....	22
Use of calculator	22
Factory settings.....	22
Call log.....	22
Audio player.....	23
FM radio.....	24
Calendar	24
Bluetooth.....	25
Pairing bluetooth devices.....	26
Send files via Bluetooth.	26
Camera	27
Taking photos ..	Błąd! Nie zdefiniowano zakładki.
Phone icons	27
Troubleshooting.....	27
Proper use of the battery.....	29
Device maintenance	29
Safety information.....	30
Road safety	30
Surroundings security	31

Technological criteria	31
Information on certificates (SAR)	32
Correct disposal of electrical and electronic equipment	32
Correct disposal of used batteries	34
Declaration of conformity with European Union	34

Package content

Before you start using your phone, make sure all of the following items are included in the box:

- **MyPhone Rumba** device,
- Li-Ion 800 mAh battery,
- Charger,
- Cradle charger,
- Manual,
- Warranty card.

If any of the above items is missing or damaged, please contact your dealer.

There is a sticker containing the IMEI and serial number on the packaging of **MyPhone Rumba** set. Therefore, it is recommended to keep the packaging in case of any complaints. Keep the container out of reach of children.

Technical Specifications

SIM GSM 900/1800 MHz;
Clear, colour 2,4" display;
Audio player;

FM Radio;

Torch;

Bluetooth;

Camera;

MicroSD memory card reader (up to 16 GB);

Battery: Li-ion 800 mAh 3,7 V 

Charger input parameters: 100-240 V~ 50/60 Hz 0,2 A

Charger output parameters: 5 V  0,5 A

Dimensions of the phone: 103,3x 53 x 20 mm

Phone weight : 91,5 g

1.Introduction

Appearance of the phone.



1. Speaker
2. Display
3. Rear speaker
(buzzer)
4. **<SOS>** key
5. Flap sliding
6. Flash light
7. **<M1>**, **<M2>**, **<M3>**
buttons
8. Camera lens
9. **<Menu>** button
10. **<Contacts>**
Button
11. Additional display
12. Headphone socket
13. **<Green handset>**
button
14. Torch On/Off
15. **<Red handset>**
button
16. Navigation buttons
<Up>, **<Down>**
17. Volume button
18. Phone keypad
19. Docking station
20. **<*>** Camera ON
button
21. **<#>** switching
sound profiles
22. Microphone
23. MicroUSB socket
24. Docking station
sockets

Turning the phone on and off

To turn the phone on and off press and hold the **<red handset>** button. Directly after turning the phone on you will see the code request, (in form of “****”) enter the code and press **<OK>**.

Installation of the SIM card, memory card and battery

If the phone is on – turn it off. Take off the cover by pulling the flap with your finger, starting at the bulge (5)

Take out the battery.

Insert SIM card into the slot, as it is in the picture inside of the phone. Insert memory card. MicroSD memory card should be placed with its gold contacts facing down, the way in which the slot is embossed, and close the locking tab. The maximum memory card supported capacity is **16 GB**. Insert the battery - the battery should be placed in such a way that the three gold contacts touch the triple connector in the phone. Replace the battery cover by sliding it gently into place.

Charging the battery

Connect the USB cable to the appropriate charger socket. Then plug the microUSB cable to the phone microUSB socket and plug the charger into the power outlet. You can also plug the microUSB cable to the microUSB cradle charger and the phone placed in it so that the connectors (24) in phone contact with the connectors in the base.

***Attention:** *Improper connection of the charger can cause serious damage to the phone. Damages caused by an improper use of the phone are not covered by the warranty.*

While charging, a static icon of the battery state located in upper right corner of the screen, will be animated . When charging is complete unplug the charger from the power outlet. Unplug the cable from the socket on the phone.

Battery discharge indicator

When the battery gets discharged, a message of the need to charge will be displayed. Battery icon will be "empty" . If the charge level is too low, the phone will turn off automatically. To use the phone, one has to charge the battery.

The first start of the phone

During the first start of the phone one has to choose the language in which the menu will be displayed. Choose your mother tongue or any other language you wish to use the phone in. Then select current date and time. To save changes press **<OK>**.

2. Basic functions

Access to the menu

To gain access to the phone menu one should press **<Menu>** button placed beneath **<Red handset>** button (starting from the main phone screen). Using navigation buttons **<Up>** and **<Down>** select the chosen menu item. Press **<Menu>** / **<OK>** button, to confirm your choice and enter chosen menu item or

press **<Back>** button to return to the previous menu/main phone desktop.

Customize your phone

MyPhone Rumba can be customized to your needs. This allows its use to be more enjoyable and easier.

Ringtones and user profiles

To set sound profile of the phone one has to enter **[Profiles]** option, placed in **[Menu] → [Settings] → [Profiles]**.

Select sound profile **[Options] → [Activate]**, to activate chosen profile or **[Options] → [Customize] → <Select>**, to adjust the profile to your preferences.

Editing sound profile options:

- **[Alert type]** – press **[Options] → [Change] → <Select>** and choose the type of the alarm (ring only, vibration only, and thereof combinations). Confirm with **<OK>** button.
- **[Ring type]** – press **[Options] → [Change] → <Select>** and choose ring type (repeat, beep once). Confirm with **<OK>** button.
- **[Ringtone]** – press **[Options] → [Change] → <Select>** and choose ringtone type. Confirm with **<OK>** button.
- **[Ringtone volume]** – press **[Options] → [Change] → <Select>** and choose volume level of the ringtone using volume buttons **<17>**. Confirm with **<OK>** button.

- **[Message]** – press **[Options]** → **[Change]** → **<Select>** and choose message tone (tone 1, tone 2 etc.) Confirm with **<OK>** button.
- **[Message volume]** – press **[Options]** → **[Change]** → **<Select>** and choose volume of messages ring using volume buttons **<17>**. Confirm with **<OK>** button.
- **[Keypad]** – press **[Options]** → **[Change]** → **<Select>** and choose keypad mode – Silent, Click, Tone, Human voice tone. Confirm with **<OK>** button.
- **[Keytone volume]** – press **[Options]** → **[Change]** → **<Select>** and choose keytone volume using volume buttons **<17>**. Confirm with **<OK>** button.
- **[Cover open]** – press **[Options]** → **[Change]** → **<Select>** and choose the tone to be used while opening the flip (silent, tone 1, tone 2). Confirm with **<OK>** button.
- **[Cover close]** – press **[Options]** → **[Change]** → **<Select>** and choose the tone to be used while closing the flip (silent, tone 1, tone 2). Confirm with **<OK>** button.
- **[System alert]** – press **[Options]** → **[Change]** → **<Select>** and choose **On** or **Off**. Confirm with **<OK>** button.

Turning "Meeting" profile on and off.

To change sound profiles between "Meeting" and "General" (starting from the main phone screen) use **<#>** button. Press it and hold for about 2 seconds until „Meeting mode activated" announcement is displayed.

Press and hold **<#>** button again to get back to general sound profile - „General mode activated” announcement is displayed.

Call handling functions

Calling

Enter the number to the main screen using the numeric keypad. We recommend that you enter the area code prior to the telephone number. Press **<Green handset>**, to start the call. Press **<Red handset>**, to finish the call.

Answering an incoming call

An incoming call is answered by opening the phone cover (flip). If the phone is open press **<Green handset>** or press **[Options] → [Answer]**.

If the cover (flip) is closed the call is rejected by pressing volume buttons (volume down). If the phone cover (flip) is closed press **<Red handset>**. The same button also ends the call.

Messages

Sending SMS

Enter: **[Menu] → [Messaging] → [Write message]**.

Type in the message using the keypad. Sings are typed in letter by letter. **<#>** button is used to change the input method. The following are possible

- **Abc**– The first letter capital, the rest lower case.
- **abc** – Only lower case letters,
- **ABC** – Only uppercase letters,

- **Numeric** – Only digits,
- **Insert symbol** – to insert a symbol.

Also, to insert a special character i.e. period, comma, dash, etc., press **<*>** and choose from the list, or press the **<1>** a number of times (in a mode other than "Numeric"). To enter a space between the words press **<0>** button. To enter the letter "b" one should press **<2>** button twice. To enter the letter "d" one should press **<3>** button once etc. When typing the message is done one should press **[Options]** button and choose an option **[Send to]** and **[Enter number]** or choose a number from the Phonebook and confirm with **<OK>**. Subsequently select: **[Options]** → **[Send]**, to send the message.

Message display

Enter: **[Menu]** → **[Messages]** → **[Inbox]**, choose a message from the list and select **[Options]** → **[View]** → **<Select>**, to see the message itself.

Phonebook in myPhone Rumba

Adding a new contact

To add a contact, enter: **[Menu]** → **[Phonebook]** → **[Add new contact]** → **[Options]** → **<Select>** → **[To SIM]** or **[To phone]**. Insert the contact information by choosing the name or number by **<up>** or **<down>** buttons, then choose **[Options]** → **[Save]** to save or **[Cancel]**, to abort. After entering the phone number / name, press **<OK>**. Select **<Save>**, to save the contact. If one wants to save the contact in phone

memory it is possible to add a contact picture/photo and a ringtone, beside from the name and number.

Search for a contact

To search contact enter : **[Menu]** → **[Phonebook]**.

Enter the first letter of the contact and a full list of contacts starting with given letter will appear on screen. To search for a specific contact use **<up>** or **<down>** buttons. After searching and selecting a contact, select **[Options]** and a list of available options will be displayed:

- **[View]** – to see the contact
- **[Add to Favourite Numbers]** – to add to favourite numbers
- **[Send text message]** – to send a text message
- **[Call]** – to call given number
- **[Edit]** – to edit given contact
- **[Delete]** – to delete given contact
- **[Copy]** – to copy the contact to SIM memory or to Phone memory
- **[Phonebook settings]** – It allows you to set speed dial for 8 keys from 2 to 9, to preview memory status or add fixed dial.

Deleting contacts

To delete a single contact enter: **[Menu]** → **[Phonebook]** → search the contact to delete → **[Options]** → **[Delete]** and confirm with **<Yes>**.

3. Advanced functions

Calling a contact from the phonebook.

To call a number saved in submenu **[Phonebook]** one should enter **[Menu]** → **[Phonebook]** starting from the main phone screen. Search for the contact by entering its first letter, then select it and make a call by pressing the **<Green handset>**.

Missed calls

Missed calls are displayed on the main phone screen. An appropriate message and an icon on the display will inform you about a missed call. To check who called press **[View]** when the message is displayed on screen. Another solution is to use the **[Call centre]**. To select it, go to **[Menu]** → **[Call Centre]** → **[Call History]** → **[Missed calls]** → select the connection you want to check → **[Options]** → **[View]**. To call back, select the missed call from the list, then press **<Green handset>** to make a call.

SOS

The phone has a built-in SOS function which allows the user (in case of emergency) to trigger an alarm and notify the person in the family or a doctor about the accident. To use that option one has to enter **[Menu]** → **[SOS]**. There you can activate the button at the back of the phone **[Settings]**, enable or disable SOS ringtone **[SOS alarm ring]**, enter the number to which notification is sent **[SOS number]**, enable or disable the notification SMS **[SOS SMS]**, enter the message that is to be sent in case of emergency **[SOS content]**.

When all options are set and SOS button is activated, a sound alarm will set off, an SOS message will be sent to chosen SOS numbers. Then the phone will attempt to call SOS numbers that were set earlier up until the connection is established. The alert can be turned off by pressing **<Back>**.

Speakerphone mode

During the call, press **[H-free]** to activate the speakerphone mode.

Speed dial

Enter **[Menu]** → **[Phonebook]** → **[Options]** → **[Phonebook settings]** → **[Speed dial]**. You can set the **[Status]** of this feature - whether it is active or not. You can assign contacts to keys from 2 to 9. To do this, select and activate it. Enter **[Set numbers]** and a list will appear - on the left side of the display are situated digits which correspond with keyboard buttons. Choose one of them, press **<Edit>** and choose a contact from the list. After setting the numbers, press **<Red handset>** to return to the main screen of the phone. To use speed dialling press and hold for about 3 second a programmed keypad button.

Favourite numbers

You can assign 3 numbers to **M1/M2/M3** buttons by entering **[Menu]** → **[Settings]** → **[Favourite numbers]**. Each button can have assigned one number, name and a picture/photo. Confirm your choice by pressing **[Save]**. Repeat this steps for

remaining buttons. After setting the numbers, press **<Red handset>** to return to the main screen of the phone. To call a favourite number press lightly **M1/M2/M3** button.

Photo contacts

The phone offers a possibility to use 8 photo contacts.. Enter **[Menu]** → **[Photo Contacts]** → **<OK>**. Then choose a position between 2 and 8 and choose **<Edit>**. Enter the Username, Number and Caller picture, In general, the Photo Contacts menu can be entered by pressing **<Down>** button, starting from the main phone screen.

Connecting your phone to the computer

MyPhone Rumba can be plugged to the PC computer using USB cable. This allows you to view and exchange data between your computer and your phone, when a microSD card is installed. To do this, you must:

1. Connect the microUSB connector to your phone, then connect the USB connector to a USB port on your computer.
2. An information about USB connection should be displayed on your phone screen.
3. Choose **[Mass storage]** from the displayed list.
4. The phone is now connected to the computer. The contents of the phone memory can be viewed using Windows Explorer.

International calls

Starting from the main screen press and hold **<0>** (zero) for about a second, until “+” will appear. Enter the full phone number of the recipient (the country code and the telephone number), and then press **<Green handset>** to make a call.

4. Other phone features

Time and date settings

To set time and date, one should enter: **[Menu] → [Settings] → [Phone settings] → [Time and date]** and choose from the list:

[Set home city] – to determine the time zone for given city.

[Set time/date] – to change time or date

[Set format] – to change the display format to 12 hours or 24 hours and day/month/year order display.

[Update with time zone] – turn on automatic synchronization with time zone.

Menu language settings

To set or change the language of menu enter: **[Menu] → [Settings] → [Phone settings] → [Language]** and select your preferred language from the list.

Display settings

Enter **[Menu] → [Setting] → [Phone settings] → [Misc. settings] → [LCD backlight]**, where the brightness can be set using **<M1>** and **<M3>** buttons.

Enter **[Menu]** → **[Settings]** → **[Phone settings]** → **[Display]** to set parameters like:

- **[Wallpaper]** → **[System]**, if you want to choose from system wallpapers or → **[User defined]** if you want to add your own wallpaper from microSD memory card and choose any picture from the list. To see a preview of given picture select **[OK]**. To select the chosen picture as a wallpaper press: **[OK]** → **[OK]**.
- **[Power on display]** → **[System]**, if you want to see system animations or → **[User defined]** if you want to add your own animation from microSD memory card. To select the chosen animation press: **[OK]** → **[OK]**.
- **[Power off display]** → **[System]**, if you want to see system animations or → **[User defined]** if you want to add your own animation from microSD memory card. To select the chosen animation press: **[OK]** → **[OK]**.
- **[Show date and time]**, if you want to set time and date display on the main phone screen.

Call settings

Enter **[Menu]** → **[Call centre]** → **[Call settings]**. There are available call settings like waiting call, diverting and barring the calls, as well as switching the line. Additionally the submenu **[Advanced settings]** contains functions of auto redial, call time reminder and possible answer modes (Answering by opening the phone flip, automatic answering while on headset, and answering with any key).

Configuration of the alarm / alarms

Enter **[Menu]** → **[Alarm]**. Choose any available alarm and press **[Edit]**, to change alarm settings: status (on/off), time of the alarm (using numerical keypad), and also the repeat mode (once, every day, custom). Additionally, you can choose an alarm tone. Save the changes: **[Options]** → **<Save>**.

Torch

The torch can be switched on by pressing **(14)** button. Press the same button again to switch it off.

Use of calculator

Enter **[Tools]** → **[Calculator]**. Basic arithmetic operations can be performed using the numeric keypad (typing numbers, digits). Actions can be set using navigation keys **<Up>** - addition, **<Down>** - subtraction, **<M1>** - multiplication and **<M3>** - division. To see the result choose **[M2]**.

Factory settings

To get back to factory settings enter **[Menu]** → **[Settings]** → **[Restore settings]**, input the phone password and confirm by pressing **<OK>**. Password required to restore the factory settings is **1122**.

Call log

Enter **[Menu]** → **[Call centre]** → **[Call history]**. There you can see the entire call log – what calls were dialled, received etc. The following entries are placed in submenu:

- Missed calls,
- Dialed calls,
- Received calls,
- All calls,
- Delete call logs.

To enter any of the above options choose it from the list and press **<OK>**.

Audio player

To turn audio player on enter **[Menu]** → **[Multimedia]** → **[Audio player]**. This application allows you to play music files in MP3, AMR, WAV formats. To play a music file you have to add it to the playlist. If music files are saved on memory card, choose **[Options]** → **[Settings]** and choose with **<M1>** and **<M3>** buttons either the phone memory or memory card. Then choose **<Save>** and then **[Options]** → **[Add]** to choose the memory card or any file with music and enter **[Options]** → **[Add]**. Files will be added to the playlist. Get back to the audio player. To enjoy the audio player use the following buttons:

Button	Function		
<Up>	Repeat	<M1>	Previous track
<Down>	Shuffle	<M2>	Play/pause
<M3>	Next track	<*>	Quieter
		<#>	Louder

The file list is available when you enter **[List]**.

FM radio

To use a built-in FM radio enter **[Menu]** → **[Multimedia]** → **[FM Radio]**.

Enter: **[Options]** → **[Auto search]**, to search for available radio station. All found radio stations will be saved and available in the **[Channel List]** in options menu. Radio control is done using the following keys:

Button	Function
<Up>	0.1 MHz up
<Down>	0.1 MHz down
<M3>	Next channel

<M1>	Previous channel
<M2>	Play/Turn off
<*>	Quieter
<#>	Louder

Calendar

MyPhone Rumba phone has a calendar available. You can view the current date or check various dates and days.

To see the calendar enter: **[Menu]** → **[Tools]** → **[Calendar]**. You can add events, to which in turn you can add „remind” option. To move between given dates in the calendar use <Up>, <Down>, <M1> and <M3> (left, right) buttons. Choose the date and press <Options>, then enter **[Add event]** → <Select>. A screen will appear:

- **[Subject]** – Event title,
- **[Start]** – date and the event start time,
- **[End]** – the date and the event end time,

- **[Type]** – meeting type (reminder, meeting, course, date, call, anniversary, birthday).
- **[Alarm]** – at what time should the alarm go off (5 min. before, 10 min. before etc.).
- **[Repeat]** – How often should the reminder go off (once, every day, custom, weekly, monthly, yearly).
- **[Location]** – where the event is scheduled.
- **[Details]** – detailed description of the event.

The reminder will appear on screen at the set time and date.

Bluetooth

Bluetooth function is available on the phone. It is used to wirelessly connect and files exchange with other devices equipped with Bluetooth. To use Bluetooth function enter: **[Menu]** → **[Settings]** → **[Bluetooth]**. Options available:

- **[Power]** – by pressing **<On>** you will turn on the function and by pressing **<Off>** you will turn it off. When the Bluetooth function is on you will see an icon on the upper status bar on screen.
- **[Visibility]** – Enabling this feature allows the visibility of your phone on the list of available devices of other phones, tablets and computers equipped with Bluetooth.
- **[My device]** – An option **[Search Device]** is situated here. You can view the list of available Bluetooth devices in range. This feature allows you to connect to available devices from the list.
- **[Search audio devices]** – You can search for audio devices.

- **[My name]** – It allows you to enter the name under which the phone will be visible when you connect to other Bluetooth devices. Default name is "myPhone_Rumba".
- **[Advanced]** – Options such as possibility to choose the audio track, the memory (where the files downloaded by Bluetooth are stored), module address are situated here.

Pairing Bluetooth devices.

To connect to a Bluetooth device choose it from a list of available devices by entering: **[Menu]** → **[Settings]** → **[Bluetooth]** → **[My device]** select **[Search new device]**, to search for all available devices. Pressing **<Cancel>** will stop the search. After pressing **<Cancel>** a list will be displayed and **<Pair>** option will appear. Press **<Pair>** to pair chosen device. Both devices should display a request for password compliance. Press **[OK]** to pair devices. Sometimes a password is required – universal is 0000 (four zeros) or 1234.

Send files via Bluetooth.

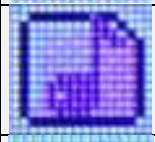 
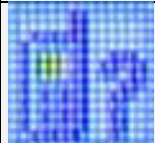 
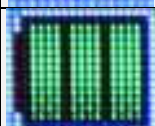 
To send files situated on the memory card to a paired (connected) device enter **[Menu]** → **[File manager]** → **[Memory Card]** or **[Phone]**, then **[Options]** → **[Open]** and choose a file you want to send. Then choose **[Options]** → **[Send]** → **[Via Bluetooth]** and search the device you wish to send the file to or add it from the list of paired devices. The file will be send

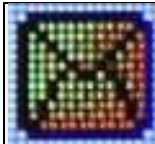 
after recipient' approval.

Camera

MyPhone Rumba device is equipped with a Camera. To take a photo one should enter: **[Menu]** → **[Multimedia]** → **[Camera]** or by pressing and holding **<*>** button. When you start the camera, place the subject you wish to photograph in the frame, and then press **<M2>** to take a photo that will be saved automatically in the phone memory or a microSD card in the "Photos" file. You can view the pictures you have taken and all others by entering: **[Menu]** → **[Multimedia]** → **[Image viewer]**.

Phone icons

	GSM network range
	"General" profile on
	"Silent" profile on
	Missed calls
	Battery charge level

	Unread SMS
	Bluetooth On
	Memory Card active
	Headphones plugged in

Troubleshooting

Message	Possible solution
Insert SIM	Make sure SIM card has been correctly installed.

Input PIN	If the SIM card is secured with the PIN code you have to enter the PIN while turning the phone on and press <OK> .
Network error	In areas where signal or reception is weak, calls may not be possible. Also receiving calls may not be possible. Move to another location and try again.
I cannot hear the caller./ The caller cannot hear me.	The mic. should be close to mouth. Check if the built in mic. hasn't been covered. If a headset is used, check if it has been properly connected. Check if the built-in speaker hasn't been covered.
Poor sound quality while on the phone.	Make sure that the built-in speaker and mic. haven't been covered
Connection cannot be established.	Check if the typed-in phone number is correct. Check if the phone number entered to the Phonebook is correct. If necessary enter the correct phone number.
No one can call me.	The phone has to be switched on and be within the GSM network range.

5. Proper phone maintenance

Proper use of the battery

Battery in this device can be powered by a charger. If the battery level is low, recharge it. To prolong battery life, let it discharge beneath 20% of the battery level and then charge it to 100%. If not used, unplug the charger from the phone. Excessive charging causes shortened battery life.

The temperature of the battery has impact on its charging cycle. Prior to the charging process, cool the battery or raise its temperature so that it is similar to the room temperature (approx. 20°C).

If the battery temperature exceeds 40°C the battery must not be charged! The device will display an appropriate message if the battery gets overheated. Use the battery only according to its intended purpose. Do not use damaged battery. The battery lifespan can be shortened, if it has been exposed to very low or very high temperatures - this causes interference to the phone, even when the battery has been properly charged. Do not throw the battery into flames! Do not throw a worn-out battery – send it or return it to an authorized recycling point!

Device maintenance

To prolong life of the device obey the following rules. Keep the phone and its accessories out of reach of children. Keep the phone in a dry place, do not expose it to moisture. Avoid exposing the phone at the high and low temperatures; it can shorten life of phone electronic

components, melt the plastic parts, and destroy the battery.

Do not try to disassemble the phone. Tampering with its structure in an unprofessional manner may cause serious damage to the phone or destroy it completely.

For cleaning use only a dry cloth. Never use any agent with a high concentration of acids or alkalis. Use only original accessories; violation of this rule may result in invalidation of the guarantee.

It is recommended that the phone has not been used at temperatures below 0 ° C / 32 ° F or higher than 40 ° C / 104 ° F.

Safety information

While using the phone, take into account the legal regulations concerning security and the safety of its surroundings.

Road safety

Apart from emergency situations, using the phone while driving should be carried out only with use of a headset or a speakerphone, which ensures safety and does not limit motor abilities of the user. If one does not own a headset and still wants to use the phone, one should pull over and stop the car.

Pay attention to the legal regulations concerning the use of mobile phone while driving. Some electronic components of the car without adequate protection can be affected by waves emitted by the phone; it is

therefore advisable to use the phone in the car only when the external antenna of the vehicle is secured. Use the services of a professional when installing the phone in the car.

Surroundings security

Familiarise yourself with legal regulations concerning the use of mobile phones. Turn off the phone in areas where its use is forbidden or when it may cause interference or danger. The use of any devices that transmit radio waves causes interference with medical devices (i.e. cardiac pacemaker), if they are not properly secured (if in doubt, consult your doctor or medical device manufacturer).

In places where there is a risk of explosion (i.e. petrol stations, chemical factories etc.), it is advisable to turn off the phone. Please refer to regulations governing the use of GSM equipment in these places.



Attention: Listening to audio player for too long or too loud can cause hearing damage.

Technological criteria

Network: GSM 2G 850/900/1800/1900 MHz

Some services may depend on your provider, the state of your local cellular network, version of the SIM card used and the way you use your phone. For more information, please contact your service provider.

Attention	Statement
The manufacturer is not responsible for any consequences caused by improper usage of the phone and not obeying the above instructions.	The software version can be upgraded without earlier notice. The representative retains the right to determine the correct interpretation of the above instructions.

Information on certificates (SAR)

Your mobile phone is a transmitter and receiver of radio waves. It is designed and manufactured according to current safety standards, so that exposure to radio waves never exceeds the limits set by the Council of European Union. Those limits establish the permitted levels of RF energy for the general population and were developed by independent scientific organizations on the basis of detailed scientific studies, including a large safety margin. Their purpose is to ensure the safety of all people, regardless of age and health. With regard to cell phones the level of exposure to radio waves is measured by the value SAR (**S**pecific **A**bsorption **R**ate). The SAR limit recommended by the Council of the European Union is 2 W / kg and refers to the averaged value for 10 grams of tissue

The highest SAR value for the phone **myPhone Rumba** equals **0,792 W/kg**.

Correct disposal of electrical and electronic

equipment



The device is marked with a crossed-out garbage bin, in accordance with the European Directive 2012/19 / EU on used electrical and electronic equipment (Waste Electrical and Electronic equipment - WEEE). Products marked with this symbol

should not be disposed of or dumped with other household waste after a period of use. The user is obliged to get rid of used electrical and electronic equipment by delivering it to designated recycling point in which dangerous waste are being recycled. Collecting this type of waste in designated locations, and the actual process of their recovery contribute to the protection of natural resources. Proper disposal of used electrical and electronic equipment is beneficial to human health and environment. To obtain information on where and how to dispose of used electrical and electronic equipment in an environmentally friendly manner user should contact their local government office, the waste collection point, or point of sale where the equipment was purchased.

Correct disposal of used batteries



According to the EU directive 2006/66/EC on the disposal of batteries, this product is marked with crossed-out garbage bin symbol. The symbol indicates that the batteries used in this product should not be disposed with normal household waste, but treated according to the legal directives and local regulations.

It is not allowed to dispose of batteries and accumulators with unsorted municipal waste. Users of batteries and accumulators must use the available collection points of these items, which allows them to return, recycle and disposal.

Within the EU, the collection and recycling of batteries and accumulators is a subject to separate procedures. To learn more about existing procedures of recycling of the batteries and accumulators please contact your local office or an institution for waste disposal or landfill.

Declaration of conformity with European Union

CE 0700 MyPhone Sp. z o.o. ensures and declares that the product complies with all relevant provisions of the European Directive 1999/5/EC.