

 
This guide explains how to set up your phone and gives a quick overview of the main functions of the phone.

* Depending on the software installed or your service provider or country, some of the descriptions in this guide may not match your phone exactly.
* Depending on your country, your phone and accessories may appear different from the illustrations in this guide.


Printed in Korea
World Wide Web Code No.: GH68-10873A
http://www.samsungmobile.com English(EU). 05/2006. Rev.1.0

Installing the SIM card and battery

1. Remove the battery cover and insert the SIM card.

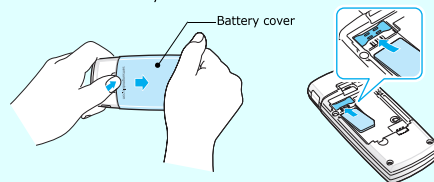


 2. Install the battery and reattach the cover.

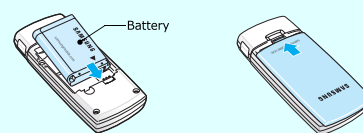

Charging the battery

 1. Plug the supplied travel adapter.

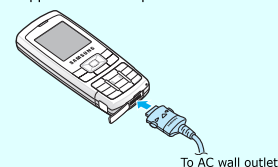


2. When charging is finished, unplug the adapter.



Note: Do not remove the battery from the phone without unplugging the adapter first. Otherwise, the phone may be damaged.

 Phone layout and key functions

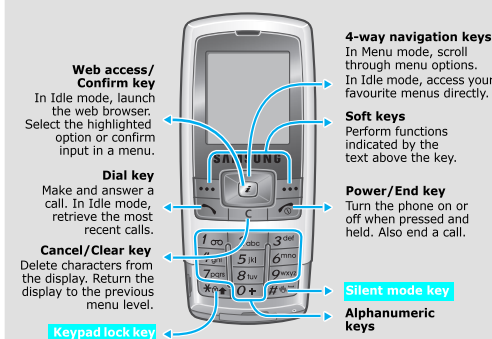

Silent mode

 
Press and hold **⏏** in Idle mode to disable all sounds on the phone. To exit, press and hold this key again.

Keypad lock mode

Lock the keypad, when pressed and held **⏏** in Idle mode, to ignore accidental key pressing. To unlock, press the **Unlock** soft key and then this key.

Display

Your phone is in Idle mode when you are not on a call or using a menu. You must be in Idle mode to dial a phone number.

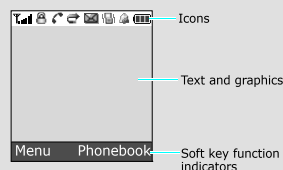


Your phone displays the following status indicators on the top of the screen:

Icon	Description
	Received signal strength
	Call in progress
	Out of your service area; you cannot make or receive calls.
	Roaming network
	Silent mode or the call ringer set to vibrate
	Key lock mode
	Call diverting feature active
	New SMS message
	New MMS message
	New push message
	New voicemail
	Alarm set
	Battery power level

Using the menus

In Idle mode, press the **Menu** soft key to enter the main menu.

 Labels at the bottom corners of the display show the current soft key functions. Press the left soft key (**⏏**) or right soft key (**⏏**) to perform the function indicated.

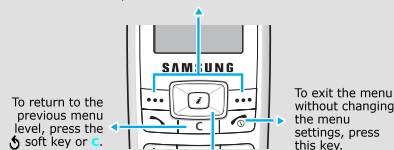

Use the 4-way navigation keys (**⏏**, **⏏**, **⏏**, **⏏**) as shortcuts to access your favourite menus.

1. In Idle mode, press the **Menu** soft key.
2. Select **Phone settings** → **Short cut**.
3. Select a key.
4. Select a menu to be assigned to the key.

To select or modify a menu or feature:

1. In Idle mode, press the **Menu** soft key.
2. Press the Navigation keys to reach a desired menu and then press the **Select** soft key or **[Z]**.
3. If the menu contains any submenus, locate the one you want by pressing the Navigation keys. Press the **Select** soft key or **[Z]** to enter the submenu.
If the selected menu contains additional submenus, repeat this step.
4. Press the Navigation keys to find the setting of your choice.
5. Press the **Select** soft key or **[Z]** to confirm your chosen setting.

Shortcut numbers

You can quickly access the menu you want by using shortcut numbers. The shortcut number displays in front of the menu name in Menu mode.

Switching on or off the phone

1. Press and hold **⏏** for more than two seconds to switch on the phone.
2. To switch off the phone, press and hold **⏏** for more than two seconds.

Changing the display language

1. In Idle mode, press the **Menu** soft key.
2. Select **Phone settings** → **Language**.
3. Select a language.

Making a call

1. In Idle mode, enter the area code and phone number, and press **[Call]**.
2. To end the call, press **[End]**.

Answering a call

1. When the phone rings, press **[Answer]** to answer a call.
2. To end the call, press **[End]**.

Menu map

1. SIM AT *

2. Call records

- 2.1 Missed calls
- 2.2 Received calls
- 2.3 Dialed calls
- 2.4 Delete all
- 2.5 Call time
- 2.6 Call cost *

3. Network services

- 3.1 Call diverting
- 3.2 Call barring
- 3.3 Call waiting
- 3.4 Network selection
- 3.5 Caller ID
- 3.6 Closed user group

4. Sound settings

- 4.1 Ring tone
- 4.2 Ring volume
- 4.3 Alert type
- 4.4 Keypad tone
- 4.5 Keypad volume
- 4.6 Message tone
- 4.7 Alert on call
- 4.8 Extra tones

5. Messages

- 5.1 Text messages
- 5.2 Multimedia messages
- 5.3 Push messages

6. Funbox

- 6.1 WAP browser
- 6.2 Games
- 6.3 Sounds
- 6.4 Images
- 6.5 Delete all
- 6.6 Memory status

7. Organizer

- 7.1 Alarm
- 7.2 Calendar
- 7.3 Time & Date
- 7.4 Calculator
- 7.5 To do list
- 7.6 Voice memo
- 7.7 Currency exchange

8. Phonebook

- 8.1 Search
- 8.2 New entry
- 8.3 Group search
- 8.4 Edit group
- 8.5 Speed dial
- 8.6 Delete all
- 8.7 Memory status
- 8.8 SDN *

9. Phone settings

- 9.1 Display settings
- 9.2 Greeting message
- 9.3 Own number
- 9.4 Language
- 9.5 Security
- 9.6 Extra settings
- 9.7 Short cut
- 9.8 Reset settings

* Shows only if supported by your SIM card.

✧ **Entering text**

Changing the text input mode

In a text input field, press the right soft key until the input mode indicator you want appears:

- : T9 mode
- : ABC mode
- : Number mode
- None: Symbol mode

T9 mode

1. Press **2** to **9** to start entering a word. Press each key once for one letter.
Example: To enter "Hello" in T9 mode, press **4**, **3**, **5**, **5**, and **6**.
T9 predicts the word that you are typing, and it may change with each key that you press.
2. Enter the whole word before editing or deleting characters.
3. When the word displays correctly, go to step 4. Otherwise, press **0** to display alternative word choices for the keys that you have pressed.
4. Press **#** to insert a space and enter the next word.

Feature	Description	Select
Select a keypad tone and volume	Select the sound that will occur when a key is pressed, or volume level.	Menu > Sound settings > Keypad tone or Keypad volume
Message tone	Select the alert ringtone for incoming SMS, MMS, and broadcast messages, or set how often you are informed of a new message.	Menu > Sound settings > Message tone
Alert on call	Set the phone to alert you to an incoming call or message during a call.	Menu >Sound settings > Alert on call
Extra tones	Set additional tones for the phone.	Menu > Sound settings > Extra tones
Read SMS or MMS messages	Read received, sent, or saved messages.	Menu > Messages > Text messages or Multimedia messages > Inbox, Outbox, or Draft
Send SMS or MMS messages	Create and send messages to other mobile phones.	Menu > Messages > Text messages or Multimedia messages > Write new
Message templates	Preset templates of frequently used messages or emoticons.	Menu > Messages > Text messages or Multimedia messages > Templates or Emoticon templates

Feature	Description	Select
Display settings	Change settings for the display and backlight.	Menu > Phone settings > Display settings
Greeting message	Enter the greeting to be displayed when the phone is switched on.	Menu > Phone settings > Greeting message
Check your own phone numbers	Check your phone numbers or assign a name to them.	Menu > Phone settings > Own number
Display language	Select a language to be used for the display text.	Menu > Phone settings > Language
Security	Protect the phone against unauthorised use.	Menu > Phone settings > Security
Extra settings	Turn the automatic redialling or answering feature on or off.	Menu > Phone settings > Extra settings
Menu shortcuts	Set the Navigation keys as shortcuts to access your favourite menus directly.	Menu > Phone settings > Short cut
Reset the phone	Reset the phone to the factory default settings.	Menu > Phone settings > Reset settings

ABC mode

Press the keys labelled with the character you want:
- once for the first character
- twice for the second character
- and so on.

For example, press **2** three times to enter "C" and press **5** two times to enter "K."

Number mode

Press the keys corresponding to the digits you want.

Symbol mode

Press the number keys corresponding to the symbol you want and press the **OK** soft key. You can press **Up** or **Down** to display more symbols.

Tips for entering text

- To move the cursor, press the Navigation keys.
- To delete characters one by one, press **C**. To clear the display, press and hold **C**.
- To insert a space between characters, press **#**.
- To change case in T9 mode or ABC mode, press *****.
- To enter punctuation marks in T9 mode or ABC mode, press **1**.

Feature	Description	Select
Messaging options	Set options for using messaging services.	Menu > Messages > Text messages or Multimedia messages > Settings or Setup
Delete messages	Delete messages in each message box.	Menu > Messages > Text messages or Multimedia messages > Delete all
Message memory status	Check memory information for messages.	Menu > Messages > Text messages or Multimedia messages > Memory status
Voicemails	Access your voicemail server and listen to messages on the network.	Menu > Messages > Text messages > Voice mail
Broadcast messages	Change settings for the service and access broadcast messages.	Menu > Messages > Text messages > Broadcast
MMS profile	Select or configure a connection profile to be used for MMS.	Menu > Messages > Multimedia messages > MMS profile
Push messages	Change settings for the service, and access or delete push messages.	Menu > Messages > Push messages
Web browser	Launch the web browser.	Menu > Funbox > WAP browser

✧ **Important safety precautions**

Read these guidelines before using your wireless phone. Failure to comply with them may be dangerous or illegal.

Drive safely at all times
Do not use a hand-held phone while driving; park the vehicle first.

Switching off when refueling
Do not use the phone at a refueling point (service station) or near fuels or chemicals.

Switching off in an aircraft
Wireless phones can cause interference. Using them in an aircraft is both illegal and dangerous.

Switching off near all medical equipment
Hospitals and health care facilities may be using equipment that could be sensitive to external RF energy. Follow any regulations or rules in force.

Interference
All wireless phones may be subject to interference, which could affect their performance.

Special regulations
Follow any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it.

Water resistance
Your phone is not water-resistant. Keep it dry.

Sensible use
Use only in the normal position (held to the ear). Avoid unnecessary contact with the antenna when the phone is switched on.

Emergency calls
Key in the emergency number for your present location, then press . Do not end the call until given permission to do so.

Small children and your phone
Keep the phone and all its parts including accessories out of reach of small children.

✧ **Sending an SMS message**

1. In Idle mode, press the **Menu** soft key.
2. Select **Messages** → **Text messages** → **Write new**.
3. Enter the message text.
4. Press the **Options** soft key and add items using the following options:
 - **Add objects**: add sounds, images, or animated images.
 - **Add templates**: add text templates.
 - **Add emoticon**: add emoticons.
 - **Add phonebook**: add Phonebook entries.
 - **Add bookmark**: add bookmark items.
5. Press the **Options** and select **Send only**, **Save and send**, or **Save only**.
6. If you select **Save and send** or **Save only**, select a memory location.
7. Enter a destination number and press the **OK** soft key.

Feature	Description	Select
Access media files	Access games, sound files, images in your phone's memory.	Menu > Funbox > Games, Sounds, Images
Delete all media files	Delete games, sound files, images in each media box, or all media files at once.	Menu > Funbox > Delete all
Funbox memory status	Check the amount of memory in use for game, sound and image.	Menu > Funbox > Memory status
Alarm	Set an alarm to sound at a specific time.	Menu > Organiser > Alarm
Calendar	Keep track of daily or monthly schedules.	Menu > Organiser > Calendar
Time and date	Set the current time and date manually.	Menu > Organiser > Time & Date
Calculator	Perform basic arithmetic functions.	Menu > Organiser > Calculator
Task list	Create a list of tasks and assign a deadline to each task.	Menu > Organiser > To do list
Voice memo	Record voice memos and review them.	Menu > Organiser > Voice memo
Currency converter	Do currency conversions.	Menu > Organiser > Currency exchange

Accessories and batteries

Use only Samsung-approved batteries and accessories, such as headsets and PC data cables. Use of any unauthorised accessories could damage you or your phone and may be dangerous.

CAUTION
Risk of explosion if a battery is replaced by an incorrect type.
Dispose of used batteries according to the manufacturer's instructions.

At very high volumes, prolonged listening to a headset can damage your hearing.

Qualified service

Only qualified service personnel may repair your phone.

✧ **SAR information**

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the European Union (EU) Council. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on the safety standards that were developed by independent scientific organizations through periodic and through evaluation of scientific studies.

The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless phones employs a unit of measurement known as Specific Absorption Rate (SAR). The SAR limit set by the EU Council is 2.0 W/kg. The highest SAR value for this model phone was 0.824 W/kg.

✧ **Quick feature reference**

This section provides brief explanations of features on your phone.

Feature	Description	Select
Use the SIM services	Use a variety of additional services offered by your service provider.	Menu > SIM AT
View recent calls	View the most recent calls you have dialled, received, or missed.	Menu > Call records > Missed calls, Received calls, Dialled calls
Delete recent calls	Delete the call records in each call type, or all numbers at once.	Menu > Call records > Delete all
Call time display	View the duration of recent calls you have dialled and received. Also reset the time counter.	Menu > Call records > Call time
Call cost display	View the cost of your calls.	Menu > Call records > Call cost
Network services	Access network services offered by your service provider.	Menu > Network services
Select a ringtone and volume	Select a ringtone or volume level for incoming calls.	Menu > Sound settings > Ring tone or Ring volume
Alert type	Set how you are informed of incoming calls.	Menu > Sound settings > Alert type

Feature	Description	Select
Find a contact	Search for contacts in Phonebook.	Menu > Phonebook > Search
Add a new contact	Add a new contact to Phonebook.	Menu > Phonebook > New entry
Search group	Search for Phonebook entries in caller groups.	Menu > Phonebook > Group search
Change properties of a caller group	Select a ringtone for incoming calls and messages from members of a group. Also change the group name.	Menu >Phonebook > Edit group
Speed dial	Assign speed dial numbers (2 to 9) to eight of your most frequently dialled numbers.	Menu > Phonebook > Speed dial
Delete Phonebook entries	Delete all Phonebook entries stored in the phone's memory, on the SIM card, or both.	Menu > Phonebook > Delete all
Phonebook memory status	View the total number of Phonebook entries in the phone's memory or on the SIM card.	Menu >Phonebook > Memory status
SDN (Service Dialling Numbers)	Access the list of service numbers assigned by service provider.	Menu > Phonebook > SDN

✧ **Declaration of Conformity (R&TTE)**

Product description: Portable Cellular Telephone (GSM 900/1800)

Model name: SGH-C130

Manufactured at: Samsung Electronics Co., Ltd, 94-1, Insoo-Dong, Gumi City, Kyung-Buk, Korea, 730-350*

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

Safety : EN 60950-1:2001	SAR : EN 50360:2001
EMC : EN 301 489-01 v1.4.1 (08-2002)	: EN 50361:2001
: EN 301 489-07 v1.2.1 (08-2002)	Network : EN 301 511 v9.0.2 (03-2003)

We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex[IV] of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, UK
Identification mark: 0168

The technical documentation kept at:
Samsung Electronics QA Lab.

which will be made available upon request.
(Representative in the EU)

Place and date of issue:

Samsung Electronics Euro QA Lab.
Blackbushe Business Park, Saxony Way,
Yateley, Hampshire, GU46 6GG, UK
2006.05.09

* It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your phone.

CE 0168

Yong-Sang Park / S.Manager