

Mobile Phone user manual

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.
Bluetooth QD ID : B015089

www.samsungmobile.com

Printed in Korea
Code No. : GH68-22193A
English (EU), 11/2010, Rev. 1.2



safety and usage information

Comply with the following precautions to avoid dangerous or illegal situations and ensure peak performance of your mobile phone.



Safety warnings

Keep your phone away from small children and pets

Keep your phone and all accessories out of the reach of small children or animals. Small parts may cause choking or serious injury if swallowed.

Protect your hearing



Listening to a headset at high volumes can damage your hearing. Use only the minimum volume setting necessary to hear your conversation or music.

Install mobile phones and equipment with caution

Ensure that any mobile phones or related equipment installed in your vehicle are securely mounted. Avoid placing your phone and accessories near or in an air bag deployment area. Improperly installed wireless equipment can cause serious injury when air bags inflate rapidly.

Handle and dispose of batteries and chargers with care

- Use only Samsung-approved batteries and chargers specifically designed for your phone. Incompatible batteries and chargers can cause serious injuries or damage to your phone.
- Never dispose of batteries or phones in a fire. Follow all local regulations when disposing used batteries or phones.
- Never place batteries or phones on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

Avoid interference with pacemakers

Maintain a minimum of 15 cm (6 inches) between mobile phones and pacemakers to avoid potential interference, as recommended by manufacturers and the independent research group, Wireless Technology Research. If you have any reason to suspect that your phone is interfering with a pacemaker or other medical device, turn off the phone immediately and contact the manufacturer of the pacemaker or medical device for guidance.

Turn off the phone in potentially explosive environments

Do not use your phone at refuelling points (service stations) or near fuels or chemicals. Turn off your phone whenever directed by warning signs or instructions. Your phone could cause explosions or fire in and around fuel or chemical storage and transfer areas or blasting areas. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.

Reduce the risk of repetitive motion injuries

When sending text messages or playing games on your phone, hold the phone with a relaxed grip, press the keys lightly, use special features that reduce the number of keys you have to press (such as templates and predictive text), and take frequent breaks.

CE0168



Safety precautions

Drive safely at all times

Avoid using your phone while driving and obey all regulations that restrict the use of mobile phones while driving. Use hands-free accessories to increase your safety when possible.

Follow all safety warnings and regulations

Comply with any regulations that restrict the use of a mobile phone in a certain area.

Use only Samsung-approved accessories

Using incompatible accessories may damage your phone or cause injury.

Turn off the phone near medical equipment

Your phone can interfere with medical equipment in hospitals or health care facilities. Follow all regulations, posted warnings, and directions from medical personnel.

Turn off the phone or disable the wireless functions when in an aircraft

Your phone can cause interference with aircraft equipment. Follow all airline regulations and turn off your phone or switch to a mode that disables the wireless functions when directed by airline personnel.

Specific Absorption Rate (SAR) certification information

Your phone conforms to European Union (EU) standards that limit human exposure to radio frequency (RF) energy emitted by radio and telecommunications equipment. These standards prevent the sale of mobile phones that exceed a maximum exposure level (known as the Specific Absorption Rate, or SAR) of 2.0 watts per kilogram of body tissue.

During testing, the maximum SAR recorded for this model was 0.586 watts per kilogram. In normal use, the actual SAR is likely to be much lower, as the phone has been designed to emit only the RF energy necessary to transmit a signal to the nearest base station. By automatically emitting lower levels when possible, your phone reduces your overall exposure to RF energy. The Declaration of Conformity of this manual demonstrates your phones compliance with the European Radio & Terminal Telecommunications Equipment (R&TTE) directive. For more information about the SAR and related EU standards, visit the Samsung mobile phone website.

Protect batteries and chargers from damage

- Avoid exposing batteries to very cold or very hot temperatures (below 0° C/32° F or above 45° C/113° F). Extreme temperatures can reduce the charging capacity and life of your batteries.
- Prevent batteries from contacting metal objects, as this can create a connection between the + and – terminals of your batteries and lead to temporary or permanent battery damage.
- Never use a damaged charger or battery.

Handle your phone carefully and sensibly

- Do not allow your phone to get wet—liquids can cause serious damage. Do not handle your phone with wet hands. Water damage to your phone can void your manufacturer's warranty.
- Avoid using or storing your phone in dusty, dirty areas to prevent damage to moving parts.
- Your phone is a complex electronic device—protect it from impacts and rough handling to avoid serious damage.
- Do not paint your phone, as paint can clog moving parts and prevent proper operation.
- Avoid using the phone's camera flash or light close to the eyes of children or animals.
- Your phone and memory cards may be damaged by exposure to magnetic fields. Do not use carrying cases or accessories with magnetic closures or allow your phone to come in contact with magnetic fields for extended periods of time.

Correct disposal of this product

(Waste Electrical & Electronic Equipment)



(Applicable in the European Union and other European countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

Avoid interference with other electronic devices

 
Your phone emits radio frequency (RF) signals that may interfere with unshielded or improperly shielded electronic equipment, such as pacemakers, hearing aids, medical devices, and other electronic devices in homes or vehicles. Consult the manufacturers of your electronic devices to solve any interference problems you experience.



Important usage information

Use your phone in the normal position

Avoid contact with your phone's internal antenna.



Allow only qualified personnel to service your phone

Allowing unqualified personnel to service your phone may result in damage to your phone and will void your warranty.

Correct disposal of batteries in this product

(Applicable in the European Union and other European countries with separate battery return systems.)



This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

SAMSUNG
ELECTRONICS



Declaration of Conformity (R&TTE)

We, **Samsung Electronics**
declare under our sole responsibility that the product

GSM Mobile Phone : C3050

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

SAFETY	EN 60950-1 : 2006+A11:2009 EN 50332-1 : 2000
EMC	EN 301 489-01 V1.6.1 (09-2005) EN 301 489-07 V1.3.1 (11-2005) EN 301 489-17 V2.1.1 (05-2009)
SAR	EN 50360 : 2001 EN 62209-1 : 2006
RADIO	EN 301 511 V9.0.2 (03-2003) EN 300 328 V1.7.1 (10-2006)

We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex(V) of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

BABT, Forsyth House,
Churchfield Road,
Watton-on-Thames, Surrey,
KT12 2TD, UK*
Identification mark: 0168

CE0168

The technical documentation kept at :

Samsung Electronics QA Lab.

which will be made available upon request.
(Representative in the EU)

Samsung Electronics Euro QA Lab.
Blackbushe Business Park, Saxony Way,
Yateley, Hampshire, GU46 6GG, UK*

2010.11.16
(place and date of issue)

Joong-Hoon Choi / Lab Manager
(name and signature of authorised person)

* It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your product.

1
4-way navigation key
In Idle mode, access user-defined menus (depending on your service provider, pre-defined menus may differ); In Menu mode, scroll through menu options

2
Volume key
In Idle mode, adjust the key tone volume; Send an SOS message
► Activate and send an SOS message

3
Dial key
Make or answer a call; In Idle mode, retrieve recently dialed, missed, or received numbers

4
Voice mail service key
In Idle mode, access voice mails (press and hold)

5
Pause key
Enter a dial pause (press and hold)

6
Softkeys
Perform actions indicated at the bottom of the display

7
Confirm key
In Idle mode, access Menu mode; In Menu mode, select the highlighted menu option or confirm an input

8
Power/Menu exit key
Turn the phone on and off (press and hold); End a call; In Menu mode, cancel input and return to Idle mode

9
Alphanumeric keys

10
Silent profile key
In Idle mode, activate or deactivate the silent profile (press and hold)

Your phone displays the following status indicators on the top of the screen:

Icon	Description
	Signal strength
	GPRS network connected
	EDGE network connected
	Call in progress
	Call diverting active
	SOS message feature activated
	Alarm activated
	Connecting to secured web page
	Synchronised with PC
	Roaming (outside of normal service area)

Icon	Description
	Bluetooth activated
	New message
	New voice mail message
	Music playback in progress
	FM radio on
	Memory card inserted
	Normal profile activated
	Silent profile activated
	Battery power level
	Current time

Your phone accepts microSD™ memory cards up to 8 GB (depending on memory card manufacturer and type).

	Note: notes, usage tips, or additional information
→	Followed by: the order of options or menus you must select to perform a step; for example: In Menu mode, select Messages → Create message (represents Messages , followed by Create message)
[]	Square brackets: phone keys; for example: [] (represents the Power/Menu exit key)
< >	Angled brackets: softkeys that control different functions at each screen; for example: <OK> (represents the OK softkey)

1. Slide open the phone.
2. To turn your phone on, press and hold .
3. To turn your phone off, press and hold .

1. In Idle mode, press the Confirm key to access Menu mode.
2. Use the navigation key to scroll to a menu or option.
3. Press <Yes>, <Save>, or the Confirm key to confirm the highlighted option.
4. Press <Back> to move up one level; Press [> to return to Idle mode.

 
To send a text or multimedia message

1. In Menu mode, select **Messages** → **Create message**.
2. Enter a destination number and scroll down.
3. Enter the message text.
For sending as a text message, skip to step 5.
For attaching multimedia, continue with step 4.
4. Press **<Options>** → **Add multimedia** and add an item.
5. Press the Confirm key to send the message.

1. In Menu mode, select **Messages** → **Inbox**.
2. Select a text or multimedia message.

This feature helps track your phone when it is stolen or when someone tries to use your phone using other SIM card, the phone will automatically send the preset tracking message to family or friends. This feature may be unavailable due to certain features supported by your service provider.

1. In Menu mode, select **Settings** → **Security** → **Mobile tracker**.
2. Enter your password and press **<OK>**.



1. In Idle mode, enter an area code and a phone number.
2. Press to dial the number.
3. To end the call, press .

1. When a call comes in, press [⏮].
2. To end the call, press [⏮].

To adjust the volume of the ringtone

1. In Menu mode, select **Settings** → **Phone profiles**.
2. Scroll to the phone profile you are using.
3. Press **<Options>** → **Edit**.
4. Select **Call alert volume**.
5. Scroll left or right to adjust the volume level.
6. Press **<Select>**.
7. Press **<Save>**.

While a call is in progress, press the Volume key up or down to adjust the earpiece volume.

4. Scroll down and press the Confirm key to open the recipient list.
5. Press **<Options>** → **Phonebook** to open your contact list.
6. Scroll to a contact and press the Confirm key.
7. Select a number (if necessary).
8. When you are finished selecting contacts, press **<Select>** to return to the recipient list.
9. Press **<Options>** → **OK** to save the recipients.
10. Scroll down and enter the sender's name.
11. Press **<Save>** → **<Accept>**.

In an emergency, you can send SOS messages to your family or friends for help.

1. In Menu mode, select **Messages** → **Settings** → **SOS messages** → **Sending options**.
2. Scroll left or right to **On**.
3. Scroll down and press the Confirm key to open the recipient list.
4. Press **<Options>** → **Phonebook** to open your contact list.
5. Scroll to a contact and press the Confirm key.
6. Select a number (if necessary).
7. When you are finished selecting contacts, press **<Select>** to return to the recipient list.

1. In Menu mode, select **Settings** → **Phone profiles**.
2. Scroll to the phone profile you are using.
3. Press **<Options>** → **Edit**.
4. Select **Voice call ringtone**.
5. Select a ringtone category → a ringtone.
6. Press **<Save>**.

1. In Idle mode, press **[F1]**.
2. Scroll left or right to select a call type.
3. Scroll up or down to select a number or name.
4. Press the Confirm key to view details of the call or **[F1]** to dial the number.

To change the text input mode

- Press and hold [#] to switch to an input mode. Depending on your region, you may be able to access an input mode for your specific language.
- Press [#] to change case or switch to Number mode.
- Press [*] to switch to Symbol mode.

1. Press the appropriate alphanumeric keys to enter an entire word.
2. When the word displays correctly, press **[0]** to insert a space. If the correct word does not display, select an alternate word from the list that appears.

8. Press **<Options>** → **Save** to save the recipients.
9. Scroll down and set the number of times to repeat the SOS message.
10. Press **<Save>** → **<Yes>**.

 
1. With the phone closed and the keys locked, press the Volume key down four times to send an SOS message to preset numbers.
The phone switches to SOS mode and sends the preset SOS message.

2. To exit SOS mode, press [].


Learn to chat with your family or friends instantly via the Bluetooth wireless feature.

1. In Menu mode, select **Messages → Bluetooth messenger**.
2. Press **<Yes>** to turn on the Bluetooth wireless feature (if necessary).
3. Press **<Options> → Search Bluetooth contact → Search for new devices**.
4. Scroll to a device and press **<Select>**.
5. Enter a PIN for the Bluetooth wireless feature or the other device's Bluetooth PIN, if it has one, and press **<OK>**.
When the owner of the other device enters the same PIN or accepts the connection, pairing is complete.
6. Enter your message and press the Confirm key.

1. Remove the battery cover and insert the SIM card.




 2. Insert the battery and replace the battery cover.



1. Plug the supplied travel adapter.

 
- 
- To AC power outlet
2. When charging is finished, unplug the travel adapter.



Press the appropriate alphanumeric key until the character you want appears on the display.

Press the appropriate alphanumeric key to enter a number.

 Press the appropriate alphanumeric key to select a symbol.



1. In Idle mode, enter a phone number and press **<Options>**.
2. Select **Save contact** → a memory location (phone or SIM) → **New**.
3. Select a number type (if necessary).
4. Enter contact information.
5. Press the Confirm key or **<Options>** → **Save** to add the contact to memory.

Capture photos

1. In Menu mode, select **Camera**.
2. Rotate the phone anti-clockwise to landscape view.
3. Aim the lens at the subject and make any adjustments.
4. Press the Confirm key to take a photo.
5. Press  to take another photo (step 3).

In Menu mode, select **My files** → **Images** → **My photos** → a photo file.

1. In Menu mode, select **Music player**.
2. Select a music category → a music file.
3. Control playback using the following keys:

Key	Function
Confirm	Pause or resume playback
Volume	Adjust the volume
Navigation	• Left: Restart playback; - Skip backward (press within 3 seconds); - Scan backward in a file (press and hold) • Right: Skip forward; - Scan forward in a file (press and hold) • Up: Open the playlist • Down: Stop playback

