

Mobile Phone user manual

- Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.
- Bluetooth QD ID : B015089

www.samsungmobile.com

Printed in Korea
Code No. GH68-23001A
English (EU), 05/2009, Rev. 1.0



Turn off the phone or disable the wireless functions when in an aircraft

Your phone can cause interference with aircraft equipment. Follow all airline regulations and turn off your phone or switch to a mode that disables the wireless functions when directed by airline personnel.

Protect batteries and chargers from damage

- Avoid exposing batteries to very cold or very hot temperatures (below 0° C/32° F or above 45° C/113° F). Extreme temperatures can reduce the charging capacity and life of your batteries.
- Prevent batteries from contacting metal objects, as this can create a connection between the + and - terminals of your batteries and lead to temporary or permanent battery damage.
- Never use a damaged charger or battery.

Handle your phone carefully and sensibly

- Do not allow your phone to get wet—liquids can cause serious damage. Do not handle your phone with wet hands. Water damage to your phone can void your manufacturer's warranty.
- Avoid using or storing your phone in dusty, dirty areas to prevent damage to moving parts.
- Your phone is a complex electronic device—protect it from impacts and rough handling to avoid serious damage.
- Do not paint your phone, as paint can clog moving parts and prevent proper operation.

Correct disposal of batteries in this product

(Applicable in the European Union and other European countries with separate battery return systems.)



This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.



Safety warnings

Keep your phone away from small children and pets

Keep your phone and all accessories out of the reach of small children or animals. Small parts may cause choking or serious injury if swallowed.

Protect your hearing



Listening to a headset at high volumes can damage your hearing. Use only the minimum volume setting necessary to hear your conversation or music.

Install mobile phones and equipment with caution

Ensure that any mobile phones or related equipment installed in your vehicle are securely mounted. Avoid placing your phone and accessories near or in an air bag deployment area. Improperly installed wireless equipment can cause serious injury when air bags inflate rapidly.

- If your phone has a camera flash or light, avoid using it close to the eyes of children or animals.
- Your phone may be damaged by exposure to magnetic fields. Do not use carrying cases or accessories with magnetic closures or allow your phone to come in contact with magnetic fields for extended periods of time.

Avoid interference with other electronic devices

 
Your phone emits radio frequency (RF) signals that may interfere with unshielded or improperly shielded electronic equipment, such as pacemakers, hearing aids, medical devices, and other electronic devices in homes or vehicles. Consult the manufacturers of your electronic devices to solve any interference problems you experience.



Important usage information

Use your phone in the normal position

Avoid contact with your phone's internal antenna.



Handle and dispose of batteries and chargers with care

- Use only Samsung-approved batteries and chargers specifically designed for your phone. Incompatible batteries and chargers can cause serious injuries or damage to your phone.
- Never dispose of batteries or phones in a fire. Follow all local regulations when disposing used batteries or phones.
- Never place batteries or phones on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

Avoid interference with pacemakers

Maintain a minimum of 15 cm (6 inches) between mobile phones and pacemakers to avoid potential interference, as recommended by manufacturers and the independent research group, Wireless Technology Research. If you have any reason to suspect that your phone is interfering with a pacemaker or other medical device, turn off the phone immediately and contact the manufacturer of the pacemaker or medical device for guidance.

Allow only qualified personnel to service your phone

Allowing unqualified personnel to service your phone may result in damage to your phone and will void your warranty.

Ensure maximum battery and charger life

- Avoid charging batteries for more than a week, as overcharging may shorten battery life.
- Over time, unused batteries will discharge and must be recharged before use.
- Disconnect chargers from power sources when not in use.
- Use batteries only for their intended purpose.

Handle SIM cards and memory cards with care

- Do not remove a card while the phone is transferring or accessing information, as this could result in loss of data and/or damage to the card or phone.
- Protect cards from strong shocks, static electricity, and electrical noise from other devices.
- Frequent writing and erasing will shorten the life span of memory cards.
- Do not touch gold-coloured contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.

Turn off the phone in potentially explosive environments

Do not use your phone at refuelling points (service stations) or near fuels or chemicals. Turn off your phone whenever directed by warning signs or instructions. Your phone could cause explosions or fire in and around fuel or chemical storage and transfer areas or blasting areas. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.

Reduce the risk of repetitive motion injuries

While using your phone, hold the phone with a relaxed grip, press the buttons lightly, use special features that reduce the number of buttons you have to press (such as templates and predictive text), and take frequent breaks.

CE0168

Ensure access to emergency services

Emergency calls from your phone may not be possible in some areas or circumstances. Before traveling in remote or undeveloped areas, plan an alternate method of contacting emergency services personnel.

Specific Absorption Rate (SAR) certification information

Your phone conforms to European Union (EU) standards that limit human exposure to radio frequency (RF) energy emitted by radio and telecommunications equipment. These standards prevent the sale of mobile phones that exceed a maximum exposure level (known as the Specific Absorption Rate, or SAR) of 2.0 watts per kilogram.

During testing, the maximum SAR recorded for this model was 0.805 watts per kilogram. In normal use, the actual SAR is likely to be much lower, as the phone has been designed to emit only the RF energy necessary to transmit a signal to the nearest base station. By automatically emitting lower levels when possible, your phone reduces your overall exposure to RF energy.

The Declaration of Conformity of this manual demonstrates your phones compliance with the European Radio & Terminal Telecommunications Equipment (R&TTE) directive. For more information about the SAR and related EU standards, visit the Samsung mobile phone website.



Safety precautions

Drive safely at all times

Avoid using your phone while driving and obey all regulations that restrict the use of mobile phones while driving. Use hands-free accessories to increase your safety when possible.

Follow all safety warnings and regulations

Comply with any regulations that restrict the use of a mobile phone in a certain area.

Use only Samsung-approved accessories

Using incompatible accessories may damage your phone or cause injury.

Turn off the phone near medical equipment

Your phone can interfere with medical equipment in hospitals or health care facilities. Follow all regulations, posted warnings, and directions from medical personnel.

Correct disposal of this product

(Waste Electrical & Electronic Equipment)



(Applicable in the European Union and other European countries with separate collection systems)

 
This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

This EEE is compliant with RoHS.

Phone layout

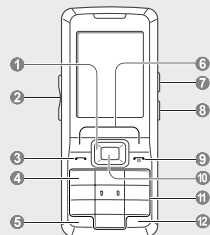

- 4-way navigation key**
In idle mode, access pre-defined menus; In Menu mode, scroll through menu options
- Volume key**
In idle mode, adjust the key tone volume
▶ Activate and send an SOS message
- Dial key**
Make or answer a call; In idle mode, retrieve recently dialed, missed, or received numbers
- Voice mail service key**
In idle mode, access voice mails (press and hold)
- Lock key**
Lock or unlock the keypad (press and hold)
- Softkeys**
Perform actions indicated at the bottom of the display

- SOS key**
Access the SOS contact menu. Make an SOS call (press and hold)
▶ Make an SOS call
- Favourites key**
Access the favourite contacts list
▶ Set and call favourite numbers
- Power/Menu exit key**
Turn the phone on and off (press and hold); End a call; In Menu mode, cancel input and return to idle mode
- Confirm key**
In idle mode, access Menu mode or launch the web browser; In Menu mode, select the highlighted menu option or confirm an input
- Alphanumeric keys**
- Silent profile key**
In idle mode, activate or deactivate the silent profile (press and hold)

Your phone displays the following status indicators on the top of the screen:

Icon	Description	Icon	Description
	Signal strength		Silent profile activated
	GPRS network connected		Battery power level
	Call in progress		SOS message feature activated
	Alarm activated		Bluetooth activated
	New message		New voice mail message
	Normal profile activated		

SAMSUNG ELECTRONICS



Declaration of Conformity (R&TTE)

We, **Samsung Electronics**

declare under our sole responsibility that the product

GSM Mobile Phone - GT-C3060

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

SAFETY	EN 60950-1: 2001 +A11:2004
EMC	EN 301 489-01 V1 5.1 (09-2005) EN 301 489-02 V1 3.1 (11-2005) EN 301 489-17 V1 2.1 (09-2002)
SAR	EN 50360 - 2001 EN 62209-1: 2008
RADIO	EN 301 511 V9 0.2 (03-2003) EN 300 328 V1 7.1 (10-2006)

We hereby declare that (a) essential radio test suites have been carried out and that the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex IV of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

BABT, Balfour House, Churchfield Road,
Valton-on-Thames, Surrey, KT12 2TD, UK*
Identification mark: 0168

The technical documentation kept at :

Samsung Electronics QA Lab.

which will be made available upon request.
(Representative in the EU)

Samsung Electronics Euro QA Lab.
Blackburne Business Park, Saxony Way,
Yateley, Hampshire, GU46 6SG, UK*

 
2009.04.08
(place and date of issue)

Yong-Sang Park / S. Manager
(name and signature of authorised person)


* It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your phone.

Install the SIM card and battery

1. Remove the battery cover and insert the SIM card.



 2. Insert the battery and replace the battery cover.



Charge the battery

1. Plug the supplied travel adapter.
2. When charging is finished, unplug the travel adapter.



Do not remove the battery from the phone before unplugging the travel adapter first. Otherwise, the phone may be damaged.

Number mode

Press the appropriate alphanumeric key to enter a number.

Symbol mode

Press the appropriate alphanumeric key to enter a symbol.

- To move the cursor, press the Navigation key.
- To delete characters one by one, press <Clear>. To delete all of the characters, press and hold <Clear>.
- To insert a space between characters, press [0].
- To enter punctuation marks, press [!].

Add a new contact

1. In Idle mode, enter a phone number and press <Options>.
2. Select **Save contact** → a memory location (phone or SIM) → **New**.
3. Select a number type (if necessary).
4. Enter contact information.
5. Press <Options> → **Save** to add the contact to memory.

Use the Bluetooth wireless feature

To turn on the Bluetooth wireless feature

1. In Menu mode, select **Applications** → **Bluetooth**.
2. Press <Options> → **Settings**.
3. Scroll down to **Activation**.
4. Scroll left or right to **On**.
5. To allow other devices to locate your phone, scroll down to **My phone's visibility** and scroll left or right to **On**.
6. Press <Save>.

To find and pair with other Bluetooth-enabled devices

1. In Menu mode, select **Applications** → **Bluetooth** → **Search for new devices**.
2. Scroll to a device and press <Select>.
3. Enter a PIN for the Bluetooth wireless feature or the other device's Bluetooth PIN, if it has one, and press <OK>.
- When the owner of the other device enters the same code or accepts the connection, pairing is complete.

Instructional icons

	Note: notes, usage tips, or additional information
	Followed by: the order of options or menus you must select to perform a step; for example: In Menu mode, select Messages → Create message (represents Messages , followed by Create message)
	Square brackets: phone keys; for example: [] (represents the Power/Menu exit key)
	Angled brackets: softkeys that control different functions at each screen; for example: <OK> (represents the OK softkey)

Turn your phone on or off

To turn your phone on,

1. Press and hold [].
2. Enter your PIN and press <OK> (if necessary).
3. When the setup wizard opens, customise your phone as desired by following the screen.

To turn your phone off, repeat step 1 above.

Access menus

To access your phone's menus,

1. In Idle mode, press <Menu> to access Menu mode.

You may need to press the Confirm key to access Menu mode depending on your region or service provider.

Set and call favourite numbers

To set favourite numbers

1. In Menu mode, select **Phonebook** → **Favourites**.
2. Scroll to a number you want to set (2-12) and press <Options> → **Add**.
3. Select a contact to assign to the number and press the Confirm key.

To call a favourite number

1. In Idle mode, press the Favourites key.
2. Scroll to a number and press <Options> → **Call**.
3. Select a number (if necessary).

Send and view messages

To send a text or multimedia message

1. In Menu mode, select **Messages** → **Create message**.
2. Enter a destination number and scroll down.
3. Enter the message text. ► *Enter text*
For sending as a text message, skip to step 5.
For attaching multimedia, continue with step 4.
4. Press <Options> → **Add multimedia** and add an item.
5. Press the Confirm key to send the message.

To send data using the Bluetooth wireless feature

1. Select the file or item from one of your phone's applications that you want to send.
2. Press <Options> → **Send via** or **Send namecard via** → **Bluetooth** (when sending contact data, specify which data to send).

To receive data using the Bluetooth wireless feature

1. Enter the PIN for the Bluetooth wireless feature and press <OK> (if necessary).
2. Press <Yes> to confirm that you are willing to receive data from the device (if necessary).

Set and use alarms

To set a new alarm

1. In Menu mode, select **Applications** → **Alarms**.
2. Select an empty alarm location.
3. Set alarm details.
4. Press <Save>.

To stop an alarm

- When the alarm sounds,
- Press any key to stop the alarm without snooze.
 - Press <Confirm> or the Confirm key to stop the alarm with snooze, or press <Snooze> or any key to silence the alarm for the snooze period.

2. Use the Navigation key to scroll to a menu or option.
3. Press <Select>, <OK>, or the Confirm key to confirm the highlighted option.
4. Press <Back> to move up one level; Press [] to return to Idle mode.

Samsung is not responsible for any loss of passwords or private information or other damages caused by illegal software.

Make a call

1. In Idle mode, enter an area code and a phone number.
2. Press [] to dial the number.
3. To end the call, press [].

Answer a call

1. When a call comes in, press [].
2. To end the call, press [].

Adjust the volume

To adjust the volume of the ringtone

1. In Menu mode, select **Settings** → **Phone profiles**.
2. Scroll to the phone profile you are using.
3. Press <Options> → **Edit** → **Incoming calls**.

To view text or multimedia messages

1. In Menu mode, select **Messages** → **Inbox**.
2. Select a text or multimedia message.

Activate the mobile tracker

This feature helps track your phone when it is stolen or when someone tries to use your phone using other SIM card, the phone will automatically send the preset tracking message to family or friends. This feature may be unavailable due to certain features supported by your service provider.

1. In Menu mode, select **Settings** → **Security** → **Mobile tracker**.
2. Enter your password and press <OK>.

The first time you access **Mobile tracker**, you will be prompted to create and confirm a password.

3. Scroll left or right to **On**.
4. Scroll down and press the Confirm key to open the recipient list.
5. Press <Options> → **Phonebook** to open your contact list.
6. Scroll to a contact and press the Confirm key.
7. Select a number (if necessary).
8. When you are finished selecting contacts, press <Select> to return to the recipient list.

To deactivate an alarm

1. In Menu mode, select **Applications** → **Alarms**.
2. Select the alarm you want to deactivate.
3. Scroll down (if necessary).
4. Scroll left or right to **Off**.
5. Press <Save>.

Use the camera

Capture photos

1. In Menu mode, select **Camera** → **Take photo**.
2. Rotate the phone anti-clockwise to landscape view.
3. Aim the lens at the subject and make any adjustments.
4. Press the Confirm key to take a photo.
5. Press <R> to take another photo (step 3).

View photos

In Menu mode, select **Camera** → **Camera albums** → **Photos** → a photo file.

In Menu mode, select **Applications** → **My files** → **Images** → a photo file.

Capture videos

1. In Menu mode, select **Camera** → **Record video**.
2. Rotate the phone anti-clockwise to landscape view.

4. Select **Call alert volume**.
5. Scroll left or right to adjust the volume level.
6. Press <Select> → <Save>.

To adjust the volume of voice during a call

While a call is in progress, press the Volume key up or down to adjust the earpiece volume.

In noisy environments, you may have difficulty hearing the calls while using the speakerphone feature. For better audio performance, use the normal phone mode.

Change your ringtone

1. In Menu mode, select **Settings** → **Phone profiles**.
2. Scroll to the profile you are using.
3. Press <Options> → **Edit** → **Incoming calls**.
4. Select **Voice call ringtone**.
5. Select a ringtone category → a ringtone.
6. Press <Save>.

Change the font size

1. In Menu mode, select **Settings** → **Display and light** → **Font**.
2. Scroll up to **Font size** (if necessary).
3. Scroll left or right to **Large**.
4. Press <Save>.

9. Press <Options> → **OK** to save the recipients.
10. Scroll down and enter the sender's name.
11. Press <Save> → <Accept>.

Activate and send an SOS message

In an emergency, you can send SOS messages to your family or friends for help.

To activate the SOS message

1. In Menu mode, select **Settings** → **SOS settings** → **SOS messages** → **Sending options**.
2. Scroll left or right to **On**.
3. Scroll down and press the Confirm key to open the recipient list.
4. Press <Options> → **Phonebook** to open your contact list.
5. Scroll to a contact and press the Confirm key.
6. Select a number (if necessary).
7. When you are finished selecting contacts, press <Select> to return to the recipient list.
8. Press <Options> → **Save** to save the recipients.
9. Scroll down and set the number of times to repeat the SOS message.
10. Press <Save> → <Yes>.

3. Aim the lens at the subject and make any adjustments.
4. Press the Confirm key to start recording.
5. Press <O> or the Confirm key to stop recording.
6. Press <R> to record another video (step 3).

View Videos

In Menu mode, select **Camera** → **Camera albums** → **Videos** → a video file.

In Menu mode, select **Applications** → **My files** → **Videos** → a video file.

Listen to a therapy music

1. In Menu mode, select **Applications** → **Music therapy**.
2. Select a music.
3. Control playback using the following keys:

Key	Function
Confirm	Pause or resume playback
Volume	Adjust the volume
Navigation	• Left: Skip backward • Right: Skip forward

Call a recently dialled number

1. In Idle mode, press [].
2. Select a call type.
3. Scroll up or down to select a number or name.
4. Press the Confirm key to view details of the call or [] to dial the number.

Enter text

To change the text input mode

- Press and hold [] to switch to an input mode. Depending on your region, you may be able to access an input mode for your specific language.
- Press [] to change case or switch to Number mode.
- Press [] to switch to Symbol mode.

T9 mode

1. Press the appropriate alphanumeric keys to enter an entire word.
2. When the word displays correctly, press [0] to insert a space. If the correct word does not display, select an alternate word from the list that appears.

ABC mode

Press the appropriate alphanumeric key until the character you want appears on the display.

To send an SOS message

1. With the keys locked, press the Volume key down four times to send an SOS message to preset numbers.
The phone switches to SOS mode and sends the preset SOS message.
2. To exit SOS mode, press [].

Make an SOS call

To activate the SOS call

1. In Menu mode, select **Settings** → **SOS settings** → **SOS call**.
2. Scroll left or right to **On**.
3. Scroll down and press the Confirm key to open the recipient list.
4. Press <Options> → **Phonebook** to open your contact list.
5. Scroll to a contact and press the Confirm key.
6. Select a number (if necessary).
7. When you are finished selecting contacts, press <Select> to return to the recipient list.
8. Press <Options> → **Save** to save the recipients.
9. Press <Save>.

To make an SOS call

To make an SOS call, press and hold the SOS key in Idle mode. You can also press the SOS key, scroll to a contact, and press <Select>.

Listen to the FM radio

1. Plug the supplied headset into the phone.
2. In Menu mode, select **Applications** → **FM radio**.
3. Press the Confirm key to start the FM radio.
4. Press <Yes> to start automatic tuning.
The radio scans and saves available stations automatically.

The first time you access the FM radio, you will be prompted to start automatic tuning.

5. Scroll up or down to a saved radio station.
6. To turn off the FM radio, press the Confirm key.

Access help information

Learn to access helpful information about your phone.

1. In Menu mode, select **Settings** → **Help**.
2. Select a help topic to learn about an application or feature.
3. Scroll down to get more information. To return to the previous level, press <Back>.