

Mobile Phone
user manual

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.
Bluetooth QD ID : B014646

www.samsungmobile.com

Printed in Korea
Code No.: GH68-21053A
English (EU), 01/2009, Rev. 1.0



safety and usage information

Comply with the following precautions to avoid dangerous or illegal situations and ensure peak performance of your mobile phone.



Safety warnings

Keep your phone away from small children and pets

Keep your phone and all accessories out of the reach of small children or animals. Small parts may cause choking or serious injury if swallowed.

Protect your hearing



Listening to a headset at high volumes can damage your hearing. Use only the minimum volume setting necessary to hear your conversation or music.

Install mobile phones and equipment with caution

Ensure that any mobile phones or related equipment installed in your vehicle are securely mounted. Avoid placing your phone and accessories near or in an air bag deployment area. Improperly installed wireless equipment can cause serious injury when air bags inflate rapidly.

Protect batteries and chargers from damage

- Avoid exposing batteries to very cold or very hot temperatures (below 0° C/32° F or above 45° C/113° F). Extreme temperatures can reduce the charging capacity and life of your batteries.
- Prevent batteries from contacting metal objects, as this can create a connection between the + and – terminals of your batteries and lead to temporary or permanent battery damage.
- Never use a damaged charger or battery.

Handle your phone carefully and sensibly

- Do not allow your phone to get wet—liquids can cause serious damage. Do not handle your phone with wet hands. Water damage to your phone can void your manufacturer's warranty.
- Avoid using or storing your phone in dusty, dirty areas to prevent damage to moving parts.
- Your phone is a complex electronic device—protect it from impacts and rough handling to avoid serious damage.
- Do not paint your phone, as paint can clog moving parts and prevent proper operation.
- Avoid using the phone's camera flash or light close to the eyes of children or animals.
- Your phone and memory cards may be damaged by exposure to magnetic fields. Do not use carrying cases or accessories with magnetic closures or allow your phone to come in contact with magnetic fields for extended periods of time.

Specific Absorption Rate (SAR) certification information

Your phone conforms to European Union (EU) standards that limit human exposure to radio frequency (RF) energy emitted by radio and telecommunications equipment. These standards prevent the sale of mobile phones that exceed a maximum exposure level (known as the Specific Absorption Rate, or SAR) of 2.0 watts per kilogram of body tissue.

During testing, the maximum SAR recorded for this model was 0.295 watts per kilogram. In normal use, the actual SAR is likely to be much lower, as the phone has been designed to emit only the RF energy necessary to transmit a signal to the nearest base station. By automatically emitting lower levels when possible, your phone reduces your overall exposure to RF energy. The Declaration of Conformity at the back of this manual demonstrates your phones compliance with the European Radio & Terminal Telecommunications Equipment (R&TTE) directive. For more information about the SAR and related EU standards, visit the Samsung mobile phone website.

Correct disposal of this product

(Waste Electrical & Electronic Equipment)



(Applicable in the European Union and other European countries with separate collection systems)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life.



This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life.

Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

Handle and dispose of batteries and chargers with care

- Use only Samsung-approved batteries and chargers specifically designed for your phone. Incompatible batteries and chargers can cause serious injuries or damage to your phone.
- Never dispose of batteries or phones in a fire. Follow all local regulations when disposing used batteries or phones.
- Never place batteries or phones on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

Avoid interference with pacemakers

Maintain a minimum of 15 cm (6 inches) between mobile phones and pacemakers to avoid potential interference, as recommended by manufacturers and the independent research group, Wireless Technology Research. If you have any reason to suspect that your phone is interfering with a pacemaker or other medical device, turn off the phone immediately and contact the manufacturer of the pacemaker or medical device for guidance.

Avoid interference with other electronic devices

 
Your phone emits radio frequency (RF) signals that may interfere with unshielded or improperly shielded electronic equipment, such as pacemakers, hearing aids, medical devices, and other electronic devices in homes or vehicles. Consult the manufacturers of your electronic devices to solve any interference problems you experience.



Important usage information

Use your phone in the normal position

Avoid contact with your phone's internal antenna.

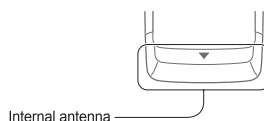


Allow only qualified personnel to service your phone


Allowing unqualified personnel to service your phone may result in damage to your phone and will void your warranty.

Install the SIM card and battery

 1. Remove the battery cover and insert the SIM card.



 2. Insert the battery and replace the battery cover.



Charge the battery

1. Plug the supplied travel adapter.



2. When charging is finished, unplug the travel adapter.



Do not remove the battery from the phone before unplugging the travel adapter first. Otherwise, the phone may be damaged.

Turn off the phone in potentially explosive environments

Do not use your phone at refuelling points (service stations) or near fuels or chemicals. Turn off your phone whenever directed by warning signs or instructions. Your phone could cause explosions or fire in and around fuel or chemical storage and transfer areas or blasting areas. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.

Reduce the risk of repetitive motion injuries

When sending text messages or playing games on your phone, hold the phone with a relaxed grip, press the keys lightly, use special features that reduce the number of keys you have to press (such as templates and predictive text), and take frequent breaks.

CE 0168

Ensure maximum battery and charger life

- Avoid charging batteries for more than a week, as overcharging may shorten battery life.
- Over time, unused batteries will discharge and must be recharged before use.
- Disconnect chargers from power sources when not in use.
- Use batteries only for their intended purpose.

Handle SIM cards and memory cards with care

- Do not remove a card while the phone is transferring or accessing information, as this could result in loss of data and/or damage to the card or phone.
- Protect cards from strong shocks, static electricity, and electrical noise from other devices.
- Frequent writing and erasing will shorten the life span of memory cards.
- Do not touch gold-coloured contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.

Ensure access to emergency services

Emergency calls from your phone may not be possible in some areas or circumstances. Before travelling in remote or undeveloped areas, plan an alternate method of contacting emergency services personnel.

Instructional icons

	Note: notes, usage tips, or additional information
	Followed by: the order of options or menus you must select to perform a step; for example: Press <Menu> → Messages (represents Menu , followed by Messages)
	Square brackets: phone keys; for example: [] (represents the Power/Menu exit key)
	Angled brackets: softkeys that control different functions at each screen; for example: <OK> (represents the OK softkey)

Turn your phone on or off

1. Slide open the phone.
2. To turn your phone on, press and hold [].
3. To turn your phone off, press and hold [].

Access menus

To access your phone's menus,

1. In Idle mode, press <Menu> to access Menu mode.
2. Use the navigation key to scroll to a menu or option.
3. Press <Yes>, <Save>, or the Confirm key to confirm the highlighted option.

1 4-way navigation key
In Idle mode, access My menu mode (up) or user-defined menus (left/right/down); In Menu mode, scroll through menu options

2 Volume key
In Idle mode, adjust the key tone volume; Send an SOS message
▶ Activate and send an SOS message

3 Dial key
Make or answer a call; In Idle mode, retrieve recently dialed, missed, or received numbers

4 Music player key
In Idle mode, launch the music player

5 Voice mail service key
In Idle mode, access voice mails (press and hold)

6 Pause key
Enter a dial pause (press and hold)

7 Softkeys
Perform actions indicated at the bottom of the display

8 Confirm key
In Idle mode, access the web browser menus; In Menu mode, select the highlighted menu option or confirm an input

9 Power/Menu exit key
Turn the phone on and off (press and hold); End a call; In Menu mode, cancel input and return to Idle mode

10 Delete key
Delete characters or items in an application

11 Camera key
In Idle mode, turn on the camera (press and hold); In Camera mode, take a photo or record a video

12 Alphanumeric keys

13 Silent profile key
In Idle mode, activate or deactivate the Silent profile (press and hold)

Your phone displays the following status indicators on the top of the screen:

Icon	Description	Icon	Description
	Signal strength		Bluetooth activated
	GPRS network connected		New text message (SMS)
	EDGE network connected		New multimedia message (MMS)
	Call in progress		New voice mail message
	Call diverting active		FM radio on
	SOS message feature activated		Memory card inserted
	Alarm activated		Normal profile activated
	Connecting to secured web page		Silent profile activated
	In Home Zone service area		Battery power level
	In City Zone service area		

1. In Menu mode, select **Settings** → **Phone profiles**.
2. Scroll to the phone profile you are using.
3. Press **<Options>** → **Edit**.
4. Select **Voice call ringtone**.
5. Select a ringtone category → a ringtone.
6. Press **<Options>** → **Save profile**.

1. In Idle mode, press [OK].
2. Scroll left or right to select a call type.
3. Scroll up or down to select a number or name.
4. Press the Confirm key to view details of the call or [OK] to dial the number.

To change the text input mode

- Press and hold **[✖]** to switch to an input mode. Depending on your region, you may be able to access an input mode for your specific language.
- Press **[✖]** to change case or switch to Number mode.
- Press and hold **[#]** to switch to Symbol mode.

1. Press the appropriate alphanumeric keys to enter a entire word.

In an emergency, you can send SOS messages to your family or friends for help.

 
1. In Menu mode, select **Messages** → **SOS messages** → **Sending options**.
2. Scroll left or right to **On**.
3. Scroll down and press the Confirm key to open the recipient list.
4. Press **<Options>** → **Phonebook** to open your contact list.
5. Scroll to a contact and press the Confirm key.
6. When you are finished selecting contacts, press **<Select>** to return to the recipient list.
7. Press **<Options>** → **Save** to save the recipients.
8. Scroll down and set the number of times to repeat the SOS message.
9. Press **<Save>** → **<Yes>**.

1. With the phone closed and the keys locked, press the Volume key four times to send an SOS message to preset numbers.
The phone switches to SOS mode and sends the preset SOS message.
2. To exit SOS mode, press [Power].

Press the appropriate alphanumeric key until the character you want appears on the display.

Press the appropriate alphanumeric key to enter a number.

Press the appropriate alphanumeric key to select a symbol.



1. In Idle mode, enter a phone number and press **<Options>**.
2. Select **Save contact** → a memory location (phone or SIM) → **New**.
3. Select a number type (if necessary).
4. Enter contact information.
5. Press **<Save>** to add the contact to memory.

Learn to chat with your family or friends instantly via the Bluetooth wireless feature.

1. In Menu mode, select **Messages → Bluetooth messenger**.
2. Press **<Yes>** to turn on the Bluetooth wireless feature (if necessary).
3. Press **<Options> → Search Bluetooth contact → Search for new devices**.
4. Scroll to a device and press **<Select>**.
5. Enter a PIN for the Bluetooth wireless feature or the other device's Bluetooth PIN, if it has one, and press **<OK>**.
When the owner of the other device enters the same PIN or accepts the connection, pairing is complete.
6. Enter your message and press the Confirm key.

1. In Idle mode, press and hold .
2. Rotate the phone anti-clockwise to landscape view.
3. Aim the lens at the subject and make any adjustments.
4. Press the Confirm key to take a photo.
5. Press to take another photo (step 3).

Icon	Description	Icon	Description
	Signal strength		Bluetooth activated
	GPRS network connected		New text message (SMS)
	EDGE network connected		New multimedia message (MMS)
	Call in progress		New voice mail message
	Call diverting active		FM radio on
	SOS message feature activated		Memory card inserted
	Alarm activated		Normal profile activated
	Connecting to secured web page		Silent profile activated
	In Home Zone service area		Battery power level
	In City Zone service area		

1. In Menu mode, select **Messages** → **Create message** → **Text message**.
2. Enter the message text.
3. Press **<Options>** → **Send**.
4. Enter a destination number.
5. Press **<Options>** → **Send** to send the message.


1. In Menu mode, select **Messages** → **Create message** → **Multimedia message**.
2. Select **Subject**.
3. Enter a subject and press the Confirm key.
4. Select **Image or video** → **Add image** or **Add video** and add an image or a video.
5. Select **Sound** → **Add sound** and add a sound.
If you have attached a video, you cannot add a sound.
6. Select **Text**.
7. Enter the message text and press the Confirm key.
8. Press **<Options>** → **Send** to send the message.

1. In Menu mode, select **Messages** → **My messages** → **Inbox**.
2. Select a text or multimedia message.


In Menu mode, select **My files** → **Images** → **My photos** → a photo file.

1. In Idle mode, press [🎵].
2. Select a music category → a music file.
3. Control playback using the following keys:

Keys	Function
Confirm	Pause or resume playback
Volume	Adjust the volume up or down
Navigation	• Left: Restart playback; • Skip backward (press within 3 seconds); • Scan backward in a file (press and hold) • Right: Skip forward; • Scan forward in a file (press and hold) • Up: Open the playlist • Down: Stop playback

 

 1. In Idle mode, enter an area code and a phone number.
2. Press [↵] to dial the number.
3. To end the call, press [⏏].




1. When a call comes in, press [F].
2. To end the call, press [E].

1. In Menu mode, select **Settings** → **Phone profiles**.
2. Scroll to the phone profile you are using.
3. Press **<Options>** → **Edit**.
4. Select **Ringtone volume**.
5. Scroll left or right to adjust the volume level.
6. Press **<Select>**.
7. Press **<Options>** → **Save profile**.

While a call is in progress, press the Volume key up or down to adjust the earpiece volume.

This feature helps track your phone when it is stolen or when someone tries to use your phone using other SIM card, the phone will automatically send the preset tracking message to family or friends. This feature may be unavailable due to certain features supported by your service provider.

 1. In Menu mode, select **Settings** → **Security** → **Mobile tracker**.
2. Enter your password and press **<OK>**.
3. Scroll left or right to **On**.
4. Scroll down and press the Confirm key to open the recipient list.
5. Press **<Options>** → **Phonebook** to open your contact list.
6. Scroll to a contact and press the Confirm key.
7. When you are finished selecting contacts, press **<Select>** to return to the recipient list.
8. Press **<Options>** → **OK** to save the recipients.
9. Scroll down and enter the sender's name.
10. Press **<Save>** → **<Accept>**.



SAMSUNG
ELECTRONICS

SAMSUNG

Declaration of Conformity (R&TTE)

We, **Samsung Electronics**
declare under our sole responsibility that the product

GSM Mobile Phone : C3110

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

SAFETY	EN 60950- 1: 2001 +A11:2004
EMC	EN 301 489- 01 V1.6.1 (09-2005)
	EN 301 489- 07 V1.3.1 (11-2005)
	EN 301 489- 17 V1.2.1 (08-2002)
SAR	EN 50360 : 2001
	EN 62209- 1 : 2006
RADIO	EN 301 511 V9.0.2 (03-2003)

We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex[IV] of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

BABT, Balfour House, Churchfield Road,
Walton-on-Thames, Surrey, KT12 2TD, UK*
Identification mark: 0168

The technical documentation kept at : **CE0168**
Samsung Electronics QA Lab.

which will be made available upon request.
(Representative in the EU)

Samsung Electronics Euro QA Lab.
Blackbushe Business Park, Saxony Way,
Yateley, Hampshire, GU46 6GG, UK

2008.11.17

Yong-Sang Park / S. Manager

(place and date of issue) (name and signature of authorised person)

* It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your phone.