

Icon	Description	Icon	Description
	Signal strength ¹		Bluetooth activated
	GPRS network connected		New text message (SMS)
	EDGE network connected		New multimedia message (MMS)
	Call in progress		New Email message
	Call diverting activated		New voice mail message
	SOS message feature activated		Memory card inserted
	Alarm activated		Normal profile activated
	Connecting to secured web page		Silent profile activated
	Connected to PC		Battery power level
	FM radio on		Current time
	FM radio paused		
	Music playback in progress		
	Music playback paused		
	Roaming (outside of normal service area)		

1. This icon may vary depending on your SIM card setting.

2. Insert the battery and replace the back cover.

To AC power outlet

* It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your product.