

Your phone displays the following status indicators on the top of the screen:

 
Icon	Description	Icon	Description
	No signal		Music playback in progress
	Signal strength		Music playback paused
	Network searching		New text message (SMS)
	GPRS network connected		New multimedia message (MMS)
	EDGE network connected		New email message
	Call in progress		New push message
	Browsing the web		New voice mail message
	Connecting to secured web page		Normal profile activated
	Roaming (outside of normal service area)		Silent profile activated
	Call diverting activated		Battery power level
	No SIM card		Current time
	Bluetooth activated		
	Alarm activated		
	Memory card inserted		
	FM radio on		
	FM radio suspended		

Install the SIM card and battery

1. Remove the back cover and insert the SIM card.




2. Insert the battery and replace the back cover.



Charge the battery

 1. Plug a travel adapter into the multifunction jack.
2. When charging is finished, unplug the travel adapter.



To AC power outlet



- Do not remove the battery from the phone before unplugging the travel adapter first. Otherwise, the phone may be damaged.
- To save energy, unplug the travel adapter when not in use. The travel adapter does not have a power switch, so you must unplug the travel adapter from the electrical socket when not in use to avoid wasting power. The device should remain close to the electrical socket while charging.

Insert a memory card (optional)

Your phone accepts microSD™ or microSDHC™ memory cards up to 16 GB (depending on memory card manufacturer and type).



- Formatting the memory card on a PC may cause incompatibility with your phone. Format the memory card only on the phone.
- Frequent writing and erasing of data will shorten the life span of memory cards.

1. Remove the back cover.
2. Insert a memory card with the gold-coloured contacts facing down.



Memory card

3. Push the memory card in the memory card slot until it locks in place.
4. Replace the back cover.

Instructional icons

	Note: notes, usage tips, or additional information
	Followed by: the order of options or menus you must select to perform a step, for example: In Menu mode, select Messages → Create message (represents Messages , followed by Create message)
	Square brackets: phone keys, for example: [] (represents the Power/End key)
	Angled brackets: softkeys that control different functions at each screen; for example: <OK> (represents the OK softkey)

Turn your phone on or off

To turn your phone on,

1. Press and hold [].
2. Enter your PIN and press <Confirm> (if necessary).

 


- If the battery remains fully discharged or removed from the device, the time and date will be reset.


To turn your phone off, repeat step 1 above.

Use the optical track pad

To select the highlighted menu option or confirm an input, press the track pad.



 To scroll through menu options, drag your finger up, down, left or right on the track pad.



Access menus

To access your phone's menus,

1. In Idle mode, press <Menu> to access Menu mode.



- You may need to press the track pad to access Menu mode depending on your region or service provider.

2. Use the track pad to scroll to a menu or option.
3. Press **Select** or the track pad to confirm the highlighted option.



- When you access a menu requiring the PIN2, you must enter the PIN2 supplied by the SIM card. For details, contact your service provider.
- Samsung is not responsible for any loss of passwords or private information or other damages caused by illegal software.

Make a call

1. In Idle mode, enter an area code and a phone number.
2. Press [] to dial the number.
3. To end the call, press [].

Answer a call

1. When a call comes in, press [].
2. To end the call, press [].

Call a recently dialed number

1. In Idle mode, press [] to display a list of recent numbers.
2. Scroll left or right to select a call type.
3. Scroll up or down to select a number or name.

4. Press the track pad to view details of the call or [] to dial the number.

Adjust the volume

To adjust the volume of the ringtone

1. In Menu mode, select **Settings** → **Sound profiles**.
2. Scroll to the profile you are using.
3. Press <Edit> → **Volume**.
4. Scroll to **Call alert**.
5. Scroll left or right to adjust the volume level and press <Save>.

To adjust the volume of voice during a call

While a call is in progress, press the Volume key up or down to adjust the volume.



- In noisy environments, you may have difficulty hearing the calls while using the speakerphone feature. For better audio performance, use the normal phone mode.

Change your ringtone

1. In Menu mode, select **Settings** → **Sound profiles**.
2. Scroll to the profile you are using.
3. Press <Edit> → **Voice call ringtone**.
4. Select a memory location (if necessary).
5. Select a ringtone.

To switch to another profile, select it from the list.

Use the smart home screen

The smart home screen allows you to access your favourite applications and contacts and view upcoming events or tasks. You can customise the smart home screen to fit your preferences and needs.



- When you are using the smart home screen, the track pad does not work as shortcuts.

To add items to the smart home screen

1. In Menu mode, select **Settings** → **Display** → **Smart home** and scroll left or right to a smart home screen.
2. Press <Edit>. Select the items to display on the smart home screen.
- For the shortcuts toolbar, you can add or delete the shortcuts as desired. Press <Options> → **Edit shortcuts**.
3. Press <Options> → **Save**.
4. Press the track pad.



- You can change the idle screen to another style. In Menu mode, select **Settings** → **Display** → **Smart home** and scroll left or right to a style you want.

To access the smart home items

Drag on the track pad to scroll through the items on the smart home screen and press the track pad to select an item.

Enter text

To change the text input mode

- Press [] to change case or switch to Number mode.
- Press and hold [] to switch between T9 and ABC modes. Depending on your country, you may be able to access an input mode for your specific language.
- Press [] to switch to Symbol mode.
- Press and hold [] to select an input mode or change the input language.

T9 mode

1. Press the appropriate alphanumeric keys to enter an entire word.
2. When the word displays correctly, press [0] to insert a space. If the correct word does not display, press the track pad up or down to select an alternate word.

ABC mode

Press an appropriate alphanumeric key until the character you want appears on the display.

Number mode

Press an appropriate alphanumeric key to enter a number.

Symbol mode

Press an appropriate alphanumeric key to enter a symbol.



- To move the cursor, drag on the track pad.
- To delete characters one by one, press <Clear>. To delete all of the characters, press and hold <Clear>.
- To insert a space between characters, press [0].
- To enter punctuation marks, press [1].

Add a new contact



The memory location to save new contacts may be preset depending on your service provider. To change the memory location, in Menu mode, select **Contacts** → <Options> → **Settings** → **Save new contacts** to → a memory location.

1. In Idle mode, enter a phone number and press <Options>.
2. Select **Add to Contacts** → **Create contact** → a memory location (if necessary).
3. Select a number type (if necessary).
4. Enter contact information.
5. Press the track pad.

Send and view messages

To send a text message or multimedia message

1. In Menu mode, select **Messages** → **Create message**.
2. Enter a recipient number and scroll down.
3. Enter the message text. *See "Enter text."*
For sending as a text message, skip to step 5. For attaching multimedia, continue with step 4.
4. Press <Options> → **Add multimedia** and add an item.
5. Press the track pad to send the message.

To view a text or multimedia messages

1. In Menu mode, select **Messages** → **Inbox**.
2. Select a text or multimedia message.

Make fake calls

You can simulate an incoming call when you want to get out of meetings or unwanted conversations.

To activate the fake call feature

In Menu mode, select **Settings** → **Call** → **Fake call** → **Fake call hot key** → **On**.

To make a fake call

In Idle mode, press and hold the Volume down key.

Activate and send an SOS message

In an emergency, you can send SOS messages to your family or friends for help.

To activate the SOS message

1. In Menu mode, select **Messages** → **Settings** → **SOS messages** → **Sending options**.
2. Press <Change> to select **On**.
3. Scroll down and press the track pad to open the recipient list.
4. Press **Search** to open your contact list.
5. Select a contact.
6. Select a number (if necessary).
7. Press the track pad to save the recipients.
8. Scroll down and set the number of times to repeat the SOS message.
9. Press <Back> → <Yes>.

To send an SOS message

1. With the keys locked, press either end of the volume key four times to send an SOS message to preset numbers.
The phone switches to SOS mode and sends the preset SOS message.
2. To exit SOS mode, press [].

Use the camera

To capture photos

1. In Idle mode, press the Camera key to turn on the camera.
2. Rotate the phone anti-clockwise to landscape view.
3. Aim the lens at the subject and make any adjustments.
4. Press the track pad to take a photo. The photo is saved automatically.

To view photos

In Menu mode, select **My files** → **Images** → a photo file.

To capture videos

1. In Idle mode, press the Camera key to turn on the camera.
2. Rotate the phone anti-clockwise to landscape view.
3. Press [1] to switch to camcorder. Aim the lens at the subject and make any adjustments.
4. Press the track pad to start recording.
5. Press the track pad or <Stop> to stop recording. The video is saved automatically.

To view videos

In Menu mode, select **My files** → **Videos** → a video file.

Set and use alarms

To set a new alarm

1. In Menu mode, select **Alarms**.
2. Press <Create>, or press <Options> → **Create alarm**.
3. Set alarm details.
4. Press <Save> or the track pad.

To stop an alarm

When the alarm sounds,

Press <Confirm> or the track pad to stop the alarm, or press <Snooze> to silence the alarm for the snooze period.

To deactivate an alarm

1. In Menu mode, select **Alarms**.
2. Select the alarm you want to deactivate.
3. Press <Options> → **Deactivate alarm**.



- If the battery has been removed, the scheduled alarm may not sound.

Declaration of Conformity
Samsung Electronics declares that this device complies with the essential requirements and relevant provisions of Directive 1999/5/EC.
Go to www.samsung.com/mobile_doc to view the Declaration of Conformity.

CE 0168