

Charge the battery

1. Plug a travel adapter.
2. When charging is finished, unplug the travel adapter.



To AC power outlet



- Do not remove the battery before removing the travel adapter. Doing this may cause damage to the phone.
- To save energy, unplug the travel adapter when not in use. The travel adapter does not have a power switch, so you must unplug the travel adapter from the outlet to interrupt the power supply. The travel adapter should remain close to the socket when in use.

Insert a memory card (optional)

Your phone accepts microSD™ or microSDHC™ memory cards up to 8 GB (depending on memory card manufacturer and type).



Formatting the memory card on a PC may cause incompatibility with your phone. Format the memory card only on the phone.



 
With the gold-coloured contact facing down

Instructional icons

	Note: notes, usage tips, or additional information
	Followed by: the order of options or menus you must select to perform a step
	Square brackets: phone keys
	Angled brackets: softkeys that control different functions at each screen

Turn your phone on or off


To turn your phone on or off, press and hold [⏻].



If the battery is removed for more than a few minutes, the time and date will be reset.


Lock or unlock the keys

 In Idle mode, press and hold [Alt] or [Alt] to lock or unlock the keys.



Switch to Silent mode

 In Idle mode, press and hold [🔇] to mute or unmute your phone.



Access menus

1. In Idle mode, press <Menu> to access Menu mode.



You may need to press the Confirm key to access Menu mode depending on your region or service provider.

2. Use the Navigation key to scroll to a menu or option.
3. Press <Select>, <Save>, or the Confirm key to confirm the highlighted option.
4. Press <Back> to move up one level; Press [⏮] to close the menu or application and return to Idle mode.



- When you access a menu requiring the PIN2, you must enter the PIN2 supplied with the SIM card. For details, contact your service provider.
- Samsung is not responsible for any loss of passwords or private information or other damages caused by illegal software.

Manage your SIM cards

Your phone supports Dual SIM mode that enables you to use two SIM cards at the same time without changing them. Learn to activate SIM cards and change the card settings.

To switch networks

Press [📶] to switch between networks.



To activate SIM cards

1. In Idle mode, press and hold [📶].
2. Select **Network** and scroll left or right to a SIM card.
3. Press <Change> to activate the card.

Make a call

1. In Idle mode, enter an area code and a phone number.
2. Press [📞] to dial the number.
- To adjust the volume during a call, press the Navigation key up or down.
2. To end the call, press [📞].

Answer a call

1. When a call comes in, press [📞].
2. To end the call, press [📞].

Enter text

Press appropriate alphanumeric keys to enter characters, numbers, and symbols. To enter characters on the upper half of the keys, press [Alt] or [Alt].

To change the text input mode

- Press <Options> → **Writing options** → **Writing language** to change the input language.
- Press <Options> → **Writing options** → **Predictive text on** to turn on T9 mode.
- Press [📎] to open the symbol panel.
- Press [Alt] and [📎] to open the emotion panel.

To use other features for text input

- To move the cursor, press the Navigation key.
- To change case, press [🔤].
- To delete characters one by one, press [⏮]. To delete characters quickly, press and hold [⏮].
- To insert a space between characters, press [⏮] [Alt].
- To start a new line, press [↵].

Add a new contact



The memory location to save new contacts may be preset depending on your service provider. To change the memory location, in Menu mode, select **Contacts** → <Options> → **Settings** → **Save new contacts to** → a memory location.

1. In Idle mode, enter a phone number and press the Confirm key.
2. Select a memory location (if necessary).
3. Select **Create contact**.
4. Select a number type (if necessary).
5. Enter contact information.
6. Press the Confirm key.

Send and view messages

To send a text or multimedia message

1. In Menu mode, select **Messages** → **Create message**.
2. Enter a recipient number and scroll down.
3. Enter your message text. *See "Enter text"* For sending as a text message, skip to step 5. For attaching multimedia, continue with step 4.
4. Press <Options> → **Add multimedia** and add an item.
5. Press the Confirm key to send the message.

To view text or multimedia messages

1. In Menu mode, select **Messages** → **Inbox**.
2. Select a text or multimedia message.

To use the Bluetooth messenger

1. In Menu mode, select **BT msgr**.
2. Press the Confirm key.
3. Press <Yes> to turn on the Bluetooth wireless feature (if necessary).
4. Select a device.
5. Enter your message and press the Confirm key.
6. Enter a PIN for the Bluetooth wireless feature or the other device's Bluetooth PIN, and press <OK>. Alternatively, press <Yes> to match the PIN between your phone and the device.
7. Chat with friends and family instantly.

Make fake calls

You can simulate an incoming call when you want to get out of meetings or unwanted conversations.

To activate the fake call feature

In Menu mode, select **Settings** → **Call** → **Fake call** → **Fake call hot key**.

To send an SOS message

1. With the phone locked, press [📞] 4 times.
2. To exit SOS mode, press [📞].

Use the camera

To capture photos

1. In Idle mode, press and hold [📷] to turn on the camera.
2. Aim the lens at the subject and make any adjustments.
3. Press the Confirm key or [📷] to take a photo.

To view photos

In Menu mode, select **My files** → **Images** → a photo file.

To record videos

1. In Idle mode, press and hold [📷] to turn on the camera.
2. Press [1] to switch to the camcorder.
3. Aim the lens at the subject and make any adjustments.

4. Press the Confirm key or [📷] to start recording.
5. Press the Confirm key, <Stop>, or [📷] to stop recording.

To view videos

In Menu mode, select **My files** → **Videos** → a video file.

Listen to music

1. In Idle mode, select **Music**.
2. Select a music category → a music file.
3. Control playback with the following keys:

Key	Function
Confirm	Pause or resume playback
Navigation	• Left: Restart playback; Skip backward (press within 3 seconds); Scan backward in a file (press and hold) • Right: Skip forward; Scan forward in a file (press and hold) • Up/Down: Adjust the volume

Listen to the FM radio

1. Plug a headset into the phone.
2. In Menu mode, select **Apps** → **FM radio**.
3. Press the Confirm key to turn on the FM radio.
4. Press <Yes> to start automatic tuning. The radio scans and saves available stations automatically.



The first time you turn on the FM radio, you will be prompted to start automatic tuning.

5. Control the FM radio with the following keys:

Key	Function
Confirm	Turn the FM radio on or off
Navigation	• Left/Right: Fine-tune the frequency; Search for an available radio station (press and hold) • Up/Down: Adjust the volume

Access community websites

1. In Menu mode, select **Communities** → a website.
2. Press <Yes>.
3. Share photos, videos, or messages with friends and family.

Use an instant messenger

1. In Menu mode, select **IM** → an instant messenger.
2. Enter your user name and password, and then press <Sign in>.
3. Send and receive instant messages to friends and family.

SAMSUNG
ELECTRONICS



Declaration of Conformity (R&TTE)

Samsung Electronics

We,
Samsung Electronics

declare under our sole responsibility that the product

GSM Mobile Phone : GT-E2222

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

SAFETY	EN 60950-1 : 2006+A11:2009
SAR	EN 50360 : 2001/AC:2008 EN 62209-1 : 2006
EMC	EN 301 489-01 V1.8.1 (04-2008) EN 301 489-07 V1.3.1 (11-2008) EN 301 489-17 V2.1.1 (05-2008)
RADIO	EN 301 511 V9.0.2 (03-2003) EN 300 328 V1.7.1 (10-2006)

We hereby declare that all essential radio test suites have been carried out and that the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex IV of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

BABT, Forsyth House,
Churchfield Road,
Wotton-on-Thames,
Surrey, KT12 2TD, UK
Identification mark: 0168

The technical documentation kept at :
Samsung Electronics QA Lab.

which will be made available upon request.

(Representative in the EU)

Samsung Electronics Euro QA Lab,
Blackhouse Business Park, Saxony Way,
Witley, Hampshire, GU46 6GG, UK

2011.04.08

(place and date of issue)

(name and signature of authorised person)

* It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your product.

CE 0168