

Your phone displays the following status indicators on the top of the screen:

Icon	Description	Icon	Description
	Signal strength		Bluetooth activated
	GPRS network connected		New text message (SMS)
	Call in progress		New multimedia message (MMS)
	Call diverting activated		New Email message
	SOS message feature activated		New voice mail message
	Alarm activated		Memory card inserted
	Connecting to secured web page		Normal profile activated
	FM radio on		Silent profile activated
	FM radio suspended		Battery power level
	Music playback in progress		
	Music playback paused		
	Roaming (outside of normal service area)		

- Tap: Touch once with your finger to select or launch a menu, option, or application.
- Tap and hold: Tap and hold your finger on an item to open a pop-up option list.
- Drag: Tap and drag your finger up, down, left, or right to move to items on lists.
- Drag and drop: Tap and hold your finger on an item, and then drag your finger to move the item.

Access menus


To access your phone's menus,

1. In Idle mode, select **Menu** to access Menu mode.
2. Scroll left or right to a main menu screen.
3. Select a menu or application.
4. Press the to move up one level; Press to return to Idle mode.

- When you access a menu requiring the PIN2, you must enter the PIN2 supplied with the SIM card. For details, contact your service provider.
- Samsung is not responsible for any loss of passwords or private information or other damages caused by illegal software.

Install the SIM cards and battery

1. Remove the back cover and insert the SIM cards.

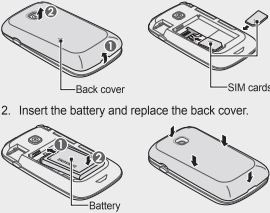

Charge the battery

1. Plug a travel adapter into the multifunction jack...
2. When charging is finished, unplug the travel adapter.



- While the phone is charging, the touch screen may not function due to an unstable power supply. If this happens, unplug the travel adapter from the phone.
- Do not remove the battery from the phone before unplugging the travel adapter first. Otherwise, the phone may be damaged.
- To save energy, unplug the travel adapter when not in use. The travel adapter does not have a power switch, so you must unplug the travel adapter from the electrical socket when not in use to avoid wasting power. The device should remain close to the electrical socket while charging.

Insert a memory card

Your phone accepts microSD™ or microSDHC™ memory cards up to 32 GB (depending on memory card manufacturer and type).

- Formatting the memory card on a PC may cause incompatibility with your phone. Format the memory card only on the phone.
- Frequent writing and erasing of data will shorten the lifespan of memory cards.

1. Open the cover of the memory card slot on the side of the phone.
2. Insert a memory card with the gold-coloured contacts facing down.

Make a call

1. In Idle mode, select **Keypad** and enter an area code and a phone number.
2. Press to dial the number.
3. To end the call, press .

Answer a call

1. When a call comes in, press .
2. To end the call, press .

Call a recently dialed number

1. In Idle mode, press to display a list of recent numbers.
2. Scroll left or right to a call type.
3. Select the number you want and press to dial.

Adjust the volume

To adjust the volume of the ringtone

1. In Menu mode, select **Settings** → **Sound profiles**.
2. Select the profile you are using.

- If you are using the silent profile, you are not allowed to adjust the volume of the ringtone.

3. Select **Volume** → **Call alert**.

4. Drag the slider to adjust the volume level and select **Save**.

Make fake calls

You can simulate an incoming call when you want to get out of meetings or unwanted conversations.

To activate the fake call feature

In Menu mode, select **Settings** → **Call** → **Fake call** → **Fake call hot key**.

To make a fake call

In Idle mode, press and hold the Volume key down.

Activate and send an SOS message

In an emergency, you can send SOS messages to your family or friends for help.

To activate the SOS message

1. In Menu mode, select **Messages** → **Settings** → **SOS messages** → **Sending options**.
2. Select **Sending SOS** to activate the SOS messaging feature.
3. Select **Recipients** → **Add recipients** → **Contacts**. You can also enter phone numbers including a country code (with +) in the recipient list. Skip to step 6.
4. Select **Multiple**.
5. Select contacts → **Add**.

3. Push the memory card in the memory card slot until it locks in place.
4. Close the cover of the memory card slot.

Instructional icons

	Caution: situations that could cause damage to your phone or other equipment
	Note: notes, usage tips, or additional information
→	Followed by: the order of options or menus you must select to perform a step; for example: In Menu mode, select Messages → Create message (represents Messages , followed by Create message)
[]	Square brackets: phone keys; for example: (represents the Power/End key)
< >	Angled brackets: softkeys that control different functions at each screen; for example: < OK > (represents the OK softkey)

Turn your phone on or off

To turn your phone on,

1. Press and hold .
2. Enter your PIN and select **Done** (if necessary).
3. When the set-up wizard opens, customize your phone as desired by following the screen.

- If the battery is removed for more than a few minutes, the time and date will be reset.

To turn your phone off, repeat step 1 above.

Use the touch screen

Learn basic actions to use the touch screen.

- Do not press the touch screen with your fingertips, or use sharp tools on the touch screen. Doing so may damage the touch screen or cause it to malfunction.

- For the optimal use of the touch screen, remove the protection film before using your phone.
- Your touch screen has a layer that detects small electrical charges emitted by the human body. For best performance, tap the touch screen with your fingertip. The touch screen will not react to touches of sharp tools, such as a stylus or pen.

To adjust the volume of voice during a call

While a call is in progress, press the Volume key to adjust the volume.

- In noisy environments, you may have difficulty hearing the calls while using the speakerphone feature. For better audio performance, use the normal phone mode.

Change your ringtone

1. In Menu mode, select **Settings** → **Sound profiles**.
2. Select the profile you are using.

- If you are using the silent profile, you are not allowed to change the ringtone.

3. Select **Voice call ringtone**.

4. Select a ringtone and select **Set**.

Or, select **My files** to set a music from phone memory or memory card.

To switch to another profile, select it from the list.

Use widgets

Learn to use widgets on the idle screen.

- Some of your widgets connect to web services. Selecting a web-based widget may incur additional charges.
- Available widgets may vary depending on your region or service provider.

To open a widget

1. In Idle mode, scroll left or right to a panel of the idle screen.
2. Select a widget to activate on the idle screen.

To organize your widget

You can organize each panel of the idle screen with your favourite widgets.

1. In Idle mode, select at the top left of the screen to open the widget toolbar.
2. Read the widget disclaimer and select **I Agree** (if necessary).
3. Scroll left or right on the widget toolbar to find the widget you want to use.
4. Drag the widget to the idle screen.
5. Select .

Enter text

To change the text input mode

- Select **EN** to change the input language.
- Select **T9** to switch between T9 and ABC modes. The dot turns green in T9 mode.
- Select **123** or **sym** to switch to Number or Symbol mode.

T9 mode

1. Select appropriate virtual keys to enter an entire word.
2. When the word displays correctly, select to insert a space. If the correct word does not display, select to select an alternate word.

ABC mode

Select an appropriate virtual key until the character you want appears on the display.

Number mode

Select an appropriate virtual key to enter a number.

Symbol mode

Select an appropriate virtual key to enter a symbol.

To use other features for text input

- To move the cursor, select , and then the virtual navigation key.
- To delete characters one by one, select . To delete words quickly, tap and hold .
- To enter punctuation marks, select 1 repeatedly.
- To start a new line, tap and hold .
- Select to change case.

Add a new contact

1. In Idle mode, select **Keypad** and enter a phone number.
2. Select → **Create contact** → a number type (if necessary).
3. Enter contact information.
4. Select **Save** to add the contact to memory.

Send and view messages

To send a text or multimedia message

1. In Menu mode, select **Messages** → **Create message**.
2. Select the recipient field → **Enter manually**.
3. Enter a recipient number and select **Done**.
4. Select the text input field.
5. Enter your message text and select **Done**.
See "Enter text."
- For sending as a text message, skip to step 7.
- For attaching multimedia, continue with step 6.
6. Select **Add media** and add an item.
7. Select **Send** to send the message.

To view text or multimedia messages

1. In Menu mode, select **Messages** → **Inbox**.
2. Select a text or multimedia message.