

Mobile Phone
user manual

- Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.
- Visit the Samsung website to view the Samsung Mobile function guide in Adobe Acrobat (.pdf) format. The function guide contains common topics about applications and features that appear in many different models of Samsung mobile phones.

www.samsungmobile.com

Printed in Korea
Code No.: GH68-28106A
English (EU), 03/2010, Rev. 1.0

Safety warnings

Keep your phone away from small children and pets

Keep your phone and all accessories out of the reach of small children or animals. Small parts may cause choking or serious injury if swallowed.

Protect your hearing



Excessive exposure to sound at high volumes can cause hearing damage.

Always turn the volume down before plugging the earphones into an audio source and use only the minimum volume setting necessary to hear your conversation or music.

Install mobile phones and equipment with caution

Ensure that any mobile phones or related equipment installed in your vehicle are securely mounted. Avoid placing your phone and accessories near or in an air bag deployment area. Improperly installed wireless equipment can cause serious injury when air bags inflate rapidly.

Handle and dispose of batteries and chargers with care

- Use only Samsung-approved batteries and chargers specifically designed for your phone. Incompatible batteries and chargers can cause serious injuries or damage to your phone.
- Never dispose of batteries or phones in a fire. Follow all local regulations when disposing of used batteries or phones.
- Never place batteries or phones on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

Avoid interference with pacemakers

Maintain a minimum of 15 cm (6 inches) between mobile phones and pacemakers to avoid potential interference, as recommended by manufacturers and the independent research group, Wireless Technology Research. If you have any reason to suspect that your phone is interfering with a pacemaker or other medical device, turn off the phone immediately and contact the manufacturer of the pacemaker or medical device for guidance.

Turn off the phone in potentially explosive environments

Do not use your phone at refuelling points (service stations) or near fuels or chemicals. Turn off your phone whenever directed by warning signs or instructions. Your phone could cause explosions or fire in and around fuel or chemical storage and transfer areas or blasting areas. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.

Reduce the risk of repetitive motion injuries

While using your phone, hold the phone with a relaxed grip, press the keys lightly, use special features that reduce the number of keys you have to press (such as templates and predictive text), and take frequent breaks.

Do not use the phone if the screen is cracked or broken

Broken glass or acrylic could cause injury to your hand and face. Bring the phone to a Samsung service centre to replace the screen. Damage caused by careless handling will void your manufacturer's warranty.

CE 0168



Safety precautions

Drive safely at all times

Avoid using your phone while driving and obey all regulations that restrict the use of mobile phones while driving. Use hands-free accessories to increase your safety when possible.

Follow all safety warnings and regulations

Comply with any regulations that restrict the use of a mobile phone in a certain area.

Use only Samsung-approved accessories

Using incompatible accessories may damage your phone or cause injury.

Turn off the phone near medical equipment

Your phone can interfere with medical equipment in hospitals or health care facilities. Follow all regulations, posted warnings, and directions from medical personnel.

Turn off the phone or disable the wireless functions when in an aircraft

Your phone can cause interference with aircraft equipment. Follow all airline regulations and turn off your phone or switch to a mode that disables the wireless functions when directed by airline personnel.

Protect batteries and chargers from damage

- Avoid exposing batteries to very cold or very hot temperatures (below 0° C/32° F or above 45° C/113° F). Extreme temperatures can reduce the charging capacity and life of your batteries.
- Prevent batteries from contacting metal objects, as this can create a connection between the + and – terminals of your batteries and lead to temporary or permanent battery damage.
- Never use a damaged charger or battery.

Handle your phone carefully and sensibly

 
- Do not disassemble your phone due to a risk of electric shock.
- Do not allow your phone to get wet—liquids can cause serious damage and will change the color of the label that indicates water damage inside the phone. Do not handle your phone with wet hands. Water damage to your phone can void your manufacturer's warranty.



Important usage information

Use your phone in the normal position

Avoid contact with your phone's internal antenna.



Allow only qualified personnel to service your phone

Allowing unqualified personnel to service your phone may result in damage to your phone and will void your warranty.

Ensure maximum battery and charger life

- Avoid charging batteries for more than a week, as overcharging may shorten battery life.
- Over time, unused batteries will discharge and must be recharged before use.
- Disconnect chargers from power sources when not in use.
- Use batteries only for their intended purpose.

Handle SIM cards with care

- Do not remove a card while the phone is transferring or accessing information, as this could result in loss of data and/or damage to the card or phone.
- Protect cards from strong shocks, static electricity, and electrical noise from other devices.
- Do not touch gold-coloured contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.

Ensure access to emergency services

Emergency calls from your phone may not be possible in some areas or circumstances. Before travelling in remote or undeveloped areas, plan an alternate method of contacting emergency services personnel.

Specific Absorption Rate (SAR) certification information

Your phone conforms to European Union (EU) standards that limit human exposure to radio frequency (RF) energy emitted by radio and telecommunications equipment. These standards prevent the sale of mobile phones that exceed a maximum exposure level (known as the Specific Absorption Rate, or SAR) of 2.0 W/kg. During testing, the maximum SAR recorded for this model was 0.593 W/kg. In normal use, the actual SAR is likely to be much lower, as the phone has been designed to emit only the RF energy necessary to transmit a signal to the nearest base station. By automatically emitting lower levels when possible, your phone reduces your overall exposure to RF energy. The Declaration of Conformity of this manual demonstrates your phone's compliance with the European Radio & Terminal Telecommunications Equipment (R&TTE) directive. For more information about the SAR and related EU standards, visit the Samsung mobile phone website.

Correct disposal of this product

(Waste Electrical & Electronic Equipment)



(Applicable in the European Union and other European countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

This EEE is compliant with RoHS.

Correct disposal of batteries in this product



 
(Applicable in the European Union and other European countries with separate battery return systems)

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.



Phone layout

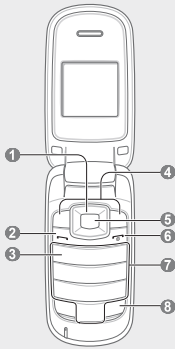


- 1 4-way navigation key**
In Idle mode, access user-defined menus, make a fake call (down); In Menu mode, scroll through menu options
Depending on your service provider, pre-defined menus may differ
See "Make fake calls"
- 2 Dial key**
Make or answer a call; In Idle mode, retrieve recently dialled, missed, or received numbers
- 3 Voice mail service key**
In Idle mode, access voice mails (press and hold)
- 4 Softkeys**
Perform actions indicated at the bottom of the display
- 5 Confirm key**
In Idle mode, access Menu mode; In Menu mode, select the highlighted menu option or confirm an input
Depending on your service provider or region, the key may perform differently
- 6 Power/Menu exit key**
Turn the phone on and off (press and hold); End a call; In Menu mode, cancel input and return to Idle mode
- 7 Alphanumeric keys**
- 8 Silent profile key**
In Idle mode, activate or deactivate the silent profile (press and hold)

Your phone displays the following status indicators on the top of the screen:

Icon	Description
	Signal strength
	Call in progress
	Call diverting activated
	Roaming (outside of normal service area)
	Alarm activated
	New text message (SMS)
	New voice mail message
	Normal profile activated
	Silent profile activated
	Battery power level

Install the SIM card and battery

 1. Remove the battery cover and insert the SIM card.



2. Insert the battery and replace the battery cover.



Charge the battery

1. Plug the supplied travel adapter.
2. When charging is finished, unplug the travel adapter.



Do not remove the battery from the phone before unplugging the travel adapter first. Otherwise, the phone may be damaged.

Instructional icons

	Note: notes, usage tips, or additional information
	Followed by: the order of options or menus you must select to perform a step; for example: In Menu mode, select Messages → Create new message (represents Messages , followed by Create new message)
	Square brackets: phone keys; for example: [Power] (represents the Power/Menu exit key)
	Angled brackets: softkeys that control different functions at each screen; for example: < OK > (represents the OK softkey)

Turn your phone on or off

- To turn your phone on,
- Press and hold [**Power**].
 - Enter your PIN and press <**OK**> (if necessary).
 - Set the time and date and press <**Save**> (if necessary)
- To turn your phone off, repeat step 1 above.
- Do not remove the battery, the time and date will be reset.

Access menus

- To access your phone's menus,
- In Idle mode, press <**Menu**> to access Menu mode.

You may need to press the Confirm key to access Menu mode depending on your region or service provider.

2. Use the Navigation key to scroll to a menu or option.
3. Press <**Select**>, <**Save**>, or the Confirm key to confirm the highlighted option.
4. Press <**Back**> to move up one level; Press [**Power**] to return to Idle mode.

- When you access a menu requiring the PIN2, you must enter the PIN2 supplied with the SIM card. For details, contact your service provider.
- Samsung is not responsible for any loss of passwords or private information or other damages caused by illegal software.

Make a call

- In Idle mode, enter an area code and a phone number.
- Press [**Call**] to dial the number.
- To end the call, press [**End**].

Answer a call

- When a call comes in, press [**Call**].
- To end the call, press [**End**].

Adjust the volume

To adjust the volume of the ringtone

- In Menu mode, select **Settings** → **Profiles**.
- Scroll to the phone profile you are using.

If you are using the silent or offline profile, you are not allowed to adjust the volume of the ringtone.

- Press <**Options**> → **Edit** → **Volume**.
- Scroll left or right to adjust the volume level.
- Press <**Save**>.

To adjust the volume of voice during a call

While a call is in progress, press the Navigation key up or down to adjust the volume.

In noisy environments, you may have difficulty hearing the calls while using the speakerphone feature. For better audio performance, use the normal phone mode.

Change your ringtone

- In Menu mode, select **Settings** → **Profiles**.
- Scroll to the profile you are using.

If you are using the silent or offline profile, you are not allowed to change the ringtone.

- Press <**Options**> → **Edit** → **Call ringtone**.

- Select a ringtone.
- To switch to another profile, select it from the list.

Call a recently dialled number

- In Idle mode, press [**Call**].
- Scroll left or right to a call type.
- Scroll up or down to a number or name.
- Press the Confirm key to view details of the call or [**Call**] to dial the number.

Enter text

To change the text input mode

- Press and hold [**123**] to switch between T9 and ABC modes.
- Press [**123**] to change case or switch to Number mode.
- Press [**abc**] to switch to Symbol mode.
- Press and hold [**123**] to select an input mode or change the input language.

T9 mode

- Press appropriate alphanumeric keys to enter an entire word.
- When the word displays correctly, press [0] to insert a space. If the correct word does not display, press the Navigation key up or down to select an alternate word.

ABC mode

Press an appropriate alphanumeric key until the character you want appears on the display.

Number mode

Press an appropriate alphanumeric key to enter a number.

Symbol mode

Press an appropriate alphanumeric key to enter a symbol.

- To move the cursor, press the Navigation key.
- To delete characters one by one, press <**Clear**>. To delete all of the characters, press and hold <**Clear**>.
 - To insert a space between characters, press [0].
 - To enter punctuation marks, press [1].

Add a new contact

The memory location to save new contacts may be preset depending on your service provider. To change the memory location, in Menu mode, select **Phonebook** → **Management** → **Save new contact to** → a memory location.

- In Idle mode, enter a phone number and press <**Options**>.
- Select **Create contact** → a memory location (phone or SIM).
- Select a number type (if necessary).
- Enter contact information.
- Press the Confirm key to add the contact to memory.

Send and view messages

To send a text message

- In Menu mode, select **Messages** → **Create new message**.
- Enter a recipient number and scroll down.
- Enter your message text. See "Enter text."
- Press the Confirm key to send the message.

To view text messages

- In Menu mode, select **Messages** → **Inbox**.
- Select a text message.

Make fake calls

You can simulate an incoming call when you want to get out of meetings or unwanted conversations.

To make a fake call

In Idle mode, press and hold the Navigation key down.

Activate the mobile tracker

When someone inserts a new SIM card in your phone, the mobile tracker feature will automatically send the contact number to two recipients to help you locate and recover your phone. To activate the mobile tracker,

- In Menu mode, select **Settings** → **Security** → **Mobile tracker**.
- Enter your phone password and press <**OK**>.
- Select **Settings**.
- Enter your Mobile tracker password and press <**OK**>.

The first time you access **Mobile tracker**, you will be prompted to create and confirm a password.

- Scroll left or right to **On**.
- Scroll down and press the Confirm key to open the recipient list.
- Press the Confirm key to open your contact list.
- Select a contact.
- Select a number (if necessary).
- When you are finished selecting contacts, press <**Options**> → **Save**.
- Scroll down and enter the sender's name.
- Press <**Options**> → **Save** → <**Accept**>.

To change the password for the Mobile tracker, select **Change Mobile tracker password**.

Set and use alarms

To set a new alarm

- In Menu mode, select **Alarms**.
- Select an empty alarm location.
- Set alarm details.
- Press <**Save**>, or press <**Options**> → **Save**.

To stop an alarm

- When the alarm sounds,
- Press <**OK**> or the Confirm key to stop the alarm.
 - Press <**Snooze**> to silence the alarm for the snooze period.

To deactivate an alarm

- In Menu mode, select **Alarms**.
- Select the alarm you want to deactivate.
- Scroll left or right to **Off**.
- Press <**Save**>.

If the battery has been removed, the scheduled alarm may not sound.

Manage your calendar

Create an event

- In Menu mode, select **Calendar**.
- Press <**Options**> → **Create** → an event type.
- Enter the details of the event as required.
- Press <**Save**>, or press <**Options**> → **Save**.

View events

- In Menu mode, select **Calendar**.
- Select a date on the calendar.
- Select an event to view its details.

SAMSUNG ELECTRONICS

SAMSUNG

Declaration of Conformity (R&TTE)

We, Samsung Electronics declare under our sole responsibility that the product

GSM Mobile Phone : GT-E1151

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

SAFETY	EN60950-1:2001+A11:2004
EMC	EN50148-01V1.3 (04-2008) EN50148-01V1.3 (11-2005)
SAR	EN50385:2007 EN62209-1:2006
RADIO	EN301151V9.0.2(03-2003)

We hereby declare that all essential radio test suites have been carried out and that the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex IV of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, UK*
Identification mark: 0168

The technical documentation kept at : Samsung Electronics QA Lab.

which will be made available upon request.
(Representative in the EU)

Samsung Electronics Euro QA Lab, Blackbushe Business Park, Saxony Way, Yateley, Hampshire, GU48 8GG, UK

2010.03.05
(place and date of issue)

Yong-SangPark/S. Manager
(name and signature of authorised person)

* It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your phone.