

Your phone displays the following status indicators on the top of the screen:

Icon	Description
	Signal strength
	Call in progress
	Call diverting activate
	SOS message feature activated
	FM radio on
	FM radio suspended
	Alarm activated
	Roaming (outside of normal service area)
	New text message (SMS)
	New voice mail message
	Normal profile activated
	Silent profile activated
	Battery power level

Change your ringtone

- In Menu mode, select **Settings** → **Profiles**.
 - Scroll to the profile you are using.
 - If you are using the silent, meeting or offline profile, you are not allowed to change the ringtone.
 - Press **<Options>** → **Edit**.
 - Select **Call ringtone**.
 - Select a ringtone.
- To switch to another profile, select it from the list.

Call a recently dialled number

- In Idle mode, press [↵].
- Scroll left or right to a call type.
- Scroll up or down to a number or name.
- Press the Confirm key to view details of the call or [↵] to dial the number.

Activate and send an SOS message

In an emergency, you can send SOS messages to your family or friends for help.

To activate the SOS message

- In Menu mode, select **Messages** → **Settings** → **SOS messages** → **Sending options**.
- Scroll left or right to **On** to activate the SOS message feature.
- Select **Recipients** and press **<Options>** → **Contact list** to open your contact list. You can also enter phone numbers including a country code (with +) in the recipient list. Skip to step 6.
- Select a contact.
- Select a number (if necessary).
- When you are finished setting the recipients, press **<Options>** → **Save** to save the recipients.
- Scroll down and set the number of times to repeat the SOS message.
- Press **<Save>** → **<Yes>**.

To send an SOS message

- With the keys locked, press [↵] four times to send an SOS message to preset numbers. The phone switches to SOS mode and sends the preset SOS message.
- To exit SOS mode, press [⏏].

Install the SIM card and battery

- Remove the back cover and insert the SIM card.
- Insert the battery and replace the back cover.

Charge the battery

- Plug a travel adapter.
- When charging is finished, unplug the travel adapter.

Use the shortcut toolbar

You can use the shortcut toolbar to access your favourite menus.

To add menus on the shortcut toolbar

- In Menu mode, select **Settings** → **Display** → **Shortcuts toolbar**.
- Press **<Options>** → **Edit**.
- Select your favourite menus.
- Press **<Save>**.

To access a menu from the shortcut toolbar

In Idle mode, scroll left or right to the menu you want and press the Confirm key.

- When the shortcut toolbar is activated, the Navigation key does not work as shortcuts depending on your region.

Activate the mobile tracker

When someone inserts a new SIM card in your phone, the mobile tracker feature will automatically send the contact number to specified recipients to help you locate and recover your phone.

- To activate the mobile tracker,
- In Menu mode, select **Settings** → **Security** → **Mobile tracker**.
 - Enter your password and press **<OK>**. The first time you access **Mobile tracker**, you will be prompted to create and confirm a password.
 - Scroll left or right to **On** to turn on the mobile tracker feature.
 - Select **Recipients** and press **<Options>** → **Contacts** to open your contact list. You can also enter a phone number including a country code (with +). Skip to step 7.
 - Select a contact.
 - Select a number (if necessary).
 - When you are finished setting the recipients, press **<Options>** → **Save** to save the recipients.
 - Scroll down and enter the sender's name.
 - Press the Confirm key → **<Accept>**.

- Do not remove the battery before removing the travel adapter. Doing this may cause damage to the phone.
- To save energy, unplug the travel adapter when not in use. The travel adapter does not have a power switch, so you must unplug the travel adapter from the outlet to interrupt the power supply. The travel adapter should remain close to the socket when in use.

Instructional icons

	Note: notes, usage tips, or additional information
→	Followed by: the order of options or menus you must select to perform a step; for example: In Menu mode, select Messages → Create message (represents Messages , followed by Create message)
[]	Square brackets: phone keys; for example: [⏏] (represents the Power/End key)
< >	Angled brackets: softkeys that control different functions at each screen; for example: <OK> (represents the OK softkey)

Enter text

To change the text input mode

- Press and hold [#] to switch between T9 and ABC modes. Depending on your region, you may be able to access an input mode for your specific language.
- Press [#] to change case or switch to Number mode.
- Press [x] to switch to Symbol mode.
- Press and hold [x] to select an input mode or change the input language.

T9 mode

- Press the appropriate alphanumeric keys to enter an entire word.
- When the word displays correctly, press [0] to insert a space. If the correct word does not display, press the Navigation key up or down to select an alternate word.

ABC mode

Press an appropriate alphanumeric key until the character you want appears on the display.

Number mode

Press an appropriate alphanumeric key to enter a number.

Listen to the FM radio

- Plug a headset into the phone.
- In Menu mode, select **FM radio**.
- Press the Confirm key to turn on the FM radio.
- Press **<Yes>** to start automatic tuning. The radio scans and saves available stations automatically.

- The first time you turn on the FM radio, you will be prompted to start automatic tuning.

- Control the FM radio with the following keys:

Key	Function
Confirm	Turn the FM radio on or off
Navigation	• Left/Right: Fine-tune the frequency; Search for an available radio station (press and hold) • Up/Down: Adjust the volume

Turn your phone on or off

- To turn your phone on,
- Press and hold [⏏].
 - Enter your PIN and press **<OK>** (if necessary).
 - When the setup wizard opens, customise your phone as desired by following the screen.

- If the battery remains fully discharged or removed from the device, the time and date will be reset.

To turn your phone off, repeat step 1 above.

Access menus

To access your phone's menus,

- In Idle mode, press **<Menu>** to access Menu mode.
- You may need to press the Confirm key to access Menu mode depending on your region or service provider.
- Use the Navigation key to scroll to a menu or option.
- Press **<Select>**, **<Save>**, or the Confirm key to confirm the highlighted option.
- Press **<Back>** to move up one level; Press [⏏] to return to Idle mode.
- When you access a menu requiring the PIN2, you must enter the PIN2 supplied by the SIM card. For details, contact your service provider.
- Samsung is not responsible for any loss of passwords or private information or other damages caused by illegal software.

Symbol mode

Press an appropriate alphanumeric key to enter a symbol.

To use other features for text input

- To move the cursor, press the Navigation key.
- To delete characters one by one, press **<Clear>**.
- To delete characters quickly, press and hold **<Clear>**.
- To insert a space between characters, press [0].
- To change the line, press [0] three times.
- To enter punctuation marks, press [1].

Add a new contact

- The memory location to save new contacts may be preset depending on your service provider. To change the memory location, in Menu mode, select **Contacts** → **Management** → **Save new contacts to** → a memory location.

- In Idle mode, enter a phone number and press **<Options>**.
- Select **Create contact** → a memory location (if necessary).
- Select a number type (if necessary).
- Enter contact information.
- Press **<Options>** → **Save** to add the contact to memory.

Set and use alarms

To set a new alarm

- In Menu mode, select **Alarms**.
- Select an empty alarm location.
- Set alarm details.
- Press **<Save>**, or press **<Options>** → **Save**.

To stop an alarm

- When the alarm sounds,
- Press **<Confirm>** or the Confirm key to stop the alarm.
 - Press **< Snooze>** to silence the alarm for the snooze period.

To deactivate an alarm

- In Menu mode, select **Alarms**.
- Select the alarm you want to deactivate.
- Scroll left or right to **Off**.
- Press **<Save>**.

Make a call

- To turn your phone on,
- In Idle mode, enter an area code and a phone number.
 - Press [↵] to dial the number.
 - To end the call, press [⏏].

Answer a call

- When a call comes in, press [↵].
- To end the call, press [⏏].

Adjust the volume

To adjust the volume of the ringtone

- In Menu mode, select **Settings** → **Profiles**.
- Scroll to the profile you are using.
- If you are using the silent profile, you are not allowed to adjust the volume of the ringtone.
- Press **<Options>** → **Edit**.
- Select **Volume**.
- Scroll to **Call alert**.
- Scroll left or right to adjust the volume level and press **<Save>**.

To adjust the volume of voice during a call

While a call is in progress, press the Navigation key up or down to adjust the volume.

- In noisy environments, you may have difficulty hearing the calls while using the speakerphone feature. For better audio performance, use the normal phone mode.

Send and view messages

To send a text message

- In Menu mode, select **Messages** → **Create message**.
- Enter a recipient number and scroll down.
- Enter your message text. *See "Enter text."*
- Press the Confirm key to send the message.

To view text messages

- In Menu mode, select **Messages** → **Inbox**.
- Select a text message.

Make fake calls

You can simulate an incoming call when you want to get out of meetings or unwanted conversations.

To activate the fake call feature

In Menu mode, select **Settings** → **Applications** → **Call** → **Fake call** → **Fake call hot key** → **On**.

To make a fake call

- In Idle mode, press and hold the Navigation key down.
- When the keys are locked, press the Navigation key down four times.

SAMSUNG
ELECTRONICS

Declaration of Conformity (R&TTE)

Samsung Electronics

declare under our sole responsibility that the product

GSM Mobile Phone : GT-E1230

to which the declaration relates, is in conformity with the following standards and/or other normative documents:

SAFETY	EN 60950-1 : 2006+A11:2009
SAR	EN 50360 : 2001 / AC2006
	EN 62209-1 : 2006
EMC	EN 301 489-01 V1.8.1 (04-2008)
	EN 301 489-07 V1.3.1 (11-2005)
RADIO	EN 301 511 V18.2 (03-2003)

We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex(IV) of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies)

BA01: Forsyth House,
Churchfield Road,
Wotton-on-Thames,
Surrey, KT12 2TD, UK*
Identification mark: 0168

The technical documentation kept at :
Samsung Electronics QA Lab.

which will be made available upon request.
(Representative in the EU)
Samsung Electronics Euro QA Lab,
Blackhouse Business Park, Saxony Way,
Valeley, Hampshire, GU46 6GG, UK*
2011.06.19

(place and date of issue)

(name and signature of authorised person)

* It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your product.