

GT-E1282T user guide


- Some of the contents in this guide may differ from your device depending on the software of the device or your service provider.
- Third party services may be terminated or interrupted at any time, and Samsung makes no representation or warranty that any content or service will remain available for any period of time.
- This product includes certain free/open source software. The exact terms of the licenses, disclaimers, acknowledgements and notices are available on the Samsung's website opensource.samsung.com.

www.samsung.com

Printed in Korea
GH68-37514A
English (SWA), 09/2012, Rev. 1.1



Device layout

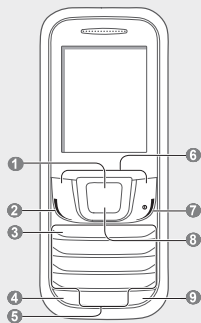

- Navigation key**
From the Home screen, access user-defined menus; in the Menu screen, scroll through menu options
Pre-defined menus might differ, depending on your service provider
- Dial Key**
Make or answer a call; From the Home screen, retrieve recently dialed, missed, or received numbers
- Voicemail key**
From the Home screen, access voice mails (press and hold)
- Keypad lock key**
From the Home screen, lock or unlock the keypad (press and hold)
- Alphanumeric keys**
- Softkeys**
Perform actions indicated at the bottom of the display
- Power key**
Turn the device on or off (press and hold); End a call; In the Menu screen, cancel an input and return to the Home screen
- Confirm key**
In the Menu screen, select the highlighted menu option, or confirm an input; From the Home screen, launch the music player
The key might perform differently, depending on your region
- SIM card selection key**
From the Home screen, switch between networks (press and hold)

Your device displays the following status indicators on the top of the screen:

Icon	Description	Icon	Description
	No SIM card		Bluetooth feature activated
	No signal		Connected with computer
	Signal strength ¹		Alarm activated
	Network searching		FM radio on
	GPRS network connected		Roaming (outside of normal service area)
	Battery power level		Memory card inserted
	Call in progress		Current time
	Call diverting activated	1. The icon may vary depending on your SIM card setting.	
	New text message (SMS)		
	SOS message feature activated		
	Normal profile activated		
	Silent profile activated		

 
Installing the SIM cards and battery

- Remove the back cover and insert the SIM cards.



Do not bend or twist the back cover excessively. Doing so may damage the cover.

- Insert the battery and replace the back cover.



Charging the battery



To AC power outlet

- Plug a charger into the multipurpose jack.
- Unplug the charger when charging is complete.

- Use only Samsung-approved chargers, batteries, and cables. Unapproved chargers or cables can cause batteries to explode or damage your device.
- Do not remove the battery before removing the charger. This may damage the device

- To save energy, unplug the charger when not in use. The charger does not have a power switch, so you must unplug the charger from the electric socket when not in use to avoid wasting power. The device should remain close to the electric socket while charging.

Installing a memory card

Your device accepts memory cards with maximum capacities of 4 GB. Depending on the memory card manufacturer and type, some memory cards may not be compatible with your device.



Memory card

Insert the memory card as shown in the drawing.

- The device supports only the FAT file system for memory cards. When inserting a card formatted in a different file system, the device asks to reformat the memory card.
- Frequent writing and erasing of data shortens the lifespan of memory cards.
- Do not use sharp tools to remove the memory card from the device.

Turning your device on or off

Turn your device on

Press and hold the Power key, then enter your PIN and press **<OK>**, if necessary.

Turn your device off

Press and hold the Power key.

- If the battery remains fully discharged or removed from the device, the time and date is reset.

Accessing menus

To access your device's menus or options,

Navigation key	Scroll to each menu.
Confirm key	Launch a menu or an application.
<Menu>	Open the Menu screen.
<Back>	Return to previous screen.
	Close a menu or an application and return to the Home screen.

- When you access a menu requiring the PIN2, you must enter the PIN2 supplied by the SIM card. For details, contact your service provider.
- Samsung is not responsible for any loss of passwords or private information or other damage caused by illegal software.

Entering text

Change the text input mode

Press [#]	Change to uppercase, lowercase, or switch to Number mode.
Press and hold [#]	Switch between T9 and ABC mode. Depending on your region, you might be able to use an input mode for your specific language.
Press [*]	Switch to Symbol mode.
Press and hold [*]	Select an input mode or change input language.

T9 mode

- Press the appropriate alphanumeric keys to enter an entire word.
- When the word displays correctly, press **[0]** to insert a space. If the word does not display, press the Navigation key up or down to select an alternate word.

ABC mode

Press an appropriate alphanumeric key until the character you want appears on the display.

Number mode

Press an appropriate alphanumeric key to enter a number.

Symbol mode

Press an appropriate alphanumeric key to enter a symbol.

Other features for text input

Navigation key	Move the cursor.
Press <Clear>	Delete characters one by one.
Press and hold <Clear>	Delete characters quickly.
Press [0]	- Insert a space. - Insert a new line (press three times).
Press [1]	Enter punctuation marks.

Making or answering a call

- To make a call, enter a phone number and press **[↵]**.
- To end a call, press **[↵]**.
- To call a recently dialed number, press **[↵]** to select a number, and press **[↵]** again to dial the number.
- To make a call using the phonebook, press **<Menu>** → **<Contacts>**, select a contact and press **[↵]**.
- To answer an incoming call, press **[↵]**.

Sending and viewing messages

<Menu> → **Messages**

Send a message

- Press **Create message**.
- Press **<Options>** → **Add recipients** → **Contact list** to open the phonebook.
- Select a contact and press **<Options>** → **Add**. Or, enter a contact number.
- Scroll down and enter a text message.
- Press **<Options>** → **Send**.

View a message

Press **Inbox** and select a message to read.

Managing your contacts

Save your data such as names, phone numbers and personal information in the device memory, SIM card, or the memory card.

<Menu> → **Contacts**

Add a new contact

- Press **Create contact** → a memory location (if necessary).
- Select a number type (if necessary)
- Enter contact information and press the Confirm key.

Edit a contact

- Select a contact and press **<Options>** → **Edit**.
- Edit items and press the Confirm key to save.

Delete a contact

Select a contact and press **<Options>** → **Delete**.

- You can change the memory location by pressing **<Menu>** → **Contacts** → **Management** → **Save new contacts** to and selecting a memory location.

Listening to music

<Menu> → **Music**

Keys	Function
Confirm key	Play, pause, or resume a music.
Navigation key	- Left: Skip backward (press); Scan backward in a file (press and hold). - Right: Skip forward (press); Scan forward in a file (press and hold). - Up/Down: Adjust the volume.
3	Turn shuffle mode on or off.
4	Change the repeat mode.

Browsing the web

<Menu> → **Browser**

- When you access **Browser** for the first time, you might be prompt to create an Internet profile.
- The browser may not support some WAP sites.

Navigate web pages

Keys	Function
Navigation key	Scroll up or down on a web page.
Confirm key	Select an item.
<Back>	Return to the previous page.
<Menu>	Open browser options.

Bookmark your favourite web page

- Press **<Menu>** → **Bookmarks** → **<Manage>** → **Add**.
- Enter details and press the Confirm key.

Managing your calendar

<Menu> → **Organiser** → **Calendar**

Create an event

- Press **<Options>** → **Create**.
- Enter details of the event and press **<Options>** → **Save**.

Using the torch

- From the Home screen, press and hold the Navigation key up to activate the torch.
- From the Home screen, press and hold the Navigation key up to deactivate the torch.

Listening to the FM radio

<Menu> → **FM radio**

Activate the FM radio

- Plug a headset into the device.
- Press the Confirm key to turn on the FM radio.
- Press **<Yes>** to start automatic tuning. You will be asked to start automatic tuning when accessing the FM radio for the first time.
- Control the FM radio using the following keys:

Keys	Function
Confirm key	Turn the FM radio on or off.
Navigation key	- Left/Right: Fine-tune the frequency; Search for the next available station (press and hold). - Up/Down: Adjust the volume.

Add a radio station to the favourites list

- Plug a headset into the device.
- Press **<Options>** → **Add to Favourites**.
- Assign a key and press **<Select>**.

Using the Bluetooth feature

<Menu> → **Applications** → **Bluetooth**

Turn on the Bluetooth feature

- Press **<Options>** → **Settings** and set **Activation** to **On**.
- Set **My phone's visibility** to allow other devices to search your device.

Find and pair with other Bluetooth devices

- Press **Search for new devices** to find other Bluetooth devices.
- Select a device and press the Confirm key.
- Enter the PIN code, and press **<OK>** to match the PIN between the devices (if necessary).
- When the other device accepts the connection, pairing is complete.

- You might have to enter a PIN, depending on the device.

Turn off the Bluetooth feature

Select **<Options>** → **Settings** and set **Activation** to **Off**.

Send data using the Bluetooth feature

- Select items to send from one of your device's applications.
- Press **<Options>** → **Send via** → **Bluetooth**.

Customising your device

Settings control how applications and functions operate. Change them to customise the device. Appearances, sound profiles, call actions and many more can be customised.

<Menu> → **Settings**

Menu	Description
SIM cards management	Change the SIM/USIM card settings.
Profiles	Change alert type, ringtone, volume, etc.
Display	Alter wallpaper, theme, brightness, etc.
Time and date	Change time and date of the device.
Phone	Change device language, etc.
Applications	Set application settings.
Security	Set locks or change passwords.
Network	Change network profiles settings.
Memory	Clear memory, manage the memory card, or set default memory location.
Reset	Reset the device.

Adjusting the sound profiles

<Menu> → **Settings** → **Profiles**

Change the ringtone

- Select a profile and press **<Options>** → **Edit**.
- Press **Call ringtone**.
- Choose a ringtone and press the Confirm key.

Change the message alert tone

- Select a profile and press **<Options>** → **Edit**.
- Press **Message alert tone**.
- Choose a tone and press the Confirm key.

Adjust the volume of the ringtone

- Select a profile and press **<Options>** → **Edit**.
- Press **Volume** → **Call alert type**.
- Adjust the volume and press **<Save>**.

Adjust the volume of voice during a call

While a call is in progress, press the Navigation key up or down to adjust the volume.

- To switch to another profile, select it from the list.

