

Mobile Phone user manual

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.
(Bluetooth QD ID : B014728)

www.samsungmobile.com

Printed in Korea
Code No: GH88-20951A
English (IND), 10/2008, Rev. 1.0

SAMSUNG

Turn off the phone or disable the wireless functions when in an aircraft

Your phone can cause interference with aircraft equipment. Follow all airline regulations and turn off your phone or switch to a mode that disables the wireless functions when directed by airline personnel.

Protect batteries and chargers from damage

- Avoid exposing batteries to very cold or very hot temperatures (below 0° C/32° F or above 45° C/113° F). Extreme temperatures can reduce the charging capacity and life of your batteries.
- Store the battery pack in a dry place.
- Prevent batteries from contacting metal objects, as this can create a connection between the + and – terminals of your batteries and lead to temporary or permanent battery damage.
- Never use a damaged charger or battery.

Handle your phone carefully and sensibly

- Do not allow your phone to get wet—liquids can cause serious damage. Do not handle your phone with wet hands. Water damage to your phone can void your manufacturer's warranty.

Safety warnings

Keep your phone away from small children and pets

Keep your phone and all accessories out of the reach of small children or animals. Small parts may cause choking or serious injury if swallowed.

Protect your hearing



Listening to a headset at high volumes can damage your hearing. Use only the minimum volume setting necessary to hear your conversation or music.

Install mobile phones and equipment with caution

Ensure that any mobile phones or related equipment installed in your vehicle are securely mounted. Avoid placing your phone and accessories near or in an air bag deployment area. Improperly installed wireless equipment can cause serious injury when air bags inflate rapidly.

- Avoid using or storing your phone in dusty, dirty areas to prevent damage to moving parts.
- Your phone is a complex electronic device—protect it from impacts and rough handling to avoid serious damage.
- Do not paint your phone, as paint can clog moving parts and prevent proper operation.
- Your phone and memory cards may be damaged by exposure to magnetic fields. Do not use carrying cases or accessories with magnetic closures or allow your phone to come in contact with magnetic fields for extended periods of time.

Avoid interference with other electronic devices

Your phone emits radio frequency (RF) signals that may interfere with unshielded or improperly shielded electronic equipment, such as pacemakers, hearing aids, medical devices, and other electronic devices in homes or vehicles. Consult the manufacturers of your electronic devices to solve any interference problems you experience.

Handle and dispose of batteries and chargers with care

- Use only Samsung-approved batteries and chargers specifically designed for your phone.
- Incompatible batteries and chargers can cause serious injuries or damage to your phone.
- Never dispose of batteries or phone in a fire. Follow all local regulations when disposing used batteries or phone.
- Never place batteries or phones on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

Avoid interference with pacemakers

Maintain a minimum of 15 cm (6 inches) between mobile phones and pacemakers to avoid potential interference, as recommended by manufacturers and the independent research group, Wireless Technology Research.

If you have any reason to suspect that your phone is interfering with a pacemaker or other medical device, turn off the phone immediately and contact the manufacturer of the pacemaker or medical device for guidance.

Important usage information

Use your phone in the normal position

Avoid contact with your phone's internal antenna.



Allow only qualified personnel to service your phone

Allowing unqualified personnel to service your phone may result in damage to your phone and will void your warranty.

Turn off the phone in potentially explosive environments

Do not use your phone at refuelling points (service stations) or near fuels or chemicals. Turn off your phone whenever directed by warning signs or instructions. Your phone could cause explosions or fire in and around fuel or chemical storage and transfer areas or blasting areas. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.

Reduce the risk of repetitive motion injuries

When sending text messages or playing games on your phone, hold the phone with a relaxed grip, press the buttons lightly, use special features that reduce the number of buttons you have to press (such as templates and predictive text), and take frequent breaks.

Ensure maximum battery and charger life

- Avoid charging batteries for more than a week, as overcharging may shorten battery life.
- Over time, unused batteries will discharge and must be recharged before use.
- Disconnect chargers from power sources when not in use.
- Use batteries only for their intended purpose.

Handle SIM cards with care

- Do not remove a card while the phone is transferring or accessing information, as this could result in loss of data and/or damage to the card or phone.
- Protect cards from strong shocks, static electricity, and electrical noise from other devices.
- Do not touch gold-coloured contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.

Safety precautions

Drive safely at all times

Avoid using your phone while driving and obey all regulations that restrict the use of mobile phones while driving. Use hands-free accessories to increase your safety when possible.

Follow all safety warnings and regulations

Comply with any regulations that restrict the use of a mobile phone in a certain area.

Use only Samsung-approved accessories

Using incompatible accessories may damage your phone or cause injury.

Turn off the phone near medical equipment

Your phone can interfere with medical equipment in hospitals or health care facilities. Follow all regulations, posted warnings, and directions from medical personnel.

Ensure access to emergency services

Emergency calls from your phone may not be possible in some areas or circumstances. Before travelling in remote or undeveloped areas, plan an alternate method of contacting emergency services personnel.


SAR information

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the European Union (EU) Council. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on the safety standards that were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies.

The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless phones employs a unit of measurement known as Specific Absorption Rate (SAR). The SAR limit set by the EU Council is 2.0 W/kg. The highest SAR value for this model phone was 0.856 W/kg.

Phone layout

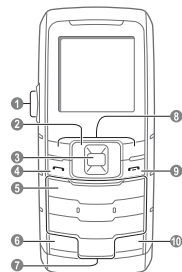

1 Volume key
In Idle mode, adjust the key tone volume; Send an SOS message
▶ Activate and send an SOS message

2 4-way navigation key
In Idle mode, access My menu mode (up) or your favourite menus directly (left/right/down); In Menu mode, scroll through menu options

3 Music player/Confirm key
In Idle mode, launch the music player; In Menu mode, select the highlighted menu option or confirm an input.

4 Dial key
Make or answer a call; In Idle mode, retrieve recently dialed, missed, or received numbers; Send an SOS message.

5 Voice mail server key
In Idle mode, access voice mails (press and hold)

6 Keypad lock key
In Idle mode, lock the keys (press and hold)

7 Alphanumeric keys

8 Soft keys
Perform actions indicated at the bottom of the display

9 Power/Menu exit key
Turn the phone on and off (press and hold); End a call; In Menu mode, cancel input and return to Idle mode

10 Silent profile key
Activate or deactivate the Silent profile (press and hold)

Your phone displays the following status indicators on the top of the screen:


Icon	Description
	Signal strength
	GPRS network connected
	Call in progress
	SOS message feature activated
	New text message (SMS)
	Alarm activated
	Bluetooth activated
	Silent mode profile
	Battery power level
	FM radio on

Install the SIM card and battery

1. Remove the battery cover and insert the SIM card.



 2. Insert the battery and replace the battery cover.



Charge the battery

1. Plug the supplied travel adapter.



2. When charging is finished, unplug the travel adapter from the phone.

Do not remove the battery from the phone before unplugging the travel adapter first. Otherwise, the phone may be damaged.

Instructional icons

	Note: notes, usage tips, or additional information
	Followed by: the order of options or menus you must select to perform a step; for example: Press <Menu> → Messages (represents Menu, followed by Messages)
	Square brackets: phone keys; for example: [↵] (represents the Power/Menu exit key)
	Angled brackets: softkeys that control different functions at each screen; for example: <OK> (represents the OK softkey)

Turn your phone on or off

1. To turn your phone on, press and hold [↵].
2. To turn your phone off, press and hold [↵].

Make a call

1. In Idle mode, enter an area code and a phone number.
2. Press [↵] to dial the number.
3. To end the call, press [↵].

In noisy environments, you may have difficulty hearing the calls while using the speakerphone feature. For better audio performance, use the normal phone mode.

Answer a call

- When a call comes in, press [↵].
- To end the call, press [⏏].

Adjust the volume

To adjust the volume of the ringtone

- In Idle mode, press < Menu > → **Settings** → **Sound settings** → **Incoming call** → **Call alert volume**.
- Press left or right to adjust the volume level.
- Press the <Save>.

To adjust the volume of voice during a call

While a call is in progress, press the volume key up or down to adjust the earpiece volume.

Change your ringtone

- In Idle mode, press < Menu > → **Settings** → **Sound settings** → **Incoming call** → **Ringtone**.
- Select a ringtone category → a ringtone and press the <Select>.

Call a recently dialled number

- In Idle mode, press [↵].
- Scroll left or right to select a call type.
- Scroll up or down to select a number or name.
- Press [☎] to view details of the call or [↵] to dial the number.

Enter text

To change the text input mode

- Press [✱] to change case.
- Press and hold [✱] to switch to an input mode.
- Press and hold [✱] to switch to Symbol mode.

T9 and Hinglish DB mode

- Press the appropriate alphanumeric keys to enter an entire word.
- When the word display correctly, press [✱] to insert a space. If the correct word does not display, press the navigation key down to select an alternate word.

ABC mode

Press the appropriate alphanumeric key until the character you want appears on the display.

Number mode

Press the appropriate alphanumeric key to enter a number.

Symbol mode

Press the appropriate alphanumeric key to select a symbol.



- To move the cursor, press the navigation key.
- To delete characters one by one, press <Clear>. To delete all of the characters, press and hold <Clear>.
- To insert a space between characters, press [␣].
- To enter punctuation marks in English mode, press [1].

Neopad Indian Mode

To enter a character in the Neopad Hindi mode:

- Press a corresponding key to access the Virtual Keypad that contains a character you want.
 - The characters will appear in the Virtual Keypad at the bottom of the display.
 - If you want to know which key is assigned to which Hindi character group, see the table of "List of the characters available in Hindi."
- Press the corresponding key 1 to 5 to enter a character, or press the ✱ key to toggle a virtual keypad page to Virama.



When you enter a character, you will see the predicted word in the word prediction box at the bottom of the display. If you want to know about this feature, see use the linguistic dictionary (Forward prediction). Otherwise, repeat above steps to enter other characters.

List of the characters available in Hindi

Key	Characters in the order displayed	
	Press the numeric key	And press the ✱ key
1	क	कखगघङ
2	च	चछजझञ
3	ट	टठडढण
4	त	तथदधन
5	प	पफबभम
6	य	यरलवश
7	ष	षसहक्षत्र
8	अ	आइईउ
9	ः	ःःःःःः
0	ॆ	ॆॆॆॆॆॆ
✱	ॆ	Virama (toggles a virtual keypad page)

Key 1~7: Consonant Groups
Key 8: Independent Vowel Group
Key 9: Dependent Vowel Group
Key 0: Signs & Symbols

Example

To enter **कम** (made up of half character), press the 1, ✱ (Virama), 1, 5, and 5 keys.

Example

To enter **किए** (क + ि + ए), press the 1, 1, 9, 2, 8, ✱ (toggles the page), and 2 keys.

Use the linguistic dictionary (Forward prediction)

- Enter the first character of the word you want.
 - You will see a word starting with the character you entered in the word prediction box at the bottom of the display.
- If that word is correct, go to step 3.
 - Alternatively, scroll up or down to search for the word you want.
- Press [☎] to select it.

Example

To enter **बहुत अच्छा** (ब + ह + ु + त + space + अ + च + + छ + ी) using the linguistic dictionary,
1. Press the 5, 3, 7, and 3 keys.

- You will see **बहुत** in the word prediction box.

2. Press [OK] to select the word.
3. Press the key to insert a space for the next word.
4. Press the 8, 1, 2, ✱ (Virama), and 1 keys.

- You will see **अच्छा** in the word prediction box.

5. Press [OK] to select the word.

List of the combination of half and full formed consonant

क् + क = क्क	त् + न = ल्न
क + क + क = क्क्क	द + ध = द्द
स् + थ् + य = स्थय	प् + द = प्द
स् + म् + थ् + क = स्मथक	द + य = च
ट् + र = ट्र	द + म = द्म
ग् + र = ग्र	श् + च = श्च
र् + ग = र्ग	श् + र = श्र
ट् + त = त्र	
द + द = द्द	

Add a new contact

- In Idle mode, enter a phone number and press <Options> → **Save contact**.
- Select **Phone** to save the number to the phone's memory.
- Select **New** → a number type.
- Enter a contact information.
- Press <Options> → **Save**.

Send and view messages

Send a text message

- In Idle mode, press <Menu> → **Messages** → **Create message** → **Text message**.
- Enter the text message.
- Press <Options> → **Send only** or **Save and send**.
- Enter the destination number.
- Press <Options> → **Send** to send the message.

View text messages

- In Idle mode, press <Menu> → **Messages** → **My messages** → **Inbox**.
- Select a text message.

Activate the mobile tracker

This feature helps track your phone when it is stolen or when someone tries to use your phone using other SIM card, the phone will automatically send the preset tracking message to family or friends. This feature may be unavailable due to certain features supported by your service provider.

- In Idle mode, press <Menu> → **Settings** → **Security** → **Mobile tracker 2.0**.
- Enter a new 4- to 8-digit password and press <OK>.
- Enter the new password again and press <OK>.
- Select **Settings**.
- Enter a new 8-digit password for the mobile tracker and press <OK>.
- Enter the new password again and press <OK>.
- Scroll left or right to **ON**.
- Scroll down and press [☎] to open the recipient list.
- Press <Options> → **Phonebook** to open your contact list.
- Scroll to a contact and press [☎].
- When you are finished selecting contacts, press <Select> to return to the recipient list.
- Press <Options> → **OK** to save the recipients.
- Scroll down and enter the sender's name.
- Press <Options> → **Save** → <Accept>.

Accessing a remote phone

If a remote phone has the mobile tracker 2.0 feature and it is activated, you can get contacts, delete data, forward calls, and get location information of the remote phone.

To delete data on the remote phone:

- In Idle mode, press <Menu> → **Settings** → **Security** → **Mobile tracker 2.0** → **Access remote phone**.
- Enter the number of the remote phone.
- Scroll down and enter the mobile tracker password of the remote phone.
- Press the <OK>.
- Select **Delete user data**.
- Press the <Yes> twice.

A call log list, Phonebook contacts, and all messages of the remote phone will be deleted.

To forward calls to another phone:

- In Idle mode, press <Menu> → **Settings** → **Security** → **Mobile tracker 2.0** → **Access remote phone**.
- Enter the number of the remote phone.
- Scroll down and enter the mobile tracker password of the remote phone.
- Press the <OK>.
- Select **Set call diverting**.
- Enter the phone number to which incoming calls of the remote phone will be forwarded.
- Press the <Options> → **Activate**.

All incoming calls of the remote phone will be forwarded to the new phone number.

To get location information:

- In Idle mode, press <Menu> → **Settings** → **Security** → **Mobile tracker 2.0** → **Access remote phone**.
- Enter the number of the remote phone.
- Scroll down and enter the mobile tracker password of the remote phone.
- Press the <OK>.
- Select **Get location information**.
- Press the <Yes>.
- You will receive a text message with the remote phone's location information.

Activate and send an SOS message

In an emergency, you can send SOS messages to your family or friends for help.

To activate the SOS message

- In Idle mode, press <Menu> → **Messages** → **SOS messages** → **Sending options**.
- Scroll left or right to **On**.
- Scroll down and press [☎] to open the recipient list.
- Press [☎] to open your contact list.
- Scroll to a contact and press [☎].
- Select a number (if necessary).
- When you are finished selecting contacts, press <Select> to return to the recipient list.
- Press <Options> → **OK** to save the recipients.

- Scroll down and set the number of times to repeat the SOS message.
- Press <Save> → <Yes>.

To send an SOS message

- With the keys locked, press the volume key four times to send an SOS message to preset numbers. The phone switches to SOS mode and send the preset SOS message.
- To exit SOS mode, press [⏏].

Listen to music

- In Idle mode, press [☎] to begin playback.
- During playback using the following keys:

Keys	Function
OK	Pause or resume playback
Volume	Adjust the volume up or down
Navigation	Left: Restart playback; Skip backward (press within 3 seconds); Scan backward in a file (press and hold) Right: Skip forward; Scan for ward in a file (press and hold) Up: Open the playlist Down: Stop playback

Listen to the FM radio

- Plug the supplied headset into the phone.
- In Idle mode, press <Menu> → **FM radio**.
- Press [OK] to start the radio.
- Press <Yes> to start automatic tuning.

The radio scans and saves available stations automatically.



The first time you access the FM radio, you will be prompted to start automatic tuning.

- Scroll up or down to a radio station.
- To turn off the FM radio, press [OK].



The volume through mono earphones is very low or virtually inaudible. Use stereo earphones only.