

Mobile Phone user manual

- Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.
- Bluetooth QD ID : B015725

www.samsungmobile.com

Printed in Korea
Code No. :GH68-25275A
English (LTN). 08/2009. Rev. 1.0



Safety warnings

Keep your phone away from small children and pets

Keep your phone and all accessories out of the reach of small children or animals. Small parts may cause choking or serious injury if swallowed.

Protect your hearing



Listening to a headset at high volumes can damage your hearing. Use only the minimum volume setting necessary to hear your conversation or music.

Install mobile phones and equipment with caution

Ensure that any mobile phones or related equipment installed in your vehicle are securely mounted. Avoid placing your phone and accessories near or in an air bag deployment area. Improperly installed wireless equipment can cause serious injury when air bags inflate rapidly.

Handle and dispose of batteries and chargers with care

- Use only Samsung-approved batteries and chargers specifically designed for your phone. Incompatible batteries and chargers can cause serious injuries or damage to your phone.
- Never dispose of batteries or phones in a fire. Follow all local regulations when disposing used batteries or phones.
- Never place batteries or phones on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

Avoid interference with pacemakers

Maintain a minimum of 15 cm (6 inches) between mobile phones and pacemakers to avoid potential interference, as recommended by manufacturers and the independent research group, Wireless Technology Research. If you have any reason to suspect that your phone is interfering with a pacemaker or other medical device, turn off the phone immediately and contact the manufacturer of the pacemaker or medical device for guidance.

Turn off the phone in potentially explosive environments

Do not use your phone at refueling points (service stations) or near fuels or chemicals. Turn off your phone whenever directed by warning signs or instructions. Your phone could cause explosions or fire in and around fuel or chemical storage and transfer areas or blasting areas. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.

Reduce the risk of repetitive motion injuries

While using your phone, hold the phone with a relaxed grip, press the keys lightly, use special features that reduce the number of keys you have to press (such as templates and predictive text), and take frequent breaks.

Do not use the phone if the screen is cracked or broken

Broken glass or acrylic could cause injury to your hand and face. Bring the phone to a Samsung service centre to replace the screen. Damage caused by careless handling will void your manufacturer's warranty.



Safety precautions

Drive safely at all times

Avoid using your phone while driving and obey all regulations that restrict the use of mobile phones while driving. Use hands-free accessories to increase your safety when possible.

Follow all safety warnings and regulations

Comply with any regulations that restrict the use of a mobile phone in a certain area.

Use only Samsung-approved accessories

Using incompatible accessories may damage your phone or cause injury.

Turn off the phone near medical equipment

Your phone can interfere with medical equipment in hospitals or health care facilities. Follow all regulations, posted warnings, and directions from medical personnel.

Turn off the phone or disable the wireless functions when in an aircraft

Your phone can cause interference with aircraft equipment. Follow all airline regulations and turn off your phone or switch to a mode that disables the wireless functions when directed by airline personnel.

Protect batteries and chargers from damage

- Avoid exposing batteries to very cold or very hot temperatures (below 0° C/32° F or above 45° C/113° F). Extreme temperatures can reduce the charging capacity and life of your batteries.
- Prevent batteries from contacting metal objects, as this can create a connection between the + and – terminals of your batteries and lead to temporary or permanent battery damage.
- Never use a damaged charger or battery.

Handle your phone carefully and sensibly

- Do not disassemble your phone due to a risk of electric shock.
- Do not allow your phone to get wet—liquids can cause serious damage and will change the colour of the label that indicates water damage inside the phone. Do not handle your phone with wet hands. Water damage to your phone can void your manufacturer's warranty.
- Avoid using or storing your phone in dusty, dirty areas to prevent damage to moving parts.
- Your phone is a complex electronic device—protect it from impacts and rough handling to avoid serious damage.
- Do not paint your phone, as paint can clog moving parts and prevent proper operation.
- If your phone has a camera flash or light, avoid using it close to the eyes of children or animals.
- Your phone may be damaged by exposure to magnetic fields. Do not use carrying cases or accessories with magnetic closures or allow your phone to come in contact with magnetic fields for extended periods of time.

Avoid interference with other electronic devices

 
Your phone emits radio frequency (RF) signals that may interfere with unshielded or improperly shielded electronic equipment, such as pacemakers, hearing aids, medical devices, and other electronic devices in homes or vehicles. Consult the manufacturers of your electronic devices to solve any interference problems you experience.



Important usage information

Use your phone in the normal position


Avoid contact with your phone's internal antenna.

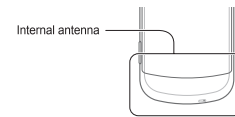

In normal use, the actual SAR is likely to be much lower, as the phone has been designed to emit only the RF energy necessary to transmit a signal to the nearest base station. By automatically emitting lower levels when possible, your phone reduces your overall exposure to RF energy.

The FCC has granted an Equipment Authorization for this model phone based on the compliance of all reported SAR levels with the FCC RF exposure guidelines. The authorization can be found on the FCC Office of Engineering and Technology website at <http://www.fcc.gov/oet/ea> (search for grantee code A3L and product code M2520).

 Phone layout

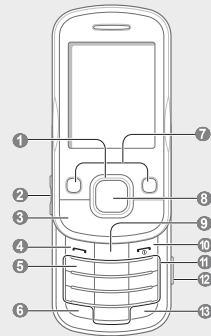

①

4-way navigation key

In Idle mode, access predefined menus; In Menu mode, scroll through menu options

②

Volume key

In Idle mode, adjust the key tone volume. Send an SOS message
▶ Activate and send an SOS message

③

Music control keys

Control music playback

④

Dial key

Make or answer a call; In Idle mode, retrieve recently dialed, missed, or received numbers

⑤

Voice mail service key

In Idle mode, access voice mails (press and hold)

⑥

Pause key

Enter a dial pause (press and hold)

⑦

Softkeys

Perform actions indicated at the bottom of the display

⑧

Confirm key

In Idle mode, access Menu mode; In Menu mode, select the highlighted menu option or confirm an input

⑨

Delete key

Delete characters or items in an application

⑩

Power/Menu exit key

Turn the phone on and off (press and hold); End a call; In Menu mode, cancel input and return to Idle mode

⑪

Alphanumeric keys

⑫

Camera key

In Idle mode, turn on the camera (press and hold); In Camera mode, take a photo or record a video

⑬

Silent profile key

In Idle mode, activate or deactivate the silent profile (press and hold)

Your phone displays the following status indicators on the top of the screen:


Icon	Description	Icon	Description
	Signal strength		New voice mail message
	GPRS network connected		Music playback in progress
	EDGE network connected		Music playback paused
	Call in progress		FM radio on
	SOS message feature activated		Normal profile activated
	Bluetooth activated		Silent profile activated
	Memory card inserted		Battery power level
	New message		Current time

Install the SIM card and battery

- Remove the battery cover and insert the SIM card.



 - Insert the battery and replace the battery cover.

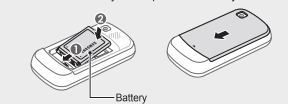

Insert a memory card (optional)

 
Your phone accepts microSD™ or microSDHC™ memory cards up to 8 GB (depending on memory card manufacturer and type).

 Formatting the memory card on a PC may cause incompatibility with your phone. Format the memory card only on the phone.

1. Remove the battery cover and battery.
2. Unlock the memory card cover.



3. Lift the memory card cover and insert a memory card with the label side facing up.

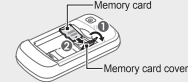

4. Close and lock the memory card cover.
5. Replace the batter and battery cover.

Charge the battery

1. Plug the supplied travel adapter.
2. When charging is finished, unplug the travel adapter.



To AC power outlet

 Do not remove the battery from the phone before unplugging the travel adapter first. Otherwise, the phone may be damaged.

Instructional icons

	Note: notes, usage tips, or additional information
	Followed by: the order of options or menus you must select to perform a step; for example: In Menu mode, select Messages → Create message (represents Messages , followed by Create message)
	Square brackets: phone keys; for example: [*#] (represents the Power/Menu exit key)
	Angled brackets: softkeys that control different functions at each screen; for example: <OK> (represents the OK softkey)

Enter text

To change the text input mode

- Press and hold **[#]** to switch between T9 and ABC modes.
- Press **[#]** to change case or switch to Number mode.
- Press **[*]** to switch to Symbol mode.
- Press and hold **[*]** to select an input mode or change the input language.

T9 mode

1. Press the appropriate alphanumeric keys to enter an entire word.
2. When the word displays correctly, press **[0]** to insert a space. If the correct word does not display, select an alternate word from the list that appears.

ABC mode

Press an appropriate alphanumeric key until the character you want appears on the display.

Number mode

Press an appropriate alphanumeric key to enter a number.

Symbol mode

Press an appropriate alphanumeric key to enter a symbol.

 • To move the cursor, press the Navigation key.
• To delete characters one by one, press **[C]**. To delete all of the characters, press and hold **[C]**.
• To insert a space between characters, press **[0]**.
• To enter punctuation marks in English modes, press **[!]**.

Add a new contact

1. In Idle mode, enter a phone number and press **<Options>**.
2. Select **Save contact** → a memory location (phone or SIM) → **New**.
3. Select a number type (if necessary).
4. Enter contact information.
5. Press **<Save>** or press **<Options>** → **Save** to add the contact to memory.

Send and view messages

To send a text or multimedia message

1. In Menu mode, select **Messages** → **Create message**.
2. Enter a recipient number and scroll down.

3. Control playback using the following keys:

Key	Function
Confirm	Open a playlist
	Adjust the volume
	Restart playback; Skip backward (press within 3 seconds); scan backward in a file (press and hold)
	Pause or resume playback
	Skip forward; scan forward in a file (press and hold)

To find music from the online music service

You can access an online music recommendation service and find songs. In Menu mode, select **MUSIC** → **Find recommendation**. The service will search the database and suggest new songs based on the songs you have played most often.

To find information of music

You can access an online music service and get information about the songs you hear while on the move. In Menu mode, select **MUSIC** → **Find music**.

To update information of music

You can update the information of your music, such as title or artist, to correctly identify and label your music files. In Menu mode, select **MUSIC** → **Find tag**.

Turn your phone on or off

To turn your phone on,

1. Press and hold **[*#]**.
2. Enter your PIN and press **<OK>** (if necessary).
3. When the setup wizard opens, customize your phone as desired by following the screen.

To turn your phone off, repeat steps 1 and 2 above.

Access menus

To access your phone's menus,

1. In Idle mode, press the Confirm key to access Menu mode.
2. Use the Navigation key to scroll to a menu or option.
3. Press **<Select>**, **<OK>**, or the Confirm key to confirm the highlighted option.
4. Press **<Back>** to move up one level; Press **[*#]** to return to Idle mode.

 • When you access a menu requiring the PIN2, you must enter the PIN2 supplied by the SIM card. For details, contact your service provider.
• Samsung is not responsible for any loss of passwords or private information or other damages caused by illegal software.

3. Enter your message text. ► *Enter text*
For sending as a text message, skip to step 5.
For attaching multimedia, continue with step 4.
4. Press **<Options>** → **Add multimedia** and add an item.
5. Press the Confirm key to send the message.

To view text or multimedia messages

1. In Menu mode, select **Messages** → **Inbox**.
2. Select a text or multimedia message.

Activate the mobile tracker

When someone inserts a new SIM card in your phone, the mobile tracker feature will automatically send the contact number to two recipients to help you locate and recover your phone. To activate the mobile tracker,

1. In Menu mode, select **Settings** → **Security** → **Mobile tracker**.
2. Enter your password and press **<OK>**.

 The first time you access **Mobile tracker**, you will be prompted to create and confirm a password.

3. Scroll left or right to **On**.
4. Scroll down and press the Confirm key to open the recipient list.
5. Press **<Options>** → **Phonebook** to open your contact list.

Listen to the FM radio

1. Plug the supplied headset into the phone.
2. In Menu mode, select **FM radio**.
3. Press the Confirm key to start the FM radio.
4. Press **<Yes>** to start automatic tuning.
The radio scans and saves available stations automatically.

 The first time you turn on the FM radio, you will be prompted to start automatic tuning.

5. Control the FM radio using the following keys:

Key	Function
Confirm	Turn the FM radio on or off
	Adjust the volume
Navigation	• Left/Right: Tune a radio station; Select a saved radio station (press and hold) • Up/Down: Select a radio station saved in the favorite list

6. To turn off the FM radio, press the Confirm key.

Use the Bluetooth wireless feature

To turn on the Bluetooth wireless feature

1. In Menu mode, select **Applications** → **Bluetooth**.
2. Press **<Options>** → **Settings**.
3. Scroll down to **Activation**.

Make a call

1. In Idle mode, enter an area code and a phone number.
2. Press **[↵]** to dial the number.
3. To end the call, press **[*#]**.

Answer a call

1. When a call comes in, press **[↵]**.
2. To end the call, press **[*#]**.

Adjust the volume

To adjust the volume of the ringtone

1. In Menu mode, select **Settings** → **Phone profiles**.
2. Scroll to the phone profile you are using.

 If you are using the silent or offline profile, you are not allowed to adjust the volume of the ringtone.

3. Press **<Options>** → **Edit** → **Call alert volume**.
4. Scroll left or right to adjust the volume level.
5. Press **<Select>** → **<Save>**.

Activate and send an SOS message

In an emergency, you can send SOS messages to your family or friends for help.

To activate the SOS message

1. In Menu mode, select **Messages** → **Settings** → **SOS messages** → **Sending options**.
2. Scroll left or right to **On**.
3. Scroll down and press the Confirm key to open the recipient list.
4. Press **<Options>** → **Phonebook** to open your contact list.
5. Scroll to a contact and press the Confirm key.
6. Select a number (if necessary).
7. When you are finished selecting contacts, press **<Select>** to return to the recipient list.
8. Press the Confirm key to save the recipients.

4. Scroll left or right to **On**.

5. To allow other devices to locate your phone, scroll down to **My phone's visibility** and scroll left or right to **On**.
6. Press **<Save>**.

To find and pair with other Bluetooth-enabled devices

1. In Menu mode, select **Applications** → **Bluetooth** → **Search for new devices**.
2. Scroll to a device and press **<Select>**.
3. Enter a PIN for the Bluetooth wireless feature or the other device's Bluetooth PIN, if it has one, and press **<OK>**.
When the owner of the other device enters the same code or accepts the connection, pairing is complete.

To send data using the Bluetooth wireless feature

1. Select the file or item from one of your phone's applications that you want to send.
2. Press **<Options>** → **Send via** or **Send namecard via** → **Bluetooth** (when sending contact data, specify which data to send).

To receive data using the Bluetooth wireless feature

1. Enter the PIN for the Bluetooth wireless feature and press **<OK>** (if necessary).
2. Press **<Yes>** to confirm that you are willing to receive data from the device (if necessary).

To adjust the volume of voice during a call

While a call is in progress, press **[▲/▼]** to adjust the volume.

 In noisy environments, you may have difficulty hearing the calls while using the speakerphone feature. For better audio performance, use the normal phone mode.

Change your ringtone

1. In Menu mode, select **Settings** → **Phone profiles**.
2. Scroll to the profile you are using.

 If you are using the silent or offline profile, you are not allowed to change the ringtone.

3. Press **<Options>** → **Edit** → **Voice call ringtone**.
4. Select a ringtone category → a ringtone.
5. Press **<Save>**.

Call a recently dialed number

1. In Idle mode, press **[↵]**.
2. Scroll left or right to a call type.
3. Scroll up or down to select a number or name.
4. Press the Confirm key to view details of the call or **[↵]** to dial the number.

9. Scroll down and set the number of times to repeat the SOS message.
10. Press **<Save>**.

To send an SOS message

1. With the keys locked, press the Volume key four times to send an SOS message to preset numbers.
The phone switches to SOS mode and sends the preset SOS message.
2. To exit SOS mode, press **[*#]**.

Use the camera

To capture photos

1. In Idle mode, press and hold **[0]**.
2. Rotate the phone counter-clockwise to landscape view.
3. Aim the lens at the subject and make any adjustments.
4. Press **[0]** or the Confirm key to take a photo.
5. Press **<0>** to take another photo (step 3).

To view photos

In Menu mode, select **My files** → **Images** → **My photos** → a photo file.

Set and use alarms

To set a new alarm

1. In Menu mode, select **Alarms**.
2. Select an empty alarm location.
3. Set alarm details.
4. Press **<Save>**.

To stop an alarm

When the alarm sounds,

- Press the Confirm key to stop the alarm without snooze.
- Press **<Confirm>** to stop the alarm with snooze, or press **<Snooze>** to silence the alarm for the snooze period.

To deactivate an alarm

1. In Menu mode, select **Alarms**.
2. Select the alarm you want to deactivate.
3. Scroll down to **Alarm activation** (if necessary).
4. Scroll left or right to **Off**.
5. Press **<Save>**.