

SM-B350E user manual

- Some content may differ from your device depending on the region or service provider.
- Third party services may be terminated or interrupted at any time, and Samsung makes no representation or warranty that any content or service will remain available for any period of time.
- This product includes certain free/open source software. The exact terms of the licences, disclaimers, acknowledgements and notices are available on the Samsung's website opensource.samsung.com.
- Content (high quality content) that requires high CPU and RAM usage will affect the overall performance of the device. Applications related to the content may not work properly depending on the device's specifications and the environment that it is used in.

 
www.samsung.com

Printed in Korea
GH68-44308A Rev.1.1
English (EU), 09/2018



Device layout

Front

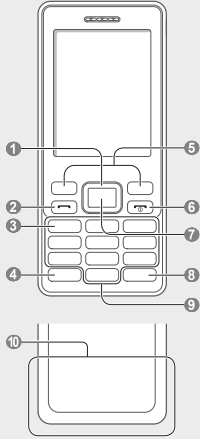

Back

1

Navigation button
From the Home screen, scroll through widgets; In the Menu screen, scroll through menu options

2

Dial button
Make or answer a call; From the Home screen, retrieve recently dialled, missed, or received numbers

3

Voicemail button
From the Home screen, access voicemails (press and hold)

4

Keypad lock button
From the Home screen, lock or unlock the keypad (press and hold)

5

Softkeys
Perform actions indicated at the bottom of the display

6

Power button
Turn the device on or off (press and hold); End a call; In the Menu screen, cancel an input and return to the Home screen

7

Confirm button
In the Menu screen, select the highlighted menu option, or confirm an input
The key might perform differently, depending on the region

8

SIM card selection button
From the Home screen, switch between networks (press and hold)

9

Alphanumeric buttons

10

Internal antenna
Do not cover the antenna area with your hands or other objects. This may cause connectivity problems or drain the battery

The device displays the following status indicators at the top of the screen:


Icon	Description
	No SIM card
	No signal
	Signal strength ¹
	Network searching
	GPRS network connected
	EDGE network connected
	Battery power level
	Call in progress
	Call diverting activated
	New text message (SMS)
	New multimedia message (MMS)
	New voice mail message
	New push message

Icon	Description
	Normal profile activated
	Silent profile activated
	Connected to computer
	Bluetooth feature activated
	Alarm activated
	Music playback in progress
	Music playback paused
	FM radio on
	Roaming (outside of normal service area)
	Memory card inserted
	Current time

1. The icon may vary depending on the SIM card setting.


Installing the SIM cards and battery

 1. Remove the back cover and insert the SIM cards.




Do not bend or twist the back cover excessively. Doing so may damage the cover.

 2. Insert the battery and replace the back cover.




Charging the battery

 

1. Plug the small end of the charger into the multipurpose jack of the device, and plug the large end of the charger into an electric socket.
 2. After fully charging, disconnect the device from the charger. First unplug the charger from the device, and then unplug it from the electric socket.
- Use only Samsung-approved chargers, batteries, and cables. Unapproved chargers or cables can cause battery to explode or damage the device.
 - Do not remove the battery before removing the charger. This may damage the device.
- To save energy, unplug the charger when not in use. The charger does not have a power switch, so you must unplug the charger from the electric socket when not in use to avoid wasting power. The charger should remain close to the electric socket and easily accessible while charging.

Insert a memory card (optional)

 The device accepts memory cards with maximum capacities of 16 GB. Depending on the memory card manufacturer and type, some memory cards may not be compatible with the device.



Insert the memory card as shown in the drawing.

- Formatting the memory card on a computer might cause incompatibility with your device. Format the memory card only on the device.
- Frequent writing and erasing of data will shorten the lifespan of memory cards.
- Do not use sharp tools to remove the memory card from the device.

Turning the device on or off

Turning the device on

Press and hold , and then enter the PIN and press **<OK>**, if necessary.

Turning the device off

Press and hold .

If the battery is fully discharged or removed from the device, the time and date will be reset.

Accessing menus

To access the device's menus or options,

Navigation button	Scroll to each menu.
Confirm button	Launch a menu or an application.
<Menu>	Open the Menu screen.
<Back>	Return to the previous screen.
	Close the menu or application and return to the Home screen.

- When you access a menu requiring the PIN2, you must enter the PIN2 supplied by the SIM card. For details, contact your service provider.
- Samsung is not responsible for any loss of passwords or private information or other damage caused by illegal software.

Entering text

Changing the text input mode

Press [#]	Change to uppercase, lowercase, or switch to number mode.
Press and hold [#]	Switch between T9 and ABC mode. Depending on the region, users might be able to use an input mode for specific language.
Press [*]	Switch to symbol mode.
Press and hold [*]	Select an input mode, change the input language, or select words in word list.

T9 mode

1. Press the appropriate alphanumeric buttons to enter an entire word.
2. When the word displays correctly, press **[0]** to insert a space. If the word does not display, press the Navigation button up or down to select an alternate word.

ABC mode

Press an appropriate alphanumeric button until the character appears on the display.

Number mode

Press an appropriate alphanumeric button to enter a number.

Symbol mode

Press an appropriate alphanumeric button to enter a symbol.

Other features for text input

Press the Navigation button	Move the cursor.
Press <Clear>	Delete characters one by one.
Press and hold <Clear>	Delete characters quickly.
Press [0]	Insert a space. Press three times to change the line.
Press [!]	Enter punctuation marks.

Making or answering a call

- To make a call, enter a phone number and press **[↵]**.
- To end a call, press **[⏏]**.
- To call a recently dialled number, press **[↵]** to select a number, and press **[↵]** again to dial the number.
- To make a call using the phonebook, press **<Menu>** → **<Contacts>**, select a contact and press **[↵]**.
- To answer an incoming call, press **[↵]**.

Sending and viewing messages

<Menu> → **Messages**

Sending messages

1. Press **Create message**.
2. Enter a contact number or press **Add** to open the phonebook.
3. Select a contact and press **Add**.
4. Scroll down and enter a text message.
See "Entering text".
5. To attach files with the message, press **<Options>** → **Add multimedia** and select files.
6. Press **Send**.

Viewing messages

Press **Inbox** and select a message to read.

Managing contacts

Save data, such as names, phone numbers and personal information in the device memory or the SIM card.

<Menu> → **Contacts**

Users can change the memory location by pressing **<Menu>** → **Contacts** → **<Options>** → **Settings** → **Save new contact to** and selecting a memory location.

Adding new contacts

1. Press **Create** → a memory location (if necessary).
2. Select a number type (if necessary).
3. Enter contact information and press the Confirm button.

Editing contacts

1. Select a contact and press **<Options>** → **Edit**.
2. Edit items and press the Confirm button to save.

Deleting contacts

Select a contact and press **<Options>** → **Delete**.

Using the camera

<Menu> → **Camera**

Taking photos

1. Rotate the device anti-clockwise to landscape view. Or, press **[8]** to switch between landscape and portrait view.
2. Aim the lens at the subject and make any adjustments by pressing **<Options>**.
3. Press the Confirm button to take a photo. Photos are saved automatically.

Recording videos

1. Press **<Options>** → **Camcorder**. Or, press **[1]** to change from **Camera** to **Camcorder**.
2. Rotate the device anti-clockwise to landscape view.
3. Aim the lens at the subject and make any adjustments by pressing **<Options>**.
4. Press the Confirm button to start recording.
5. Press **[2]** to end recording. Videos are saved automatically.

Viewing photos and videos

From the Home screen, press **<Menu>** → **My Files** → **Images** or **Videos** and select an item to view.

Listening to music

<Menu> → **Music**

Buttons	Function
Confirm button	Play, pause, or resume music.
Navigation button	• Left: Skip backwards (press); Scan backwards in a file (press and hold). • Right: Skip forwards (press); Scan forwards in a file (press and hold). • Up/Down: Adjust the volume.
1	Rate the current track.
2	Change the sound effect.
3	Change the music display.
4	Change the repeat mode.
5	Turn shuffle mode on or off.

Browsing the web

<Menu> → **Opera Mini**

When users access **Opera Mini** for the first time, users might be prompted to create an Internet profile.

Navigating webpages

Buttons	Function
Navigation button	Scroll up or down on a webpage.
Confirm button	Select an item.
<Back>	Return to the previous page.
<Menu>	Open browser options.

Bookmarking webpages

1. Open a webpage to bookmark.
2. Press **<Menu>** → Select for drop-down list.
3. Select **Bookmarks** → **<Add>**.
4. Enter details and press **<Save>**.

Using the alarm

<Menu> → **Alarms**

Setting alarms

1. Press **<Create>**.
2. Enter details and press **<Save>**.

Stopping alarms

- When an alarm rings,
- Press **<Confirm>** to stop the alarm.
- Press **<Snooze>** to silence the alarm for the snooze period.

Deleting alarms

Select an item and press **<Options>** → **Delete**.

Deactivating alarms

Select an item and press **<Options>** → **Deactivate alarm**.

Managing calendar

<Menu> → **Calendar**

Creating events

1. Press **<Options>** → **Create** and select an event type.
2. Enter details of the event and press **<Save>**.

Viewing events

Select a date and press the Confirm button. To change the calendar view, press **<Options>** → **Week view** or **Month view**.

Listening to the FM radio

<Menu> → **FM Radio**

Activating the FM radio

1. Plug a headset into the device.
2. Press the Confirm button to turn on the FM radio.
3. Press **<Yes>** to start automatic tuning. Users may be asked to start automatic tuning when accessing the FM radio for the first time.
4. Control the FM radio using the following buttons:

Buttons	Function
Confirm button	Turn the FM radio on or off.
Navigation button	• Left/Right: Fine-tune the frequency; Search for the next available station (press and hold). • Up/Down: Adjust the volume.

Adding radio stations to the favourites list

1. Plug a headset into the device.
2. Press **<Options>** → **Add to** → **Favourites**.
3. Assign a button and press **<Select>**.

Using the Bluetooth feature

<Menu> → **Bluetooth**

Turning on the Bluetooth feature

1. Press **<Options>** → **Settings** and set **Bluetooth** to **On**.
2. Set **My phone's visibility** to allow other devices to search for the device.

Finding and pairing with other Bluetooth devices

1. Press the Confirm button to find other Bluetooth devices.
2. Select a device and press the Confirm button.
3. Press **<Yes>** to match the PIN between the devices.
4. When the other device accepts the connection, pairing is complete.

Users might have to enter a PIN, depending on the device.

Turning off the Bluetooth feature

Select **<Options>** → **Settings** and set **Bluetooth** to **Off**.

Sending data using the Bluetooth feature

1. Select items to send from one of the device's applications.
2. Press **<Options>** → **Send via** → **Bluetooth**.

Customising the device

Settings control how applications and functions operate. Change them to customise the device. Appearances, sound profiles, call actions, and many more can be customised.

<Menu> → **Settings**

Menu	Description
SIM cards management	Change the SIM/USIM card settings.
Profiles	Change the alert type, ringtone, volume, etc.
Display	Alter wallpaper, theme, brightness, etc.
Time and date	Change the time and date of the device.
Phone	Change the device language, etc.
Call	Set auto reject, answering mode, call forwarding, fake call, etc.
Data usage	Keep track of your data usage amount and customise the settings.
Backup manager	Back up or restore data.
Security	Set locks or change passwords.
PC connections	Set connection settings with a computer.

Menu	Description
Network	Change network profiles settings.
Ultra power saving	Activate or deactivate ultra power saving mode.
Memory	Clear memory, manage the memory card, or set the default memory location.
Reset	Reset the device.

Adjusting the sound profiles

 <Menu> → Settings → Profiles

-  To switch to another profile, select it from the list.

Changing the ringtone

- Select a profile and press <Edit>.
- Press **Voice call ringtone**.
- Select a ringtone and press the Confirm button.

Changing the message alert tone

- Select a profile and press <Edit>.
- Press **Message alert tone**.
- Select a tone and press the Confirm button.

Adjusting the volume of the ringtone

- Select a profile and press <Edit>.
- Press **Volume** → Call alert.
- Adjust the volume and press <Save>.

Adjusting the volume of voice during a call

While a call is in progress, press the Navigation button up or down to adjust the volume.

Backing up data

Back up data, such as contacts, messages, calendar, and tasks to the memory card. To use this feature, a memory card must be installed.

 <Menu> → Settings → Backup manager

Backing up data

Press **Backup**, select items to back up and press <Backup>.

Restoring data

Press **Restore**, select items to restore and press <Restore>.

Using the torch

 <Menu> → Torch light

Activating the torch

Press **On** to activate the torch, or from the Home screen, press and hold the Navigation button up.

Deactivating the torch

Press **Off** to deactivate the torch, or from the Home screen, press and hold the Navigation button up.

Using widgets

Use widgets to perform specific tasks for applications such as contacts, calendar, and many more.

Launching widgets

From the Home screen, scroll left or right to see another panel and select a widget.

Organising widgets

- From the Home screen, select  at the top right corner of the screen.
- Press <Options> → **Add**, select a widget, select a panel to add the widget, and then press <Add>.
- When you are finished, press <Options> → **Save**.



- Some widgets require connection to web services. Selecting a web-based widget might incur additional charges.
- Available widgets might vary, depending on the region or service provider.

Managing SIM cards

The device supports dual SIM mode that allows the use of two networks without changing the SIM card.

 <Menu> → Settings → SIM cards management

Activating SIM cards

- Press **Network** and select a SIM card.
- Press <Change> to activate the card.

Switching SIM cards automatically

- Press **Auto switch SIM card** → **Activation** to select **On**.
- Set starting and ending time to use each SIM card.

Changing names and icons of the SIM cards

- Press **Register card** and select a SIM card.
- Change the name and icon of the card.

-  Your Device supports dual standby with two different networks. You cannot make or answer calls on both networks at the same time.

Activate the Smart dual SIM

- Press **Dual SIM always on** to activate the Smart dual SIM feature.
- Select an option and press <Options> → **Save**.

-  When this feature is enabled, you may incur additional charges for call forwarding depending on the region or service provider.

Data service network

- Press **Data service network** to select a SIM card for data services.
- Select a SIM card.

Making fake calls

 <Menu> → Settings → Call → Fake call

Activating the fake call feature

- Set Fake call hot key to On**.
- Change caller name or number (if necessary).

Making fake calls

- From the Home screen, press and hold the Navigation button down.
- With the buttons locked, press the Navigation button down four times.

Safety information



This product meets applicable national SAR limits of 2.0 W/kg. The specific maximum SAR values can be found in the SAR information section of this manual.

When carrying the product or using it while worn on your body, maintain a distance of 1.5 cm from the body to ensure compliance with RF exposure requirements.

Trademarks

- SAMSUNG and the SAMSUNG logo are registered trademarks of Samsung Electronics.
- Bluetooth® is a registered trademark of the Bluetooth SIG, Inc. worldwide.
- All other trademarks and copyrights are the property of their respective owners.

Please read this important safety information before you use the device. It contains general safety information for devices and may include content that does not apply to your device. Follow the warning and caution information to prevent injury to yourself or others and to prevent damage to your device.

The term 'device' refers to the product and its battery, charger, the items supplied with the product, and any Samsung-approved accessories used with the product.

- Always comply with regulations, instructions and signs in potentially explosive environments.
- Do not take your device at refueling points (petrol stations), near fuels or chemicals, or in blasting areas.
- Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories.

If you notice strange smells or sounds coming from your device or the battery, or if you see smoke or liquids leaking from the device or battery, stop using the device immediately and take it to a Samsung Service Centre

Failure to do so may result in fire or explosion.

Comply with all safety warnings and regulations regarding mobile device usage while operating a vehicle

While driving, safely operating the vehicle is your first responsibility. Never use your mobile device while driving. If it is prohibited by law. For your safety and the safety of others, use your common sense and remember the following tips:

- Get to know your device and its convenience features, such as speed dial and redial. These features help you reduce the time needed to place or receive calls on your mobile device.
- Position your device within easy reach. Make sure you can access your wireless device without taking your eyes off the road. If you receive an incoming call at an inconvenient time, let your voicemail answer it for you.
- Suspend calls in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice, and heavy traffic can be hazardous.
- Do not take notes or look up phone numbers. Jotting down a "to do" list or flipping through your address book takes attention away from your primary responsibility of driving safely.
- Do not use the device while driving. If you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary.
- Do not engage in stressful or emotional conversations that may be distracting. Make the person you are talking to aware that you are driving and suspend conversations that could potentially divert your attention from the road.

When cleaning your device, mind the following

- Wipe your device or charger with a towel or an eraser.
- Clean the battery terminals with a cotton ball or a towel.
- Do not use chemicals or detergents. Doing so may discolour or corrode the outside of the device or may result in electric shock or fire.

Do not use the device for anything other than its intended use

Your device may malfunction.

Avoid disturbing others when using the device in public

Allow only qualified personnel to service your device

Allowing unqualified personnel to service your device may result in damage to your device and will void your manufacturer's warranty.

Handle SIM cards, memory cards, or cables with care

- When inserting a card or connecting a cable to your device, make sure that the card is inserted or the cable is connected to the proper side.
- Do not remove a card while the device is transferring or accessing information, as this could result in loss of data and/or damage to the card or device.
- Protect cards from strong shocks, static electricity, and electrical noise from other devices.
- Do not touch gold-coloured contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.
- Inserting a card or connecting a cable by force or improperly may result in damage to the multipurpose jack or other parts of the device.

Ensure access to emergency services

Emergency calls from your device may not be possible in some areas or circumstances. Before travelling in remote or undeveloped areas, plan an alternative method of contacting emergency services personnel.

Warning

Failure to comply with safety warnings and regulations can cause serious injury or death

Do not use damaged power cords or plugs, or loose electrical sockets

Unsecured connections can cause electric shock or fire.

Do not touch the power cord with wet hands or disconnect the charger by pulling the cord

Doing so may result in electrocution.

Do not bend or damage the power cord

Doing so may cause electric shock or fire.

Do not use your device while it is charging or touch your device with wet hands

Doing so may cause electric shock.

Do not directly connect together the charger's positive and negative terminals

Doing so may cause fire or serious injury.

Do not use your device outdoor during a thunderstorm

Doing so may result in electric shock or device malfunction.

Use manufacturer-approved batteries, chargers, accessories, and supplies

- Using generic batteries or chargers may shorten the life of your device or cause the device to malfunction. They may also cause a fire or cause the battery to explode.
- Use only Samsung-approved battery and charger specifically designed for your device. Incompatible battery and charger can cause serious injuries or damage to your device.
- Samsung cannot be responsible for the user's safety when using accessories or supplies that are not approved by Samsung.

Care and use your device properly

Keep your device dry

- Humidity and liquids may damage the parts or electronic circuits in your device.

- Do not turn on your device if it is wet. If your device is already on, turn it off and remove the battery immediately (if the device will not turn off or you cannot remove the battery, leave it as-is). Then, dry the device with a towel and take it to a service centre.

This device has internal liquid indicators fitted. Water damage to your device may void the manufacturer's warranty.

Store your device only on flat surfaces

If your device falls, it may be damaged.

The device can be used in locations with an ambient temperature of 0°C to 35°C. You can store the device at an ambient temperature of -20°C to 50°C. Using or storing the device outside of the recommended temperature ranges may damage the device or reduce the battery's lifespan

- Do not store your device in very hot areas such as inside a car in the summertime. Doing so may cause the screen to malfunction, result in damage to the device, or cause the battery to explode.
- Do not expose your device to direct sunlight for extended periods of time (on the dashboard of a car, for example).
- The battery can be stored separately in locations with an ambient temperature of 0°C to 45°C.

Do not store your device with metal objects, such as coins, keys, and necklaces

- Your device may be scratched or may malfunction.
- If the battery terminals come into contact with metal objects, this may cause a fire.

Do not store your device near magnetic fields

- Your device may malfunction or the battery may discharge from exposure to magnetic fields.
- Magnetic stripe cards, including credit cards, phone cards, passbooks, and boarding passes, may be damaged by magnetic fields.

Protect your personal data and prevent leakage or misuse of sensitive information

- While using your device, be sure to back up important data. Samsung is not responsible for the loss of any data.
- When disposing of your device, back up all data and then reset your device to prevent misuse of your personal information.

Carefully read the permissions screen when downloading applications. Be particularly cautious with applications that have access to many functions (or to a significant amount of your personal information).

- Check your accounts regularly for unapproved or suspicious use. If you find any sign of misuse of your personal information, contact your service provider to delete or change your account information.
- In the event your device is lost or stolen, change the passwords on your accounts to protect your personal information.

- Avoid using applications from unknown sources and lock your device with a pattern, password, or PIN.

Do not distribute copyright-protected material

These distribute copyright-protected material without the permission of the content owners. Doing this may violate copyright laws. The manufacturer is not liable for any legal issues caused by the user's illegal use of copyrighted material.

Malware and viruses

To protect your device from malware and viruses, follow these usage tips. Failure to do so may result in damages or loss of data that may not be covered by the warranty service

- Do not download unknown applications.
- Do not visit untrusted websites.
- Delete suspicious messages or email from unknown senders.
- Set a password and change it regularly.
- Deactivate wireless features, such as Bluetooth, when not in use.
- If the device behaves abnormally, run an antivirus program to check for infection.

Do not use your device or applications for a while if the device is overheated

Prolonged exposure of your skin to an overheated device may cause low temperature burn symptoms, such as red spots and pigmentation.

Do not use your device with the back cover removed

The battery may fall out of the device, which may result in damage or malfunction.

If your device has a camera flash or light, do not use it close to the eyes of people or pets

Using a flash close to the eyes may cause temporary loss of vision or damage to the eyes.

Use caution when exposed to flashing lights

- While using your device, leave some lights on in the room and do not hold the screen too close to your eyes.
- Seizures or blackouts can occur when you are exposed to flashing lights while watching videos or playing Flash-based games for extended periods. If you feel any discomfort, stop using the device immediately.

- If anyone related to you has experienced seizures or blackouts while using a similar device, consult a physician before using the device.
- If you feel discomfort, such as a muscle spasm, or disoriented, stop using the device immediately and consult a physician.
- To prevent eye strain, take frequent breaks while using the device.

Reduce the risk of repetitive motion injuries

When you repetitively perform actions, such as pressing keys, drawing characters on a touch screen with your fingers, or playing games, you may experience occasional discomfort in your hands, neck, shoulders, or other parts of your body. When using your device for extended periods, hold the device with a relaxed grip, press the keys lightly, and take frequent breaks. If you continue to have discomfort during or after such use, stop using the device and consult a physician.

Protect your hearing and ears when using a headset

- Excessive exposure to loud sounds can cause hearing damage.
- Exposure to loud sounds while walking may distract your attention and cause an accident.
- Always turn the volume down before plugging the earphones into an audio source and use only the minimum volume setting necessary to hear your conversation or music.
- In dry environments, static electricity can build up in the headset. Avoid using headsets in dry environments or touch a metal object to discharge static electricity before connecting a headset to the device.
- Do not use a headset while driving or riding. Doing so could distract your attention and cause an accident, or may be illegal depending on your region.

Use caution when using the device while walking or moving

- Always be aware of your surroundings to avoid injury to yourself or others.
- Make sure the headset cable does not become entangled in your arms or on nearby objects.

Do not paint or put stickers on your device

- Paint and stickers can clog moving parts and prevent proper operation.
- If you are allergic to paint or metal parts of the device, you may experience itching, eczema, or swelling of the skin. When this happens, stop using the device and consult your physician.

Do not use the device if it is cracked or broken

Broken glass or acrylic could cause injury to your hands and face. Take the device to a Samsung Service Centre to have it repaired.

Install mobile devices and equipment with caution

- Ensure that any mobile devices or related equipment installed in your vehicle are securely mounted.

A body-worn SAR test has been performed on this device at a separation distance of 1.5 cm. To meet RF exposure guidelines during body-worn operation, the device must be positioned at least 1.5 cm away from the body.

Organisations such as the World Health Organisation and the US Food and Drug Administration have suggested that if people are concerned and want to reduce their exposure, they could use a hands-free accessory to keep the wireless device away from the head and body during use, or reduce the amount of time spent using the device.

For more information, visit www.samsung.com/sar and search for your device with the model number.

Correct disposal of this product

(Waste Electrical & Electronic Equipment)

 (Applicable in countries with separate collection systems) This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal. This product is RoHS compliant.

Correct disposal of batteries in this product

 (Applicable in countries with separate collection systems) This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

Declaration of Conformity

Samsung Electronics declares that this device complies with the essential requirements and relevant provisions of Directive 1999/5/EC. Go to www.samsung.com/mobile_ob to view the Declaration of Conformity.

CE 0168