


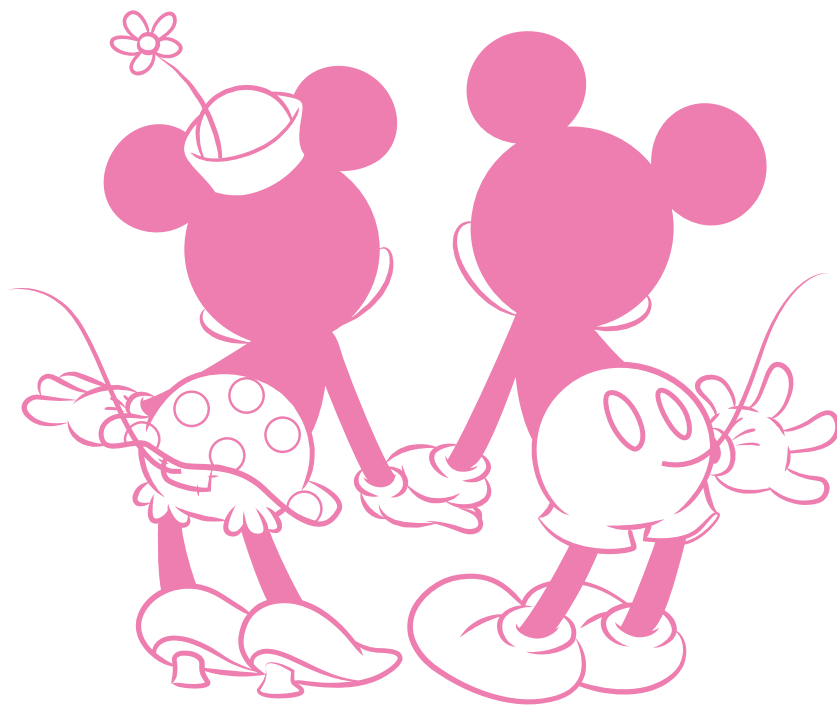

Disney mobile
on ^{NTT} docomo

SH-05F

INSTRUCTION MANUAL '14.5

©Disney

Introduction

Thank you for purchasing “SH-05F”.

Be sure to read this manual before and during use to ensure proper operation.

Checking operation method

Quick Start Guide (Basic package) (in Japanese only)

This guide describes operations of basic functions.

User's Manual (App of the handset) (in Japanese only)

This manual describes detailed guidance and operations of functions.

In the home screen, [APPS] ▶ [Instruction Manual]

To display help: [≡] ▶ [本アプリの使いかた] (How to use this app)

User's Manual (in PDF format)

This manual describes detailed guidance and operations of functions.


Download from the DOCOMO website

<https://www.nttdocomo.co.jp/english/support/trouble/manual/download/index.html>


※ The URL and contents are subject to change without prior notice.

- The screens and illustrations in this manual are shown as examples. The actual screens and illustrations may differ.
- The explanations in this manual are based on the case when the home app is 3-Line Home and Magical Theme Settings is set to [Thru the Mirror]. If you change the home app, operation procedures etc. may be different from the explanations of this manual.
- Note that “SH-05F” is referred to as “handset” in this manual.
- This manual refers to microSD Card, microSDHC Card or microSDXC Card as “microSD Card” or “microSD”.
- Reproduction of this manual in part or in whole without prior permission is prohibited.
- The contents of this manual are subject to change without prior notice.

 
Basic package




SH-05F
(includes warranty)

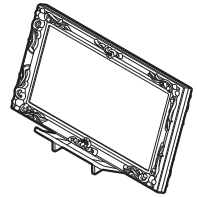

 
Magic Mirror Stand (sample)
(includes user's guide)



Quick Start Guide
(in Japanese only)

 

Notes on usage
(in Japanese only)

 

Welcome Card

- For optional parts (sold separately) compatible with the handset, refer to the DOCOMO website.
<https://www.nttdocomo.co.jp/product/option/> (in Japanese only)

Contents

Using the handset	3
Precautions (ALWAYS FOLLOW THESE DIRECTIONS)	4
Handling precautions	8
Waterproof	10

Before Using the Handset

Part names and functions	13
docomo mini UIM card	13
Charging	14
Turning power on/off	16
Basic operation	17
Character entry	19
Changing screen display to English	22
Initial settings	22
Incoming/Charging lamp	24
Screen display/Icons	25
Home screen	27
Quick Launcher	30
Recent Apps	31
Magical Theme Changer	32
Home applications	32

docomo LIVE UX

Home screen	33
App screen	34
Installing recommended apps	34
My magazine	34
Information on apps	34

Call

Making a call	35
Receiving a call	36
Operation during a call	36
Outgoing/Incoming call history	37
Voice/Answering memo	37
Call settings/Other	37
Phonebook	39

Mail/Browser

docomo mail	41
SMS	41
Email	42
Gmail™	43
Early Warning "Area Mail"	44
Browser	45

Apps

dmenu	47
dmarket	47
Disney Market	47
Play Store	47
Osaifu-Keitai	48
Mobacas/TV (Full-Seg/1Seg)	49
Camera	54
Translation apps	56
Album	57
Media Player	58
GPS/Navigation	59
YouTube	60
Hangouts	60
Alarm/Clock	60
Schedule	61
Memo	62
Calculator	62
SH tool	62
microSD backup	65
docomo backup	65

Handset Settings

Setting menu	67
Profile	67
Sound	67
Display	68
Storage	68
Battery & energy saving	69
Useful	69
Application	70
Data usage	70
More	71
docomo service/cloud	71
Location services	71
Lock & security	71
Language & input	74
Backup & reset	74
Date & time	75
Accessibility	75
Device info	75

File Management

Storage structure	76
Contents Manager	77

Data Communication

iC communication	78
Bluetooth® function	78
NFC communication	81

External Device Connection

PC connection	.82
Wireless print	.82
Home network settings	.83
USB host function	.83
Wireless output (Miracast).	.84
FM transmitter	.84
Cooperating with Blu-ray Disc recorder.	.84
VPN (Virtual Private Network)	.85

International Roaming

Outline of international roaming (WORLD WING).	.86
Available services overseas	.86
Before use overseas	.86
Settings for use overseas	.86
Making/Receiving a call in your country of stay	.87
Setting international roaming	.88
Checking after homecoming	.88

Appendix/Index

Troubleshooting (FAQ)	.89
Smartphone Anshin Remote Support	.91
Warranty and After-Sales Service	.92
Updating software	.92
Upgrading Android version	.94
Main specifications	.95
Specific Absorption Rate (SAR) of Mobile Phones	.97
Export Administration Regulations	.98
Intellectual Property Right	.98
Unlocking SIM lock	.100
Index	.101

Using the handset

- The handset supports LTE, W-CDMA, GSM/GPRS and Wireless LAN systems.
- Because the handset relies on radio signals, it cannot be used in a place with no signal (such as tunnels, underground or in buildings), in places with a weak signal or outside the Xi service area or FOMA service area. You may not use the handset in the upper floors of a building even with no obstructions in sight. There may also be times when the signal is strong and you are not moving but the call is interrupted.
- Because the handset uses radio waves, it is possible for a third party to listen in on a conversation. However, since the LTE, W-CDMA and GSM/GPRS systems automatically apply a private call feature to every call, a third party that tries to listen in only hears noise.
- The handset converts conversations into a digital signal and sends it to the other party over the radio. If the signal cannot be reconverted properly by such as moving to an area with a weak signal, the voice may not be heard correctly.
- Take notes of information (e.g. the phonebook, calendar, note, voice memo, answering memo) stored on the handset or save the information to external memory devices such as microSD Cards and PCs periodically. DOCOMO shall not be liable for any loss of content due to a failure, repair, model change or other handling of the handset.
- As with PCs, some user-installed apps etc. may disrupt the stability of your handset performance or unexpectedly transmit information via the Internet causing improper use of your location information and personal information stored on the handset. Therefore, verify the supplier and operating conditions of the apps to be used before using them.
- The handset supports the FOMA Plus-Area and the FOMA HIGH-SPEED Area.
- When the available space on the microSD Card or the handset is insufficient, apps in use may not work properly. In this case, delete saved data.
- The handset does not support i-mode functions (connection to i-mode website (program), i-appli, etc.).
- The handset does not support providers other than sp-mode, mopera U and Business mopera Internet.
- In the home screen, [APPS] ► [Settings] ► [Profile] to check your phone number (own number).
- The handset does not support Public Mode (Drive Mode).
- Setting the handset to the manner mode does not mute sounds (camera shutter sound etc.) other than the ringtone, operation sound, and various notification sounds.
- The handset automatically performs communication for some functions, for example, to synchronize data, check the latest software version or maintain connection with the server. Also, making a communication with large-volume data such as downloading apps or watching videos will lead to higher packet communication charges. Subscription to flat-rate packet communication services is highly recommended.
- Even while the Wi-Fi connection is set, packet communication charges may be incurred depending on the app and service you use.
- Software on the handset can be updated to up-to-date status (☞ P. 92 "Updating software").
- For details on software version of your handset ☞ P. 75 "Device info"
- New functions may be added to the handset or the operation method may change by upgrading the OS version. Check the DOCOMO website for the latest information of additions and changes.
- If the OS is upgraded, some apps used in the previous OS version may not be available or some unintended bugs may occur.
- Secure the security of the handset by setting Screen lock in case you lose it (☞ P. 71 "Lock & security").
- If your handset is lost, change your password for each account using a PC to prevent other persons from using Google services such as Gmail and Google Play™, and services such as Twitter and mixi.
- Apps and their service contents are subject to change without prior notice.
- Read the terms of service of Google Inc. for details on Google services. Also, read each terms of service for details on other web services.
- Subscription to sp-mode is required to use tethering.
- Packet communication charges when using tethering differ according to your payment plans. Subscription to flat-rate packet communication services is highly recommended.
- Since Mobacas is a service that collaborates with communications, packet communication charges are incurred when using this service. Subscription to flat-rate packet communication services is recommended.
- For details on usage fees etc., refer to the following website. <https://www.nttdocomo.co.jp/> (in Japanese only)
- The display is manufactured using high-precision technology, but it may contain dots that fail to light or that remain permanently lit on some areas. This is a characteristic of LCD and not a malfunction.
- The battery is built into the handset and you cannot replace it by yourself.
- Note that DOCOMO shall not guarantee operation of commercially available optional parts.

Precautions (ALWAYS FOLLOW THESE DIRECTIONS)

- Before use, read these “Precautions” carefully and use your handset properly.
Keep this manual in a safe place for future reference.
- These precautions contain information intended to prevent bodily injury to the user and to surrounding people, as well as damage to property, and must be observed at all times.

The following symbols indicate the different degrees of injury or damage that may occur if information provided is not observed and the handset is used improperly.

 Danger	This symbol indicates that “death or serious bodily injury may directly and immediately result from improper use”.
 Warning	This symbol indicates that “death or serious bodily injury may result from improper use”.
 Caution	This symbol indicates that “minor injury and/or property damage may result from improper use”.

The following symbols indicate specific directions.

 Indicates a prohibited action .	 Indicates not to handle the device with wet hands.
 Indicates not to disassemble the device.	 Indicates that instructions specified are compulsory (must be followed) .
 Indicates not to use the device near water or get it wet.	 Indicates that the power cord must be unplugged from the outlet.

“Precautions” is explained in the following six sections.

- Handling the handset, adapters and docomo mini UIM card (general) P. 4
- Handling the handset P. 5
- Handling adapters P. 6
- Handling docomo mini UIM card P. 7
- Handling near electronic medical equipment P. 7
- Material list P. 7

Handling the handset, adapters and docomo mini UIM card (general)

Danger



Do not use, store or leave the equipment in locations subject to high temperatures (near a fire or heating unit, in a kotatsu, under direct sunlight, inside a vehicle on a hot day, etc.).
May cause fires, burns or bodily injury.



Do not place the equipment inside cooking appliances such as microwave ovens or pressure cookers.
May cause fires, burns, bodily injury or electric shock.



No disassembly

Do not attempt to disassemble or modify the equipment.
May cause fires, burns, bodily injury or electric shock.



No liquids

Do not get the equipment wet with water, drinking water, pet urine, sweat, etc.
May cause fires, burns, bodily injury or electric shock.
Refer to the following for details on waterproofness.
☞ P. 10 “Waterproof”



No liquids

Do not allow liquids (water, drinking water, pet urine, sweat, etc.) to get inside the charger terminal or external connector terminal.
May cause fires, burns, bodily injury or electric shock.



Instruction

Use only optional parts specified by NTT DOCOMO for use with the handset.
May cause fires, burns, bodily injury or electric shock.

Warning



Do not subject the equipment to strong force or impacts or throw it.
May cause fires, burns, bodily injury or electric shock.



Do not allow conductive materials (such as metal objects and pencil lead) to come into contact with the charger terminal, external connector terminal or earphone/microphone terminal. In addition, do not insert such objects.
May cause fires, burns, bodily injury or electric shock.



Do not cover or wrap the equipment with bedding etc. when using or charging.
May cause fires or burns.



Instruction

Be sure to turn off the handset and not to charge the battery in locations such as gas stations where flammable gas is generated.
May cause a gas explosion or fire.
To use Osaifu-Keitai in locations such as gas stations, be sure to turn off the power in advance (If NFC/Osaifu-Keitai lock is set, disable the lock before turning off the power).



Instruction

If you notice anything unusual, such as an unusual odor, overheating, discoloration or deformation during use, charging or storage, immediately follow the instructions below.

- Unplug the power plug from the outlet or cigarette lighter socket.
- Turn off the handset.

May cause fires, burns, bodily injury or electric shock.

Caution



Don't

Do not leave the equipment on unstable surfaces, such as on a wobbly table or sloped surface.

May fall and cause injury.



Don't

Do not store the equipment in locations that are subject to humidity, dust or high temperatures.

May cause fires, burns or electric shock.



Instruction

If being used by a child, have a guardian teach him/her the proper handling procedures. In addition, check that the child is using the equipment as directed.

May result in bodily injury etc.



Instruction

Keep the equipment out of the reach of young children.

A young child may swallow the equipment or suffer bodily injury etc.



Instruction

Be very careful when using the handset connected to an adapter continuously for a long time.

The handset or adapter may become warm if you watch TV etc. for a long time while charging.

Touching high temperature areas for a long time may cause skin irritations, itchiness or low-temperature burns in some people.

Handling the handset

The following is the type of the internal battery built into the handset.

Label	Battery type
Li-ion00	Lithium-ion

Danger



Don't

Do not throw the handset into a fire or heat it.

The internal battery may catch fire, explode, overheat or leak.



Don't

Do not apply excessive force on the handset such as by puncturing it, hitting it with a hammer or stepping on it.

The internal battery may catch fire, explode, overheat or leak.



Instruction

If the battery fluid etc. comes into contact with your eyes, do not rub your eyes but immediately rinse your eyes with clean water. Then seek prompt medical treatment.

May result in loss of eyesight.

Warning



Don't

Do not point the illuminated light directly at someone's eyes. Especially when you shoot still pictures or videos of young children, keep 1 m or more distance from them.

Do not use Mobile light near people's faces. Eyesight may be temporarily affected leading to accidents.



Don't

Do not allow water or other liquids, metal, flammable material or other foreign objects to enter the docomo mini UIM card slot or microSD Card slot on the handset.

May cause fires, burns, bodily injury or electric shock.



Don't

Do not shine the light at anyone driving a car or other vehicles.

May prevent a driver from driving safely and cause a traffic accident.



Instruction

Turn off the handset in areas where the use of mobile phones is prohibited, such as in aircraft or hospitals.

May interfere with the operation of electronic devices and electronic medical equipment.

Follow the instructions given by the respective medical facilities regarding the use of mobile phones on their premises.

Actions such as using a mobile phone aboard aircraft are prohibited and punishable by law.

However, follow the instructions on use of the handset given by the airline if the handset can be used aboard aircraft by setting the handset not to emit radio wave etc.



Instruction

Keep the handset away from the ears during a call in which hands-free is set or while the ringtone is ringing.

When you attach the earphone/microphone etc. to the handset to play games, music, etc., do not make the volume too loud.

Excessively high volume may damage your hearing.

Also, it may prevent you from hearing ambient sounds and cause an accident.



Instruction

If you have a weak heart, take extra precautions when setting functions such as the vibrator and ringtone volume for incoming calls.

May have harmful effects on your heart.



Instruction

If you are using electronic medical equipment, contact the respective manufacturer or dealer to check whether the operation of the equipment is affected by signals.

May interfere with the operation of electronic medical equipment etc.



Instruction

Turn off the handset near high-precision electronic devices or devices that use weak electronic signals.

May interfere with the operation of electronic devices.

Take particular care with the following devices

Hearing aids, implanted cardiac pacemakers, implanted cardioverter-defibrillators or other electronic medical equipment. Fire alarms, automatic doors, and other equipment controlled by electronic signals. If you use an implanted cardiac pacemaker, implanted

cardioverter-defibrillator or other electronic medical equipment, contact the respective manufacturer or dealer to check whether the operation of the equipment is affected by signals.



Instruction

If the display part or camera lens is damaged, be careful of broken glass and the exposed inside of the handset.

Tape is pasted on the back of the display while the surface of the display is covered by a protective film and the surface of the camera lens is covered by a plastic panel so as to minimize the possibility of glass scattering. However, touching the broken or exposed parts may cause bodily injury.



Instruction

If the internal battery leaks or emits an unusual odor, immediately stop using the handset and move it away from any naked flames or fire.

The battery fluid is flammable and could ignite, causing a fire or explosion.

⚠ Caution



Don't

Do not swing the handset by its antenna, strap, etc.
May hit you or others around you, resulting in an accident such as bodily injury.



Don't

Do not use a damaged handset.
May cause fires, burns, bodily injury or electric shock.



Don't

For using a motion sensor and geomagnetic sensor, check the safety around, hold the handset and do not swing them more than necessary.
May cause injury etc.



Don't

If the display is broken and the liquid crystal then leaks, do not get the liquid on your skin (face, hands, etc.).
May result in loss of eyesight or harm to your skin.
If the liquid comes into contact with your eyes or mouth, immediately rinse your eyes or mouth with clean water and see a doctor.
If the liquid comes into contact with your skin or clothes, immediately wipe it off with alcohol, and wash with water and soap.



Don't

The surface of the display is covered with a protective film for ensuring the security (shatterproof property of reinforced glass panel) against any damages caused by the handset being dropped or receiving a strong impact etc. Do not remove the film forcibly or damage it.
Using the handset with the film removed may cause bodily injury if the display gets damaged.



Don't

Do not dispose of the handset in ordinary garbage.
May cause fires or damage to the environment. Take the unnecessary handset to a sales outlet such as a docomo Shop or follow the instructions by a local institution that handles used handsets.



Instruction

If you use the handset in a vehicle, contact the vehicle manufacturer or dealer to check whether the operation of the vehicle is affected by signals.
May interfere with the operation of electronic equipment in some vehicle models. In this case, stop using the handset.



Instruction

Use of the handset may cause skin irritations such as itchiness, rashes or eczema in some people. If this occurs, immediately stop using the handset and seek medical treatment.
For details on materials of each part see P. 7 "Material list"



Instruction

Look at the display in a well-lit place, keeping a certain distance from the screen.
Otherwise, eyesight may be weakened.



Instruction

If the battery fluid etc. leaks, do not get the liquid on your skin (face, hands, etc.).
May result in loss of eyesight or harm to your skin.
If the liquid comes into contact with your eyes, mouth, skin or clothes, immediately rinse them with clean water.
If the liquid etc. comes into contact with your eyes or mouth, see a doctor immediately after rinsing your eyes or mouth.

Handling adapters

⚠ Warning



Don't

Do not use if the cord of the adapter is damaged.
May cause fires, burns or electric shock.



Don't

Never use the AC adapter in humid locations such as a bathroom.
May cause fires, burns or electric shock.



Don't

The DC adapter should only be used in negative grounded vehicles. Never use it in positive grounded vehicles.
May cause fires, burns or electric shock.



Don't

Do not touch adapters if you hear thunder.
May cause electric shock.



Don't

Take care not to short-circuit the charger terminal when connected to an outlet or cigarette lighter socket. Also, take care not to allow any part of your body (hands, fingers, etc.) to come into contact with the charger terminal.
May cause fires, burns or electric shock.



Don't

Do not place heavy objects on the cord of the adapter.
May cause fires, burns or electric shock.



Don't

When plugging/unplugging an AC adapter into/from the outlet, do not allow metallic straps or other metallic objects to come into contact with the prongs of the plug.
May cause fires, burns or electric shock.



Don't

Do not apply excessive force on an adapter by moving it up/down or to the left/right with the adapter connected to the handset.
May cause fires, burns, bodily injury or electric shock.



Don't

Never try to connect the microUSB plug when the handset or AC adapter is wet.
Inserting the microUSB plug while the equipment is wet may cause short circuit when you charge the battery and lead to abnormal overheat, malfunction, fires or burns due to water, foreign objects, etc. adhering to the handset or microUSB plug though the handset provides waterproof performance.



No wet hands

Do not handle the cord or charger terminal of the adapters or outlet with wet hands.
May cause fires, burns or electric shock.



Instruction

Always use the specified power supply and voltage.
When using overseas, use the AC adapter that is available overseas.
Using the incorrect voltage may cause fires, burns or electric shock.
AC adapter: 100V AC
DC adapter: 12/24V DC (for negative grounded vehicles only)
AC adapter available overseas: 100 to 240V AC (Connect only with a household AC outlet)



If the fuse in the DC adapter blows, always replace it with a fuse of the specified type.

Instruction

May cause fires, burns or electric shock. Refer to the respective manuals for information on the correct fuse specifications.



Wipe off any dust on the power plug.

Instruction

May cause fires, burns or electric shock.



Fully plug the AC adapter into the outlet.

Instruction

May cause fires, burns or electric shock.



Always grasp the adapters when unplugging the power plug from the outlet or cigarette lighter socket. Do not forcibly pull by the cord of the adapter.

Instruction

May cause fires, burns or electric shock.



When plugging/unplugging an adapter into/from the handset, plug/unplug the adapter horizontally and straightly, not applying excessive force on it.

Instruction

May cause fires, burns, bodily injury or electric shock.



Unplug the power plug from the outlet or cigarette lighter socket when not using for a long time.

Unplug

May cause fires, burns or electric shock.



Should water or other liquids enter the equipment, remove the power plug from the outlet or cigarette lighter socket immediately.

Unplug

May cause fires, burns or electric shock.



Always unplug the power plug from the outlet or cigarette lighter socket before cleaning the equipment.

Unplug

May cause fires, burns or electric shock.

Handling docomo mini UIM card



Caution



Be careful with the cutting surface when handling the docomo mini UIM card.

Instruction

May cause bodily injury.

Handling near electronic medical equipment



Warning



If you have electronic medical equipment such as an implanted cardiac pacemaker or an implanted cardioverter-defibrillator, always carry or use your handset at least 15 cm away from your implant.

Instruction

Electromagnetic signals may have harmful effects on the operation of the electronic medical equipment.



Patients receiving medical treatment away from a hospital or medical facility (e.g. home treatment) who are using electronic medical equipment other than implanted cardiac pacemakers or implanted cardioverter-defibrillators should consult the respective manufacturers for information regarding the effects of signals on the equipment.

Instruction

Electromagnetic signals may have harmful effects on the operation of the electronic medical equipment.



Instruction

If there is any chance that the distance between the handset and a person closest to you may get shorter than 15 cm such as when you cannot freely move around, set the handset not to emit radio wave in advance (by setting Airplane mode, turning the power off, etc.).

Somebody nearby may be equipped with electronic medical equipment such as an implanted cardiac pacemaker or an implanted cardioverter-defibrillator. Electromagnetic signals may have harmful effects on the operation of the electronic medical equipment.



Instruction

Follow the instructions given by the respective medical facilities regarding the use of the handset on their premises.

Material list

Handset

Part	Material/Surface treatment
Display side	Reinforced glass/Shatterproof sheet of surface
Surrounding area of display side	PA resin/Discontinuous deposition, UV coating for surface
Back	PC + ABS resin/Hot stamping (mascot section), UV coating for surface
docomo mini UIM card slot	SUS/Ni plating
microSD Card slot	SUS/Ni plating
docomo mini UIM card/microSD Card slot cover	PC resin/UV coating for surface
Gasket of docomo mini UIM card/microSD Card slot cover	Silicon rubber
IMEI plate	PP
Surrounding area of earphone/microphone terminal	Aluminum/Anodizing
Power key	Aluminum/Anodizing
Camera panel	Acrylic resin/Printing on the back
Decoration of camera	Aluminum/Anodizing
Mobile light	PC resin
Mobacas/TV antenna	Handset color Silky White: Brass/Trivalent Cr plating, SUS Handset color Silky Pink, Silky Black: Brass/Trivalent Cr plating, UV coating, SUS
External connector terminal	SUS/Sn plating, Copper alloy/Gold plating

Handling precautions

General notes

- **SH-05F is waterproof, however, do not allow water to get inside the handset and do not allow optional parts to get wet.**
The adapter and docomo mini UIM card are not waterproof. Do not use in humid or steamy areas such as bathrooms and avoid exposing to rain and other forms of moisture. If they are carried close to the skin, perspiration may cause internal components to corrode and result in malfunction. Note that if a problem is found to be due to moisture, the handset and parts are not covered by warranty and in some cases may be irreparable. Even when repairs are possible, repair charges will be incurred, since the damage is not covered by warranty.
- **Clean only with a soft and dry cloth (such as the type used for eyeglasses).**
 - Forceful rubbing of the LCD with a dry cloth may scratch its surface.
 - Note also that LCD coating may stain if moisture or soiling is left on the surface for a long period.
 - Never use chemicals such as alcohol, thinners, benzene or detergents, as these agents may erase the printing or cause discoloration.
- **Occasionally clean terminals with a dry cotton swab etc.**
Dirty terminals may result in poor connections and loss of power or insufficient battery charge. Keep the terminals clean with a dry cotton swab etc.
Be careful with the terminals while cleaning them.
- **Do not place the equipment near an air conditioning vent.**
Condensation formed due to rapid changes in temperature may cause internal corrosion and lead to a malfunction.
- **Do not apply excessive force on the handset etc. when using it.**
Carrying the handset in a tightly packed bag or sitting on the handset in your pocket may cause damage to the display, internal components, etc. or result in a malfunction.
Keeping an external connector device plugged into the external connector terminal or earphone/microphone terminal may cause damage to the connector or result in a malfunction.
- **Do not rub or scratch the display with metal etc.**
May scratch it and cause malfunction or damage.
- **Read the respective manuals or user's guides supplied with the optional parts carefully.**

Notes about the handset

- **Do not forcefully press the surface of the touch panel or operate with a pointed object such as a fingernail, ballpoint pen or pin.**
May damage the touch panel.
- **Avoid using the handset in extremely high or low temperatures.**
Use the handset within the range of a temperature between 5°C and 35°C and a humidity between 45% and 85%.
- **Using the handset close to land-line phones, TVs, radios, etc. may have harmful effects on the operation of such equipment. Move as far away as possible from such items before use.**
- **Keep a separate memo noting information stored on the handset.**
DOCOMO shall not be liable for any loss of content.
- **Do not drop or otherwise subject the handset to severe impact.**
May damage the handset or cause a malfunction.
- **When connecting an external connector device to the external connector terminal or earphone/microphone terminal, do not put it in obliquely and do not pull it while it is plugged in.**
May damage the handset or cause a malfunction.

- **The handset becomes warm during use or charging but this is not a malfunction.**
- **Do not leave the camera in direct sunlight.**
May cause discoloration or burn-in of pixels.
- **Use the handset with the docomo mini UIM card/microSD Card slot cover closed.**
Dust, water, etc. may get inside and cause a malfunction.
- **While using a microSD Card, do not remove the card or turn off the handset.**
May cause data loss or a malfunction.
- **Never place a magnetic card near the handset.**
The stored magnetic data in cash cards, credit cards, telephone cards, floppy disks, etc. may be erased.
- **Never place magnetized items near the handset.**
Putting highly magnetized items closer may cause an error.
- **The handset has a function to judge whether a proper internal battery is used. Do not replace the internal battery by yourself.**
- **When an improper internal battery is used, you cannot charge the battery.**
- **DOCOMO shall not be liable for any accident or malfunction arising from using an improper internal battery.**
- **The internal battery is a consumable product.**
Though the battery life varies with use, change the battery if the battery life is extremely short even after being fully charged. For details on replacing the internal battery, contact the number listed in "Repairs" (in Japanese only) on the last page or a repair counter that DOCOMO specifies.
- **Charge battery in areas where ambient temperature is between 5°C and 35°C.**
- **The battery life depends on the usage and deterioration of the battery.**
- **Avoid the following situations when the handset is stored.**
 - Storage with the internal battery fully charged (immediately after charging is completed)
 - Storage with no battery level (cannot turn the main body on)
May lower the performance or shorten the usable life of the internal battery.
Approximately 40% is recommended as the proper battery level for storage.
- **The surface of the handset uses the aluminum material. Note that dent and abrasion are easily remained as aluminum is a soft material.**

Notes about adapters


- **Charge the battery in areas where the ambient temperature is between 5°C and 35°C.**
- **Do not charge the internal battery in the following locations.**
 - Areas with high humidity or dust, or in areas exposed to frequent vibrations
 - Close to land-line phones, TVs, radios, etc.
- **Adapters may become warm during charging but this is not a malfunction.**
- **Do not use the DC adapter to charge the battery when the car engine is not running.**
May cause the car battery to run down.
- **When using an outlet with a feature to prevent the plug from being removed accidentally, follow the instructions in the outlet user's guide.**
- **Do not subject to strong force or impacts. Also, do not deform the charger terminals.**
May cause a malfunction.

Notes about docomo mini UIM card

- Do not apply unnecessary force when inserting/removing the docomo mini UIM card.
- Customer is responsible for malfunctions arising from inserting docomo mini UIM card into a different IC card reader/writer etc.
- Always keep IC area clean.
- Clean only with a soft and dry cloth (such as the type used for eyeglasses).
- Keep a separate memo and note information stored on the docomo mini UIM card.
DOCOMO shall not be liable for any loss of content.
- To protect the environment, please take any unneeded docomo mini UIM cards to a sales outlet such as a docomo Shop.
- Do not damage, touch haphazardly or short-circuit the IC.
May cause data loss or a malfunction.
- Do not drop or otherwise subject the docomo mini UIM card to severe impact.
May cause a malfunction.
- Never bend the docomo mini UIM card or place heavy objects on it.
May cause a malfunction.
- Do not insert the docomo mini UIM card to the handset with a label or sticker attached on the card.
May cause a malfunction.

Notes on using Bluetooth function

- The handset supports the security function that meets the Bluetooth specification for security during communication using Bluetooth functions. However, the security may not be sufficient depending on the configuration etc. Take care of the security while making communication using Bluetooth function.
- Even if any leak of data or information occurs while making communication using Bluetooth function, DOCOMO shall not be liable for any loss of content.
- Radio frequencies
In the home screen, [APPS] ▶ [Settings] ▶ [Device info] ▶ [Authentication] to confirm the radio frequencies the Bluetooth function of the handset uses. The followings are the descriptions:

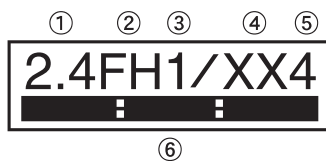


- ① 2.4: This radio equipment uses the 2400 MHz band.
 - ② FH: The modulation system is the FH-SS system.
 - ③ 1: The estimated coverage distance is 10 m or less.
 - ④ XX: Another modulation system is used.
 - ⑤ 4: The estimated coverage distance is 40 m or less.
 - ⑥ ■■■■■ : All radio frequencies between 2400 MHz and 2483.5 MHz are used and the frequencies for mobile object identifiers cannot be avoided.
- Cautions on using Bluetooth devices
Bluetooth operates at radio frequencies assigned to the in-house radio stations for a mobile object identifier that have to be licensed and is used in production lines of a factory, specific unlicensed low power radio stations, and amateur radio stations (hereafter, referred to as "another radio station") in addition to industrial, scientific and medical devices or home electric appliances such as microwave ovens.
 - 1. Before using the handset, make sure that "another radio station" is not operating nearby.

2. If radio interference between the handset and "another radio station" occurs, avoid interference by moving immediately to another place or "turning off the power".
3. Contact the number listed in "General Inquiries" on the last page for further details.

Notes about wireless LAN (WLAN)

- Wireless LAN (WLAN) uses radio waves to communicate information. Therefore, it has an advantage of freely connecting to the LAN within the service area. On the other hand, if security setting is not set, it is possible for a malicious third party to intercept the communication contents or hack. It is recommended to set security setting at your own risk and judgement.
- Wireless LAN
Do not use wireless LAN near magnetic devices such as electric appliances or AV/OA devices or in radio waves.
 - Magnetism or radio waves may increase noises or disable communications (especially when using a microwave oven).
 - When used near TV, radio, etc., reception interference may occur or channels on the TV screen may be disturbed.
 - If there are multiple wireless LAN access points nearby and the same channel is used, search may not work correctly.
- Radio frequencies
In the home screen, [APPS] ▶ [Settings] ▶ [Device info] ▶ [Authentication] to confirm the radio frequencies the WLAN-installed devices use. The followings are the descriptions:

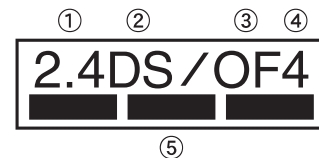

- ① 2.4: This radio equipment uses the 2400 MHz band.
 - ② DS: The modulation system is the DS-SS system.
 - ③ OF: The modulation system is the OFDM system.
 - ④ 4: The estimated coverage distance is 40 m or less.
 - ⑤ ■■■■■ : All radio frequencies between 2400 MHz and 2483.5 MHz are used and the frequencies for mobile object identifiers can be avoided.
- Available channels for the handset's wireless LAN are between 1 and 13. Note that other channel access points cannot be connected. Available channels may vary depending on the country. For use in an aircraft, contact the airline beforehand.
- Cautions on using 2.4 GHz devices
WLAN-installed devices operate at radio frequencies assigned to the in-house radio stations for a mobile object identifier (radio stations requiring a license) used in production lines of a factory, specific unlicensed low power radio stations (radio stations requiring no license), and amateur radio stations (radio stations requiring a license) in addition to industrial, scientific and medical devices or home electric appliances such as microwave ovens.
 - 1. Before using this device, make sure that the in-house radio stations for a mobile object identifier, specific unlicensed low power radio stations and amateur radio stations are not operating nearby.
 - 2. If the device causes harmful radio interference to the in-house radio stations for a mobile object identifier, immediately change the radio frequency or stop use, and contact the number listed in "General Inquiries" on the last page for crosstalk avoidance, etc. (e.g. partition setup)
 - 3. If the device causes radio interference to specific unlicensed low power radio stations for a mobile object identifier or amateur radio stations, contact the number listed in "General Inquiries" on the last page for further details.

- **Cautions on using 5 GHz devices**
In the 5 GHz frequency band, three bands of 5.2 GHz/5.3 GHz/5.6 GHz band (W52/W53/W56) are available.
 - W52 (5.2 GHz band/36, 40, 44, 48 ch)
 - W53 (5.3 GHz band/52, 56, 60, 64 ch)
 - W56 (5.6 GHz band/100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140 ch)
 Using 5.2 GHz/5.3 GHz band wireless LAN (W52/W53) outdoors is prohibited by the Radio Law.

FeliCa and NFC reader/writer

- The FeliCa and NFC reader/writer, P2P function of the handset uses weak radio waves whose handling does not require a license of radio station.
- The frequency in use is the 13.56 MHz band. When another reader/writer, P2P function is being used nearby, keep enough distance from it. Make sure that there is no radio station using the same frequency band in the nearby area.
- For use in an aircraft, contact the airline beforehand. Use of FeliCa and NFC reader/writer, P2P function may be restricted in some countries.
Check conditions such as regulations of the country/region to use the function.

FM transmitter

- The FM transmitter function of the handset uses weak radio waves requiring no licenses for radio stations.
- It uses 77.4 to 85.0 MHz frequency band. To avoid adversely affecting surrounding FM radio users, do not set the same frequency band as an FM broadcasting station in your area for using.

Caution

- **Never use the handset that is modified. Using a modified device violates the Radio Law and/or the Telecommunications Business Law.**
The handset follows the regulations regarding the certification of conformity with technical regulations for specific radio stations etc. based on the Radio Law and authentication of conformity with technical regulations for devices etc. based on the Telecommunications Business Law, and the “Technical Conformity Mark ” can be displayed on the electronic nameplate of the handset as a proof. You can see it by operating as follows.
In the home screen, [APPS] ▶ [Settings] ▶ [Device info] ▶ [Authentication]
If the screws of the handset are removed and a modification is given to the inside, the certification of conformity with technical regulations etc. will become invalid. Never use the handset without the valid certification etc. Doing so violates the Radio Law and/or the Telecommunications Business Law.
- **Be careful when using the handset while driving a motor vehicle.**
Using a mobile phone in hand while driving is regarded as a punishable act.
However, the punishment has no application in some cases such as when rescuing sick and injured people or maintaining public safety.
- **Use the FeliCa reader/writer function only in Japan.**
The FeliCa reader/writer function of the handset conforms to the domestic radio wave standards. Using the function overseas may result in punishment.
- **Use the FM transmitter only in Japan.**
The FM transmitter of the handset is compliant with radio wave standards and is authorized for use only in Japan. Using the function overseas may result in punishment.
- **Never change the basic software improperly.**
This may be regarded as a conversion of software and repairs may be refused.

- **Be careful not to connect the handset to a PC using Micro USB Cable 01 (sold separately) in areas where the use of mobile phones is prohibited.**
Power is automatically turned on.

Waterproof

SH-05F is waterproof to IPX5*1 and IPX7*2 standards if the docomo mini UIM card/microSD Card slot cover is securely closed.

- *1 IPX5 means that phone keeps functioning after being subjected to a jet flow (12.5 liters/min) discharged from a nozzle (inner diameter: 6.3 mm), from all directions (approximately 3 m from the handset) for 3 minutes or more.
- *2 IPX7 means that SH-05F phone keeps functioning after it is slowly submerged to depth of 1 m in static tap water at room temperature, left there for approximately 30 minutes and then taken out.

What you can do with waterproof of SH-05F

- You can call without using an umbrella in the rain (for rainfall of approximately 20 mm per hour).
- You can rinse off dirt from the handset. Wash the handset with low-pressure water flow (6 liters/min or lower and tap water at room temperature (between 5°C and 35°C)), holding it approximately 10 cm below faucet or shower head. Wash by using only your hands, not a brush or sponge, with the docomo mini UIM card/microSD Card slot cover held in position. Drain the handset before use ( P. 11 “Draining water when the handset gets wet”).
- You can use the handset at a poolside. Do not throw water in a swimming pool on the handset or soak the handset in the water of a swimming pool.

Things to keep in mind

To maintain waterproof performance, check the followings.

- Securely close the docomo mini UIM card/microSD Card slot cover. Be careful not to apply excessive force on the rubber gasket when opening and closing.
- Make sure that the docomo mini UIM card/microSD Card slot cover is completely closed without floating.
- To maintain waterproof performance, the handset has the docomo mini UIM card/microSD Card slot cover that allows you to close securely. May cause injuries to your nails or fingers if you try to open it forcibly.
- For details on how to open/close the docomo mini UIM card/microSD Card slot cover  P. 13 “Inserting docomo mini UIM card”
- To maintain waterproof performance, replacement of parts is recommended every 2 years regardless of whether the handset appears normal or abnormal. DOCOMO replaces the parts as a chargeable service. Bring the handset to a repair counter that DOCOMO specifies.

Precautions

- When your hands or the handset is wet, do not open/close the docomo mini UIM card/microSD Card slot cover.
- Close the docomo mini UIM card/microSD Card slot cover securely. Even a fine obstacle (one hair, one grain of sand, tiny fiber, etc.) put between contact surfaces may allow water to get inside.
- If the handset gets wet with water or other liquids with the docomo mini UIM card/microSD Card slot cover opened, the liquid may get inside causing electric shocks or malfunction. Stop using the handset, turn off the power and contact a repair counter that DOCOMO specifies.
- The rubber gasket of the contact surface between the main body and docomo mini UIM card/microSD Card slot cover plays an important role in maintaining waterproof performance. Do not remove or scratch it. Also, prevent dust from adhering to it. If the rubber gasket is damaged or deformed, replace it at a repair counter that DOCOMO specifies.
- Do not insert a pointed object through the docomo mini UIM card/microSD Card slot cover gaps. It may cause damage to the rubber gasket and allow water to get inside.
- Do not use the handset underwater (including key operations). May cause malfunction.
- Do not apply water flow stronger than allowed (over 6 liters/min). May cause malfunction though SH-05F provides waterproof performance of IPX5.
- Do not let the handset get wet with liquids other than water at room temperature (between 5°C and 35°C) or do not soak the handset in the liquids. If you let the handset get wet with liquids other than water at room temperature or soak the handset in the liquids, stop using the handset and wash it with water at room temperature.
- Do not wash the handset in a washing machine etc.
- To prevent condensation, do not bring the handset from a cold place to a warm place without letting the handset warmed to room temperature.
- Never soak the handset in hot spring water or water containing soap, detergent or bath powder.
- Do not soak the handset in hot water, use it in a sauna or apply hot air (from a hair dryer etc.) to it.
- Do not soak the handset in seawater.
- Do not put the handset directly on sand/dirt.
- Do not leave the handset wet. In cold places, water may freeze and cause malfunction.
- The handset does not float on water.
- Do not let the handset fall. It may become scratched and cause the waterproof performance to degrade.
- Do not leave water on the mouthpiece/microphone, earpiece, speaker, out-microphone or earphone/microphone terminal. Such water may interfere with talking.
- Do not poke the mouthpiece/microphone, earpiece, speaker, out-microphone, external connector terminal, earphone/microphone terminal, etc. with a pointed object.
- Do not insert an earphone/microphone to the handset while the handset is wet. May cause malfunction.
- Optional parts are not waterproof. Do not use them in rooms where water is regularly in use such as bathroom, shower room, kitchen or lavatory.



Soap/Detergent/ Seawater Swimming pool
Bath powder



Hot spring Sand/Dirt

- DOCOMO does not guarantee actual operations under all states. Malfunctions deemed to be caused by inappropriate operation by the customer are not covered by the warranty.

Draining water when the handset gets wet


When the handset is wet, water may flow out after wiping it off.
Drain the water by following the steps below.

1 Wipe off water on the handset surface with dry and clean cloth etc.

- If a strap is attached, dry the strap as well.



2 Shake the handset approximately 20 times, securely holding it, until there is no more water splattering

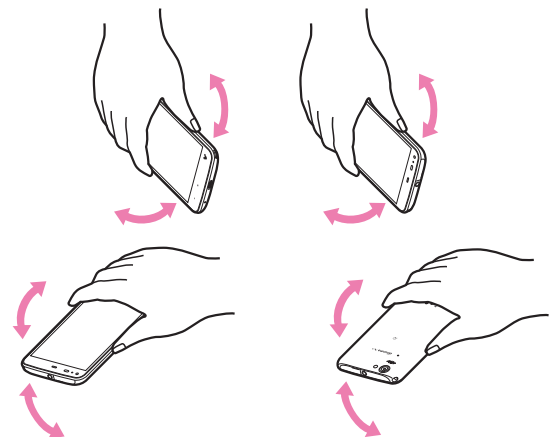


To drain water off the speaker, shake the handset with the speaker turned down

To drain water off the earpiece, shake the handset with the earpiece turned down

3 Softly press the handset against dry and clean cloth etc. to wipe off water remaining in the grooves of the mouthpiece/microphone, earpiece, speaker, out-microphone, keys, external connector terminal, earphone/microphone terminal, strap hole, etc.

- Pat the opening with cloth etc. to remove water because there may be any water remaining in the grooves of each part.

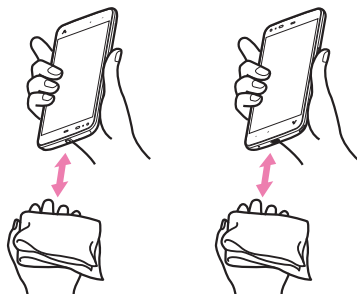

4 Wipe off water oozing from the handset with dry and clean cloth etc. and leave it for a while to dry it

- Water, if any, remaining in the main body may ooze after wiping off.
- Pat the opening with cloth etc. again to remove water because you may not be able to hear sounds well if drainage is insufficient.

Charging

Optional parts are not waterproof. Check the followings before and after charging.

- Make sure that the handset is not wet. If the handset is wet or after the handset is wet, adequately drain it and wipe off water with dry and clean cloth etc. then leave it for a while to dry it before opening the docomo mini UIM card/microSD Card slot cover.


Warning

Never try to connect the microUSB plug when the handset is wet.

- Inserting the microUSB plug while the equipment is wet may cause short circuit when you charge the battery and lead to abnormal overheat, malfunction, fires or burns due to water, foreign objects, etc. adhering to the handset or microUSB plug though the handset provides waterproof performance.
- Do not touch an AC adapter (sold separately) with your hands wet. May cause electric shock.
- Do not use the AC adapter in a place subject to water. Do not use it in rooms where water is regularly in use such as bathroom, shower room, kitchen or lavatory. May cause fires or electric shock.

Before Using the Handset

Part names and functions

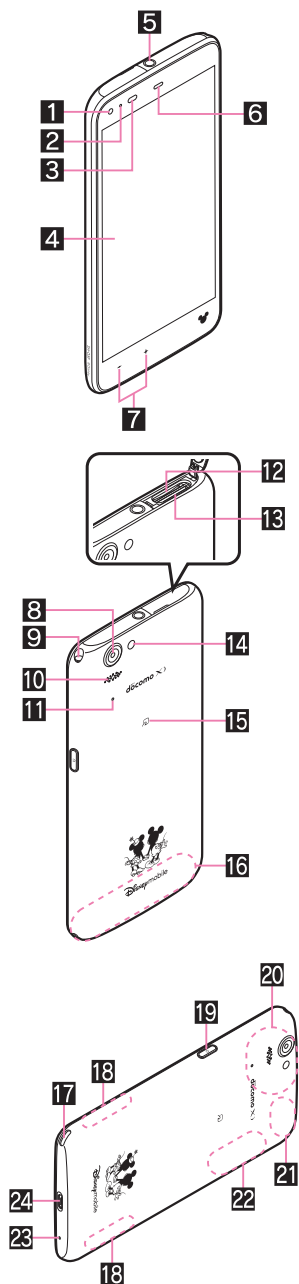

1 In-camera

2 Incoming/Charging lamp

3 Proximity sensor/Brightness sensor*1

- The proximity sensor detects the distance to the face and prevents inadvertent operation of touch panel during a call.
- The brightness sensor detects the brightness of the surrounding area and adjusts the brightness of the backlight.

4 Display/Touch panel

5 Earphone/Microphone terminal

6 Earpiece

7 $\uparrow/\downarrow$: Volume UP/DOWN key

- Adjusts the volume in each function.

8 Out-camera

9 Mobacas/TV antenna

10 Speaker

- Ringtone, music, etc. can be heard from here.
- The other party's voice can be heard from here during a hands-free call.

11 Out-microphone

- Use as a sub microphone when recording videos.
- Use to measure ambient noises for communicating by making your voices sound clear when using Noise suppression.

12 microSD Card slot

13 docomo mini UIM card slot

14 Mobile light

15 $\hookrightarrow$ mark

- IC card is contained (It cannot be removed).

16 FOMA/Xi antenna*2

17 Strap hole

18 Grip sensor

19 O : Power key

- Use to turn the power on/off, etc.
- Use to turn the display on/off.

20 FM transmitter antenna*2

21 GPS antenna*2, FOMA/Xi sub antenna*2

22 Wi-Fi/Bluetooth antenna*2

23 Mouthpiece/Microphone

24 External connector terminal

*1 Do not cover the sensor area with your hand or paste a sticker etc. on the sensor area. The sensor may not work properly.

*2 The antenna is built into the main body. Covering the antenna area with your hand may influence the quality.

Earphone/Microphone terminal

- For details on the corresponding earphone/microphone, refer to the following website.
http://k-tai.sharp.co.jp/support/d/sh05f/peripherals.html#!/earphone_support (in Japanese only)

Out-microphone

- When using functions which support the out-microphone, do not cover the hole of the out-microphone.

docomo mini UIM card


A docomo mini UIM card is an IC card that records personal information, such as phone numbers.

- You cannot use functions such as the phone or packet communication without inserting a docomo mini UIM card.
- You cannot use the docomo mini UIM card with devices other than compatible ones and may not be able to use a part of the website and data when you change from the UIM.
- In Japan, you cannot call to the emergency number (110, 119 or 118) without inserting a docomo mini UIM card.
- A docomo mini UIM card has a security code called PIN code (IC P. 73 "PIN code").
- The handset supports only docomo mini UIM card. Change the UIM at a docomo Shop.
- Before inserting or removing the docomo mini UIM card, turn off the power. Hold the handset securely with your hand.

Inserting docomo mini UIM card


1 Open the docomo mini UIM card/microSD Card slot cover

- Hook the tip of a finger into the slot to open.

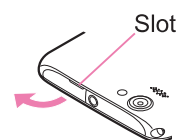


2 Hold the docomo mini UIM card with the IC (gold) side turned down and insert it slowly into the docomo mini UIM card slot

- Push it slowly towards inside until a click is heard.

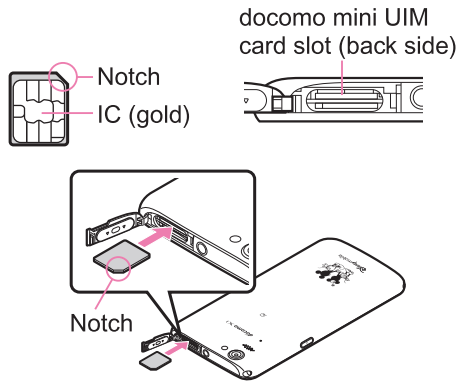


- Do not insert the docomo mini UIM card at an angle or with the wrong side down. The docomo mini UIM card slot may be damaged.

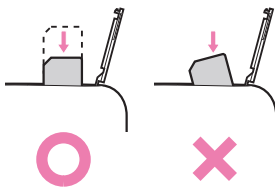

3 Close the docomo mini UIM card/microSD Card slot cover

- Stow the joint of the docomo mini UIM card/microSD Card slot cover (1) and push the cover in the direction of the arrow to close it so that gaps are not left between the handset and the cover (2). When closing it, push the ○ areas securely (3).

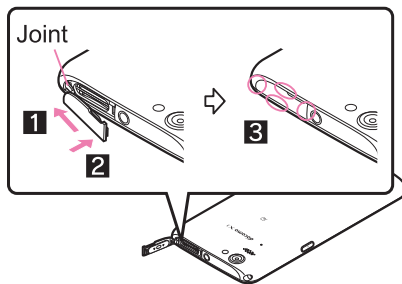

■ Removing docomo mini UIM card


1 Open the docomo mini UIM card/microSD Card slot cover

2 Gently push the docomo mini UIM card towards inside (1)

- Push it towards inside until a click is heard. It will come out towards you.

3 Remove the docomo mini UIM card (2)

- Remove the docomo mini UIM card by slowly pulling it straight out. Do not let it fall.

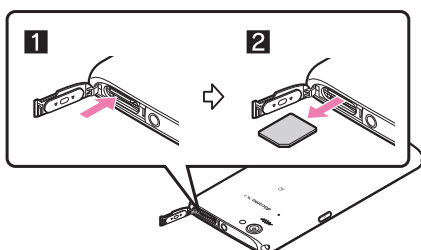

4 Close the docomo mini UIM card/microSD Card slot cover

- Make sure not to touch or damage the IC (gold) of the docomo mini UIM card when handling it. Also, note that inserting or removing the docomo mini UIM card forcibly may damage it.
- Refer to the docomo mini UIM card user's guide for more information on the docomo mini UIM card.
- Do not misplace the docomo mini UIM card once it is removed.

IMEI plate

- A plate on which the IMEI number (International Mobile Equipment Identifier) etc. is printed is stowed near the docomo mini UIM card slot. The IMEI number is required when you contact a repair counter that DOCOMO specifies, so do not pull it out unless you need to check the number.
- Note that pulling the IMEI plate forcibly or adding forces on it may damage the plate.
- If you pull out the IMEI plate, push it back slowly towards inside.

Charging

The internal battery is not fully charged at the time of purchase. Be sure to charge the battery before use.

■ Cautions while charging

- For details on the estimated charge time ☎ P. 95 "Main specifications"
- The battery can also be charged with the handset turned on (While charging, the battery icon appears with [⚡] superimposed).
- Do not charge for a long time with the power left turned on. If the handset is left turned on after charging is complete, the internal battery charge level decreases.
In this case, an AC or DC adapter (sold separately) charges the battery again. However, depending on the time when the handset is disconnected from the AC or DC adapter, the battery charge level may be low or the battery may only be usable for a short time.
- If the handset is left for a long time even after the charging is completed, the battery level may decrease.
- When the battery is empty and the handset is being charged, the charging lamp may not illuminate immediately. However, charging is in progress.
- If the battery empty alert is displayed and the power cannot be turned on, charge the battery for a while.
- While charging, the handset may not turn on even when the charging lamp is illuminated in red. Charge longer and try turning power on again.
- Frequently recharging the battery when its power is still remaining enough may shorten the usable life of the internal battery. It is recommended to use the battery to a certain level (e.g. after the battery level decreases) before recharging.
- When the battery becomes warm, charging may automatically stop even if the battery has not been fully charged. Charging automatically resumes after the temperature lowers to an appropriate temperature.
- If you watch Mobacas, receive contents, etc. while charging, move the handset as far away as possible from the power plug section of the AC adapter.

■ Estimated battery life when fully charged

Continuous talk time	FOMA/3G Approx. 960 min GSM Approx. 810 min
Continuous stand-by time	FOMA/3G At rest: Approx. 700 hr (Network Mode: LTE/3G/GSM(Auto)) GSM At rest: Approx. 590 hr (Network Mode: LTE/3G/GSM(Auto)) LTE At rest: Approx. 580 hr (Network Mode: LTE/3G/GSM(Auto))
Mobacas watching time	Approx. 470 min
TV watching time	Full-Seg: Approx. 400 min 1Seg: Approx. 530 min

- For details on the battery life, see P. 95 "Main specifications"

■ Internal battery usable life

- Internal battery is a consumable product. Battery life per charge is gradually reduced every time the battery is charged.
- When battery life per charge is reduced to about half of the default time, this means that the internal battery is approaching the end of its usable life. In this case, it is recommended to replace the battery as soon as possible. For details on replacing the internal battery, contact the number listed in "Repairs" (in Japanese only) on the last page or a repair counter that DOCOMO specifies.
- If you watch TV etc. while charging for a long time, the usable life of the internal battery may become shorter than estimated.



■ AC adapter and DC adapter

- Refer to user's guide of AC Adapter 03/04 (sold separately) or DC Adapter 03/04 (sold separately).
- AC Adapter 03/04 covers from 100 to 240V AC.
- The shape of the plug for the AC adapter is for 100V AC (for domestic use). To use the AC adapter of 100 to 240V AC overseas, a conversion plug adapter applicable to your country of stay is required. Do not use a voltage converter for overseas travel to charge the battery.


Charging with AC adapter/DC adapter

[Read the user's guides of AC Adapter 03/04 (sold separately) and DC Adapter 03/04 (sold separately)]


- Following operations describe how to charge with AC Adapter 04 or DC Adapter 04.

1 Insert the microUSB plug of the AC adapter/DC adapter horizontally into the external connector terminal on the handset with the side marked with "B" turned up

- Check the direction (front or rear) of the microUSB plug and insert it horizontally.

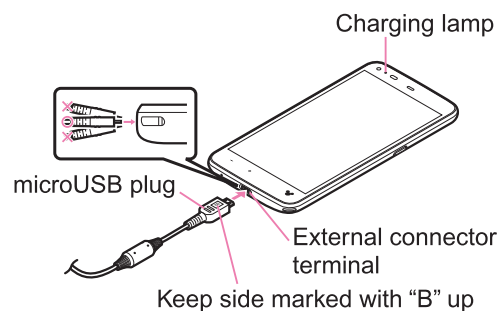


2 When you erect the AC adapter power plug and insert it into an outlet or insert the DC adapter power plug into a car cigarette lighter socket, the charging lamp illuminates and charging starts

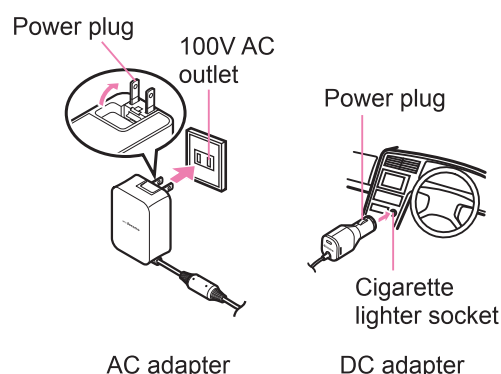

3 When charging is complete, the charging lamp turns off

4 Remove the AC adapter power plug from the outlet, or remove the DC adapter power plug from the car cigarette lighter socket

5 Remove the microUSB plug of the AC adapter/DC adapter horizontally from the external connector terminal

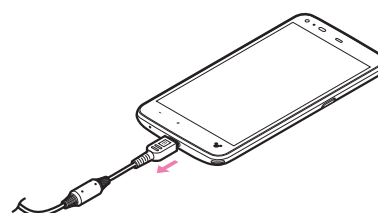

- Using unnecessary force when inserting or removing the equipment may cause damage to the external connector terminal and the microUSB plug or result in a malfunction.

When using a DC adapter

- The DC adapter should only be used in negative grounded vehicles (12 and 24V DC).
- Do not use with the car engine shut off. May drain the car battery.
- The DC adapter fuse is a consumable product. For replacement, purchase a new fuse at a nearest auto parts retailer etc.
- Refer to the user's guide of DC Adapter 03/04 for details.

Charging with Micro USB Cable 01

You can charge the handset by connecting the handset to a PC with Micro USB Cable 01 (sold separately).

- When the handset is turned off, it is automatically turned on.
- For details on connecting to a PC P. 82 "Connecting the handset and PC"

Turning power on/off

Turning power on

1 (for at least 2 seconds)

- When you turn the power on for the first time, make the initial settings (P. 22 "Initial settings").

- Precautions about inserting and removing a microSD Card are displayed every time the handset power is turned on.

Turning power off

1 (for at least 1 second) ▶ [Power off completely] ▶ [OK]

Turning power off forcibly

You can forcibly turn the power off if the screen does not respond or the power cannot be turned off.

1 (for at least 8 seconds)

- Release your finger after the vibrator is activated to turn the power off.

Sleep mode

You can quickly activate the handset when turning the power on again by setting the sleep mode.

1 (for at least 1 second) ▶ [To sleep] ▶ [OK]

- Do not set the sleep mode but turn the power off when an airplane you are aboard is about to take off/land, the battery level is low, etc.
- Even if you set the sleep mode, the handset may not be quickly activated depending on its status such as when it has not been used for a long time.


Turning display on/off

The display is turned off when is pressed or the handset is not in use for a set length of time.

Press while the display is turned off to turn it on.

Operations on Welcome Sheet (Lock Screen)

When the power or the display is turned on, the Welcome Sheet (Lock Screen) is displayed and the touch panel is locked.

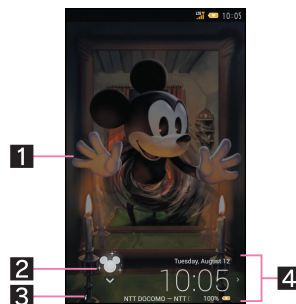

1 Wallpaper

- If [Welcome Sheet wallpaper] is set to [Image] and you have registered multiple still pictures, you can switch wallpapers by flicking them to the left/right.
 - You can register up to five still pictures in [Welcome Sheet wallpaper].

2 Unlock/Display shortcuts

- Slide down to unlock. Also, you can display shortcuts etc. by touching .

3 Owner's information

- Touch after making settings for [Owner info] of Lock & Security to display the owner's information.

4 Info Area

- Flick to the left/right to switch among Magical Theme Changer (P. 32 "Magical Theme Changer"), widget, date and time, etc. Also, you can add a widget to display by touching [+] while [Add Widget] is displayed. Touch and hold a widget to move or delete it.

Welcome Sheet settings

You can set wallpapers, shortcuts, Info Area, etc. to display in the Welcome Sheet (Lock Screen).

1 In the Welcome Sheet (Lock Screen),

2 [Welcome sheet setting]

- **Welcome Sheet wallpaper:** Set images to use in the Welcome Sheet (Lock Screen).
- **Shortcut:** Set shortcuts to activate in the Welcome Sheet (Lock Screen).
- **Info area:** Display weather information in the Info Area.
- **Welcome lighting time:** Set the light duration of the Welcome Sheet (Lock Screen).

Operations on Welcome Sheet (Lock Screen)

- To set/disable the manner mode: Touch and hold
- To turn on the mobile light: Touch and hold
 - Press any of the keys or touch the screen to turn it off. Press if the display is turned off.

- The mobile light will automatically turn off approximately 30 seconds after it turns on.

- The status panel can be displayed without disabling the lock when Screen lock is set to [Slide or Touch].

Basic operation

The followings describe basic operations of the handset such as operations of the touch panel and navigation keys, and operations for shooting screenshot.

Operation of touch panel

The followings describe the operations to use the display (touch panel).

- Operations may differ depending on the function and screen in use.

Cautions when using the touch panel

- The touch panel is designed to be lightly touched with your finger. Do not forcefully press with your finger or a pointed object (fingernail, ballpoint pen, pin, etc.).
- In the following cases, the touch panel may not work even if you touch it. May cause a malfunction.
 - Operation with a gloved finger
 - Operation with the tip of a fingernail
 - Operation with foreign objects placed on the operation pad
 - Operation on the touch panel on which a protective sheet or a sticker is put
 - Operation while the touch panel is wet
 - Operation with fingers wet with sweat or water

- Operations may be interrupted if you touch an area other than a confirmation screen or the status bar while the confirmation screen etc. is displayed.

Touch

Touch a key or an item displayed on the screen and then release your finger from it to select or set it.



Touch and hold

When you keep your finger on the touch panel, a menu may appear depending on the function and screen in use.

Slide/Drag

Move your finger while keeping it on the touch panel to scroll the screen or move an icon, widget, etc. to the desired position. In addition, when you touch a menu or item by mistake, move your finger away from it to cancel the selection.




Flick

Move your finger like sweeping the touch panel in the home screen etc. to switch pages.



Pinch out/Pinch in

You may be able to zoom the screen in/out etc. by putting two fingers on the touch panel and moving them with putting a distance between two fingers apart (pinch out)/closer (pinch in) depending on the function and screen in use.

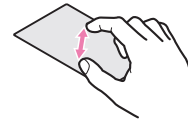

Operation while using function

Navigation keys

Use the navigation keys displayed at the bottom of the screen to perform the basic operations.



1 [Back key/Close key]: Back key/Close key

- Return to the previous screen.
- Close the keyboard.

2 [Home key]: Home key

- Display the home screen.

3 [Menu key]: Menu key

- Display available functions (menus).

4 [Recent Apps key]: Recent Apps key

- Display Quick Launcher or Recent Apps (P. 30 "Quick Launcher", P. 31 "Recent Apps").

Using user-aid function

You can quickly activate apps supporting the user-aid function.

1 Slide any of the navigation keys up


- If the activation method of an app is set to [Always], the app is activated.

2 Select an app ▶ select an activation method

Retrieving menu

When you touch [Menu key] or touch and hold the screen, functions (menus) available in that screen appear.

Example: Dial screen



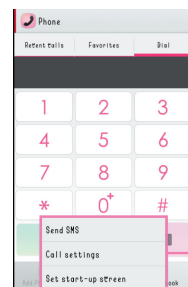


Switching the settings

When a check box is displayed beside the setting item, you can set it enabled/disabled or [ON]/[OFF] by touching it.

Example: Location services screen, Alarm screen

- [✓]: Enabled, [□]: Disabled

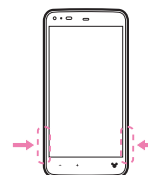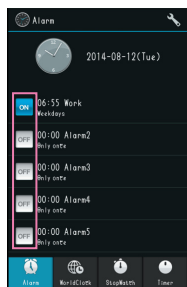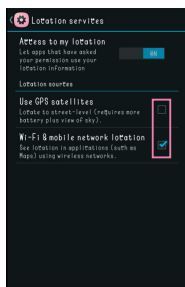

Vertical/Horizontal display

The screen display is switched when you tilt the handset.

- Vertical/Horizontal display may not be switched even if the handset is turned depending on the screen being displayed.
- Vertical/Horizontal display is not switched if the handset is turned while it is positioned parallel to the ground.
- The screen display may not be switched properly when a sound or a vibration is being activated.
- Vertical/Horizontal display may not be switched properly right after the display or power is turned on.
- You can set the display not to automatically switch (P. 68 “Display”, P. 70 “Grip sensor”).
- Screens may be displayed in the full screen depending on the app when switching vertical display to horizontal display.

Shooting screenshot

Hold **[Home]** + **[Power]** down for at least 1 second to save the screen being displayed to the handset memory.

- The shutter sounds when shooting a screenshot.
- You can check the saved screenshots by using Album etc.

- Data cannot be saved while displaying Mobacas, TV, home network, e-books, etc.
- Data may not be saved completely or partially depending on the app.

Sweep ON

Slide the touch panel with a finger while the display is turned off to turn the display on.

- Set Sweep ON to [Enable]/[Enable(Link to grip sensor settings)] in advance (P. 68 “Display”).
- If the proximity sensor is covered with a hand, an object, etc., the display cannot be operated by touching to prevent inadvertent operations although the display is turned on. Also, the display may be turned off regardless of the setting of the handset.
- When you set Sweep ON to [Enable(Link to grip sensor settings)], set Grip sensor to [ON] in advance (P. 70 “Grip sensor”).

Using Grip sensor

You can display the clock, minimize the ringtone/alarm volume and activate the vibrator, etc. by holding the handset.

- When you use each function of Grip sensor, set Grip sensor to [ON] and make settings for the relevant functions in advance (P. 70 “Grip sensor”).
- The notification icon for Grip sensor appears on the status bar by default. You can make settings for Grip sensor by opening the status panel and touching the notification.

Cautions when using Grip sensor

- In the following cases, Grip sensor may not work properly. May cause a malfunction.
 - Operation with a gloved finger
 - Operation while the handset is equipped with a case, cover, etc.*
 - Operation while the handset is wet
 - Operation while a metallic object touches the sensor


* Depending on the case or cover, you may be able to use Grip sensor with the handset equipped with it. Set Sensitivity setting of Grip sensor to [Strong(while putting cover on)] (P. 70 “Grip sensor”) after equipping the handset with the case or cover.

- Grip sensor (P. 13 “Part names and functions”) responds when you touch both the right and left sides. Hold the handset with the both sides being touched to use Grip sensor since Grip sensor does not respond when you touch only one side. Also, when you release your fingers, keep your fingers away from both sides of the sensor. Letting your fingers remaining touching either side keeps the sensor functioning.

Operation when you hold the phone

Showing clock

You can display the clock by holding the handset while the display is turned off.

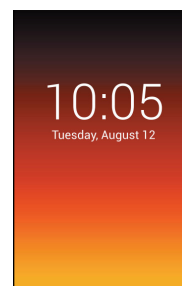

- Press **[Home]** while the clock is displayed to turn the display on.
 - Alternatively, slide your finger on the touch panel to turn the display on when Sweep ON is set to [Enable]/[Enable(Link to grip sensor settings)] (P. 68 “Display”).
- If the proximity sensor is covered with a hand, an object, etc., the clock is not displayed to prevent inadvertent operations.

Showing lock screen

You can turn the display on by holding the handset while the display is turned off.

- Set Screen lock to an item other than [None] in advance (P. 71 “Lock & security”).

- If the proximity sensor is covered with a hand, an object, etc., the display cannot be operated by touching to prevent inadvertent operations although the display is turned on. Also, the display may be turned off regardless of the setting of the handset.
- Even if Screen lock is set to [None], the lock screen is not displayed although the display is turned on.

■ Volume down for incoming calls

You can minimize the ringtone/alarm volume and activate the vibrator by holding the handset during an incoming call or while the alarm of the “Alarm/Clock” app is ringing.

■ Deterrence rotate screen

You can keep the screen displayed vertically while holding the handset.

Emergency mode

You can save the internal battery by restricting settings and functions on the handset.

1 (for at least 1 second) ► [Emergency mode] ► [OK]

- The handset restarts and it switches to Emergency mode.

■ Disabling Emergency mode

1 (for at least 1 second) ► [Emergency mode] ► [OK]

- Alternatively, in the Emergency mode screen, [Stop saving] ► [OK] to disable Emergency mode.
- The handset restarts and Emergency mode is disabled.

Searching information on the handset and websites

1 In the home screen, [APPS] ► [Google]

- If the confirmation screen for Google Now™ is displayed, check the content, follow the instructions on the screen and operate.
- Quick search box appears.

2 Enter the keyword



1 Search box

- Enter the keyword to search with.
- When the keyword is entered, apps, data, etc. whose names start with the entered characters are searched and displayed as a list.

2 Switch to Voice Search

3 Select the search result

- When a search result is an app, the corresponding app is activated.
- If [Images] etc. is displayed, you can search by selecting a genre.
- When you cannot see search results hidden behind the keyboard, touch  to close the keyboard.

■ Search settings

1 In the quick search box, ► [Settings]

2 Select an item

- **Phone search:** Set the range for subjects to search.
- **Voice:** Make settings for the voice input.
- **Accounts & privacy:** Make settings for the accounts and privacy such as history and the location information service.
- **Help & feedback:** Display help and send feedback.

Character entry

You can enter characters using the QWERTY keyboard, 12 keyboard, voices and kuten codes.


Keyboard layouts

- Following operations describe how to enter characters by using iWnn IME - SH edition.
- You can use the following two types of the keyboards.

QWERTY keyboard	You can enter a displayed character by touching the character entry key. Use romaji for entry.
12 keyboard	Several characters are assigned to one character entry key. Characters are switched every time the key is touched. • You can enter characters by flicking a character entry key up/down or to the left/right.



QWERTY keyboard

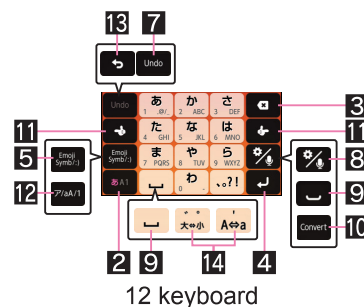

12 keyboard

※ Each key may change depending on the settings and the condition.

1 Shift key

- Touch to switch between upper/lower case characters etc.
 - When  is displayed, lower case characters are entered.
 - When  is displayed, the first character to be entered becomes upper case one. When  is displayed, upper case characters are entered.
- Symbols that can be entered using the keyboard change when you switch the upper/lower case characters.

2 Input mode switching key

- Touch to switch input modes.
 - Touch it to switch input modes in the order of half-width alphabet → half-width numeric → hiragana/kanji. The keyboard set in each input mode is displayed.
 - Alternatively, slide the input mode switching key to the right to switch input modes.

3 Delete key

- Delete characters displayed in a direction set in Delete key behavior.

4 Enter key

- Insert a line feed.
- Determine the entered characters.
- Execute operations entered in an entry field such as the search box.
- Move to the next entry field.
- Touch and hold to close the keyboard.

5 Symbol key

- Use to display the pictogram/Deco-mail pictogram/symbol/emoticon list.
 - You cannot enter these symbols in some apps.
- Slide it to the right to display Quote apps list.

6 Katakana and alphabet key

- Display katakana of the entered characters or normal conversion candidates (katakana and alphabet conversion candidates) of alphabets or symbols assigned to a touched key.
- Slide it to the right to display Quote apps list.

7 Undo key

- Use to undo previous operation.

8 Setting key

- Display setting menu.

9 Space key

- Enter a space.

10 Normal conversion key

- Execute the normal conversion of the input characters.

11 Cursor key

- Use to move the cursor or to change the range of characters to be converted.

12 Katakana and alphanumeric key

- Display katakana of the entered characters or normal conversion candidates (katakana and alphanumeric conversion candidates) of alphanumerics or symbols assigned to a touched key.
- Slide it to the right to display Quote apps list.

13 Reverse toggle key

- Use to display characters assigned to the same key in the inverse order.

14 Character switching key

- Touch to switch the upper/lower case characters.
- Touch to add dakuten/handakuten.

Switching keyboards

Example: In hiragana/kanji entry mode on vertical display

- 1 In the character entry screen, [%] ▶ [Change input UI] ▶ [Set QWERTY keyboard [あいう [Kanji]] [Portrait]]/[Set 12 keyboard [あいう [Kanji]] [Portrait]]

- Alternatively, slide the setting key up to switch keyboards.

Setting character entry

- Following operations describe how to enter characters by using iWnn IME - SH edition.

Sound/Vibration

- 1 In the character entry screen, [%] ▶ [Change settings] ▶ [Sound / Vibration]

2 Select an item

- **Sound on key press**: Set whether or not to enable operation sounds of entering characters.
- **Vibrate on key press**: Set whether to activate the vibrator when entering characters.

Display/Layout

- 1 In the character entry screen, [%] ▶ [Display / Layout]

2 Select an item

- **Keyboard layout**: Set the keyboard size and the number of lines of the conversion candidates field for the portrait display.
- **Emoji/Symbol list rows**: Set the number of columns of pictograms list/symbols list.

- **Key input guide**: Set whether to zoom in the selected key and to display the guide of flick input.

Input assistance

- 1 In the character entry screen, [%] ▶ [Change settings] ▶ [Input assistance]

2 Select an item

- **Flick sensitivity**: Set the sensitivity of the keyboard when selecting characters with flick input.
- **Toggle input**: Set whether to use the toggle input while flick input is enabled.
- **Voice input provider**: Set where to connect when using the voice input.
- **Delete key behavior**: Set the operations of the delete key.
- **Romaji input assistance**: Set to prevent unnecessary keys from being touched when entering Japanese with romaji.
- **Auto cursor move**: Set the speed for the cursor to automatically move to the right side after entering characters.
- **Auto space input**: In half-width alphabet entry, automatically insert a half-width space after selecting an English word.
- **Emoji/Symb/.) continuous input**: Set whether to keep the pictogram/symbol/emoticon list displayed after selecting a candidate from it.

[Delete key behavior]

- When the cursor is on a character, delete the character. When [Left-delete (Backspace)] is set and the cursor is at the beginning of a text, you can delete characters on the right side of the cursor. When [Right-delete (Clear)] is set and the cursor is at the end of a text, you can delete characters on the left side of the cursor.

Conversion

- 1 In the character entry screen, [%] ▶ [Change settings] ▶ [Conversion]

2 Select an item

- **Word prediction**: Set whether to use the predictive conversion.
- **Next word guess**: Display relational predictive conversion candidates immediately after an entry is determined.
- **Wildcard prediction**: Set whether to use the wildcard prediction.
- **Beginning prediction for mail**: Display text candidates to use at the beginning of a message when entering the message for a mail.
- **Typing error correction**: Set Typing error correction.
- **Extra conversion engine**: Display conversion candidates by using an external conversion engine.
- **Auto capitalization**: In half-width alphabet entry, enter an initial character at the head of a text with upper case one.

[Auto capitalization]

- Auto capitalization may not follow the setting depending on the app in use.

Dictionary

- 1 In the character entry screen, [%] ▶ [Change settings] ▶ [Dictionary]

2 Select an item

- **Japanese user dictionary**: Edit words in the Japanese user dictionary.
- **English user dictionary**: Edit words in the English user dictionary.
- **Download dictionary**: Register/Cancel/Delete downloaded dictionaries.

- **Update conversion dictionary:** Update, download or uninstall conversion dictionaries.
- **Contacts name collaboration:** Add name data of the phonebook to the dictionary or reset the name data in the dictionary.

■ Slide operation

1 In the character entry screen, [%] ▶ [Change settings] ▶ [Slide operation]

2 Select an item

- **Upward slide:** Set the operations available when you slide the keyboard from its bottom to top.
- **Downward slide:** Set the operations available when you slide the keyboard from its top to bottom.
- **Rightward slide:** Set the operations available when you slide the keyboard from its left edge to right edge.
- **Leftward slide:** Set the operations available when you slide the keyboard from its right edge to left edge.

■ Reset

1 In the character entry screen, [%] ▶ [Change settings] ▶ [Reset]

2 Select an item

- **Set the default settings:** Reset the settings of iWnn IME - SH edition.
- **Clear learning dictionary:** Reset the learning dictionary.
- **Reset facemark list:** Reset the contents of the emoticon list.

Entering characters

- Following operations describe how to enter characters by using iWnn IME - SH edition.

Example: When entering “文字”

1 In the character entry screen, enter “もじ”



1 Enlarge/Reduce

- Enlarge/Reduce the predictive conversion candidates field.

2 Predictive conversion candidates field

- Predictive conversion candidates are displayed. Touch one of them to enter.
- If you set an external conversion engine, [Extra conv] is displayed. Touch it to display conversion candidates searched by the external conversion engine.

2 [Convert]

3 In the conversion candidates field, select “文字”



1 Range reduction/Range enlargement

- You can reduce/enlarge the range of characters to convert.
- Displayed only when available.

2 Close

- Close the conversion candidates field.

3 Conversion candidates field

- Touch one of conversion candidates to enter.
- If you set an external conversion engine, [Extra conv] is displayed among the predictive/normal conversion candidates. Touch it to display conversion candidates searched by the external conversion engine.

4 Determine

- Determine the conversion.

5 Predictive conversion

- Predictive conversion candidates are displayed in the conversion candidates field.

6 Normal conversion

- Normal conversion candidates are displayed in the conversion candidates field.

7 Katakana and alphanumeric

- Katakana and alphanumeric conversion candidates are displayed in the conversion candidates field.

■ Wildcard prediction

Conversion candidates are predicted according to the number of the entered characters and appear.

- Enable [Wildcard prediction] in advance (P. 20 “Conversion”).
- This function is available in the hiragana/kanji entry mode and the half-width alphabet entry mode.

Example: When entering “アナウンス”

1 In the character entry screen, enter “あな”

2 [%] ▶ [%] ▶ [%]

- Each time you touch [%], [*] is entered and the predictive conversion candidates appear according to the number of characters.

3 In the conversion candidates field, select “アナウンス”

■ Inputting kuten codes

You can use four-digit kuten codes assigned to each character for entering kanji, hiragana, katakana, symbol, alphanumeric characters, etc.

1 In the character entry screen, [%] ▶ [Change input mode] ▶ [Character Code]

2 Input a kuten code

- After the fourth digit is entered, the corresponding character appears.
- After the fourth digit is entered, the entry mode is switched to the previous entry mode.

Inputting with voices

You can enter characters with voices.

1 In the character entry screen, [%] ▶ [Change input UI] ▶ [Set Voice Input]

- Alternatively, slide the setting key to the right while the QWERTY keyboard is used or slide the setting key down while the 12 keyboard is used to switch to the voice input.

2 Speak to the microphone

- In the following cases, the voice input may not work properly.
 - When the voice is too loud
 - When the surrounding noise is big
 - When the phonation is not clear
 - When the phonation is not natural
 - When the pronunciation is too fast
 - When any key is pressed or the microphone is touched

Editing characters

You can perform operations such as cutting, copying or pasting by selecting the entered characters.

1 Touch and hold the entered characters

2 Edit the characters

- To specify the selection range: Drag [↶]/[↷]
- To display the history of cut and copied characters: [%] ▶ [Quote apps (Mushroom)] ▶ [Copy History SH]



1 Select all

- Select all the entered characters.

2 Cut

- Cut the selected characters.

3 Copy

- Copy the selected characters.

4 Paste

- Paste the cut or copied characters.
- Alternatively, touch and hold the character entry field ▶ [PASTE] to paste them.
- Touch and hold the character entry field ▶ [CLIPBOARD] ▶ select characters to enter to paste them from the history.

- Up to ten history items of cut and copied characters can be saved.
- If the number of history items of cut and copied characters exceeds the maximum number to be saved, they are deleted from the oldest one.

Changing screen display to English

1 In the home screen, [アプリ] (APPS) ▶ [設定] (Settings) ▶ [言語と文字入力] (Language & input) ▶ [言語(Language)を選択] (Select language) ▶ [English]

Initial settings

When you turn the power on for the first time, the initial settings screen is displayed. Follow the instructions on the screen and operate.

- The following items can be set. However, items to be displayed may differ depending on the Google account settings.
 - Language setting
 - Wi-Fi settings (P. 23 “Wi-Fi settings”)
 - Google account settings (P. 24 “Setting up Google account etc.”)
 - Google & location
 - Owner’s information of the handset
 - Google services
 - Google Wallet

Initial settings for docomo service

1 When the initial settings screen for docomo service is displayed, [Next]

2 Make the initial settings

- Follow the instructions on the screen and operate after this step. The following items can be set.
 - docomo ID setting
 - Set docomo apps password and Remote Initialization Service setting
 - docomo cloud settings
 - Install all apps
 - Location providing setting

Setting an access point

An access point (sp-mode) for Internet connection is registered by default. You can add other access points and change them if necessary.

If you want to use mopera U or Business mopera Internet, add an access point of either provider manually.

For details on mopera U, refer to the mopera U website.

Checking an access point in use

1 In the home screen, [APPS] ▶ [Settings] ▶ [More...] ▶ [Mobile networks] ▶ [Access Point Names]

Setting additional access points

- Never set the MCC to a figure other than 440 or the MNC to a figure other than 10. Otherwise the added access point disappears from the screen.

1 In the home screen, [APPS] ▶ [Settings] ▶ [More...] ▶ [Mobile networks] ▶ [Access Point Names] ▶ [New APN]

2 [Name] ▶ enter the name of the network profile to create ▶ [OK]

3 [APN] ▶ enter the access point name ▶ [OK]

4 Enter other items required by network operators ▶ [Save]

- If the settings of MCC and MNC are changed and the added access point disappears from the screen, reset the settings or set the access point manually.

Resetting an access point

Reset an access point to default setting.

- 1 In the home screen, [APPS] ▶ [Settings] ▶ [More...] ▶ [Mobile networks] ▶ [Access Point Names] ▶ [⌵] ▶ [Reset to default]

- When sp-mode is not subscribed or if you fail to make automatic setting of an access point due to signal status such as outside the service area, you are required to set the access point again manually.

sp-mode

sp-mode is an ISP owned by NTT DOCOMO for smartphones. In addition to the Internet connection, mail service with the same address you use on i-mode (@docomo.ne.jp) or other services are available. sp-mode is a paid service that requires subscription. For details on sp-mode, refer to the DOCOMO website.

Wi-Fi settings

If you use Wi-Fi function of the handset, you can use mail or Internet by connecting to access points of your home, corporate network or public wireless LAN service.

Radio interference with Bluetooth devices

- Wireless LANs (IEEE 802.11b/g/n) use the same frequency band (2.4 GHz) as Bluetooth devices. Therefore, using the wireless LAN device near a Bluetooth device may cause radio interference, lowering of communication speed, noise or connection failure. In this case, turn off the Bluetooth device or keep the handset and the wireless LAN device at least approximately 10 m away from the Bluetooth device.
- Packet communication is also available while Wi-Fi is set to [ON]. Wi-Fi connection is prioritized while Wi-Fi connection is set, but the connection is automatically switched to that of LTE/3G/GPRS network once Wi-Fi connection is terminated. Note that packet communication charges may be incurred in this case.
- Refer to the manual of your wireless LAN base unit when using the access point at home etc.
- Operate access point registration near the access point.
- If you use the docomo service by using Wi-Fi function, set a docomo ID in advance. In the home screen, [APPS] ▶ [Settings] ▶ [docomo service/cloud] ▶ [docomo ID設定] (Set docomo ID) to set it.

- 1 In the home screen, [APPS] ▶ [Settings] ▶ [Wi-Fi]

- 2 Slide [OFF] to the right

- 3 Select an access point

- If you select an access point protected by security, enter the password (security key) and select [Connect].
- To register access points manually: [ADD NETWORK] ▶ enter the network SSID ▶ set security ▶ [Save]
- WPS compatible access points can be easily registered. In the home screen, [APPS] ▶ [Settings] ▶ [Wi-Fi] ▶ [EASY SETTINGS] ▶ [WPS Push Button]/[WPS Pin Entry] to register an access point.
- Alternatively, in the home screen, [APPS] ▶ [Settings] ▶ [Wi-Fi] ▶ [EASY SETTINGS] ▶ [AOSS] to connect to an access point. Follow the instructions on the screen and operate after this step.

- When you select an access point and connect to it with a wrong password (security key), [Avoided poor Internet connection], [Authentication problem] or [Connected (Limited)] is displayed. Confirm the password (security key). When [Avoided poor Internet connection] or [Connected (Limited)] is displayed after entering the correct password (security key), you may not have acquired the correct IP address. Connect to the access point again after confirming signal status.
- The registration process using WPS takes a few minutes. After completion of the registration of the access point, check that the proper connection to the access point is acquired.
- As for the manual registration of an access point, this function supports WEP, WPA/WPA2 PSK and 802.1x/EAP as the security setting.

Detailed settings

- 1 In the home screen, [APPS] ▶ [Settings] ▶ [Wi-Fi] ▶ [⌵] ▶ [Advanced]

- 2 Select an item

- **Network notification**: Set whether to display a notification icon when an open network is detected.
 - Set it after setting Wi-Fi to [ON].
- **Wi-Fi sleep policy**: Set when to switch the Wi-Fi function to the sleep mode.
- **Avoid poor connections**: Set whether to use the Wi-Fi function only when stable Internet connections are available.
- **Wi-Fi frequency band**: Set the frequency band to use.
- **MAC address**: Confirm the MAC address.
- **IP address**: Confirm the IP address.

Disconnecting

- 1 In the home screen, [APPS] ▶ [Settings] ▶ [Wi-Fi]

- 2 Select the connected access point ▶ [Disconnect]

- Disconnect with the password retained.

Tethering

You can use the tethering function that connects Wi-Fi compatible devices, or PCs etc. connected via Micro USB Cable 01 (sold separately) or Bluetooth communication to the Internet by using the handset as an access point.

- You can connect up to 11 devices in total at the same time: ten Wi-Fi compatible devices and a PC connected via Micro USB Cable 01.
- The handset supports Bluetooth tethering via DUN profile. Before using Bluetooth tethering, register the other party's Bluetooth device in advance (☞ P. 79 "Using Bluetooth function"). As for the settings on the Bluetooth device, refer to its manual.

- 1 In the home screen, [APPS] ▶ [Settings] ▶ [More...] ▶ [Tethering]

- 2 Select an item

- **USB tethering**: Set whether to use the USB tethering.
 - Check the details of the precautions before use.
- **Wi-Fi tethering**: Set whether to use the Wi-Fi tethering.
 - Check the details of the precautions before use.
- **Set up Wi-Fi hotspot**: Make settings for Wi-Fi tethering such as network SSID and security.

[USB tethering]

- The tethering function is available on Windows Vista, Windows 7, Windows 8 and Linux.

- A microSD Card inserted in the handset cannot be mounted on a PC during USB tethering.
- For details on USB tethering, refer to the following website.
<http://www.android.com/tether#usb>

[Wi-Fi tethering]

- While the handset is functioning as an access point, it cannot access the Internet via Wi-Fi connection.
- Make settings for Wi-Fi access points in [Set up Wi-Fi hotspot].
- For details on Wi-Fi tethering, refer to the following website.
<http://www.android.com/tether#wifi>

[Set up Wi-Fi hotspot]

- At the time of purchase, Network SSID is set to [SH-05F_AP] and Security is set to [WPA2 PSK] while Password is set randomly. Change the settings if necessary.

Setting up mail account

1 In the home screen, [APPS] ▶ [Email]

- Only when an account is not set up, the account setup screen appears.

2 Enter mail address and password ▶ [Next]

- Provider information is preset for some mail accounts, and a receiving mail server and a sending mail server are automatically set.
- When you use an account whose provider information is not preset, it is necessary to set a receiving mail server and a sending mail server manually. For details on those settings, contact the Internet service provider you use.

3 Set up an account ▶ [Next]

4 Enter an account name and your name ▶ [Next]

- The account which is registered first is automatically given priority to normal use. When registering multiple accounts, you can set an account as prioritized one by enabling [Send email from this account by default.] at the time of the registration.
- When the account type is Exchange, entering “¥UsernameDomain” in the “Domain¥Username” area may be required to set a receiving mail server manually depending on the provider to use. Contact the administrator of the server for details.

Setting up Google account etc.

1 In the home screen, [APPS] ▶ [Settings] ▶ [Add account]

2 Select an account type

3 Set up an account

- In the home screen, [APPS] ▶ [Settings] to find the added account on the displayed menu.

- When activating the app that requires an account without setting one up, the account setup screen appears.
- Keep a separate memo of the set account and password.

■ Deleting your account

1 In the home screen, [APPS] ▶ [Settings]

2 Select an account ▶ [⌵] ▶ [Remove account] ▶ [Remove account]

- Operation methods may differ depending on the account.

■ Retrieving your Google account password

If you forget your Google account password, retrieve it.

1 In the home screen, [APPS] ▶ [Browser]

2 Enter “<http://www.google.com/ncr>” in the URL entry field ▶ [Go] ▶ [Sign in] ▶ [Need help?] ▶ follow the instructions on the screen and operate

- If the URL entry field is hidden, slide the browser screen down.

Importing/Exporting phonebook

■ Importing from docomo mini UIM card

1 In the home screen, [APPS] ▶ [docomo phonebook] ▶ [Contacts]

2 [⌵] ▶ [Import/Export] ▶ [Import from SIM card]

- If there are multiple accounts, the screen for selecting to which account to register is displayed.

3 Select the contact to import

- To import all contacts: [⌵] ▶ [Import all]

■ Importing from microSD Card

1 In the home screen, [APPS] ▶ [docomo phonebook] ▶ [Contacts]

2 [⌵] ▶ [Import/Export] ▶ [Import from SD card]

- If there are multiple accounts, the screen for selecting to which account to register is displayed.
- If there is only one phonebook data saved on the microSD Card, the data is automatically imported.

3 Select the phonebook data to import ▶ [OK]

■ Exporting to microSD Card

1 In the home screen, [APPS] ▶ [docomo phonebook] ▶ [Contacts]

2 [⌵] ▶ [Import/Export] ▶ [Export to SD card]

3 Select the contact to export ▶ [OK]

4 [No]/[Yes] ▶ [OK]

Incoming/Charging lamp

The incoming/charging lamp notifies you that there is a missed call, the handset is being charged, etc. by illuminating/ flashing.

State of lamp	Color	State of handset
Illuminating	Red	Charging in progress (Battery level is approx. 94% or less)
Illuminating	Green	Charging in progress (Battery level is approx. 95% or more)
Flashing	Red	Charging unavailable
Flashing	Green	During an incoming call/Call missed
Flashing	Yellow	New mail received
Flashing	Blue	New docomo mail received
Flashing	Pink	Recording with the voice recorder
Flashing	White	Sending and receiving data via iC communication or NFC communication

- When the display is on, the incoming lamp which notifies you of missed calls, new mails and new docomo mails does not flash. Check them with notification icons. When notification icons do not appear since you play videos with Media Player on horizontal display etc., check them on a screen with the status bar appearing.
- The color of the lamp may appear different depending on the handset color.

Screen display/Icons

Icons displayed on the status bar at the top of the screen give you various kinds of information, such as the status of the handset or the presence of missed calls. You can check the detailed information by displaying the status panel.

Viewing icons

- Two kinds of icons are displayed.
 - Notification icon: Notifies you of missed calls, new mails, etc.
 - Status icon: Display the status of the handset such as the battery level or the signal status.



Main notification icon list

- Some notification icons appear with their number superimposed.

: Missed call

: New SMS

: New mail

: New Gmail

: New message from Hangouts

: New Area Mail

: Error

- Displayed when an error has occurred.

: Authentication of docomo ID setting failed

: Data communication disabled

- Displayed when a data communication limit has been reached.

Alarm

: Alarm sounding/Snooze enabled

: Alarm terminated (without an operation for ending the alarm)

: Schedule notification from the calendar

TV information

(blue): Watching Full-Seg/Receiving Full-Seg

(white): Watching 1Seg/Receiving 1Seg

: Recording

: Recording reservation (appears 5 minutes before recording)

: Playing music with Media Player

Calling

: Making a call/Receiving a call/Talking on the handset

: Putting a call on hold

: Answering memo

: Voice mail message

microSD Card

: Preparing microSD Card

: Unmounted

: Scanning the handset memory/microSD Card

: Available space on the handset memory being run out

: Omakase Lock set

: [Reader/Writer, P2P] enabled

Bluetooth

: Receiving registration/connection request from Bluetooth device

: Data reception request

: DUN connection request/DUN connecting

: USB connection (in Card reader mode connecting)

Data transmission and reception

: Transmission

: Reception

: Finished installing app/App update available

Wi-Fi

: Open network

: Wi-Fi connection restriction

: [USB tethering] enabled

: [Wi-Fi tethering] enabled

: [USB tethering] and [Wi-Fi tethering] enabled

: FM transmitter set to [ON]

: Bright Keep set to [ON (Notify)]

: VPN connected

: Android version upgrade available

Software update

: Software update available

: Software update finished

: Notification icon (not appearing)

GPS positioning status

: GPS positioning

: GPS positioning finished

Mobacas signal strength

: Level 4

: Level 3

: Level 2

: Level 1

: Outside the service area

Main status icon list

: Alarm set

Battery level

to : Approx. 100 to 5%

: Approx. 4% or less

- While charging, the battery icon appears with superimposed.

- If [Display left percents of Battery] is enabled, percentage of the remaining battery level appears on the left side of the battery icon.

Signal strength

: Level 4

: Level 3

: Level 2

: Level 1

: Level 0

: Outside the service area

- During international roaming, [R] appears on the upper left of the signal icon.

: Airplane mode

3G data communication status

: 3G available

: Receiving data via 3G

: Sending data via 3G

: Sending and receiving data via 3G


GSM data communication status	
	GSM available
	Receiving data via GSM
	Sending data via GSM
	Sending and receiving data via GSM
LTE data communication status	
	LTE available
	Receiving data via LTE
	Sending data via LTE
	Sending and receiving data via LTE
HSPA data communication status	
	HSPA available
	Receiving data via HSPA
	Sending data via HSPA
	Sending and receiving data via HSPA
NFC/Osaifu-Keitai lock status	
	(blue): Handset or docomo mini UIM card locked
	(blue): Handset and docomo mini UIM card locked
Omakase Lock status	
	(red): Handset or docomo mini UIM card locked by remote control
	(red): Handset and docomo mini UIM card locked by remote control
: [Reader/Writer, P2P] enabled	
Character entry mode	
	Hiragana/Kanji
	Full-width alphabet
	Half-width alphabet
	Full-width numeric
	Half-width numeric
	Kuten code
Manner mode status	
	Standard manner
	Drive manner
	Silent manner
: Talking with a speaker	
: Mute set	
Wi-Fi signal strength	
	Level 4
	Level 3
	Level 2
	Level 1
	Level 0
Bluetooth	
	Connection stand-by
	Connected
Answering memo	
	No answering memo when the answering memo is set
	One to nine answering memos when the answering memo is set
	Ten answering memos when the answering memo is set
Home network	
	Suspending
	(green): Preparing
	(blue): Running

Using the status panel

1 Drag the status bar down

- Alternatively, touch and hold [] to display the status panel.

2 Use the status panel

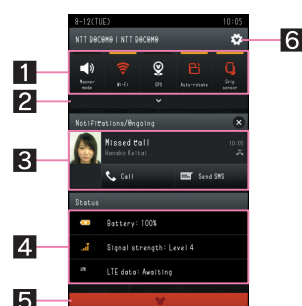

1 Function button area

- Make settings for use of the manner mode, Wi-Fi function, etc. Touch [Rearrange] to rearrange the function buttons.

2 Enlarge/Reduce bar

- Enlarge/Reduce the function button area.

3 Detailed information of Notifications/Ongoing

- When there is a corresponding app, touch the detailed information to activate the app.
- Slide your two fingers up/down or pinch out/in to enlarge/reduce the area.
- Some detailed information of Notifications/Ongoing can be deleted by flicking them to the left/right.
- Touch and hold it to display [App info] and check information on the app.
- Touch [Call] to make a call to the other party.
- Touch [Send SMS] to send an SMS to the other party.

4 Detailed information of Status

- When there is a corresponding app, touch the detailed information to activate the app.

5 Close bar

- Drag it up to close the status panel.

6 Settings

- Activate the "Settings" app.

- Touch [] to delete the detailed information of Notifications/Ongoing and notification icons.

Home screen

Home screen layout

A home app which enables you to find intended apps quickly and operate the handset intuitively. You can choose and use whichever sheet that fits your preferences from among Apps Sheet, Widgets Sheet or Shortcuts Sheet.


- Touch Sheet Switcher or flick a sheet to the left/right to switch sheets.
- If you install a new app, its icon is added to the Apps Sheet.
- If you uninstall an app, its icon is deleted from the Apps Sheet.



Apps Sheet



Widgets Sheet

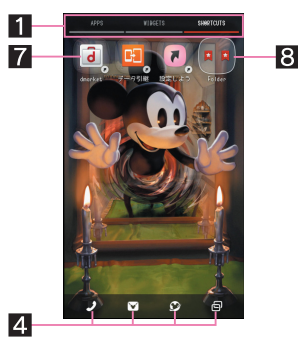

Shortcuts Sheet

1 Sheet Switcher

- Touch and hold a tab and drag it to another one to move the sheet.

2 App

3 Separator

- Pinch out in the home screen to add a separator. You can delete the separator by pinching it in.

4 Navigation keys

- Navigation keys (other than ) of the home screen can be set in [Home settings] (P. 27 “Setting the home screen”).

5 Machi-Chara

6 Widget

- Use simple functions such as a calendar or pedometer.

7 Shortcut

- Quickly activate a frequently used app.

8 Folder

- Drag an icon onto another one to create a folder on the Apps Sheet/Shortcuts Sheet. If you create a folder, you can store apps/shortcuts into it.

Managing the home screen

Setting the home screen

1 In the home screen, slide the top of any sheet down ► [Home settings]

2 Select an item

- **Video tutorial**: Check how to use the handset.
- **Display Google Search**: Set whether to display Google Search on the Widgets Sheet.
- **Social Board**: Make settings for Social Board. If you add Social Board on the Widgets Sheet, you can check information from registered SNSs.
- **Layout Setting**: Set how icons are laid out on the Apps Sheet/Shortcuts Sheet.
- **Switch Navibar setting**: Set a type of the navigation keys to display in the home screen.
- **Navibar application settings**: Set which apps to be allocated as navigation keys if Switch Navibar setting is set to [Custom].
- **Scroll setting**: Set an operation of scrolling.
- **Magical theme settings/wallpaper**: Switch wallpapers, icons, etc. collectively according to the work theme.
 - When you switch themes, the wallpaper of the Welcome Sheet (Lock Screen) and home screen is set to [Disney Magical Moments].

[Layout Setting]

- If you set Layout Setting to [Simple], only the Apps Sheet is displayed and icons and characters become larger.

[Switch Navibar setting]

- If Switch Navibar setting is set to [Standard], the same navigation keys as those on the other screens (, , ) are displayed.

Adding widgets/shortcuts

1 In the home screen, slide the top of any sheet down ► [Add widget]/[Add shortcut]

2 Select a widget/shortcut

Moving apps/widgets/shortcuts

1 In the home screen, touch and hold an app/a widget/a shortcut

2 Drag it to the destination

■ Managing apps/widgets/shortcuts

1 In the home screen, touch and hold an app/a widget/a shortcut

2 Select an item

- **Add to shortcut:** Add a shortcut to the app on the Shortcuts Sheet.
- **Add to widget:** Add a shortcut to the app on the Widgets Sheet.
- **App Info:** Display information on the app.
- **Delete app:** Uninstall the app.
- **Resize:** Change the size of the widget.
- **Peel off:** Delete the widget/shortcut.
- **Move to widget:** Move the shortcut to the Widgets Sheet.

[Peel off]

- Apps are not uninstalled even if their shortcuts are deleted.

■ Renaming folders

1 In the home screen, select a folder

2 Touch the folder name

3 Enter a folder name

App list

- A separate paid subscription will be required for using some apps.
- The followings are the apps installed by default.

Icon	App	Description
	Alarm/Clock	Use Alarm (☞ P. 60 "Alarm"), WorldClock (☞ P. 61 "WorldClock"), StopWatch (☞ P. 61 "StopWatch") and Timer (☞ P. 61 "Timer").
	Album	Sort images and videos by people, event and location and use them (☞ P. 57 "Album").
	Anshin Scan* ^{1, 2}	An app to use smartphones safely by detecting viruses, checking apps which deal with personal data, giving you a warning when you try accessing offensive websites, etc.
	Browser	Display websites via packet communication or Wi-Fi function (☞ P. 45 "Displaying websites").
	Calculator	Use a calculator (☞ P. 62 "Calculator").
	Calendar	Manage the schedule.
	Camera	Shoot with the camera (☞ P. 54 "Before using camera").
	Chrome	Display websites via packet communication or Wi-Fi function.
	Contents Manager	Manage data stored on the handset memory and the microSD Card (☞ P. 77 "Contents Manager").
	Disaster kit	An app to use Disaster Message Board, Disaster Voice Messaging and Early Warning "Area Mail".

Icon	App	Description
	Disney Cinema* ^{1, 2}	Lines up the best video contents from popular live action movies to animation works provided by Disney! This is the premium video service only for you.
	Disney Magical Alarm* ¹	An alarm widget easy to use which enables you to enjoy the worlds of six works. If you change the worlds of six works by Magical Theme Changer, the designs of the widgets are also automatically switched.
	Disney Mail Maker* ¹	A Deco-mail converter app which can be activated from docomo mail. It activates alone to create and link Deco-mail as well!
	DisneyMusic Player* ¹	An original music player app provided by Disney. You can manage and play all music data as well as Disney ones. This app can be controlled anytime from the home screen since a widget function is installed. Also, Disney music data are delivered every month for free and a lot of original music data arranged for Disney Mobile are available.
	Disneyマーケット (Disney Market)* ^{1, 2}	Disney Market is a convenient portal website for providing various "Disney apps" or recommended information by Disney. Check here for the latest information (☞ P. 47 "Disney Market")!
	Dlife* ^{1, 2}	Enjoy dramas, movies, variety shows and news which are popular worldwide anytime and anywhere! Best-selected programs are delivered from "Dlife", a BS channel, which advises you that new styles be applied on your everyday selections.
	dmarket* ¹	An app which handles various products such as music and books and enables you to purchase ones that satisfy your needs (☞ P. 47 "dmarket").
	dmenu* ¹	A shortcut app to "dmenu". In dmenu, you can easily search enjoyable and convenient contents exclusively dedicated to smartphones as well as the contents used in i-mode (☞ P. 47 "dmenu").
	docomo backup	An app to back up to/restore from "Data Storage Box" or "microSD Card" (☞ P. 65 "Backing up to/Restoring from Data Storage Box", P. 66 "Backing up to/Restoring from a microSD Card").
	docomo mail* ^{1, 2}	An app to send and receive mails using mail address of DOCOMO (@docomo.ne.jp). Same mails can be viewed from multiple devices and mail data can be easily transferred when you change models, since sent and received mails are saved on cloud computing. Also, pictograms and Deco-mail are available. Automatic reception is also supported (☞ P. 41 "docomo mail").
	docomo phonebook	Manage contacts using the phonebook app provided by DOCOMO (☞ P. 39 "Adding contacts to phonebook").
	Downloads	Manage data such as images downloaded from websites.

Icon	App	Description
	Drive	Save images, videos, etc. on Google Drive™ or share them.
	Email	Use Email (☞ P. 42 “Email”).
	Gmail	Use Gmail (☞ P. 43 “Gmail”).
	Google	Use quick search box (☞ P. 19 “Searching information on the handset and websites”).
	Google Settings	Make settings for various Google services, such as accessing Google+ and apps which link up with Google+, collectively.
	Google+	Use Google+ (Photos, Communities, Locations, Hangouts, Events, etc.).
	Hangouts	Use Hangouts (☞ P. 60 “Hangouts”).
	“Happiness is Here” Live Wallpaper* ¹	Provides children of all generations with music, dream and friendship... Let's share superb “Happiness”. This app gives you live wallpapers of “Happiness is Here”, the day parade of Tokyo Disney Resort®.
	IC Tag/Barcode Reader	An app to read information written on IC tags and bar codes.
	iDアプリ (iD appli)* ¹	An app to make settings for using electronic money iD etc. (☞ P. 49 “iD appli”).
	Instruction Manual* ^{1, 2}	Instruction manual for the handset. You can also activate the functions to use directly from the explanations on the manual.
	i コンシェル (i-concier)* ¹	An app to use i-concier. i-concier is a service to have your mobile phone support your life like a “butler” or “concierge”.
	Local	Search for facilities near your present location according to genre (☞ P. 60 “Local”).
	Magic Camera Welcome* ¹	A hands-on AR app which expresses gratitude for your purchase of the handset and welcome you to Disney Mobile. When you hold the camera over the cover of included Welcome Card, Disney mascots appear.
	Maps	Measure your present location, use the navigation function to check how to get to your destination in detail, etc. (☞ P. 59 “Maps”).
	Media Player	An app to play music and videos (☞ P. 58 “Media Player”).
	Memo	An app to create and manage memos (☞ P. 62 “Memo”). Its data is shared with the Schedule app. The i-concier is supported.
	Messaging	Use SMS (☞ P. 41 “SMS”).
	Music	Play music.

Icon	App	Description
	Navigation	Search for a route from the present location to the destination (☞ P. 59 “Navigation”).
	NOTTV* ¹	Watch Mobacas. You can enjoy programs and contents of broadcast stations such as “NOTTV” (☞ P. 50 “Mobacas”).
	OfficeSuite	Use OfficeSuite. ● For details on supported files, in the home screen, [APPS] ▶ [OfficeSuite] ▶ [≡] ▶ [Help] ▶ [Help] to refer to help.
	Osaifu-Keitai	Use Osaifu-Keitai (☞ P. 48 “Using “Osaifu-Keitai compatible services”).
	Phone	Use Phone and make settings for Phone (☞ P. 35 “Making a call”).
	Photos	Manage images and videos.
	Play Books	Purchase e-books, read the purchased e-books or browse samples by connecting to Google Play.
	Play Games	Search for new games or play favorite games.
	Play Movies & TV	Rent and watch movies.
	Play Store	Use Google Play (☞ P. 47 “Play Store”).
	Schedule	An app to create and manage schedules (☞ P. 61 “Schedule”). Its data is shared with the Memo app. The i-concier is supported.
	Settings	Make various settings for the handset. ● The same operation can be performed as in the home screen, slide the top of any sheet down ▶ [Settings].
	SH tool	Use convenient functions such as voice recorder, business card reader, bar code reader and dictionaries (☞ P. 62 “SH tool”).
	Tokyo Disney Resort Machijikannabi* ^{1, 2}	An app to check your present location on the map of Tokyo Disneyland/Tokyo DisneySea and get various information such as waiting time for attraction.
	ToruCa* ¹	An app which enables you to store value coupons of your favorite shops, useful information, etc. in one place (☞ P. 49 “ToruCa”).
	Translation finder	Have English texts translated into Japanese in real time just by holding the camera over English texts. You can also shoot what you can see in Translation finder and select characters to search them with the dictionary or browser (☞ P. 56 “Translation finder”).
	TV	Use TV (Full-Seg/1Seg) (☞ P. 52 “TV (Full-Seg/1Seg)”).
	Twitter	An official client app of Twitter. You can communicate with other people by sharing short messages on websites.

Icon	App	Description
	Voice Search	Search information of websites by voice (P. 19 “Searching information on the handset and websites”).
	YouTube	Use YouTube (P. 60 “YouTube”).
	遠隔サポート (Remote support)*1	An app to use “Smartphone Anshin Remote Support”. “Smartphone Anshin Remote Support” is a service that gives you operational support by having the handset screen you are using checked by special staff at a call center remotely (P. 91 “Smartphone Anshin Remote Support”).
	しゃべってコンシェル (Shabette-Concier)*1	An app which gives you best answers by figuring out what you really want to know once you tell the handset what you want to do, what you want to know, etc.
	データ保管BOX (Data Storage Box)*1, 2	An app to use Data Storage Box. Data Storage Box is a service which enables you to upload necessary files and easily manage them in cloud computing.
	フォトコレクション (Photo Collection)*1, 2	A service to back up photos and videos of up to 5 GB to cloud computing for free and access them from smartphones, tablets, PCs, etc.
	メーカーアプリ (maker appli)*1	Connect to the SHARP website.

*1 This is provided in Japanese.

*2 When you use this app for the first time, you need to download it. Packet communication charges are incurred separately for downloading apps.

- Some of the apps installed by default can be uninstalled. You may be able to download uninstalled apps again from Play Store (P. 47 “Play Store”) or Disney Market (P. 47 “Disney Market”).

Quick Launcher

You can quickly use app usage history items, the apps/shortcuts set in Favorites or mini apps/widgets by switching tabs.

- Set Recent apps key to [Quick Launcher] in advance (P. 69 “Useful”).

History

You can activate apps by displaying the history of recently used apps.

- ▶ [History]
- Use a history item



1 App usage history item

- Touch it to activate the app.
- Flick it down to delete the history item.
- Touch and hold it to delete the history item and check information on the app.

2 Activation status

- Show whether the app is running in the background or not. Apps not running are displayed in gray.

3 Clear All

- Touch it to delete all app usage history items.

Some apps may not be displayed in the history.

Favorites

You can quickly activate apps just by touching icons if you set apps or shortcuts in Favorites.

- ▶ [Favorites]
- Select an app/a shortcut

Adding favorites

- ▶ [Favorites] ▶ [+]
- Select an app/a shortcut to add

Moving favorites

- ▶ [Favorites]
- Touch and hold an app/a shortcut ▶ drag it to the destination


Hiding favorites

- ▶ [Favorites]
- Touch and hold an app/a shortcut ▶ [Peel off]

Mini app/Widget

You can use mini apps and widgets which enable you to watch TV, videos, YouTube, etc. while using another app.

- ▶ [Mini apps]
- Select a mini app/widget
- Use the mini app/widget

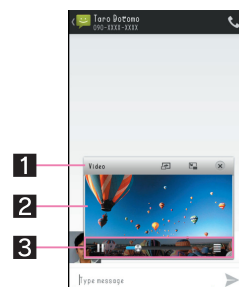

1 Title bar

- Drag it to the destination to move the mini app/widget.
 - The following operations are available with displayed keys.
 - To activate a usual app:
 - To minimize the mini app/return it to the original size: /[]
 - To display the menu:
 - To end the mini app/widget:
- * As for the mini TV, mini Video or mini Net Video, touch /[] to return it to the mini app.

2 Mini app/Widget display

- Touch it to display the title bar and controller when they are not displayed.
- Touch and hold it and drag it to another app such as the "Email" app while the app is running to copy characters, images, etc. and paste them.

3 Controller

- The following operations are available with displayed keys.
 - To change the size of the mini app/widget: Drag [↔]

Operations on mini TV

- To select a station with UP/DOWN: [CH ▶]/[◀ CH]
- To set the receiving method: [AUTO]/[ONE]/[FULL] ▶ select an item

Operations on mini Video/mini Net Video

- To pause/play the data: [||]/[▶]
- To display the data list screen: [≡]

- When you play videos with another app while a mini app is being used, videos may not be displayed properly.

■ Adding mini apps/widgets

- 1 [📱] ▶ [Mini apps] ▶ [+]
- 2 [Add mini application]/[Add widget]
- 3 Select a mini app/widget to add

■ Moving mini apps/widgets

- 1 [📱] ▶ [Mini apps]
- 2 Touch and hold a mini app/widget ▶ drag it to the destination

■ Managing mini apps/widgets

- 1 [📱] ▶ [Mini apps]
- 2 Touch and hold a mini app/widget
- 3 Select an item
 - **Peel off**: Hide the mini app or widget.
 - **Change name**: Change the name of the widget.


Recent Apps

You can activate apps by displaying the history of recently used apps. Also, you can use the user-aid function, apps such as KAKU Notepad and Childlock, and shortcuts.

- Set Recent apps key to [Recent applications] in advance (☞ P. 69 "Useful").

1 [📱]

2 Use a history item/an app

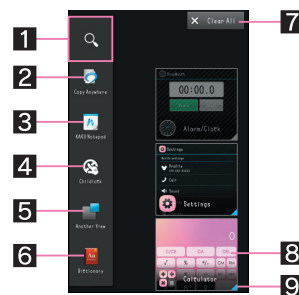

1 User-aid function

- Touch it to quickly activate the apps supporting the user-aid function.

2 Copy Anywhere

- Copy characters on a screen being displayed.

3 KAKU Notepad

- Create handwritten notes on a screen being displayed.

4 Childlock

- Set Childlock to disable operations available by touching or the navigation keys. Childlock is canceled when you press ⏻ or the display is turned off.

5 Another View

- Activate mini apps/widgets (☞ P. 30 "Mini app/Widget").

6 Dictionary

- Activate a dictionary.

7 Clear All

- Touch it to delete all app usage history items.

8 App usage history item

- Touch it to activate the app.
- Flick it to the left/right to delete the history item.
- Touch and hold it to delete the history item and check information on the app.

9 Activation status

- Show whether the app is running in the background or not. Apps not running are displayed in gray.

- Some apps may not be displayed in the history.

■ Managing apps/shortcuts

1 [📱]

2 Touch and hold an app/a shortcut ▶ [🔍]

3 Select an item

- **Select Application or Shortcut**: Set an app/a shortcut.
- **To default**: Reset the app/shortcut to the default status.
- **Peel off**: Hide the app/shortcut.

Magical Theme Changer

This is a widget for Welcome Sheet (Lock Screen) which enables you to switch wallpapers, icons, etc. collectively according to the work theme.

- When you switch themes, the wallpaper of the Welcome Sheet (Lock Screen) and home screen is set to [Disney Magical Moments]. However, when [Welcome Sheet wallpaper] is set to an item other than [Disney Magical Moments], the wallpaper of the Welcome Sheet (Lock Screen) changes only after Screen lock is disabled once and the Welcome Sheet (Lock Screen) is displayed next time.
- To display an alarm linked to a theme, add [Disney Magical Alarm], a widget.


1 In the Welcome Sheet (Lock Screen), flick the Info Area to the left/right to display [Magical Theme Changer]

- Alternatively, in the home screen, [APPS] ▶ [Settings] ▶ [Magical Theme Settings] to select a theme and switch to it.

2 Touch the work icon

3 Select a work icon

- Shake the handset to set a theme randomly.

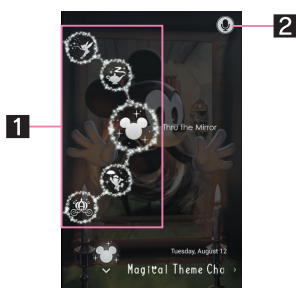

1 Work icons

2 Voice input

- Speak a work name, mascot name, etc.* to the microphone to set a theme.
- * Such as “Thru the Mirror”, “Aladdin”, “Mickey”, “Tinker Bell”, “Bibidi Babidi Boo” and “You Can Fly”

Home applications

Switch lock screens or home apps to use.

- The following home apps are registered on the handset by default.

■ docomo LIVE UX

A home app optimized for smartphones provided by DOCOMO.

■ docomo Simple UI

A home app which is designed to enable customers having been using i-mode mobile phones (feature phones) to use smartphones easily.

■ 3-Line Home

A home app which enables you to find intended apps quickly and operate the handset intuitively. Just by flicking your finger to the left/right, you can choose and use whichever sheet that fits your preferences from among Apps Sheet, Widgets Sheet or Shortcuts Sheet.

1 In the home screen, [APPS] ▶ [Settings] ▶ [Home applications]

2 Select an item


- **Batch change lock screen/ home application:** Switch lock screens and home apps.
 - When you select [Feel UX], the lock screen is set to Welcome Sheet (Lock Screen) and the home app is set to 3-Line Home.
- **Home applications:** Switch home apps.

h2>Home screen

h3>Home screen layout

The followings describe the layout of the home screen to be displayed when the home app is switched to docomo LIVE UX. In the home screen, you can activate apps by selecting apps or the quick menu or use widgets.

- If you install a new app, its icon is added to the home screen.

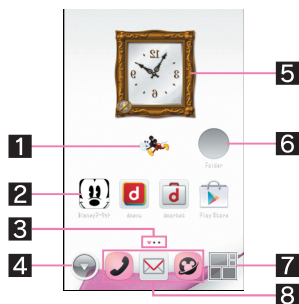

h4>1 Machi-Chara

h4>2 App

h4>3 Indicator

- Indicates the displayed page with [♥].

h4>4 Display app screen

- Display the app screen.

h4>5 Widget

- Use simple functions such as a calendar or pedometer.

h4>6 Folder

- When a folder is added, you can store apps into the folder.

h4>7 My magazine

- Use My magazine (☞ P. 34 “My magazine”).

h4>8 Quick menu

- Quickly activate an app from any page of the home screen.

- You can display the home screen list by pinching in on the home screen.

- Flick the home screen down to display the app screen.

- Flick the home screen up to use My magazine.

h3>Managing the home screen

h4>■ Setting the home screen

h4>1 Touch and hold the home screen

h4>2 Select an item

- **Show apps**: Display the Apps tab of the app screen.
- **Show widgets**: Display the Widgets tab of the app screen.
- **Create folder**: Add a folder.
- **Change Kisekae**: Change the kisekae. For details on kisekae ☞ P. 33 “Changing kisekae”
- **Change wallpaper**: Display the Wallpapers tab of the app screen. For details on wallpapers ☞ P. 33 “Changing wallpapers”
- **Machi-Chara display setting**: Make settings for Machi-Chara.
- **Home screens**: Display the home screen list.

h4>■ Setting quick menu

You can set apps etc. in the quick menu.

- You can set up to three apps etc. in the quick menu.

h4>1 In the home screen, touch and hold an app etc.

h4>2 Drag it to the quick menu

h4>■ Moving apps etc.

h4>1 In the home screen, touch and hold an app etc.

h4>2 Drag it to the destination

- If you drag it to the end of the page, the previous/next page is displayed and you can move it to the previous/next page.
- Drag an app onto another one to create a folder storing the two apps.

h4>■ Restoring apps to the app screen

h4>1 In the home screen, touch and hold an app

h4>2 Drag it to [Back to apps list]

h4>■ Deleting widgets etc.

h4>1 In the home screen, touch and hold a widget etc.

h4>2 Drag it to [Remove from Home screen]

- Apps are not uninstalled even if the folder storing the apps is deleted.

h4>■ Uninstalling apps

h4>1 In the home screen, touch and hold an app

h4>2 Drag it to [Uninstall] ▶ [OK]

h4>■ Renaming folders

h4>1 In the home screen, select a folder

h4>2 Touch the folder name

h4>3 Enter a folder name

h3>Changing kisekae

h4>1 In the home screen, [≡] ▶ [Kisekae]

h4>2 Select kisekae ▶ [Set]

h3>Changing wallpapers

h4>1 In the home screen, [🖼️] ▶ [Wallpapers]

h4>2 Select data ▶ [For all screens]/[Just for this screen] ▶ [OK]

- As for [Album] or [Contents manager], select the parts to cut and select [Save].
- As for [Live Wallpapers] or [Wallpaper gallery], select [Set wallpaper]/[Set to wallpaper].
- As for [Photos], select the parts to cut and select [Done].

h3>Managing pages

h4>■ Adding pages

- You can add up to seven pages.

h4>1 In the home screen, pinch in ▶ [+]

h4>■ Sorting pages

h4>1 In the home screen, pinch in ▶ touch and hold a thumbnail

h4>2 Drag it to the destination

h4>■ Deleting pages

h4>1 In the home screen, pinch in ▶ [✕]

App screen

App screen layout

Loaded apps that are not added to the home screen are displayed as icons in the app screen. Select an icon to activate an app. Also, you can add widgets and change wallpapers.

- If you uninstall an app, its icon is deleted.



- 1 App**
- 2 Indicator**
 - Indicates the displayed page with [●].
- 3 Home screen**
 - Part of the home screen remains to be displayed.
 - Flick it up to display the home screen.
- 4 Apps tab**
 - Display apps that are not added to the home screen.
- 5 Widgets tab**
 - Add widgets to the home screen.
- 6 Wallpapers tab**
 - Change wallpapers.
- 7 Recommends button**
 - Display apps recommended by DOCOMO.
- 8 Menu**
 - Display available functions (menu).

Managing apps

Moving apps to the home screen

- 1 In the home screen, [●] ▶ touch and hold an app**
- 2 Drag it to the home screen**

Moving apps

- 1 In the home screen, [●] ▶ touch and hold an app**
- 2 Drag it to the destination**

Uninstalling apps

- 1 In the home screen, [●] ▶ touch and hold an app**
- 2 Drag it to [Uninstall] ▶ [OK]**

Installing recommended apps

Apps recommended by DOCOMO are displayed when you touch the Recommends button of the app screen.

- 1 In the home screen, [●] ▶ [Recommends]**
 - When you use this for the first time, select [おすすめアプリを見る] (See recommended apps).
- 2 Select an app**
 - The screen for downloading the app is displayed.
 - If you touch [おすすめアプリをすべて見る] (See all the recommended apps), the browser is activated and recommended apps are displayed.

My magazine


This is a search engine to display articles of genres you choose. It helps you set search keywords by guessing your preferences from the history of articles you have read or from information on your profile to make the settings come to match your preferences.

Setting genres

- 1 In the home screen, [≡]**
 - When you activate this for the first time, the genre selection screen is displayed. You can set genres to display by selecting ones and touching [OK].
- 2 [≡] ▶ [My Magazine settings] ▶ [Display category setting]**
- 3 Select genres ▶ [OK]**

Viewing articles

- 1 In the home screen, [≡]**
 - An article list screen sorted by genre is displayed.
- 2 Select an article**
 - To change genres to display: Flick the article list screen to the left/right

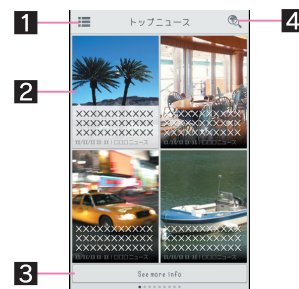

- 1 Settings**
 - Change genres to display or make settings for My magazine.
- 2 Article**
 - Display articles.
- 3 See more info**
 - Display articles which are not displayed in the article list screen as a list.
- 4 Search**

Information on apps

- 1 In the home screen, [●] ▶ [≡] ▶ [About]**

Call


You can use the phone and phonebook, and make settings for call, voice/answering memo, operations available when calls are received, etc.

Making a call

1 In the home screen, [APPS] ▶ [Phone] ▶ [Dial]

2 Enter a phone number

- Always enter the city code, even when it is a local number.
- You can set to notify/not to notify the other party of your phone number for each call by adding “186”/“184” to the head of the phone number.

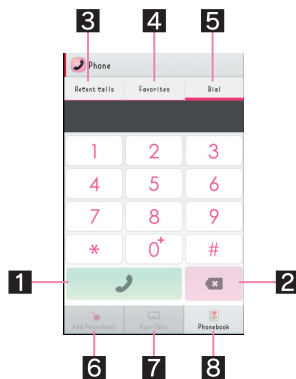

1 Call

- Make a call. Also, if there are outgoing call history items, touch it to enter the latest one when the phone number has not been entered.

2 Delete

- Delete an entered number.
- Touch and hold it to delete all the entered numbers.

3 Outgoing/Incoming call history

4 Favorites

- Display the contacts set as favorites.

5 Dial

- Display the dial screen.

6 Add to phonebook

7 Koe-no-Takuhaibin

- For details on Koe-no-Takuhaibin, refer to the DOCOMO website.

8 Phonebook

- Display the phonebook.

3 [↶]

4 [End] to end the call

- If you talk on the handset with your hair put between the earpiece and your ear, the proximity sensor may not work properly. The screen may be kept turned on and the call may be interrupted when the screen is touched accidentally.

Entering touch-tone signals

When using services in which you are required to enter numbers additionally during a call, such as inquiry about the balance in your bank account or ticket reservation, enter pause (,)/wait (;) after entering a phone number to make a call with an additional number added to the main phone number.

Adding 2 seconds pause

After making a call to a main phone number, the handset automatically pauses for 2 seconds and an additional number is sent.

1 In the home screen, [APPS] ▶ [Phone] ▶ [Dial]

2 Enter a phone number ▶ [≡] ▶ [Add 2-sec pause]

3 Enter a number to send ▶ [↶]

Adding wait

After making a call to a main phone number, the handset automatically waits and then a screen asking whether to send an additional number is displayed. Touch [Yes] to send an additional number.

1 In the home screen, [APPS] ▶ [Phone] ▶ [Dial]

2 Enter a phone number ▶ [≡] ▶ [Add wait]

3 Enter a number to send ▶ [↶]

4 [Yes] during the call

Emergency call

Emergency calls	Phone number
Police	110
Fire and ambulance	119
Marine emergency	118

- The handset supports “Emergency call location notification”. When you make a call to an emergency number such as 110, 119 and 118, the information of your location (location information) is automatically notified to the agency that has received the emergency call (e.g. the police station). Depending on your location and the reception status of the signal, the agency that has received the emergency call may not be able to confirm the exact location.
If you are not sending your caller ID by calling with “184” added or other means, your location information and phone number are not notified. However, if the agency that has received the emergency call considers your location information and phone number necessary for important purposes, such as life saving, the agency may retrieve them regardless of your settings. In addition, the area/timing to introduce “Emergency call location notification” depends on the state of preparation in each agency that receives emergency calls.
- In Japan, you cannot make a call to the emergency number (110, 119 or 118) when a docomo mini UIM card is not inserted, while the PIN code is locked, from the PUK (PIN Unlock Key) entry screen or from the password entry screen for decrypting the storage.
- When calling 110, 119 and 118 from your handset, the police or fire stations may return your call for verification purposes. State that you are calling from a mobile phone, and give your phone number and exact present location.
Remain stationary to ensure that the call is not disconnected while you are on the line, and keep the handset turned on to receive calls for approximately 10 minutes afterwards.
- Depending on the region, calls to the police or fire station of the local area may not be made.
- When you make a call to the emergency number (110, 119 or 118) while Reject call setting is set, items of Reject call setting are set to [OFF].

International call (WORLD CALL)

WORLD CALL is an international calling service available from **DOCOMO** devices in Japan.

- Contact the number listed in “General Inquiries” on the last page for details on **WORLD CALL**.
- To make an international call through a company other than **DOCOMO**, contact the respective companies for instructions.
- The caller ID may not be notified or displayed correctly depending on overseas network operators. In this case, making a call with incoming call history is not available.


[Calling Method]

- When calling to a land-line phone: 010 ▶ country code ▶ area code (city code) ▶ the other party's phone number ▶ [📞]
- When calling to a mobile phone: 010 ▶ country code ▶ the other party's mobile phone number ▶ [📞]
- As for the other parties' mobile phone numbers and area codes (city codes) that begin with “0”, omit the first “0” when entering (except some countries or regions such as Italy).
- Alternatively, enter “009130-010” as usual or “+” instead of “010”.

Receiving a call


1 When a call is received, the ringtone sounds and the incoming lamp flashes

Incoming lamp

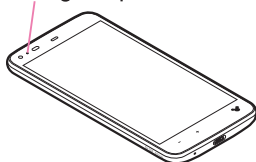

2 Receive the call

 - Operate after touching [Activate].



1 Reject call with SMS

- You can reject the incoming call and send a selected SMS message to the other party.

2 Reject

- You can reject the incoming call.

3 Accept

- You can answer the call.

3 [End] to end the call

Placing a call on hold

1 When a call is received, the ringtone sounds and the incoming lamp flashes

2 [📞] ▶ [On hold]

Answering by answering memo

1 When a call is received, the ringtone sounds and the incoming lamp flashes

2 [📞] ▶ [Absence Memo]


Playing an answering memo

1 In the home screen, [APPS] ▶ [Phone] ▶ [📞] ▶ [Call settings]

2 [Call/Ans Memo] ▶ [Answering Memo List] ▶ select an answering memo

Operation during a call

You can carry out operations such as using a hands-free call and adjusting the in-call volume according to the usage condition during a call.

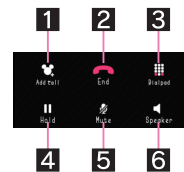

1 Add call*

- Place a current call on hold and make a call to another party.

2 End

- End a call.

3 Dialpad

- You can enter touch-tone signals.

4 Hold

- Hold/Unhold a current call.
- If you have added a call, [Switch] is displayed. Touch it to switch to whom you talk.

5 Mute

- Enable or disable mute setting on a current call.

6 Speaker

- You can talk with hands-free.
- When a Bluetooth device is connected, you can switch sound emitting parts.

* Subscription to Call Waiting Service is required.

- Note the followings to use hands-free.

- Speak approximately 20 to 40 cm away from the mouthpiece. When the surroundings are noisy, the sound may break up and the call may not be satisfactory.
- When calling outdoors, in a location where surroundings are noisy and where the sound echoes loudly, use an earphone/microphone.
- If the sound breaks up during a hands-free call, lower the in-call volume.

Adjusting the in-call volume

1 [⬆]/[⬇] during a call

2 [⬆]/[⬇]

- Alternatively, touch [⬆]/[⬇] to adjust the volume.

3 [Close]

Using Noise suppression

When Noise suppression is set to [ON], you can measure ambient noises using the out-microphone and communicate by making your voices sound clear during a call.

1 [⬆]/[⬇] during a call

2 [OFF]/[ON] of Noise suppression

3 [Close]

- Noise suppression processes voices to make conversations sound clear. Sound quality may vary depending on the surrounding noises and the tone of the voice.
- When using Noise suppression, make sure not to cover the hole of the out-microphone and move the mouthpiece as close to your mouth as possible for speaking.

■ Using Slow Talk

When Slow talk is set to [ON], the speed of the other party's voice is slowed down during a call and you can hear the voice well.

- 1 [↕]/[↔] during a call
- 2 [OFF]/[ON] of Slow talk
- 3 [Close]

■ Displaying phonebook

- 1 [≡] during a call ▶ [Address Book]

■ Voice memo

- 1 [≡] during a call ▶ [Sound Memo]
- 2 [Stop]
 - Operate after touching [Activate].



■ Checking your own phone number

- 1 [≡] during a call ▶ [Profile]

Outgoing/Incoming call history

The handset memory keeps a record of the 500 most recent outgoing and incoming call history items in total.

- 1 In the home screen, [APPS] ▶ [Phone] ▶ [Recent calls] ▶ [Outgoing]/[Incoming]
- 2 Select a history item

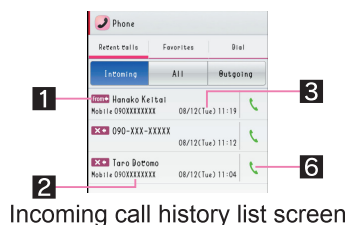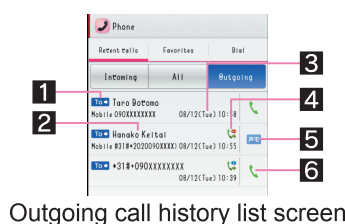

1 History icon

	Normal outgoing call
	Normal incoming call
	Missed call

- 2 The other party's name/phone number
- 3 Date and time of outgoing/incoming call
- 4 Status icon*

	Outgoing call with the notification
	Outgoing call without the notification

- 5 Koe-no-Takuhaibin icon
- 6 Outgoing call icon
 - Touch to make a call.

- * Appears if you add "186"/"184" to the head of the phone number or if, in the dial screen, enter the phone number and [≡] ▶ [Caller ID notification] ▶ [Notify]/[Not notify] to/not to notify the caller ID.

3 [Call]

- To compose and send SMS: [Send SMS] ▶ compose and send SMS
- To record with Koe-no-Takuhaibin: [Record Koe-no-Takuhaibin]
- To register to the phonebook: [Add Phonebook] ▶ select a destination ▶ set each item ▶ [Save]

Deleting outgoing/incoming call history

■ Deleting all history items

- 1 In the outgoing/incoming call history list screen, [≡] ▶ [Delete all] ▶ [OK]

■ Deleting one history item

- 1 In the outgoing/incoming call history list screen, touch and hold a history item ▶ [Delete from call log] ▶ [OK]

Voice/Answering memo

You can play or set the voice/answering memo. If you set the answering memo, the handset answers a call and records the caller's message when you cannot answer.

- 1 In the home screen, [APPS] ▶ [Phone] ▶ [≡] ▶ [Call settings] ▶ [Call/Ans Memo]

2 Select an item

- **Answering Memo List:** Play or delete answering memos etc.
- **Voice Memo List:** Play or delete voice memos etc.
- **Answering memo setting:** Make settings for operations of the answering memo.
- **Answering message setting:** Make settings for the reply message of the answering memo.
- **Answer time setting:** Make settings for how long before the answering memo answers a call.

- Up to ten answering memos and voice memos (approximately 60 seconds per memo) can be recorded respectively.
- If the number of saved answering memos exceeds the maximum number to be saved, answering memos which have been played are deleted from the oldest one. If no answering memo has been played, the handset does not answer calls by the answering memo.
- If the number of saved voice memos exceeds the maximum number to be saved, they are deleted from the oldest one.

Call settings/Other

You can make settings for call such as voice mail and call rejection.

- 1 In the home screen, [APPS] ▶ [Phone] ▶ [≡] ▶ [Call settings]

- Alternatively, in the home screen, [APPS] ▶ [Settings] ▶ [Call] to make settings for call.

2 Select an item

- **Network service:** For details P. 38 "Network service"
- **Quick silent:** Set whether to temporarily stop the ringtone by turning the handset back on receiving a call.

- **Call/Ans Memo**: For details P. 37 “Voice/Answering memo”
- **Roaming settings**: For details P. 88 “Roaming settings”
- **Advanced call settings**: For details P. 38 “Advanced call settings”
- **Call time**: For details P. 38 “Call time”
- **Sound & Vibration settings**: For details P. 38 “Sound & vibration settings”
- **Reject SMS**: Edit texts to use for Reject call with SMS.
- **Contact docomo**: For details P. 38 “Contacting docomo”
- **Open source licenses**: Display the open source licenses.
- **SIP Accounts**: Make settings for an account for Internet call.
- **Use Internet calling**: Set whether to use Internet call.

Network service

1 In the home screen, [APPS] ▶ [Phone] ▶ ▶ [Call settings] ▶ [Network service]

2 Select an item

- **Koe-no-Takuhaibin**: Record or play voice messages with simple operations.
- **Voice mail service**: A service to answer calls with a reply message and record callers' messages for you.
- **Call forwarding service**: A service to forward calls.
- **Call waiting**: A service to place the current call on hold and answer a new incoming call when receiving a call during another call.
- **Caller ID notification**: Display your phone number on the other party's phone when you make a call.
- **Nuisance call blocking service**: Register and reject phone numbers of “nuisance calls” such as prank calls.
- **Caller ID display request service**: Answer calls without notifications of phone number and play the guidance for asking notifications of the numbers.
- **Second call settings**: Deal with an incoming call during another call by a method determined in advance.
- **Call notification**: Notify you of incoming call information with SMS.
- **English guidance**: Play the guidance for setting each network service and the voice guidance stating that the handset is outside the service area etc. in English.
- **Remote operation settings**: Operate Voice Mail Service, Call Forwarding Service, etc. from a touch-tone land-line phone, pay phone, mobile phone provided by DOCOMO, etc.
- **Public mode (power OFF) settings**: Play a message stating that you are in a place that does not allow the use of mobile phone and automatically disconnect the call when receiving a call with the handset turned off.

Advanced call settings

1 In the home screen, [APPS] ▶ [Phone] ▶ ▶ [Call settings] ▶ [Advanced call settings]

2 Select an item

- **Sub address settings**: Set whether to use “*” included in a phone number as a separator for the sub address.
- **Prefix settings**: Make settings for the prefix number.
- **Reject call setting**: For details P. 38 “Reject call setting”

Reject call setting

1 In the home screen, [APPS] ▶ [Phone] ▶ ▶ [Call settings] ▶ [Advanced call settings] ▶ [Reject call setting]

2 Enter the passcode ▶ [OK]

3 Select an item

- **Reject specified numbers call**: Set to reject incoming calls only from the specified callers.
 - To edit a specified number: ▶ [Edit] ▶ edit the phone number
- **Reject unregistered call**: Set to reject incoming calls from callers not registered in the phonebook.
- **Reject private number call**: Set to reject incoming calls from callers not notifying their phone numbers.
- **Reject call from pay phone**: Set to reject incoming calls from pay phones.
- **Reject unknown call**: Set to reject incoming calls from callers whose phone numbers cannot be notified.

[Reject unregistered call]

- Even if you set Reject unregistered call, calls from contacts for whom the secrecy setting is set are received. The name registered in the phonebook does not appear and only the phone number appears.

Call time

1 In the home screen, [APPS] ▶ [Phone] ▶ ▶ [Call settings] ▶ [Call time]

2 Select an item

- **Cumulated call time**: Display the cumulated call time.
- **Reset cumulated call time**: Reset the cumulated call time.
- **Auto-reset**: Set whether to automatically reset the cumulated call time on the first day of every month.

Sound & vibration settings

1 In the home screen, [APPS] ▶ [Phone] ▶ ▶ [Call settings] ▶ [Sound & Vibration settings]

2 Select an item

- **Phone ringtone**: Set the ringtone.
- **Vibrate on ring**: Set whether to activate the vibrator when receiving a call.
- **Dialpad touch tones**: Set whether or not to enable dialing sounds.

Contacting docomo

1 In the home screen, [APPS] ▶ [Phone] ▶ ▶ [Call settings] ▶ [Contact docomo]

2 Select an item

- **ドコモ故障問合せ** (Inquiries to DOCOMO about malfunctions): Make a call for inquiries about malfunctions.
- **ドコモ総合案内・受付** (General inquiries to DOCOMO): Make a call for general inquiries.
- **海外紛失・盗難等** (Inquiries about loss, theft, etc. while overseas): Make a call for inquiries about loss, theft, etc. from overseas.
- **海外故障** (Inquiries about malfunctions while overseas): Make a call for inquiries about malfunctions from overseas.

Setting start-up screen

You can set the screen displayed when you operate as follows. In the home screen, [APPS] ▶ [Phone].

1 In the home screen, [APPS] ▶ [Phone]
2 [Recent calls]/[Favorites]/[Dial]
3 ▶ [Set start-up screen]

- The start-up screen may not follow the setting depending on the home app in use.

Phonebook

You can manage contacts and check My profile.


Adding contacts to phonebook

1 In the home screen, [APPS] ▶ [docomo phonebook] ▶ [Contacts] ▶ [Register]

- When the confirmation screen for using cloud computing is displayed, check the content and select [Use]/[Not use].
- If there are multiple accounts, the screen for selecting to which account to register is displayed.

2 Set each item

- Information which can be registered may differ depending on the account type.

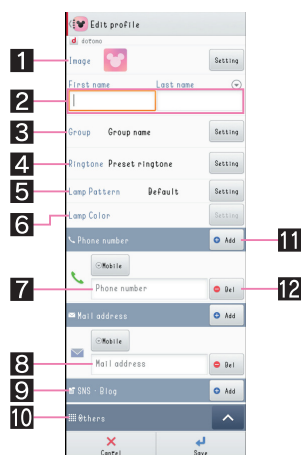

1 Image

- Register an image to display when making and receiving a call or checking the contact.

2 First name, Last name

3 Group

4 Ringtone

5 Lamp type

6 Lamp color

7 Phone number

8 Mail address

9 SNS・Blog

10 Others

- Register information such as the address and organization.

11 Add

- Add the phone number/mail address etc. to register.

12 Delete

- Delete the phone number/mail address etc.


3 [Save]

Checking/Using phonebook

You can retrieve registered contacts from the phonebook to make calls and send mails.

1 In the home screen, [APPS] ▶ [docomo phonebook] ▶ [Contacts]

2 Select a name

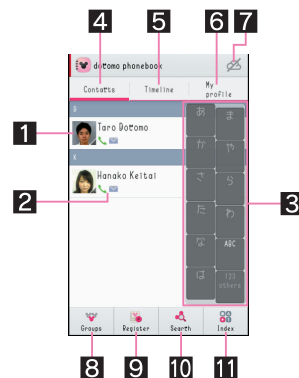

1 Image

- Touch to select and use an app supporting the registered contents of the contact.

2 Registered contents

- Registered contents are displayed as icons.

3 Index bar

- Move to the touched heading.

4 Contacts

5 Timeline

- Display tweets, messages, etc. from SNSs and blogs.
- Using cloud computing and making settings for the My SNS function are necessary.

6 My profile

- Display your phone number registered on the docomo mini UIM card.

7 Use cloud computing

8 Groups


9 Register

10 Search

11 Index

- Display the index bar.

3 Check/Use registered information

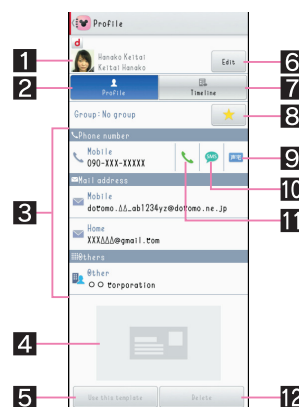

1 Image

2 Profile

- Display the registered contents.

3 Registered contents

- Check or use the registered contents.

4 Business card

- Displayed when you register a business card received by exchanging business cards.

5 Use this template

- Create your business card by using the registered business card as a template.

6 Edit

7 Timeline

8 Favorites

- Set the contact as a favorite.
- Check the contacts set as favorites in [Favorites] of Groups.
- It is not available on contacts created with some accounts.

9 Koe-no-Takuhaibin

- For details on Koe-no-Takuhaibin, refer to the DOCOMO website.

10 SMS

11 Call

12 Delete

- Delete the registered business card.

Selecting accounts to display

1 In the home screen, [APPS] ▶ [docomo phonebook] ▶ [Contacts]

2 [≡] ▶ [Settings] ▶ [Accounts to display]

3 Select an item

- To customize an account to display: [Customize...] ▶ select accounts ▶ select groups ▶ [OK]

Deleting phonebook

Deleting all items

1 In the home screen, [APPS] ▶ [docomo phonebook] ▶ [Contacts]

2 [≡] ▶ [Delete] ▶ [Select all] ▶ [Delete] ▶ [OK]

Deleting one item

1 In the home screen, [APPS] ▶ [docomo phonebook] ▶ [Contacts]

2 Select a name ▶ [≡] ▶ [Delete] ▶ [OK]

Editing phonebook

1 In the home screen, [APPS] ▶ [docomo phonebook] ▶ [Contacts]

2 Select a name ▶ [Edit]


3 Set each item ▶ [Save]

- For details on each item that can be set ☎ P. 39 “Adding contacts to phonebook”

Using groups

1 In the home screen, [APPS] ▶ [docomo phonebook] ▶ [Contacts] ▶ [Groups]

2 Use groups

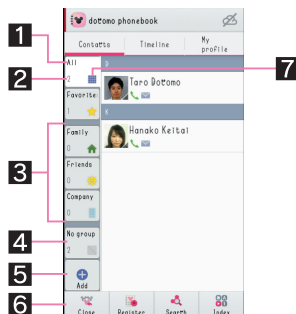

1 Group name

2 Number of contacts registered in the group

3 Groups

4 No group

5 Add

- Add a group.

6 Close

- Hide groups.

7 Group icon

Grouping/Ungrouping contacts

1 In the home screen, [APPS] ▶ [docomo phonebook] ▶ [Contacts] ▶ [Groups]

2 Touch and hold a name ▶ drag it to a group

- Drag it to the group into which it has already been registered to ungroup it.


- The group function is available on contacts created with a docomo/Google account.

My profile

You can display your phone number registered on the docomo mini UIM card. You can also register your name, mail addresses, etc.

1 In the home screen, [APPS] ▶ [docomo phonebook] ▶ [My profile]

2 Check/Use the profile

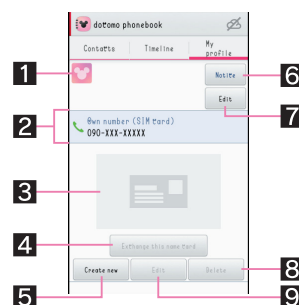

1 Image

2 Registered contents

3 Business card

- Display the created business card.

4 Exchange this name card

- Exchange the registered business cards via a network.

5 Create new

- Create a business card.
- Download the “Name card creator” app to create a business card. Follow the instructions on the screen and operate after this step.

6 Notice

- Make settings for Friends notice.
- Available only when you are using cloud computing.

7 Edit

8 Delete business card

9 Edit business card

- Edit the business card with the “Name card creator” app.

Editing My profile

1 In the home screen, [APPS] ▶ [docomo phonebook] ▶ [My profile] ▶ [Edit]

2 Set each item ▶ [Save]

Backing up/Restoring phonebook

You can back up/restore the phonebook by using docomo backup.

- For details on docomo backup ☎ P. 66 “Backing up to/Restoring from a microSD Card”

Mail/Browser

You can send and receive messages using docomo mail, SMS, Gmail, etc., and display websites using the browser.

docomo mail

You can send and receive mails using mail address of DOCOMO (@docomo.ne.jp). Pictograms and Deco-mail are available. Automatic reception is also supported. Also, mails can be easily transferred when you have lost the handset or changed models since sent and received mails are saved on the mail server of DOCOMO. Moreover, you can use the mailing function on any devices such as PCs and tablets if you use a docomo ID.

- For details on docomo mail, refer to the DOCOMO website.

1 In the home screen, [APPS] ▶ [docomo mail]

- Follow the instructions on the screen and operate after this step.

SMS

You can send and receive text messages with mobile phone numbers serving as destinations.

※ For details on the number of characters which can be sent and received etc., refer to “Short Message Service (SMS)” on the DOCOMO website.

- You can also exchange messages with users of overseas network operators. Refer to “Mobile Phone User’s Guide [International Services]” or the DOCOMO International Services website for information on countries where this service is available and available overseas network operators.

1 In the home screen, [APPS] ▶ [Messaging]

2 [≡] ▶ enter the destination and message ▶ [➤]


- If destinations are devices of overseas network operators, enter “+”, the country code and the recipient’s mobile phone number. If the phone number begins with “0”, omit the first “0”. Alternatively, enter “010”, the country code and the phone number.
- Half-width katakana and special symbols in SMS messages may not appear correctly for recipient.
- SMS cannot be sent when “186” or “184” is added.

Displaying message

1 In the home screen, [APPS] ▶ [Messaging]

2 Select a thread

- Messages are grouped into a thread by destination/sender and displayed.

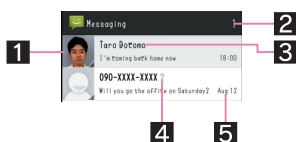

1 Image

- It is displayed if an image of the other party is registered in the phonebook. Touch to select and use an app supporting the registered contents of the phonebook. If the sender is not registered in the phonebook, you can register the person in the phonebook after touching it.


2 Number of unread messages

3 Destination/Sender

4 Number of messages in thread

5 Date and time of the message exchange

3 Check the message

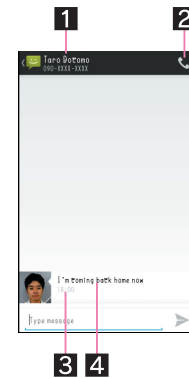

1 Destination/Sender

2 Phone call

3 Date and time of the message exchange

4 Message

Replying message

1 In the home screen, [APPS] ▶ [Messaging]

2 Select a thread

3 Enter the message ▶ [➤]

Forwarding message

1 In the home screen, [APPS] ▶ [Messaging]

2 Select a thread

3 Touch and hold a message ▶ [Forward] ▶ enter the destination and message ▶ [➤]

Deleting message

1 In the home screen, [APPS] ▶ [Messaging]

2 Select a thread

3 Touch and hold a message ▶ [Delete] ▶ [Delete]

Deleting thread

1 In the home screen, [APPS] ▶ [Messaging]

- To delete all threads: [≡] ▶ [Delete all threads] ▶ [Delete]

2 Touch and hold a thread ▶ [Delete] ▶ [Delete]

Setting Messaging

1 In the home screen, [APPS] ▶ [Messaging]

2 [≡] ▶ [Settings]

3 Select an item

- **Delete old messages:** When the number of saved messages reaches its limit, messages are automatically deleted from the oldest one.
- **Text message limit:** Set the number of messages to be saved by thread.
- **Delivery reports:** Notify you that sent messages have been received every time a message is received.
- **Manage SIM card messages:** Manage messages saved on the docomo mini UIM card.
- **Notifications:** Notify you that messages have been received in the status bar.

- **Sound**: Set the ringtone to be rung when a message is received.
- **Vibrate**: Set the vibrator to be activated when a message is received.

[Delivery reports]

- When you send a message to mobile phones of other carriers, the notification for confirming that it has been received may not be sent to you.

Email

You can send and receive mails by setting up a mail account provided by a service provider.


- Set up an account in advance (P. 24 “Setting up mail account”).

1 In the home screen, [APPS] ▶ [Email]

2 [✉]

3 Compose a mail

- To attach a file: [📎] ▶ [Attach file] ▶ select a file

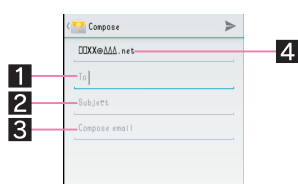

1 Destination

- When you enter part of a mail address or a name registered in the phonebook, destination candidates are displayed.

2 Subject

3 Message

4 Account

4 [➤]

- Some receiving side models may not be able to receive the subject completely.
- Mails sent from a Gmail account are treated as ones from a PC. When receiving side models set PC-mail rejection, mails cannot be sent.
- Mails that could not be sent for any reason will be saved in the Unsent folder as unsent mails.
- Depending on the signal status etc., characters may not appear correctly on the screen of the other party's device.

Attaching file


- Files of up to approximately 5 MB can be attached. There are no limits to the number of files to be attached.
- Depending on the receiving side device, files may not be received or correctly displayed/played. Also, the quality of videos may deteriorate or videos may be converted to continuous still pictures.

Displaying mail

- The screen may appear different depending on the account to use.

1 In the home screen, [APPS] ▶ [Email]

2 Select a mail

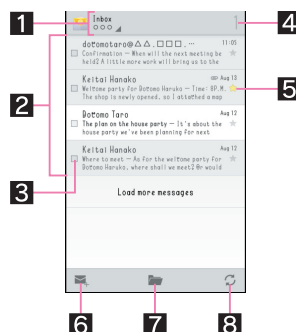

1 Folder name/Account name being displayed

- Touch to switch folders and accounts.

2 Mails

- The background color of a read mail turns gray.

3 Check box

- Set the checkmarked mails to be deleted/unread/read/starred collectively.

4 Number of unread mails

5 Star icon


- Use it as a mark indicating that the mail is special or supposed to be dealt with later.
- You can check starred mails in the Starred folder.

6 Newly compose mail

7 Display all folders

8 Refresh

3 Check the mail

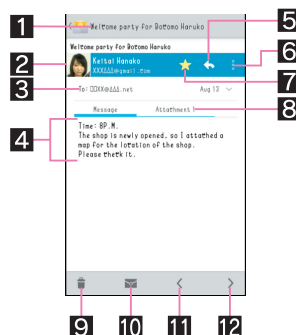

1 Subject

2 Sender

- If the sender is registered in the phonebook, available apps supporting the registered contents of the phonebook are displayed after touching the image. If the sender is not registered in the phonebook, you can register the person in the phonebook after touching the image.

3 Destination/Date and time of reception

- Touch to display the details.

4 Message

5 Reply

6 Reply all/Forward

7 Star icon

- Use it as a mark indicating that the mail is special or supposed to be dealt with later.
- You can check starred mails in the Starred folder.

8 Attached file

- Touch to display the attached file.

- 9 Delete
- 10 Unread
- 11 Display new mail
- 12 Display old mail

Replying/Forwarding mail


1 In the home screen, [APPS] ▶ [Email]

2 Select a mail

3 [↩]

- To reply to all: [⋮] ▶ [Reply all]
- To forward: [⋮] ▶ [Forward]

4 Compose a mail

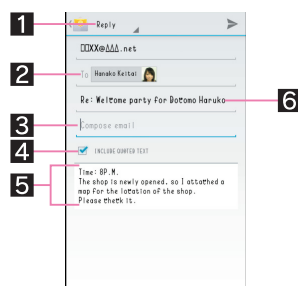

1 Reply type

- Touch to switch Reply/Reply all/Forward.

2 Destination

3 Message

4 Include quoted text

- Touch to/not to enter the mail of the sender in the message.

5 Mail of sender

6 Subject

5 [➤]

Deleting mail

1 In the home screen, [APPS] ▶ [Email]

- To delete selected mails: Touch check boxes ▶ [🗑]

2 Select a mail

3 [🗑]

Setting Email

1 In the home screen, [APPS] ▶ [Email] ▶ [⋮] ▶ [Settings]

2 Select an item

- **General:** Make settings for the whole Email.
- Select an account to make settings for the details on each account such as Signature and Email notifications.
- Touch [ADD ACCOUNT] to add an account.

Gmail

Gmail is a mail service provided by Google.


- Set up a Google account in advance (☞ P. 24 “Setting up Google account etc.”).

1 In the home screen, [APPS] ▶ [Gmail]

2 [✉]

3 Compose a mail

- To attach a file: [≡] ▶ [Attach picture]/[Attach file] ▶ select a file

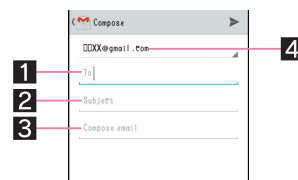

1 Destination

- When you enter part of a mail address or a name registered in the phonebook, destination candidates are displayed.

2 Subject

3 Message

4 Account

- If you set up multiple accounts, you can switch accounts.


4 [➤]

Displaying mail

1 In the home screen, [APPS] ▶ [Gmail]

2 Select a thread

- In Gmail, mails are grouped into threads by reply and displayed. If new mails are replied ones of an existing mail, they are grouped into the same thread. A new thread is created for newly composed mails or mails whose subjects have been changed.

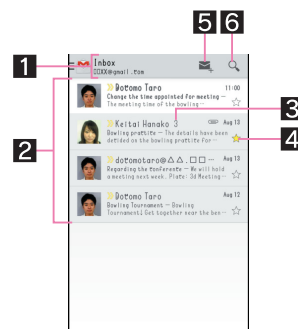

1 Label name/Account name being displayed

- Touch to switch displaying types and accounts.

2 Threads

- The background color of a thread turns gray when all mails in it are read.
- Touch images to checkmark the threads and you can set them to be archived/deleted/unread/read etc. collectively.

3 Number of mails in thread


4 Star icon

- Use it as a mark indicating that the mail is special or supposed to be dealt with later.
- You can check starred mails in the Starred folder.

5 Newly compose mail

6 Mail search


3 Check the mail

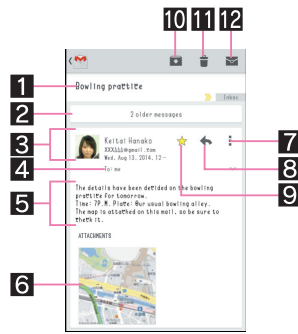

- 1 Subject**
- 2 Older messages**
 - Touch to display mails you have sent and received previously.
- 3 Sender/Date and time of reception**
 - Touch to switch detailed display/simplified display.
 - If the sender is registered in the phonebook, available apps supporting the registered contents of the phonebook are displayed after touching the image.
- 4 Destination**
 - Touch to display the details.
- 5 Message**
- 6 Attached file**
- 7 Reply all/Forward**
- 8 Reply**
- 9 Star icon**
 - Use it as a mark indicating that the mail is special or supposed to be dealt with later.
 - You can check starred mails in the Starred folder.
- 10 Archive**
- 11 Delete**
- 12 Unread**

Replying/Forwarding mail

- 1 In the home screen, [APPS] ▶ [Gmail]**
- 2 Select a thread**
- 3 [↩]**
 - To reply to all: [⋮] ▶ [Reply all]
 - To forward: [⋮] ▶ [Forward]
- 4 Compose a mail**

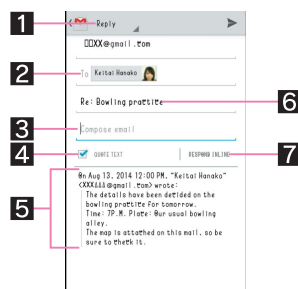

- 1 Reply type**
 - Touch to switch Reply/Reply all/Forward.
- 2 Destination**
- 3 Message**
- 4 Quote text**
 - Touch to display/hide the mail of the sender.
 - You cannot operate it when forwarding mails.

- 5 Mail of sender**
- 6 Subject**
- 7 Respond inline**

- Enter the mail of the sender in the message.

5 [➤]

Deleting thread

- 1 In the home screen, [APPS] ▶ [Gmail]**
 - To delete selected threads: Touch the images of threads ▶ [🗑]
- 2 Select a thread**
- 3 [🗑]**

Setting Gmail

- 1 In the home screen, [APPS] ▶ [Gmail] ▶ [≡] ▶ [Settings]**
- 2 Select an item**
 - **General settings:** Make settings for the whole Gmail.
 - **About Gmail:** Display the Gmail version.
 - Select an account to make settings for the details on each account such as Signature and Notifications.

Early Warning “Area Mail”

Area Mail is an app to receive Early Warning “Area Mail” and check the received Area Mail.

- Area Mail is a service which enables you to receive earthquake early warnings etc. sent from the Japan Meteorological Agency.
- When an Area Mail is sent to you, it is automatically received and the contents of it are displayed whether or not the display is turned on or whether or not Screen lock is set.
- Area Mail may not be received or automatically displayed depending on the condition of the handset.
 - In the following cases, you cannot receive Area Mail.
 - During a call
 - While the power is turned off
 - While outside the service area
 - During international roaming
 - In Airplane mode
 - In the following cases, you may not be able to receive Area Mail.
 - During packet communication
 - During Wi-Fi tethering
 - During USB tethering
 - During software update
 - During Android version upgrade
 - In the following cases, you can receive Area Mail but it may not be automatically displayed.
 - During packet communication
 - During software update
 - During Android version upgrade
- Area Mail is a free service that does not require a subscription.

- 1 Automatically receive an Area Mail**
- 2 When the Area Mail is received, the special buzzer or special ringtone sounds and its message is displayed**

■ Checking received Area Mail later

1 Drag the status bar down ▶ select the received Area Mail

- Alternatively, in the home screen, [APPS] ▶ [Disaster kit] ▶ [Early Warning “Area Mail”] to check received Area Mail.
- When the confirmation screen for use appears, check the content and select [Agree].

- You can receive Area Mail without subscription to sp-mode.
- You cannot receive the Area Mail that failed to be received again.
- You can save up to 50 Area Mails.
- If the number of Area Mails saved on the handset memory exceeds the maximum number to be saved, they are deleted from the oldest one.

Deleting Early Warning “Area Mail”

1 In the home screen, [APPS] ▶ [Disaster kit] ▶ [Early Warning “Area Mail”]

2 Select a mail

- To select all Area Mails: [Select all]

3 [Delete] ▶ [OK]

Setting Early Warning “Area Mail”

Whether to receive Area Mail, operations for when receiving Area Mail, etc. can be set.

1 In the home screen, [APPS] ▶ [Disaster kit] ▶ [Early Warning “Area Mail”]

2 [≡] ▶ [Settings] ▶ select an item

- **Receive setting**: Set whether to receive Area Mail.
- **Beep tone**: Make settings for the ring duration and operations in the manner mode.
- **Check screen image and beep tone**: Confirm the reception screen and the ringtone for earthquake early warning, tsunami warning, and disaster and evacuation information.
- **Other settings**: Set Area Mail to use as well as earthquake early warning, tsunami warning, and disaster and evacuation information.

- Settings of the earthquake early warning buzzer, ringtone dedicated to tsunami warning, and disaster and evacuation information, ringtone volume and vibrator cannot be changed.

Browser

You can display websites via packet communication or Wi-Fi function.

Displaying websites

 
1 In the home screen, [APPS] ▶ [Browser]

- Some websites may not appear properly.

■ Searching websites

1 Touch the URL entry field

- If the URL entry field is hidden, slide the browser screen down.



2 Enter a keyword

- Keywords that include the entered characters are displayed as a list.

3 Select a keyword

- Alternatively, enter the entire keyword and [Go] to search websites.

■ Opening new tabs

1 In the browser screen, [≡] ▶ [⊕]

■ Opening incognito tabs

- When you display websites on an incognito tab, [🔒] appears at the top left of the screen.

1 In the browser screen, [≡] ▶ [🔒] ▶ [New incognito tab]

2 Touch the URL entry field ▶ enter a keyword ▶ [Go]

- To close incognito tabs: In the browser screen, [≡] ▶ [✕]

- The history of websites opened on an incognito tab is not saved. If you close the incognito tab, the information such as Cookie are also deleted. Downloaded files and bookmarked websites can be saved on an incognito tab.

■ Switching tabs

1 In the browser screen, [≡]

2 Select a tab


■ Closing tabs

1 In the browser screen, [≡] ▶ [✕]

■ Searching characters in the page

1 In the browser screen, [🔍] ▶ [Find on page]

2 Search

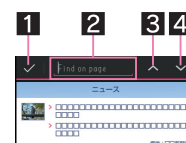

1 End search

2 Keyword entry field

- Enter the keyword to search with.

3 Previous

4 Next

■ Copying characters

- 1** In the browser screen, [≡] ▶ [Copy text]
- 2** Drag your finger from the start position to the end position
 - To change the copy range: Drag [↔]/[↔]
- 3** [📋]

■ Convenient functions

You can display a link with a new tab or download data such as images.

- 1** In the browser screen, touch and hold a link/an image
- 2** Select a function to use

■ Reloading browser

- 1** In the browser screen, [≡] ▶ [Reload]

■ Ending browser

- 1** In the browser screen, [≡] ▶ [End browser]

Setting Browser

- 1** In the browser screen, [≡] ▶ [Settings]
- 2** Select an item
 - **General settings**: Make settings for the functions related to the whole browser.
 - **Privacy & security**: Make settings for the privacy or security such as cache and Cookie.
 - **Accessibility**: Make settings for the display such as font size and zoom.
 - **Advanced**: Make settings for the details on the browser.
 - **Bandwidth management**: Make settings for readings of websites.
 - **Quick operation • Labs**: Make settings for Quick toolbox, Quick controls and Full screen display.

Using bookmark, history and saved page

■ Saving bookmarks

- 1** In the browser screen, [≡] ▶ [Add bookmark]
- 2** [OK]

■ Displaying websites from bookmarks

- 1** In the browser screen, [≡] ▶ [Bookmark list]
- 2** Select a bookmark

■ Displaying websites from history

- 1** In the browser screen, [≡] ▶ [Bookmark list] ▶ [HISTORY]
- 2** Select a history item

■ Saving pages

- 1** In the browser screen, [≡] ▶ [Save for offline reading]

■ Displaying saved pages

- 1** In the browser screen, [≡] ▶ [Bookmark list] ▶ [SAVED PAGES]
- 2** Select a saved page

Apps

dmenu

In dmenu, you can easily access websites or convenient apps recommended by DOCOMO.

1 In the home screen, [APPS] ▶ [dmenu]

- The browser is activated and dmenu is displayed.

- Internet connection via packet communication (LTE/3G/GPRS) or Wi-Fi is required to use dmenu.
- Packet communication charge is incurred separately for connecting to dmenu and downloading apps introduced on dmenu. Some downloaded apps automatically perform packet communication.
- Apps introduced on dmenu include charged ones.

dmarket

In dmarket, you can get enjoyable and convenient contents suitable for you.

1 In the home screen, [APPS] ▶ [dmarket]

- For details on dmarket, refer to the DOCOMO website.

Disney Market

In Disney Market, you can obtain various contents such as “Disney apps” and Deco-mail pictogram for free and view information recommended by Disney.

- When you update Disney Market, enable [Unknown sources] in advance (☞ P. 71 “Lock & security”).

1 In the home screen, [APPS] ▶ [Disneyマーケット] (Disney Market)

- Follow the instructions on the screen and operate after this step.

- Contents provided in Disney Market are service provided by The Walt Disney Company (Japan) Ltd.
- Subscription to sp-mode is required to use Disney Market.
- Packet communication charges are incurred separately.
- If you subscribe charged mobile services on a monthly basis such as Disney official mobile website or smartphone contents provided by Disney, you are charged separately unless you cancel the subscription by yourself. To cancel, in the home screen, [APPS] ▶ [Disneyマーケット] (Disney Market) ▶ [menu] ▶ [マイページ] (My page) ▶ [マイメニュー] (My menu) ▶ [退会] (Cancel) and follow the instructions on the screen and operate.
- Charges may be incurred for using part of options for games in some apps.
- Subscription to the membership of Disney Market is required to use apps provided by Disney (including pre-installed apps).

■ Inquiries about contents

- Disney Internet Service Customer Center: 0570-00-1937
- Business hours: 10:00 to 17:00 (Monday through Friday excluding national holidays, new years holidays)
- ※ Contact 045-522-1098 from a PHS/part of IP phones/outside of Japan or refer to (<http://disney.jp/dmd/faq/>) (in Japanese only).

Play Store

By using Google Play, you can download and install useful apps or fun games to the handset.

- Set up a Google account in advance (☞ P. 24 “Setting up Google account etc.”).

1 In the home screen, [APPS] ▶ [Play Store]

- To display help: [≡] ▶ [Help]

- Be sure to check the security of app, then install it at your own risk. The handset may be infected with a virus, data may be damaged, etc.
- Note that DOCOMO shall not be liable for malfunctions caused by the app etc. you installed.
- Note that DOCOMO shall not be liable for any disadvantage brought to you or any third party due to the app etc. you installed.

Purchasing apps

1 In the Google Play screen, select an app to purchase

2 Touch the price

- Follow the instructions on the screen and operate after this step.
- When the app is free: [INSTALL]
- If you make a purchase for the first time, select a payment method. You may need to sign in to your Google Wallet account depending on the payment method.
- You can ask for a refund within a specified time after purchasing an app. The app is deleted and you are not charged. In addition, note that a refund request is available for each app only once. If you requested a refund for a purchased app in the past and purchase the same app again, a second refund request is not available. In the Google Play screen, [≡] ▶ [Help] for details on the payment method when purchasing an app, the terms on refund requests, etc.

- Once you accept installation of an app, you are responsible for the results of using the app. Be very cautious about installation of apps that access many functions or a significant amount of data.
- Some downloaded apps automatically perform packet communication. Note that the packet communication charges may be higher.
- You need to pay for an app only once. Re-downloading apps which you previously uninstalled after first downloading will not be charged.
- If you have multiple Android devices that use the same Google account, you can download a purchased app to all of them at no additional cost.
- DOCOMO holds no responsibility for responding to purchase apps and get a refund from Google Play.

■ Uninstalling apps

1 In the Google Play screen, [≡] ▶ [My apps]

2 Select an app to uninstall ▶ [UNINSTALL] ▶ [OK]

Osaifu-Keitai

Osaifu-Keitai is a function for using “Osaifu-Keitai compatible services” which enable you to pay, use the handset as coupons, etc. by simply holding it over scanning devices at stores etc. and using “Kazashite-Link compatible services” which enable you to access information by holding the handset over home electric appliances, smart posters, etc. You can save electronic money, points, etc. on the IC card or docomo mini UIM card.

In addition, you can deposit electronic money, check the balance and the remaining points, etc. while you can lock Osaifu-Keitai functions in case of theft or loss.

For details on Osaifu-Keitai, refer to the DOCOMO website.

※ To use Osaifu-Keitai compatible services, settings are necessary on a website or an app.

Using Osaifu-Keitai compatible handset

- The handset malfunctions may cause data on the IC card*¹ and data on the docomo mini UIM card*² to be lost or changed (Note that as a rule, you will be asked to delete data when leaving your handset for repairs etc., since we cannot keep your handset with such data still remaining in it). For the service such as a reissue, restoration, temporary keeping or transference of the data, contact a provider of the Osaifu-Keitai compatible service you use. Be sure to use the Osaifu-Keitai compatible service including a backup service for important data.
- DOCOMO shall not be liable for any loss or change of data on the IC card and data on the docomo mini UIM card or other damages related to Osaifu-Keitai compatible services caused by any reason such as malfunctions and model changes.
- When the handset is stolen or lost, immediately contact a provider of the Osaifu-Keitai compatible service you use for handling methods.

*1 The data saved on the built-in IC card of the Osaifu-Keitai compatible handset

*2 The data saved on the docomo mini UIM card

Using “Osaifu-Keitai compatible services”

- To use Osaifu-Keitai compatible services, download the Osaifu-Keitai compatible app from Osaifu-Keitai compatible websites and make the setting. Some services do not require the download of the Osaifu-Keitai compatible app.

1 In the home screen, [APPS] ▶ [Osaifu-Keitai]


- If the initial settings are not completed, the initial settings screen appears. Follow the instructions on the screen and operate.

2 Select a service

- Make settings on the website of the service or after downloading the app compatible with the service.

3 Hold the mark of the handset over the scanning device

- The handset starts communication with the scanning device.

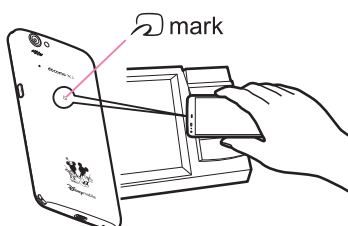

- You cannot use Osaifu-Keitai compatible services in the following situations. However, you can pay by holding the handset over a scanning device.
 - In Airplane mode
 - When you are charging the handset, connecting Micro USB Cable 01 (sold separately) to it or connecting an earphone/microphone to it while the docomo mini UIM card is not inserted/When the handset has never received radio wave
- Osaifu-Keitai compatible services are available even if you cannot unlock the PIN code of the docomo mini UIM card or the PIN code is locked.
- If you have not subscribed to sp-mode, you may not be able to use some functions of an Osaifu-Keitai compatible service.

Using “Kazashite-Link compatible services”

- Enable [Reader/Writer, P2P] in advance ( P. 49 “NFC/Osaifu-Keitai settings”).

1 Hold the mark of the handset over a device into which an NFC module is built, smart poster, etc.

Precautions about holding over the other device

- Pay attention to the following points when holding the  mark over the other device such as a scanning device or device into which an NFC module is built.
 - Do not let the handset strongly clashed with the other device but slowly bring the handset close to the other device when holding the  mark over it.
 - Hold the  mark over the center of the other device and in parallel with it. If the other device does not recognize the built-in IC card even when you do so, slightly move the handset away from the other device or move the handset around.
 - The other device may not recognize the built-in IC card if there are metallic objects between the  mark and the other device. Remove the handset from its cover or case if the other device does not recognize the built-in IC card, since equipping the handset with it may influence the communication performance.

NFC/Osaifu-Keitai lock

You can restrict the use of the functions and services of Osaifu-Keitai by setting NFC/Osaifu-Keitai lock.

- NFC/Osaifu-Keitai lock differs from Screen lock of the handset and Set up SIM card lock.

1 In the home screen, [APPS] ▶ [Settings] ▶ [More...] ▶ [NFC/Osaifu-Keitai settings] ▶ [NFC/Osaifu-Keitai lock]

- Alternatively, in the home screen, [APPS] ▶ [Osaifu-Keitai] ▶ [Lock Settings] to set NFC/Osaifu-Keitai lock.

2 Follow the instructions on the screen and enter the NFC/Osaifu-Keitai lock number

- While NFC/Osaifu-Keitai lock is set,  (blue) or  (blue) is displayed on the status bar.
- When the battery runs out while NFC/Osaifu-Keitai lock is set, NFC/Osaifu-Keitai lock cannot be disabled. Be aware of the battery level. If the battery runs out, disable NFC/Osaifu-Keitai lock after charging the battery.

- To use the menu of Osaifu-Keitai while NFC/Osaifu-Keitai lock is set, disable NFC/Osaifu-Keitai lock.
- The NFC/Osaifu-Keitai lock number is not deleted even if you initialize the handset.
- When disabling NFC/Osaifu-Keitai lock, insert the docomo mini UIM card which had been inserted into the handset when NFC/Osaifu-Keitai lock was set.

NFC/Osaifu-Keitai settings

1 In the home screen, [APPS] ▶ [Settings] ▶ [More...] ▶ [NFC/Osaifu-Keitai settings]

2 Select an item

- **NFC/Osaifu-Keitai lock:** For details P. 48 “NFC/Osaifu-Keitai lock”
- **Reader/Writer, P2P:** Set whether to use the Reader/Writer, P2P function.
- **Android beam:** Perform data communication using Android beam.
 - For details on Android beam P. 81 “Android beam”
- **Lock No. change:** Change the lock number of NFC/Osaifu-Keitai lock.

ToruCa

ToruCa is an electronic card that can be imported to the handset. You can retrieve one as store information, a coupon, etc. from websites or scanning devices. Retrieved ToruCa is saved in the “ToruCa” app and you can display/search/update it using the app.

For details on ToruCa, refer to the DOCOMO website.

1 In the home screen, [APPS] ▶ [ToruCa]

- Packet communication charges may be incurred for retrieving, displaying or updating ToruCa.
- The following functions may not be available depending on the settings of contents provider.
 - Updating
 - Sharing ToruCa
 - Displaying a map*
 - Retrieving from a scanning device
- * A map may not be displayed from the ToruCa list although it can be from ToruCa (details).
- When NFC/Osaifu-Keitai lock is set, you cannot retrieve ToruCa from a scanning device.
- When [重複チェック] (Duple check) is enabled, you cannot retrieve the duplicate ToruCa. If you want to retrieve it, disable the setting.
- When you send ToruCa through mail, it is sent in the status that the ToruCa (details) has not been retrieved.
- ToruCa received through mail may not be saved depending on the mail app to use.
- ToruCa may not be retrieved depending on the browser to use.
- If the initial settings of Osaifu-Keitai have not been made, ToruCa may not be retrieved from a scanning device.

iD appli

“iD” is convenient electronic money using credit card transactions. You can pay easily and conveniently by simply holding an Osaifu-Keitai in which credit card information is set or an iD compatible card over scanning devices at stores. Osaifu-Keitai can register two types of credit card information, and can be used according to the benefits etc.

- For using iD with Osaifu-Keitai, subscription to a credit card company compatible with iD and setting of iD appli are required.
- Expense (annual fee etc.) for using iD service may vary depending on the credit card company.
- For use overseas, packet communication charges differ from those in Japan.
- For information on iD, refer to iD website.
<http://id-credit.com/> (in Japanese only)

Mobacas/TV (Full-Seg/1Seg)

■ Mobacas

Mobacas is a broadcasting service for smartphones. You can use two watching styles. One of the two is “Real Time” (broadcasting in real time style) that allows you to watch programs in real time. The other one is “Shift Time” (broadcasting in storage style) that allows you to enjoy comics, novels, music, games, etc. as well as movies and dramas anytime and anywhere. Also, you can enjoy new broadcasting services such as the collaboration with social services using the communication function of the handset.

For details on Mobacas, refer to the Mobacas broadcast station (NOTTV) website.

NOTTV: <http://www.nottv.jp/> (in Japanese only)

Using Mobacas

- A separate pay-TV subscription to the Mobacas broadcast station (NOTTV) is required to use Mobacas.
- You cannot receive and watch broadcasts without the docomo mini UIM card being attached to the handset.
- Mobacas is a broadcasting service provided in Japan.
- Available space on a microSD Card or the handset memory is required to use Shift Time or record videos. It is recommended to use a microSD Card on Class 4 or higher level. Also, you can set the save destination (P. 51 “Advanced settings of Mobacas”).

■ TV (Full-Seg/1Seg)

TV is an app with which you can watch either Full-Seg or 1Seg by switching them according to the reception status of broadcast wave.

Full-Seg enables you to watch a terrestrial digital TV broadcasting service with HD image quality.

1Seg is a terrestrial digital TV broadcasting service for mobile devices and can receive data broadcasting with image and audio. In addition, an interactive service adopting a communication function for mobile devices and detailed information available via communication can be used.

For details on the “Full-Seg/1Seg” service, see the website below. The Association for Promotion of Digital Broadcasting: <http://www.dpa.or.jp/english/>

Using Full-Seg/1Seg

Full-Seg/1Seg is a service provided by TV broadcasters (broadcast stations) etc. Communication charges are not incurred for receiving image and audio. Contact NHK for details on viewing fees of NHK. Available information in the area of the data broadcasting is “data broadcasting” information and “data broadcasting website” information.

“Data broadcasting” information is carried by broadcast wave together with image and audio. “Data broadcasting website” information is used to access and display websites provided by TV broadcasters (broadcast stations) etc. from the information on data broadcasting.

Packet communication charges are incurred when accessing a website such as a “data broadcasting website”.

Some websites require information charges to use.

Precautions about Full-Seg

- The handset adopts “The Software Based RMP System” to protect the copyrights of terrestrial digital TV broadcasting contents. Therefore, a B-CAS card etc. is not necessary.
- Full-Seg programs recorded by the handset cannot be played on other devices.
- For inquiries about “The Software Based RMP System”, contact the RMP Administration Center for Terrestrial Broadcasting Content.
Website: <http://www.trmp.or.jp/>
Mail address: info-trmp-en@trmp.or.jp

Broadcast wave and service area

The radio wave received via Mobacas/Full-Seg/1Seg differs from that received via Xi services and FOMA services. Also, the radio waves received via Mobacas, Full-Seg and 1Seg differ from one another. Therefore, it cannot be received at a place where the broadcast wave for Mobacas/Full-Seg/1Seg does not reach or while the broadcasting is out of service, regardless of whether the handset is outside or inside the Xi service or FOMA service area. Also, in the following places, the reception status may become weak or the signal may not be received even if the handset is inside the area of a Mobacas broadcasting/terrestrial digital TV broadcasting service.

- Place that is far from the base station/radio tower which sends the signal
- Place where the signal is interrupted due to the landscape or buildings such as mountainous areas or behind a building
- Place where the signal is weak or does not reach, such as a tunnel, basement or an inner area of a building


Improving reception status

Fully pull out the Mobacas/TV antenna and change its direction or move to another place so that the reception status may become better.

Mobacas/TV antenna

- Note the followings when you use the Mobacas/TV antenna.
 - Fully pull out the base of the Mobacas/TV antenna as shown in the following illustration. The Mobacas/TV antenna may tilt or wobble.
 - Do not apply excessive force on the Mobacas/TV antenna when it is pulled out or when you change the direction of it.
 - When you stow the antenna, do not hold its tip and stow it forcibly. Push it straightly down to its tip with its bottom fixed to completely stow it.

If you apply excessive force on the antenna, it may be damaged.

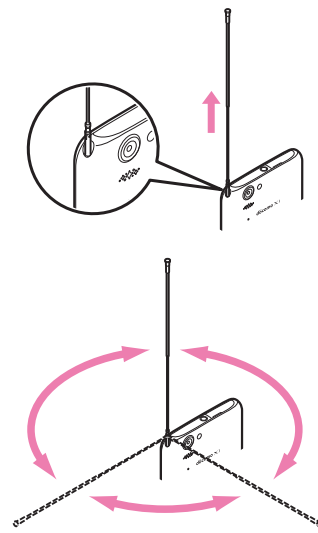

Mobacas

1 In the home screen, [APPS] ▶ [NOTTV]

- When you activate this app for the first time, initial settings are carried out.
- Check the content of アプリ使用許諾契約書 (App license agreement) and select [スタート] (Start).

2 [ホーム] (Home)

3 Select a program/content

4 Watch the program/content

- When you watch Real Time programs, you can switch programs/contents by sliding the image to the left/right.
- To display in full screen: [画面表示] / Switch to horizontal display
 - The display format of contents may differ depending on the program/content.
- To display data broadcasting: [データ] (Data)
- To display a timeline related to the program/content: [ソーシャル] (Social)
- To display detailed information: [インフォ] (Information)
- To adjust the volume: [音量] / [ミュート]

Searching from program guide

You can watch Real Time programs using the program guide.

1 In the home screen, [APPS] ▶ [NOTTV] ▶ [番組表] (Program guide)

- To display the program guide for Shift Time programs: [シフトタイム] (Shift Time)

2 Select a program

- Advanced information appears on the programs which cannot be watched immediately.

Searching by specifying conditions

1 In the home screen, [APPS] ▶ [NOTTV]

2 [検索] ▶ [検索・ジャンル別] (Search/By genre)

3 Select an item

- Alternatively, you can search by entering a keyword in the keyword entry field.

4 Select a program/content

Receiving reservation in Shift Time

- 1 In the home screen, [APPS] ▶ [NOTTV] ▶ [番組表] (Program guide)
- 2 [シフトタイム] (Shift Time)
 - The list of programs/contents that will be broadcast is displayed.
- 3 Select a program/content
 - The details screen is displayed.
- 4 [予約する] (Reserve)

- In the following cases, programs/contents may not be received.
 - When the time for a program/content to be broadcast arrives with the handset turned off
 - When the battery level is insufficient
 - When the handset is in a poor reception status of broadcast wave such as when it is out of the Mobacas service area
 - When a microSD Card is not inserted
 - When available space on the microSD Card/the handset memory is insufficient
- Programs/Contents temporarily saved on a microSD Card/the handset memory can be watched/used only on the handset being used.
- Programs/Contents whose expiration date has passed will be automatically deleted from the microSD Card/the handset memory. You can also delete programs/contents manually whose expiration date has not passed yet.
- If you enable [自動予約] (Automatically reserve), programs/contents may be automatically reserved even when you have not reserved ones for the future reception. You can also disable [自動予約] (Automatically reserve) (☞ P. 51 "Setting Mobacas").
- If you set 自動補完 (Automatically complement) to [ON], data may be automatically complemented using packet communication when programs/contents fail to be completely received because of the reception status of broadcast wave etc. You can also set 自動補完 (Automatically complement) to [OFF] (☞ P. 51 "Setting Mobacas").

Watching/Recording reservation in Real Time

- 1 In the home screen, [APPS] ▶ [NOTTV] ▶ [番組表] (Program guide)
- 2 Select a program
 - The details screen is displayed.
- 3 [視聴予約する] (Watching reservation)/[録画予約する] (Recording reservation)
 - You can also record a program on air manually.

- In the following cases, programs may not be watched/recorded.
 - When the time for a program to be broadcast arrives with the handset turned off
 - When the battery level is insufficient
 - When the handset is in a poor reception status of broadcast wave such as when it is out of the Mobacas service area
 - When a microSD Card is not inserted
 - When available space on the microSD Card/the handset memory is insufficient
- Programs recorded on a microSD Card/the handset memory can be watched only on the handset being used.
- Some programs cannot be recorded.

Setting Mobacas

- 1 In the home screen, [APPS] ▶ [NOTTV]
- 2 [≡] ▶ [設定] (Settings)
- 3 Select an item
 - 音声切替 (Switch audio): Make settings for main/sub audio channel.
 - 字幕表示切替 (Display subtitles): Make settings for displaying subtitles.
 - バックグラウンド再生 (Background playback): Set whether to play Mobacas in the background.
 - サウンド設定 (Sound settings): Make settings for the sound effects.
 - 自動予約 (Automatically reserve): Set whether to automatically reserve recommended Shift Time programs.
 - 自動補完 (Automatically complement): Make settings for the function to automatically complement data using packet communication when the data has failed to be completely received.
 - 番組表情報自動取得 (Automatically acquire information on program guide): Set the time when information of the program guide/contents list is automatically acquired.
 - 放送中番組の表示 (Display programs on air): Set whether to display notification icons for programs on air on the status bar.
 - 新着情報の通知 (Notify new information): Set whether to display notification icons for Shift Time or recording on the status bar.
 - お知らせ情報の通知 (Notify information of notifications): Set whether to display notification icons for notifications from NOTTV on the status bar.
 - 視聴年齢制限 (Restrict watching age): Set whether to make programs with watching age restriction unavailable.
 - 年齢設定 (Set age): Set at what age watching restriction starts to be applied.
 - パスワード変更 (Change passwords): Set a parental control password.
 - Twitter連携解除 (Disable linkage to Twitter): Disable the linkage to Twitter.
 - 詳細設定 (Advanced settings): Make settings for detailed items. For details on 詳細設定 (Advanced settings) ☞ P. 51 "Advanced settings of Mobacas"

Advanced settings of Mobacas

- 1 In the home screen, [APPS] ▶ [NOTTV]
- 2 [≡] ▶ [設定] (Settings) ▶ [詳細設定] (Advanced settings)
- 3 Select an item
 - 重複録画防止 (Prevent simultaneous recording): Set whether to prevent simultaneous recording of a same program from being carried out when you reserve programs by specifying series or keywords.
 - ロック画面通知 (Notify on lock screen): Set whether to notify you when a recording starts.
 - ストレージ選択 (Select storage): Set a save destination for Shift Time, recording, etc.
 - ログ送信 (Send log): Set whether to send logs of using apps.
 - 文字スーパー (Telop): Set whether to display telops.
 - Cookie: Set whether to save Cookie.
 - Cookieを削除 (Delete Cookie): Delete Cookie.
 - 放送用保存領域消去 (Delete memory space for broadcasting): Delete data on the memory space for broadcasting.
 - データ放送表示 (Display data broadcasting): Set whether to display data broadcasting.

- **再読み込み** (Reload): Reload Mobacas.
- **文字コード変換** (Convert character code): Convert character codes.

[ストレージ選択] (Select storage)

- When you change the settings, the data is transferred.

[文字スーパー] (Telop)

- Even if [文字スーパー] (Telop) is disabled, telops may be displayed.

TV (Full-Seg/1Seg)

■ Creating channel lists

To watch TV, you need to create one or more channel lists and select one in advance.

- You can register up to three channel lists. You can register up to 12 stations in a channel list.
- Create channel lists inside the area of a terrestrial digital TV broadcasting service with the Mobacas/TV antenna fully pulled out.

1 In the home screen, [APPS] ▶ [TV]

- If the confirmation screen for the license agreement is displayed, check the content and select [Agree].
- Only when channels are not set, the channel list creating screen appears.
- To add a channel list: In the TV watching screen, [≡] ▶ [Channel settings] ▶ [Edit channel list] ▶ [NEW]

2 Select an item

- **Create by selecting the area**: Search for broadcast stations set in each area.
- **Create by searching channels**: Search for channels available in the present location.

3 [SET]

- You cannot watch TV overseas, since the broadcasting format and the broadcasting frequency are different.

■ Watching TV

Watch TV.

1 In the home screen, [APPS] ▶ [TV]

2 Watch TV

- To adjust the volume: [⬆]/[⬇]



TV watching screen (Full-Seg vertical display)



TV watching screen (Full-Seg horizontal display)

1 Program information

- The program name, whether you are watching Full-Seg or 1Seg and broadcast station name are displayed.

2 Image

- Touch it to display/hide the controller etc.
- Flick your finger to the left/right to select a station with UP/DOWN.

3 Subtitle

4 Data broadcasting key

- Display data broadcasting. This is available only when you are watching 1Seg.

5 Channel switching key

- Display the channel switching screen.

6 Program list key

- Display the program list of the broadcast station whose program you are watching.
 - Touch a program to display the program details screen. Recording/Watching reservation is also available in the program details screen.

7 Mini TV

- Switch to the mini TV. You can watch TV while using another app (☞ P. 30 “Mini app/Widget”).

8 Controller

- The following operations are available with displayed keys.
 - To switch to 1Seg/Full-Seg: [📺]
 - To select a station with UP/DOWN: [CH>]/[<CH]*
 - To adjust the volume: [🔊] ▶ drag the volume bar
 - To start/stop recording: [📺]/[📺]
- * Touch and hold the key to select a station by searching a frequency.

9 Website key

- Display websites. You can search for the program being watched while a website is being displayed.

10 Recorded file list key

- Display the recorded file list.

11 Information displaying area

- Operation keys appear while data broadcasting/a website is being displayed.

- While watching TV, colors in the screen may appear different.
- Even if the home screen is displayed while activating TV, information of data broadcasting/data broadcasting websites may be automatically updated, since TV is kept activated. Note that packet communication charges may be incurred.
- If you receive a call while watching TV, TV will resume after the call is terminated. While recording TV, recording continues in the background.
- When you play videos with another app while the mini TV is being used, videos may not be displayed properly.

Recording of TV (Full-Seg/1Seg)

You can record TV and save the recorded programs on the handset memory or a microSD Card.

- Record TV in a good reception status.
- You can set where to save recorded Full-Seg (☞ P. 54 “Setting TV (Full-Seg/1Seg)”). 1Seg can be saved only on the handset memory.

Estimated number of savable videos and recording time

Save destination	Number of savable videos	Recording time
Handset memory	Up to 99*	Full-Seg: Up to approx. 210 min 1Seg: Up to approx. 7,940 min

Save destination	Number of savable videos	Recording time
microSD Card (64 GB)	Up to 99	Full-Seg: Up to approx. 500 min

- * This is the total number of Full-Seg and 1Seg videos.
- The followings are the maximum recording size/time for each recording. Even if the available space on the handset memory or a microSD Card is sufficient, the video being recorded up to that point is saved and recording ends once the maximum recording size/time is reached.
 - Full-Seg recording: Up to approx. 500 min
 - 1Seg recording: Up to approx. 2 GB/Up to approx. 600 min
- When you run out of available space on the handset memory or a microSD Card, recording automatically ends, and the video being recorded up to that point is saved.

1 In the TV watching screen, [⦿]

2 Select a recording time

- When the set recording time has passed, recording ends and the video is automatically saved.
- To end recording: [⦿] ▶ [OK]
 - The video is automatically saved.

- Recording of some programs may be prohibited.
- When the time set for recording arrives while another TV is being recorded, the recording of the latest timer-set program starts. The recording in progress up to that point ends, and the recorded program is saved.

Playing recorded video of TV (Full-Seg/1Seg)

Play a recorded video saved on the handset memory or a microSD Card.


- Basic operations in video playback screen are the same as those in TV watching screen. Operations that differ are explained here.

1 In the TV watching screen, [⦿]

2 Select a video

- To delete a recorded video: Touch and hold a video ▶ [🗑️] ▶ [OK]

3 Watch the video

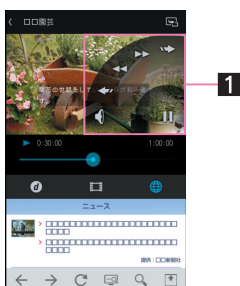

1 Controller

- The following operations are available with displayed keys.
 - To pause/play: [⏸️]/[▶️]
 - To fast reverse/forward: [⏮️]/[⏭️]*1
 - To return to a location of approx. 5 seconds ago/skip to a location of approx. 15 seconds later: [⏮️]/[⏭️]
 - To adjust the volume: [🔊] ▶ drag the volume bar
 - To play from the beginning: [⏮️]*2
- *1 Every time you touch it, the playback speed is switched.
- *2 Displayed when the playback is finished.

- When a video edited (split) by other devices etc. is played, the image or audio may be interrupted.

- When a Full-Seg video recorded on a microSDHC Card with the handset is played, the image or audio may be interrupted. When you record a Full-Seg video, it is recommended to use a microSDXC Card.
- While a 1Seg video is being played, the data broadcasting for the broadcast station from which that video was recorded can be displayed.

TV link

You can register memo information and URLs of related websites as TV link in some data broadcasting. If they are registered as TV link, you can check them from the TV link screen.

- You can register up to 50 TV links.
- Procedures for registering TV links may differ depending on the program.

1 In the TV watching screen, [≡] ▶ [TV Links]

- Display the registered TV links.

2 Select a TV link

Deleting TV links

1 In the TV watching screen, [≡] ▶ [TV Links]

2 Touch and hold a TV link ▶ [🗑️] ▶ [OK]

Recording/Watching reservation of TV (Full-Seg/1Seg)

You can set a timer for watching or recording TV. In addition, you can check the reservation status, result, etc.

- Record TV in a good reception status.
- You can save up to 30 timer settings for watching and recording TV.
- Multiple programs cannot be watched/recorded simultaneously. If the reservation period you are about to set overlaps with that of an existing timer-set program, a confirmation screen for registration appears. Check the contents of the message, and then perform registration.

1 In the TV watching screen, [≡] ▶ [Timer]

- To delete a reservation: Select a reservation ▶ [🗑️] ▶ [OK]
- To display the reservation result list: [Timer] ▶ [Results of timer recordings]

2 [+] ▶ [Set a timer manually]

- To reserve from the program guide: [+] ▶ [Set a timer from G-GUIDE] ▶ reserve

3 Set each item



1 Timer type

- Switch timer types.

2 Title

- Enter a title.

3 Station

- Set a broadcast station.

4 Start date

- Set the start date.

5 Start time

- Set the start time.

6 Repeat

- Make settings for the repetition of the reservation.

7 End time

- Set the end time.

4 [SET]

- Depending on usage of the handset, available space on the handset memory or a microSD Card, the program type, etc., you may not be able to watch/record the program or recording may end even if it is not finished yet.

Setting TV (Full-Seg/1Seg)

You can make settings for data broadcasting, auto exit time of TV, etc.

1 In the TV watching screen, [≡] ▶ [General settings]

- **Controller display position**: Set the controller to be displayed on the left/right side.
- **One-Seg/Full-Seg reception setting**: Set how to receive 1Seg/Full-Seg.
- **Text superimpose display**: Make settings for telops.
- **Audio settings**: Make settings for the sound quality.
- **Data broadcasting settings**: Make settings for data broadcasting.
- **Alarm settings**: Make settings for the alarm activated when a reserved program starts.
- **TV off timer**: Set how long TV will remain activated before it automatically ends.
- **Web browser settings**: Make setting for the browser.
- **Full-Seg destination setting**: Set where to save recorded Full-Seg.
- **Initialize CAS information**: Reset information saved when receiving Full-Seg.
- **Product information**: Confirm the version of this app.

[Data broadcasting settings]

- When [Confirmation] is disabled, the confirmation screen for data broadcasting does not appear and information of data broadcasting/data broadcasting websites may be automatically updated. Note that packet communication charges may be incurred.

[TV off timer]

- When the set time arrives while you are recording TV, the confirmation screen for ending the recording is displayed.

■ Video/Audio/Subtitles settings

You can set subtitles to be displayed or change spoken language while watching TV.

- Some functions may not be available depending on the program.

1 In the TV watching screen, [≡] ▶ [Video/Audio/Subtitles]

2 Select an item

- **Switch videos**: Switch images.
- **Switch audio**: Set spoken language.
- **Switch sound-multiplex**: Make settings for main/sub audio channel.
- **Switch subtitles**: Make settings for subtitles to display.

Camera

You can shoot still pictures and videos. Also, you can switch settings of the camera according to the subject to shoot.

Before using camera

- Fingerprints or fat on the lens may cause the image to be out of focus. In addition, images may blur, rays of light may appear in images when shot near a strong light source, etc. Wipe the lens with a soft cloth before shooting images.
- You cannot shoot when the battery level is insufficient. Images may appear dark or distorted when shot with insufficient battery power even while the handset is charging. When you use the camera, charge the battery sufficiently in advance.
- Although the camera is made with high-precision technology, some pixels or lines look constantly dark or bright. Further, white lines and other noise may appear in images especially when shooting images in dimly lit surroundings.
- The quality of images may deteriorate when shot or saved after the handset has been left in a warm location for a long time.
- If the camera lens is exposed to direct sunlight for a long time, the internal color filter may discolor, creating a discoloration of shot images.
- Images shot in shooting conditions which include strong light source such as the sun or a lamp may appear dark or distorted.
- Shooting the sun directly may impair the performance of the CMOS.
 - When shooting still pictures continuously
 - When shooting long videos
 - When activating the camera for a long timeUse the camera again after a while.
- When Focus settings are switched, sounds are heard from the camera lens. This is not a malfunction.
- Images are blurred when the handset moves while shooting images. Hold securely to prevent blurring. Use the shake reducing function when shooting still pictures.
- The color and brightness of the subject in images shot with the camera may differ from the actual color and brightness.
- Make sure that your fingers, hair, handset strap, etc. do not obscure the camera lens when shooting images.
- Because a larger picture size requires more data, movement in the image on the handset display may appear slow.
- Indoor fluorescent lighting etc. may create flickering or streaky shading on the screen. This flickering or shading may be reduced by changing the lighting conditions and brightness of the room or adjusting the camera brightness and white balance.
- Shot still pictures are saved in DCF1.0 (ExifVer.2.3, JPEG) format.
- The camera is not available while watching Mobacas or TV.

Copyrights and rights of portrait

Images and audio recorded with the handset are for personal use and must not be used for any other purposes without the consent of the rightful person in accordance with the Copyright Act. Please note that acts such as the use or defacement of the likeness or name of other individuals without their consent may infringe on an individual's rights of portrait. Please be aware of copyrights and rights of portrait when posting images and audio recorded with the handset on the Internet or similar media. The recording of images or audio may be restricted at stage performances, shows, exhibitions, etc. even when the images or audio is recorded for personal use etc. Do not use the handset to send copyrighted images for uses other than those permitted under the Copyright Act.

If you cause the public any trouble using the handset, you may be punished under law or regulations (for example, nuisance prevention ordinance).

Please be considerate of the privacy of individuals around you when shooting and sending pictures using camera-enabled mobile phones.

Operations while using camera

- In each camera mode, if no operations are performed for approximately 3 minutes, the camera mode automatically ends and the scan result is deleted.
- The shutter sound volume cannot be changed.

Picture size of camera

- The following picture sizes are available.

Shooting mode	Aspect ratio	Picture size
Shoot still picture	16:9	4K2K: 3840×2160
		FULL HD: 1920×1080
	4:3	16M: 4608×3456
		4M: 2304×1728
		1.6M: 1440×1080*
Shoot video	16:9	VGA: 640×480
		FullHD: 1920×1080
		HD: 1280×720
	4:3	VGA: 640×480
		QVGA: 320×240

* Available only when you use the in-camera.

Shooting screen layout

Still picture shooting screen



Video shooting screen



1 Settings on shooting mode/camera to shoot with

- Set the shooting mode or camera to shoot with (P. 56 "Shooting mode/Camera to shoot with").

2 Mobile light

- Turn on/off the mobile light.

3 Switching in/out-camera

- Switch to the in-camera/out-camera.

4 Various settings

- Make various settings for shooting (P. 56 "Settings on shooting with camera").

5 Switching displays

6 Album/Thumbnail

- Activate Album.
 - Touch [] in the image displaying screen of Album to display all data.

7 Shutter

8 Switching Camera/Video Camera

- Switch the camera mode to Camera/Video Camera.

9 Adding location information

- Set whether to add location information.

10 Shake reducing function

- Set whether to use the shake reducing function.

11 Picture size

- Set the picture size.

12 NightCatch

- Switch NightCatch settings. Set it to [AUTO] to make shady areas appear vivid on shot images.

13 HDR

- Set whether to clear image of blocked up shadows and blown out highlights which often appear such as when you shoot against the light while a contrast between brightness and darkness is high.

14 Remaining number/time for shooting

- Displayed when the remaining number for shooting decreases to 99 or less as for the still picture shooting mode.

- As for the video shooting mode, remaining time for shooting indicates the total recordable time. The recordable time per shot may be shorter than the displayed remaining time.
- Even after shooting a still picture/video, remaining number/time for shooting may not be changed.

15 Battery level

Shooting still pictures

1 In the home screen, [APPS] ▶ [Camera]

- To adjust the brightness: Slide your finger up/down
- To zoom: Slide your finger to the left/right or pinch out/in
 - Maximum magnification (zoom step) is approximately 16.0-fold (120 steps).
- To lock the focus: Touch the subject
 - Touch anywhere other than focus frame to cancel the focus lock.

2 [📷]

- The shutter sounds and the shot still picture is automatically saved.
- Alternatively, you can shoot still pictures by touching the focus frame while the focus is locked.

Shooting videos

1 In the home screen, [APPS] ▶ [Camera] ▶ drag [📷] to [📹]

- To adjust the brightness: Slide your finger up/down
- To zoom: Slide your finger to the left/right or pinch out/in
 - Maximum magnification (zoom step) is approximately 16.0-fold (120 steps).

2 [📷]

- Shooting starts after the shooting start sound is heard.
- To shoot still pictures: [📷]

3 [📷]

- The shot video is automatically saved after the shooting end sound is heard.

- The remaining time indicator is an approximation. Shooting may continue longer than the remaining time indicated before the start of shooting or may automatically stop even when there is remaining time depending on the subject.

- The remaining time indicator changes according to the available space on the handset memory or a microSD Card and battery level.

Camera settings

■ Shooting mode/Camera to shoot with

You can switch shooting modes or cameras to shoot with according to the shooting condition and subject.

1 In the home screen, [APPS] ▶ [Camera]

2 [📷] ▶ [STD]

3 Select an item

- **Camera**: Switch to a standard camera.
- **Easy auto**: A mode to automatically adjust the camera according to the subject.
- **Standard**: A standard mode.
- **Portrait**: A mode suitable for portrait shot.
- **Portrait(Night)**: A mode suitable for portrait shot against a night view.
- **Landscape**: A mode suitable for landscape shot.
- **Night**: A mode suitable for night view shot.
- **Food**: A mode suitable for food shot.
- **Text**: A mode suitable for character shot.
- **Sepia**: A mode for shooting with a sepia effect applied.

- **Monochrome**: A mode for monochrome shot.
- **Bleach bypass**: A mode for shooting while making shady parts appear darker and stressing chromatic contrast.
- **Multi Focus**: A camera for shooting with an entire photo focused.
- **Rapid Shooting**: A camera for automatically shooting multiple photos in a row just by touching the shutter once.
- **Fish Eye**: A camera for shooting distorted photos as if you used a fisheye lens.
- **Miniaturize**: A camera for shooting landscape photos as if the scenes were replicated in miniature size.
- **Panorama**: A camera for shooting in panorama size.
- **Camera Reader**: Activate Camera reader. For details on Camera reader P. 63 "Business card reader", P. 63 "Bar code reader", P. 63 "Store information reader", P. 64 "Text reader"
- **Hand Mirror**: A mode for reflecting yourself like a hand mirror using the in-camera.

- Before switching to another mode, some shooting modes or cameras to shoot with may make it necessary to reactivate the camera after ending it.

■ Settings on shooting with camera

You can change settings for the shutter or save destinations of shot still pictures/videos.

1 In the home screen, [APPS] ▶ [Camera]

2 [📷] ▶ [⚙️]

3 Select an item

- **ISO Sensitivity**: Set the sensitivity for incorporation of light according to the ambient brightness.
- **White Balance**: Set whether to adjust color of the subject against the ambient light source.
- **Mic Setting**: Set whether to use the microphone while shooting videos.
- **Shutter mode**: Set whether to automatically shoot the subject when he/she smiles or looks back on the camera.
- **Self-timer**: Set whether to automatically shoot with a timer set.
- **OneTouch Shutter**: Set whether to make it possible to shoot by touching the screen.
- **Focus settings**: Set the focus according to the subject.
- **Anti Flicker**: Set to make the screen less susceptible to streaky shading when you shoot in a place with fluorescent lighting.
- **Save to**: Set a save destination.
- **Time Lapse**: Make settings for the time lapse of the shutter when shooting videos.
- **Camera Help**: Check the functions of icons displayed on the still picture shooting screen and operations on the touch panel.
- **Function information**: Connect to the SHARP website.
- **Help**: Check the functions of icons displayed on the video shooting screen and operations on the touch panel.

Translation apps

Translation finder

You can have English texts translated into Japanese in real time just by holding the camera over English texts.

1 In the home screen, [APPS] ▶ [Translation finder]

2 Display English texts to translate on the screen ▶ [🗨️]

- Characters are recognized in the direction of [📄]. Make sure that the entire English texts to translate are displayed on the screen.
- The shutter sounds and the untranslated and translated still pictures are automatically saved.
- To make settings for Translation finder: [🔍] ▶ set each item

3 Use the shot still picture

- To display/hide translated texts: [🔍]
- To zoom in/out: Pinch out/in
- To adjust angles of the screen: Rotate with your two fingers
- To search: Touch the translated Japanese texts or untranslated English texts ▶ [Net dict.]/[E/J dict.]/[Search]
- To copy the characters: Touch and hold the translated Japanese texts or untranslated English texts ▶ [Copy]
- To share the characters: Touch and hold the translated Japanese texts or untranslated English texts ▶ [Share] ▶ select an item

- You can only have English texts translated into Japanese.
- Texts may not be scanned or translated correctly depending on the English font, background, text color, text size, layout, etc.
- You may be able to have texts translated correctly by adjusting angles of the screen to get the texts laid out horizontally.

Translation Capture

You can have English texts on websites, images, etc. translated into Japanese.

- Display content to translate such as a website written in English on the screen in advance.

1 [📷] ▶ [Favorites] ▶ [Translation Capture]

2 Use the capture result

- The operations and precautions to be taken after translations are the same as those for Translation finder.

Album

You can sort images and videos by people, event and location and use them.

1 In the home screen, [APPS] ▶ [Album]

2 Select a category

- To switch folder-by-folder display/data list display: [ALL] ▶ [📁]/[📄]

3 Select data

- To delete data: Touch and hold data ▶ [Delete] ▶ [Yes]

4 Confirm the data

- If files are not displayed, they may be displayed normally by deleting a database file of Album. Connect the handset to a PC using Micro USB Cable 01 (sold separately) and delete ¥PRIVATE¥SHARP¥PM¥DATABASE folder on the handset memory or a microSD Card to use. If you delete the database file, created information of people etc. are also deleted. Take extra precautions and check when deleting.

Sorting data


You can sort images and videos by created group.

Sorting by people

1 In the album screen, [PORTRAIT]

- To set automatic sort: [🔍] ▶ [Settings] ▶ [Easy sort setting] ▶ set each item

2 Select a group

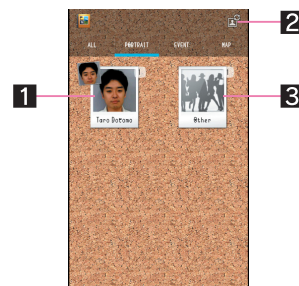

1 Group of data already set

2 Sort

- Sort images by people.

3 Other

- Display data not grouped. You can create new groups or sort the data into created groups.

3 [✂️] ▶ [Create new person]

4 Select data to classify ▶ [Create]

- When you select multiple data, the latest one is displayed.

5 Select the cutout range ▶ [OK]

- Drag the orange frame border to enlarge/narrow the frame.

6 [Input new portrait.] ▶ enter person's name ▶ [OK]

- Select [👤] to select and enter the person's name from the phonebook.

- Portrait photos are automatically sorted by Easy sort setting. Some photos may not be sorted correctly depending on the expression or direction of a person.

Sorting by event

1 In the album screen, [EVENT]

2 [Not set]

3 [✂️] ▶ [Create new event]

4 Select data to classify ▶ [Create]

5 [Input new event.] ▶ enter an event name ▶ [OK] ▶ [Create]

Sorting by location

- The data with location information attached is automatically sorted on a map.

1 In the album screen, [MAP]

2 [🔍] ▶ [Location settings]

3 Touch and hold the data to classify ▶ drag the data to the point to register it onto ▶ [OK]

Media Player


Play music data and video data saved on the handset memory or a microSD Card.

- The followings are the main file formats of playable music data.
AAC, HE-AAC v1, HE-AAC v2, MP3, MIDI*, WMA9, OGG
* Although this type of data does not appear in the all songs list, you can play the data by activating it from another app.
- The followings are the main file formats of playable video data.
However, some files may not be displayed/played.
H.263, H.264, MPEG-4, WMV, WEBM

1 In the home screen, [APPS] ▶ [Media Player]

- If the confirmation screen asking whether to read the usage explanations of Media Player appears, select [使い方の説明を読む] (Read the usage explanations)/[説明を読まず利用する] (Use without reading the explanations).

2 Select data

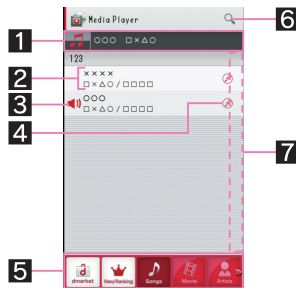

Music data list screen




Video data list screen


- 1 Data being played/paused**
- 2 Title/Artist name/Album title**
- 3 Icon indicating the data is being played/paused**
- 4 Music data settings**
 - Touch it to set the music as a ringtone, add the music to a playlist or delete the music.
- 5 Bottom bar**
 - Slide it to the left/right to switch displays of category.
- 6 Search contents**
- 7 Index**
 - Slide the index to move to the selected heading.
- 8 Thumbnail**
- 9 Title/Artist name**
- 10 Playback time/Total playback time**

3 Play music/video

- To adjust the playback volume: [↗]/[↘]

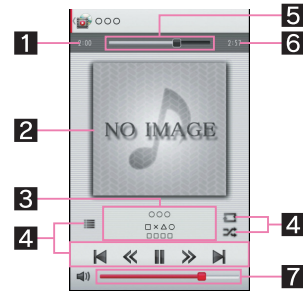

Music playback screen

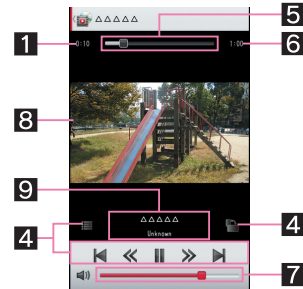

Video playback screen

1 Playback time

2 Jacket image

3 Title/Artist name/Album title

4 Operation panel

- The following operations are available with displayed keys.
 - To play previous data/return to the beginning of the data: [⏮]*1
 - To play next data: [⏭]
 - To return to a location of approx. 10 seconds ago/skip to a location of approx. 10 seconds later: [⏮]/[⏭]
 - To play/pause the data: [⏮]/[⏭]
 - To display the data list screen: [☰]
 - To repeat the data: [🔄]*2
 - To shuffle the data: [🔀]
 - To lock the auto-rotation of the screen: [🔒]
- *1 When the playback time is less than approximately 2 seconds: Play previous data
When the playback time is approximately 2 seconds or more: Return to the beginning of the data
- *2 When [🔒] is superimposed, repeat only one song.

5 Seek bar

- Drag the seek bar to change the playback position.

6 Total playback time

7 Volume bar

8 Image

9 Title/Artist name

Sorting icons

- 1 In the data list screen, [☰] ▶ [Settings] ▶ [Arrange icons]**
- 2 Drag [🔼] to the point to sort into ▶ [Apply]**

Managing playlists

■ Creating playlists

- 1 In the data list screen, [Play list] ▶ [Add] ▶ enter a playlist name ▶ [OK]
- 2 Select music data ▶ [Apply] ▶ [Save] ▶ [OK]

■ Editing playlists

- 1 In the data list screen, [Play list] ▶ select a playlist
- 2 [Edit]
 - To rename the playlist: [Edit title] ▶ enter a playlist name ▶ [OK]
 - To sort music data: Drag [≡] appearing alongside the song to sort to the point to sort into
 - To delete music data: Select music data ▶ [Delete selected songs]

- 3 [Save] ▶ [OK]

■ Deleting playlists

- 1 In the data list screen, [Play list] ▶ [Reorder/Delete]
- 2 Select a playlist ▶ [Save] ▶ [OK]

GPS/Navigation

You can display Street View using Maps and search for routes using Navigation. You can also search for facilities near a location on the map being displayed by genre using Local.

Using GPS function

- GPS is a function to retrieve location information of devices by receiving radio wave from GPS satellites. It is necessary to set Access to my location to [ON] to measure the present location (P. 71 "Location services").
- You cannot use the handset as a navigation system for professional use of aircrafts, vehicles, person, etc. or surveying GPS of high accuracy. Note that DOCOMO shall not be liable for the pure economic losses such as ones caused by using the GPS for these purposes or by failing to confirm a positioning result or to communicate due to handset failure, malfunction or external factors such as power failure (including battery exhaustion).
- GPS is a service administered by the U.S. Department of Defense. Therefore, GPS radio wave condition may be controlled (accuracy degradation, radio wave abort, etc.) for US national security reasons. In addition, the same results may not be retrieved even when positioned in the same location and environment, since the radio wave conditions may change depending on the location of the GPS satellites.
- Note that GPS uses the radio waves from artificial satellites, therefore the following conditions may prevent the radio waves from being received or prevent the reception status of the radio waves from being satisfactory, resulting in an error of 300 m or more for location information.
 - In or under a dense forest, in density area with buildings or residence
 - In or under buildings
 - In a basement, tunnel, underground or underwater
 - Near high-tension line
 - Inside cars, trains, etc.

- In bad weather with heavy rain/snow etc.
- In bags or boxes
- When people or objects are blocking the handset
- When hands are covering the camera, Mobacas/TV antenna, earpiece or proximity sensor of the handset
- When using a GPS function overseas, the displayed map based on the acquired location information (latitude and longitude information) may not be accurate because of the legal system in each country and the area.
- Packet communication charges may be incurred, since assisted GPS data such as satellite information is automatically retrieved when you measure present location.
- Packet communication charges are incurred when you display a map based on location information etc.

Maps

You can measure your present location, use the navigation function to check how to get to your destination in detail, etc.

- It is necessary to set the followings to measure the present location.
 - Set Access to my location to [ON] or enable [Use GPS satellites] (P. 71 "Location services").
 - In the map displaying screen, flick [≡] to the right ▶ [Settings] ▶ [Google location settings] ▶ [Access location] ▶ [OK] to enable [Access location].

- 1 In the home screen, [APPS] ▶ [Maps]
- 2 Use the maps

- To rotate the screen: Rotate with your two fingers
- To display sterically: Slide up with your two fingers
- To use Navigation: [🔍] ▶ search for routes
- To use Local: Touch the search box ▶ search for facilities
- To display My Maps: [👤]
- To measure present location: [📍]

- Set up a Google account in advance to display My Maps.

■ Street View

- 1 In the map screen, touch and hold any place
- 2 Touch the address, name of place or facility, etc. ▶ [Street View]

- To change a displayed direction: Slide the screen up/down or to the left/right
- To move a displayed place: Touch an arrow
- To switch to the compass mode: [🧭]

- Some areas are not supported by Street View.
- When the compass mode is used, the geomagnetic compass of the handset and the direction displayed by Street View are associated with each other.

Navigation

You can search for a route from a start point to an end point.

- It is necessary to set the followings to use Navigation.
 - Enable [Use GPS satellites] (P. 71 "Location services").
 - In the map displaying screen, flick [≡] to the right ▶ [Settings] ▶ [Google location settings] ▶ [Access location] ▶ [OK] to enable [Access location].
- 1 In the home screen, [APPS] ▶ [Navigation]
 - 2 Select how to get to the end point
 - 3 Touch the search box above ▶ enter a start point
 - The present location is entered while it is being measured.

4 Touch the search box below ► enter an end point

- Follow the instructions on the screen and operate after this step.

Local

You can search for facilities near a location on the map being displayed by genre.

- It is necessary to set the followings to measure the present location.
 - Set Access to my location to [ON] or enable [Use GPS satellites] (P. 71 “Location services”).
 - In the map displaying screen, flick [⌂] to the right ► [Settings] ► [Google location settings] ► [Access location] ► [OK] to enable [Access location].

1 In the home screen, [APPS] ► [Local]

2 Select a genre of facilities to search

- Alternatively, you can search by entering a name of place to search in the search box.

3 Use the search result

- To display detailed information: Select an address, a name of place or facility, etc.
- If there are two or more search results, touch a marker or slide an address, a name of place or facility, etc. to the left/right to display the other search results. Also, touch [≡] to display the search results as a list.

YouTube

YouTube is a free online video streaming service. You can play, search and upload videos.

1 In the home screen, [APPS] ► [YouTube]

2 Select a video

 
- To display the search box: [🔍]

Hangouts

Hangouts is an online instant message service provided by Google. You can communicate with other people having Google account using chat (talk using characters), voice chat and video chat.

1 In the home screen, [APPS] ► [Hangouts]

2 Select a person



1 Image

- An image registered by the other party is displayed.

2 The other party chatting with you

- [Sent you a message] appears when you have received an invitation. Touch it to decline or reply to the invitation.

3 Add people for chat

3 Enter a message ► [➤]

Alarm/Clock

You can use Alarm, WorldClock, StopWatch and Timer.

Alarm

Activate an alarm tone or vibrator at the specified time/day of the week.

- You can save up to ten alarms.

1 In the home screen, [APPS] ► [Alarm/Clock] ► [Alarm]

- To adjust the alarm volume: [🔊] ► [Alarm volume] ► adjust the volume ► [OK]
- To set the alarm to/not to ring while the manner mode is set: [🔊] ► [For Manner Mode] ► select the setting

2 Select a register destination

3 Set each item



1 Name

- Enter the name.

2 Enable/disable alarm

- Set whether to use the alarm.

3 Time

- Set the time when the alarm rings.

4 Alarm sound

- Set the alarm sound.

5 Repeat

- Set the repetition of the alarm.

6 Ring duration

- Set the alarm duration.

7 Enable/disable snooze

- Set whether to use the snooze.

8 Snooze interval

- Set the snooze interval.

9 Snooze repeat

- Set the number of snooze repetition.


10 Vibrator Setting

- Set whether to use the vibrator.

- An alarm is not activated when the handset is turned off at the time for the alarm to ring.
- An alarm is not activated when the time for the alarm to ring arrives during a call. Upon the end of the call, the alarm is activated.
- When the time for an alarm to ring arrives while another alarm is ringing, the former alarm is delayed. When the latter one stops or the duration has elapsed, the delayed alarm starts to ring.

- The alarm does not sound if Alarm volume is set to “0” or if you set For Manner Mode to [Do not Ring] while the manner mode is set.

Alarm sounding screen layout

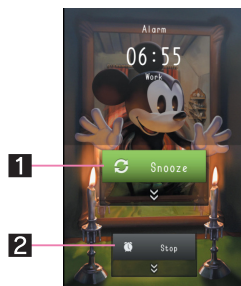

1 Snooze

- Drag the icon down to stop the alarm. Snooze still works after stopping the alarm.
- You can operate only when Enable/disable snooze is set to [ON].

2 Stop

- Drag the icon down to end the alarm.

WorldClock

Display clocks for cities around the world.

- WorldClock can display clocks for up to ten cities.

1 In the home screen, [APPS] ▶ [Alarm/Clock] ▶ [WorldClock]

2 [Add] ▶ select a city

- To switch daylight saving time: Touch and hold a city ▶ [Switch summer time]
- To delete cities: [⌵] ▶ select cities ▶ [Delete] ▶ [Yes]

- [☀] appears on cities for which daylight saving time is set.
- You may not be able to switch to daylight saving time depending on the city.

StopWatch

1 In the home screen, [APPS] ▶ [Alarm/Clock] ▶ [StopWatch]

2 [Start]

- To record the lap time and split time: [Lap]

3 [Stop]

- To reset the measured time, lap time and split time: [Reset]

- You can record up to 99 history items of lap time and split time. When the number exceeds 99, they are deleted from the oldest one.
- Measured time and history are reset by ending Alarm/Clock.

Timer

Activate an alarm tone or vibration after the specified length of time passes.

1 In the home screen, [APPS] ▶ [Alarm/Clock] ▶ [Timer]

2 Touch the set time ▶ enter the time ▶ [OK]

- Touch [10sec]/[1min]/[5min]/[10min] to add 10 seconds/1 minute/5 minutes/10 minutes to the set time.
- To reset the set time to 00 minute 00 second: [Reset]
- Select [🔔] to set Alarm Sound/Vibrator Setting.

3 [Start]

- To cancel the countdown: [Reset]
- To stop the countdown: [Stop]

Schedule

Create and manage schedules.

1 In the home screen, [APPS] ▶ [Schedule]

- If the confirmation screen for the license agreement is displayed, check the content and select [同意する] (Agree).

2 Check schedules



1 Selected date, name of holiday

2 Registered schedule

- The number of registered items is displayed.

3 Schedules for selected date

4 Create new schedule

- The method for registering schedules is the same as creating memos (📖 P. 62 “Memo”).

5 Switch displays

- Switch display methods of the calendar.

6 Conditions

- Set conditions of schedules to be displayed. Also, you can search for schedules.

7 Jump to any date

Setting Schedule

1 In the schedule screen, [≡] ▶ [Settings]

2 Select an item

- “Today’s schedule” setting: Set to notify the schedules of the day at the specified time.
- Alarm: Make settings for the alarm.
- Initial screen: Set a screen shown when Schedule is activated.
- Starting day: Set the starting day of a week on the calendar.
- Update birthday data: Apply birthday data in the phonebook to the calendar.
- Change account: Set an account used when creating schedules.
- Cloud setting: Set whether to use cloud computing.

Deleting a schedule

1 In the schedule screen, touch and hold a schedule




2 [Delete one] ▶ [Delete]

Memo

Create and manage memos.

- 1 In the home screen, [APPS] ▶ [Memo] ▶ [Add]
 - If the confirmation screen for the license agreement is displayed, check the content and select [同意する] (Agree).
- 2 Set each item

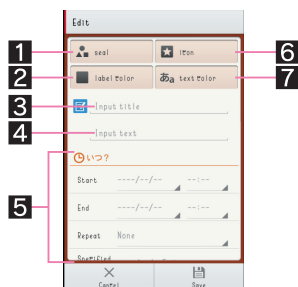

1 Sticker

- You can paste and remove stickers (Deco-mail pictogram/pictogram) which decorate memos nicely.

2 Label color

- Change label colors.

3 Title

4 Text

5 Edit details

- You can set the details such as date and time or attach images.

6 Icon

- Change icons.

7 Text color

- Change text colors of the title.

3 [Save]

Calculator

- 1 In the home screen, [APPS] ▶ [Calculator]
- 2 Calculate

- When Calculator is closed, its memories are deleted.
- Results or history information may be deleted while Calculator is activated in the background.

SH tool

You can use convenient functions such as voice recorder, business card reader, bar code reader and dictionaries.


- For details on AV Device Link P. 84 “Cooperating with Blu-ray Disc recorder”
- For details on Contents Manager P. 77 “Contents Manager”

Voice recorder

- You cannot record when the available space on the handset memory is less than 300 KB.

- 1 In the home screen, [APPS] ▶ [SH tool] ▶ [Recommendation] ▶ [Voice Recorder]

2 Record/Play

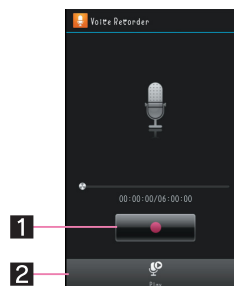

1 Operation key

- The following operations are available with displayed keys.
 - To start recording: [●] *1
 - To stop recording: [■] *2
- *1 Recording start sound is heard and recording starts.
*2 Recording stop sound is heard and recorded data is saved.

2 Play

- Display recorded data as a list. Select one of them to play it.
- If you touch immediately after recording, the data which has just been recorded is played.

- Recording start and stop sounds are activated regardless of the setting of the handset.
- Recording automatically stops when recording time reaches the maximum or when the handset memory has no available space.
- When a call is received during recording, recording stops, recorded data is automatically saved and the call can be answered. After the call ends, the screen indicating that the data has been saved appears.
- When a call is received during playing, playing is automatically paused and the call can be answered. After the call ends, the playback screen appears with the data pausing.

Pedometer

Support everyday walking and jogging with the pedometer. The number of steps, calories burnt, etc. are saved as history. You can check them as graph.

- Register User Information and enable [Pedometer On] in advance.
- If vibration or shake is applied to the handset by the vibrator etc., the number of steps may not be counted correctly.
- Counted number of steps may not be displayed correctly depending on how to carry the handset, measure the number of steps or walk.
- When carrying the handset in Carry Case 02 (sold separately), put the Carry Case 02 on a belt etc.
- When carrying the handset in a bag or pouch, place it in a stable space such as in a pocket or compartment.

- 1 In the home screen, [APPS] ▶ [SH tool] ▶ [Recommendation] ▶ [Pedometer/ calories]

- The confirmation screen is displayed only when the pedometer settings have not been finished. Select [Yes] and finish the pedometer settings.

- The number of your first steps made for approximately 4 seconds is counted, but it will not be displayed as counted steps. Keep walking, and then the total number of steps including it will be displayed as counted steps.

Cautions when counting the number of steps

In the following cases, the number of steps may not be counted correctly.

- When the handset shakes irregularly
 - When a bag etc. which contains the handset shakes irregularly by hitting legs or hip
 - When you are dangling the handset from your waist, bag, etc.
- When you walk irregularly
 - When you walk with your feet sliding or when you walk irregularly wearing sandals, geta, slippers, etc.
 - When a disarray of walk occurs such as by walking in the crowded place
- When the handset is used in a place with up-and-down movement or frequent vibration
 - When you stand up or sit down
 - When you play sports other than walking and jogging
 - When you walk up/down stairs or steep slope
 - When the handset is being wobbled in a vehicle (bicycle, car, train, bus, etc.)
- When you walk extremely slowly

Pedometer setting

You can make settings for the pedometer such as User Information.

- To enable [Pedometer On], register User Information in advance.

1 In the home screen, [APPS] ▶ [SH tool] ▶ [Recommendation] ▶ [Pedometer/ calories]

2 [] ▶ [Settings]

3 Select an item

- **Pedometer On:** Set whether to use the pedometer.
- **User Information:** Register height, weight and step length.
- **Pedometer Reset Time:** Set time to reset the pedometer.

- When [Pedometer On] is enabled, the number of steps is always counted while the power is turned on.
- The display of the pedometer is reset once a day at the time set for [Pedometer Reset Time].

Business card reader

You can scan information such as name or phone number from a business card (Japanese/English) with the camera and save it to the phonebook.

1 In the home screen, [APPS] ▶ [SH tool] ▶ [Reading] ▶ [Read business card.]

- To adjust the brightness: Slide your finger up/down

2 Display a business card in the center of the screen ▶ [Read]

- The shutter sounds.
- Hold the handset securely to fit the entire business card within the frame displayed on the screen. Make sure that no other objects, especially text-written objects, are displayed on the screen.
- Keep the camera approximately 10 cm away from the business card.
- As for scanning, the direction of the business card can be either vertical or horizontal on the screen. Do not place the card obliquely.

3 [Recognition]

4 [Add to Address book]

- To copy the scan result: [] ▶ [Copy All]

5 Select to which account to register ▶ [OK]

- The shot card image is automatically saved.

6 [No]

- To edit the registered contact: [Yes] ▶ edit the contact

- Some business cards cannot be scanned or recognized properly.

Bar code reader

You can use the camera to scan bar codes (JAN/QR codes), and perform various operations according to the contents of scanned item.

JAN code

- JAN code is a type of bar code using vertical bars with varying widths to express numbers.
- JAN8 and JAN13 can be scanned.

QR code

- QR code is a type of two-dimensional code expressing data vertically and horizontally.

1 In the home screen, [APPS] ▶ [SH tool] ▶ [Reading] ▶ [Read barcode.]

- To adjust the brightness: Slide your finger up/down

2 Scan the bar code

- The bar code reader screen appears and scanning starts. Display bar code to be scanned in the center of the screen.
- Position the camera approximately 10 cm right away from the bar code. Keep the bar code and handset as stationary as possible to make it easy for the bar code to be recognized.
- When scanning is complete, an end tone sounds and the scan result screen appears.

Split data

- QR codes include one which forms a single data after split multiple data (up to 16) are scanned. Repeat the scanning operation until all split data are scanned and a scan result appears.

3 Use the scan result

- When you have scanned a phone number, URL or mail address, touch the scan result to use it.
- To register the scan result: [] ▶ [Entry data]
 - In the bar code reader screen, [] ▶ [Confirm data] ▶ select data to confirm the registered scan result.
- To copy the scan result: [] ▶ [Copy All]

- Some bar codes may not be scanned depending on types or sizes.
- Bar codes may not be scanned due to scratches, dirt, damage, poor print quality, lighting conditions or QR code version.

Store information reader

You can scan information such as store name or phone number from a magazine etc. by using the camera, and save it to the phonebook.

1 In the home screen, [APPS] ▶ [SH tool] ▶ [Reading] ▶ [Read retail directory.]

- To adjust the brightness: Slide your finger up/down

2 Display information in the center of the screen ▶ [Read]

- The shutter sounds.
- Hold the handset securely to fit necessary information within the screen. However, if the text gets too small, display a phone number, an address, etc. large enough to be scanned.

- Keep the camera approximately 10 cm away from necessary information.

3 [Recognition]

4 [Add to Address book]

- To copy the scan result: [E] ▶ [Copy All]

5 Select to which account to register ▶ [OK]

- The shot image is automatically saved.

6 [No]

- To edit the registered contact: [Yes] ▶ edit the contact

- Some information may not be scanned or recognized properly depending on the description of magazine etc.

Text reader

You can scan an article of newspaper, magazines, etc. by using the camera, and perform various operations.

1 In the home screen, [APPS] ▶ [SH tool] ▶

[Reading] ▶ [Read character.]

- To adjust the brightness: Slide your finger up/down

2 Display the text to scan on the screen ▶ [Shoot]

- The shutter sounds.

3 Point the cursor to the line to scan with [▲]/

[▼] ▶ [Read]

- When characters written in vertical direction are recognized: [◀]/[▶]
- The line to which the cursor is pointed is displayed in light blue frame.

4 [OK]

- To change scanning modes: [E] ▶ select a mode

5 Use the scan result

- To copy the scan result: [Copy All]
- When you have scanned a phone number, URL or mail address, touch the scan result to use it.
- To scan characters continuously: [E] ▶ [Read next] ▶ scan characters
- To insert a line feed and scan characters additionally: [E] ▶ [Read more] ▶ scan characters
- To search in dictionaries: [E] ▶ [Search dictionary] ▶ select an app ▶ search in dictionaries
- To edit the scan result: [E] ▶ [Edit] ▶ edit the characters

- Text may not be scanned correctly due to scratches, dirt, damage, poor print quality, lighting conditions or text size.

Dictionary

Enter the keyword and search in the built-in or online dictionaries.

- By default, the following e-dictionaries are preset on the handset (Part of the dictionaries may differ from printed versions due to computerization).

■ 明鏡国語辞典MX 第二版 (Meikyo Japanese Dictionary MX (2nd edition))

Containing approximately 64,000 words centered around frequently used modern language. Wide range of new words and information on wrong use are added.

■ ジーニアス英和辞典MX 増補版 (Genius EJ Dictionary MX (expanded edition))

A major English-Japanese dictionary, which is convenient for reading newspapers, magazines and various articles. New words and technical terms are added. Containing approximately 202,000 words.

■ ジーニアス和英辞典MX 第2版 (Genius JE Dictionary MX (2nd edition))

A full-fledged words Japanese-English dictionary, which contains approximately 67,000 words centered around modern language and 84,000 examples for usage of words. Also it contains wide range of proper nouns such as place names and personal names.

(“明鏡国語辞典MX 第二版” ©KITAHARA Yasuo and Taishukan, 2012, “ジーニアス英和辞典MX 増補版”, “ジーニアス和英辞典MX 第2版” ©MINAMIDE Kosei, NAKAMURA Mitsuo and Taishukan, 2012)

- “百科事典” (Encyclopedia), an online dictionary, is available by default.

1 In the home screen, [APPS] ▶ [SH tool] ▶ [Dictionary] ▶ [Japanese dictionary]/ [English-Japanese dictionary]/ [Japanese-English dictionary]/[Net dictionary]

2 Search

- An English-Japanese dictionary is used in the following screen.



1 Dictionary icon

- Display the dictionary you use now.
- Touch it to switch the dictionaries to use.

2 Switching input mode

- Touch it to switch input modes.

3 Word card/Setting

- When you use a built-in dictionary, the registered word cards are displayed.
- When you use an online dictionary, you can set the search method.

4 Search keyword entry field

- Enter a keyword to search with.
- When you use a built-in dictionary, search results are displayed every time a character is entered.
- When you use an online dictionary, enter the keyword ▶ [Search] to display search results.

5 Home

- Search for a new word.

6 Switch dictionary

- Switch the dictionaries to use.

7 History

- Display the words you have searched before.

8 Word test/Manage

- When you use a built-in dictionary, word test based on the word cards you have registered in the search result screen is available.
- When you use an online dictionary, you can manage it.

3 Select a search result

- To register the search result as a word card: [Add word card]

microSD backup

You can collectively back up/restore data saved on the handset memory.

- The following data can be backed up/restored using microSD backup.
 - Phonebook
 - SMS
 - Bookmark
 - Calendar
 - User/Learning dictionary (iWnn IME - SH edition)
- During microSD backup, [Airplane mode] is enabled.
- When the available space on the handset memory is less than 11 MB, microSD backup is not available.
- Insert a microSD Card in advance.

Saving backup file

- 1 In the home screen, [APPS] ▶ [Settings] ▶ [Storage] ▶ [microSD backup]
- 2 [Backup] ▶ enter the passcode ▶ [OK]
- 3 Select the data categories to save
 - If you select [Address Book], the screen for selecting which account to save is displayed.
- 4 [Save] ▶ [Yes]
- 5 [Complete]

● You cannot save the data when the battery level is insufficient.

Restoring backup file

- 1 In the home screen, [APPS] ▶ [Settings] ▶ [Storage] ▶ [microSD backup]
- 2 [Restore] ▶ enter the passcode ▶ [OK]
- 3 Select backup files to restore
- 4 [Add registration]/[Delete and register]
 - The confirmation screen appears. Follow the instructions on the screen and operate after this step.

● You cannot restore the data when the battery level is insufficient.

● Note that, when you restore User/Learning dictionary (iWnn IME - SH edition) data, User/Learning dictionary (iWnn IME - SH edition) data saved on the handset memory is deleted even if you select [Add registration].

Setting/Managing backup file

- 1 In the home screen, [APPS] ▶ [Settings] ▶ [Storage] ▶ [microSD backup] ▶ [Management/Settings]
- 2 Select an item
 - **Organize backup files**: Delete saved backup data.
 - **Addr.book pic backup**: Set whether to back up images registered in a phonebook when backing up the phonebook.
 - **View result screen**: Display the latest result of saving/restoring backup files.

docomo backup

You can back up to/restore from “Data Storage Box” or “microSD Card”.

Backing up to/Restoring from Data Storage Box

You can move and back up data such as music data, bookmarks and call logs by using Data Storage Box.

- The following data can be backed up to/restored from Data Storage Box.
 - Music data
 - Bookmark
 - Call log
 - User dictionary

- 1 In the home screen, [APPS] ▶ [docomo backup]
 - If the confirmation screen for the license agreement is displayed, check the content and select [Agree].
 - If Backup reminder settings is displayed, check the content, follow the instructions on the screen and operate.

[Backup/restore to docomo cloud]

Backing up data to Data Storage Box

- 1 In the screen for backing up to/restoring from Data Storage Box, [Backup]
 - If the confirmation screen for login is displayed, follow the instructions on the screen and operate.
- 2 Select the data categories to save
- 3 [Start backup] ▶ [Backup]
- 4 Enter the docomo apps password ▶ [OK]
- 5 [Back to cloud top]

● When Backup reminder settings is set to [ON], the timing of backup is periodically displayed on the status bar.

Restoring data to the handset

- 1 In the screen for backing up to/restoring from Data Storage Box, [Restore]
 - If the confirmation screen for login is displayed, follow the instructions on the screen and operate.
- 2 [Select] of a data category to restore
- 3 Select a backup file ▶ [Select]
- 4 [Add]/[Overwrite]
- 5 [Start restore] ▶ [Restore]
- 6 Enter the docomo apps password ▶ [OK]
- 7 [Back to cloud top]

● When you restore data from Data Storage Box, data is restored to the save destination from which it was backed up. If you change models etc., data may be restored to a save destination different from the location from which it was backed up.

Backing up to/Restoring from a microSD Card

You can move and back up data such as phonebooks, docomo mails and bookmarks by using an external memory device such as a microSD Card.

- The following data can be backed up to/restored from a microSD Card.

- | | | |
|-----------------|-------------------|------------|
| ■ Phonebook | ■ docomo mail | ■ Image |
| ■ Video | ■ Music data | ■ Bookmark |
| ■ Call log | ■ User dictionary | ■ ToruCa |
| ■ Schedule/Memo | | |

- When a microSD Card is not inserted, images, videos, music data, etc. are saved on the handset memory. When you use Backup/restore to microSD, only the data saved on the handset memory are backed up. The data saved on a microSD Card are not backed up.

1 In the home screen, [APPS] ► [docomo backup]

- If the confirmation screen for the license agreement is displayed, check the content and select [Agree].
- If Backup reminder settings is displayed, check the content, follow the instructions on the screen and operate.

2 [Backup/restore to microSD]

- Do not remove the microSD Card from the handset while backing up or restoring data. Data on the handset may be damaged.
- When the battery level is insufficient, backup or restoration may not be available. In this case, back up or restore again after charging the handset.

■ Backing up data to a microSD Card

- Insert a microSD Card in advance.

1 In the SD card backup screen, [Backup]

2 Select the data categories to save

3 [Start backup] ► [Backup]

4 Enter the docomo apps password ► [OK]

5 [Back to top]

- When you back up phonebook to a microSD Card, you cannot copy phonebook data without name.
- When the available space on the microSD Card is insufficient, backup may not be available. In this case, secure enough space by deleting unnecessary files from the microSD Card.

■ Restoring data to the handset

- Insert a microSD Card that includes backup files created via Backup/restore to microSD in advance.
- When restoring phonebooks, you can also restore files created with PhoneBookCopy or with a function in an i-mode-enabled device which allows you to back up data to a microSD Card.

1 In the SD card backup screen, [Restore]

2 [Select] of a data category to restore

3 Select backup files ► [Select]

4 [Add]/[Overwrite]

5 [Start restore] ► [Restore]

6 Enter the docomo apps password ► [OK]

7 [Back to top]

■ Copying phonebook of Google account to docomo account

1 In the SD card backup screen, [Phonebook account copy]

2 [Select] of a phonebook of Google account

3 [Overwrite]/[Add] ► [OK]

- If the name of a phonebook item (phone number etc.) on other devices differs from that on your handset, the name of the item may be changed or deleted. Also, characters which can be registered to phonebook differ among devices, so the characters may be deleted at the copy destination.

Handset Settings

Setting menu

In the home screen, [APPS] ▶ [Settings] to display the menu and make various settings for the handset.

Profile	Display your phone number registered on the docomo mini UIM card and register a name, mail address, etc.
Call	Make settings for call such as voice mail and call rejection.
Sound	Make settings for the manner mode, ringtone, incoming lamp, etc.
Display	Make settings for the screen display etc.
Storage	Check the available space on a microSD Card, the handset, etc., manage the backup, etc.
Battery & energy saving	Activate Energy saving settings or Energy save standby, check the battery level, etc.
Useful	Make settings for Grip sensor/Recent Apps key or perform Self check.
Magical Theme Settings	Switch wallpapers, icons, etc. collectively according to the work theme.
Home applications	Switch lock screens or home apps to use.
Application	Check names, versions, memory usage, etc. of apps, enable/disable apps, uninstall them, etc.
Wi-Fi	Make settings for the Wi-Fi function.
Bluetooth	Connect the handset and Bluetooth devices wirelessly.
Data usage	Measure the volume of data communicated via mobile networks and display it on a diagram.
More...	Make settings for other functions in WIRELESS & NETWORKS.
docomo service/cloud	Make settings for the docomo service.
Location services	Make settings for the way to retrieve location information.
Lock & Security	Make settings for the security lock.
Language & input	Make settings for the language displayed on the screen, character entry, text-to-speech, etc.
Backup & reset	Perform Reset all or transfer data.
Add account	Add accounts.
Date & time	Make settings for the date and time and their format.
Accessibility	Make settings for accessibility options.
Device info	Check the information about the handset.

Profile

You can display your phone number registered on the docomo mini UIM card and register a name, mail address, etc.

1 In the home screen, [APPS] ▶ [Settings] ▶ [Profile]

2 [Edit] ▶ set each item ▶ [Save]

Sound

You can make settings for the manner mode, ringtone, incoming lamp, etc.

1 In the home screen, [APPS] ▶ [Settings] ▶ [Sound]

2 Select an item

- **Mode settings**: For details see P. 67 "Mode settings"
- **Volume**: Set the volume of the media playback sound, ringtone, etc.
- **For Incoming call**: Make settings for operations for when receiving calls.
 - To set the incoming lamp: [Incoming lamp] ▶ [Blinking pattern]/[Blinking color] ▶ select a type/color ▶ [OK]
- **For notification**: Make settings for operations for receiving notifications.
 - To make the notification lamp flash: [Pulse notification light]
- **Haptic feedback**: Set whether to activate the vibrator when a specific key operation etc. is carried out.
- **Audible touch tones**: Set whether or not to enable operation sounds for when touching menus etc.
- **Dial pad touch tones**: Set whether or not to enable dialing sounds.
- **Screen lock sounds**: Set whether or not to enable sounds for when locking/unlocking the touch panel.
- **Sound start charging**: Set whether to ring sounds when charging starts.

Mode settings

You can set to avoid disturbing others when in public.

1 In the home screen, [APPS] ▶ [Settings] ▶ [Sound] ▶ [Mode settings]

- Alternatively, (for at least 1 second) ▶ [Manner mode icon] to enable/disable the manner mode.

2 Select the type of the manner mode

- **Standard manner mode**: The ringtone and operation sound are silenced, and the vibrator is activated when receiving a call or others. When Answering memo setting is set to [Mannermode], the answering memo is enabled and operated according to its setting.
- **Drive manner mode**: The ringtone and operation sound are silenced, and even the vibrator is not activated when receiving a call or others. The answering memo is enabled and operated with Answering message setting set to [Drive(Mickey&Minnie)].
- **Silent manner mode**: The ringtone and operation sound are silenced, and even the vibrator is not activated when receiving a call or others. When Answering memo setting is set to [Mannermode], the answering memo is enabled and operated according to its setting.
- **OFF**: Disable the manner mode.

- The following sounds are not silenced even when the manner mode is set.

- Shutter sound of the camera
- Focus locking sound of the camera
- Record start/end sound of the video camera
- Record start/end sound of the voice recorder
- Media playback sound (music, video, Mobacas, TV, etc.)

- While the manner mode is set, the ringtone volume cannot be changed by touching [Volume Up]/[Volume Down].

Display

You can make settings for the screen display etc.

1 In the home screen, [APPS] ▶ [Settings] ▶ [Display]

2 Select an item

- **Wallpaper**: Set an image for the home screen.
- **Welcome Sheet(lock screen)**: Make settings for the screen displayed when the touch panel is locked. For details on the settings P. 16 “Welcome Sheet settings”
- **Screen edge effect**: Make settings for the effect on edges of the screen shown when the display is turned on.
- **Brightness**: For details P. 68 “Brightness”
- **Screen timeout**: Set the light duration of the backlight.
- **Quality mode**: Make settings for the picture quality.
- **Auto-rotate screen**: Set whether to switch the screen to horizontal/vertical display when rotating the handset 90° to the left/right.
- **Bright Keep**: Set whether to make the display not turned off while holding the handset with your hand.
 - When Bright Keep is set to [ON (Notify)], is displayed on the status bar.
- **Sweep ON**: Set whether to turn the display on by sliding the touch panel while the display is turned off.
- **Font Settings**: Make settings for the text size or text font.
- **VeilView**: For details P. 68 “VeilView”
- **Stand Animation**: Set whether to play animation when you place the handset on Magic Mirror Stand (sample).
- **Daydream**: Set whether to use the screen saver.
- **Display left percents of Battery**: Set whether to display the percentage of the remaining battery level in the status bar.

[Welcome Sheet(lock screen)]

- You can set it only when [Feel UX] is selected in Batch change lock screen/ home application.

[Screen timeout]

- Note that the continuous stand-by time is shortened when increasing the light duration.

[Auto-rotate screen]

- Auto-rotate screen may not follow the setting depending on the app in use.

[Bright Keep]

- If you do not move or operate the handset for a certain period of time, the display may be turned off even while you are holding the handset with your hand.
- When you place the handset on a place parallel to the ground, the display is turned off regardless of the setting of Screen timeout.

[Font Settings]

- Font may not appear correctly when activating an app downloaded from Google Play etc.

[Stand Animation]

- When you place the handset on Magic Mirror Stand horizontally while the display is turned on and Screen lock is disabled, animation is played once.
To play animation again, turn the display off and place it on Magic Mirror Stand in the same way.
 - Animation may not be played depending on how to place the handset or the running app.
 - Animation may be played even when the handset is not placed on Magic Mirror Stand.

Brightness

1 In the home screen, [APPS] ▶ [Settings] ▶ [Display] ▶ [Brightness]

2 Select an item

- **Outdoor view**: Set whether to adjust brightness of the backlight in a bright place.
- **Automatic brightness**: Set whether to automatically adjust brightness of the backlight. When not automatically adjusting, set the brightness manually.
- **Eco backlight control**: Save the electricity consumption of the backlight by adjusting the picture quality efficiently.

3 [OK]

[Automatic brightness]

- Note that the continuous stand-by time is shortened when increasing the brightness of the screen.

[Eco backlight control]

- The color may differ by adjusting the picture quality.

VeilView

You can prevent others from seeing the display.

1 In the home screen, [APPS] ▶ [Settings] ▶ [Display] ▶ [VeilView]

2 Select an item

- **VeilView**: Set whether to enable VeilView.
- **Switching by motion**: Set whether to make VeilView able to be enabled/disabled by putting your hand over the upper part of the display side for approximately 2 seconds.
- **Pattern setting**: Set the display pattern.
- **Improve appearance**: Make an adjustment for how the display looks like when it faces you.

[VeilView]

- [VeilView] is disabled if the power is turned off.

[Switching by motion]

- Note that this function may be operated in the following cases.
 - When the upper part of the display side is covered while you are carrying the handset in a bag, pocket, etc.
 - When you put the handset with the display side turned down
 - When you place an object on the upper part of the display side
- This function may not be operated on horizontal display, during a call, etc.

[Pattern setting]

- The effect of preventing others from seeing may differ depending on the selected patterns.

Storage

You can check the available space on a microSD Card, the handset, etc., manage the backup, etc.

1 In the home screen, [APPS] ▶ [Settings] ▶ [Storage]

2 Select an item

- **Mount microSD/Unmount microSD**: Mount/Unmount the microSD Card.
- **Erase microSD**: Format the microSD Card.
- **Unmount USB memory**: Unmount the USB memory.
- **File Management**: Manage data saved on the USB memory etc.
- **microSD backup**: For details P. 65 “microSD backup”

- Precautions about inserting and removing a microSD Card are displayed every time the handset power is turned on.

[Mount microSD], [Unmount microSD]

- Unmount the microSD Card and turn off the power before inserting/removing the microSD Card.

[Erase microSD]

- Note that all the data on the microSD Card will be deleted when formatted.

[Unmount USB memory]

- Unmount the USB memory before removing it.

USB connection

You can change the settings for connecting the handset to a PC using Micro USB Cable 01 (sold separately).

1 In the home screen, [APPS] ▶ [Settings] ▶ [Storage] ▶ [≡] ▶ [USB connection]

2 Select an item

- **MTP mode:** This is a mode for transferring data to the handset memory or a microSD Card using a PC compatible with MTP.
- **PTP mode:** This is a mode for transferring still pictures to the handset memory using a PC compatible with PTP.
- **Card reader mode:** This is a mode for using a microSD Card inserted into the handset as an external memory for a PC.

- When you transfer a great deal of data, the transference may be interrupted. In this case, split the data into several files and send them separately.

Battery & energy saving

You can activate Energy saving settings or Energy save standby, check the battery level, etc.

1 In the home screen, [APPS] ▶ [Settings] ▶ [Battery & energy saving]

2 Select an item


- **Energy saving settings:** For details ⓘ P. 69 “Energy saving settings”
- **Energy save standby:** For details ⓘ P. 69 “Energy save standby”
- **Battery:** Visually check changes in the remaining battery level, battery consumption level, etc.

Energy saving settings

You can activate Energy saving settings. You can also set to switch to Energy save according to the battery level and the time.

1 In the home screen, [APPS] ▶ [Settings] ▶ [Battery & energy saving] ▶ [Energy saving settings]

2 Set

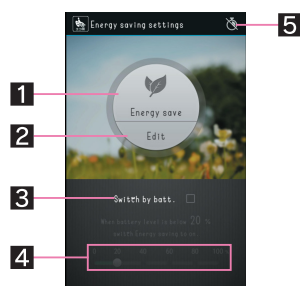

1 Energy save

- Switch to Energy save.

2 Edit

- Set the functions to save energy for individually such as Energy saving standby and Energy saving Wi-Fi.

3 Switch by batt.

- Set whether to switch to Energy save when the battery level reaches the specified level.

4 Battery level to switch

- Set the battery level to switch to Energy save at.

5 Switch time

- Set whether to switch to Energy save when specified time arrives.

- When Energy saving standby is set to [ON], it controls the apps that operate in the background while the display is turned off.

- The apps that communicate periodically may not start the communication even if Energy saving standby is set to [OFF]. In this case, set the corresponding app again.

- When Energy saving Wi-Fi is set to [ON], some apps may not be able to connect to the other party's device properly.

When [Energy save] is enabled by Switch by batt.


- [Energy save] is not disabled even when the time set for Switch time arrives.
- [Energy save] is disabled when the battery level exceeds the battery level to switch.
- [Energy save] is not disabled even if [Switch by batt.] is disabled.

Energy save standby

You can control the apps that operate in the background while the display is turned off.

1 In the home screen, [APPS] ▶ [Settings] ▶ [Battery & energy saving] ▶ [Energy save standby]

2 Set

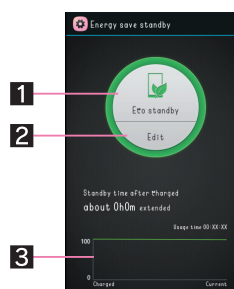

1 Eco standby

- Switch to Eco standby.

2 Edit

- Set apps to control.

3 Battery usage status

- Visually check changes in the remaining battery level, battery consumption level, etc.

Useful

You can make settings for Grip sensor/Recent Apps key or perform Self check.

1 In the home screen, [APPS] ▶ [Settings] ▶ [Useful]

2 Select an item

- **Grip sensor:** For details ⓘ P. 70 “Grip sensor”

- **Recent apps key:** Set a function to use when you touch [RECENT APPS]. For details P. 17 “Operation while using function”
- **Self check:** For details P. 70 “Self check”

Grip sensor

You can make settings for Grip sensor.

- 1 In the home screen, [APPS] ▶ [Settings] ▶ [Useful] ▶ [Grip sensor]
- 2 Slide [OFF] to the right
- 3 Select an item
 - **Operation when you hold the phone:** Set the screen displayed when you hold the handset while the display is turned off.
 - **Volume down for incoming calls:** Set whether to minimize the ringtone/alarm volume and activate the vibrator by holding the handset during an incoming call or while the alarm of the “Alarm/Clock” app is ringing.
 - **Deterrence rotate screen:** Set whether to keep the screen displayed vertically while holding the handset.
 - **Sensitivity setting:** Set the sensitivity of Grip sensor.
 - **Video tutorial:** Check how to use Grip sensor.

[Deterrence rotate screen]

- Deterrence rotate screen may not follow the setting depending on the app in use.

[Sensitivity setting]

- When you set Sensitivity setting to [Strong(while putting cover on)], equip the handset with a case or cover in advance.

Self check

You can perform Self check of the handset.

- 1 In the home screen, [APPS] ▶ [Settings] ▶ [Useful] ▶ [Self check]
- 2 [Start checking] ▶ select items ▶ [Next]
 - To restart the handset in safe mode: [Reboot with safe mode] ▶ [OK]
 - Touch [?] of an item to display help about the diagnosis.
- 3 [Next]
 - To make a diagnosis on a displayed item: [Start diagnosis]
 - To stop a diagnosis: [Cancel] ▶ [Next item]/[Yes]
 - Touch the history items of the diagnoses to check the results.

Application

You can check names, versions, memory usage, etc. of apps, enable/disable apps, uninstall them, etc.

- 1 In the home screen, [APPS] ▶ [Settings] ▶ [Application]
- 2 Select an app

■ Disabling an app

Terminate operations of an app and set it not to be displayed on the app screen without uninstalling it.

- You can disable apps which cannot be uninstalled.

- 1 In the home screen, [APPS] ▶ [Settings] ▶ [Application]
- 2 Select an app ▶ [Disable] ▶ [OK]

- If you disable an app, other apps which link up with the disabled app may not work properly. In this case, enable the app.


■ Enabling an app

- 1 In the home screen, [APPS] ▶ [Settings] ▶ [Application]
- 2 Select an app ▶ [Enable]

Data usage

You can measure the volume of data communicated via mobile networks and display it on a diagram. Also, you can set the handset to give you a warning or make data communication no longer available once the communication volume reaches its set limit.

- 1 In the home screen, [APPS] ▶ [Settings] ▶ [Data usage]
- 2 Check the data communication volume

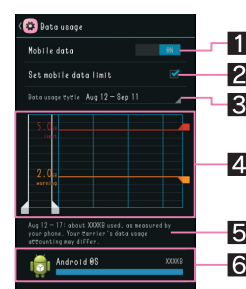

1 Mobile data

- Set whether to use data communication.

2 Set mobile data limit

- Set the limit on the data communication volume and suspend data communication once the limit is reached.
 - In the data usage screen, [≡] ▶ [Background restrictions] ▶ [OK] to restrict data communications made by apps running in the background.

3 Data usage cycle

- Set the date on which the display of the data communication volume will be reset.

4 Diagram

- Display the data communication volume.
- Warning line or limit line can be set.

5 Data communication volume during a set period

6 App having used data communication

Synchronizing data

You can synchronize data between the handset and online services. You can access the same personal information as those stored in online services from the handset and PC, and you can use and update data by synchronizing them.

■ Automatic synchronization

Set whether to automatically synchronize items set in each account.

- In the home screen, [APPS] ▶ [Settings] ▶ select an account type ▶ select an account to set items to be automatically synchronized.

- 1 In the home screen, [APPS] ▶ [Settings] ▶ [Data usage]
- 2 [≡] ▶ [Auto-sync data] ▶ [OK]

- Register a Google account in advance when you synchronize the phonebook of the handset memory with contacts on the online services even if you synchronize with an account other than Google account.

Manual synchronization

- When Auto-sync data is disabled, you can synchronize selected items manually.

1 In the home screen, [APPS] ▶ [Settings] ▶ select an account type ▶ select an account

2 Select items to be synchronized

More

You can make settings for other functions in WIRELESS & NETWORKS.

1 In the home screen, [APPS] ▶ [Settings] ▶ [More...]

2 Select an item

- **Airplane mode**: Restrict the use of some functions using communication such as call/mail function.
- **Tethering**: For details ⓘ P. 23 “Tethering”
- **NFC/Osaifu-Keitai settings**: For details ⓘ P. 49 “NFC/Osaifu-Keitai settings”
- **Wireless output(Miracast)**: For details ⓘ P. 84 “Wireless output (Miracast)”
- **FM transmitter**: For details ⓘ P. 84 “FM transmitter”
- **Home network settings**: For details ⓘ P. 83 “Home network settings”
- **VPN settings**: Make settings for VPN. For details ⓘ P. 85 “Adding VPN”
- **Mobile networks**: Make settings for use overseas. For details ⓘ P. 86 “Settings for use overseas”

[Airplane mode]

- When [Lock SIM card] is enabled, you cannot call to the emergency number (110, 119 or 118). When [Lock SIM card] is disabled, you can call to the emergency number (110, 119 or 118) even in Airplane mode. If you call to the emergency number, [Airplane mode] is disabled and the call is made.
- The Wi-Fi and Bluetooth function can be set to [ON] even when [Airplane mode] is enabled.

docomo service/cloud

You can make settings for the docomo service.

1 In the home screen, [APPS] ▶ [Settings] ▶ [docomo service/cloud]

2 Select an item

- **docomo ID設定** (Set docomo ID): Set a docomo ID.
- **docomo cloud**: Make settings for docomo cloud.
- **Application manager**: Make settings for the confirmation for updating apps etc.
- **docomo apps password**: Set a password to use for apps DOCOMO provides.
- **AUTO-GPS**: Make settings for AUTO-GPS.
- **docomo location information**: Make settings for the location information service function.
- **Send device error information**: Set whether to send error information to the server.
- **Remote Initialization Service**: Make settings to use services which enable you to collectively delete data on the handset etc. by remote control.

- **Profile setting**: Check or change your profile used in the docomo service.
- **Open source licenses**: Display the open source licenses.

- Some apps displayed in docomo service/cloud can be disabled. The disabled apps may not be displayed in docomo service/cloud.
- When you newly download apps provided by DOCOMO, the downloaded apps may be displayed in docomo service/cloud.

[docomo apps password]

- docomo apps password is set to [0000] by default.

Location services

You can make settings for the way to retrieve location information.

1 In the home screen, [APPS] ▶ [Settings] ▶ [Location services]

2 Select an item

- **Access to my location**: Set whether to permit the use of location information.
- **Use GPS satellites**: Measure location information via GPS satellites.
- **Wi-Fi & mobile network location**: Measure location information via a Wi-Fi access point or base station for mobile phones.

- It is necessary to set Access to my location to [ON] to measure the present location. Some apps require that settings be made for location information by using the apps.

[Use GPS satellites]

- Power consumption of the handset increases.

Lock & security

You can make settings for the security lock.

1 In the home screen, [APPS] ▶ [Settings] ▶ [Lock & Security]

2 Select an item

- **Screen lock**: Make settings for the unlock method of the touch panel for when the power or display is turned on.
- **NFC screen-unlock settings**: Make settings for unlocking the screen lock via NFC.
- **Owner info**: Make settings for the owner's information to be displayed on the lock screen of the touch panel.
- **Application lock**: For details ⓘ P. 72 “Application lock”
- **Secrecy settings**: For details ⓘ P. 72 “Secrecy settings”
- **Contacts data access monitor**: Restrict apps or services which use the phonebook information.
- **Set up SIM card lock**: For details ⓘ P. 73 “Setting up SIM card lock”
- **Encrypt phone**: For details ⓘ P. 73 “Encrypting phone”
- **Visible passwords**: When you enter the PIN code etc., you can display the entered characters before they turn into [·].
- **Device administrator**: Set whether to authorize a device administrator to manage devices.
- **Unknown sources**: Allow installation of apps received via websites other than Google Play, mails, etc.
- **Verify apps**: Prevent installation of apps which may cause damage or set whether to display the confirmation screen before installing apps.
- **Use secure credentials**: Allow access to secure certificates and other credentials.
- **Install from microSD**: Install encrypted certificates from a microSD Card.

- **Clear credentials:** Delete all credentials.

[Screen lock]

- If you enter wrong patterns, time during which you cannot enter the pattern gets longer according to how many times you have entered wrong patterns.
 - Five times in a row: 30 seconds
 - Ten times in a row: 1 minute
 - 15 times in a row: 15 minutes
 - 20 times in a row: 60 minutes

After you have entered wrong patterns 20 times or more in a row, you cannot enter the pattern for 60 minutes each time you enter wrong patterns five times in a row. If you enter the correct pattern, the count is reset.
- If you have set up your Google account and entered wrong patterns five times in a row, [Pattern reminder] is displayed. Unlock the touch panel by signing in with your Google account and set a method for unlocking the touch panel again.
- The following items can be set.
 - None: The lock screen of the touch panel is not displayed.
 - Slide or Touch: Set the touch panel to be unlocked by sliding [🔒]. When the lock screen is switched, touch [🔓] to unlock.
 - Face Unlock: Set the touch panel to be unlocked by using the face recognition function.
 - Pattern: Set a pattern which forms by linking four or more dots.
 - Lock No.: Set four- to sixteen-digit number.
 - Password: Set four to sixteen alphanumeric or half-width symbols including at least one alphabet.
 - Some half-width symbols are not available.
- The following items in Lock & Security may be displayed/hidden depending on the settings in Screen lock.
 - Improve face matching: Detect the face again over which face recognition (Face Unlock) is to be carried out.
 - Liveness check: Set to unlock the screen by blinking your eyes when face recognition (Face Unlock) is carried out.
 - Make pattern visible: Display tracks of the entered pattern with line.
 - Automatically lock: Set how long it takes the touch panel to be locked.
 - Power key to lock instantly: Set whether to lock the touch panel regardless of the time set in Automatically lock when you turn off the display by pressing [🔑].

[Unknown sources]

- Apps you download from the websites may be of unknown origin. To protect your handset and personal data, download apps only from trusted sources such as Google Play.

[Use secure credentials]

- If you delete a certificate, you cannot refer to the certificate from [Use secure credentials] but it can be referred to from other functions. If you want to delete the certificate completely, carry out Clear credentials.

[Clear credentials]

- Settings for VPN are also deleted.

Application lock

- 1 In the home screen, [APPS] ▶ [Settings] ▶ [Lock & Security] ▶ [Application lock]
- 2 Enter the passcode ▶ [OK]
- 3 Select an item
 - **Restrict calls:** Restrict making calls.
 - **Make pattern visible:** Display tracks of the entered finger list with line.
 - **Haptic feedback:** Activate vibration on entering the finger list, passcode and password.
 - **Change security key:** For details 📖 P. 73 “Changing security key”

- If you have set any restriction, you need to enter the security key to temporarily disable the restriction.

[Restrict calls]

- You can call to the emergency number (110, 119 or 118) even when you set Restrict calls.

Secrecy settings

You can set contacts in the phonebook not to be displayed in the phonebook, outgoing/incoming call history, etc. by setting the secrecy setting for the contacts.

- When you temporarily disable the secret mode, both normal contacts and contacts for which the secrecy setting is set are displayed.
- If the display is turned off while the secret mode is temporarily disabled, the secret mode is activated.

- 1 In the home screen, [APPS] ▶ [Settings] ▶ [Lock & Security] ▶ [Secrecy settings]
- 2 Enter the passcode ▶ [OK]
 - The secret mode is temporarily disabled.
- 3 Select an item
 - **Set contact secrecy:** Set the secrecy setting for contacts in the phonebook.
 - **Disable secret mode temporarily:** Make settings for temporary cancellation of the secret mode.
 - **Guide:** Display how to temporarily disable the secret mode and explanation for contacts in the phonebook for which the secrecy setting is set.

Disabling the secret mode temporarily

- 1 Drag the status bar down
- 2 Touch and hold [🔒]
- 3 Enter the passcode ▶ [OK]

Security codes used on the handset

Some functions for convenient use of the handset require security codes. In addition to security code used for various handset operations, use security codes such as the network security code when using network services. Use security codes with various functions to fully utilize the handset.

- Entered security code for various functions and PIN code turn into [·].

Precautions about various security codes

- Do not use easily predictable numbers for security codes to be set such as “birthday”, “part of a phone number”, “address or room number”, “1111” or “1234”. Keep a separate memo of security codes.
- Keep security codes private. If the security codes are found and improperly used by others, DOCOMO shall not be liable for any damages incurred on the users.
- If you forget your security codes, you are required to bring your identification (a driver’s license etc.), your handset and your docomo mini UIM card to a docomo Shop. For details, contact the number listed in “General Inquiries” on the last page.
- PUK (PIN Unlock Key) is described in the agreement form (customer copy) you received at the time of subscription at a docomo Shop. If you made a subscription at a shop other than a docomo Shop, bring your identification (a driver’s license etc.) and your docomo mini UIM card to a docomo Shop or contact the number listed in “General Inquiries” on the last page.

■ Security key (security code for various functions)

If you set any restrictions, you need to enter the security key to temporarily disable them. [Passcode] ([0000]) is set as a security key by default but you can change it (☎ P. 73 “Changing security key”).

- If you enter wrong security keys five times continuously, you cannot enter it for 30 seconds.

■ Network security code

Network security code is a four-digit code required for confirming the subscriber’s identity when an order is received at a docomo Shop, docomo Information Center or “お客様サポート” (Support), used for accessing various network services, etc. You can set any code at the time of subscription but you can change the code.

- For details on network security code, refer to the DOCOMO website.

■ PIN code

A docomo mini UIM card has a security code called PIN code. This security code is set to [0000] by default but you can change the code (☎ P. 73 “Setting up SIM card lock”).

The PIN code is a four- to eight-digit security code that needs to be entered for recognizing the user of the handset every time a docomo mini UIM card is inserted or when a device is turned on to prevent unauthorized use of the docomo mini UIM card by a third party. Making/Receiving a call and the device operation are enabled by entering PIN code.

- Use the previously set PIN code when inserting a docomo mini UIM card that has been used in another device. It is [0000] if the setting has not been changed.
- If you enter wrong PIN codes three times continuously, it is locked and the docomo mini UIM card becomes unavailable. In this case, unlock with “PUK” (PIN Unlock Key).

■ PUK (PIN Unlock Key)

PUK (PIN Unlock Key) is an eight-digit number used to disable the PIN code lock. You cannot change the code.

- If you enter wrong codes ten times continuously, the docomo mini UIM card is completely locked. In this case, contact a docomo Shop.

Changing security key

- 1 In the home screen, [APPS] ▶ [Settings] ▶ [Lock & Security] ▶ [Application lock]
- 2 Enter the passcode ▶ [OK] ▶ [Change security key]
- 3 Select an item
 - **Finger list**: Set a pattern which forms by linking four or more dots.
 - **Passcode**: Set four- to sixteen-digit number.
 - **Password**: Set four to sixteen alphanumerics or half-width symbols including at least one alphabet.

Setting up SIM card lock

You can make settings for the PIN code.

- 1 In the home screen, [APPS] ▶ [Settings] ▶ [Lock & Security] ▶ [Set up SIM card lock]
- 2 Select an item
 - **Lock SIM card**: Set whether to enter the PIN code when the power is turned on.
 - **Change SIM PIN**: Change the PIN code.

- In Japan, you cannot make a call to the emergency number (110, 119 or 118) when a docomo mini UIM card is not inserted, while the PIN code is locked or from the PUK (PIN Unlock Key) entry screen.
- The setting is saved on the docomo mini UIM card.

Disabling PIN lock

- 1 In the PIN locking screen, enter PUK (PIN Unlock Key)
- 2 Enter a new PIN code
- 3 Enter the new PIN code again

Encrypting phone

You can encrypt data on the handset.

- If you encrypt data on the handset, the password entry screen for decrypting the storage is displayed every time the power is turned on. Enter the lock number or password set in Screen lock.
- Carry out Reset all to disable the encryption (☎ P. 74 “Resetting all”).
- Carry out the operations while charging the battery with its battery level still left sufficiently.
- Set Screen lock to Lock No. or Password in advance (☎ P. 71 “Lock & security”).

- 1 In the home screen, [APPS] ▶ [Settings] ▶ [Lock & Security] ▶ [Encrypt phone]
- 2 [Encrypt phone] ▶ enter the lock number/ password ▶ [Next]
- 3 [Encrypt phone]

- In the password entry screen for decrypting the storage, you cannot make a call to the emergency number (110, 119 or 118).
- Note that all data on the handset are deleted if the encryption is interrupted.

- If you enter wrong lock numbers/passwords ten or 20 times in a row when decrypting the storage, you cannot enter the lock number/password for 30 seconds. Note that if you enter wrong lock numbers/passwords 30 times in a row, the handset is initialized.

Language & input

You can make settings for the language displayed on the screen, character entry, text-to-speech, etc.

- 1 In the home screen, [APPS] ▶ [Settings] ▶ [Language & input]
- 2 Select an item
 - **Select language**: Select Japanese/English.
 - **Spell checker**: Set whether to use Spell checker.
 - **Personal dictionary**: Register any words in the dictionary and display them as conversion candidates when you enter characters with Google Keyboard.
 - **Default**: Set the input software to use when entering characters.
 - **Google Keyboard**: Make settings for Google Keyboard.
 - **Google voice typing**: Set whether to use Google voice typing.
 - **iWnn IME - SH edition**: Make settings for iWnn IME - SH edition. For details on each item that can be set ☞ P. 20 "Setting character entry"
 - **Moji-Henshu**: Set whether to use Moji-Henshu.
 - **Voice Search**: Make settings for the voice input.
 - **Text-to-speech output**: Make settings for the voice for reading the characters displayed on the handset.
 - **Pointer speed**: Set the speed of the pointer.
 - Touch [⌘] to set the details of each item.

- Text-to-speech is enabled by downloading voice data, accessibility option, etc.
- Voice data that is installed by default does not include Japanese.

Keyboard

- When you enter Japanese, use iWnn IME - SH edition.
- [Spell checker], [Personal dictionary]
- Japanese is not supported.

Backup & reset

You can perform Reset all or transfer data.

- 1 In the home screen, [APPS] ▶ [Settings] ▶ [Backup & reset]
- 2 Select an item
 - **Back up my data**: Set whether to automatically back up app data, Wi-Fi passwords, etc.
 - **Backup account**: Display a Google account whose information is backed up.
 - **Automatic restore**: Set whether to restore data such as settings when you re-install an app.
 - **Reset all**: For details ☞ P. 74 "Resetting all"
 - **Data transfer**: For details ☞ P. 74 "Data transfer"

Resetting all

You can erase all data on the handset memory.

- 1 In the home screen, [APPS] ▶ [Settings] ▶ [Backup & reset] ▶ [Reset all]
- 2 [Reset phone] ▶ enter the passcode ▶ [OK] ▶ [Erase everything]
 - You can also erase data on a microSD Card at the same time by enabling [Delete data in microSD as well.].

- The following data are erased.
 - Data that are created, saved or registered
 - Contents that are set in the "Settings" app
 - Downloaded apps
- If you erase an app installed by default, download it from the manufacturer's website. Check the product information on the following website.
<http://3sh.jp/> (in Japanese only)

Data transfer

You can import data or back up/restore data on the handset using a microSD Card. In addition, you can import phonebook data on other devices using the Bluetooth function.

- 1 In the home screen, [APPS] ▶ [Settings] ▶ [Backup & reset] ▶ [Data transfer]
 - Alternatively, in the home screen, [SHORTCUTS] ▶ [データ引継] (Data transfer) to activate it.
- 2 Select an item
 - **Data import**: Import data using a microSD Card or the Bluetooth function. For details on importing data from a microSD Card ☞ P. 65 "Restoring backup file"
 - **Save data to microSD**: Save data on a microSD Card. For details on saving data on a microSD Card ☞ P. 65 "Saving backup file"
 - **Function information**: Check how to use Data transfer.

Importing phonebook data using Bluetooth function

- 1 In the home screen, [APPS] ▶ [Settings] ▶ [Backup & reset] ▶ [Data transfer] ▶ [Data import]
- 2 Select the type of a device from which you import data
 - When the screen asking whether to use the backup data on the microSD Card is displayed, select [Import phonebook data from smartphone.].
- 3 [Next]
- 4 Enable the Bluetooth function of the device from which you import data ▶ [Next]
- 5 Select the device from which you import data ▶ [Start]
 - When the confirmation screen about the settings on pairing appears, select [Pair].
 - When the device from which you import data is Android, set the device to be displayed on the handset.
- 6 [Next]

7 [Add registration]/[Delete before registration] ▶ [OK]

- If you set up multiple accounts, the screen for selecting to which account to register is displayed.

8 [OK]

Date & time

You can make settings for the date and time and their format.

1 In the home screen, [APPS] ▶ [Settings] ▶ [Date & time]

2 Select an item

- **Automatic date & time**: Set whether to automatically adjust the date and time.
- **Auto timezone**: Set whether to use the time zone provided via a network.
- **Set date**: Set the date manually.
- **Set time**: Set the time manually.
- **Select time zone**: Set the time zone manually.
- **Use 24-hour format**: Switch 12-hour format/24-hour format.
- **Choose date format**: Set the date format to display.

When [Automatic date & time] is enabled

- If the handset does not adjust the time for a while after the power is turned on, turn off the power and restart it.
- Time may not be adjusted depending on the signal status.
- The clock may gain or lose a few seconds.

Accessibility

You can make settings for accessibility options.

1 In the home screen, [APPS] ▶ [Settings] ▶ [Accessibility]

2 Select an item

- **Magnification gestures**: Set whether to zoom in/out the screen by touching the display three times.
- **Large text**: Set whether to display fonts on the handset in large size.
- **Power button ends call**: Set whether to end a call by pressing .
- **Auto-rotate screen**: Set whether to switch the screen to horizontal/vertical display when rotating the handset 90° to the left/right.
- **Speak passwords**: Set whether to use voice output for passwords.
- **Accessibility shortcut**: Set whether the accessibility functions can be enabled quickly.
- **Text-to-speech output**: Make settings for the voice for reading the characters displayed on the handset.
- **Touch & hold delay**: Set how long you need to keep touching.
- **Enhance web accessibility**: Set whether to permit to install web scripts.

Device info

You can check the information about the handset.

1 In the home screen, [APPS] ▶ [Settings] ▶ [Device info]

2 Select an item

- **Build number**: Check the build number.
- **Status**: Check the battery level, network in use, etc.
- **Adjust touch panel**: Adjust the touch panel.
- **Adjust sensitivity of sensor**: Adjust the accuracy of retrieval by the motion sensor and geomagnetic sensor.
- **Software update**: For details  P. 92 “Updating software”
- **Upgrade Android software**: Upgrade the Android version. For details  P. 94 “Android version upgrade”
- **Legal information**: Check copyright notice, terms of service, etc.
- **Authentication**: Check information such as the certification of conformity with technical regulations.
- **Model number**: Check the model number.
- **Android version**: Check the Android version.
- **Baseband version**: Check the baseband version.
- **Kernel version**: Check the kernel version.

[Adjust touch panel]

- Do not touch the touch panel (display) or , while [DO NOT TOUCH the display.] is displayed. The adjustment may be failed since the sensitivity adjustment for the whole touch panel is being performed.

[Adjust sensitivity of sensor]

- Make the adjustment approximately 10 seconds after the adjustment screen appears.
- Adjustment may be failed depending on surroundings or other simultaneously running apps. Change the place where you make adjustment, end running apps, etc.

Storage structure

Handset memory (internal storage)

Default folder structure of the handset memory and types of data to be saved in each folder are as follows.

Alarms	Alarm tones etc. are saved.
Android	Temporary files etc. of installed apps are saved.
DCIM	Still pictures and videos shot with the handset are saved.
Download	Files downloaded on the browser are saved.
galapagos	Information on メーカーアプリ (maker appli) is saved.
Movies	Videos etc. are saved.
Music	Music data etc. is saved.
Notifications	Notification sounds etc. are saved.
Pictures	Still pictures etc. are saved.
Podcasts	Music data etc. transferred from a podcast is saved.
PRIVATE	Still pictures, videos, music data, etc. are saved.
Ringtones	Ringtones etc. are saved.

microSD Card (external storage)

You can save data on the handset to microSD Card or import data on microSD Card to the handset.

- SH-05F is compatible with commercially available microSD Card of up to 2 GB, microSDHC Card of up to 32 GB and microSDXC Card of up to 64 GB. Also, as for Speed Class*, Class 10 or lower is available (as of May 2014).

* Speed Class as stated above indicates the performance of a microSD Card. Note that all the operations related to the performance indicated by Speed Class are not completely guaranteed.

For information on the microSD Card, refer to the following website.

http://k-tai.sharp.co.jp/support/d/sh05f/peripherals.html#!/microsd_support (in Japanese only)

- The size of a file that can be used is up to 2 GB. For details on recorded TV files P. 52 “Recording of TV (Full-Seg/1Seg)”
- Do not turn off the handset immediately after inserting the microSD Card in the handset (while writing information needed for the handset operation) or while editing data on the microSD Card. Data may be damaged or the handset may not work properly.
- Format unformatted microSD Cards on the handset before use (P. 68 “Storage”). microSD Cards formatted by PCs or other devices may not be used properly on the handset.
- Data saved on the microSD Cards from other devices may not be displayed or played on the handset. Some data saved on the microSD Card from the handset may not be displayed or played on other devices.
- microSDXC Card can be used only on the devices compatible with SDXC. If you insert a microSDXC Card to devices not compatible with SDXC, data saved on the microSDXC Card may be damaged etc., so do not insert it.
- For using a microSDXC Card with its data damaged again, formatting the microSDXC Card by devices compatible with SDXC is required (all the data will be deleted).

 
- For copying data to/from among devices not compatible with SDXC, use a card which conforms to the standard of the devices you copy the data to/from such as microSDHC Card or microSD Card.
- Back up the data saved on a microSD Card and store in another place. DOCOMO shall not be liable for any loss or change of the saved data.
- Before inserting or removing (including after unmounting) the microSD Card, turn off the power. Hold the handset securely with your hand. Data may be damaged or the handset may not work properly.
- Precautions about inserting and removing a microSD Card are displayed every time the handset power is turned on.

Inserting microSD Card


1 Open the docomo mini UIM card/microSD Card slot cover (P. 13 “Inserting docomo mini UIM card”)

2 Insert the microSD Card slowly into the microSD Card slot with the metal terminal side turned up


- The microSD Card slot is below the docomo mini UIM card slot. When you insert the microSD Card before inserting the docomo mini UIM card, be careful not to insert the microSD Card to the docomo mini UIM card slot.



- Insert the microSD Card slowly with your fingers until a click is heard.

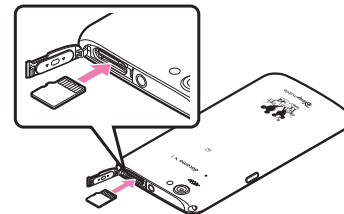

- Do not force the microSD Card in at an angle or with the wrong side up. The microSD Card slot may be damaged.

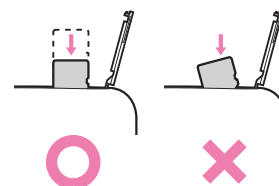

3 Close the docomo mini UIM card/microSD Card slot cover (P. 13 “Inserting docomo mini UIM card”)

Removing microSD Card


1 Open the docomo mini UIM card/microSD Card slot cover (P. 13 “Inserting docomo mini UIM card”)

2 Gently push the microSD Card towards inside (1)

- Push the microSD Card until a click is heard. It will come out towards you. Pulling it forcibly may damage the handset or the microSD Card.

3 Remove the microSD Card (2)

- Remove the microSD Card by slowly pulling it straight out.

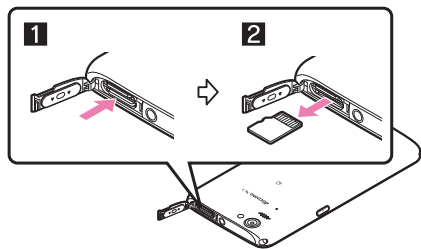

4 Close the docomo mini UIM card/microSD Card slot cover (P. 13 “Inserting docomo mini UIM card”)

Contents Manager


You can manage the data saved on the handset memory or a microSD Card, classify them by type and display them.

1 In the home screen, [APPS] ▶ [Contents Manager]

- Alternatively, in the home screen, [APPS] ▶ [SH tool] ▶ [Recommendation] ▶ [Contents Manager] to activate it.

2 Select data

- When a corresponding app has already been installed, select the data to display it.
- When there are multiple corresponding apps installed on the handset, the app selection screen may appear. Select an app to display the data.

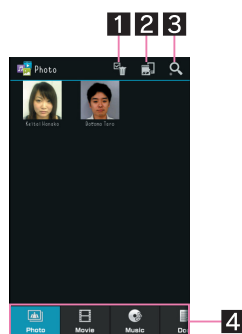

1 Data deleting

- Select and delete data.

2 Save destination

- Display data saved on the selected destination.

3 Data searching

- Search for data on the handset memory or a microSD Card by selecting search criteria.

4 Category

- Display data in the selected category.

Category	Displayed data
Photo	Still pictures shot with the handset or downloaded images
Movie	Videos shot with the handset or downloaded videos
Music	Data recorded with the handset, melodies or WMA files
Doc.	Office type data (.doc, .xls, .ppt, .docx, .xlsx, .pptx, .csv), PDF data or Text files
Others	Other data

- Slide it to the left/right to switch displays of category.


iC communication

Using iC communication

You can send and receive data to and from other devices equipped with iC communication function.

- Make the initial settings of Osaifu-Keitai in advance (P. 48 “Using “Osaifu-Keitai compatible services”).
- iC communication is not available during NFC/Osaifu-Keitai lock.
- Data cannot be sent by iC communication in Airplane mode.
- In the following cases, data may not be sent by iC communication.
 - During charging
 - During earphone/microphone connection
 - During USB connection
- You can send and receive phonebooks, My profile, bookmarks, still pictures, videos, data recorded with the voice recorder, etc.

When using iC communication

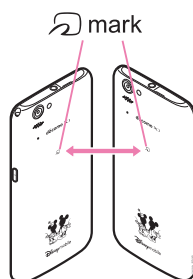

- Use while placing the mark of the receiver's device over that of the sender's device as shown.
- Do not move the devices until sending and receiving of data are completed.
- There may be some cases in which data are poorly sent and received or the screen is off by positioning a device near depending on the other party's device. In this case, put a distance between the marks apart/closer or move them up/down or to the left/right.

Sending and receiving by iC

To enter authentication code is required for sending and receiving all data. The authentication code is a password exclusive to iC communication. Before starting data communication, the sender and receiver must enter the same user-specified four-digit code. In addition, to enter passcode may be required for sending all data.

Sending data

Example: Still picture

- 1 In the home screen, [APPS] ▶ [Contents Manager] ▶ [Photo]
- 2 Touch and hold a still picture ▶ [Share] ▶ [Send by iC]
- 3 [Ok]
- 4 Place the mark over that of the other party's device

Receiving data

- 1 Place the mark over that of the other party's device
- 2 [Accept]
- 3 Drag the status bar down ▶ select the received data

Bluetooth function

You can connect the handset to Bluetooth devices wirelessly.

- Wireless communications with all the Bluetooth devices are not completely guaranteed.

Specifications

Supported version

Bluetooth standard Ver.4.0*1

Output

Bluetooth standard Power Class 2

Supported profiles*2 (Supported services)

HSP: Headset Profile*3

HFP: Hands Free Profile*4

A2DP: Advanced Audio Distribution Profile*5

AVRCP: Audio/Video Remote Control Profile*5

HID: Human Interface Device Profile*6

DUN: Dial-up Networking Profile*7

OPP: Object Push Profile*8

SPP: Serial Port Profile*9

PBAP: Phone Book Access Profile*10

PAN: Personal Area Networking Profile*11

HDP: Health Device Profile*12

PXP: Proximity Profile*13

FMP: Find Me Profile*14

ANP: Alert Notification Profile*15

PASP: Phone Alert Status Profile*16

TIP: Time Profile*17

- *1 The handset and all Bluetooth function-installed devices have ensured that they conform to the Bluetooth specification according to the rules that the Bluetooth SIG defines, and are all authenticated. However, operating methods might differ or data might not be exchanged even when they are connected wirelessly, depending on the features or specifications of connected devices.
- *2 Standardizes the communication procedures of Bluetooth device per feature of a device.
- *3 Connect a commercially available Bluetooth compatible headset to the handset to talk wirelessly.
- *4 Connect a commercially available Bluetooth compatible hands-free device such as a car navigation system to the handset to talk during hands-free operation using the car navigation system etc.
- *5 Connect a commercially available Bluetooth compatible audio device to the handset to play music, TV audio, etc. wirelessly. Also, remote control operation may be available from Bluetooth devices. However, compatible devices may be limited depending on the data type.
- *6 Connect a commercially available Bluetooth compatible input device such as a keyboard and mouse to the handset to operate the handset from the device.
- *7 Connect a Bluetooth compatible PC etc. to the handset to use the handset as a modem and make data communications. Note that packet communication charges are incurred. You cannot use mobile networks on the handset during DUN connection.
- *8 Connect a Bluetooth device to the handset with the file transfer service to send and receive data between them.

- *9 Set the virtual connection with a serial cable and interconnect between devices.
- *10 Transfer phonebook data on the handset memory to a Bluetooth device. Data may not be displayed correctly on the other party's device depending on the contents of the transferred phonebook data.
- *11 Join a PC network etc. and share the Internet connection.
- *12 Communicate data with a commercially available health appliance compatible with Bluetooth such as a weighing machine.
- *13 Make a Bluetooth device ring or vibrate when the Bluetooth connection is terminated after it is moved away from the handset.
- *14 Make the handset/a Bluetooth device ring or vibrate by operating the handset/the Bluetooth device.
- *15 Notify you of incoming calls, new mails, etc. through a Bluetooth device.
- *16 Stop the ringtone or the vibrator of the handset by operating a Bluetooth device.
- *17 Synchronize clocks between a Bluetooth device and the handset.

- Refer to the manual for the Bluetooth device as well.
- The settings of access points for DUN profile can be changed from a Bluetooth device such as a PC or car navigation system. If connection to an access point via DUN profile becomes unavailable, it is recommended to initialize access points (P. 23 "Resetting an access point").
- You may not hear TV audio etc. with Bluetooth devices which are not compatible with SCMS-T.

Precautions about handling Bluetooth devices

Note the followings when using Bluetooth devices.

- Note the followings to make good connection.
 - Keep the distance between the handset and another Bluetooth device within approximately 10 m with no obstructions in sight. The distance within which you can make connection may be shorter when there are obstructions between them or depending on the conditions of the surroundings (such as walls or furniture) and the structure of a building. Especially when there is a wall or floor of reinforced concrete between them, they may be unable to connect with each other. Note the above mentioned distance is not guaranteed.
 - Move the handset and another Bluetooth device as far away as possible from home electric appliances, AV devices, OA devices, etc. before connection. Bluetooth devices are liable to be adversely affected by a microwave oven, so move them as far away as possible from the microwave oven while using them. Otherwise, normal connection cannot be performed when other electric devices are powered on or Bluetooth devices may cause noises or reception failure on a TV or radio set.
 - Move the Bluetooth device to a place where connection is possible when there is a broadcast station or radio near the Bluetooth device and the handset cannot be connected to the device. Strong radio waves may prevent connection between Bluetooth devices.
 - Wireless connection is available with Bluetooth devices put in a bag or pocket. However, lowering of communication speed or noise may result when you are in between the Bluetooth device and the handset.
- Electromagnetic signals from Bluetooth devices may affect the operation of electronic medical equipment etc. As some cases may result in accident, turn off the handset and other Bluetooth devices in the following places.
 - On trains ■ On airplanes ■ In hospitals
 - Near automatic doors or fire alarms
 - In places such as gas stations where flammable gas is generated

Radio interference with Wi-Fi compatible devices

- The Bluetooth devices use the same frequency band (2.4 GHz) as wireless LANs (IEEE 802.11b/g/n). Therefore, using a Bluetooth device near a wireless LAN device may cause the radio interference, lowering of communication speed, noise or connection failure. In this case, turn off the wireless LAN device or keep the handset and the Bluetooth device at least approximately 10 m away from the wireless LAN.

Using Bluetooth function

- To register/connect a Bluetooth device, the Bluetooth passkey may need to be entered. Before starting the registration, decide one- to sixteen-digit number. Enter the same number on the handset and the other party's Bluetooth device.
- Set the other party's Bluetooth device to the registration stand-by status in advance.

1 In the home screen, [APPS] ▶ [Settings] ▶ [Bluetooth]

2 Slide [OFF] to the right

3 Select a Bluetooth device ▶ [Pair]

- The confirmation screen for connection may be displayed.
- Entering the Bluetooth passkey may be necessary depending on the other party's Bluetooth device. Also, some Bluetooth devices may start connecting after completing registration.

- To display/hide the handset's information on other Bluetooth devices: [SH-05F]
 - The handset's information is automatically hidden when the period of time set for Visibility timeout has passed.
- To search for Bluetooth devices: [SEARCH FOR DEVICES]
- Touch [🔗] of a paired Bluetooth device to change the name and the connection type of the other party's Bluetooth device.

- You can connect up to seven Bluetooth devices at the same time. Bluetooth devices may not work properly or the number of Bluetooth devices which can be connected at the same time may differ depending on the profile.
- If you fail to connect, connection may become available after re-registration of Bluetooth devices.
- When the Bluetooth function is set to [ON], the handset is set to receive registration requests/connection requests from other Bluetooth devices. Make the setting for displaying the handset's information on other Bluetooth devices in advance to allow the handset to be searched for by other Bluetooth devices.
- While in connection stand-by, even if a connection request from a Bluetooth device is received, connection may not be made depending on the signal status etc.
- For details on the operations of the other party's Bluetooth device, refer to the manuals of the Bluetooth device to be used.

■ When receiving registration request from Bluetooth device or connection request from unregistered Bluetooth device

- 1 Registration request/Connection request from Bluetooth device
- 2 Drag the status bar down ▶ [Pairing request] ▶ [Pair]
 - When the confirmation screen about the settings on pairing appears, select [Pair].
 - Entering the Bluetooth passkey may be necessary depending on the other party's Bluetooth device.
 - The confirmation screen for connection may be displayed.

■ Unregistering Bluetooth device

- 1 In the Bluetooth screen, [🔗] of the Bluetooth device to unregister ▶ [Unpair]

■ Disconnecting Bluetooth device

- 1 In the Bluetooth screen, select the Bluetooth device to disconnect ▶ [OK]

■ Setting Bluetooth

- Set after setting the Bluetooth function to [ON].

- 1 In the Bluetooth screen, [⚙️]
- 2 Select an item
 - **Rename phone:** Change the handset's name.
 - **Visibility timeout:** Set how long the handset's information will be displayed on other Bluetooth devices.
 - **aptX:** Set whether to use aptX®.
 - **Handsfree setting:** Set whether to always have voices emitted from the connected Bluetooth compatible hands-free device during a voice call.
 - **BT Smart setting:** Enable/Disable the BT Smart setting.
 - **Show received files:** Display the history of data received via Bluetooth connection.

[aptX]

- When you enable [aptX], sounds may not be emitted depending on the Bluetooth device. In this case, disable [aptX].

[BT Smart setting]

- When BT Smart setting is enabled, Bluetooth devices are temporarily disconnected and then connected again.
- Connections may not be available or the function may not work properly depending on the Bluetooth Smart device to use.
- When you connect another app to a Bluetooth Smart device, BT Smart setting needs to be disabled.

Sending and receiving by Bluetooth

■ Sending data

Example: Still picture

- 1 In the home screen, [APPS] ▶ [Contents Manager] ▶ [Photo]
- 2 Touch and hold a still picture ▶ [Share] ▶ [Bluetooth]
 - Set the receiver's Bluetooth device to the reception stand-by status.

3 Select a Bluetooth device to connect to

■ Receiving data

- 1 Data is sent from the sender's Bluetooth device
- 2 Drag the status bar down ▶ select the incoming notification ▶ [Accept]
- 3 Drag the status bar down ▶ select the received data

- Note that if you select [Delete and register] when receiving all data, all data registered to the target function are deleted.
- Receiving all data may not be available depending on the data type.
- When available space in the save destination becomes insufficient while receiving data, the data being received to that point are saved and receiving ends.

Bluetooth Smart device connection

You can make a Bluetooth Smart device respond to the handset operations, notify you of incoming calls or new mails, etc. by operating the handset if you connect the handset to the Bluetooth Smart device.

- Enable BT Smart setting in advance (☞ P. 80 "Setting Bluetooth").

■ Notifying this device

If you have connected the handset to a Bluetooth Smart device, you can make the Bluetooth Smart device ring or vibrate by operating the handset.

- 1 In the Bluetooth screen, [🔗] of a connected Bluetooth Smart device ▶ [Notify this device]
- 2 Select a notification method

- This is available only on Bluetooth Smart devices supporting FMP (Find Me Profile).

■ Advanced settings

You can make settings for operations available when the handset is connected to a Bluetooth Smart device.

1 In the Bluetooth screen, [] of a connected Bluetooth Smart device ► [Advanced settings]

2 Select an item

- **Incoming call notification**: Set whether to notify you through the Bluetooth Smart device when receiving a call.
- **Mail reception notification**: Set whether to notify you through the Bluetooth Smart device when receiving a mail.
- **Alarm notification**: Set whether to notify you through the Bluetooth Smart device when an alarm rings.
- **Schedule notification**: Set whether to notify you of schedule notifications from the calendar through the Bluetooth Smart device.
- **Time change notification**: Set whether to synchronize clocks between the Bluetooth Smart device and the handset.
- **Link loss notification**: Set how to notify you when the Bluetooth connection is temporarily disabled.

NFC communication

NFC stands for Near Field Communication and is a near field wireless communication system which conforms to the international standards set by ISO (International Organization for Standardization). You can use the contactless IC card function, reader/writer function (R/W), Peer to Peer function (P2P), etc. on the handset.

Android beam

You can send and receive data to and from devices which support Reader/Writer, P2P function.

- Enable [Reader/Writer, P2P] and set Android beam to [ON] in advance ( P. 49 "NFC/Osaifu-Keitai settings").
- Android beam is not available when NFC/Osaifu-Keitai lock is set.
- Android beam may not be available depending on the app.
- Communication with all devices which support Reader/Writer, P2P function is not completely guaranteed.
- The precautions about using Android beam are the same as those about iC communication ( P. 78 "When using iC communication").
- Other precautions are the same as those for when you hold the handset over the other device ( P. 48 "Precautions about holding over the other device").

■ Sending data

Example: Phonebook

1 In the home screen, [APPS] ► [docomo phonebook] ► [Contacts] ► select a name

2 Place the mark over that of the other party's device

- [Touch to beam] appears.
- If "License Agreement" is displayed, check the content, follow the instructions on the screen and operate.

3 Touch the screen

■ Receiving data

1 Place the mark over that of the other party's device

External Device Connection


PC connection

You can use a microSD Card as an external memory for a PC or transfer data by connecting the handset and the PC.

Connecting the handset and PC

- 1 Insert the microUSB plug of Micro USB Cable 01 (sold separately) horizontally into the external connector terminal on the handset with the side marked with “B” turned up (1)
- 2 Insert the USB plug of Micro USB Cable 01 horizontally into the USB connector on a PC (2)

- When the handset is turned off, it is automatically turned on.
- For details on the mode of USB connection ☞ P. 69 “USB connection”

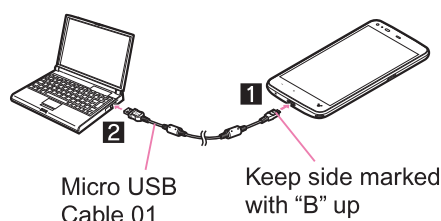

- Use Micro USB Cable 01 as a USB cable. USB cables for PC are not available, since the plug shape is different.
- Using a USB HUB may prevent the equipment from working normally.
- Do not remove Micro USB Cable 01 while exchanging data with PC. Data may be damaged.
- Windows Vista, Windows 7 and Windows 8 all of which are Japanese version are available OS of PCs for the connection.

microSD reader/writer

You can use a microSD Card as an external memory for a PC.

- Insert a microSD Card and set the mode of USB connection to [Card reader mode] in advance (☞ P. 69 “USB connection”).
- When using a microSDXC Card, refer to P. 82 “Transferring data”. When a message indicating to format the microSDXC Card is displayed, do not format it.

- 1 Connect the handset to a PC via Micro USB Cable 01
 - The USB mass storage screen appears. If the screen does not appear, drag the status bar down and select [USB connected].
- 2 [Turn on USB storage]
 - When the confirmation screen is displayed, check the content and select [OK].
- 3 Use as a microSD reader/writer
- 4 Perform secure hardware removal on the PC after use
- 5 [Turn off USB storage]
- 6 Disconnect Micro USB Cable 01 from the handset and the PC

- While using as a microSD reader/writer, microSD Card cannot be used by apps. In addition, microSD Card may not be used as a microSD reader/writer while it is used by apps.

Transferring data

Transfer data from a PC to the handset memory or a microSD Card.

- Set the mode of USB connection to [MTP mode] or [PTP mode] in advance (☞ P. 69 “USB connection”).

- 1 Connect the handset to a PC via Micro USB Cable 01
- 2 Transfer data
- 3 Disconnect Micro USB Cable 01 from the handset and the PC after use

Wireless print

You can print browser screens or images using Wi-Fi compatible printers provided by Canon or EPSON.

- For details on the Wi-Fi compatible printers for the handset etc., refer to the following websites.
Canon: <http://cweb.canon.jp/pixus/index.html> (in Japanese only)
EPSON: <http://www.epson.jp/products/colorio/> (in Japanese only)
- For the operation method of the Wi-Fi compatible printers, refer to the manuals of the Wi-Fi compatible printers.
- Set Wi-Fi to [ON] and connect to the same access point as that of a Wi-Fi compatible printer in advance (☞ P. 23 “Wi-Fi settings”).
- The file formats of images which can be printed are JPEG, BMP and PNG. Available printers may differ depending on the file format.

Wireless print settings

■ Canon Wi-Fi compatible printer settings

- 1 In the browser screen/image displaying screen of Album, [≡] ▶ [Wireless print] ▶ [Canon Wi-Fi Printer]/[Canon Wi-Fi printer]
 - If the confirmation screen for the license agreement is displayed, check the content and select [Agree].
 - As for the browser screen, [Print] ▶ select a page range ▶ [OK] to set the page range.

- 2 Set each item

- **Printer:** Set the printer.
- **Paper Settings:** Set the media type.
- **Copies:** Set the number of copies.

- 3 [Print]

■ EPSON Wi-Fi compatible printer settings

- 1 In the browser screen/image displaying screen of Album, [≡] ▶ [Wireless print] ▶ [EPSON Wi-Fi Printer]/[EPSON Wi-Fi printer]
 - If the confirmation screen for the license agreement is displayed, check the content and select [OK].

- 2 Set each item

- **Printer:** Set the printer.
- **Paper Size:** Set the paper size.
- **Media Type:** Set the media type.
- **Layout:** Set the layout.

- **Print Quality:** Set the print quality.
- **Copies:** Set the number of copies.
- **Printing Range:** Set the page range. You can set it only on the browser screen.
- **Advanced Settings:** Set the paper feeder, color, two-sided printing, etc.

3 [Done]

Printing

■ Printing by Canon Wi-Fi compatible printer

- Make settings for a Canon Wi-Fi compatible printer in advance (☞ P. 82 “Canon Wi-Fi compatible printer settings”).

1 In the browser screen/image displaying screen of Album, [≡] ▶ [Wireless print] ▶ [Canon Wi-Fi Printer]/[Canon Wi-Fi printer]

2 [Print]

- As for the browser screen, [Print] ▶ select a page range ▶ [OK] to set the page range.

■ Printing by EPSON Wi-Fi compatible printer

- Make settings for an EPSON Wi-Fi compatible printer in advance (☞ P. 82 “EPSON Wi-Fi compatible printer settings”).

1 In the browser screen/image displaying screen of Album, [≡] ▶ [Wireless print] ▶ [EPSON Wi-Fi Printer]/[EPSON Wi-Fi printer]

- To change the settings: [⚙] ▶ set each item ▶ [Done]

2 [Print]

- When printing the browser screen, the printed contents may differ from the contents displayed on the browser.

Home network settings

Using Wi-Fi connection, you can watch the still pictures and the videos and listen to the music data on a microSD Card with a home network compatible TV etc.

- You can make public the following data managed by Contents Manager.

Data type	File format
Still picture*1	JPEG
Video	MP4, 3GP (Video codecs: H.264, Audio codecs: aac)
Music data*2	MP3, LPCM (44.1 kHz/2ch), WAV (44.1 kHz/2ch)

*1 Still pictures whose image size is larger than “4096×4096” cannot be displayed.

*2 WAV files can be played only when their data format is LPCM. Also, LPCM is not displayed on the handset.

- You may not make data public when the number of each data exceeds 1,000.

- Store the data to make public in the following folders on a microSD Card in advance.

Data type	Folder location
Still picture	¥DCIM, ¥PRIVATE¥SHARP¥CM¥PICTURE
Video	¥DCIM, ¥PRIVATE¥SHARP¥CM¥MOVIE
Music data	¥PRIVATE¥SHARP¥CM¥MUSIC, ¥PRIVATE¥SHARP¥CM¥SOUND

- Make settings for the Wi-Fi connection before using the home network server. For details on the settings of Wi-Fi ☞ P. 23 “Wi-Fi settings”
- Refer to the following website for types of TV compatible with connection with the handset.
<http://k-tai.sharp.co.jp/support/d/sh05f/peripherals.html#!/dlna> (in Japanese only)
- As for how to connect the handset from a home network compatible TV, refer to the manual of the home network compatible TV.
- Connection may not be made properly or may be canceled while in use depending on wireless LAN access points or usage environment. In this case, disable [Home network server] in Home network settings and enable it again.
- Check the followings when you cannot connect properly.
 - Access point settings
 - Wi-Fi connecting condition
 - Network settings of the home network compatible device to connect
 - Security software/Firewall settings of the home network compatible device
 - Home network settings of the handset
 - Settings of Energy saving Wi-Fi

1 In the home screen, [APPS] ▶ [Settings] ▶ [More...] ▶ [Home network settings]

2 Select an item

- **Home network server:** Set whether to use the home network server.
- **Wi-Fi for home NW server:** Set the network to be used from the access points set for Wi-Fi connection.
- **Home network server name:** Register the home network server name to be displayed on a home network compatible TV.

USB host function

The USB host function is installed on the handset. You can use USB devices such as mice by connecting a commercially available USB cable for peripheral device connection to the external connector terminal.

- For details on the USB host function, refer to the manuals of the USB cable for peripheral device connection and USB devices.

- Connection with all USB devices is not completely guaranteed.
- Connection with the USB device is disabled when the battery level decreases or the handset temperature lowers.
- When you use the USB host function, the handset operations may slow down.
- When you connect USB devices which consume large amount of electric power, the handset may be automatically turned off depending on the operating state or battery level of the handset, or surrounding temperature.

Removing USB memory

- Unmount the USB memory before removing it (☞ P. 68 “Storage”). Data may be damaged or the handset may not work properly.

Wireless output (Miracast)

You can display the same screen as that of the handset on a TV with a wireless connection function by connecting the handset to the TV.

- You can also connect the handset to other Miracast compatible devices such as a Miracast compatible TV adapter.

1 In the home screen, [APPS] ▶ [Settings] ▶ [More...] ▶ [Wireless output(Miracast)]

2 Slide [OFF] to the right

3 Select a device to connect to

- The setting screen may be displayed depending on the device to connect to. For details on the setting content, refer to the manual of a Miracast compatible device to use.
- Wireless output may not be available depending on the running app or the displayed contents.
- Wireless output may be terminated during its use depending on the running app.
- During the wireless output, you may not be able to play copyrighted contents.
- Wireless output automatically stops when the battery level becomes insufficient.
- Wireless output is not available during a call or incoming call. If you receive a call during the wireless output, the wireless output stops.
- When Energy saving Wi-Fi is set to [ON] in Energy saving settings, you may not be able to connect the handset to the device to connect to properly. In this case, set Energy saving Wi-Fi to [OFF].
- The handset may be subjected to radio interference and image distortion or jumpiness may occur depending on the conditions of the surroundings. Also, connection may fail or output may be terminated. Use this function in a condition with no obstructions or other wireless devices put between the handset and a TV etc.

FM transmitter

Transmit TV audio, music data, sounds from Navigation, etc. via FM radio waves and receive and play the data via FM radio, FM tuner mounted on a car, etc.

1 In the home screen, [APPS] ▶ [Settings] ▶ [More...] ▶ [FM transmitter]

2 Slide [OFF] to the right

- If the confirmation screen for FM transmitter auto OFF is displayed, check the content and select [Details]/[OK].

3 Select an item

- **Frequency setting:** Set the frequency of the FM radio waves.
- **Auto OFF setting:** Set when to automatically set the FM transmitter to [OFF] if TV audio, music, etc. is not played.

4 Set the same frequency on the receiver as that on the handset

5 Play music etc.

- FM transmitter is not available when the handset is in the following cases. If the handset enters into one of the following cases when the FM transmitter is set to [ON], the FM transmitter will be set to [OFF] automatically.
 - In Airplane mode
 - During Bluetooth connection
 - During international roaming
 - If the handset has never been within the service area and Access to my location has never been set to [ON] since you turned the power on
 - If the handset has been outside the service area for approximately 2 hours or more
- Receivers may not emit sounds in the following cases even when the FM transmitter is set to [ON].
 - During charging
 - During USB connection
 - During earphone connection
- Receivers do not emit sounds in the following cases even when the FM transmitter is set to [ON].
 - During a call
 - During an incoming call
- Adjust the volume on the handset or the receiver when it is emitting sounds via the FM transmitter. Also, when you terminate the FM transmitter function, make sure that the volumes of the handset and the receiver are not too loud before the termination.

Cooperating with Blu-ray Disc recorder

If you connect the handset and a Blu-ray Disc recorder compatible with the home network function to the Wi-Fi network, you can watch/play TV programs received/recorded with the Blu-ray Disc recorder on the handset.

Also, if you connect a home network function compatible TV to the Wi-Fi network, you can display/play videos, still pictures, music, etc. the handset stores on the TV.

- This app uses DiXiM SDK.

The license of "DiXiM" is provided by DigiOn, Inc.

For details, refer to the website of DigiOn, Inc.

<http://www.digion.com/>

1 In the home screen, [APPS] ▶ [SH tool] ▶ [Recommendation] ▶ [AV Device Link]

2 Select an item

- **Watch programs recorded in recorder.:** Play programs recorded with Blu-ray Disc recorders on the handset or transfer the programs to the handset.
- **Watch programs dubbed to device.:** Play programs transferred from Blu-ray Disc recorders to the handset.
- **Use other functions:** Display/Play videos, still pictures, music, etc. the handset stores on a TV, watch programs received with Blu-ray Disc recorders on the handset.

- When Energy saving Wi-Fi is set to [ON] in Energy saving settings, you may not be able to connect the handset to the device to connect to properly. In this case, set Energy saving Wi-Fi to [OFF].
- You cannot transfer data to a microSD Card.
- If you transfer programs, the number of videos which can be saved on the handset decreases.
- A high bit rate video such as a FullHD one shot with the camera may not be played smoothly on the handset via a home network.

VPN (Virtual Private Network)

Adding VPN

VPN (Virtual Private Network) is a connection method to prepare and connect safely to a virtual dedicated line on the network of a household PC or in an office from outside etc.

- Acquire information about the security from network administrators to set VPN connection from the handset.
- PPTP is not available when ISP is set to sp-mode.
- Set Screen lock to Pattern, Lock No. or Password in advance (P. 71 “Lock & security”).

- 1 In the home screen, [APPS] ▶ [Settings] ▶ [More...] ▶ [VPN settings] ▶ [🔒]
- 2 Set each item ▶ [Save]

Connecting VPN

- 1 In the home screen, [APPS] ▶ [Settings] ▶ [More...] ▶ [VPN settings]
- 2 Select a VPN to connect to
- 3 Enter connecting information of the VPN ▶ [Connect]

Disconnecting VPN

- 1 Drag the status bar down ▶ touch the notification indicating that VPN has been enabled
- 2 [Disconnect]

International Roaming

You can make a call using the handset while staying overseas or make settings for international roaming, network services, etc.

Outline of international roaming (WORLD WING)

International roaming (WORLD WING) is a service that enables you to use the same phone number and mail address of the handset as you use in Japan in the service area of DOCOMO affiliated overseas network operators. You can use calls and SMS without any changes in settings.

Available network

The handset is rated as Class 5. You can use it in the LTE network, 3G network and GSM/GPRS network service areas. In addition, this service is available in countries and regions supporting 3G 850 MHz/GSM 850 MHz. Check the available area.

Refer to the followings before using the handset overseas.

- "Mobile Phone User's Guide [International Services]"
- DOCOMO International Services website

- For country codes, international call access number, universal number international prefix and information on countries and regions where connections are available and available network operators, refer to "Mobile Phone User's Guide [International Services]" or the DOCOMO International Services website.

Available services overseas

Main communication service	3G	3G850	GSM (GPRS)	LTE
Call	○	○	○	×*2
SMS	○	○	○	○
Mail*1	○	○	○	○
Browser*1	○	○	○	○

*1 Enable [Data roaming] to use data communication when roaming (P. 86 "Data roaming").

*2 Call is available with 3G network.

- Some services may not be available depending on the network operator or network.

Before use overseas

Checking before departure

Check followings in Japan before using the handset overseas.

Subscription

- Check the status of a subscription for WORLD WING. For details, contact the number listed in "General Inquiries" on the last page.

Charging battery

- Use AC Adapter 03/04 (sold separately) as an AC adapter for charging while traveling overseas.

Charge

- Overseas charges (call charges, packet communication charges) differ from those in Japan. For details, refer to "Mobile Phone User's Guide [International Services]" or the DOCOMO International Services website.

- Since some apps automatically perform communication, the packet communication charges may be higher. Contact the app provider for the operation of each app.

Setting before departure

Network service settings

If you subscribed to network services, network services such as Voice Mail Service, Call Forwarding Service and Caller ID Display Request Service are available from overseas. However, some network services are not available.

- To use network services overseas, setting Remote operation settings to "Activate" is required. Remote operation settings can be set in your country of stay (P. 88 "Network services during roaming"). For details on Remote operation settings in Japan P. 38 "Network service"
- Some network services that can be set/disabled etc. may not be available depending on overseas network operators.

Checking in your country of stay

The handset automatically connects to the available network operator when you turn the power on in your country of stay.

Connection

When Network operators (P. 87 "Network operators") is set to [Choose automatically], the suitable network is automatically selected.

Settings for use overseas

At the time of purchase, the handset is set to automatically search for and switch to available networks. When you want to manually switch networks, set by performing following operations.

1 In the home screen, [APPS] ▶ [Settings] ▶ [More...] ▶ [Mobile networks]

2 Select an item

- **Data enabled**: Set whether to use data communication.
- **Data roaming**: For details P. 86 "Data roaming"
- **Access Point Names**: Set an access point.
- **Network Mode**: For details P. 86 "Network mode"
- **Network operators**: For details P. 87 "Network operators"

Data roaming

Set whether to use data communication when roaming.

1 In the home screen, [APPS] ▶ [Settings] ▶

[More...] ▶ [Mobile networks] ▶ [Data roaming]

- When the confirmation screen is displayed, check the content and select [OK].

Network mode

Set a network to use.

1 In the home screen, [APPS] ▶ [Settings] ▶

[More...] ▶ [Mobile networks] ▶ [Network Mode]

2 Select an item

- **LTE/3G/GSM(Auto)**: Automatically switch to an available network.
- **LTE/3G**: Use LTE/3G network.
- **3G/GSM**: Use 3G/GSM network.
- **3G**: Use 3G network.
- **GSM**: Use GSM/GPRS network.

Network operators

Search for networks and set a network operator to use.

1 In the home screen, [APPS] ▶ [Settings] ▶ [More...] ▶ [Mobile networks] ▶ [Network operators]

- If the confirmation screen for data communication is displayed, check the content and select [OK].
- Search for networks and a list of network operators is displayed.
- When an error occurs during the network search, disable [Data enabled] (P. 86 “Settings for use overseas”) and try again.

2 Select a network operator

- To search for network operators again: [Search networks]
- To automatically select a network operator: [Choose automatically]

- If you manually set network operators overseas, set to [Choose automatically] after returning to Japan.

Viewing the display

- [R] is displayed during international roaming.
- 3G/GSM/HSPA/LTE is available.
- Connected network operator can be checked in the status panel.

Date & time

If [Automatic date & time] and [Auto timezone] of Date & time are enabled, the handset receives information on time and time differences from the network of a connected overseas network operator, then time and time differences are corrected.

- Time and time differences may not be adjusted correctly depending on the network of an overseas network operator. In this case, set time zone manually.
- The correction timing may differ depending on the network operator.
- For details on Date & time P. 75 “Date & time”

Inquiries

- When the handset or the docomo mini UIM card is lost or stolen overseas, promptly contact DOCOMO and conduct a procedure for canceling the use of service from your country of stay. Refer to the last page for inquiries. Note that communication/call charges after the handset or the docomo mini UIM card is lost or stolen are incurred to the subscriber.
- As for land-line phone etc., “International call access number” of your country of stay or “Universal number international prefix” is required.

Making/Receiving a call in your country of stay

Making a call outside your country of stay (including Japan)

1 In the home screen, [APPS] ▶ [Phone] ▶ [Dial]

2 “+” (touch and hold “0”) ▶ enter country code, area code (city code) and the other party’s phone number ▶ [✓]

- When the area code (city code) begins with “0”, omit the first “0” when dialing (Include the “0” when making a call to some countries or regions such as Italy).
- Alternatively, enter a phone number ▶ [≡] ▶ [International call] ▶ select a country code to enter a country code.
 - The first “0” of the area code (city code) will be omitted.

- Even if you notify the caller ID, [Unknown], [Private number], etc. may appear depending on the network operator, and the caller ID may not be displayed correctly.

Making a call using International Dial Assist

When you make a call to other countries from your country of stay, you can make an international call with simple operation using International Dial Assist.

- Set International dial assist in advance.
- The first “0” of a phone number will be automatically converted to the country code you set in Country code.

1 In the home screen, [APPS] ▶ [Phone] ▶ [Dial]

2 Enter a phone number ▶ [✓]

3 [Converted number]

■ Setting of International Dial Assist

1 In the home screen, [APPS] ▶ [Settings] ▶ [Call] ▶ [Roaming settings] ▶ [International dial assist]

2 Select an item

- **Automatic conversion function**: Set whether to make calls using International Dial Assist.
- **Country code**: Set country code to use when using International Dial Assist.
- **International prefix**: Set international prefix to use when using International Dial Assist.

Making a call in your country of stay

You can make a domestic call in your country of stay in the same way as you do in Japan.

- Always enter the area code (city code), even when the number is in the same area.

Making a call to a WORLD WING subscriber overseas

When you make a call to a WORLD WING subscriber overseas, the call is made as an international call to Japan regardless of whether the call is made to the inside or outside of your country of stay.

- 1 In the home screen, [APPS] ▶ [Phone] ▶ [Dial]
- 2 “+” (touch and hold “0”) ▶ enter country code “81” (Japan) and the other party’s mobile phone number excluding the first “0” ▶ [✓]

Receiving a call overseas

You can receive a call overseas in the same way as you do in Japan.

- When a call is received during international roaming, the call is forwarded from Japan. Charges for connecting a call to Japan are incurred by the caller and receiving charges by the receiver.

■ Having calls made to your handset

When having calls made to your handset from Japan, have your phone number entered just as a domestic call in Japan.

When having calls made to your handset from countries other than Japan, have the international call access number and country code “81” (Japan) added to the beginning of your phone number with the first “0” excluded as an international call to Japan regardless of your country of stay.

International call access number of the country of the caller-81-90 (or 80/70)-XXXX-XXXX

Setting international roaming

Roaming settings

You can make settings for international roaming.

- 1 In the home screen, [APPS] ▶ [Settings] ▶ [Call] ▶ [Roaming settings]
- 2 Select an item
 - **Restricting incoming calls**: Set whether to reject incoming calls during international roaming.
 - **Incoming notification while roaming**: Set whether to notify you of incoming call information (date and time of calls or caller ID) by SMS, when you are in a place with no signal, the handset is turned off or you fail to answer an incoming call during international roaming.
 - **Roaming guidance**: Set whether to play the guidance notifying the other party who makes a call to you during international roaming that you are using international roaming.
 - **International dial assist**: Make settings for International dial assist. For details ☎ P. 87 “Setting of International Dial Assist”
 - **Network service**: Make settings for using network services available during international roaming. For details ☎ P. 88 “Network services during roaming”

Network services during roaming

You can use network services such as Voice Mail Service or Call Forwarding Service overseas.

- 1 In the home screen, [APPS] ▶ [Settings] ▶ [Call] ▶ [Roaming settings] ▶ [Network service]
- 2 Select an item
 - **Remote operation(charged)**: Make settings for remote operations.
 - **Caller ID notification request service(charged)**: Make settings for Caller ID Display Request Service.
 - **Roaming call notification(charged)**: Make settings for Incoming notification while roaming.
 - **Roaming guidance(charged)**: Make settings for Roaming guidance.
 - **Voice mail(charged)**: Make settings for Voice Mail Service.
 - **Call forwarding(charged)**: Make settings for Call Forwarding Service.

Checking after homecoming

The handset automatically connects to the DOCOMO network after returning to Japan. If it fails, make the following settings.

- Set Network Mode to [LTE/3G/GSM(Auto)] (☎ P. 86 “Network mode”).
- Set Network operators to [Choose automatically] (☎ P. 87 “Network operators”).

Troubleshooting (FAQ)

Troubleshooting

- First, check whether the software update is required. If it is required, update the software (☞ P. 92 “Updating software”).
- If there is no improvement on the problems even after checking the following items, feel free to contact the number listed in “Repairs” (in Japanese only) on the last page or a repair counter that DOCOMO specifies.

Power

- The handset is not turned on
 - Make sure the battery has not run out. ☞ P. 14 “Charging”
- The screen does not respond or the handset cannot be turned off
 - You can turn the power off forcibly by pressing  for at least 8 seconds. ☞ P. 16 “Turning power off forcibly”
 - Note that data, contents you have set, etc. may be deleted since the power is turned off forcibly.

Charging

- Cannot charge the battery
 - The charging lamp does not illuminate or it flashes
 - Is the power plug or the cigarette lighter plug of the adapter inserted into the outlet or cigarette lighter socket properly? ☞ P. 15 “Charging with AC adapter/DC adapter”
 - Are the adapter and the handset set properly? ☞ P. 15 “Charging with AC adapter/DC adapter”
 - When using an AC adapter (sold separately), are the microUSB plug of the AC adapter and the handset securely connected? ☞ P. 15 “Charging with AC adapter/DC adapter”
 - If a call, communication or another function is performed for a long time while charging, the handset may become warm and charging may stop. Charge again after the handset temperature lowers. ☞ P. 14 “Cautions while charging”
 - Is an adapter specified by NTT DOCOMO being used for charging? Contact the number listed in “Repairs” (in Japanese only) on the last page or a repair counter that DOCOMO specifies if you cannot charge the battery even when using a specified one.

Handset operation

- Apps do not work properly (e.g. inability to activate them, frequent errors)
 - Make sure there is no disabled app. Try again after enabling a disabled app, if any. ☞ P. 70 “Enabling an app”
- Becomes hot while operating/charging
 - The handset, internal battery or adapter may become warm while operating or charging, when watching TV etc. for a long time while charging, etc. There is no operational problem. ☞ P. 14 “Cautions while charging”
- Battery life is short
 - Make sure the handset is not left for a long time outside the service area.
Outside the service area, since radio waves are searched to make communication available, more electric power than usual is used.
 - The battery life depends on the usage environment and deterioration level. ☞ P. 95 “Main specifications”

- Internal battery is a consumable product. Battery life per charge is gradually reduced every time the battery is charged. Contact the number listed in “Repairs” (in Japanese only) on the last page or a repair counter that DOCOMO specifies if the battery life becomes extremely shorter than at the time of purchase even after fully charged. ☞ P. 15 “Internal battery usable life”
 - Not activated by touching or pressing keys
 - Make sure the handset is not turned off. ☞ P. 16 “Turning power on”
 - Screen response is slow when touching or pressing keys
 - This may happen when a great deal of data is saved on the handset, when a large amount of data is being transferred between the handset and the microSD Card, etc. ☞ P. 68 “Storage”
 - docomo mini UIM card is not recognized
 - Is the docomo mini UIM card inserted facing right direction? ☞ P. 13 “docomo mini UIM card”
 - Clock is incorrect
 - Clock may become incorrect if the power is turned on for a long time. Make sure [Automatic date & time] is enabled and turn the power on again in a location with good signal conditions. ☞ P. 75 “Date & time”
 - Handset operation is unstable
 - The apps installed on the handset after purchase may become a cause. If you can improve the symptoms by activating the handset with the safe mode set, you may be able to improve the symptoms by uninstalling the installed apps.
 - ※ The safe mode is a function to activate the handset nearly in the state of default.
 - For activating the safe mode
Turn the power on again when the power is turned off, then touch and hold [>] from when the startup screen is displayed (if the sleep mode is set, touch and hold it from when the “NTT docomo” logo is displayed, or if the power is completely turned off, touch and hold it from when the “Xi” logo is displayed) until the home screen is displayed.
 - ※ Alternatively,  while the power is turned on (for at least 1 second) ▶ touch and hold [To sleep]/[Power off completely] ▶ [OK] to activate the safe mode.
 - ※ When the safe mode is activated,
[セーフモード]/[Safe mode] is displayed at the bottom left of the screen.
 - ※ To deactivate the safe mode, turn the power on again.
 - Back up the necessary information in advance before using the safe mode.
 - Widgets created by yourself may disappear.
 - The safe mode is not an ordinary activating state and thus deactivate the safe mode if you want to use in an ordinary way.
 - Grip sensor does not respond
 - Make sure you are not wearing a glove.
 - Make sure the handset is not equipped with a case, cover, etc. which is not compatible with Grip sensor.
 - Make sure the handset is not wet. ☞ P. 11 “Draining water when the handset gets wet”
 - Make sure a metallic object does not touch the sensor.
 - Set Grip sensor to [OFF] and set it to [ON] again. ☞ P. 70 “Grip sensor”
- #### Calling
- Calls cannot be made by touching or pressing keys
 - Make sure [Restrict calls] in Application lock is not set. ☞ P. 72 “Application lock”
 - Make sure Airplane mode is not set. ☞ P. 71 “More”

- Ringtone does not sound
 - Make sure the ringtone volume is not set to “0”.
☞ P. 67 “Sound”
 - Make sure Public mode (power OFF), the manner mode or Airplane mode is not activated. ☞ P. 38 “Network service”, P. 67 “Mode settings”, P. 71 “More”
 - Make sure call rejection is not set. ☞ P. 38 “Reject call setting”
 - Make sure the ringing time for Voice Mail Service or Call Forwarding Service is not set to “0 seconds”.
☞ P. 38 “Network service”
- Calls cannot be made ([]) does not disappear even after moving to another place or calls cannot be made/received even though signal status is not bad)
 - Turn the power on again or attach the docomo mini UIM card again. ☞ P. 13 “docomo mini UIM card”, P. 16 “Turning power on/off”
 - Depending on the signal type, even though status is “inside the service area” or “[]” (indicating signal status) appears”, making/receiving a call may not be available. Move to another place and call again.
 - Make sure the call restriction such as call rejection is not set. ☞ P. 38 “Reject call setting”
 - In a crowded place, heavy telephone/mail traffic may make it difficult to get a connection. In this case, a busy tone is played. Move to another place or call again later.

■ Screen

- Display is dark
 - Make sure Screen timeout is not set to a short duration.
☞ P. 68 “Display”
 - Make sure the setting of Brightness is not changed.
☞ P. 68 “Brightness”
 - Make sure [Automatic brightness] of Brightness is not enabled. The brightness of the screen may vary depending on the surrounding light if the setting is enabled.
☞ P. 68 “Brightness”
 - Make sure [VeilView] is not enabled. ☞ P. 68 “VeilView”

■ Sound

- The other party’s voice is not heard well or is too loud during a call
 - Make sure you did not change the in-call volume.
☞ P. 36 “Adjusting the in-call volume”

■ Mail

- Mail is not automatically received
 - Make sure Inbox check frequency in the account settings of Email is not set to [Never].

■ Camera

- Still picture or video shot by the camera is blurred
 - Switch Focus settings of various settings to [Macro] when shooting a nearby subject. ☞ P. 56 “Settings on shooting with camera”
 - Make sure the camera lens is neither misted up nor exposed to dirt. ☞ P. 54 “Before using camera”

■ TV

- Cannot watch TV
 - Make sure the handset is not outside the area of a terrestrial digital TV broadcasting service or in a place with weak signal.
☞ P. 50 “Broadcast wave and service area”
 - Make sure a channel list is created. ☞ P. 52 “Creating channel lists”

■ Osaifu-Keitai

- Cannot use Osaifu-Keitai
 - If Omakase Lock is activated, Osaifu-Keitai functions are not available regardless of the setting of NFC/Osaifu-Keitai lock.
 - Make sure NFC/Osaifu-Keitai lock is not set. ☞ P. 48 “NFC/Osaifu-Keitai lock”
 - Is the [] mark of the handset held over the scanning device?
☞ P. 48 “Precautions about holding over the other device”

■ International roaming

- Cannot use the handset overseas (The signal icon appears)
 - Make sure you have subscribed to “international roaming service (WORLD WING)”. Check the status of a subscription to “international roaming service (WORLD WING)”.
☞ P. 86 “Outline of international roaming (WORLD WING)”
- Cannot use the handset overseas ([]) appears)
 - Make sure the handset is not outside the service area of international roaming or in a place with weak signal. Refer to “Mobile Phone User’s Guide [International Services]” or the DOCOMO International Services website to check if the service area or network operator is available one.
☞ P. 86 “Outline of international roaming (WORLD WING)”
 - Change the network setting or network operator setting. Set Network Mode to [LTE/3G/GSM(Auto)]. Set Network operators to [Choose automatically]. ☞ P. 86 “Network mode”, P. 87 “Network operators”
 - Turn the power on again. The handset may recover.
☞ P. 16 “Turning power on/off”
- Cannot use data communication overseas
 - Enable [Data roaming]. ☞ P. 86 “Data roaming”
- Suddenly the handset becomes unavailable during overseas use
 - Make sure the approximate limit of usage fee is not exceeded. As for “international roaming service (WORLD WING)”, the approximate limit of usage fee is set in advance. Pay off the usage fee to resume services if usage fee exceeds the limit.
- The other party’s phone number is not notified/A different phone number from that of the other party is notified/Functions to use details saved in the phonebook or Caller ID notification are not activated
 - The caller ID is not displayed on the handset even though the other party makes a call with the caller ID set to be notified if the used network or network operator does not notify. In addition, a different phone number from that of the other party may be notified depending on the used network or network operator.

■ Data management

- Data is not transferred
 - Make sure a USB HUB is not used. If used, the operation may not work correctly. ☞ P. 82 “Connecting the handset and PC”
- Data saved on the microSD Card is not displayed
 - Remove the microSD Card and insert it again.
☞ P. 76 “microSD Card (external storage)”
- Images are not displayed correctly
 - An entire image goes black when the image data is damaged.

Bluetooth function

- Cannot connect with Bluetooth connection compatible device/
Cannot find it even if searching
 - Set the Bluetooth connection compatible device (sold commercially) side to the registration stand-by status and register it from the handset side. To delete the registered device once and register it again, both the Bluetooth connection compatible device (sold commercially) and the handset are required to be deleted on each side. ☎ P. 79 “Using Bluetooth function”
- Calls cannot be made from the handset with an external device such as a car navigation system or hands-free device connected
 - Making a call to a phone number may become unavailable if you make multiple calls to the phone number in the condition that the other party does not answer or outside the service area. In this case, turn off the handset power and turn it on again. ☎ P. 16 “Turning power on/off”

Map/GPS function

- Cannot set AUTO-GPS service information
 - Make sure AUTO-GPS has not been suspended due to insufficient battery level. If AUTO-GPS has been suspended due to Low-power operation settings, you cannot set AUTO-GPS service information. In this case, set Low-power operation settings to [Not suspend] or charge the battery to set the service. ☎ P. 14 “Charging”, P. 71 “docomo service/cloud”
 - Make sure [AUTO-GPS operation settings] is not disabled. ☎ P. 71 “docomo service/cloud”

Error messages

- [Cannot connect]
 - The connection could not be made to data broadcasting for an unspecified reason. Try again later.
- [Connection error; failed to send]
[Connection has been interrupted due to no answer]
[Server error; failed to send]
[The destination server is not supporting it.]
[Transmission error; try again in a while]
 - Appears when attempting to use mail or SMS with the line system not in service or extremely congested. Try again later.
- [Enter passcode.]
 - Appears when an operation for the restricted function was attempted while the handset lock is set. Enter the passcode to temporarily disable handset lock and continue operation.
 - Appears when attempting to use a function that requires the passcode to be entered.
- [Failed to get license. Cannot play.]
 - Appears when failed to update a license of copyrighted contents that has reached the expiration date.
- [Failed to send]
 - Appears when SMS was not sent properly.
 - Appears when mail was not sent properly. Try again from a location with a strong signal.
- [Insert/recheck SIM card.]
 - Make sure docomo mini UIM card is properly inserted. ☎ P. 13 “docomo mini UIM card”
- [Low on space]
 - Available space on the handset memory is decreasing. Some functions or apps may not work properly. Uninstall unneeded apps or move/delete files.
- [Mobile network not available.]
 - Make sure a valid network mode is set. ☎ P. 86 “Network mode”

- [No permissions to play this content.]
 - Appears when there is no available license or when attempting to play copyrighted contents whose playable period or limit has expired.
- [Please wait for a while(data)]
 - Packet communication network is extremely congested. Try again later.
- [Please wait for a while(voice call)]
 - Audio line network is extremely congested. Try again later.
- [Utilizing the production number information. Continue?]
 - May appear while watching TV. Select [Yes] to send manufacture number of the handset and docomo mini UIM card.
- [xx mails have been received, but some have not been received.]
 - Appears when not all mails can be received for an unspecified reason.

Smartphone Anshin Remote Support

※ This service is provided in Japanese.

By having the screen on your handset shared with DOCOMO, you can get supports for operating and setting the handset.

- In the following cases, Smartphone Anshin Remote Support is not available.
 - When the docomo mini UIM card is not inserted
 - During international roaming
 - In Airplane mode
- Smartphone Anshin Remote Support is a paid service that requires subscription.
- Some operations and settings are not covered.
- For details on Smartphone Anshin Remote Support, refer to the DOCOMO website.

1 Make a call to Smartphone remote support center

Smartphone remote support center

☎ 0120-783-360

Business hours: 9:00 a.m. to 8:00 p.m. (open all year round)

- In the home screen, [APPS] ▶ [遠隔サポート] (Remote support) ▶ [このスマートフォンから発信する] (Make a call from this smartphone) ▶ [📞] to make a call to Smartphone remote support center from the handset.

2 In the home screen, [APPS] ▶ [遠隔サポート] (Remote support)

- When you use this for the first time, you must agree to “ソフトウェア使用許諾書” (Software license agreement).

3 [遠隔サポートの接続画面に進む] (Proceed to the connection screen for Remote support) ▶ [同意する] (Agree)

4 Enter the connection number provided by DOCOMO

5 The remote support starts after the connection is established

Warranty and After-Sales Service

Warranty

- Make sure that the warranty card is included with your handset at the time of purchase. Check that the name of the retailer, the date of purchase, and the necessary details have been filled in on the warranty card. Be sure to keep it in a safe place. Contact the retailer if any necessary details on the warranty card are not completed.
The warranty period without charge is 1 year from the date of purchase.
- For the purpose of improvement, the specifications for this product and its accessories are subject to complete or partial change without prior notice.
- Information registered in your handset, such as phonebooks, may be lost or changed if your handset is damaged, repaired or mishandled. It is recommended that backup be kept of information such as phonebooks.
- ※ The handset allows you to save phonebook data etc. to the microSD Card.
- ※ The handset allows you to back up data such as phonebooks by using docomo cloud.

After-Sales Services

■ If you have problems with your handset

Refer to “Troubleshooting” on this manual before requesting repairs.

Contact the number listed in “Repairs” (in Japanese only) on the last page if problems persist.

■ If your handset needs repairs after contacting DOCOMO

Bring your handset to a repair counter that DOCOMO specifies. However, repair counters are only open during business hours. Make sure to bring your warranty card with you. Note that it may take several days to repair depending on the condition on the malfunctions.

During the warranty period

- The handset will be repaired without charge in accordance with the terms of the warranty.
- When bringing the handset in for repairs, be sure to bring the warranty card. Even during the warranty period, a fee will be charged for repairs of malfunctions, damage, etc. caused by your improper handling (damage of liquid crystal, connector, etc.) or if no warranty certificate is presented.
- Repairs for malfunctions caused by the use of devices and consumable products other than those specified by DOCOMO will also incur a fee, even during the warranty period.

Repairs may not be possible in the following circumstances.

- As a result of inspection, when damage from water exposure, condensation, sweat or other liquids is found or when the internal circuit board is damaged or deformed (Repairs may not be possible when external connector terminal, earphone/microphone terminal, LCD, etc. is damaged or when a housing is cracked)
- ※ Even when repairs are possible, repair charges will be incurred because the warranty does not cover such damage.

After the warranty period has expired

Charged repairs will be carried out upon request.

Replacement parts

Replacement parts (required to maintain the functionality of the handset) will be kept in stock basically for at least 4 years following the halt of production. However, note that there may be a case when repair is not possible for the shortage of replacement parts etc. depending on the faulty part. Repairs may be possible even after this period has passed, depending on the faulty part. Contact the number listed in “Repairs” (in Japanese only) on the last page for details.

■ IMPORTANT!

- Never attempt to modify the handset or its accessories.
 - May cause fire, bodily injury or malfunction.
 - If your handset has been modified previously, it will only be accepted for the repair as long as you agree that we restore the handset to its original state. However, repairs may be refused depending on the extent of the modification. The following cases may be considered as a modification.
 - Stickers etc. are applied to the LCD or keys
 - Decorations are made to the handset with adhesive agent etc.
 - Exterior parts etc. are replaced with those which are not standard DOCOMO products
 - Repairs for any malfunction or damage caused by such modifications will incur fees, even during the warranty period.
- Information stored in your handset, such as the settings of various functions, may be cleared or reset if your handset is damaged, repaired or mishandled. If this occurs, please re-enter the information or re-specify the settings.
- When the handset is repaired, MAC address for Wi-Fi and Bluetooth address may be changed regardless of the faulty part.
- The following sections of the handset contain parts that generate magnetic waves. Keep cash cards and other objects likely to be affected by magnetic waves away from the handset. They may become unusable.
 - Sections: Speaker, earpiece
- If the inside of the handset gets wet or becomes moist, immediately turn off the power though SH-05F provides waterproof performance. Then, visit a repair counter. The handset may not be repaired depending on its condition.

■ Memory dial (Phonebook) and downloaded information

- Created, imported or downloaded data may be modified or deleted when changing models or repairing the handset. DOCOMO shall not be liable for any modification or deletion of content. DOCOMO may, at our convenience, exchange your handset for a substitute in lieu of repairs. However, in this case, we cannot transfer these data to replaced products except for some data.

Updating software

Connect SH-05F to the network and check for software update. If necessary, download update files and update.

- Check the DOCOMO website for updates.
- The following three kinds of update methods are available.

Auto-update	: Automatically download new update files and rewrite at the set time.
Now update	: Immediately update.
Reserve update	: Automatically update at the set time.

- You can update software even if the handset contains phonebook, camera image, mail, downloaded data, etc. However, DOCOMO may not be able to protect data that could be lost due to malfunction, damage, water exposure and so on. It is recommended that important data be backed up before software update. Note that some data, such as downloaded data, cannot be backed up.

Using software update

- Fully recharge battery before updating software. It is recommended to connect a charger cable to the handset when updating.
- Software cannot be updated in the following cases.
 - During a call
 - When [📶] is displayed*
 - During international roaming*
 - In Airplane mode*
 - During Wi-Fi tethering
 - During USB tethering
 - During Android version upgrade
 - When date and time are set incorrectly
 - When battery level is insufficient for software update
- * The update is not available even if Wi-Fi is connected.
- Updating (downloading and rewriting) software may take time.
- Making or receiving calls, each communication function and other functions cannot be used while updating software. However, receiving calls is possible during download.
- It is recommended to update software at a location with good signal conditions while you are not moving. Software update may be interrupted if signal is weak.
- If software has already been updated, [No update is needed.] appears when software update is checked.
- [When docomo network is not available, or during roaming, software update is not available even if Wi-Fi is connected.] appears during international roaming or outside the service area. The same applies while Wi-Fi connection is set.
- While updating software, received SMS is held at SMS center.
- When updating software, the information unique to SH-05F (model, serial number, etc.) is automatically sent to the DOCOMO software update server. Sent information is only used for software update.
- If software update fails, the handset may not be activated, or [Software Update failed.] may appear and no operations may be available. In this case, bring the handset to a repair counter that DOCOMO specifies.
- When PIN code is set, the PIN code entry screen appears during restart after rewriting and you are required to enter PIN code.
- While updating software, do not activate other apps.

Auto-update of software

You can automatically download new update files and rewrite the software at the set time.

Auto-update setting of software

- The automatic update setting is set to [Automatic Update] by default.

1 In the home screen, [APPS] ▶ [Settings] ▶ [Device info] ▶ [Software update] ▶ [Configure the software update]

2 [Automatic Update]/[Manual Update]


When software update is required

When an update file is automatically downloaded, [🔄] (Update available) appears in the status bar.

- If the time for the rewrite arrives with [🔄] (Update available) displayed, the software is automatically rewritten and [🔄] (Update available) disappears.

1 Drag the status bar down ▶ select the notification

- The rewrite notice screen is displayed and you can confirm the time for the rewrite.

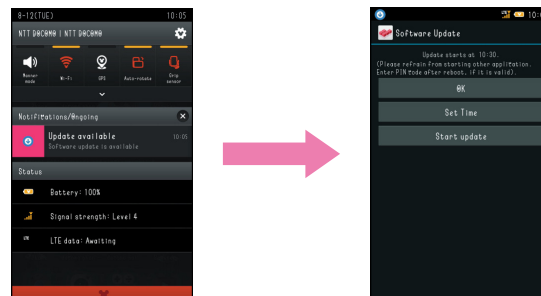

2 Select the rewrite method

- OK:** The update starts when the set time arrives.
- Set Time:** For details P. 94 "Reserve update of software"
- Start update:** For details P. 93 "Now update of software"



- If software cannot be updated when update notification is received, [🔄] (Update available) appears in the status bar.
- If software cannot be rewritten at the time for the rewrite, software is rewritten at the same time of the following day.
- Software cannot be automatically updated when the automatic update setting is set to [Manual Update] or while updating software by Now update.

Now update of software

You can update software immediately.

- You can update software from the rewrite notice screen or the menu.

1 In the home screen, [APPS] ▶ [Settings] ▶ [Device info] ▶ [Software update] ▶ [Start the software update] ▶ [Yes]

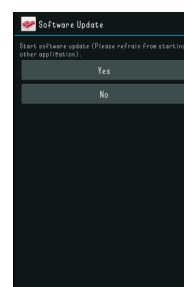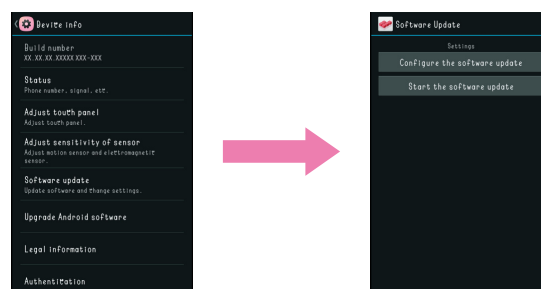

- To update software from the rewrite notice screen: Display the rewrite notice screen ▶ [Start update]

2 Approximately 10 seconds after [Ready for update.] appears, the rewrite automatically starts

- Touch [OK] to start the rewrite immediately.
- During update, no key operations are available. It is not possible to cancel update.
- When the update is complete, the handset restarts and the home screen is displayed.

- When software update is not necessary, [No update is needed.] appears.

Post-update display

When the software update is complete, the notification appears in the status bar. Open the status panel and touch the notification to display the completion screen.

Reserve update of software


You can change a time for software rewrite if you want to set a different time for installing update files.

1 Display the rewrite notice screen ► [Set Time]

2 Enter the time ► [OK]

When reserved time arrives

Approximately 10 seconds after the rewrite screen appears at the start time, the software rewrite automatically starts.

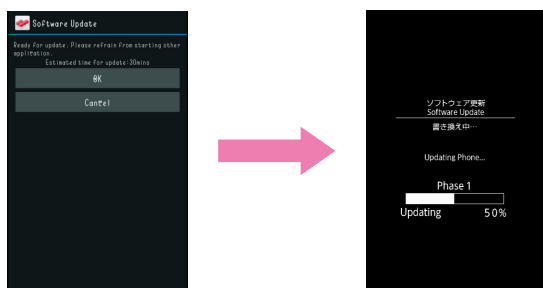

- During update, no key operations are available. It is not possible to cancel update.
- If software cannot be updated at the start time, software is updated at the same time of the following day.
- During Android version upgrade, software is not updated even if the reserved time arrives.
- Software is updated even if the alarm or another function is activated at the same time when the reserved time arrives.
- When SH-05F is turned off at the start time, software is updated at the same time as reserved time after turning on the power.
- If [Software update was suspended Please check the status of the handset and retry.] appears in the status panel during the software update, make sure the handset is not in any of the following states and update the software again.
 - When [Signal icon] is displayed
 - During Wi-Fi tethering
 - During USB tethering
 - When another function is running

Upgrading Android version

Connect the handset to the network and check for Android version upgrade. If necessary, download upgrade files and upgrade.

Android version upgrade

- If the Android version upgrade is necessary, you will be notified by [Upgrade Android software] on the status bar or you can visit the DOCOMO website to check the availability of version upgrades.
- The following changes are made on the handset if the Android version is upgraded.
 - Improvement and addition of functions
 - Improvement of operations
 - Improvement of the product quality
 - Update of security patch
- Be sure to keep the Android version up-to-date to use the handset safely and comfortably.

- You can upgrade the Android version even if the handset contains data in it. However, DOCOMO may not be able to protect data that could be lost due to malfunction, damage, water exposure and so on. It is recommended that important data be backed up before version upgrade. Note that some data cannot be backed up.

Precautions

- Once the version upgrade is completed, you cannot downgrade the Android version to the previous one.
- Fully recharge the battery before upgrading the Android version.
- The docomo mini UIM card is required to upgrade the Android version. If you want to use packet communication to upgrade the Android version, subscription to sp-mode is required.
- End all apps before upgrading the Android version. If another app is activated during the version upgrade, the Android version upgrade may be interrupted.
- Do not turn the power off during the version upgrade.
- No functions including making/receiving calls are available on the handset during the version upgrade.
- Android version cannot be upgraded in the following cases.
 - During a call
 - When [Signal icon] is displayed
 - During international roaming
 - In Airplane mode
 - During Wi-Fi tethering
 - During USB tethering
 - When date and time are set incorrectly
 - When the battery level is insufficient for Android version upgrade
 - When available space on the handset memory is insufficient
- Upgrading version may take time.
- [Unable to start upgrading in an area where docomo signal is unreachable or during roaming even when Wi-Fi connection is enabled.] appears during international roaming or outside the service area.
- When version upgrade is completed, some settings are reset. Re-enter the information or re-specify the settings.
- When upgrading version, the information unique to the handset (model, serial number, etc.) is automatically sent to the DOCOMO version upgrade server. Sent information is only used for Android version upgrade.
- When PIN code is set, the PIN code entry screen appears during restart after rewriting and you are required to enter PIN code.

- If version upgrade fails and all operations become unavailable, bring the handset to a repair counter that DOCOMO specifies.

Operations for upgrading Android version

If the Android version upgrade is necessary, [↕] is displayed on the status bar.

1 Drag the status bar down ► select the notification

- Even if the icon is not displayed on the status bar, you can check whether the upgrade is available by the following procedure. In the home screen, [APPS] ► [Settings] ► [Device info] ► [Upgrade Android software] ► [Start upgrading].

2 Select an item

- **Download now (only via Wi-Fi):** Download upgrade files immediately via Wi-Fi connection.
- **Download later (via Wi-Fi or Xi)*:** Download upgrade files at the automatically set time via Wi-Fi connection or Xi/FOMA.
- **Do not upgrade:** End Android version upgrade without carrying out version upgrade.

* When you cannot download upgrade files via Xi/FOMA, [Download later (only via Wi-Fi)] is displayed.

- [No upgrade is needed.] appears if the handset software is the latest.
- If the download is interrupted, data downloaded up to that point is retained for up to 3 days. You can restart the download from [↕] (Download stopped) on the status panel.
- If you select [Download later (via Wi-Fi or Xi)] or [Download later (only via Wi-Fi)], the time for the download to start is automatically set. The time cannot be changed. If you do not want to download at the automatically set time, [Upgrade Android software] ► [Cancel]. Then select [Download now (only via Wi-Fi)] and download upgrade files.

[Download now (only via Wi-Fi)], [Download later (via Wi-Fi or Xi)]

- The handset restarts after the installation is completed.
- If upgrade files are downloaded, you can install them to the handset.
 - **Install now:** Install the upgrade files immediately.
 - **Install later:** Install the upgrade files at the reserved time.
 - If you want to change the time, in the home screen, [APPS] ► [Settings] ► [Device info] ► [Upgrade Android software] and change the time.

Updating apps

- If you do not update an app which needs to be updated, the app's operations may become unstable or functions may not work normally.
- For details on the supported OS version of an app, contact the provider of the app.

■ Updating from the status panel

If the Android version upgrade is finished and the handset restarts, [↕] is displayed on the status bar.

Drag the status bar down and [Upgrading has been completed] ► [OK] to check updated items in the update list.

■ Updating from Play Store

In the home screen, [APPS] ► [Play Store] ► [≡] ► [My apps] to check that each app has been updated.

Main specifications

■ Handset

Product name	SH-05F
Size	Approx. 141 (H) × Approx. 70 (W) × Approx. 9.0 (D) mm (Approx. 9.4 mm at thickest point)
Weight	Approx. 141 g
Memory	ROM: 32 GB RAM: 2 GB
Continuous talk time*1, 2, 3	FOMA/3G Approx. 960 min GSM Approx. 810 min
Continuous stand-by time*2, 3, 4	FOMA/3G At rest: Approx. 700 hr (Network Mode: LTE/3G/GSM(Auto))*5 GSM At rest: Approx. 590 hr (Network Mode: LTE/3G/GSM(Auto))*5 LTE At rest: Approx. 580 hr (Network Mode: LTE/3G/GSM(Auto))*5
Mobacas watching time*3, 6	Approx. 470 min
TV watching time*3, 7	Full-Seg: Approx. 400 min 1Seg: Approx. 530 min
Charge time	AC Adapter 03: Approx. 240 min AC Adapter 04: Approx. 170 min DC Adapter 03: Approx. 270 min DC Adapter 04: Approx. 180 min
Display	Type TFT (IGZO) 16,777,216 colors Size Approx. 5.0 inches Pixels 2,073,600 pixels (FullHD: horizontal 1,080 × vertical 1,920 pixels)
Earphone/Microphone terminal	Diameter of plug: 3.5 mm stereo mini plug Type of pole: Quadrapoles
Image pickup device	Type Out-camera: Back-illuminated CMOS*8 In-camera: Back-illuminated CMOS*8 Size Out-camera: 1/2.8 inches In-camera: 1/6.9 inches
Camera	Effective pixels Out-camera: Approx. 16.3 million pixels In-camera: Approx. 2.1 million pixels Recorded pixels (Max.) Out-camera: Approx. 15.9 million pixels In-camera: Approx. 2.1 million pixels Zoom (Digital) Out-camera: Up to approx. 16.0× (Still picture)/Up to approx. 16.0× (Video) In-camera: Up to approx. 16.0× (Still picture)/Up to approx. 16.0× (Video)

Recording	Number of recordable still pictures Approx. 160,000 shots (when saved on the handset)*⁹ Approx. 6,500 shots (when saved on 1 GB microSD Card)*⁹ Continuous shooting of still pictures FullHD: 12 shots/HD: 18 shots/VGA: 50 shots File format for still picture JPEG Recording time for video Up to approx. 90 min each/Up to approx. 1,612 min in total (when saved on the handset)*¹⁰ Up to approx. 64 min each/Up to approx. 64 min in total (when saved on 1 GB microSD Card)*¹⁰ File format for video MP4
Music playback	Continuous playback time*¹¹ WMA (Compatible with background playback): Approx. 3,250 min MP3 (Compatible with background playback): Approx. 7,000 min
Video playback	Continuous playback time*¹² WMV: Approx. 990 min
Memory capacity	Approx. 25.2 GB* ¹³
Wireless LAN	Meets IEEE 802.11a/b/g/n (2.4 GHz/5 GHz)/ac
Bluetooth	Supported version Bluetooth standard Ver.4.0 Output Bluetooth standard Power Class 2 Supported profiles (Supported services/versions) HSP (1.2), HFP (1.6), A2DP (1.2), AVRCP (1.3), HID (1.0), DUN (1.1), OPP (1.1), SPP (1.1), PBAP (1.0), PAN (1.0), HDP (1.0), PXP (1.0), FMP (1.0), ANP (1.0), PASP (1.0), TIP (1.0)
Languages	Displayed languages: Japanese and English Input languages (for typing): Japanese and English Input languages (for speaking): Depending on Google voice typing

*1 Continuous talk time is an estimate of the time during which you can talk on a phone in a status where signals are sent and received normally.

*2 Talk (Communication)/Stand-by time is shortened with the frequent use of each function such as data communications, Multiaccess, camera function, TV function or Bluetooth function. Actual using time may change depending on the combination of talk (communication) and stand-by time. The longer the talk time is, the shorter the stand-by time becomes.

*3 Talk (Communication)/Stand-by time may be reduced by approximately half or Mobacas watching time/TV watching time may be shortened depending on conditions including the battery level status, functions used, temperature or other environmental conditions, and signal strength (no signal or weak signal).

*4 Continuous stand-by time is an estimate of the time based on the premise that the handset is carried with you while signals are received normally.

*5 This is the average usage time during which the handset is not carried with you and in a status where signals are received normally.

*6 Mobacas watching time is an estimate of watching time in a status where signals are received normally.

*7 TV watching time is an estimate of watching time in a status where signals are received normally.

*8 CMOS (Complementary metal-oxide semiconductor) is an image device equivalent to the film of silver salt cameras.

*9 Picture Size: VGA (640 × 480)/File size: Approx. 152 KB

*10 Picture Size: VGA (640 × 480)/File size limit: 2 GB/Type: Image + voice

*11 Playback app: Music/Sound effects: Natural

*12 Playback app: Video Player/Sound effects: Natural

*13 Depending on usage of apps which use common memory, the memory capacity of each data may be reduced.

Internal battery

Battery	Lithium-ion
Nominal voltage	3.8V DC
Nominal capacity	3,000 mAh

Approximate storable number/recordable time

This lists the approximate number of shot images and recording times that can be saved on 1 GB microSD Card. The number of images that can be shot or recordable image lengths are fewer or less when other images or other types of files are saved on 1 GB microSD Card. Also, the number or time may be fewer or less depending on the shooting conditions and the subject.

Number of still pictures that can be shot

4K2K: 3840×2160	Approx. 290 shots
FULL HD: 1920×1080	Approx. 1,100 shots
16M: 4608×3456	Approx. 110 shots
4M: 2304×1728	Approx. 560 shots
1.6M: 1440×1080*	Approx. 1,800 shots
VGA: 640×480	Approx. 6,500 shots

* Available only when you use the in-camera.

Recording time of video

Continuous shooting time of 1 GB microSD Card per shot

FullHD: 1920×1080	Approx. 8 min
HD: 1280×720	Approx. 21 min
VGA: 640×480	Approx. 64 min
QVGA: 320×240	Approx. 90 min

Total shooting time of 1 GB microSD Card

FullHD: 1920×1080	Approx. 8 min
HD: 1280×720	Approx. 21 min
VGA: 640×480	Approx. 64 min
QVGA: 320×240	Approx. 324 min

Recording time of voice recorder

Save destination	Number of entries	Recording time
Handset memory (approx. 25.2 GB)*	Up to 723	Up to approx. 4,338 hr

* Each recording time is up to approximately 6 hours.

Specific Absorption Rate (SAR) of Mobile Phones

This model SH-05F mobile phone complies with Japanese technical regulations and international guidelines regarding exposure to radio waves.

This mobile phone was designed in observance of Japanese technical regulations regarding exposure to radio waves (*1) and limits to exposure to radio waves recommended by a set of equivalent international guidelines. This set of international guidelines was set out by the International Commission on Non-Ionizing Radiation Protection (ICNIRP), which is in collaboration with the World Health Organization (WHO), and the permissible limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health condition.

The technical regulations and international guidelines set out limits for radio waves as the Specific Absorption Rate, or SAR, which is the value of absorbed energy in any 10 grams of tissue over a 6-minute period. The SAR limit for mobile phones is 2.0 W/kg. The highest SAR value for this mobile phone when tested for use at the ear is 0.334 W/kg and when worn on the body is 0.507 W/kg (*2). There may be slight differences between the SAR levels for each product, but they all satisfy the limit.

The actual SAR of this mobile phone while operating can be well below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum required to reach the network. Therefore in general, the closer you are to a base station, the lower the power output of the device.

This mobile phone can be used in positions other than against your ear. Please keep the mobile phone farther than 1.5 cm away from your body by using such as a carrying case or a wearable accessory without including any metals. This mobile phone satisfies the technical regulations and international guidelines.

The World Health Organization has stated that "a large number of studies have been performed over the last two decades to assess whether mobile phones pose a potential health risk. To date, no adverse health effects have been established as being caused by mobile phone use."

Please refer to the WHO website if you would like more detailed information.

http://www.who.int/docstore/peh-emf/publications/facts_press/fact_english.htm

Please refer to the websites listed below if you would like more detailed information regarding SAR.

Ministry of Internal Affairs and Communications Website:

<http://www.tele.soumu.go.jp/e/sys/ele/index.htm>

Association of Radio Industries and Businesses Website:

<http://www.arib-emf.org/index02.html> (in Japanese only)

NTT DOCOMO, INC. Website:

<https://www.nttdocomo.co.jp/english/product/sar/>

SHARP Corporation Website:

<http://www.sharp.co.jp/products/menu/phone/cellular/sar/index.html> (in Japanese only)

*1 Technical regulations are defined by the Ministerial Ordinance Related to Radio Law (Article 14-2 of Radio Equipment Regulations).

*2 Including other radio systems that can be simultaneously used with Xi/FOMA.

European RF Exposure Information

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the ear is 0.429 W/kg* and when worn on the body is 0.542 W/kg*. For body-worn operation, this mobile device has been tested and meets the RF exposure guidelines when used with an accessory containing no metal and positioning the handset a minimum of 1.5 cm from the body. Use of other accessories may not ensure compliance with RF exposure guidelines.

As SAR is measured utilizing the devices highest transmitting power the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

* The tests are carried out in accordance with international guidelines for testing.

Declaration of Conformity

CE0168

In some countries/regions including Europe, there are restrictions on the use of 5GHz WLAN that may limit the use to indoors only. If you intend to use 5GHz WLAN on the device, check the local laws and regulations beforehand.

Hereby, Sharp Telecommunications of Europe Ltd, declares that this SH-05F is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
A copy of the original declaration of conformity can be found at the following Internet address:
<http://www.sharp.co.jp/k-tai/> (in Japanese only)

FCC Notice

● This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

● Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

Information to User

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation; if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient/relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

4. Consult the dealer or an experienced radio/TV technician for help.

5 GHz WLAN Operation in USA

Within the 5.15-5.25 GHz band, UNII devices are restricted to indoor operations to reduce any potential for harmful interference to co-channel Mobile Satellite Services (MSS) operations.

FCC RF Exposure Information

Your handset is a radio transmitter and receiver.

It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless handsets employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg.

The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model handset when tested for use at the ear is 0.40 W/kg and when worn on the body, as described in this user guide, is 0.68 W/kg.

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines. Please use an accessory designated for this product or an accessory which contains no metal and which positions the handset a minimum of 1.5 cm from the body.

The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

The FCC has granted an Equipment Authorization for this model handset with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model handset is on file with the FCC and can be found under the Display Grant section of <http://transition.fcc.gov/oet/ea/fccid/> after searching on FCC ID APYHRO00197.

Additional information on Specific Absorption Rates (SAR) can be found on the FCC website at <http://www.fcc.gov/encyclopedia/radio-frequency-safety>.

FCC ID Location

The FCC ID for this device can be found on the plate stowed near the docomo mini UIM card slot.

Please pull out the plate when you want to see the FCC ID.

Export Administration Regulations

The Japan Export Administration Regulations ("Foreign Exchange and Foreign Trade Act" and its related laws) may be applied to this product and its accessories under certain conditions. The Export Administration Regulations may also be applied. To export or reexport the handset and its accessories, conduct all legally required procedures at your own risk and expense. For details on the procedures, contact the Ministry of Economy, Trade and Industry or the US Department of Commerce.

Intellectual Property Right

Copyrights and rights of portrait

- Data with third party copyrights such as text, images, music and software that is downloaded via Internet websites, acquired by TV, video, etc. or shot by the handset cannot be duplicated, altered or publicly transmitted without rightful party's consent. Only duplicating, quoting, etc. for personal use are permitted under the Copyright Act. Even if for personal use, filming and recording may be prohibited for stage performances, shows, exhibitions, etc. Also, shooting another's image or posting another's image on Internet websites without his/her consent may constitute a violation of one's right to his/her image.

Registered trademarks and trademarks

- "FOMA", "dmenu", "dmarket", "おサイフケータイ", "ToruCa", "mopera U", "Deco-mail", "i-appli", "i-mode", "iD", "WORLD WING", "WORLD CALL", "i コンシェル", "sp-mode", "Xi", "eトリセツ", "しゃべってコンシェル", the "iD" logo and the "Xi" logo are trademarks or registered trademarks of NTT DOCOMO, INC.
- "Catch Phone (Call waiting service)" is a registered trademark of Nippon Telegraph and Telephone Corporation.
- Microsoft®, Windows®, Windows Media®, Windows Vista® and Exchange® are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.
- Oracle and Java are registered trademarks of Oracle and/or its affiliates. Other names may be trademarks of their respective owners.
- QR code is a registered trademark of Denso Wave Inc.
- microSD Logo, microSDHC Logo and microSDXC Logo are trademarks of SD-3C, LLC.



- The handset features LCFONT, developed by Sharp Corporation, to make the LCD easier to view and read. LCフォン/LCFONT and  are registered trademarks of Sharp Corporation.
- OBEX™ is a trademark of Infrared Data Association®.
-  is a registered trademark of FeliCa Networks, Inc.

- For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS Sound is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.



- PhotoScouter® is a registered trademark of Morpho, Inc.
- A O S S™ and AOSS™ are the trademarks of BUFFALO INC.
- Wi-Fi® is a registered trademark of Wi-Fi Alliance®.
- Wi-Fi Direct™, Miracast™, Wi-Fi Protected Setup™ and Wi-Fi Protected Setup logo are trademarks of Wi-Fi Alliance®. The Wi-Fi Protected Setup Mark is a mark of the Wi-Fi Alliance.
- “mixi” is a registered trademark of mixi, Inc.
- Twitter and Twitter logo are trademarks or registered trademarks of Twitter, Inc.
- DLNA®, the DLNA Logo and DLNA CERTIFIED™ are trademarks, service marks, or certification marks of the Digital Living Network Alliance. Sharp Corporation has acquired DLNA certification for the device.
- This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit. (<http://www.openssl.org/>)
- This product includes cryptographic software written by Eric Young (eay@cryptsoft.com)
- Portions Copyright © 2004 Intel Corporation
This product partly uses the software of Intel Corporation.
- iWnn of OMRON SOFTWARE Co., Ltd. is used for conversion methods for Japanese language, and for phrase prediction methods for English.
iWnn © OMRON SOFTWARE Co., Ltd. 2008-2014 All Rights Reserved.
iWnn IME © OMRON SOFTWARE Co., Ltd. 2009-2014 All Rights Reserved.
- Shin Go M, the font type installed in this product, is provided by Morisawa & Company, Ltd.
* Shin Go is a registered trademark of Morisawa & Company, Ltd.
- aptX is a registered trademark of CSR plc.
- DigiOn and DiXiM are trademarks of DigiOn, Inc.
- Disney elements: © Disney
The handset, accessories and the packages may contain designs, contents and other works that Walt Disney Company (Japan) Ltd., its parent or their affiliates (collectively, “Disney”) own, co-own or license copyright and other intellectual property rights. Please read the applicable Terms of Use before use.
“Disney Mobile” is the registered trademark of Disney.
- “Magic Mirror Stand” is a trademark of Disney.
- “IGZO”, “Feel UX”, “Welcome Sheet”, “Slow Talk”, “VeilView”, “Bright Keep”, “Sweep ON”, “Another View”, “Social Board”, “NightCatch” and “エコ技” symbol are trademarks or registered trademarks of Sharp Corporation.
- All other company names and product names are trademarks or registered trademarks of the respective companies.

Others

- FeliCa is a contactless IC card technology developed by Sony Corporation. FeliCa is a registered trademark of Sony Corporation.
- Under the MPEG-4 Visual Patent Portfolio License, customers have licensed permission for the following use of this product to engage in non-profit personal use. Other uses are not permitted.
 - Encoding MPEG-4 standard video (henceforth referred to as MPEG-4 video).
 - Decoding an MPEG-4 video that a customer not engaged in personal commercial activities has encoded.
 - Decoding an MPEG-4 video obtained from a licensed provider.
 For details on other intended uses, contact MPEG LA, LLC.
- This product is licensed under the MPEG-4 Systems Patent Portfolio License for encoding in compliance with the MPEG-4 Systems Standard. An additional license and payment of royalties are necessary in the following cases.
 - Data stored or replicated in physical media which is paid for on a title by title basis.
 - Data which is paid for on a title by title basis and is transmitted to an end user for permanent storage and/or use.
 Such additional license may be obtained from MPEG LA, LLC. Contact MPEG LA, LLC for additional details.
- This product is licensed under the AVC patent portfolio license for the personal and noncommercial use of a consumer to (i) encode video in compliance with the AVC standard (henceforth referred to as AVC video) and/or (ii) decode AVC video that was encoded by a consumer engaged in a personal and noncommercial activity and/or was obtained from a video provider licensed to provide AVC video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, L.L.C.
See <http://www.mpegla.com>
- This product is licensed under the VC-1 Patent Portfolio License for the personal and noncommercial use of a consumer to (i) encode video in compliance with the VC-1 standard (henceforth referred to as VC-1 video) and/or (ii) decode VC-1 video that was encoded by a consumer engaged in a personal and noncommercial activity and/or was obtained from a video provider licensed to provide VC-1 video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, L.L.C.
See <http://www.mpegla.com>
- Content owners use Microsoft PlayReady™ content access technology to protect their intellectual property, including copyrighted content. This device uses PlayReady technology to access PlayReady-protected content and/or WMDRM-protected content. If the device fails to properly enforce restrictions on content usage, content owners may require Microsoft to revoke the device's ability to consume PlayReady-protected content. Revocation should not affect unprotected content or content protected by other content access technologies. Content owners may require you to upgrade PlayReady to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.

- The abbreviations of operating systems (Japanese versions) below are used in this manual.
 - Windows 8 stands for Microsoft® Windows® 8, Microsoft® Windows® 8 Pro and Microsoft® Windows® 8 Enterprise.
 - Windows 7 stands for Microsoft® Windows® 7 (Starter, Home Basic, Home Premium, Professional, Enterprise and Ultimate).
 - Windows Vista stands for Windows Vista® (Home Basic, Home Premium, Business, Enterprise and Ultimate).
- The Bluetooth word mark and logos are owned by the Bluetooth SIG, INC. and any use of such marks by NTT DOCOMO, INC. is under license. Other trademarks and trade names are those of their respective owners.
- Google, Google logo, Android, Google Play, Google Play logo, Google+, Google+ logo, Gmail, Gmail logo, Google Calendar™, Google Calendar logo, Google Maps™, Google Maps logo, Google Chrome™, Google Chrome logo, Google Voice Search™, Google Voice Search logo, YouTube, YouTube logo, Google Drive, Google Drive logo and Google Now are trademarks of Google Inc.
-  T-1430015
The Walt Disney Company (Japan) Ltd.

Open source software

- This product includes software based on GNU General Public License (GPL), GNU Lesser General Public License (LGPL) and other licenses.
For details on licenses of related software, in the home screen, [APPS] ▶ [Settings] ▶ [Device info] ▶ [Legal information] ▶ [Open source licenses].
- Source codes of software based on GPL, LGPL and Mozilla Public License (MPL) can be referred to on the following website for free. For details, refer to the following website.
<https://sh-dev.sharp.co.jp/android/modules/oss/> (in Japanese only)

Unlocking SIM lock

- The handset can unlock the SIM lock. Unlock the SIM lock to use non-DOCOMO SIM cards.
- SIM lock can be unlocked at a docomo Shop.
- Commission is incurred separately for unlocking SIM lock.
- When using non-DOCOMO SIM card, it cannot be used in LTE. Also, some services, functions, etc. may be unavailable. DOCOMO shall not guarantee any operation of the handset.
- For details on unlocking SIM lock, refer to the DOCOMO website.

Index

Numerics

3G	86
3G/GSM	86

A

About Gmail	44
Access Point Names	86
Access to my location	71
Accessibility	
Setting Browser	46
Settings	75
Accessibility shortcut	75
Accounts & privacy	19
Add to shortcut	28
Add to widget	28
Adding contacts to phonebook	39
Adding VPN	85
Addr.book pic backup	65
Adjust sensitivity of sensor	75
Adjust touch panel	75
Advanced	46
Advanced call settings	38
Advanced Settings	83
Advanced settings	51
Advanced settings of Mobacas	51
Airplane mode	71
Alarm	
Alarm/Clock	60
Setting Schedule	61
Alarm notification	81
Alarm settings	54
Alarm/Clock	60
Album	57
Android beam	
NFC communication	81
NFC/Osaifu-Keitai settings	49
Android version	75
Android version upgrade	94
Answer time setting	37
Answering Memo List	37
Answering memo setting	37
Answering message setting	37
Anti Flicker	56
App Info	28
App list	28
App screen layout	34
Application	70
Application lock	72
Application manager	71
aptX	80
Audible touch tones	67
Audio settings	54
Authentication	75
Auto capitalization	20
Auto cursor move	20
Auto OFF setting	84
Auto space input	20
Auto timezone	75
AUTO-GPS	71
Automatic brightness	68
Automatic conversion function	87
Automatic date & time	75
Automatic restore	74
Automatically acquire information on program guide	51
Automatically complement	51
Automatically reserve	51

Auto-reset	38
Auto-rotate screen	
Accessibility	75
Display	68
Available services overseas	86
Avoid poor connections	23

B

Back up my data	74
Background playback	51
Backing up to/Restoring from a microSD Card	66
Backing up to/Restoring from Data Storage Box	65
Backing up/Restoring phonebook	40
Backup & reset	74
Backup account	74
Bandwidth management	46
Bar code reader	63
Baseband version	75
Basic operation	17
Batch change lock screen/ home application	32
Battery	69
Battery & energy saving	69
Beep tone	45
Before use overseas	86
Before using camera	54
Beginning prediction for mail	20
Bleach bypass	56
Bluetooth function	78
Bluetooth Smart device connection	80
Bookmark	46
Bright Keep	68
Brightness	68
Browser	45
BT Smart setting	80
Build number	75
Business card reader	63

C

Calculator	62
Call	35
Call forwarding service	38
Call forwarding(charged)	88
Call notification	38
Call settings/Other	37
Call time	38
Call waiting	38
Caller ID display request service	38
Caller ID notification	38
Caller ID notification request service(charged)	88
Camera	
Camera	54
Shooting mode/Camera to shoot with	56
Camera Help	56
Camera Reader	56
Camera settings	56
Card reader mode	69
Change account	61
Change Kisekae	33
Change name	31
Change passwords	51
Change SIM PIN	73
Change wallpaper	33
Changing kisekae	33
Changing screen display to English	22
Changing security key	73
Changing wallpapers	33
Character entry	19

Charging	14	Display left percents of Battery	68
Charging with AC adapter/DC adapter	15	Display programs on air	51
Charging with Micro USB Cable 01	16	Display subtitles	51
Check screen image and beep tone	45	Displaying mail	
Checking after homecoming	88	Email	42
Checking/Using phonebook	39	Gmail	43
Choose date format	75	Displaying message	41
Clear credentials	72	Displaying websites	45
Clear learning dictionary	21	dmarket	47
Cloud setting	61	dmenu	47
Connecting the handset and PC	82	Do not upgrade	95
Connecting VPN	85	docomo apps password	71
Contacting docomo	38	docomo backup	65
Contacts data access monitor	71	docomo cloud	71
Contacts name collaboration	21	docomo location information	71
Contents	1	docomo mail	41
Contents Manager	77	docomo mini UIM card	13
Controller display position	54	docomo service/cloud	71
Convert character code	52	Download dictionary	20
Cookie	51	Download later (via Wi-Fi or Xi)	95
Cooperating with Blu-ray Disc recorder	84	Download now (only via Wi-Fi)	95
Copies		Downward slide	21
Canon Wi-Fi compatible printer settings	82	Drive manner mode	67
EPSON Wi-Fi compatible printer settings	83		
Country code	87	E	
Create by searching channels	52		
Create by selecting the area	52	Early Warning "Area Mail"	44
Create folder	33	Easy auto	56
Cumulated call time	38	Eco backlight control	68
D		Editing phonebook	40
		Email	42
Data broadcasting settings	54	Emergency call	35
Data enabled	86	Emergency mode	19
Data import	74	Emoji/Symb/:) continuous input	20
Data roaming	86	Emoji/Symbol list rows	20
Data transfer	74	Encrypting phone	73
Data usage	70	Energy save standby	69
Date & time		Energy saving settings	69
Settings	75	English guidance	38
Settings for use overseas	87	English user dictionary	20
Daydream	68	Enhance web accessibility	75
Default	74	Entering characters	21
Delete app	28	Entering touch-tone signals	35
Delete Cookie	51	Erase microSD	68
Delete key behavior	20	Export Administration Regulations	98
Delete memory space for broadcasting	51	Extra conversion engine	20
Delete old messages	41	F	
Deleting Early Warning "Area Mail"	45		
Deleting mail	43	Favorites	30
Deleting message	41	File Management	68
Deleting outgoing/incoming call history	37	Finger list	73
Deleting phonebook	40	Fish Eye	56
Deleting thread		Flick sensitivity	20
Gmail	44	FM transmitter	84
SMS	41	Focus settings	56
Delivery reports	41	Font Settings	68
Deterrence rotate screen	70	Food	56
Device administrator	71	For Incoming call	67
Device info	75	For notification	67
Dial pad touch tones	67	Forwarding message	41
Dialpad touch tones	38	Frequency setting	84
Dictionary	64	Full-Seg destination setting	54
Disable linkage to Twitter	51	Function information	
Disable secret mode temporarily	72	Data transfer	74
Disabling PIN lock	73	Settings on shooting with camera	56
Disconnecting VPN	85	G	
Disney Market	47		
Display	68	General	43
Display data broadcasting	51	General inquiries to DOCOMO	38
Display Google Search	27		

General settings	46
Setting Browser	44
Setting Gmail	44
Gmail	43
Google Keyboard	74
Google voice typing	74
GPS/Navigation	59
Grip sensor	70
GSM	86
Guide	72

H

Hand Mirror	56
Handling precautions	8
Handset memory (internal storage)	76
Handsfree setting	80
Hangouts	60
Haptic feedback	
Application lock	72
Sound	67
Help	56
Help & feedback	19
History	
Browser	46
Quick Launcher	30
Home applications	
Home applications	32
Settings	32
Home network server	83
Home network server name	83
Home network settings	83
Home screen layout	
3-Line Home	27
docomo LIVE UX	33
Home screens	33

I

iD appli	49
Importing/Exporting phonebook	24
Improve appearance	68
Incoming call notification	81
Incoming notification while roaming	88
Incoming/Charging lamp	24
Info area	16
Information on apps	34
Initial screen	61
Initial settings	22
Initialize CAS information	54
Inquiries	87
Inquiries about loss, theft, etc. while overseas	38
Inquiries about malfunctions while overseas	38
Inquiries to DOCOMO about malfunctions	38
Install from microSD	71
Installing recommended apps	34
Intellectual Property Right	98
International call (WORLD CALL)	36
International dial assist	88
International prefix	87
International Roaming	86
IP address	23
ISO Sensitivity	56
iWnn IME - SH edition	74

J

Japanese user dictionary	20
--------------------------	----

K

Kernel version	75
Key input guide	20
Keyboard layout	20
Keyboard layouts	19
Koe-no-Takuhaibin	38

L

Landscape	56
Language & input	74
Large text	75
Layout	82
Layout Setting	27
Leftward slide	21
Legal information	75
Link loss notification	81
Local	60
Location services	71
Lock & security	71
Lock No. change	49
Lock SIM card	73
LTE/3G	86
LTE/3G/GSM(Auto)	86

M

MAC address	23
Machi-Chara display setting	33
Magical Theme Changer	32
Magical theme settings/wallpaper	27
Magnification gestures	75
Mail reception notification	81
Mail/Browser	41
Main specifications	95
Make pattern visible	72
Making a call	35
Making a call in your country of stay	87
Making a call outside your country of stay (including Japan)	87
Making a call to a WORLD WING subscriber overseas	88
Making a call using International Dial Assist	87
Manage SIM card messages	41
Managing apps	34
Managing pages	33
Managing playlists	59
Managing the home screen	
3-Line Home	27
docomo LIVE UX	33
Maps	59
Media Player	58
Media Type	82
Memo	62
Mic Setting	56
microSD backup	65
microSD Card (external storage)	76
microSD reader/writer	82
Mini app/Widget	30
Miniaturize	56
Mobacas	50
Mobacas/TV (Full-Seg/1Seg)	49
Mobile networks	71
Mode settings	
OFF	67
Sound	67
Model number	75
Moji-Henshu	74
Monochrome	56
More	71
Mount microSD	68
Move to widget	28

MTP mode	69
Multi Focus	56
My magazine	34
My profile	40

N

Navbar application settings	27
Navigation	59
Network mode	86
Network notification	23
Network operators	87
Network service	
Call settings/Other	38
Roaming settings	88
Network services during roaming	88
Next word guess	20
NFC communication	81
NFC screen-unlock settings	71
NFC/Osaifu-Keitai lock	48
NFC/Osaifu-Keitai settings	49
Night	56
Notifications	41
Notify information of notifications	51
Notify new information	51
Notify on lock screen	51
Nuisance call blocking service	38

O

One-Seg/Full-Seg reception setting	54
OneTouch Shutter	56
Open source licenses	
Call settings/Other	38
docomo service/cloud	71
Operation during a call	36
Operation of touch panel	17
Operation when you hold the phone	70
Operation while using function	17
Operations for upgrading Android version	95
Operations on Welcome Sheet (Lock Screen)	16
Organize backup files	65
Osaifu-Keitai	48
Other settings	45
Outdoor view	68
Outgoing/Incoming call history	37
Outline of international roaming (WORLD WING)	86
Owner info	71

P

Panorama	56
Paper Settings	82
Paper Size	82
Part names and functions	13
Passcode	73
Password	73
Pattern setting	68
PC connection	82
Pedometer	62
Pedometer On	63
Pedometer Reset Time	63
Peel off	
Managing apps/shortcuts	31
Managing apps/widgets/shortcuts	28
Managing mini apps/widgets	31
Personal dictionary	74
Phone ringtone	38
Phone search	19
Phonebook	39
Play Store	47

Playing recorded video of TV (Full-Seg/1Seg)	53
Pointer speed	74
Portrait	56
Portrait(Night)	56
Power button ends call	75
Precautions (ALWAYS FOLLOW THESE DIRECTIONS)	4
Precautions about holding over the other device	48
Prefix settings	38
Prevent simultaneous recording	51
Print Quality	83
Printer	
Canon Wi-Fi compatible printer settings	82
EPSON Wi-Fi compatible printer settings	82
Printing	83
Printing Range	83
Privacy & security	46
Product information	54
Profile	67
Profile setting	71
PTP mode	69
Public mode (power OFF) settings	38
Purchasing apps	47

Q

Quality mode	68
Quick Launcher	30
Quick operation•Labs	46
Quick silent	37

R

Rapid Shooting	56
Reader/Writer, P2P	49
Receive setting	45
Receiving a call	36
Receiving a call overseas	88
Receiving reservation in Shift Time	51
Recent Apps	31
Recent apps key	70
Recording of TV (Full-Seg/1Seg)	52
Recording/Watching reservation of TV (Full-Seg/1Seg)	53
Reject call from pay phone	38
Reject call setting	38
Reject private number call	38
Reject SMS	38
Reject specified numbers call	38
Reject unknown call	38
Reject unregistered call	38
Reload	52
Remote Initialization Service	71
Remote operation settings	38
Remote operation(charged)	88
Rename phone	80
Replying message	41
Replying/Forwarding mail	
Email	43
Gmail	44
Reset cumulated call time	38
Reset facemark list	21
Resetting all	74
Resetting an access point	23
Resize	28
Restrict calls	72
Restrict watching age	51
Restricting incoming calls	88
Rightward slide	21
Roaming call notification(charged)	88
Roaming guidance	88
Roaming guidance(charged)	88
Roaming settings	88

Romaji input assistance	20
S	
Save data to microSD	74
Save to	56
Saved page	46
Schedule	61
Schedule notification	81
Screen display/Icons	25
Screen edge effect	68
Screen lock	71
Screen lock sounds	67
Screen timeout	68
Scroll setting	27
Searching information on the handset and websites	19
Second call settings	38
Secrecy settings	72
Security codes used on the handset	72
Select Application or Shortcut	31
Select language	74
Select storage	51
Select time zone	75
Self check	70
Self-timer	56
Send device error information	71
Send log	51
Sending and receiving by Bluetooth	80
Sending and receiving by iC	78
Sensitivity setting	70
Sepia	56
Set age	51
Set contact secrecy	72
Set date	75
Set docomo ID	71
Set the default settings	21
Set time	75
Set up Wi-Fi hotspot	23
Setting an access point	22
Setting Browser	46
Setting character entry	20
Setting Early Warning "Area Mail"	45
Setting Email	43
Setting genres	34
Setting Gmail	44
Setting menu	67
Setting Messaging	41
Setting Mobacas	51
Setting start-up screen	38
Setting TV (Full-Seg/1Seg)	54
Setting up Google account etc.	24
Setting up mail account	24
Setting up SIM card lock	73
Settings for use overseas	86
SH tool	62
Shooting screenshot	18
Shooting still pictures	56
Shooting videos	56
Shortcut	16
Show apps	33
Show received files	80
Show widgets	33
Shutter mode	56
Silent manner mode	67
SIP Accounts	38
Smartphone Anshin Remote Support	91
SMS	41
Social Board	27
Sorting data	57
Sound	
Setting Messaging	42

Settings	67
Sound & vibration settings	38
Sound on key press	20
Sound settings	51
Sound start charging	67
Speak passwords	75
Specific Absorption Rate (SAR) of Mobile Phones	97
Spell checker	74
sp-mode	23
Stand Animation	68
Standard	56
Standard manner mode	67
Starting day	61
Status	75
StopWatch	61
Storage	68
Store information reader	63
Sub address settings	38
Sweep ON	
Display	68
Sweep ON	18
Switch audio	
Setting Mobacas	51
Video/Audio/Subtitles settings	54
Switch Navibar setting	27
Switch sound-multiplex	54
Switch subtitles	54
Switch videos	54
Switching by motion	68
Synchronizing data	70

T

Telop	51
Tethering	23
Text	56
Text message limit	41
Text reader	64
Text superimpose display	54
Text-to-speech output	
Accessibility	75
Language & input	74
Time change notification	81
Time Lapse	56
Timer	61
To default	31
"Today's schedule" setting	61
Toggle input	20
ToruCa	49
Touch & hold delay	75
Transferring data	82
Translation Capture	57
Translation finder	56
Troubleshooting (FAQ)	89
Turning power on/off	16
TV (Full-Seg/1Seg)	52
TV link	53
TV off timer	54
Typing error correction	20

U

Unknown sources	71
Unlocking SIM lock	100
Unmount microSD	68
Unmount USB memory	68
Update birthday data	61
Update conversion dictionary	21
Updating apps	95
Updating software	92
Upgrade Android software	75

Upgrading Android version	94
Upward slide	21
USB connection	69
USB host function	83
USB tethering	23
Use 24-hour format	75
Use GPS satellites	71
Use Internet calling	38
Use other functions	84
Use secure credentials	71
Useful	69
User Information	63
Using Bluetooth function	79
Using GPS function	59
Using Grip sensor	18
Using groups	40
Using iC communication	78
Using “Kazashite-Link compatible services”	48
Using Osaifu-Keitai compatible handset	48
Using “Osaifu-Keitai compatible services”	48
Using the handset	3
Using the status panel	26

V

VeilView	
Display	68
VeilView	68
Verify apps	71
Vibrate	42
Vibrate on key press	20
Vibrate on ring	38
Video tutorial	
Grip sensor	70
Setting the home screen	27
View result screen	65
Viewing articles	34
Viewing icons	25
Viewing the display	87
Visibility timeout	80
Visible passwords	71
Voice	19
Voice input provider	20
Voice mail service	38
Voice mail(charged)	88
Voice Memo List	37
Voice recorder	62
Voice Search	74
Voice/Answering memo	37
Volume	67
Volume down for incoming calls	70
VPN settings	71

W

Wallpaper	68
Warranty and After-Sales Service	92
Watch programs dubbed to device	84
Watch programs recorded in recorder	84
Watching/Recording reservation in Real Time	51
Waterproof	10
Web browser settings	54
Welcome lighting time	16
Welcome Sheet wallpaper	16
Welcome Sheet(lock screen)	68
White Balance	56
Wi-Fi & mobile network location	71
Wi-Fi for home NW server	83
Wi-Fi frequency band	23
Wi-Fi settings	23
Wi-Fi sleep policy	23

Wi-Fi tethering	23
Wildcard prediction	20
Wireless output (Miracast)	84
Wireless print	82
Wireless print settings	82
Word prediction	20
WORLD CALL	36
WORLD WING	86
WorldClock	61

Y

YouTube	60
-------------------	----

Check/Change the subscription, apply for various services, and request various information materials online.

From sp-mode dmenu ▶ お客様サポート (Support) ▶ ドコモオンライン手続きの一覧をみる (View lists of the docomo online procedure) (free of packet communication charges) (in Japanese only)

From a PC My docomo (<https://www.nttdocomo.co.jp/mydocomo/>) ▶ ドコモオンライン手続き一覧 (Lists of the docomo online procedure) (in Japanese only)

- ※ Use "network security code" to access from sp-mode.
- ※ Some services may be charged when you access the website from sp-mode.
- ※ Use "docomo ID/Password" to access from a PC.
- ※ If you do not have or you have forgotten your "network security code" or "docomo ID/Password", contact the number listed in "General Inquiries" on the last page.
- ※ The websites may not be available depending upon the content of your subscription.
- ※ You may not be able to access some website services due to system maintenance etc.

Using mobile phone with your manners!

Please be considerate of those around you when using the handset.

Turn off your handset in the following places

■ When in an area where use is prohibited

When you are on an airplane or in a hospital, follow the instructions given by the respective airlines or medical facilities. Turn off the handset in areas where the use of mobile phones is prohibited.

Set Public Mode in the following places

■ While driving

Using a mobile phone in hand while driving is regarded as a punishable act. However, some cases such as when rescuing sick and injured people or maintaining public safety are exempted.

■ When in public places such as theaters, movie theaters or museums

Using the handset in public places where you should be quiet results in disturbing others.

Be aware of the place to use a mobile phone and the volume of your voice and ringtone

- Be aware of the volume of your voice when using the handset in quiet places such as restaurant and hotel lobby.
- Use in places where you do not block a passage in the town.

Be considerate of the privacy of the individuals around you

Please be considerate of the privacy of individuals around you when taking and sending photos using camera-equipped mobile phones.

Do not use your smartphone while walking

- Using your smartphone while walking on a platform of a train station, street, etc. may narrow your vision and cause a collision.
- Use your smartphone in a safe place after you stop walking.

These functions ensure manners in public

The handset has convenient functions such as setting not to answer a call and setting to mute sound of the handset.

- **Manner mode** (☎ P. 67 "Mode settings")
Mutes sound of the handset.
※ However, the manner mode cannot mute camera shutter sound.
- **Public Mode (Phone OFF)** (☎ P. 38 "Network service")
When a call is received, a message stating that you are in a place that does not allow the use of mobile phone is played and the call is automatically disconnected.
- **Phone vibration** (☎ P. 67 "Sound")
Notifies you of incoming call with vibration.
- **Answering memo** (☎ P. 37 "Voice/Answering memo")
Records callers' messages when you cannot answer the call.
※ Additionally, optional services such as Voice Mail Service (☎ P. 38 "Network service") and Call Forwarding Service (☎ P. 38 "Network service") are available.



モバイル・リサイクル・ネットワーク
携帯電話 PHS のリサイクルにご協力。

We collect your unnecessary mobile phones and other devices irrespective of carrier. Bring them to a docomo Shop near you.

※ Intended devices: Mobile phone, PHS, battery pack, charger and desktop holder (irrespective of carrier)

General Inquiries <docomo Information Center>

(Business hours: 9:00 a.m. to 8:00 p.m.)

 **0120-005-250 (toll free)**

※ Service available in: English, Portuguese, Chinese, Spanish.

※ Unavailable from part of IP phones.

(Business hours: 9:00 a.m. to 8:00 p.m. (open all year round))

■ **From DOCOMO mobile phones
(In Japanese only)**

 **(No prefix) 151 (toll free)**

※ Unavailable from land-line phones, etc.

■ **From land-line phones (In Japanese only)**

 **0120-800-000 (toll free)**

※ Unavailable from part of IP phones.

● Please confirm the phone number before you dial.

● For Applications or Repairs and After-Sales Service, please contact the above-mentioned information center or the docomo Shop etc. near you on the NTT DOCOMO website.

NTT DOCOMO website <https://www.nttdocomo.co.jp/english/>

Repairs

(Business hours: 24 hours (open all year round))

■ **From DOCOMO mobile phones
(In Japanese only)**

 **(No prefix) 113 (toll free)**

※ Unavailable from land-line phones, etc.

■ **From land-line phones (In Japanese only)**

 **0120-800-000 (toll free)**

※ Unavailable from part of IP phones.

For loss, theft, malfunction, and inquiries while overseas (24-hour reception)

■ **From DOCOMO mobile phones**

International call access code
for the country you stay

-81-3-6832-6600* (toll free)

* You are charged a call fee to Japan when calling from a land-line phone, etc.

※ If you use SH-05F, you should dial the number +81-3-6832-6600 (to enter "+", touch and hold "0").

■ **From land-line phones <Universal number>**

Universal number
international prefix

-8000120-0151*

* You might be charged a domestic call fee according to the call rate for the country you stay.

※ For international call access codes for major countries and universal number international prefix, refer to DOCOMO International Services website.

● **If you lose your handset or have it stolen, immediately take the steps necessary for suspending the use of the handset.**

● **If the handset you purchased is damaged, bring your handset to a repair counter specified by DOCOMO after returning to Japan.**



Don't forget your mobile phone... or your manners!

When using your mobile phone in a public place, don't forget to show common courtesy and consideration for others around you.



**危険です、
歩きスマホ。**

Sales: NTT DOCOMO, INC.
Manufacturer: SHARP Corporation