

# USER GUIDE

**SONIM**  
**XP2.10 SPIRIT**  
English

  
**BUILT FOR LIFE™**

The information contained in this User Manual is written for the Sonim XP2.10 SPIRIT model. The contents of this document are provided “as is”. Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Sonim Technologies Ltd. reserves the right to make changes and improvements to the products and any of the features of the products described in this document without prior notice.

Under no circumstances shall Sonim Technologies Ltd. be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.



Some services and functions in this User Manual may not be supported by all networks, such as 112, the international emergency call number. Please contact the network operator or service provider for clarifications on how to use specific services/functions.



The availability of particular products may vary by region. Please check with the Sonim XP2.10 SPIRIT dealer nearest to you.



This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited. When using the features in this device, obey all laws and respect privacy and legitimate rights of others.



Please read “Important Safety Information” and “Limited Warranty” chapters prior to the use of the mobile phone.

## Disposal of Old Electrical and Electronic Equipment



The symbol of the crossed-out wheeled bin indicates that within the countries in the European Union, this product, and any enhancements marked with this symbol, can not be disposed as unsorted waste but must be taken to separate collection at their end-of-life.

## Disposal of Battery



Please check local regulations for disposal of batteries. The battery should never be placed in municipal waste. Use a battery disposal facility if available.

**General Information — — — — — 6**

Network Services  
Sonim Support Information  
Use the Guide Effectively  
Options Commonly Used Across Menu Items

**Your Safety Guidelines — — — — — 8**

Battery Performance  
Battery Replacement  
Avoid Short Circuit  
Avoid High Temperatures  
Battery Disposal  
Personal Medical Devices  
Child Safety  
Emergency Calls  
SAR Information

**Getting Started — — — — — 13**

Battery Usage  
Inserting the Battery  
Removing the Battery  
Charging the Battery  
Low Battery Alert  
Your SIM Card  
Inserting the SIM/Memory card  
Removing the SIM/Memory card  
Home screen  
Operations in Home Screen  
Basic Settings  
Keypad Functions

**Your Sonim XP2.10 SPIRIT Phone — — — — — 24**

Your Sonim XP2.10 SPIRIT Phone  
Main Menu  
Home Screen Indicators  
Key Operations Without Your SIM Card

**Phone Settings — — — — — 28**

Main Menu  
General Settings  
Phone Profiles  
Display Settings

Power Saving  
Security Settings  
Network Settings  
Data Profiles  
Reset Settings  
Clear All

**Managing Calls — — — — — 33**

Managing Calls  
Dial a Number  
Dial an International Number  
Dial a Number via Contacts  
Dial a Number Via the Calls List  
Managing Call List  
Fixed Number Dialing  
Speed Dial  
Accept/Reject a call  
Any Key Answer  
Call Forwarding  
The Call forward options are mentioned below:  
Call Barring  
Call Waiting  
Caller ID  
Auto Redial  
Headset Auto Answer  
Other Call Settings

**Managing Contacts — — — — — 37**

Managing Contacts  
Add a New Contact  
Dialing a Number From Contacts  
Sending a Message From Contacts  
Add New Group  
Add a New Contact in Group  
Group Settings  
Other Numbers  
Default Contact List  
Sending Contact  
Delete Contacts  
Copy or Move Numbers between Phone, SIM  
Searching Contacts

**Managing Messages — — — — — 40**

- Messages
- Text Input Mode
- Managing SMS Messages
- Managing MMS Messages
- Managing Email Messages
- Managing Draft Messages
- Managing Sent Messages
- Send a Message Via Contacts
- Call Or Save a Number Embedded in a Received Message
- View SMS Memory
- Voice Mail

**Internet Browser — — — — — 47**

- Internet Browser

**Java — — — — — 48**

- Java
- Installing Java Application from SD Card

**Tools — — — — — 49**

- Tools
- Alarm
- Calculator
- Notes
- To-Do
- World Clock
- Stopwatch
- Countdown Timer
- Currency Exchanger
- SIM Toolkit
- Voice recorder

**Managing Calendar — — — — — 52**

- Calendar

**Managing Connectivity — — — — — 53**

- Managing Connectivity
- Bluetooth
- Packet Data Connection
- PC Synchronization

- USB function

**Media Player — — — — — 56**

- Media Player
- FM Radio

**Camera — — — — — 58**

- Camera
- Camera Options

**Flashlight — — — — — 59**

- Flashlight

**Memory card — — — — — 60**

- Memory Card
- Inserting Memory card Into the Phone
- Managing your Memory Card

**Managing Your Files — — — — — 62**

- Managing Your Files

**End User License Agreement — — — — — 63**

- Unconditional 3 year Guarantee
- Our Guarantee
- What We Will Do
- Phone Care
- Conditions

**FCC — — — — — 66**

- FCC Statement

**Declaration of Conformity — — — — — 67**

- Declaration of Conformity

**Index — — — — — 68**



**UNCONDITIONAL**  
**3 YEAR GUARANTEE**

Congratulations on the purchase of a Sonim XP2.10 Spirit™ mobile phone. Sonim XP2.10 SPIRIT is a Tri-band GSM/GPRS/EDGE (900/1800/1900 MHz) and Single band 3G/WCDMA (2100 MHz) phone and has an intuitive, feature-rich user interface, which allows you to make the best use of the offered functions.

## Network Services

These are additional services that you can avail through your network service provider. To make the best of these services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

## Sonim Support Information

For additional product and support information, visit [www.sonimtech.com](http://www.sonimtech.com).

## Use the Guide Effectively

Acquaint yourself with the terminology and symbols used in the guide to help you use your phone effectively.

---

### PRESS

Means to press and release a key immediately. For example, Press 2 means that you press the key on the keypad that is labelled with the numeral 2 and the alphabets “ABC”.

---

---

### SELECT

Means to either press the Left or Right Selection Key to apply the command indicated at the bottom of the screen. The Centre navigation key can also be used to select Menu. For example, if this guide says Select **Menu > Messages > SMS**, you must press the Centre Key or the left selection key (based on the menu) to select Menu, scroll to Messages and press the Centre key, scroll to SMS and press the centre Key. To return to the previous screen, press the Right Selection Key.

---

**PRESS & HOLD**

Means to press and hold a key for a while before releasing the key. This action is typically used when trying to switch on/off the phone or when using shortcuts to access specific functions. For example: press and hold 1 to access voicemail.

**MENU OPTIONS**

These options are displayed at the bottom of the screen. The selection keys are used to accomplish the indicated option.

**SELECT MENU**

Means to press the **Left Selection Key** to select the **Menu** option or press the Menu key (centre) for the same result.

**A MENU ITEM SUFFIXED WITH THREE DOTS (...)**

Means more options are available but only one has been mentioned in the guide.



Signifies a Note.

**Options Commonly Used Across Menu Items**

The following are common actions used across various menu items:

**EXIT**

Displays the previous screen. Use the Right Selection key to perform this function.

**CLEAR**

Deletes data character by character. Use the Right selection key to perform this function.

**OK**

Confirms an action. Use the Left Selection Key or the Menu key to perform this function.

Please read and understand the following safety guidelines before you use the phone. These guidelines provide details to enable you to operate your phone safely and conform to any legal requirements regarding the use of cellular phones.



Do not use the phone at a refuelling point. Observe restrictions when using radio equipment at fuel depots, chemical plants or where blasting operations are in progress.



Electrical interference may obstruct the use of your phone. Observe restrictions in hospitals and near medical equipment.



Switch off your cellular phone when in an aircraft. Wireless phones can cause interference or danger to an aircraft. In an aircraft, the phone can be used in flight mode.



Do not expose the battery to high temperatures (in excess of 60°C).



Adhere to road safety laws. Do not hold/use a phone while you are driving; find a safe place to stop first. Do not speak into a hands-free microphone while you are driving.



Avoid using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.



Use only Sonim XP2.10 SPIRIT approved charging equipment to charge your phone and avoid damage to your phone.

 


The symbol of the crossed-out wheeled bin indicates that within the countries in the European Union, this product, and any enhancements marked with this symbol, can not be disposed as unsorted waste but must be taken to separate collection at their end-of-life.





Ensure that only qualified personnel install or repair your phone.

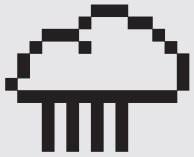

The Sonim XP2.10 SPIRIT is water-proof and can work if submerged to 1 metre and removed within 30 minutes. However, it is not waterproof in deeper water, during charging or when the system connector cover on bottom of the phone is open or compromised.

- To keep your phone waterproof, make sure that the connector cover located at the bottom is firmly plugged in every time it is open for charging or use of a wired headset
- Water droplets may form on the connector cover when it is opened soon after immersion. This does not indicate water leakage. The connector cover is sealed and waterproof.
- Water droplets may condense under the display cover if the phone is immersed in water with significant drop in temperature. This does not indicate water leakage. The droplets will disappear at room temperature.

The Sonim XP2.10 SPIRIT is dust-resistant, rugged and shock-resistant. However, it is not dust-proof or un-breakable if subjected to overwhelming impact. For best results and long product life, one should protect the Sonim XP2.10 SPIRIT from salt water, dust and strong impacts.



Make back-up copies of important information stored in your phone or maintain a written record.

## Battery Performance

A rechargeable battery powers your device. Use the battery only for its intended purpose. Never use any charger or battery that is damaged. If the battery is completely discharged, it may take a few minutes before the charging indicator appears on the display or before any calls can be made. The full performance of a new battery is achieved only after two or three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times but it will eventually wear out. Unplug the charger from the electrical plug and the device when not in use. Do not leave the fully charged battery connected to a charger, since overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time.

## Battery Replacement

When the talk and standby times are noticeably shorter than normal, replace the battery with an original Sonim XP2.10 battery. If a replacement battery is being used for the first time or if the battery has not been used for a prolonged period, it may be necessary to connect the charger and then disconnect and reconnect it to begin charging the battery.

## Avoid Short Circuit

Do not short-circuit the battery. An accidental short-circuit can occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. A short-circuit at the terminals may damage the battery or the connecting object.

## Avoid High Temperatures

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. For the best results, try to keep the battery between 15°C and 25°C (59°F and 77°F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged. Battery performance is particularly limited in temperatures well below freezing.

## Battery Disposal

Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Dispose of batteries according to local regulations and recycle when possible. Do not dispose as household waste. Do not dismantle, open or shred cells or batteries. In the event of a battery leak, do not allow the liquid to come in contact with the skin or eyes. In the event of leak or a hazard seek <sup>10</sup> medical help immediately.

## Personal Medical Devices

Mobile phones may affect the operation of cardiac pacemakers and other implanted equipment. Please avoid placing the mobile phone over the pacemaker, for example, in your breast pocket. When using the mobile phone, place it at the ear opposite the pacemaker. If a minimum distance of 15 cm (6 inches) is kept between the mobile phone and the pacemaker, the risk of interference is limited. If you suspect that interference is taking place, immediately turn off your mobile phone. Contact your cardiologist for more information. For other medical devices, consult your physician and the manufacturer of the device. Comply with instructions to switch off the device or deactivate the RF transmitter function when required, especially when posted in hospitals and aeroplanes. Equipment used in these places may be

sensitive to radio waves emitted from the device and adversely affect their operation. Also, observe restrictions at gas stations or other areas with flammable atmosphere or when close to electro-explosive devices.

## Child Safety

Do not allow children to play with your mobile phone or its accessories. Keep it out of their reach. They could hurt themselves or others, or could accidentally damage the mobile phone or accessories. Your mobile phone and its accessories may contain small parts, which could be detached and create a choking hazard.

## Emergency Calls

Mobile phones operate using radio signals, which cannot guarantee connection under all conditions. Therefore you should never rely solely upon any mobile phone for essential communications (e.g. medical emergencies). Emergency calls may not be possible in all areas, on all cellular networks, or when certain network services and/or mobile phone features are in use. Check with your local service provider.

## SAR Information

**Sonim XP2.10 has been certified in compliance with the Government's requirements for exposure to Radio Waves.**

When communicating over the wireless network, the mobile phone emits low radio waves known as radio frequency energy or RF. The Specific Absorption Rate or SAR is the unit used to measure the amount of RF energy absorbed by the body while using the phone and is expressed in watts/kilogram (W/kg).

Governments around the world have adopted

comprehensive international safety guidelines, developed by scientific organizations, for example, ICNIRP (International Commission on Non-Ionizing Radiation Protection) and IEEE (The Institute of Electrical and Electronics Engineers Inc.), through periodic and thorough evaluation of scientific studies. These guidelines establish permitted levels of radio wave exposure for the general population.

Tests for SAR are conducted using standardized methods with the phone transmitting at its highest certified power level in all used frequency bands.

**SAR Data Information for residents in countries that have adopted the SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP). For example, European Union, Japan, Brazil and New Zealand.**

The limit recommended by ICNIRP is 2 W/kg averaged over ten (10) gram of tissue.

The highest SAR value for the Sonim XP2.10 phone when tested by Sonim for use at the ear is 1.06 W/kg (10g).

**SAR Data Information for residents in the United States and Canada.**

In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kilogram averaged over one gram of tissue. The standard incorporates a margin of safety to give additional protection for the public and to account for any variations in measurements.

Before a phone model is available for sale to the public in the US, it must be tested and certified by the Federal Communications Commission (FCC) that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (that is, by the ear and worn on the body) as required by the FCC for each model.

The FCC has granted an Equipment Authorization for XP2.10 with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. While there may be differences between the SAR levels of various phones, all mobile phones granted an FCC equipment authorization meet the government requirement for safe exposure.

The highest SAR value for the XP2.10 phone when tested by Sonim for use:

- By the ear is 0.681 W/kg (1 g)
- When worn on the body is 0.204 W/kg (1 g) for speech and 0.318 W/kg (1 g) for data calls.

For body-worn operation, this phone meets FCC RF exposure guidelines provided that it is used with a non-metallic accessory with the handset at least 1.5 cm from the body, or with the original Sonim accessory intended for this phone and worn on the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

## Battery Usage

- Use only a Sonim XP2.10 SPIRIT certified battery that is designed for this phone model.
- The use of other batteries may void the warranty terms of your phone and cause damage.
- It is recommended to protect the battery from extreme temperature environments and moisture.
- Please keep the battery out of the reach of children.

## Inserting the Battery

### 1 Unscrew Cover

To open the battery cover, rotate both the battery cover screws in an anti-clockwise direction. You can use the screwdriver provided to open the screws.



### 2 Lift Cover

Lift the back cover from both sides to reveal the battery slot.



### 3 Insert Battery

Insert the battery and flush into the battery slot such that the three metallic contacts at the top of the battery are aligned with the metallic contacts within the battery compartment.



### 4 Close Cover

Close the battery cover. Rotate the battery cover screws in clockwise direction. You can use the screwdriver provided to tighten the screws.



## Removing the Battery

13

Follow steps 1 and 2 of “Inserting the Battery” on page 13.

To remove the battery, lift the cover behind the phone and raise the upper end of the battery from the slot.

The battery can now be removed. Follow step 4 of “Inserting the Battery” on page 13 to close the cover.

## Charging the Battery

The battery delivered with your mobile phone is not fully charged. We recommend that you charge your phone fully, before you use your mobile phone for the first time.



## 1 Insert Charger

Insert the charger plug into a power outlet

## 2 Connect to Phone

Insert the (micro) USB connector of the charger to the socket at the left side of the phone.



## 3 Charging Animation

If the battery is being charged when the phone is switched off, only the animated battery icon is displayed

## 4 Charging Icon

If the battery is being charged while the phone is switched on, you will notice that the bars in the battery icon increase and (visible on the home screen) the battery icon blinks, indicating that the battery is being charged. After the phone is fully charged, the battery icon stops blinking. You can disconnect the charger from the phone.

## 5 Charging Process

After the charging process has begun, the only way to stop charging is to disconnect the charger.

**CAUTION:** There is a risk of explosion while charging, if Sonim certified battery for Sonim XP2.10 SPIRIT is not used.

### Low Battery Alert

Every time the battery charge is low you hear an alarm. By default, the alarm is enabled for all the profiles. To disable the alarm, select **Menu > Settings > Phone Profiles > select the profile > Menu > Edit Phone Profiles > Low battery tone > Off**.

14

### Your SIM Card

Purchase a SIM card from your mobile operator. Your phone number and user registration information always remain the same.

For 3G and data services subscriptions, contact the service provider/mobile operator.

 
### Inserting the SIM/Memory card

## 1 Switch Off Phone

Ensure that the phone is switched off.


## 2 Lift Cover

Lift the battery cover and remove the battery. For instructions refer **“Inserting the Battery”** on page 15

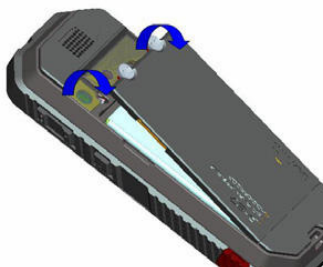


## 3 Place SIM Card

 Open the SIM card holder and place the SIM card into the designated slot located and close the holder

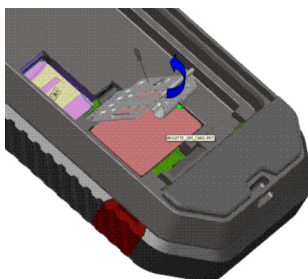

## 4 Place Memory Card

 Open the memory card holder and place the memory card into the designated slot and close the card holder.

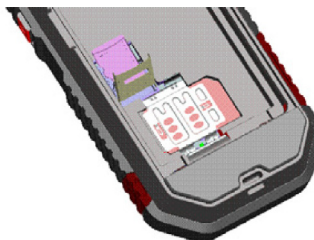

## 5 Close Cover

Reinsert the battery and the cover. Turn the battery cover screws clockwise to lock the battery cover.



 
## Removing the SIM/Memory card

### 1 Switch Off Phone

Ensure the phone is switched off.


### 2 Lift Cover

Lift the battery cover and remove the battery. For instructions refer **“Inserting the Battery”** on page 15

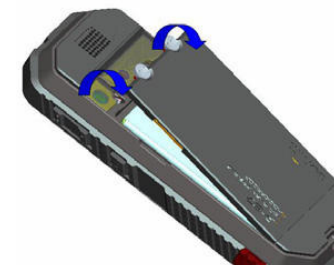

### 3 Remove SIM/Memory Card

 Remove the SIM/memory card by pushing it downward from the slot.

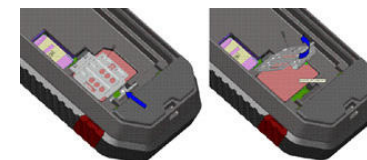

15

### 4 Close Cover

Reinsert the battery and the cover.



# Parts of the SONIM XP2.10 SPIRIT Phone

The Sonim XP2.10 SPIRIT keypad has nine function keys and 12 alphanumeric keys. The left side of the phone has 2 keys and the right side of the phone has 3 keys.





# Parts of the SONIM XP2.10 SPIRIT Phone



# Sonim XP2.10 SPIRIT Keypad

The following figure identifies different keys in the phone keypad. Numeric keys and arrow keys can be configured as shortcut keys. The figure shows the default short cuts.



The alpha-numeric keys comprise numbers from one to zero, alphabets from A-Z, plus [\*] and [#] keys. By pressing the designated key you can input numbers or characters. Choose the appropriate text input option to enable you to use these keys efficiently.

## Home screen

Certain information is displayed when the phone is in standby mode, for example, the name of the service provider, date and time, battery charge status, GPRS connectivity. Other indicators may be displayed (if the feature is activated), like the alarm, call forward etc. The device with a fully-charged battery can remain in the standby mode for a duration of upto 200 hours.



## Operations in Home Screen

The following can be accessed from the home screen.

| Press                | To Access             |
|----------------------|-----------------------|
| Menu Key             | Main Menu             |
| Left Selection Key   | Calendar              |
| Right Selection Key  | Contacts              |
| Call/Accept/Send Key | All Calls List        |
| Up Arrow             | Main screen shortcuts |
| Down Arrow           | Main screen shortcuts |
| Right Arrow          | Inbox                 |
| Left Arrow           | Music player          |



The four functions that are performed using the arrow keys are set as factory defaults, however they can be changed. Select **Menu > Settings > Phone > Shortcut key**. Select the arrow key and select the shortcut.

## Basic Settings

When you have switched on your phone the name of the service provider is displayed.

## Security Settings

To prevent unauthorised use of your phone, you can set a PIN code. The PIN is operator dependent.

1. Select **Menu > Settings > Security > PIN activate > Activate**. Enter the PIN. Select **OK**. After this is set, every time you power on the phone, you will be requested to enter the PIN. If the PIN code is wrong you cannot access the phone.
2. To change the PIN code select **Menu > Settings > Security > Change Pin**. You can change codes for PIN and PIN2. Contact your service provider for details.

## Privacy Guard

In the privacy guard mode, the Call list, Contacts, messages and Speed dial can be accessed only by entering a password.

To enter the safeguard password, select **Menu > Settings > Security > Privacy Guard**. Select Protected Items and enter the password. After entering the password, the **Protected Items** screen is displayed. Mark the required features and safeguarded and select **OK**.

The default password for privacy guard is **1234**.

## Phonelock Mode

In the phonelock mode, the phone can be unlocked only by entering a password.

To enter the phonelock password, select **Menu > Settings > Security > Phonelock**. Enter the password. Select **OK**.



The default password for phonelock is **1234..**



To change the safeguard or phonelock password, select **Menu > Settings > Security > Change security code**. Enter the password. Select **OK**. Enter the new password. Select **OK**. Reenter the new password. Select **OK**.

## Auto Keypad Lock

To lock the keypad, select **Menu > Settings > Phone > Auto key lock**. You can choose to switch it off or enable the feature by setting time.

Alternatively press and hold the '\*' key to lock the keypad. To unlock, press \* > **OK**.

## Date and Time

To set the Date and Time, select **Menu > Settings > Phone > Time and Date**.

## Meeting Mode

 
In the meeting mode, the alerts for Calls, Organizer, SMS and battery status are disabled.

Select **Menu > Settings > Phone Profiles > Meeting Mode** OR press and hold the # key.

## Keypad Functions

The following table displays the various keys and the corresponding functions they perform:

| Keypad key                                                                                                     | Operations                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|----------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <br><b>END CALL</b>           | <ul style="list-style-type: none"> <li>• <b>Press</b> to end a call (GSM).</li> <li>• <b>Press</b> when in Menu or Edit modes to return to Standby mode.</li> <li>• <b>Press</b> to reject an incoming call.</li> </ul>                                                                                                                                                                                                                                                           |
| <br><b>CALL/ACCEPT/SEND</b>   | <ul style="list-style-type: none"> <li>• <b>Press</b> to answer an incoming call.</li> <li>• After entering a phone number, <b>press</b> to make a call.</li> <li>• <b>Press</b> while in Standby mode to access All calls list.</li> </ul>                                                                                                                                                                                                                                       |
| <br><b>LSK/RSK</b>            | <p>These keys are present immediately below the display screen.</p> <ul style="list-style-type: none"> <li>• <b>Press</b> the Left Selection Key (LSK) or Right Selection Key (RSK) to select the function indicated at the bottom of the screen. The indicated functions can vary according to different program definitions.</li> <li>• <b>Press LSK</b> to access the Calendar in standby mode.</li> <li>• <b>Press RSK</b> to access the Contacts in standby mode.</li> </ul> |
| <br><b>MENU KEY (CENTRE)</b> | <p>Present at the centre of the navigation keys.</p> <ul style="list-style-type: none"> <li>• <b>Press</b> while in standby mode to enter the main menu.</li> <li>• <b>Press</b> when required to be used as a toggle key to select or clear a checkbox.</li> <li>• <b>Press</b> to select the OK command.</li> </ul>                                                                                                                                                             |

| Keypad key                                                                                                      | Operations                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|-----------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  <p><b>NAVIGATION KEYS</b></p> | <p>The Left and Right Selection keys and Power On/Off keys surround this key group. There are arrows on the key that denote the direction to scroll for information displayed on the screen.</p> <p><b>UP/DOWN</b></p> <p>Press to move the cursor up or down in the text editor.</p> <ul style="list-style-type: none"> <li>• <b>Press</b> to view the pages in the text editor.</li> <li>• <b>Press</b> to browse menus/lists at the same level.</li> <li>• <b>Press</b> to view the previous or next picture when previewing pictures.</li> <li>• <b>Press</b> to browse the main menu.</li> </ul> <p><b>LEFT/RIGHT</b></p> <p>Press to navigate between tabs.</p> <ul style="list-style-type: none"> <li>• <b>Press</b> to move the cursor left or right in the text editor.</li> <li>• <b>Press</b> to browse the main menu.</li> </ul> |
| <p><b>ALPHA-NUMERIC KEYS</b></p>                                                                                | <ul style="list-style-type: none"> <li>• <b>Press</b> the required keys to enter the desired phone number and press  to make a call. Alternatively, enter the number and select <b>Option</b> to dial the number.</li> <li>• <b>Press</b> and hold any numeric key to access the shortcut assigned, while in standby mode.</li> <li>• Enter text while in the text editor.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                    |
|                              | <ul style="list-style-type: none"> <li>• <b>Press</b> and hold in standby mode to access your Voice mail.</li> <li>• When entering text, press to enter a dot(.).</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |

| Keypad key                                                                        | Operations                                                                                                                                                                                                                                                                                                           |
|-----------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <ul style="list-style-type: none"> <li>• <b>Press and hold</b> to dial the assigned contact.</li> </ul>                                                                                                                                                                                                              |
|  | <ul style="list-style-type: none"> <li>• <b>Press and hold</b> to display '+' used for dialing an international number, while in standby mode.</li> <li>• When entering text, <b>press</b> to enter space.</li> </ul>                                                                                                |
|  | <ul style="list-style-type: none"> <li>• <b>Press and hold</b> to lock the keypad. Use it as a toggle key to lock and unlock the keypad, while in standby mode.</li> <li>• When entering text, <b>press</b> to switch between lower case, upper case or numeric. <b>Press</b> and hold to enable T9 mode.</li> </ul> |
|  | <ul style="list-style-type: none"> <li>• <b>Press</b> and hold in standby mode to switch between Silent on/off modes.</li> <li>• When entering text, <b>press</b> to display special characters, for example, period, comma, and so on. <b>Press</b> and hold to display the text input languages.</li> </ul>        |




## Your Sonim XP2.10 SPIRIT Phone

 This model is a bar type phone with a single LCD screen. The graphic field of the screen is 240 (w) and 320 (h) pixels. The TFT technology used displays 256K colours.

### Main Menu


To access the phone menu, press the Menu key. The main menu which comprises the following shortcuts

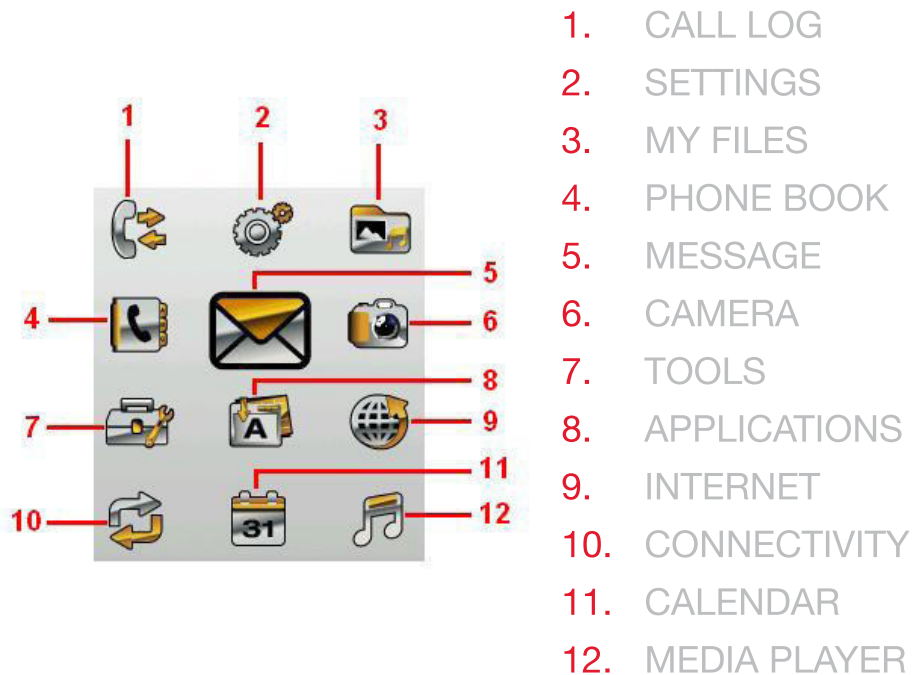

## Home Screen Indicators

The home screen indicators are visible when the phone is in standby mode. Some icons indicate the status of certain functionalities of the phone, for example, the battery charge indicator, the network status indicator, the date and time etc. Some icons are displayed only if the specific service is activated.

 You can also access all the main menu entries as shortcuts using up/down navigation key, from the home screen.

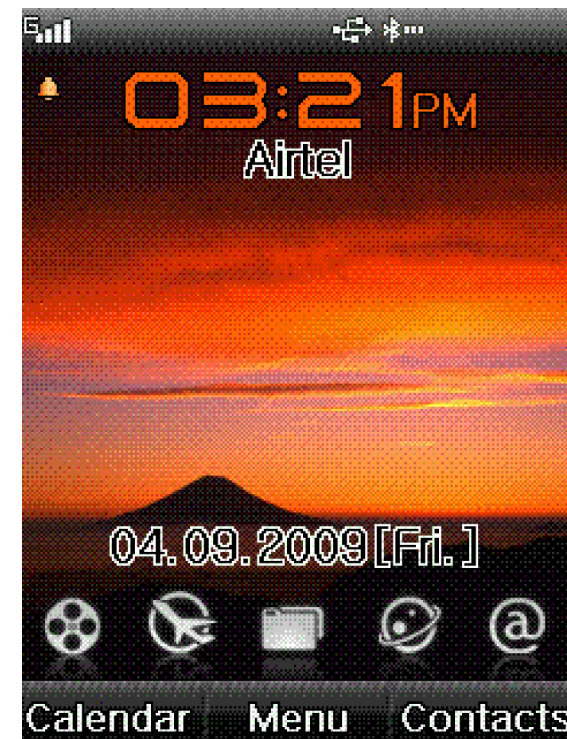

The following table describes the display indicators on the top bar of the home screen in the Sonim XP2.10 SPIRIT phone. These icons depend on the selected theme.

| Display Indicators                                                                                                                                                         | Name                 | Description                                                                                     |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------|-------------------------------------------------------------------------------------------------|
|                                                                                           | <b>Battery</b>       | Four clear bars indicate maximum battery charge. Opaque bars indicate decline in battery charge |
|                                                                                           | <b>Roaming</b>       | This icon is only displayed when your phone is registered with a nonhome network.               |
| <br>     | <b>Data services</b> | Indicates that GPRS is active.<br>Indicates that GPRS is inactive.                              |
| <br> | <b>2G</b>            | Indicates that 2G is active.<br>Indicates that 2G is inactive                                   |
| <br> | <b>3G</b>            | Indicates that 3G is active.<br>Indicates that 3G is inactive.                                  |
|                                                                                         | <b>Alarm Clock</b>   | Indicates that the alarm clock has been set.                                                    |

| Display Indicators                                                                    | Name                   | Description                                            |
|---------------------------------------------------------------------------------------|------------------------|--------------------------------------------------------|
|    | <b>Unread Message</b>  | Indicates that there are unread messages in the inbox. |
|    | <b>Unsent Message</b>  | Indicates that there are unsent messages.              |
|    | <b>SMS Memory Full</b> | Indicates that the SMS memory is full.                 |
|    | <b>Voice Message</b>   | Indicates a new voice message.                         |
|    | <b>Call Divert</b>     | Indicates that call divert has been set.               |
|    | <b>Keypad Lock</b>     | Indicates that the keypad is locked.                   |
|   | <b>Unread MMS</b>      | Indicates that there are unread MMS in the inbox.      |
|  | <b>MMS Memory Full</b> | Indicates that the MMS memory is full.                 |

| Display Indicators                                                                  | Name                          | Description                                                                                 |
|-------------------------------------------------------------------------------------|-------------------------------|---------------------------------------------------------------------------------------------|
|    | <b>Bluetooth</b>              | Indicates that Bluetooth is on.                                                             |
|    | <b>Bluetooth Headset</b>      | Indicates that your phone is paired and connected to a headset with bluetooth connectivity. |
|    | <b>Push Message</b>           | Indicates a new push message.                                                               |
|    | <b>Wired Headset</b>          | Indicates that a wired headset is connected.                                                |
|    | <b>USB Connected</b>          | Indicates that USB is connected.                                                            |
|  | <b>Music in Background</b>    | Indicates that music is playing in background.                                              |
|  | <b>FM Radio in Background</b> | Indicates that FM radio is playing in background.                                           |

| Display Indicators                                                                  | Name                | Description                                  |
|-------------------------------------------------------------------------------------|---------------------|----------------------------------------------|
|  | <b>Meeting Mode</b> | Indicates that the phone is in meeting mode. |
|  | <b>Outdoor Mode</b> | Indicates that the phone is in outdoor mode. |
|  | <b>In car mode</b>  | Indicates that the phone is in driver mode.. |
|  | <b>Silent Mode</b>  | Indicates that the phone is in silent mode.  |
|  | <b>Flying Mode</b>  | Indicates that the phone is in flying mode.  |

## Key Operations Without Your SIM Card

### Menus Accessible

The following menus can be accessed on the phone without the SIM card:

- General settings
- Display settings
- Sounds settings
- Security settings - only phone security
- Phone book - contacts stored in the phone only
- My files
- Camera
- Tools
- Applications
- Schedule
- Media player

## Main Menu

You can activate and modify various settings on your Sonim XP2.10 SPIRIT phone. On the Standby screen, press **Menu key** to access the main menu. Press the navigate keys to browse the icons, or press number/character keys based on the given reference table, to access the functions directly.

| Number | Menu         |
|--------|--------------|
| 1      | Call log     |
| 2      | Settings     |
| 3      | My files     |
| 4      | Phone book   |
| 5      | Message      |
| 6      | Camera       |
| 7      | Tools        |
| 8      | Applications |
| 9      | Internet     |
| 0      | Calendar     |
| *      | Connectivity |
| #      | Media player |

## General Settings

press **Menu** to access the main menu. Select Settings or press 2 to go to general settings.

### Phone

Select Phone to edit the following settings:

#### Time and Date

You can set and display the current date and local time on the phone. You can also select the display format.

To set your local time, press **Menu key > Settings > Phone > Time and Date > Set Time**. Change the time and press **Select**.

To set your local time, press **Menu key > Settings > Phone > Time and Date > Set Date**. Change the date and press **Select**.

To change the time or date format select **Set time format** or **Set date format** and select the required format.

The time formats supported are 12 hr and 24 hr. The date formats supported are yyyy/mm/dd, yyyy.mm.dd, dd/mm/yyyy, dd.mm.yyyy, mm/dd/yyyy or mm.dd.yyyy.

#### Languages

You can change the phone's interaction language by selecting your preferred language. For example, To set the phone language as Deutsch, press **Menu key > Settings > Phone > Languages > Deutsch**, and press **Select**.

## Default Input Method

You can change the commonly used text input mode as your default input method. For example, To set the text input mode to T9 English, press **Menu** key > **Settings** > **Phone** > **Default Input Method** > **T9 English**, and press **Select**.

## Shortcut Keys

For easier access, you can assign various menu settings/tools/applications to the navigation keys and the number (2-9) keys. press **Menu** key > **Settings** > **Phone** > **Shortcut Key** > select the required **Navigation/number** key > press the **Menu** key > select the required setting/tools/application > press **Select**.

## Autokey Lock

The keypad should be locked automatically when the phone is in idle state on home screen.

To set a time period for locking the keypad, press **Menu** key > **Settings** > **Phone** > **Auto Key lock** > select the required **time period** > **Select**.

## Schedule Power On/Off

To set a time for automatically switching Off/On your phone press **Menu** key > **Settings** > **Phone** > **Schedule Power On/Off** > **Activate/Deactivate** the power On and Power Off mode > set the **time** and press **Save**.

## Memory Status

To view the used and memory status for stored information such as My files is displayed press **Menu** key > **Settings** > **Phone** > **Memory Status** > view the information and press **Back** to go to the phone settings menu.

## Phone Profiles

You can customise the profiles to use Ring tone, Ring type, Keypad volume, Low battery tone and vibration pattern.

To set a profile select **Settings** > **Phone Profiles** > select the required profile press **Select**.

To edit a profile select **Settings** > **Phone Profiles** > the required profile > press **Menu** > **Edit phone Profiles** > edit the profile properties and press **Back**.

There are six environment profiles present in this phone. The profiles are,

- **Normal:** This is the default profile where all sounds are enabled. Parameters in this mode can be changed.
- **Meetings:** Only the vibrate mode is enabled. Parameters in this mode can be changed.
- **Outdoor:** Both the vibrate and ring modes are enabled. Parameters can be changed.
- **In Car:** Both vibrate and Parameters in this mode can be changed.
- **Silent:** All sounds are kept in mute.
- **Flight:** In this profile you cannot make or receive any calls and perform any tasks that require network coverage. You cannot rename Flight modes.

## Display Settings

Press **Menu** key > **Settings** > **Display**. The following display settings are displayed:

1. **Greeting:** Select **Text or animated flash**. Enter the greeting and **Save** to make it appear on the screen while powering on the phone.
2. **Wallpaper:** Allows you to set the background screen display using the embedded pictures available in your phone or from your own pictures that you have downloaded on to your phone or Memory card.
3. **Themes:** Allows you to set the colour theme and icons for the main menu and other screens. There are two themes available.
4. **Active Standby:** The active standby icons are displayed in the home screen, in idle mode. You can use up/down arrow to select the icon and left/right to navigate to the other icons. You can select upto 5 shortcuts to be included.

## Power Saving

Press **Menu** > **Settings** > **Power saving**, to conserve the battery power. The following display settings are displayed:

1. **Backlight Setting:** Select the backlight level of the screen display as, high, medium low or auto.
2. **Backlight timer:** Keeps the screen display active for the period chosen by you. Select the screen display active time.

## Security Settings

To prevent unauthorised use of your phone, you can set PIN protection, safeguard and phonerlock.

Press **Menu** key > **Settings** > **Security Settings**.

- **Pin activate:** Set to lock the SIM card. To enable PIN protection select **Activate**.
- **Change Pins :** To change the pin, select **Change Pins** and change the particular pin password.
- **Power On Lock :** 4 to 8 digit code set to unlock the phone when it is switched ON.
- **Phone Lock :** 4 to 8 digit code set to prevent the phone from unauthorized usage.
- **Change Security Code :** Set a new security code for the phone.
- **Fixed Numbers :** Set to restrict outgoing calls to specific numbers only.
- **Privacy Guard :** Set to protect personal data such as phone book, call log, messages, and my files.
- **SIM Lock:** Set to protect the phone from unauthorized changing of SIM card.



## Network Settings

This relates to various network related settings. Press **Menu** key > **Settings** > **Network**. The following options are displayed:

- **Search Type:** Select **Automatic** to set the phone to automatically select a cellular network available in your area, or select **Manual** to set the network manually, while roaming. If manual mode is set, You need to invoke **New Search** to do network selection.
- **New Search:** Search for a available networks manually.
- **Preferred Networks:** View the list of networks. Select **Options** to **Add** , **Delete** or **Reorder the preferred networks**. This list is made to use while the user is roaming.
- **SIM network mode:** View and set the type of networks. The different options are,
  - **Automatic:** Recommended option. This option registers on a 3G network, if available. Else, the phone registers to a GSM network. A 'W' in the signal bar represent the 3G network
  - **3G (WCDMA) Only:** The phone shall register on 3G network only. If 3G coverage is not available, the phone goes to no signal condition, even if GSM coverage is present.
  - **GSM only:** The phone shall register to GSM network only.

## Data Profiles

This relates to different server profile settings required for accessing MMS, Java applications, Internet, email, and video and music streaming Press **Menu** > **Settings** > **Data Profiles**.

### Internet Profile

Set the profile to access Internet using Web browser, and

send/receive MMS messages.

### Web Browser Profile

Enter the following details to access the Internet using your phone.

- **Profile Name:** The name of the profile
- **Web Protocol :** Set the protocol to **HTTP** or **WAP**.
- **Proxy Address:** The address of the proxy server.
- **Proxy Port Number:** The port number of the proxy server.
- **Login name:** The user name required to access the account.
- **Password:** The password required to access the account.
- **Home URL:** The URL of the Message centre.

31

### MMS Profile

Enter the following details to access the multimedia services using your phone.

- **Profile Name:** The name of the profile
- **Type:** Set the protocol to **HTTP** or **WAP**.
- **Security:** Set the network security.
- **Proxy Address:** The address of the proxy server.
- **Proxy Port Number:** The port number of the proxy server.
- **Login name:** The user name required to access the account.
- **Password:** The password required to access the account.

- **Relayservice URL:** The URL of the Message centre.
- **Secure Relayservice URL:** The secure URL of the Message centre.

your computer, before performing **Clear All**.

## Data Profile

Enter the following details to configure the APN.

- **Profile Name:** The name of the profile
- **APN:** The name of the access point.
- **IP:** The IP address of the browser gateway.
- **Primary DNS:** The address of the primary DNS server.
- **Secondary DNS:** The address of the secondary DNS server.
- **Security:** The network security. This can be set to **None**, **PAP** or **CHAP**.

After configuring the data profile , press Select **Data profile** for associating the different profiles for MMS, Javabox, Internet, Email and streaming. Select the service and press **Select** to view the list of profiles. Select a profile.

## Reset Settings

Select **Menu** key > **Settings** > **Reset Settings** to reset the settings to the original factory settings. Note that this can remove changes you have made to your settings.

## Clear All

Select **Menu** key > **Settings** > **Clear All** to reset all the settings to the original factory settings, and clear all user data.

Make sure to backup your data to the Memory card or

## Managing Calls

Before making a call you must ensure the following:

- Keypad is not locked.
- A valid SIM card is installed.
- Phone battery is charged.
- Phone is switched on and the network operator's name or number is displayed.

### Dial a Number

1. Use the numeric keys to enter the number and press .
2. Alternatively you can enter the desired phone number and select **Options > Voice Call**.

### Dial an International Number

**Press** and hold the numeric key 0 till the + symbol is displayed. Enter the Country code, Area code (without preceding 0) and the phone number and press  or select **Option > Voice Call**.

### Dial a Number via Contacts

You can dial a number directly from the Contacts.

#### To Locate a Phone Number

1. On the home screen, select **Contacts**. Select the specific contact.
2. Press  to dial the number OR select **Option > Voice Call** or press the **call** key. Press  or Select **End** to disconnect.

## Dial a Number Via the Calls List

The Calls list comprises separate lists for All calls, Missed calls, Answered calls and Outgoing calls.

1. To access the Calls list, press  OR select **Menu > Call log**. All the available call lists are displayed.
2. Select a list, scroll to the number and press  to dial the number.

## Managing Call List

Contacts within the call list have the following options:

- **Save:** You can save the number in Contacts (if it is not saved).
- **Voice Call:** You can dial the number from the call list
- **Send SMS:** You can send an SMS to the number. Enter the SMS and select **Menu** to view the SMS options and send it accordingly.
- **Send MMS:** You can send an MMS to the number. Enter the MMS and select **Menu** to view the MMS options and send it accordingly
- **Edit Before Call:** You can edit the number before dialing.
- **Delete:** Delete the chosen number.
- **Delete All :** Delete all the numbers in the call list.

## Fixed Number Dialing

A fixed set of numbers are stored as fixed numbers and only those numbers can be dialed from the phone. User(s) can make calls from Contacts or dial the number if the selected number is stored in fixed numbers list. User(s) can however receive calls from any number. User(s) cannot make calls to the numbers which are not stored in fixed numbers list.

1. Select **Menu > Settings > Security > Fixed Numbers > On**. Enter the PIN2 to activate fixed number dialing.
2. Enter the PIN2 to activate fixed number dialing. To add a new number to the list go to **Phonebook > Advanced > Other Numbers > Fixed Numbers**.



For your PIN2, please contact your operator.

## Speed Dial

This option enables you to dial a number quickly via a shortcut.

1. If shortcut is not set for Speed dial, select **Menu > Settings > Phone > Shortcut key > Number Key > Number Fast Dial > Set**. Select the number. Enter a new number or add from the phone book.
2. Press and hold the shortcut designated for Speed dial from home screen. The Speed dial screen appears.
3. To add a new contact, scroll to an empty slot, select **Add**. Select the contact. Select **Yes** to add a picture or **No** to not add picture. Select the picture from Default pictures OR Phone memory OR SD card. The

Speed dial is set.

4. To make a call, press . The other options available for a contact are View, Replace, Delete and Send message.

## Accept/Reject a call

1. To receive a call, press the **Answer** key.
2. To reject a call press the **Reject** key. To mute the ringing tone of an incoming call, press **Silence**.
3. To receive another call while you are already speaking, enable the call waiting feature for GSM calls. Select **Menu > Settings > Calls > Call waiting > On**. For details on how to enable Call waiting facility, refer “[Call Waiting](#)” on page 36.

## Any Key Answer

When enabled, you can press any key except to answer a call.

To activate this feature, select **Menu > Settings > Calls > Anykey answer > On**. You can also press the number key **6** in the **Calls** menu to goto Auto Answer screen.

## Call Forwarding

You can forward your incoming calls to a number in the Contacts or a new number or voicemail, provided your network operator supports this service. To access call forward settings, select **Menu > Settings > Calls > Call divert** .

The Call forward options are mentioned below:

| Call Divert Option   | Function                                                                                     |
|----------------------|----------------------------------------------------------------------------------------------|
| <b>Divert Always</b> | Forward all incoming calls to a pre-designated number.                                       |
| <b>On Busy</b>       | Forward calls when your phone is busy.                                                       |
| <b>No Reply</b>      | Forward calls when you do not answer incoming calls.                                         |
| <b>Unreachable</b>   | Forward calls when you have switched off your phone or you are out of network coverage area. |
| <b>Cancel all</b>    | Deactivates the call forward option.                                                         |



When divert always is enabled, the icon  is displayed at the top of the screen when the phone is in standby mode.

## Call Barring

You can set Call barring facility for all outgoing calls, outgoing international calls, local and home only, all incoming calls or roaming incoming calls.

1. To set call barring settings, select **Menu > Settings > Calls > Call barring**.
2. Select the Call barring option and press **Select**.
3. Enter the restriction password. (Your network operator provides this before you use this function). This pass\

password will be sent to the network for verification.

The Call barring options are mentioned below:

| Call Barring Option                 | Function                                                                |
|-------------------------------------|-------------------------------------------------------------------------|
| <b>Outgoing calls</b>               | All outgoing calls are barred.                                          |
| <b>International calls</b>          | All international calls are barred.                                     |
| <b>International except to home</b> | All international calls except the calls to the home network are barred |
| <b>All incoming calls</b>           | All incoming calls are barred.                                          |
| <b>Roaming incoming calls</b>       | All incoming calls, while roaming, are barred.                          |
| <b>Cancel All</b>                   | Deactivates call barring.                                               |
| <b>Change Password</b>              | Modify Call barring restriction password.                               |

## Call Waiting

When call waiting is enabled and your phone is in conversation, the number is displayed when you receive an incoming call.

1. To enable this facility, select **Menu > Settings > Calls > Call waiting > On**.
2. To cancel this facility, select **Menu > Settings > Calls > Call waiting > Off**. You will not be prompted when you receive an incoming call while your phone is busy. The caller will receive a busy signal.
3. To verify the call waiting status, select **Menu > Settings > Calls > Call waiting > Status**.

## Caller ID

When Caller ID is enabled and your number is displayed to the receiver.

1. To display the caller ID, select **Menu > Settings > Calls > Caller ID > Default**. By default, the caller ID is displayed.
2. To hide the caller ID, select **Menu > Settings > Calls > Caller ID > Hide number**. Due to operator limitations, the call might not get connected if this feature is enabled.
3. To send the caller ID, select **Menu > Settings > Calls > Caller ID > Send Number**.

## Auto Redial

When auto redial is enabled, your phone will automatically redial within a set interval, if a call does not connect.

1. To enable this function select **Menu > Settings > Calls > Auto redial > On**.

2. If the attempt to call is not successful, you will be prompted with the message **Auto redial?** Select **Call** to redial. Select **End** to return to home screen.

## Headset Auto Answer

When headset auto answer is enabled, your incoming calls will automatically be answered.

Select **Menu > Settings > Calls > Headset Auto answer > On**.

## Other Call Settings

- **Connection** : When enabled, receive an audio alert when the receiver picks up the call. Select **Menu > Settings > Calls > Alert tone > Connection > On**.
- **Minute Alert**: When enabled, you receive a prompt at the 45th second of every minute during a conversation. Select **Menu > Settings > Calls > Alert tone > Minute Alert > On**.
- **Prefix Setting**: You can create a list of prefix numbers and set user defined prefix names, for international access codes and area codes.



## Managing Contacts

You can use the Contacts list to maintain phone numbers of your contacts. This feature enables you to add, delete, dial phone numbers and send messages. To access the contacts, select **Menu > Phonebook**. The contacts are displayed.

### Add a New Contact

- To add a new contact, select **Menu > Phonebook > Menu > New contact**. Select the location. Enter the name and other contact details and select **Save**.
- Alternatively, you can directly enter a number and select **Save**. Select New contact or update an existing contact. Enter the other contact details and select **Save**.

The new number is updated in the Contacts list.



If **Phone** is selected as the storage location, then the user can add many details apart from the name and phone number.

### Dialing a Number From Contacts

On the home screen, select **Menu > Phonebook**. Select the contact and press **Dial** key.

### Sending a Message From Contacts

- On the home screen, select **Menu > Phonebook**. Select the contact. Select **Menu > Send message**.
- Select Send SMS or Send MMS, based on the message type.
- Enter the message and select **Send**.

## Add New Group

To create a Group, **Menu > Phonebook > Menu > Advanced > Group > Phone > Menu > Add**.

### Add a New Contact in Group

On the home screen, select **Menu > Phonebook > Menu > Advanced > Groups**. Select the group. Select **Add member**. The phone numbers in Contacts are displayed. Select the phone numbers to be added to the group.



Only the contacts stored in phone memory can be added to the group.

## Group Settings

To view contacts, select **Menu > Phonebook > Menu > Advanced > Group**. Select the group. Select **View** to view the contacts in the group.

To edit group settings, select **Menu > Phonebook > Menu > Advanced > Group**. Select the group. Select **Menu**. The following options are displayed:

- New Group:** Create a new group.
- Send message:** You can send a message to the contacts in the group.
- Rename:** You can rename the group. Enter the new group name. Select **OK** to save.
- Ring Setting:** Set a voice call or messaging tone for this group.
- Delete:** Delete the group. Deleting the group will not delete the contacts.



## Other Numbers

You can store some special purpose phone numbers in this location. It has three categories:

- **View My Number:** You can manage your own information. Select **Menu > Phonebook > Menu > Advanced > Other numbers > View my number**. The following sub-menus are present.
  - **Edit:** Enter your Mobile number and Select **Save**.
  - **Delete:** You can delete your information.
  - **Send Vcard:** You can send your information to any number via SMS.
- **Service Numbers:** Contains the service numbers provided by the operator.
- **Fixed Number:** Contains fixed dialling number.

## Default Contact List

You can select to view the contacts stored in the phone, SIM or both, when you access the phone book.

1. Select **Menu > Phonebook > Menu > Advanced > View contacts from**.
2. Select **Phone and SIM** or **Phone** or **SIM** to select the default contact list displayed.

## Sending Contact

You can send contact information by SMS or by Bluetooth.

### Send Contact by SMS

1. Select **Menu > Phonebook**.
2. Select the contact and select **Menu > Send Vcard > via SMS** and send the SMS message.

### Send Contact by Bluetooth

1. Select **Menu > Phonebook**.
2. Select the contact and select **Menu > Send Vcard > Send via Bluetooth**.
3. If Bluetooth is not on, the user will get a prompt to turn it on.
4. Select **Search For Devices** > select the paired device to which you want to send the namecard.
5. If the device is not paired, select **Search more...** and then select the device.
6. When the other device accepts the contact, **Object sent** message will be displayed.

## Delete Contacts

- To delete a contact, select **Menu > Phonebook**. Select the contact and select **Menu > Delete**.
- To delete all contacts, select **Menu > Phonebook > Mark All > Delete marked contacts**. A message appears **Do you really want to delete all?** Select **OK** to delete (if the default contact list is **All**).

38

## Copy or Move Numbers between Phone, SIM

- To copy all records to phone, or SIM card, select **Menu > Phonebook > Menu > Mark All > Menu > Copy Marked** > select the destination to copy.
- To move all records from Phone memory or SIM card to another destination, select **Menu > Phonebook > Menu > Mark All > Menu > Move Marked > Advanced > destination**. Moved records get deleted from the source location. All the records moved to the specified destination will not be available in the source location.

## Searching Contacts

1. Select **Menu > Phonebook**.
2. Enter the contact name.
3. The contact will be displayed.

## Messages

SMS is a convenient means of communication. You can send a text message to other people via this service. You can use the Messages menu in your phone to send an SMS message to other mobile phones or any other equipment that can receive SMS. To access the SMS function select **Menu > Messages**.

### Text Input Mode

When you enter text, the input mode is displayed at the top left of the screen. Press and release the \* key to view the different text input modes, that is conventional (Abc/ABC/abc) and numeric (123). **Press and hold** the \* key to enable the T9 mode.

In conventional mode, you can enter a letter by repeatedly pressing a key until the letter you want appears. Numeric mode is used to input numbers.

In T9 mode, when you press a key, the alphabets or letters are displayed. Scroll to the alphabet or letter and press the **menu** key to select.

1. To switch between upper case (ABC), lower case (abc) or sentence case (Abc), use key \*. When the sentence case is used, the letter which comes immediately after the characters full stop (.), exclamation mark (!) and question mark (?) automatically becomes capital.
2. To enter a character, press the numeric key repeatedly until the desired character appears on the screen.
3. When editing text, to insert a space between characters or words, press **0**.
4. To erase a character select **Delete**.
5. Press **0** to insert a full stop(.).

To insert special characters, press **#** to display the special

characters. Press the **navigation keys** to scroll through the special characters. Select the character to appear in the text.

**Press and hold \*** to display the text input in different languages. Press the **menu** key to select the language. Select **Done** to change the text input language.

## Managing SMS Messages

### SMS Settings

To view or define settings for your SMS messages select **Menu > Messages > SMS > Settings**:

| Settings                | Function                                                                                                                                                                                 |
|-------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Service Center</b>   | The message centre number, provided by your service provider, via which your messages are sent. The phone automatically picks up this number if it is already configured in the SIM card |
| <b>Expiry period</b>    | Select the period for which your messages will be stored in the message centre.                                                                                                          |
| <b>Delivery reports</b> | Select <b>On</b> to get a confirmation report whether message has been delivered or not.                                                                                                 |
| <b>Save Sent</b>        | Select <b>On</b> to save the sent messages.                                                                                                                                              |
| <b>Storage Type</b>     | Select <b>SIM</b> or <b>Phone</b> as the storage location of messages.                                                                                                                   |
| <b>Broadcast</b>        | Select <b>On</b> to receive broadcast messages sent by the service provider.                                                                                                             |

## Write SMS Messages

1. To create a message select **Menu > Messages > SMS > New**.
2. Enter the message in the text pane. The text input mode is displayed at the bottom left of the screen. Press and release \* to select the appropriate text input mode.
3. Enter the message and select **Menu**. SMS should not exceed 1490 characters.

The following options are present:

| Option                | Function                                    |
|-----------------------|---------------------------------------------|
| <b>Send</b>           | Send the message.                           |
| <b>Add Recipient</b>  | Add a recipient                             |
| <b>Save</b>           | Save the message to drafts folder.          |
| <b>Clear Field</b>    | Clear the inserted contact and the message. |
| <b>Insert Contact</b> | Add a Contact Vcard                         |
| <b>Notes</b>          | Add a note from the notes list.             |
| <b>Cut</b>            | Cut the selected words or symbol            |
| <b>Copy</b>           | Copy the selected words or symbols          |
| <b>Paste</b>          | Paste an already copied text to the message |
| <b>Linefeed</b>       | Move the pointer to the next line.          |
| <b>Write Language</b> | Set the language to write the message       |

|                      |                                 |
|----------------------|---------------------------------|
| <b>Insert Smiley</b> | Insert a smiley.                |
| <b>Back</b>          | Goes to the new message screen. |

4. Select **Send** to send the message.

## SMS Inbox

The Inbox stores and displays all the incoming SMS messages.

1. To access the Inbox, select **Menu > Messages > SMS > Inbox**. The Inbox displays a list of messages.
2. To delete a message, select **Menu > Delete**.
3. To delete all messages or multiple messages, select **Menu > Mark** the messages or **Mark All > Menu > Delete Marked**.
4. To open a message, scroll to a message and press the **Open**.
5. After a message is opened other functions can be performed. Select **Menu** to list the options.
  - **Reply:** You can send a message to the sender of that message.
  - **Delete:** You can delete the message after reading it.
  - **Forward:** You can send the message to another recipient.
  - **Get Information:** You can save the numbers, URL and email ID present in the message. You can also dial or send a message to the numbers (this option is displayed only if the SMS text contains any number).
  - **Voice Call:** You can call the sender of the message.
  - **Copy to SIM:** You can save the message in your SIM card memory (this option is displayed only if the SMS storage location is Mobile phone).s

## SMS Outbox

Messages that were undelivered to the recipient due to some reason are stored in Outbox.

1. To access undelivered messages, select **Menu > Messages > SMS > Outbox**.
2. Select **Menu** to display the outbox options.
3. Press the **Open** to view the message.
4. Press **Menu > Resend** to send the message. You can also forward an undelivered message.

## Managing MMS Messages

### MMS Settings

To view or define settings for your MMS messages select **Menu > Messages > MMS > Settings**:

| Settings         | Function                                                                                                                            |
|------------------|-------------------------------------------------------------------------------------------------------------------------------------|
| <b>Profile</b>   | The MMS profile details.                                                                                                            |
| <b>Send</b>      | Set the sent message settings such as delivery report confirmation, save sent messages, and send mode.                              |
| <b>Receive</b>   | Activate or deactivate the download option for receiving MMS messages on home network, roaming network, and advertisement messages. |
| <b>Edit</b>      | Set the settings for message display time, and message creation mode.                                                               |
| <b>View Mode</b> | Set the message view mode to automatic or manual.                                                                                   |

## Write MMS Messages

For sending and receiving MMS messages, you should have the service subscription. For more information, contact your operator.

1. To create a message select **Menu > Messages > MMS > New**.
2. Enter the message in the text pane. The text input mode is displayed at the bottom left of the screen. Press and release # to select the appropriate text input mode.
3. Enter the message and select **Menu**. The following options are present:

| Option                  | Function                                                        |
|-------------------------|-----------------------------------------------------------------|
| <b>Add</b>              | Add a new slide, subject, recipient in CC to BCC list.          |
| <b>Insert</b>           | Insert multimedia files such as pictures, audio or video files. |
| <b>Attachements</b>     | Attach multimedia files such as pictures, audio or video files. |
| <b>Take a picture</b>   | Activate camera and take a picture to insert/attach.            |
| <b>Preview</b>          | Preview the MMS message.                                        |
| <b>Slide Timing</b>     | Set the slide transition time.                                  |
| <b>Save as draft</b>    | You can save the message as a draft in Draft folder.            |
| <b>Save as template</b> | You can save the message as a template in Template folder.      |

## MMS Inbox

The Inbox stores and displays all the incoming MMS messages.

To access the Inbox, select **Menu > Messages > MMS > Inbox**. The Inbox displays a list of messages.

- **Reply:** You can send a message to the sender of that message
- **Reply to All:** You can send a message to the all the contacts present in the message
- **Delete :** To delete a message, select **Menu > Delete**.
- **Delete All :** To delete all messages or multiple messages, select **Menu > Mark** the messages or **Mark All > Menu > Delete Marked**.
- **Forward:** Send the message to another recipient.
- **Move To:** Move the seleted message to a specific folder.
- **Attachements :** View or download the attachments present in the message.
- **Get Information:** You can save the numbers, URL and email ID present in the message. You can also dial or send a message to the numbers (this option is displayed only if the SMS text contains any number).
- **Message Details :** View the message details.

## MMS Outbox

Messages that were undelivered to the recipient due to some reason are stored in Outbox.

1. To access undelivered messages, select **Menu > Messages > MMS > Outbox**.
2. Select **Menu** to display the outbox options.
3. Press the **Open** to view the message.

4. Press **Resend** to send the message.
5. Select **Sort By** to sort the messages.
6. Select **Delete/Delete All** to delete the marked message or all the messages.

## Managing Email Messages

### Email Settings

You can send and receive E-mail messages with/without attachments such as photos, audio and video clips. Before you start sending and receiving E-mail messages, your phone must be configured to the network settings in order to connect to an E-mail server.

Select **Menu > Messages > Email > Settings > Menu > Edit**. The following options are displayed.

| Settings                | Function                                                                                                                                                                                                                                                                                                                                                                                                                              |
|-------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>User Information</b> | View or modify name of the user, email address, User ID, password and signature.                                                                                                                                                                                                                                                                                                                                                      |
| <b>Connection</b>       | View or modify the outgoing and incoming server details.<br><b>Outgoing Server Details</b> <ul style="list-style-type: none"> <li>• <b>SMTP Server Name :</b> Name of the SMTP server.</li> <li>• <b>SMTP Server Port :</b> The port number for the SMTP server.</li> <li>• <b>Use SSL/TLS :</b> Enable to use SSL/TLS.</li> <li>• <b>Authentication :</b> Select <b>yes</b> to setup secure authentication to the server.</li> </ul> |



| Settings           | Function                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|--------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Connection</b>  | <b>Incoming Server Details</b> <ul style="list-style-type: none"> <li>• <b>Server Type:</b> Set the server type to None, POP3 or IMAP4.</li> <li>• <b>SMTP Server Port :</b> The port number for the specific server.</li> <li>• <b>Use SSL/TLS :</b> Enable to use SSL/TLS.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Preferences</b> | Set the preferences to manage the incoming mails. <ul style="list-style-type: none"> <li>• <b>Download Mode :</b> You can opt to download only the message header, both header and body, or ask user during the message download.</li> <li>• <b>Maximum message Size :</b> The size of the message for download .</li> <li>• <b>Leave Copy on Server:</b> Select <b>yes</b> to save a copy to the server.</li> <li>• <b>Save Sent:</b> Select <b>yes</b> to save the sent messages.</li> <li>• <b>Down Limit:</b> Set the number of messages to be downloaded, at a time.</li> <li>• <b>Add Signature:</b> You can add singnature to all emails, only new emails or send the emails without a signature.</li> </ul> |

### Write Emails Messages

You need have GPRS service enabled, contact the service provider. You can compose an email message and send it one or multiple email IDs. Select **Menu > Messages > Email > New**. Enter the **To** address. Write the subject and message and, press Send. Press Menu to view the following options.

| Option                | Function                                                                              |
|-----------------------|---------------------------------------------------------------------------------------|
| <b>Add Contact</b>    | Add a contact from the Phone book.                                                    |
| <b>Cancel message</b> | Delete the message                                                                    |
| <b>Add CC</b>         | Add reciepients to the CC list                                                        |
| <b>Add BCC</b>        | Add reciepients to the BCC list.                                                      |
| <b>Send Options</b>   | Receive a read confirmation reort or send the message priority to High, normal or low |
| <b>Add File</b>       | Attach multimedia files such as pictures, audio or video files                        |

### Email Inbox

To access the Inbox, select **Menu > Messages > email > Inbox**. The Inbox displays a list of messages You can view, reply to, sort or delete the emails present in the Inbox. <sup>44</sup>

- **Retrieve Email:** Check new mail from server, and retrieve the new mail, depending on the set retrieval options
- **Reply to All:** You can send a message to the all the contacts present in the message
- **Delete :** Delete the selected message.
- **Delete All :** Delete all the messages.
- **Mark/Mark All :** Mark the selected message or mark all the messages.
- **Sort by:** Sort the messages based on From, Date and subject.
- **Message Details :** View the message details.



## Email Outbox

Email messages that were undelivered to the recipient due to some reason are stored in Outbox.

1. To access undelivered messages, select **Menu > Messages > Email > Outbox**.
2. Select **Menu** to display the outbox options.
3. Press the **Open** to view the message.
4. Press **Resend** to send the message.
5. Select **Delete/Delete All** to delete the marked message or all the messages.

## Managing Draft Messages

Messages that have been saved to be sent later are stored in Draft folders depending on the message type.

1. To access unsent messages, select **Menu > Messages > SMS/MMS/Email > Draft**.
2. Select **Menu** to display the draft options.
3. You can send the draft, edit and send or save it, get the information about the recipient or delete the messages.

## Managing Sent Messages

Messages that have been sent and delivered are stored in Sent.

1. To access sent messages, select **Menu > Messages > SMS/MMS/Email > Sent**.
2. Select **Menu** to display the sent options.
3. Press the **Open** key to view the message.
4. You can resend the message, edit and send or save it, get the information about the recipient or delete the messages.

You can also forward a sent message.

## Send a Message Via Contacts

You can send an SMS from the Contacts.

1. On the home screen, select **Menu > Phonebook**. Select the contact. Select **Menu > Send message > Send SMS/MMS/Email**.
2. Enter the message and select **Menu > Send**.
3. Select **Send message** to send the message OR select **Add recipient** to add another recipient.

## Call Or Save a Number Embedded in a Received Message

It is possible to call a number embedded in a received SMS.

1. Select **Menu > Messages > SMS > Inbox** > open the message containing numbers. 45
2. Select **Menu > Get Information**. The number is displayed.
3. Select **Menu > Save** OR Select **Menu > Voice Call**.

## View SMS Memory

To view the memory capacity for messages, select **Menu > Messages > SMS > Memory status**.

## Voice Mail

Your incoming calls can be forwarded to your voice mail. Callers will be prompted to leave a message for you. This feature requires you to enter a voice mail number which is provided by your service provider.

1. To set voice mail number, select **Menu > Messages > SMS > Voice mail > New. enter the Voice mail number** provided by your service provider. Select **Save**. This number should be used when you want to listen to your stored voice mail messages.
2. When you need to listen to your incoming voice mail messages, select **Menu > Messages > SMS > Voice mail > enter the voice mail number > Menu > Listen**. You are connected to your mailbox where you can hear the stored voice mails messages. If your voice mail number is already stored, select **Menu > Messages > SMS > Voice mail > Menu > Listen**.



For quick access to voice mail, press and hold **1**.

## Internet Browser

This mobile phone has an internal Web browser that allows you to browse contents of various HTTP and WAP websites on the Internet. This facility is made available only if you subscribe to a data service from your network operator for Internet access. You need to consult your local operator for more details. Configure the WAP when you use it for the first time. Some WAP parameters on your phone have already been set to a specific network operator. If you utilize the services of the same network operator you can directly operate the WAP service with the available configuration. If not, you need to reconfigure the settings.



If you are unable to view WAP web pages because your network operator changed its WAP parameters or the Internet content Provider (ICP) changed its WAP web address or contents, please consult your network operator and ICP for updates.

Select **Menu > Internet > Select**. The following sub menus are displayed:

- **Home:** The first page displayed when you open the Web browser.
- **Bookmarks:** Add and manage your bookmarks and go directly to the corresponding web address. You can also edit or delete bookmarks via this menu.
- **History:** View web pages which you have viewed previously. Select them to open the pages.
- **Push Messages:** Inbox for WAP push messages.

- **Settings:** Edit the following browser settings:
  - **Multimedia:** Configure the options to download images, sounds and other multimedia objects.
  - **Look and Feel:** Edit the Web page appearance features such as font size, text wrap, display mode and scroll pattern.
  - **Security:** Enable or disable secure prompt, cookies and cache.
  - **Browser Profile:** Edit the profile details:
    - **Profile Name:** The name of the profile
    - **Web Protocol:** Set the protocol to HTTP or WAP.
    - **Proxy Address:** The address of the proxy server.
    - **Proxy Port Number:** The port number of the proxy server.
    - **Login name:** The user name required to access the account.
    - **Password:** The password required to access the account.
    - **Home URL:** The URL of the Message centre
  - **Delete Temporary Files:** Delete Cache, cookies, and temporary web files.
  - **Reject Push Message:** You can decide to receive or not receive push messages from operators and web portals.

## Java

Sonim XP2.10 SPIRIT has a collection of Java applications that are saved in the phone as default. You can also download more Java applications via WAP, Bluetooth, SD Card or Java Application Manager.

### Pre-installed Java Applications

The following Java applications are pre-installed in Sonim XP2.10 SPIRIT phone. You can find more applications in the Java Application Manager.

- **Java Application Manager (JAM):** This has an assorted list of applications that have been tested by Sonim on the phone. This picks up the latest list from a server over GPRS/EDGE. You can access application manager from **Menu -> Applications -> Application manager**
- **Unit Converter:** You can convert one type of physical units to another type. You can access unit converter from **Menu -> Applications -> Unit Converter**.

### JavaHelp

Select **Menu > Applications > Java Help**. You will obtain information on how to install Java pre-bundled applications and how to set the APN.

### Installing Java Application from SD Card

Select **Menu > My files > Memory card**. Select the file appropriate Java file. The installation process begins. Once the application is installed successfully, it will be displayed in Applications.



In order to install the Java applications, the date and time must be set correctly on the phone.

## Tools

This section contains miscellaneous application supported by the handset.

## Alarm

You can set alarm for a particular time. Select **Menu > Tools > Clock Alarm** > select the alarm. Enter the following details:

- **Status** : To enable the alarm set the status to **Start**. To disable, set it to **Stop**.
- **Time** : Set the alarm time.
- **Recurring** : Select the days for recurring alarm.
- **Ring**: Set the alarm ring tone.
- **Snooze** : To enable the alarm snooze set the status to **Start**. To disable, set it to **Stop**.



The alarm will work even if the phone is in Silent mode or switched off.

## Calculator

The calculator in this phone is designed to perform simple mathematical calculations.

1. Select **Menu > Tools > Calculator**.
2. To enter the numbers, press the numeric keys.
3. To use mathematical operators use the navigation keys.

| Navigation Key | Operation          |
|----------------|--------------------|
| <b>Up</b>      | + (Addition)       |
| <b>Down</b>    | - (Subtraction)    |
| <b>Left</b>    | * (Multiplication) |
| <b>Right</b>   | / (Division)       |

4. After performing the calculations, press the **menu** key for the final result.



This phone accepts numbers up to a maximum of 9 digits per entry.

## Notes

You can write notes and save them as text files.

1. To create a new note, select **Menu > Tools > Notes > New**. Enter the text and press **OK**.
2. To modify an existing note, select **Menu > Tools > Notes >** select the note and press **Menu > Edit**.
3. To Send a note, select **Menu > Tools > Notes >** select the note and **Menu > Send**. Select the sending option to send the note as an SMS, MMS or email.
4. To delete a note or all notes select **Menu > Tools > Notes >** select the note and press **Delete** or **Delete All**.

## To-Do

You can save your tasks in the to-do list and set alert.

1. To create a new to-do task, select **Menu > Tools > To-Do > New**. Enter the following details
  - **Date** : Date to receive the task alert
  - **Time** : Time to receive the task alert.
  - **Priority** : Set the task priority.
  - **Memo** : Task description
  - **Ring**: Set the alert ring tone.
  - **Completion** : Set the completion status.
  - **Completion Date**: Date for completing the task.
2. To edit the task, select **Menu > Tools > To-Do >** select the task and press **Edit**.
3. To sort the task, select **Menu > Tools > To-Do > Menu > Sort**, Set the sorting option.
4. To delete a task or all the tasks, select a task and press **Menu > Delete** or **Delete All**.

## World Clock

You can view the current time in different locations, select World clock. To set the home and the destination,

1. Press up/down key can choose the home city or destination city.
2. Select **Menu > Tools > World Clock > Cities**. Select the city.

Number keys (2-9) provide quick access to the cities starting with the alphabets present in the specific key.

You can also use the navigation keys and the

displayed map to set the home city and the destination city.

## Stopwatch

Select **Menu > Tools > Stopwatch**.

1. To trigger the timer, select **Start**. The counter starts running.
2. To start the next lap, select **Split**.
3. To stop the counter, select **Stop**.

## Countdown Timer

Countdown timer reminds of a specific event or you want to time a particular task.

1. Select **Menu > Tools > Countdown**. When the countdown timer is set, the corresponding icon appears on the idle screen.
2. Specify the time for the reminder in terms of hours and minutes. The maximum time you can set is 23 hours, 59 minutes and 59 minutes (23:59:59) and the minimum is one second (00:00:01).
3. Enter the notes related to the task.

When the countdown is completed, the alarm rings.



## Currency Exchanger

You can convert one type of physical units to another type. Select **Menu > Tools > Currency Exchanger**. Enter the following details :

- **From** : The currency to be converted. Press **List** to view and select the currency.
- **To** : The currency for the conversion. Press **List** to view and select the currency.
- **Rate** : The conversion rate.
- **Amount** : The conversion amount
- **Result** : The converted result is displayed.

## SIM Toolkit

In addition to the features installed on your phone, you may have certain operator features and services contained on the SIM card. The content will vary according to SIM services that your operator provides. Select **Menu > Tools > SIM Toolkit**.

## Voice recorder

Select **Menu > Tools > Voice recorder**.

1. To record an audio file, select **Record**. You can also select **Record**.
2. To temporarily stop the recording, select **Pause**.
3. To continue with the recording, select **Resume**.
4. To end the recording, select **Stop**.
5. To access all the recordings, press **Menu > My recordings**.
6. To play, send or delete the current press **Menu** and

select the required option.

The recorded audio file is stored under My files. For more information refer **“Managing Your Files” on page 62**.

## Calendar

The calendar enables you to set appointments, create appropriate notes, schedule reminders when required, set alerts and repeat specific settings.

1. To access the Organizer and its associated functions, select **Menu > Calendar**. The calendar for the current month is displayed. Use the navigation keys to navigate across months.
2. Select **Menu** to view the list of options available.
  - **New** : Enter a new event
  - **Select date**: Go to a particular date and view the events for that date.
  - **List**: View the list of events set. Select an event and press Edit to modify the event.
  - **Memory Status**: View the used up and free memory space.

### Edit Events

Select **Menu > Calendar > List**. Select the event. Select **Edit**. Make the changes. Select **Save**.

### Delete Events

Select **Menu > Calendar > List**. Select the event. Select **Menu > Delete**. Select **Yes**.

## Managing Connectivity

You can connect your Sonim XP2.10 SPIRIT phone to another compatible communication device such as a PC or a headset, using Bluetooth or USB cable.

### Bluetooth

Bluetooth is a wireless connection that enables devices to exchange information. Devices within a range of 10 meters can be connected wirelessly using Bluetooth technology.

Sonim XP2.10 SPIRIT is compliant with Bluetooth specification 1.2 supporting the following profiles: Headset profile, Hands free profile, Object push profile, and dial up networking profile. This device can send images and audio files using Bluetooth connection.



There may be restrictions on using Bluetooth technology in some locations. Check with your local authorities or service providers.

#### Activate Bluetooth

Select **Menu > Connectivity > Bluetooth > Bluetooth Status > On**. Use the menu key to toggle between on and off. When Bluetooth is activated, the Bluetooth icon is displayed on the home screen.

#### Deactivate Bluetooth

Select **Menu > Connectivity > Bluetooth > Bluetooth Status > Off**. Use the navigation key to toggle between on and off.

#### Pairing Devices

1. Select **Menu > Connectivity > Bluetooth > Paired Devices > Search for devices**.
2. Select the device of your choice.

3. Enter the passcode (for example, **0000**) in the Enter passcode screen. The same passcode must be entered for the other device also.
4. Select **OK**.
5. When the other device accepts your request the message , **<device name> authorized** is displayed on the screen.
6. When the other device rejects your request the message **Pairing Failed** is displayed on the screen.



Do not pair with an unknown device for security reasons.

#### Connecting a Bluetooth Headset

You can connect a bluetooth headset after pairing it with your phone.

1. Select **Menu > Connectivity > Bluetooth > paired devices > Search for devices**.
2. Select the paired Bluetooth headset.
3. Select **Menu > Connect**.



For more details, refer the user manual of the Bluetooth headset.

## Rename Paired Device

To rename a paired device,

1. Select **Menu > Connectivity > Bluetooth > Paired Devices**.
2. Select the paired device. Select **Menu > Rename**. Enter the new name.

## View Connected Device Information

To view the information about the connected device,

1. Select **Menu > Connectivity > Bluetooth > Active Device Info**.
2. Select the connected device and view the information.

## Setup Phone Visibility

When you are using Bluetooth connectivity, to control who can find your device and connect to it, select **Menu > Connectivity > Bluetooth > My Phone's Visibility**. Select **Show to All** to show your presence to other devices. Select **Hidden** to hide your presence from other devices.

## View Your Device Information

To view the information about the connected device, select **Menu > Connectivity > Bluetooth > Own Device Info**

## Delete Paired Device

1. Select **Menu > Connectivity > Bluetooth > My devices**.
2. Select the paired device.
3. Select **Menu > Delete**.



If you cancel the pairing with a device that is connected, pairing is removed and the connection is switched off immediately.

## Sending Data via Bluetooth

You can transfer files or contacts to another compatible device.

1. Select **Menu > My files /Phonebook**.
2. To send any image file, select **the file category >** select the file, or browse the phonebook and select a contact.
3. Select **Menu > Send via Bluetooth**.
4. Select the paired device to which you want to send the file.



**My devices** screen displays the paired devices. To send a data to an unpaired device, Select **Search more....** Select the unpaired device of your choice. Enter the pin code when you are asked to enter.

5. When the other device accepts your file, the message **Object sent** is displayed on the screen.
6. When the other device rejects the file, the message **Connection failed** is displayed on the screen.

54

## Receiving Data via Bluetooth

To receive data using Bluetooth, your device should be Bluetooth activated and must be visible to other devices.

1. When you receive a data, you are asked if you want to accept it.
2. Select **Accept** to receive data OR select **Reject** to refuse the data.
3. If you accept, the data will be stored in **My files**.

## Packet Data Connection

You can detect the availability of data service in the network. To configure the connection mode, Select **Menu > Connectivity > Packet Data connection> When Needed** to connect if required OR **Always Online** to enable the connection, continuously.

## PC Synchronization

You can transfer and backup address book and messages, between the Sonim XP2.10 SPIRIT phone and your computer using PC tools application.



Make sure to install the PC Tools application on your PC, before connecting the PC to phone.

To synchronize the data between the PC and phone, connect the PC to the phone using USB. Select **Menu > Connectivity > PC Synchronization**. The PC is connected to the phone.

For more information about using the PC tools, refer to the PC tools application documentation.

## USB function

You can connect the phone to the PC using given USB cable. You can change the USB connection mode, only when the phone is disconnected from the PC and when the SD card is inserted.

To set the USB connection mode, select **Menu > Connectivity > USB Data Cable > Normal mode** OR **USB Drive Mode**.

In normal mode, you can

- Run PC tools application
- Use the phone as a dial-up modem to connect to the

Internet.

In USB drive mode, you can use the memory card as the flash memory for data transfer.

## Media Player

You can play any supported audio or video file using Media Player. Select **Menu > Media Player** for accessing music/video player or FM radio.

### Music Player

You can listen to many supported audio file using the music player. Select **Menu > Media Player > Music Player**. The music player is displayed. Select **LSK** to view the following options.

### Playing using a Bluetooth Device

You can listen to any supported audio file using the a paired Bluetooth device. Select **Menu > Media Player > Music Player > Play Via Bluetooth**.

### Managing Music Files

You can view, delete and send the music files. Select **Menu > Media Player > Music Player > Playing List**. Press **Menu** to view the following options.

- **Delete** : Delete the file.
- **Send** : Send the file to another compatible device using MMS, Bluetooth or Email.
- **Set As Ringtone** : Set the music as the ringing tone for voice calls and messages.
- **Sort** : Sort the files based on Name, size data or type.
- **Property** : View the file properties.

### Managing Personal playlists

You can create, modify and view the personal play lists. Select **Menu > Media Player > Music Player > My play list**. If there are no playlists present,

press **Add** to create a playlist.

Select a playlist and press **Options** to view the following tasks:

- **Play** : Play all the songs in the selected playlist.
- **Rename** : Rename the selected playlist.
- **New** : Create a new playlist.
- **Delete** : Delete the selected playlist.
- **Delete All**: Delete all the playlists.

Select a playlist and press **Open** to view the songs present . Press Option to perform the following tasks:

- **Add Content**: Add a new song to the playlist.
- **Change Order** : Change the order of the songs.
- **Set As Ring tone** : Set the music as the ringing tone for voice calls and messages.
- **Send** : Send the file to another compatible device using MMS, Bluetooth or Email.
- **Remove**: Delete the selected playlist.
- **Remove All**: Delete all the playlists.
- **Property** : View the file properties.

### Managing Music Bank

You can view all the music files as a list, sorted based on the artist oealbum. Select **Menu > Media Player > Music Player > Music Bank**.

- **All Music** : View all the songs.
- **Artist** : View the songs based on the artist.
- **Album** : View the songs based on the album.



## Refresh Music List

To refresh and view the updated music list player. Select **Menu > Media Player > Music Player > Refresh Musiclist**.

## Set Play Mode

You can set the play mode to play all the music files. Select **Menu > Media Player > Music Player > Play Mode**. The following options are displayed:

- **Once** : Play the track once.
- **Repeat Track**: Repeat the selected track several times.
- **Ordinal Play** : Play all the tracks in the set sequence, once.
- **Repeat All**: Repeat all the tracks, multiple times.
- **Random** : Play all the tracks in random order.

## Video Player

You can view any supported video file using the video player. Select **Menu > Media Player > Video Player**. The video player is displayed. Select **LSK** to view the following options.

### Playing using a Bluetooth Device

You can view any supported video file using the a paired Bluetooth device. Select **Menu > Media Player > Video Player > Play Via Bluetooth**.

### Managing Video Files

You can view, delete and send the video files. Select **Menu > Media Player > Video Player > Playing List**. Press **Menu** to view the following options.

- **Delete** : Delete the file.
- **Send** : Send the file to another compatible device using MMS, Bluetooth or Email.

- **Sort** : Sort the files based on Name, size data or type.
- **Property** : View the file properties.

### Managing Personal playlists

You can create, modify and view the personal play lists. Select **Menu > Media Player > Video Player > My playlist**. If there are no playlists present, press **New** to create a playlist.

## FM Radio

Select **Menu** to display the following options.

- **Save**: You can automatically save the radio channels.
- **My Favorite**: You can view the radio stations that have already been saved. Select a radio station to play.
- **Search Mode**: You can set the frequency search mode to **Manual**, **favorite** or **Automatic**.
- **Shortcut Key Setting**: Assign frequently used stations to number keys (1-0) and \* and # keys.
- **Minimize**: You can play the radio in background.

## Camera

The Sonim XP2.10 SPIRIT has a 3MP (megapixel) camera for taking pictures and videoclips.

- Select **Menu > Camera** OR light press the **camera** key. The camera is switched on.
- Select the **menu** key OR light press the **camera** key to shoot the picture.
- The picture is saved in **Menu > My files > Pictures > Images**.
- After taking the picture is complete, select **LSK** to send the picture:
  - **Send via Email/MMS** :You can attach the picture to the email/MMS.
  - **Send Via Bluetooth**: You can connect to a compatible Bluetooth device and send the picture.

## Camera Options

To view the camera options, select **Menu > Camera > LSK**. The following options are displayed:

- **Image Size**: Select the picture resolution from the listed options.
- **Quality**: Select the picture quality from the following options: Superfine, Fine or Normal.
- **Gallery**: This option takes the user to the **Pictures** folder.
- **Shooting Mode** : You can activate the self-timer.
- **Camera Mode**: You can set the color effects and self-timer.

- The color effects available are black and white, sepia and normal.
- If you switch on self-timer, the picture will be shot only after a certain amount of time after pressing the menu key.
- **Flashlight**: Select **On** to turn on the flash or select **Off** to turn off the flash. You can set it to **Auto**, for automatic detection.
- **Screen Direction** : Select **Horizontal** or **Vertical** to change the direction of the menu display.

## Flashlight

You can use the camera flash as a flashlight. To turn ON/OFF the flash, **press and hold** the camera key.



The flashlight button may not work if other applications are in use.

## Memory Card

In Sonim XP2.10 SPIRIT phone, you can insert a removable Micro SD Card to increase the storage capacity. This card is inserted into the slot below the battery. You can perform the following functions on the SD card.

- Formatting of the SD card.
- Viewing available space.
- Setting the images in the SD card as wallpaper.
- Setting the audio files in the SD card as ringtones.



The maximum capacity supported is upto 4 GB.

## Inserting Memory card Into the Phone

1. Ensure the phone is switched off.
2. Lift the battery cover and remove the battery. For instructions refer [“Inserting the Battery” on page 13.](#)
3. Lift the silver clip over the designated slot located at the top left end of the battery slot.
4. Place the SD card in the designated slot and close the silver clip.
5. Replace the battery and the cover. Turn the battery cover screws clockwise to lock the battery cover.



When the phone is connected to a computer using USB, the Memory card is displayed as a separate drive in the computer.

## Managing your Memory Card

To view, sort and delete the files present in the memory card,

1. Select **Menu > My files > Memory card**.
2. Scroll down the folder and select the file. Press Menu, the following options are displayed.

| Option              | Function                                              |
|---------------------|-------------------------------------------------------|
| <b>Delete</b>       | Delete the file.                                      |
| <b>Send</b>         | Send the file via MMS, Email or Bluetooth.            |
| <b>Copy</b>         | Copy the file to a specific destination folder.       |
| <b>Move</b>         | Move the picture to a specific destination folder.    |
| <b>Rename</b>       | Rename the file                                       |
| <b>New Folder</b>   | Create a new subfolder.                               |
| <b>Type of view</b> | You can view the pictures as a list or as a grid.     |
| <b>Sort</b>         | You can sort the pictures by name, date or size.      |
| <b>Mark</b>         | Select the specific picture.                          |
| <b>Mark All</b>     | You can select all the pictures or select one by one. |

## Managing Your Files

Using the **My files** menu, you can store and manage audio files, picture files, .jar files, .jad files and .txt files. You can preview the files, view their details and delete files. The internal storage capacity is approximately 50 MB. To view your files select **Menu > My files**. The following categories are displayed :

- Pictures - View and manage pictures
- Audio - View and manage audio files
- Video - View and manager videoclips
- Java files - View and manage Java applications
- Others - View and manage any unsupported file format.
- Memory card - View and manage files stored in the memory card.
- Management - Configure storage settings.

### Managing All files

You can view, sort or delete the files stored in My files.

1. Select **Menu > My files** > select the file category (such as pictures)
4. Scroll to file from the displayed list and select **Menu** to display further options.

The following options are displayed, based on the selected file type.

| Option                 | Function                                                |
|------------------------|---------------------------------------------------------|
| <b>Delete</b>          | Delete the picture.                                     |
| <b>Send</b>            | Send the picture via MMS, Email or Bluetooth.           |
| <b>Copy</b>            | Copy the picture to a specific destination folder.      |
| <b>Move</b>            | Move the picture to a specific destination folder.      |
| <b>Rename</b>          | Rename the file                                         |
| <b>New Folder</b>      | Create a new subfolder.                                 |
| <b>Slide show</b>      | You can view the pictures as a slide show.              |
| <b>Set As Ringtone</b> | Set the selected file as a ringing tone or message tone |
| <b>Add to Playlist</b> | Add the selected file to a specific playlist.           |
| <b>Use Image</b>       | Set the image as contact ID or wall paper.              |
| <b>Type of view</b>    | You can view the pictures as a list or as a grid.       |
| <b>Sort</b>            | You can sort the pictures by name, date or size.        |
| <b>Mark</b>            | Select the specific picture.                            |
| <b>Mark All</b>        | You can select all the pictures or select one by one.   |



This wireless device, (the “Device”) contains software owned by Sonim Technologies, Inc. (“Sonim”) and its third party suppliers and licensors (collectively, the “Software”). As user of this Device, Sonim grants you a non-exclusive, non-transferable, non-assignable license to use the software solely in conjunction with the Device on which it is installed and/or delivered with. Nothing herein shall be construed as a sale of the Software to a user of this Device.

You shall not reproduce, modify, distribute, reverse engineer, decompile, otherwise alter or use any other means to discover the source code of the Software or any component of the Software. For avoidance of doubt, you are at all times entitled to transfer all rights and obligations to the Software to a third party, solely together with the Device with which you received the Software, provided always that such third party agrees in writing to be bound by these rules.

You are granted this license for a term of the useful life of this Device. You can terminate this license by transferring all your rights to the Device on which you have received the Software to a third party in writing. If you fail to comply with any of the terms and conditions set out in this license, it will terminate with immediate effect. Sonim and its third party suppliers and licensors are the sole and exclusive owner of and retain all rights, title and interest in and to the Software. Sonim, and, to the extent that the Software contains material or code of a third party, such third party, shall be entitled third party beneficiaries of these terms. The validity, construction and performance of this license shall be governed by the laws of Delaware, United States.

### Unconditional 3 year Guarantee

Sonim provides this Unconditional three year Guarantee for your mobile phone (hereinafter referred to as Product”).

Should your Product need guaranty service, please return

it to the retailer from whom it was purchased, or contact

- Online Support and country specific toll free numbers: [www.sonimtech.com/support](http://www.sonimtech.com/support)
- Email: [support@sonimtech.com](mailto:support@sonimtech.com)
- US number: 1-888-547-9370
- Other number: +800-5225-5227

### Our Guarantee

Subject to the conditions of this Unlimited 3 year Guarantee Sonim warrants this product to be free from major defects in design, material and workmanship at the time of its original purchase by a consumer, and for a subsequent period of Three (3) years.

### What We Will Do

If during the guarantee period, this product fails to operate under normal use and service, due to defects in design, material or workmanship, Sonim’s authorised distributors or service partners, in the country/region where you purchased the product, will replace with the same or better model in the same or better condition. Sonim and its service partners reserve the right to charge a handling fee if a returned Product is found not to be under warranty according to the conditions below.

Please note that some of your personal settings, downloads or other information may be lost when your Sonim Product is repaired or replaced. Sonim does not take any responsibility for any lost information of any kind and will not reimburse you for any such loss. You should always make backup copies of all the information stored on your Sonim Product such as downloads, calendar and contacts before handing in your Sonim Product for repair or replacement.

## Phone Care

The Sonim XP2.10 SPIRIT is designated class IP67 for dust and water protection, according to the IEC Ingress Protection (IP) Standard 60529. This means that the phone is dust protected and can be submerged into 1.0m deep water for up to 30 minutes. Immersion in deeper water can damage it and must be avoided. The phone is not water-proof or water resistant during charging, use of a plug-in headset, or any other use when the system connector cover on the bottom of the phone is not tightly enclosed.

The Sonim XP2.10 SPIRIT is solid and built for heavy duty use. Its design protects against disassembly or mechanical damage when subjected to forces equal to free fall from the high of an average adult. Subjecting the phone to stronger impact and forces can damage it and must be avoided.

## Conditions

1. The warranty is valid only if the original proof of purchase issued to the original purchaser by a Sonim authorised dealer, specifying the date of purchase and serial number for this Product, is presented with the Product to be repaired or replaced. Sonim reserves the right to refuse warranty service if this information has been removed or changed after the original purchase of the Product from the dealer.
2. If Sonim repairs or replaces the Product, the repaired or replaced Product shall be warranted for the remaining time of the original warranty period or for ninety (90) days from the date of repair, whichever is longer. Repair or replacement may involve the use of functionally equivalent reconditioned units. Replaced parts or components will become the property of Sonim.
3. This warranty does not cover any failure of the Product due to normal wear and tear, or due to misuse, including but not limited to use in other than the normal and customary manner, in accordance with the Sonim instructions for use and maintenance of the Product. Nor does this warranty cover any failure of the Product due to accident, software or hardware modification or adjustment, acts of God or damage resulting from liquid interacting with the product beyond what is described as acceptable in the user guide for the product. A rechargeable battery can be charged and discharged hundreds of times. However, it will eventually wear out - this is not a defect. When the talk-time or standby time is noticeably shorter, it is time to replace your battery. Sonim recommends that you use only batteries and chargers approved by Sonim. Minor variations in display brightness and colour may occur between phones. There may be tiny bright or dark dots on the display. These are called defective pixels and occur when individual dots have malfunctioned and can not be adjusted. Several defective pixels are deemed acceptable.
4. This warranty does not cover Product failures caused by installations, modifications, or repair or opening of the Product performed by a non-Sonim authorised person. Tampering with any of the seals on the Product will void the warranty.
5. The warranty does not cover Product failures which have been caused by use of accessories or other peripheral devices which are not Sonim branded original accessories intended for use with the Product.

6. THERE ARE NO EXPRESS WARRANTIES, WHETHER WRITTEN OR ORAL, OTHER THAN THIS PRINTED LIMITED WARRANTY. ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL SONIM OR ITS LICENSORS BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS OR COMMERCIAL LOSS; TO THE FULL EXTENT THOSE DAMAGES CAN BE DISCLAIMED BY LAW. DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL SONIM OR ITS LICENSORS BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS OR COMMERCIAL LOSS; TO THE FULL EXTENT THOSE DAMAGES CAN BE DISCLAIMED BY LAW.

**WARNING:** Changes or modifications made to this equipment not expressly approved by Sonim Technologies, Inc. for compliance could void the user's authority to operate the equipment.

### FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Declaration of Conformity

Sonim Technologies Inc, declares that the mobile phone Sonim XP2.10 SPIRIT is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.



### Declaration of Conformity

We, Sonim Technologies, Inc.. 1875 S. Grant Street, Suite 620, San Mateo CA 94402, US

Declare under our own responsibility that the product

Type: P32B003AA

Model: Sonim XP2.10 Spirit

to which this declaration refers, conforms with the relevant standards or other standardizing documents:

Safety: EN 60950-1:2006

SAR: EN50360:2001/EN50361:2001

R&TTE: EN301-511 V9.0.2, EN 301 908-1&-2 V3.2.1, EN 300 328 V1.7.1 (2006-10)

EMC: EN301489-1 V1.8.1 (2008-04), EN301 489-7 V1.3.1 (2005-11),

EN301 489-17 V1.3.2 (2008-04), EN301 489-24 V1.4.1 (2007-09)

According to the regulations in R&TTE Directive 1999/5/EC

San Mateo, August 31 2009

Javor Kolev:

VP Mobile phones

Sonim Technologies, Inc

**A****Access Point Name (APN) 32****Alarm clock 49****Alpha-numeric 19****Audio**

Recorder 51

**B****Bar calls**

Cancel 35

Status 35

**Battery**

Bars 14

Usage 13

**Bluetooth 53**

Activate 53

Deactivate 53

Headset 53

Receive data 54

Send data 54

**Bookmarks 47****C****Calculator 49****Calendar 52****Call accept/Send key 18****Call forward options 35****Call list 33****Calls on hold/waiting 36****Camera**

Flash 59

**Car mode 29****Contacts 37**

Add 37

Delete 38

Group 37

Move or copy 38

Send 38

Send message 37

**Count-down timer 50****Create messages 41****D****Display settings 30****F****Fixed number dialing 34****Flashlight 60****Flight mode 29****G****General settings 28****H****Homepage 47****I****International number dialling 33****J****Java 48****K****Keypad**

Accept/Send 21

Function keys 16

LSK/RSK 21

Navigation keys 18, 22

XP2.10 18

**L****Left Selection Key 18****M****Managing your files 63****Meeting mode 29****Menu**

Call log 24, 33

Key 19, 21

Main 24

Messages 40

My files 63

Phone book 37

Settings 28

Tools 49



**Messages**

Forward 41, 43  
 MMS inbox 43  
 Sent 41, 43  
 SMS inbox 41  
 SMS memory 45  
 SMS outbox 42  
 Write 41

**Message settings 40**

Delivery report 40  
 Expiry period 40  
 Save sent 40  
 Service center 40  
 Storage type 40

**Memory card 61, 62**

Insert 61, 62

**My files 63****N****Normal mode 29****O****Outdoor mode 29****P****Phone languages 28****Profiles 29**

Car 29  
 Flight 29  
 Home 29  
 Meeting 29  
 Normal 29

Outdoor 29  
 Silent 29

**S****Security settings 30****Silent mode 29****SMS memory 45****Speed dial 34****Standby mode duration 19****T****Text input mode**

Conventional 40

**Themes 30****Time and Date**

Local settings 28

**Tools**

Alarm clock 49  
 Bluetooth 53  
 Calendar 52  
 Currency exchanger 51  
 Flashlight 60  
 Java 48  
 USB function 55  
 Voice recorder 51

**U****USB function 55****V****Voicemail 18****W****WAP**

Bookmarks 47  
 Home 47  
 Push messages 47  
 Reject push message 47  
 Settings 47

**Write Messages 41**



Audio playback **52**  
Audio recorder **52**  
Bluetooth **49**  
Calculator **52**  
Calendar **51**  
Camera **55**  
Count-down timer **53**  
Flashlight **57**  
FM radio **55**  
GPS **53**  
opera mini **47, 48**  
Stopwatch **53**  
Unit converter **53**  
USB function **54**

## U

**Unit converter 53**  
**USB function 54**

## V

**Voicemail 18**

## W

**WAP 46**  
Address **46**  
Bookmarks **46**  
Cache **46**  
Homepage **46**  
Push inbox **46**  
Settings **46**

**Write Messages 42**