

ZTE max™ blue^{LTE}

Z986DL

CAPTURE
THE MAGIC

USER
MANUAL

Z079584508304

Tomorrow never waits



ZTEUSA.COM

About This Manual

Thank you for choosing this ZTE mobile device. In order to keep your device in its best condition, please read this manual and keep it for future reference.

Copyright © 2017 ZTE CORPORATION

All rights reserved.

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

Notice

ZTE Corporation reserves the right to make modifications on print errors or update specifications in this manual without prior notice. This manual has been designed with the utmost care to ensure the accuracy of its content. However, all statements, information and recommendations contained therein do not constitute a warranty of any kind, either expressed or implied. Please refer to chapter *For Your Safety* to be sure to use your phone properly and safely.

We offer self-service for our smart terminal device users. Please visit the ZTE official website (at www.zteusa.com) for more information on self-service and supported product models. Information on the website takes precedence.

Disclaimer

ZTE Corporation expressly disclaims any liability for faults and damages caused by unauthorized modifications of the software.

Images and screenshots used in this manual may differ from the actual product. Content in this manual may differ from the actual product or software.

Trademarks

ZTE, MAX, and the ZTE logos are trademarks of ZTE Corporation.

LTE is a trademark of ETSI.

Google and Android are trademarks of Google, Inc.

The *Bluetooth*® trademark and logos are owned by the Bluetooth SIG, Inc. and any use of such trademarks by ZTE Corporation is under license.

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories.

The microSDXC™ logo is a trademark of SD-3C, LLC.

Qualcomm and Snapdragon are trademarks of Qualcomm Incorporated, registered in the United States and other countries. Used with permission.

Other trademarks and trade names are the property of their respective owners.

Edition Time: February 2017



Table of Contents

Getting Started 5

Installing the Nano-SIM Card and a microSDXC Card5

Charging the Battery5

Extending the Battery Life6

Powering Your Phone On/Off6

Setting Up Your Phone for the First Time7

Locking/Unlocking the Screen and Keys7

Using the Touch Screen8

Getting to Know Your Phone9

Getting to Know the Home Screen11

Personalizing 13

Changing the System Language13

Setting the Date and Time13

Changing the Ringtone and Notification Sound13

Turning System Sounds On/Off14

Adjusting Volumes14

Switching to Silent or Vibration Mode. .14

Using Do Not Disturb Mode14

Applying New Wallpapers15

Setting the Theme16

Setting the Home Screen Transition Effect16

Changing the Screen Brightness16

Protecting Your Phone With Screen Locks16

Using Your Fingerprint17

Protecting Your Phone With Screen Pinning18

Knowing the Basics 20

Monitoring the Phone Status20

Managing Notifications21

Managing Shortcuts and Widgets24

Organizing With Folders25

Rearranging the Primary Shortcuts ...25

Entering Text26

Changing Input Methods26

TouchPal Keyboard26

Google™ Keyboard30

Google Voice Typing32

Editing Text32

Opening and Switching Apps33

Connecting to Networks and Devices 35

Connecting to Mobile Networks35

Connecting to Wi-Fi®35

Connecting to *Bluetooth*® Devices38

Connecting to Your Computer via USB 40

Table of Contents

Using the microSDXC Card as Portable Storage	41
Using USB On-the-Go (OTG)	42
Sharing Your Mobile Data Connection	42
Connecting to Virtual Private Networks	43
Phone Calls	45
Placing and Ending Calls	45
Answering or Rejecting Calls	45
Working With the Call History	46
Calling Your Contacts	47
Checking Voicemail	47
Using Options During a Call	48
Managing Multi-party Calls	48
Adjusting Your Call Settings	49
Contacts	55
Checking Contact Details	55
Adding a New Contact	55
Setting Up Your Own Profile	55
Importing, Exporting, and Sharing Contacts	56
Working With Favorite Contacts	56
Working With Groups	57
Searching for a Contact	58
Editing Contacts	58

Accounts	60
Adding or Removing Accounts	60
Configuring Account Sync	60
Email	62
Setting Up the First Email Account	62
Checking Your Emails	62
Responding to an Email	62
Writing and Sending an Email	63
Adding a Signature to Your Emails	64
Adding and Editing Email Accounts	64
Changing General Email Settings	65
Messaging	66
Opening the Messaging Screen	66
Sending a Message	66
Replying to a Message	67
Forwarding a Message	67
Deleting Messages or Threads	67
Copying a Message	68
Changing Message Settings	68
Calendar	69
Viewing Your Calendars and Events	69
Creating an Event	70
Editing, Deleting, or Sharing an Event	70
Changing Calendar Settings	70
Searching an Event	71

Table of Contents

Browser	72
Opening the Browser	72
Setting the Home Page	72
Using Multiple Browser Windows	72
Downloading Files	73
Changing Browser Settings	73
Camera	74
Capturing a Photo	74
Using Dual-Camera Mode	75
Using Manual Camera Mode	76
Using Other Camera Modes	76
Recording a Video	77
Customizing Camera and Video Settings	77
Gallery	79
Opening the Gallery	79
Working With Albums	79
Working With Pictures	80
Playing Videos	82
Music	83
Viewing Your Music Library	83
Playing Music	84
Managing Playlists	85
Video Player	86
Opening the Video Library	86
Playing and Controlling Videos	86
Managing Video Files	87
Sound Recorder	89
Recording a Voice Memo	89
Playing a Voice Memo	89
More Apps	90
Calculator	90
Clock	90
Dolby Audio™	91
Downloads	91
File Manager	91
Wi-Fi Utility	92
Google™ Apps	92
Settings	94
Wireless & Networks	94
Personal	95
Device	99
Accounts	102
System	102
Upgrading the Phone Software	103

Table of Contents

Troubleshooting	104
For Your Safety	108
General Safety	108
Radio Frequency (RF) Energy	109
FCC Regulations	110
Hearing Aid Compatibility (HAC) Regulations for Mobile Phones	111
Distraction	112
Product Handling	112
Electrical Safety	115
Radio Frequency Interference	117
Explosive Environments	118
Specifications	119

Getting Started

Installing the Nano-SIM Card (Included) and a microSDXC Card (Not Included)

Power off your phone before installing or removing the nano-SIM card or the microSDXC card. Unmount the microSDXC card before removing it (see *Connecting to Networks and Devices – Using the microSDXC Card as Portable Storage*).

NOTE: Your phone will come with the nano-SIM card already installed.

WARNING! To avoid damage to the phone, do not use any other kind of SIM cards, or any non-standard nano-SIM card cut from a SIM card. You can get a standard nano-SIM card from your service provider.

1. Insert the tip of the tray eject tool into the hole next to the card tray and pull the tray out.
2. Place the nano-SIM card and the microSDXC card on the tray, as shown.
3. Carefully slide the tray back into place.

 
 
Charging the Battery

Your phone's battery should have enough power for the phone to turn on, find a signal, and make a few calls. You should fully charge the battery as soon as possible.

Do not change the built-in rechargeable battery in your phone by yourself. The battery can only be changed by ZTE or a ZTE authorized service provider.

WARNINGS!

- Use only ZTE-approved chargers and cables. The use of unapproved accessories could damage your phone or cause the battery to explode.
- Do not remove the back cover. The battery is not removable. Removal may cause fire or explosion.

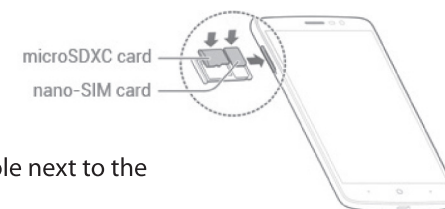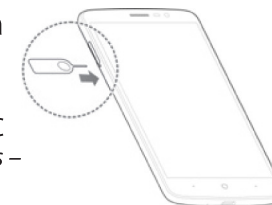

Getting Started

NOTE: Use the USB Type-C™ charger that comes in-box with your phone to charge the battery. It's specially built to support Qualcomm® Quick Charge™ 2.0.

1. Connect the adapter to the charging port.
2. Connect the charger to a standard AC wall outlet. If the phone is on, you'll see a charging icon, such as  or , appear in the Status Bar.
3. Disconnect the charger when the battery is fully charged.

NOTE: If the battery is extremely low, you may be unable to power on the phone even when it is being charged. In this case, try again after charging the phone for at least 20 minutes. Contact customer service if you still cannot power on the phone after prolonged charging.

This device contains a nonremovable battery. Attempting to remove will void your warranty and could cause serious injury. Do not damage, alter, or try to remove the battery.

Extending the Battery Life

Active applications, screen brightness levels, *Bluetooth* and Wi-Fi usage, and GPS functionality can drain your battery. You can follow the helpful tips below to conserve your battery power:

- Reduce the screen backlight time.
- Lower the screen brightness.
- Turn auto-sync, Wi-Fi, and *Bluetooth* off when not in use.
- Disable the GPS function when not in use. Most applications using this function will periodically query the GPS satellites for your current location; each query drains your battery.

Powering Your Phone On/Off

- Press and hold the **Power/Lock Key** to turn on your phone.

Getting Started

- To turn it off, press and hold the **Power/Lock Key** to open the options menu. Tap **Power off** > **OK**.

NOTE: If the phone freezes or takes too long to respond, press and hold the **Power/Lock Key** for about 10 seconds to restart the phone.

Setting Up Your Phone for the First Time

When you first power on your phone after you purchase it or reset it to factory settings (see *Settings – Device – Backup & Reset*), you will need to set it up before using it. Select the language and then follow the prompts to set up your phone.

Locking/Unlocking the Screen and Keys

Your phone allows you to quickly lock the screen and keys (put the phone into Sleep mode) when not in use and also to turn the screen back on and unlock it when you need it.

Locking the Screen and Keys

To quickly turn the screen off and lock the keys, press the **Power/Lock Key**.

NOTE: To save battery power, the phone automatically turns off the screen after a certain period of time when you leave it idle. You will still be able to receive messages and calls while the phone screen is off.

Unlocking the Screen and Keys

1. Press the **Power/Lock Key** to turn the screen on.
2. Press and hold a blank area of the screen to unlock the phone, press and hold  at the bottom right to open the Camera app, or press and hold  at the bottom left to use Google voice commands. You can also double-tap a notification to open the related app.

NOTE: If you have set a fingerprint, an unlock pattern, a PIN, or a password for your phone (see *Personalizing – Protecting Your Phone With Screen Locks* or *Using Your Fingerprint*), you'll need to press your finger against the sensor, draw the pattern, or enter the PIN/password to unlock your screen.

Getting Started

Using the Touch Screen

Your phone's touch screen lets you control actions through a variety of touch gestures.

 
- **Tap** – When you want to type using the on-screen keyboard, select on-screen items (such as application and settings icons), or press on-screen buttons, simply tap them with your finger.
- **Press and Hold** – To open the available options for an item (for example, a message or link in a web page), press and hold the item.
- **Swipe or Slide** – To swipe or slide means to quickly drag your finger vertically or horizontally across the screen.
- **Drag** – To drag, press and hold your finger with some pressure before you start to move your finger. While dragging, do not release your finger until you have reached the target position.
- **Pinch** – In some apps (such as Maps, Browser, and Gallery), you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in).
- **Rotate the Screen** – For most screens, you can automatically change the screen orientation from portrait to landscape by turning the phone sideways.

NOTES:

- The Auto-rotate screen option needs to be turned on for the screen orientation to automatically change. Press the **Home Key** >  > **Settings** > **Display** > **Auto-rotate screen**.
- You can also access the screen rotation control by sliding down the Status Bar twice and tapping **Auto-rotate** or **Portrait**.

Getting Started

Getting to Know Your Phone

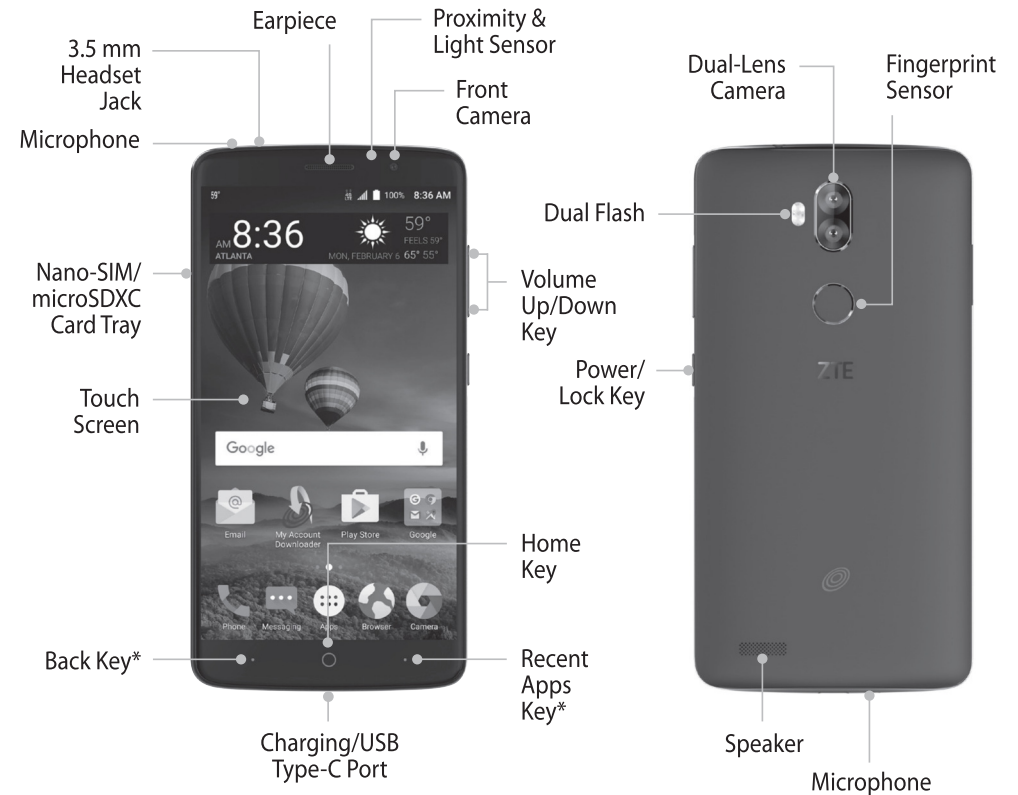

*You can switch the positions of the Back Key and Recent Apps Key. Press the **Home Key** >  > **Settings** > **Navigation key** and select one option.

Getting Started

Key Functions

Key	Description
Power/Lock Key	Press and hold to turn Airplane mode on or off, restart, or to power off. Press to change your phone to Sleep mode. Press to wake up your phone.
Home Key	Press to return to the home screen from any application or screen. Press and hold to access Google Now™.
Recent Apps Key	Press to see recently used applications.
Back Key	Press to go to the previous screen.
Volume Up/Down Key	Press or hold to turn the volume up or down.

Getting Started

Getting to Know the Home Screen

The home screen is the starting point for your phone’s applications, functions, and menus. You can customize your home screen by adding application icons, shortcuts, folders, widgets, and more.



Extended Home Screen Panels

Your home screen is extendable, providing more space for shortcuts, widgets, and more. Simply swipe left or right on the home screen to see the extended panels. You can add or remove home screen panels, or adjust their order.

Getting Started

To add a new home screen panel:

1. Press the **Home Key** > , or press and hold an empty area of the home screen and select **Widgets**.
2. Press and hold an application icon or a widget and drag it to the right edge of the screen to create a new home screen panel and put the icon or widget on it.

To delete a home screen panel:

1. Press and hold an empty area of the home screen and slide left or right to view the home screen thumbnails.
2. Tap  on the top right corner of a thumbnail.
3. Tap **OK**. The items on the panel will also be removed.

NOTES:

- A home screen panel cannot be left empty. If the icon, widget, or folder is the only item on the current home screen panel, the panel will be deleted as you remove the item.
- When there are only three home screen panels, you cannot delete any of them.

To adjust the order of a home screen panel:

1. Press and hold an empty area of the home screen and slide left or right to view the home screen thumbnails.
2. Press and hold a thumbnail and drag it left or right to the place you need.

NOTE: Tap  at the bottom of a home screen thumbnail to set it as the main home screen.

Personalizing

Changing the System Language

1. Press the **Home Key** >  > **Settings** > **Language & input** > **Language**.
2. Select the language you need.

Setting the Date and Time

1. Press the **Home Key** >  > **Settings** > **Date & time**.
2. Set the date, time, time zone, and time format.
 - To adjust the date and time automatically, tap to turn on **Automatic date & time**.
 - To adjust the date and time manually, tap to turn off **Automatic date & time** and tap **Set date / Set time** to change the date and time.
 - To adjust the time zone automatically, tap to turn on **Automatic time zone**.
 - To adjust the time zone manually, tap to turn off **Automatic time zone** and tap **Select time zone** to set the correct time zone.
 - To adjust the time format, tap to turn on **Use 24-hour format**.

Changing the Ringtone and Notification Sound

You can quickly customize the default ringtone for incoming calls and the default notification sound.

1. Press the **Home Key** >  > **Settings** > **Sound & notification**.
2. Tap **Phone ringtone** or **Default notification ringtone**.
3. Scroll through the list and select the ringtone you'd like to use.
4. Tap **OK**.

NOTE: See *Contacts – Editing Contacts – Setting a Ringtone for a Contact* for how to assign a special ringtone to an individual contact.

Turning System Sounds On/Off

1. Press the **Home Key** >  > **Settings** > **Sound & notification** > **Other sounds**.
2. Tap the switch beside each option to turn it on or off.

Adjusting Volumes

1. Press the **Home Key** >  > **Settings** > **Sound & notification**.
2. Drag the sliders below **Media volume**, **Alarm volume**, **Ring volume**, and **Notification volume** to adjust the volume for each type of audio.

NOTE: You can adjust the media volume when a media application is in use by pressing the **Volume Up/Down Key**. If no media application is active, press the **Volume Up/Down Key** to adjust ringtone volume (or the earpiece volume during a call).

Switching to Silent or Vibration Mode

You can set the phone to silent or vibration mode by using one of the following methods.

- Press the **Volume Up/Down Key** when no media application is active to show the volume management window. Drag the slider to the left or keep pressing the **Volume Down Key** to switch the phone to vibration mode. Press the key again in vibration mode to switch the phone to silent mode.
- Swipe down from the top of the screen to open the Notification Panel and drag the panel downward. Tap **Sound** or **Vibrate** to switch the phone to vibration or silent mode.
- Press the **Home Key** >  > **Settings** > **Sound & notification** > **Notification mode** and select **Vibrate** or **Mute** to switch to vibration or silent mode.

NOTE: To restore normal sound settings, press or hold the **Volume Up Key**.

Using Do Not Disturb Mode

You can limit interruptions with Do not disturb mode. This mode silences your phone so that it doesn't make sounds or vibrate when you don't want it to.

Turning on Do Not Disturb Mode

1. Press the **Home Key** >  > **Settings** > **Sound & notification** > **Do not disturb**.
2. Tap **Do not disturb** and select **Always** or **Scheduled**.
3. Set the detailed settings.
 - If you have selected **Scheduled**, set the days and start/end time you'd like your phone to be in Do not disturb mode.
 - Tap **Disturb rules** to choose if you'd like to allow certain notifications or not.
 - **Priority only:** Only notifications you have marked as priority are allowed.
 - **Alarms only:** Only alarms are allowed.
 - **Total silence:** No notifications are allowed.
 - If you have allowed priority interruptions, you can customize the types of allowed sounds or vibration under Priority interruptions.

NOTE: To turn off Do not disturb mode quickly, press the **Volume Up/Down Key** and then tap **END NOW**.

Applying New Wallpapers

You can set the wallpaper for the home screen or lock screen.

1. Press and hold an empty place on the home screen.
2. Tap **Wallpapers**.
3. Swipe left or right on the wallpaper panel to select a wallpaper, or tap **GALLERY** or **LIVE WALLPAPER** to choose the image or animation you want to use as the wallpaper.
4. For Gallery images, tap , , or  and tap  to set the image as the lock screen wallpaper, the home screen wallpaper, or both.

NOTES:

- In addition, you can press the **Home Key** >  > **Settings** > **Display** > **Wallpaper** to pick an image from **Gallery**, **Photos**, or **Wallpapers**, or an animation from **Live Wallpapers**.
- Some cropping may be needed for **Gallery** and **Photos** images.

Setting the Theme

1. Press and hold an empty place on the home screen.
2. Tap **Themes**.
3. Tap a theme to select it.

Setting the Home Screen Transition Effect

1. Press and hold an empty place on the home screen.
2. Tap **Effects**.
3. Tap an effect and the phone will demonstrate how it works. When you have found one you like, press the **Home Key** to exit.

Changing the Screen Brightness

1. Press the **Home Key** >  > **Settings** > **Display** > **Brightness level**.
2. Drag the slider to manually adjust the screen brightness.

NOTE: With the proximity and light sensor, your phone can automatically adjust the screen brightness for available light. Tap **Adaptive brightness** in the Display settings screen to turn the feature on or off.

Protecting Your Phone With Screen Locks

You can protect your phone by creating a screen lock. When enabled, you can press and hold a blank area on the home screen, and then draw a pattern or enter a numeric PIN or password to unlock the phone's screen and keys.

1. Press the **Home Key** >  > **Settings** > **Security**.
2. Tap **Screen lock**.
3. Tap **None**, **Long press**, **Pattern**, **PIN**, or **Password**.
 - Tap **None** to disable screen lock protection.
 - Tap **Long press** to enable screen lock and allow unlocking with a "press and hold" gesture. You can unlock the screen by tapping and holding a blank area on the lock screen.

- Tap **Pattern** to create a pattern that you must draw to unlock the screen.
 - Tap **PIN** or **Password** to set a numeric PIN or a password that you must enter to unlock the screen.
4. For Pattern, PIN, or Password lock, select whether to protect your phone by requiring your pattern, PIN, or password before it starts up. Tap **CONTINUE**.

NOTE: When this feature is enabled, your phone cannot receive calls, messages, or notifications until it starts up.
 5. For Pattern, PIN, or Password lock, select how you would like notifications and their contents to show when the phone is locked, then tap **DONE**.

NOTES:

- Screen lock options are listed in the approximate order of the strength of their security, starting with **None** and **Long press**, which provide no security. A pattern provides minimal security, although it can be more convenient than the stronger options.
- Remember the pattern, PIN, or password you set. Otherwise, you will have to upgrade the phone software to use the phone (see *Upgrading the Phone Software*).

Using Your Fingerprint

With the fingerprint sensor on the back of your phone, you can register up to five fingerprints and use them to unlock the phone, or simply press the fingerprint sensor to take photos, answer calls, or open a bound app when the screen is off or locked.

NOTE: The fingerprint feature is available only when a screen lock (Pattern, PIN, or Password) is enabled. When the screen lock is reset to None or Long press, all registered fingerprints are erased.

Registering a Fingerprint

1. Press the **Home Key** >  > **Settings** > **Security** > **Fingerprint**.
2. Enter the screen lock pattern, PIN, or password you set. If you haven't set a screen lock, follow the prompts to set it.
3. Tap **Register** or **Fingerprint** > **Add fingerprint**.

4. Follow the prompts to record the center and edges of a finger.
 5. Tap **OK**.
- NOTE:** Tap an existing fingerprint record to change its name or delete it.

Setting Fingerprint Actions

1. Press the **Home Key** >  > **Settings** > **Security** > **Fingerprint**.
2. Enter the screen lock pattern, PIN, or password you set.
3. Tap the switches to adjust the following settings:
 - **Wake up and unlock your phone:** Press the fingerprint sensor to wake up the phone and unlock it with a registered fingerprint.
 - **Quick-open app:** Press the fingerprint sensor to open the bound app when the screen is off or locked with a registered fingerprint.
 - **Take photo:** Press the fingerprint sensor to take a photo when the Camera app is open. No fingerprint verification is needed.
 - **Answer call:** Press the fingerprint sensor to answer incoming calls. No fingerprint verification is needed.

Protecting Your Phone With Screen Pinning

You can use the screen pinning feature to keep an app in view, so others cannot switch to other apps or access your personal information.

Turning on Screen Pinning

1. Press the **Home Key** >  > **Settings** > **Security** > **Screen pinning**.
2. Tap the **On/Off** switch.
3. If you have set a screen lock, you can tap **Ask for unlock pattern/PIN/password before unpinning**. You will need to draw the pattern or enter the PIN/password to unpin the screen.

Pinning a Screen

1. Ensure that screen pinning is turned on.
2. Open the app you want to keep in view.
3. Press the **Recent Apps Key**.
4. If there are many app tabs, swipe up to find  on the front-most tab.
5. Tap .

Unpinning the Screen

1. To unpin the screen and return to normal use, press and hold the **Recent Apps Key**.
2. If you have checked **Ask for unlock pattern/PIN/password before unpinning** when pinning the screen, press and hold on the lock screen and draw the pattern or enter the PIN/password.

Knowing the Basics

Monitoring the Phone Status

The Status Bar at the top of the home screen provides phone and service status icons on the right side. Below are some of the icons you may see.

Indicators and Icons

Indicator	What it means
	2G connected
	4G / 3G connected
	4G LTE™ connected
	Do not disturb mode on (Alarms only or Priority only)
	Do not disturb mode on (Total silence)
	Ringer off
	Vibration on
	Battery low
	Battery full
	Battery charging
	Alarm set

Indicator	What it means
	No signal
	Signal strength
	Airplane mode
	Bluetooth on
	Connected to a Wi-Fi network
	Wi-Fi in use
	Portable Wi-Fi hotspot is on
	Mobile data in use
	Speaker on
	Phone microphone off
	GPS on

Knowing the Basics

Managing Notifications

The Status Bar at the top of the home screen provides notification icons on the left side. Below are some of the icons you may see.

Indicators and Icons

Indicator	What it means
	New SMS / MMS
	New email message(s)
	New Gmail message(s)
	Missed call
	Call in progress / Call on hold
	microSDXC card mounted

Indicator	What it means
	Song playing
	Upcoming event
	New Wi-Fi network detected
	Downloading / sending data
	USB connected
	Wired headset connected

Knowing the Basics

Opening/Closing the Notification Panel

Notifications report the arrival of new messages, calendar events, and alarms, as well as ongoing events. You can open the Notification Panel to view the details of notifications.

- To open the Notification Panel, swipe your finger down from the top of the screen.
- To close the Notification Panel, swipe your finger up from the bottom of the screen or press the **Back Key**.

Responding to or Removing a Notification

In the Notification Panel, you can respond to a notification or remove the notifications. The Notification Panel also supports expandable notifications that let you perform additional actions right from the notification itself.

- To respond to a notification, tap it.
- Slide down with one finger to expand certain notifications. You can also swipe two fingers vertically or pinch-zoom to expand or collapse certain notifications.
- To remove a notification, swipe it right.
- To block notifications from an app, swipe the app's notification left and tap . The notifications of some apps cannot be blocked.
- To remove all notifications, tap .
- To manage notifications you have received, press and hold a notification to identify the application that created it. You can then tap  and turn on/off some or all of the following settings:
 - **Block all:** Hide future notifications from this app.
 - **Treat as priority:** Show notifications from this app when Do not disturb mode is set to Priority only.
 - **Allow peeking:** Allow this app to show certain notifications briefly in the current screen.
 - **Hide sensitive content:** Hide content in this app's notifications when the phone is locked.

Knowing the Basics

- Most apps that send notifications, such as Gmail, have notification settings that you can adjust.

NOTE: If you turn off notifications for an app, you may miss its important alerts and updates. The notifications of some apps cannot be turned off.

Using Quick Settings

The Quick Settings in the Notification Panel make it convenient to view or change the most common settings for your phone.

Swipe down with two fingers from the top of the screen, or open the Notification Panel and drag the panel downward to view the following Quick Settings.

- **Auto-rotate/Portrait:** Tap to turn on or off the auto-rotate screen feature.
- **Battery Saver:** Tap to turn on or off Battery Saver. Press and hold to access the Battery saver menu. See *Settings – Device – Battery*.
- **Sound/Vibrate/Silent:** Tap to switch between sound, vibration, and silent mode. See *Personalizing – Switching to Silent or Vibration Mode*.
- **Hotspot:** Tap to enable the mobile hotspot feature and create a portable Wi-Fi hotspot. Press and hold to access the Wi-Fi hotspot menu. See *Connecting to Networks and Devices – Sharing Your Mobile Data Connection*.
- **Airplane mode:** Tap to turn on or off airplane mode.
- **Flashlight:** Tap to turn on or off the flashlight.
- **Sync:** Tap to turn on or off auto-syncing of accounts data. Press and hold to access the Accounts menu. See *Accounts* or *Settings – Accounts*.
- **Do not disturb/Priority only/Alarms only/Total silence:** Tap to access the Do not disturb menu and change its settings. See *Personalizing – Using Do Not Disturb Mode*.
- **Bluetooth:** Tap to turn on or off *Bluetooth*. Press and hold to access the *Bluetooth* menu. See *Connecting to Networks and Devices – Connecting to Bluetooth Devices*.
- **Wi-Fi:** Tap to turn on or off Wi-Fi. Press and hold to access the Wi-Fi menu. See *Connecting to Networks and Devices – Connecting to Wi-Fi*.

Knowing the Basics

- **Data:** Tap to enable or disable data access over the mobile network. Press and hold to access the Data usage menu. See *Settings – Wireless and Networks – Data Usage*.
- **Location:** Tap to turn location services on or off. Press and hold to access the Location menu. See *Settings – Device – Location*.
- **Brightness:** Drag the brightness slider to adjust the screen brightness. Check **AUTO** to make the phone adjust the brightness automatically.

NOTE: In the Quick Settings screen, tap  at the top to access the Settings menu; tap  to view your profile in the Contacts app; tap  to change control switch position.

Managing Shortcuts and Widgets

Adding Shortcuts and Widgets

1. Press the **Home Key** >  to add shortcuts.
Or, to add widgets, press and hold an empty area of the home screen and select **Widgets**.
2. Slide to browse the available applications or widgets.
3. Press and hold a widget or an application icon and drag it to a home screen panel.

NOTE: While holding the item, you can drag it to the right edge of the screen to create a new home screen panel and put the item on it.

Moving Shortcuts or Widgets

1. Press and hold a widget or shortcut on the home screen.
2. Drag it to the place you need.

Removing Shortcuts or Widgets

1. Press and hold a widget or shortcut on the home screen.
2. Drag it to  to remove it.

Knowing the Basics

Adjusting Widget Size

1. Press and hold a widget on the home screen and then release it.
2. An outline appears around the widget. Drag the outline to resize the widget.

NOTE: Not all widgets can be resized.

Organizing With Folders

You can create folders on the home screen and add several shortcuts to a folder. You can move or remove folders the same way as moving or removing shortcuts.

 
1. On the home screen, press and hold the shortcut you want to add into a folder.
2. Drag the shortcut to . A new folder will be created, and the shortcut is added into the folder.
3. To add more shortcuts into the folder, press and hold each shortcut and drag it over the folder before releasing it.
4. To remove a shortcut from a folder, tap the folder to open it. Press and hold the shortcut and drag it to the home screen.

NOTES:

- Tap the folder and then tap the name field to rename the folder.
- Drag the folder to  to delete the folder and replace its shortcuts on the last home screen.

Rearranging the Primary Shortcuts

The home screen includes a customizable primary shortcuts area at the bottom of all home screens. You can keep up to four items in the primary shortcuts area. Drag shortcuts or folders in or out of the area to rearrange the area.



Knowing the Basics

Entering Text

You can enter text using the on-screen keyboard. Some apps open it automatically. In others, you open it by tapping where you want to type. You can press the **Back Key** to hide the on-screen keyboard. You can also enter text by speaking with the Google voice typing feature.

Enabling or Disabling Input Methods

1. Press the **Home Key** > ⋮ > **Settings** > **Language & input**.
2. Tap **Current Keyboard** > **CHOOSE KEYBOARDS**.
3. Tap a keyboard in the list to enable/disable it as an option for entering text.

NOTE: Some default input methods may not be disabled.

Changing Input Methods

1. When you use the on-screen keyboard to enter text, the  icon appears in the Status Bar.
NOTE: The  icon appears only when more than one input method is installed and enabled for use.
2. Open the Notification Panel and tap **Change keyboard**.
3. Select the input method you need.

TouchPal Keyboard

 
The TouchPal keyboard offers three layouts: FULL, PHONEPAD, and T+. You can tap  to select a layout or an input language.

You can also use Curve® and Wave™ to speed up text input by replacing the key tapping operation with a tracing gesture where you move your finger from letter to letter without lifting the finger until you reach the end of the word.

Knowing the Basics

The FULL Layout

The FULL layout offers an input experience similar to a computer keyboard.

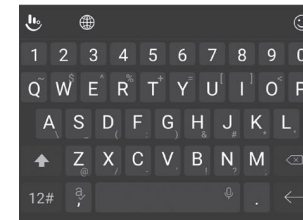

- **The alphabetic keys:** Tap the keys to enter letters. You can also press and hold a key and slide to choose more characters.
- **The capital key:** Tap  to use uppercase. Double tap  to lock uppercase. This key also changes to indicate the current case you are using:  for lowercase,  for uppercase, and  when locked in uppercase.
- **Word prediction:** Press and hold  and tap the **Prediction** switch to turn off  or on .
- **Pre-defined texts:** Tap  to enter digits, symbols, and more. You can tap the arrow keys to turn pages, or tap  to go back to the alphabetic keys. Slide up on the space key or tap  to enter emojis and emoticons.
- **The delete key:** Tap  to delete text before the cursor. You can also press and hold the key to quickly delete multiple characters, or slide left on the key to delete a whole word.
- **Voice input:** Press and hold the space bar and speak into the microphone.
- **More options:** Tap  to access the quick settings of TouchPal keyboard, use voice input, edit text, resize the keyboard, change keyboard themes, and more.

 
Knowing the Basics

The PHONEPAD Layout

The PHONEPAD layout is similar to a phone pad.

Tap an alphabetic key repeatedly until the desired letter or number appears. Press and hold the key and slide left or right to choose the text you need.


If word prediction is enabled, just tap the keys once and choose the right word.

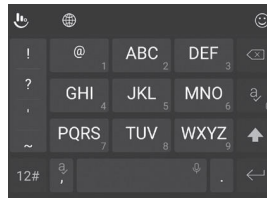

The T+ Layout

If word prediction is disabled, tap to enter the left letter on the key. Double tap to enter the right letter/symbol on the key. Press and hold a key and slide left or right to choose more letters and symbols.

 If word prediction is enabled, just tap the keys and choose the right word.

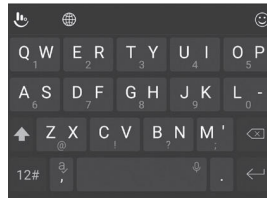

Curve - Word Gesture

 
Curve - Word gesture allows you to enter text by sliding your finger on the screen from letter to letter to enter each word.

To enable and use Curve - Word gesture:

1. On the TouchPal keyboard screen, tap  > **Settings** > **Smart input** and check **Curve® - Word gesture**.
2. Tap  >  and tap inside a text field to open the keyboard, and then tap  > **FULL** to switch to the FULL layout.
3. Move your finger from letter to letter on the keyboard to trace a word without lifting the finger until you reach the end of the word.

NOTE: Curve - Word gesture is only available in the FULL layout.

Knowing the Basics

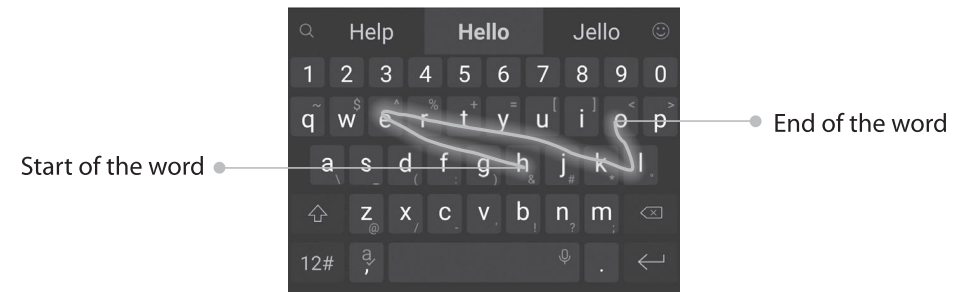

NOTES:

- Tap to type when you want to. If you want to enter a single letter, simply tap the key once.
- Lift your finger at the end of the word. A space is added automatically when you begin to trace the next word.

Wave - Sentence Gesture

Wave - Sentence gesture allows you to enter words by dragging candidate words to the space key.

To enable and use Wave - Sentence gesture:

1. On the TouchPal keyboard screen, tap  > **Settings** > **Smart input** and check **Wave™ - Sentence gesture**.
2. Tap  >  and tap inside a text field to open the keyboard, and then tap  > **FULL** to switch to the FULL layout.
3. Tap or use Curve to enter the first word. As the first word appears on the text field, candidate words appear on the keyboard for you to choose from as the following word.
4. Drag the correct candidate word to the space key to add the word to the text field.

Knowing the Basics

 


NOTES:

- If none of the suggested words are correct, type the word as you normally would.
- Wave - Sentence gesture is only available in the FULL layout.

Google Keyboard

The Google Keyboard provides a layout similar to a desktop computer keyboard. When screen auto-rotation is enabled, turn the phone sideways and the keyboard will change from portrait to landscape. The landscape keyboard is not supported in all applications.

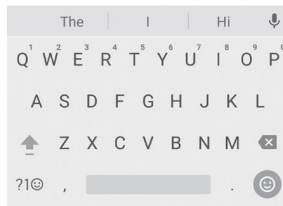

- Tap the alphabetic keys to enter letters. Press and hold some specific keys to enter associated accented letters or numbers. For example, to enter È, press and hold E and the available accented letters and number 3 appear. Then slide to choose È.
- As you enter a word, candidates appear above the keyboard. Tap the correct one to select it.
- Tap ⇧ to use uppercase. Double-tap ⇧ to lock uppercase. This key also changes color to indicate the current case you are using.

Knowing the Basics

- Tap ✕ to delete the text before the cursor.
- Tap ?1☺ to select numbers and symbols. You can then tap ⇧= to find more or tap ☺ to enter miniature icons.
- Tap ☺ to enter miniature icons such as expressions, astrological signs, and animals.
- Tap 🗣 to use Google voice typing.
- Press and hold ⇧, to change the input language or set up the Google Keyboard.
- Press and hold ⇧, and slide to ⇧ to change to a smaller keyboard for easier one-handed typing. Tap ⇧ / ⇧ to switch to the right-hand or left-hand keyboard, respectively. Tap ⇧ ⇧ to switch back to the full-sized keyboard.

Gesture Typing

The Google Keyboard supports the gesture typing feature. You use this feature to input a word by sliding through the letters.

To enable and use gesture typing:

1. On the Google Keyboard, press and hold ⇧ > **Google Keyboard settings**.
Or, press the **Home Key** > ⋮ > **Settings** > **Language & input** > **Google Keyboard**.
2. Tap **Gesture typing** > **Enable gesture typing** if the feature is turned off.
3. Move your finger from letter to letter on the keyboard to trace a word without lifting the finger until you reach the end of the word.



Knowing the Basics

NOTES:

- Tap when you want to. If you want to enter a single letter, go ahead and tap.
- Lift your finger at the end of the word. A space is added automatically when you begin to input the next word.

Google Voice Typing

Google voice typing uses the Google voice recognition service to convert speech to text. You must have a data connection on a mobile or Wi-Fi network to use it.

1. Tap  to access voice typing when you are using the Google Keyboard, or flick down the Status Bar when entering text and tap **Change keyboard** > **Google voice typing**.
2. When you see the microphone image, speak what you want to type.
3. You can continue entering text or tap an underlined word to change or delete it.

NOTE: Say “comma,” “period,” “question mark,” “exclamation mark,” or “exclamation point” to enter punctuation.

Input Method Settings

Choose the input method settings by pressing the **Home Key** >  > **Settings** > **Language & input**.

 
 
In the Keyboard & input methods section, you can set the current input method and choose the settings for input methods.

Editing Text

- **Move the insertion point:** Tap where you want to type. The cursor blinks in the new position, and a tab appears below it. Drag the tab to move the cursor.
- **Select text:** Press and hold or double-tap within the text. The nearest word highlights, with a tab at each end of the selection. Drag the tabs to change the selection. Tap  > **SELECT ALL** to select all the text, tap **SHARE** and choose an option, or tap **ASSIST** to open Google Now.

Knowing the Basics

- **Cut or copy:** Select the text you want to manipulate. Then tap **CUT** or **COPY** to cut or copy the text to the clipboard.
- **Replace text with the clipboard text:** Select the text you want to replace. Then tap **PASTE**.
- **Insert clipboard text in the text field:** Press and hold the tab below the cursor. Then tap **PASTE**.

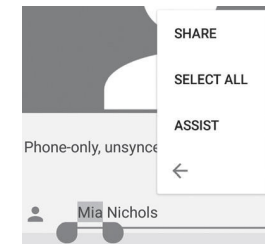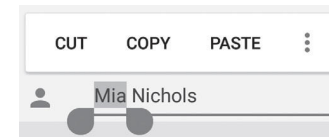

Opening and Switching Apps

Opening an App

1. Press the **Home Key** > .
2. Slide up or down on the screen and tap an app to open it.

NOTE: Drag the slider on the right side of the screen to the initial letter of the app you need, or tap the search box at the top to search for apps.

Switching Between Recently Opened Apps

1. Press the **Recent Apps Key**. A list of the names and thumbnails of apps you've recently used opens. If you've been using more apps recently than can fit on the screen, you can scroll the list up and down.
2. Tap a thumbnail to open that app.

NOTE: You can swipe a thumbnail left or right or tap  on the thumbnail to remove it from the list. Tap **Clear all** to remove all thumbnails.

Knowing the Basics

Uninstalling or Disabling an Application

1. Press the **Home Key** >  to open the application list screen.
2. Press and hold an application icon and drag the icon to  or  at the top of the screen.
3. Tap **OK** to uninstall or disable the app.

NOTES:

- Preinstalled apps cannot be uninstalled, and not all apps can be disabled.
- To find the disabled applications, press the **Home Key** >  > **Settings** > **Apps**. Tap **All apps** and select **Disabled**. You can then tap an application and tap **ENABLE** to enable it.

Connecting to Networks and Devices

Connecting to Mobile Networks

Controlling Mobile Data Use

To enable or disable data access:

1. Press the **Home Key** >  > **Settings** > **Data usage**.
2. Slide the **Mobile data** switch to enable or disable mobile data use.

To get data services when roaming:

1. Press the **Home Key** >  > **Settings** > **Mobile networks**.
2. Slide the **Data roaming** switch to enable or disable roaming.

NOTE: Data roaming may incur significant roaming charges.

Setting Access Point Names

You can use the default Access Point Names (APNs) to connect to the Internet. To add a new APN, you may need to contact your service provider for the required information.

1. Press the **Home Key** >  > **Settings** > **Mobile networks** > **Access Point Names**.
2. Tap .
3. Tap each item to enter the required information.
4. Tap  > **Save**.

NOTE: To set the APN to default settings, tap  > **Reset to default** > **CONTINUE**.

Connecting to Wi-Fi

Wi-Fi is a wireless networking technology that can provide Internet access at distances of up to 300 feet (100 meters), depending on the Wi-Fi router and your surroundings.

Turning Wi-Fi On and Connecting to a Wi-Fi Network

1. Press the **Home Key** >  > **Settings** > **Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **On**  position to turn on Wi-Fi.
3. Tap a network name to connect to it.

Connecting to Networks and Devices

4. If the network is secured, enter the password and tap **CONNECT**.

NOTE: Your phone automatically connects to previously used Wi-Fi networks when they are in range.

Getting Notified of Open Networks

1. Press the **Home Key** >  > **Settings** > **Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **On**  position.
3. Tap  > **Advanced**.
4. Slide the **Network notification** switch to the **On**  position.

When Wi-Fi is on, you receive notifications in the Status Bar when your phone detects an open Wi-Fi network. Slide the **Network notification** switch to the **Off**  position to turn off notifications.

Adding a Wi-Fi Network

You can add a Wi-Fi network if the network does not broadcast its name (SSID) or add a Wi-Fi network when you are out of range.

To connect to a secured network, you first need to get the security details from the network's administrator.

1. Press the **Home Key** >  > **Settings** > **Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **On**  position.
3. Tap  > **Add network**.
4. Enter the network SSID (name). If necessary, enter security or other network configuration details.
5. Tap **SAVE**.

Forgetting a Wi-Fi Network

You can make your phone forget the details of a Wi-Fi network that you added—for example, if you don't want the phone to connect to it automatically or if it is a network that you no longer use.

Connecting to Networks and Devices

1. Press the **Home Key** >  > **Settings** > **Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **On**  position.
3. Tap the Wi-Fi network name and then tap **FORGET**.

Connecting to a WPS Network

Wi-Fi Protected Setup (WPS) is a feature that makes it easy to add your phone to the access points that supply WPS.

You can use one of the following methods to connect your phone to a wireless network using WPS.

Method one: WPS button (Recommended)

1. Press the **Home Key** >  > **Settings** > **Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **On**  position.
3. Tap  > **Advanced** > **WPS Push Button**.
4. Press the WPS button on the wireless router and the access point will recognize your phone and add it to the network.

Method two: PIN

1. Press the **Home Key** >  > **Settings** > **Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **On**  position.
3. Tap  > **Advanced** > **WPS Pin Entry**.
4. The WPS PIN displays on the screen. Enter the PIN into the access point's setup page. After entering the PIN, your phone automatically finds the access point and configures the connection.

NOTE: For detailed information about the WPS feature of the access point, please refer to its documentation.

Adjusting Advanced Wi-Fi Settings

1. Press the **Home Key** >  > **Settings** > **Wi-Fi**.

Connecting to Networks and Devices

2. Tap  > **Advanced** to adjust the following settings.

- **Network notification:** Get notifications in the status bar when Wi-Fi is on and an open network is available.
- **Scanning always available:** Allow Google location services and other apps to scan for networks even when Wi-Fi is turned off.
- **Keep Wi-Fi on during sleep:** Choose whether or not to keep Wi-Fi on in Sleep mode.
- **Install certificates:** Install certificates needed for connecting to certain Wi-Fi networks.
- **WPS Push Button:** Connect to a WPS network via the push button method.
- **WPS Pin Entry:** Connect to a WPS network via the phone PIN method.
- **MAC address:** Check the MAC address.
- **IP address:** Check the phone's IP address.

Connecting to Bluetooth Devices

Bluetooth is a short-range wireless communication technology. Phones or other devices with *Bluetooth* capabilities can exchange information wirelessly within a distance of about 30 feet (10 meters). The *Bluetooth* devices must be paired before the communication is performed.

Turning Bluetooth On/Off

1. Press the **Home Key** >  > **Settings** > **Bluetooth**.
2. Slide the **Bluetooth** switch to the **On**  or **Off**  position.

When *Bluetooth* is on, the  icon will appear in the Status Bar.

Changing the Device Name

1. Press the **Home Key** >  > **Settings** > **Bluetooth**.
2. Slide the **Bluetooth** switch to the **On**  position if *Bluetooth* is off.
3. Tap  > **Rename this device**.
4. Edit the name and tap **RENAME**.

Connecting to Networks and Devices

Pairing With Another Bluetooth Device

1. Press the **Home Key** >  > **Settings** > **Bluetooth**.
2. Slide the **Bluetooth** switch to the **On**  position if *Bluetooth* is off.
Your phone automatically scans for and displays the IDs of all available *Bluetooth* devices in range. Tap  > **Refresh** if you want to scan again.

3. Tap the device you want to pair with.

4. If necessary, confirm that the *Bluetooth* passkeys are the same between the two devices and tap **PAIR**. Alternately, enter a *Bluetooth* passkey and tap **PAIR**.

Pairing is successfully completed when the other device accepts the connection or the same passkey is entered.

NOTE: The *Bluetooth* passkey may be fixed for certain devices, such as headsets and hands-free car kits. You can try entering 0000 or 1234 (the most common passkeys) or refer to the documents for that device.

Forgetting a Bluetooth Device

You can make your phone forget its pairing connection with another *Bluetooth* device. To connect to the device again, you need to search for it and enter or confirm a passkey again.

1. Press the **Home Key** >  > **Settings** > **Bluetooth** and ensure that *Bluetooth* is turned on.
2. In the list of paired devices, tap  beside the *Bluetooth* device you want to forget.
3. Tap **FORGET**.

Sending Data via Bluetooth

1. Open the appropriate application and select the file or item you want to share.
2. Select the option for sharing via *Bluetooth*. The method may vary by application and data type.
3. Tap a *Bluetooth* device the phone has paired with or wait for it to search for new devices and tap one of them.

Connecting to Networks and Devices

Receiving Data via *Bluetooth*

1. Turn *Bluetooth* on before trying to receive data via *Bluetooth*.
2. Swipe down on the Status Bar and tap .
3. Tap **ACCEPT** to start receiving the data.

Depending on your storage setting and whether a microSDXC card is installed, received files are stored automatically in a dedicated folder (*Bluetooth*, for instance). You can access them with the File Manager app.

Connecting to Your Computer via USB

You can connect your phone to a computer with a USB cable and transfer music, pictures, and other files in both directions. Your phone stores these files in internal storage or on a removable microSDXC card.

Connecting Your Phone to a Computer via USB

1. Connect your phone to the PC with a USB cable.
2. Choose one of the following options:
 - **Charge only:** Charge your phone via USB.
 - **Install driver:** Install the driver needed for some USB connection modes (such as MTP). You only need to install the driver on the same PC once.
NOTE: You can also install the driver on the PC by running the executable file in the CD-ROM drive.
 - **Media device (MTP):** Transfer media files on Windows®, or using Android™ File Transfer on Mac®.
NOTE: For Windows XP, install the drivers and Windows Media® Player 11 (or later version) when you use Media device (MTP) for the first time.
 - **Camera (PTP):** Transfer photos using camera software.

NOTE: To make your phone connect to the computer automatically using the selected connection type, check **Don't ask me again**.

Connecting to Networks and Devices

Disconnecting Your Phone From the Computer

To disconnect the phone from the computer, simply unplug the USB cable when you're finished.

Using the microSDXC Card as Portable Storage

You can use your microSDXC card as portable storage to save photos, music, videos, downloaded files, and more.

Removing the microSDXC Card From Your Phone

If you need to remove the microSDXC card, you should unmount it first.

1. Press the **Home Key** >  > **Settings** > **Storage**.
2. Tap  next to the SD card name in the Portable storage section.
NOTE: Before ejecting the card, ensure that you have moved data and apps to the internal storage.
3. When the SD card's state is **Ejected**, you can remove it from the phone.

Mounting the microSDXC Card

1. If the microSDXC card is ejected, press the **Home Key** >  > **Settings** > **Storage**.
2. Tap the SD card name and then tap **MOUNT**.

Erasing and Formatting the microSDXC Card

1. Press the **Home Key** >  > **Settings** > **Storage**.
2. Tap the SD card name in the Portable storage section.
3. Tap **Format** > **ERASE & FORMAT** > **DONE**.

CAUTION: The formatting procedure erases all the data on the microSDXC card, after which the files CANNOT be retrieved.

Connecting to Networks and Devices

Using USB On-the-Go (OTG)

Your phone supports USB On-The-Go. You can connect the phone and a USB peripheral device (such as a USB flash drive, a USB mouse, or a USB keyboard) with an OTG adapter cable.

For example, if you connect the phone to a USB flash drive, you can browse the files on the flash drive; if you connect the phone to a USB mouse, you can navigate the phone with the mouse.

Sharing Your Mobile Data Connection

Sharing Mobile Data Through a Wi-Fi Hotspot

You can share your phone's data connection with other devices by turning your phone into a portable Wi-Fi hotspot. This feature requires a data connection on a mobile network and may result in data charges.

NOTE: When the portable Wi-Fi hotspot feature is enabled, you cannot use your phone's Wi-Fi capability to access the Internet. You still remain connected to the Internet via your mobile data network.

1. Press the **Home Key** >  > **Settings** > **Wi-Fi hotspot**.
2. Slide the switch to the **On**  position. (If Wi-Fi was active, tap **OK** to deactivate it.) After a moment, the phone starts broadcasting its Wi-Fi network name (SSID).
3. On another device, locate your phone via Wi-Fi and connect with it to start using the phone's mobile data.

NOTE: To stop sharing your data connection, slide the switch to the **Off**  position.

Setting Up Your Wi-Fi Hotspot

You can change your phone's Wi-Fi network name (SSID), secure your portable Wi-Fi hotspot, and set other options.

1. Press the **Home Key** >  > **Settings** > **Wi-Fi hotspot**.
2. Tap an option to configure settings.

Connecting to Networks and Devices

• **Configure:**

- **Network name:** Enter or edit a network SSID (name) that other devices see when scanning for Wi-Fi networks.
 - **Channel:** Select a Wi-Fi channel for your Wi-Fi hotspot, or set as **Auto**.
 - **Security:** Choose a security option: **Open** (not recommended) or **WPA2 PSK** (other users can access your hotspot only if they enter the correct password). When you select WPA2 PSK, tap the **Password** field to edit the security password.
 - **Show password:** If you have chosen WPA2 PSK security, check or uncheck to show or hide the password.
 - **Broadcast network name (SSID):** Check to broadcast or uncheck to hide your network name (SSID). If the broadcast is disabled, other users need to know your network SSID to find the Wi-Fi hotspot.
- **Manage users:** Block or unblock users, set the maximum number of devices that can connect to the hotspot simultaneously, and view a list of connected users.
 - **Sleep policy:** Set hotspot sleep policy and notification.

Connecting to Virtual Private Networks

Virtual private networks (VPNs) allow you to connect to the resources inside a secured local network. VPNs are commonly deployed by corporations, schools, and other institutions to let people access local network resources when not on campus, or when connected to a wireless network.

Depending on the type of VPN you are using, you may be required to enter your login credentials or install security certificates before you can connect to your VPN. You can get this information from your network administrator.

NOTE: You need to set a lock screen pattern, PIN, or password before you can use credential storage (VPN).

Adding a VPN

1. Press the **Home Key** >  > **Settings** > **More** > **VPN**.

Connecting to Networks and Devices

2. Tap  and enter the VPN name.
3. Enter the server address and other information provided by your network administrator. Check **Show advanced options** to fill out additional details.
4. Tap **SAVE**.

The VPN is added to the list on the VPN screen.

Connecting to a VPN

1. Press the **Home Key** >  > **Settings** > **More** > **VPN**.
2. Tap the VPN that you want to connect to.
3. When prompted, enter any requested credentials and then tap **CONNECT**.

Modifying a VPN

1. Press the **Home Key** >  > **Settings** > **More** > **VPN**.
2. Tap  beside the VPN that you want to modify.
3. Edit the VPN settings and then tap **SAVE**.

Phone Calls

You can place calls from the Phone app, the Contacts app, or other apps or widgets that display contact information. Wherever you see a phone number, you can usually tap it to dial.

Placing and Ending Calls

Placing a Call by Dialing

1. Press the **Home Key** >  > .
2. Enter the phone number with the on-screen keypad. Tap  to delete incorrect digits.
NOTE: As you enter digits, your phone searches for contacts that match. If you see the number you want to dial, tap it to place the call immediately without entering the rest of the number.
3. Tap  below the keypad to dial.

You can also tap the search box at the top of the Phone app screen and enter the phone number or contact name you want to call. Tap the matching contact or **Call [number]** to place the call.

NOTES:

- To make an international call, press and hold the **0 Key** to enter the plus (+) symbol. Next, enter the country code followed by the city/area code and then the phone number.
- To redial the last call you made, press the **Home Key** >  >  >  and tap  again.

Ending a Call

During a call, tap  on the screen.

Answering or Rejecting Calls

When you receive a phone call, the Incoming Call screen opens, displaying the Caller ID or the information about the caller that you've entered in the Contacts app. You can answer or reject the call, or reject it with a text message.

Phone Calls

Answering a Call

When you receive a phone call, slide  Slide down to answer (Slide down to answer) down to answer the call.

NOTE: To silence the ringer before answering the call, press the **Volume Up/Down Key**.

Rejecting a Call

When you receive a phone call, slide  Slide up to decline (Slide up to decline) up to reject the call.

You can also slide  up to reject the call and send a preset text message to the caller.

NOTE: To edit the text response from within the Phone app, tap  > **Settings** > **Quick responses**.

Working With the Call History

The call history is a list of all the calls you've placed, received, or missed. It provides a convenient way to redial a number, return a call, or add a number to your Contacts.

To open the call history, press the **Home Key** >  >  > **Call History**.

Placing a Call From the Call History

1. Open the call history.
2. Tap a number for more information about the call, or tap  beside it to call back.

NOTE: You can tap **MISSED**, **OUTGOING**, or **INCOMING** to filter the records by call type.

Adding a Call History Number as a Contact

1. Open the call history.
2. Tap the circle in front of a number.
3. Tap  on the contact information tab.
4. To add the number to an existing contact, tap a contact in the list. To add a new contact, tap **Create new contact**.

Phone Calls

Taking Other Actions on a Call History Entry

1. Open the call history.
2. Tap a number and then tap **Call details** to view more call information. While viewing the call details, you can:
 - Tap  > **Edit before call** to edit the number in the dialer before calling it.
 - Tap the circle in front of an entry to open the contact information tab from the bottom of the screen. You can send a message, call back, edit the contact, add the contact to favorites, or add the number to contacts.
 - Tap  to delete the entry.

NOTE: You can tap  > **Clear call history** in the call history screen to delete all history records.

Calling Your Contacts

1. Press the **Home Key** > . Your favorite contacts and frequently called contacts are displayed in the  tab.
2. Tap a contact to place the call, or tap the  tab and then tap  beside a contact to make a call.

Checking Voicemail

If you have set the phone to divert certain calls to voicemail, callers can leave voicemail messages when they cannot reach you. Here's how to check the messages they left.

1. Press the **Home Key** >  > .
2. Press and hold the **1 Key** in the dialer. If prompted, enter your voicemail password.
3. Follow the voice prompts to listen to and manage your voicemail messages.

NOTE: See *Phone Calls – Adjusting Your Call Settings – Setting Voicemail* for how to set your voicemail service. For detailed information, please contact your service provider.

Using Options During a Call

During a call, you will see a number of on-screen options. Tap an option to select it.

- Tap  to switch to the keypad when you need to enter a code (for example, the PIN for your voicemail or bank account) during the call.
- Tap  to put the call on hold.
- Tap  to turn the speaker on or off.
- Tap  to mute or unmute the microphone.
- Tap  to make another call separately from the first call, which is put on hold.
- Tap  to go to contacts.
- Tap  to merge the separate calls into a single conference call.
- Tap  to put the caller you are speaking to on hold, and switch to the other call that has been put on hold.
- Tap  to end the current call.

WARNING! Because of higher volume levels, do not place the phone near your ear during speakerphone use.

Managing Multi-party Calls

When the call waiting and three-way call features are available, you can switch between two calls or set up a conference call.

NOTE: Options and interface will vary. The call waiting and three-way call features need network support and may result in additional charges. Please contact your service provider for more information.

Switching Between Current Calls

When you're on a call, your phone screen informs you that another call is coming in and displays the caller ID.

To respond to an incoming call while you're on a call:

- Tap  **Answer** (Answer) or  **Hold current and answer** (Hold current and answer) to answer the call. This puts the first caller on hold and answers the second call.
- Tap  **End current and answer** (End current and answer) to answer the second call and end the first one.
- Tap  to reject the second call.
- Tap  to reject the second call and select a preset text message to send to the caller.

To switch between two calls:

Tap .

Setting Up a Conference Call

With this feature, you can talk to two people at the same time.

1. Place the first call.
2. Once you have established the connection, tap  and dial the second number. This puts the first caller on hold.
3. When you're connected to the second party, tap .
4. You can tap **Manage conference call** to end  or separate  a call; tap **Back to call** to return to the main call screen.

If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all callers are disconnected.

To end the conference call, tap .

Adjusting Your Call Settings

You can configure a number of settings for the Phone application.

NOTE: Some call options are displayed only when these features are available, and some features require network support and may result in additional charges. Please contact your service provider for more information.

Setting Contact Display Options

You can set the order of the contacts displayed in the  tab of the Phone app.

1. Press the **Home Key** >  >  > **Settings** > **Display options**.
2. Tap **Sort by** or **Name format** to set the order of the contacts and the format of the contact names.

Setting Sound and Vibration

Set the sound and vibration for incoming calls as well as dial pad sounds.

1. Press the **Home Key** >  >  > **Settings** > **Sounds and vibration**.
2. Tap the option you want to configure.
 - Tap **Phone ringtone** to select the ringtone for incoming call notification.
 - Check **Also vibrate for calls** to enable vibration for incoming call notification.
 - Check **Dialpad tones** to play sounds when you tap the dial pad keys.

NOTE: You can set the vibration pattern for incoming call notifications. Press the **Home Key** >  >  > **Settings** > **Call settings** > **Vibrate pattern** and select one.

Editing Quick Response to Rejected Callers

1. Press the **Home Key** >  >  > **Settings** > **Quick responses**.
2. Tap a text message to edit it.
3. Tap **OK** to save the message.

Setting Voicemail

1. Press the **Home Key** >  >  > **Settings** > **Call settings**.
2. Tap **Voicemail** to configure voicemail settings.
 - Tap **Service** to select the voicemail service provider. Your carrier is the default.
 - Tap **Setup** to view the voicemail number; if needed, tap **Voicemail number** to edit it.
 - Tap **Ringtone** to select the notification ringtone for new voicemails.
 - Check **Vibrate** to enable vibration for notifications.

Using Fixed Dialing Numbers

Fixed Dialing Numbers (FDN) allows you to restrict outgoing calls to a limited set of phone numbers.

1. Press the **Home Key** >  >  > **Settings** > **Call settings**.
2. Tap **Fixed Dialing Numbers** for the following options:
 - **Enable FDN:** Input the PIN2 code to enable the FDN feature.
 - **Change PIN2:** Change the PIN2 code for FDN access.
 - **FDN list:** Manage the FDN list.

NOTE: The PIN2 code is provided by your carrier. Entering an incorrect PIN2 code more times than allowed can lock your nano-SIM card. Contact the service provider for assistance.

Setting TTY Mode

Your phone is a TTY compatible device. A TTY device can allow people who have hearing or speech disabilities to communicate by telephone. Simply connect the TTY device to the phone's headset jack.

Select a TTY mode for your phone to work with a TTY device, or turn TTY off.

1. Press the **Home Key** >  >  > **Settings** > **Call settings** > **TTY mode**.
2. Select one of the following options. Consult your teletypewriter manufacturer's manual if necessary.
 - **TTY Off:** Users who can hear and talk can disable TTY support.
 - **TTY Full:** Users who cannot talk or hear may use this mode to send and receive text messages through TTY device.
 - **TTY HCO:** Users who can hear, but cannot talk, may use this mode to listen to conversation of the other party, and respond via text messages.
 - **TTY VCO:** Users who can talk, but cannot hear, may use this mode to talk through the phone and receive responses via text messages.

Setting Hearing Aids

Your phone supports HAC (Hearing Aid Compatibility) function. When you turn on the hearing aid compatibility and use a hearing aid with a telecoil to answer the phone, it will help you hear more clearly during the phone call.

1. Press the **Home Key** >  >  > **Settings** > **Call settings**.
2. Check **Hearing aids** to turn on hearing aid compatibility.

CAUTION: Do not turn on the Hearing aids option unless you use a hearing aid with a telecoil. Using this setting without a hearing aid or with a hearing aid without a telecoil may be harmful to your hearing.

Setting Display Duration

When this feature is enabled, the phone will display the call duration on the calling screen when a call is ended. You can also check the call duration in the call history.

1. Press the **Home Key** >  >  > **Settings** > **Call settings**.
2. Check or uncheck **Display duration**.

Setting Speed Dials

You can press and hold the 1-9 Keys from the dialer to call the corresponding speed dial number.

The number 1 Key is reserved to speed dial your voicemail.

To assign a speed dial key:

1. Press the **Home Key** >  >  > **Settings** > **Call settings** > **Speed dial**.
2. Tap a speed dial entry.
3. Enter a phone number or tap  to select one from the contact list.
4. Tap **OK**.

Setting DTMF Tones

You can set the length of dual-tone multi-frequency (DTMF) signal tones.

1. Press the **Home Key** >  >  > **Settings** > **Call settings** > **DTMF tones**.
2. Tap **Normal** or **Long**.

Setting the Vibration When a Call is Answered

You can make the phone vibrate when a call is answered.

1. Press the **Home Key** >  >  > **Settings** > **Call settings**.
2. Check **Vibrate when call is answered** to enable this feature.

Forwarding Incoming Calls

The call forwarding feature allows you to forward your incoming calls to another phone number.

1. Press the **Home Key** >  >  > **Settings** > **Call settings** > **Call forwarding**.
2. Tap an available option to enable it.

Barring Certain Calls

The call barring feature allows you to forbid certain types of calls from your phone.

1. Press the **Home Key** >  >  > **Settings** > **Call settings** > **Call barring**.
2. Set the restriction of specific types of calls from your phone.

Setting Voice Privacy

This option allows you to enable enhanced privacy mode.

1. Press the **Home Key** >  >  > **Settings** > **Call settings** > **Additional settings**.
2. Check **Voice privacy** to enable this feature.

Phone Calls

Setting Plus Code Dialing

Plus Code Dialing allows the phone to automatically dial the international access code for your location when you press and hold the **0 Key** in the dialpad.

To activate Plus Code Dialing:

1. Press the **Home Key** >  >  > **Settings** > **Call settings** > **Additional settings** > **Plus code dialing setting**.
2. Check **Setup Plus Code Replacement** to enable this feature.

To change the international dialing code:

1. Press the **Home Key** >  >  > **Settings** > **Call settings** > **Additional settings** > **Plus code dialing setting**.
2. Tap **Replace Code of Plus Code**.
3. Enter a new code and tap **OK**.

Setting Call Waiting

This option allows you to get notified of incoming calls during a call.

1. Press the **Home Key** >  >  > **Settings** > **Call settings** > **Additional settings**.
2. Check **Call waiting** to enable this feature.

Setting Caller ID

Choose whether your number is displayed when someone receives your outgoing call.

1. Press the **Home Key** >  >  > **Settings** > **Call settings** > **Additional settings**.
2. Tap **Caller ID** and select an option.

Contacts

You can add contacts on your phone and synchronize them with the contacts in your Google account or other accounts that support contact syncing.

To see your contacts, press the **Home Key** >  > **Contacts**. From there, you can tap the tabs to quickly switch to your contact groups or favorite contacts.

Checking Contact Details

1. Press the **Home Key** >  > **Contacts** > **CONTACTS**.
2. Scroll through the list to view all your contacts.
3. Tap a contact to view its details.

NOTE: If you have a lot of contacts stored, you'll see a slider on the right side of the screen. To go directly to a letter, press and hold the slider and drag it to a letter.

Adding a New Contact

1. Press the **Home Key** >  > **Contacts** > **CONTACTS**.
2. Tap  to add a new contact.

NOTE: If you have no contacts added yet, tap **CREATE A NEW CONTACT**.
3. Enter the contact name, phone numbers, and email addresses. Tap **More Fields** to enter other information. If you have multiple account types associated with your phone, tap the contact account field at the top and select a contact type. If a sync account is selected, the contacts will be synced automatically with your account online.
4. Tap  to save the contact.

Setting Up Your Own Profile

You can create your own name card in your phone.

1. Press the **Home Key** >  > **Contacts** > **CONTACTS**.
2. Tap **Set up my profile**. If a profile has been set up, tap the listing below **ME** and tap .
3. Edit your profile information. Tap **More Fields** to add more information if desired.
4. Tap  to save.

Importing, Exporting, and Sharing Contacts

You can import/export contacts from/to the phone storage or the microSDXC card. This is especially useful when you need to transfer contacts between different devices. You can also quickly share your contacts using *Bluetooth*, Email, Messaging, Google Drive, or Gmail.

Importing Contacts From the microSDXC Card or Phone Storage

1. Press the **Home Key** >  > **Contacts**.
2. Tap  > **Import/Export** > **Import from storage**.
3. If prompted, choose to import one, multiple, or all vCard files, and then tap **OK**.
4. If necessary, choose the vCard file(s) you would like to import, and then tap **OK**.

Exporting Contacts to the microSDXC Card or Phone Storage

1. Press the **Home Key** >  > **Contacts**.
2. Tap  > **Import/Export** > **Export to storage**.
3. The phone will prompt you with the name of the vCard file. Tap **OK** to create the file.

Sharing Contacts

1. Press the **Home Key** >  > **Contacts** > **CONTACTS**.
2. Press and hold the contact you want to share.
3. Tap to select more contacts if needed, and then tap .
4. Choose how to share the contacts. The options available depend on the applications and services installed.

NOTE: You can also share your contacts by choosing **Share visible contacts** in the Import/Export contacts menu.

Working With Favorite Contacts

You can add the contacts you use frequently to **FAVORITES** so that you can find them quickly.

Adding a Contact to Favorites

1. Press the **Home Key** >  > **Contacts** > **CONTACTS**.
2. Tap a contact and then tap  at the top of the screen.

Removing a Contact From Favorites

1. Press the **Home Key** >  > **Contacts** > **FAVORITES**.
2. Tap a favorite contact and then tap .

Working With Groups

Viewing Your Contact Groups

1. Press the **Home Key** >  > **Contacts** > **GROUPS**.
2. Scroll through the list to view the preset groups and any groups you have created.
3. Tap a group to view its members.

NOTE: To send a message or an email to the group members, tap a group >  > **Send Group message/Send Group email** and tap to select group members to include.

Setting Up a New Group

1. Press the **Home Key** >  > **Contacts** > **GROUPS**.
2. Tap  to create a new group.
3. Tap **Group's name** and enter a name.
4. Tap **Add member** and select the contacts you wish to be the group members.
5. Tap .
6. If necessary, tap the field below **RINGTONE** and **NOTIFICATION RINGTONE** to set a special ringtone for incoming calls and messages from the group members, and then tap **OK**.
7. Tap  to save the group.

Contacts

Deleting a Group

1. Press the **Home Key** >  > **Contacts** > **GROUPS**.
2. Tap a group and then tap  > **Delete Group**.
3. Tap **OK** to disband the group. The contacts in the group will not be deleted.

Editing a Group

1. Press the **Home Key** >  > **Contacts** > **GROUPS**.
 2. Tap a group >  > **Edit**.
 3. Tap the group name to edit it, or tap the field below **MEMBER**, **RINGTONE** or **NOTIFICATION RINGTONE** to add more members or change the ringtone.
 4. Tap .
- NOTE:** To remove group members, tap a group and then tap  > **Multi-Select** and select the members you would like to remove. Tap  > **OK**.

Searching for a Contact

1. Press the **Home Key** >  > **Contacts** and then tap  to search.
2. Input the contact name you want to search for. The contacts matched will be listed.

Editing Contacts

Editing Contact Details

1. Press the **Home Key** >  > **Contacts** > **CONTACTS**.
2. Tap a contact and then tap .
3. Edit the contact and tap .

Setting a Ringtone for a Contact

Assign a special ringtone to a contact, so you know who is calling when you hear the ringtone.

1. Press the **Home Key** >  > **Contacts** > **CONTACTS**.
2. Tap a contact you want to set a ringtone for, and then tap  > **Set ringtone**.

58

Contacts

3. Select a ringtone you like and tap **OK**.

Deleting Contacts

1. Press the **Home Key** >  > **Contacts** > **CONTACTS**.
2. Press and hold the contact you want to remove.
3. Check more contacts if needed, and then tap .
4. Tap **OK** to confirm.

Joining Contacts

As your phone synchronizes with multiple online accounts, you may see duplicate entries for the same contact. You can merge all the separate information of a contact into one entry in the Contacts list.

1. Press the **Home Key** >  > **Contacts** > **CONTACTS**.
2. Tap a contact to display the contact's details.
3. Tap  >  > **Join**.
4. Tap the contact whose information you want to join with the first entry.

NOTES:

- The information from the second contact is added to the first, and the second contact is no longer displayed in the contacts list.
- You can repeat these steps to join another contact to the main contact.

5. Tap  to save the joined contact.

Separating Contact Information

If contact information from different sources was joined in error, you can separate the information back into individual contacts on your phone.

1. Press the **Home Key** >  > **Contacts** > **CONTACTS**.
2. Tap a contact you want to separate.
3. Tap  >  > **Separate**.
4. Tap **OK** to confirm.

59

Accounts

Adding or Removing Accounts

You can add multiple Google accounts and Microsoft Exchange ActiveSync® accounts. You may also add other kinds of accounts, depending on the apps installed on your phone.

Adding an Account

1. Press the **Home Key** >  > **Settings** > **Accounts** > **Add account**.
2. Tap the type of account you want to add.
3. Follow the on-screen steps to enter the information about the account. Most accounts require a username and password, but the details may vary. You may also need to obtain some information from IT support or your system administrator.

When the account is successfully added, it is displayed in the Accounts menu in Settings.

Removing an Account

Removing an account will delete it and all information associated with it, such as emails and contacts, from your phone.

1. Press the **Home Key** >  > **Settings** > **Accounts**.
2. Tap the account category and then tap the account you'd like to remove.
3. Tap  > **Remove account** > **REMOVE ACCOUNT**.

Configuring Account Sync

Configuring Auto Sync Setting

1. Press the **Home Key** >  > **Settings** > **Accounts**.
2. Tap  and check or uncheck **Auto-sync data** to enable or disable automatic sync.
3. Tap **OK**.
 - When automatic sync is turned on, changes you make to information on your phone or on the web are automatically synced with each other.
 - When automatic sync is turned off, you need to sync manually to collect emails, updates, or other recent information.

Accounts

Syncing Manually

1. Press the **Home Key** >  > **Settings** > **Accounts**.
2. Tap the account category and then the account you want to sync.
3. Tap  > **Sync now**.

Changing an Account's Sync Settings

1. Press the **Home Key** >  > **Settings** > **Accounts**.
2. Tap the account category and then the account. The Sync settings screen appears, showing a list of information the account can sync.
3. When Auto-sync data is enabled, switch items on or off as you need. The enabled types of information will be kept in sync automatically between the phone and the web. When Auto-sync data is disabled, tap a listing to sync that type of information between the phone and the web.

Email

Press the **Home Key** > . Use it to read and send emails from Microsoft Exchange ActiveSync, Gmail, Hotmail, Yahoo!®, and more.

Setting Up the First Email Account

1. Press the **Home Key** > .
2. Select an email server, and then enter your email address and password.
3. Tap **NEXT** to let the phone retrieve the network parameters automatically.
NOTE: You can also enter these details manually by tapping **MANUAL SETUP** or if automatic setup fails.
4. Follow the on-screen instructions to finish setup.
Your phone will show the inbox of the email account and start to download email messages.

Checking Your Emails

Your phone can automatically check for new emails at the interval you set when setting up the account.

You can also check new emails manually by swiping down on the message list. Tap **LOAD MORE** at the bottom of the email list to download earlier messages.

Responding to an Email

You can reply to or forward a message that you receive. You can also delete messages and manage them in other ways.

Replying to or Forwarding an Email

1. Open the email you want to reply to or forward from the Inbox.
2. Choose one of the following:
 - To reply to the sender, tap .
 - To reply to the sender and all recipients of the original message, tap .
 - To forward the message, tap .

Email

3. Edit your message and tap .

Marking an Email as Unread

You can return a read email to the unread state—for example, to remind yourself to read it again later. You can also mark a batch of emails as unread.

- While reading a message, tap  > **Mark unread**.
- While in a message list (for instance, the inbox), tap the sender image before the message and then tap .

Deleting an Email

You can delete an email from its folder. You can also delete a batch of emails.

- While reading a message, tap  > **Delete**.
- While in a message list (for instance, the inbox), tap the sender image before the message and then tap .

NOTE: If you accidentally delete an email, tap **UNDO** to retrieve it.

Writing and Sending an Email

1. Open your email Inbox and tap .
NOTE: If you have more than one email account added on the phone, tap the sender line to select the account you want to use for sending the message.
2. Enter a contact name or email address in the **To** field. Separate each recipient with a comma. You can also tap  to select recipients from your contacts.
NOTE: To send a carbon copy or blind carbon copy to other recipients, tap  beside the **To** field to open the Cc/Bcc fields and enter the contact names or email addresses.
3. Enter the email subject and compose the email text.
4. Tap  to add audio files, images, videos, and other types of files as attachments.
5. Tap  at the top of the screen to send the message.

Adding a Signature to Your Emails

You can set a few lines of plain text as a signature for every outgoing email message from an account, such as your name and contact information.

1. Open the Email app.
2. Tap  > **Settings** and select the account you want to add a signature to.
3. Tap **Signature** and enter the text.
4. Tap **OK**.

Adding and Editing Email Accounts

Adding an Email Account

After setting up your first email account (see *Email – Setting Up the First Email Account*), you can add more email accounts and manage them separately.

1. Open the Email app.
2. Tap  > **Settings** > **Add account**.
3. Set up the account as you did with the first one.

Editing an Email Account

You can change a number of settings for an account, including how often you check for email, how you're notified of new emails, and details about the servers the account uses to send and receive emails.

1. Open the Email app.
2. Tap  > **Settings** and tap the account whose settings you want to change.
3. Make the changes you want and tap  or press the **Back Key** when you're finished.

Removing an Email Account

1. Open the Email app.
2. Tap  > **Settings** and tap the account you want to remove.
3. Tap **Remove account** > **OK**.

Changing General Email Settings

General settings apply to all email accounts you add.

1. Open the Email app.
2. Tap  > **Settings** > **General settings**.
3. Make the changes you want and tap  or press the **Back Key** when you're finished.

Messaging

You can use Messaging to exchange text messages (SMS) and multimedia messages (MMS).

Opening the Messaging Screen

Press the **Home Key** > .

The Messaging screen opens, where you can create a new message, search for messages, or open an ongoing message thread.

- Tap  to write a new text or multimedia message.
- Tap  to search for a message using keywords.
- Tap an existing message thread to open the conversation.

Sending a Message

1. On the Messaging screen, tap .
2. Add recipients in one of the following ways:
 - Tap the **To** field and manually enter the recipient's number or the contact name. If the phone presents a few suggestions, tap the one you want to add.
 - Select recipients from your contacts by tapping .
3. Tap the **Type message** field and enter the content of your text message.
4. If you want to send a multimedia message, tap  to attach a file or a slideshow to the message.
5. Tap  or  > **Send**.

NOTES:

- You can also include email addresses as recipients for multimedia messages.
- Do not add an attachment if you want to send a text message. Otherwise you may be charged for a multimedia message.

Messaging

Replying to a Message

Messages you receive are appended to existing threads of the same number. If the new message comes from a new number, a new thread is created.

1. On the Messaging screen, tap the thread that has the message you want to reply to.
2. Type your reply in the text field at the bottom. You can tap  if you want to reply with an MMS.
3. Tap  or  > **Send**.

Forwarding a Message

1. On the Messaging screen, tap the thread that has the message you want to forward.
2. Tap the message you would like to forward.
3. Tap **Forward** in the menu that opens.
4. Enter a recipient for the message and edit the content if needed.
5. Tap  or  > **Send**.

Deleting Messages or Threads

Deleting Messages in a Thread

1. On the Messaging screen, tap a thread.
2. Tap  > **Multi-Select**.
3. Tap the checkboxes beside the messages you want to delete.
4. Tap  > **OK**.

Deleting Message Threads

1. On the Messaging screen, press and hold one thread you want to delete.
2. If there are more threads you want to delete, tap them one by one.
3. Tap  > **OK**.

Messaging

Copying a Message

You can copy text messages from the nano-SIM card to the phone storage.

1. On the Messaging screen, tap  > **Settings** > **Manage SIM card messages**.
2. Press and hold a message and then tap **Copy to phone memory**.

Changing Message Settings

Tap  > **Settings** in the Messaging screen to change Message settings.

Calendar

Calendar on the phone works with the web-based Google Calendar™ service for creating and managing events, meetings, and appointments. It also works with the Microsoft Exchange ActiveSync calendar once you sign into your Exchange account on the phone.

To open Calendar, press the **Home Key** >  > **Calendar**.

Viewing Your Calendars and Events

Selecting Visible Calendars

1. Open the Calendar app.
2. Tap  > **Calendars to display**.
3. In the new screen, tap to check the calendars you want to see or uncheck the calendars you'd like to hide.

Events from hidden calendars are not shown in the Calendar app.

Changing Calendar Views

You can view your calendars in different forms. The app offers four views: Month, Week, Day, and Agenda.

To change calendar views, tap the current view at the top left and select the view you prefer. You can also change to Day view from Month view by tapping twice on any day block in the monthly calendar.

- In Month view, swipe vertically to see earlier months and later months.
- In Week or Day view, swipe horizontally to see earlier weeks/days and later weeks/days.
- When you are viewing earlier or later days, weeks, or months, tap the calendar icon at the top of the screen to quickly switch to today.

Viewing Event Details

In Agenda, Day, or Week view, tap an event to view its details.

In Month view, tap a day, then tap an event to view its details.

Creating an Event

1. In any Calendar view, tap  to open an event details screen for a new event.

You can also tap a spot in Day or Week view twice to add an event to that time spot.

NOTE: If you have more than one calendar, you can choose the calendar to which to add the event by tapping the current calendar above the Event name box.

2. Add details about the event. Tap **MORE** to access more options.
3. Tap **DONE** to save the new event.

NOTE: You can also create a new event by copying the details of an existing event. Just open the event details screen and tap  > **Copy**. Then edit the new event information and tap **DONE**.

Editing, Deleting, or Sharing an Event

1. Find the event you want to edit, delete, or share.
2. Open its details screen (see *Calendar – Viewing Your Calendars and Events – Viewing Event Details*).
3. Choose one of the following options:
 - To edit the event, tap . Tap **DONE** to save your changes.
 - To delete the event, tap  > **OK**.
 - To share the event, tap  and choose how to share.

Changing Calendar Settings

To change Calendar settings, open a Calendar view (Day, Week, Month, or Agenda) and then tap  > **Settings**.

You can change General settings, which apply to all accounts, or other settings that only apply to specific accounts.

- To add an email account, tap  > **Settings** >  to add a corporate or Google account.
- For General settings, choose options for Calendar view setting and Notifications & reminders. You can choose to show the week number, set the day of the week the calendar starts on, and use home time zone when you are traveling. You can also choose event reminder settings such as notification sound, vibrate, default reminder time, and more.

Searching an Event

Tap  > **Search** and then type the event in the Search field, or tap  to speak out the event you want to search.

Browser

Use Browser to view web pages and search for information.

Opening the Browser

Press the **Home Key** >  to launch the web browser. The Browser also opens when you tap a web link—for example, in an email or a text message.

1. Open the Browser app.
2. Tap the address box at the top of the web page.
3. Enter the address (URL) of a web page, or enter terms you want to search for.
4. Tap a URL or search suggestion or tap  at the top of the screen to open the web page or search results.

NOTE: Tap  next to the address box if you want to stop opening the page.

Setting the Home Page

Your home page opens when you open a new browser tab, and when you open Browser after restarting your phone.

1. Open the Browser app.
2. Tap  > **Settings** > **Set homepage**.
3. Enter the URL and tap **OK** to set it as the homepage.

Using Multiple Browser Windows

You can open several web pages at the same time (one page in each window) and switch between them freely.

Opening a New Browser Window

Tap  at the bottom of the screen, and then tap **New window**. A new browser window opens and the home page is loaded.

Browser

Switching Between Browser Windows

1. Tap the  icon at the bottom of the screen. The number in the icon indicates the number of currently active browser windows.
2. Swipe vertically to scroll through the list of opened web pages.
3. Tap one you want to open.

NOTE: Swipe a web page horizontally or tap  to close the browser window. Tap **Close all** > **OK** to close all windows.

Downloading Files

1. Press and hold an image or a link to a file or to another web page.
2. In the menu that opens, tap **Save image** or **Save link**.

The downloaded files are saved to your phone. You can view or open them in the Downloads app.

Changing Browser Settings

You can configure a number of settings to customize the way you browse the web, including several that you can use to control your privacy.

To open the Browser settings screen, tap  > **Settings** in the browser screen.

Camera

You can take photos and record videos. Photos and videos are stored on the microSDXC card, if you have installed one, or to the phone's internal storage. You can copy them to your computer or access them in the Gallery app.

Capturing a Photo

1. Press the **Home Key** > .
2. Aim the camera at the subject and make any necessary adjustments. PHOTO (auto camera) mode is used by default.
3. Tap the area on the screen where you want the camera to focus, or let the camera autofocus on the center of the image.
4. Lightly tap , press the **Volume Key**, or tap the **Fingerprint Sensor** to take the picture.



Number	Function
1	Change the camera settings.
2	Switch between video camera, photo camera, and dual-camera mode.
3	Exit the camera.
4	Select a color effect or other special effects.
5	Capture a photo.
6	View photos and videos you have taken.
7	Use special photo or video camera modes: Manual, Panorama, Multi Exposure, Time-Lapse, Slow Motion, and Sports.

Camera

8	Switch between the front and back cameras.
9	Set a time delay before the camera automatically takes a picture after you tap the shutter icon.
10	Change the HDR setting (back camera only).
11	Change the flash setting (back camera only).

WARNING! Keep a safe distance when using the flash. Do not point the flash toward the eyes of people or animals.

NOTES:

- You can pinch or spread your fingers on the screen to zoom in or out before taking a picture.
- In PHOTO (auto camera) mode, when you tap the screen to focus, the exposure bar appears beside the focus point. You can drag  up or down to adjust the exposure.
- When you use the front camera, you can also tap  or **BEAUTIFY** to use smile detection or beauty face.

Using Dual-Camera Mode

In dual-camera mode, you can adjust aperture for a bokeh effect or take monochrome or monochrome pictures.

1. Press the **Home Key** >  > **DUAL**.
2. Tap an option:
 - **BOKEH:** Take a photo with the subject in focus and the background blurred. Hold the phone 1 to 6.5 feet from the subject, and adjust the slider to change the shutter aperture.
 - **MONOCOLOR:** Take a photo with only one color visible. Tap a color option, and then use the **RANGE** slider to adjust the color selection to achieve the desired effect.

- **MONOCHROME:** Tap **ORIGINAL** for a grayscale photo, **SKETCH** to render the photo in a drawn style, or **VIGNETTE** to capture a grayscale photo with a soft-edge effect.

3. Tap  to take the picture.

Using Manual Camera Mode

You can use the Manual camera mode to adjust more camera options for your photo, such as ISO, white balance, and exposure.

1. Press the **Home Key** >  >  > **MANUAL**.
2. Aim the camera at the subject. You can make the following adjustments.
 - Drag the green circle to any area on the screen that you want to focus on.
 - Drag the yellow square to any area on the screen where you want the camera to meter exposure so as to adjust the photo brightness. Press and hold to lock exposure.
 - Tap  to unfold more options, including shutter speed, ISO, overall exposure, white balance, interval for time-lapse photos, and focus.
3. Tap  to take the photo.

Using Other Camera Modes

Besides capturing photos in the traditional way, your Camera app offers other powerful and interesting camera modes. Tap  in the viewfinder screen to find them all.

- **PANORAMA:** Capture panorama photos.
- **MULTI EXPOSURE:** Capture multiple photos to create collages and special effects.
- **TIME-LAPSE:** Set the time interval between each frame when you record time-lapse videos with the back camera.
- **SLOW MOTION:** Capture slow-motion video clips.
- **SPORTS:** Keep the focus on moving objects.

Recording a Video

1. Press the **Home Key** >  > **VIDEO**.
2. Aim the camera at the subject and make any necessary adjustments. You can tap any area on the screen that you want the camcorder to focus on before and during recording.
3. Tap  to start recording. You can tap / to pause or resume recording, or tap  to save the frame as a photo.
4. Tap  to stop recording.

NOTES:

- You can pinch or spread your fingers on the screen to zoom in or out before and during recording.
- When you tap the screen to focus during recording, the exposure bar  appears beside the focus point. You can drag  up or down to adjust the exposure. Press and hold the focus point to lock the focus.
- To capture slow-motion or time-lapse video, tap  > **SLOW MOTION** or **TIME-LAPSE**. Tap  to start recording and  to stop. In Slow Motion mode, you can tap / to pause or resume recording. In Time-Lapse mode, you can tap  to save the frame as a photo.

Customizing Camera and Video Settings

Before capturing a photo or video, you can tap  to open the following options.

NOTE: Some camera and video options will change in different camera modes.

- **Resolution:** (front and rear camera) Set the image size for your photo.
- **Video quality:** (Video mode) Set the quality for your video.
- **Point-and-shoot:** (front camera) Tap the viewfinder screen to take a photo.
- **Mirror image:** (front camera) Take a mirror photo.

Camera

- **Selfie indicator:** (front camera) Capture natural expressions by looking at the selfie indicator on screen.
- **Light Supplementary:** (front camera) Flash the screen to provide more light when taking a selfie.
- **Metering:** (Manual mode) Adjust the metering setting.
- **Composition:** (Manual mode) Show or hide grid or golden spiral (used for balanced photo composition).
- **Gradients:** (Manual mode) Enable or disable the gradient.
- **Watermark:** (rear camera) Apply a watermark to your photos.
- **Shutter tone:** Turn the shutter tone on or off.
- **Geo-tag:** Select whether to store the GPS location in your captured photos and videos.
- **Histogram:** (Manual mode) Turn the histogram on or off. The histogram shows the brightness and darkness of the current view.
- **Volume key:** (front and rear camera) Assign the function of the Volume Key for the Camera app: **Take photo**, **Zoom**, or **Volume**.
- **Anti-banding:** Set the anti-banding value to avoid stripes on the screen when you take pictures of TV or computer screens.
- **Save location:** Change the storage location for captured photos and videos when a microSDXC card is installed.
- **Help:** Enable the Help icon on the viewfinder screen, or tap **More** to view help details.
- **Restore defaults:** Restore default camera and video settings.

Gallery

Opening the Gallery

Press the **Home Key** >  > **Gallery** to view albums of your pictures and videos.

Working With Albums

When you open the Gallery, all pictures and videos on your phone are displayed in a number of albums. Swipe up and down to see them all.

Viewing Album Contents

Tap an album to view the pictures and videos it contains.

Sharing Albums, Pictures, or Videos

1. Press and hold an item in the Albums view to select an album, or after you open an album, to select a picture or a video.
2. Tap more items that you want to share.
3. Tap  and select how you want to share the items.

Deleting Albums, Pictures, or Videos

1. Press and hold an item in the Albums view to select an album, or after you open an album, to select a picture or a video.
2. Tap more items that you want to delete.
3. Tap  > **OK**.

Hiding Albums

1. Press and hold an album to select it.
2. Tap more albums that you want to hide.
3. Tap  > **OK**.

NOTE: To show the hidden albums again, tap  > **Settings** > **Manage hidden albums**. Tap the albums you want to restore, and then tap **Show**.

Working With Pictures

Tap a picture in an album to view the picture in full screen. Double-tap the picture, or pinch two fingers together or spread them apart to zoom out or in. Slide left or right to view other pictures in the album.

Number	Function
1	Tap to return to the album, where all its contents are displayed in a grid.
2	Delete the picture.
3	Edit the picture.
4	Share the picture.
5	View more options, such as rotate, rename, and print.
6	Add to favorites.



NOTES:

- Pinch a picture or video to make it smaller. You'll then see a filmstrip-style view of all your pictures and videos in a row. Swipe left or right to scan through them all.
- You can delete a picture or video by tapping > **OK** or by swiping it up in the filmstrip view. If you accidentally delete one by swiping it up, tap **UNDO** to retrieve it.
- For a picture captured in the dual-camera BOKEH mode, you can tap , tap anywhere on the picture to refocus, and then select the blur level. Tap to save it.
- Not all options may be available for certain albums or pictures.

Retouching Your Pictures

You can edit any photos you took and some other pictures in Gallery with Photo Editor. The changed picture is saved in the same album as the original one, while the original is never affected.

1. While viewing a picture in full screen, tap the screen and tap > **Photo Editor**.

NOTE: You can also choose to edit the picture with Photos.

2. Tap the icons along the bottom of the screen to edit the picture.

	Apply filters, old photo effects, or blur effects.
	Crop, rotate, or flip (mirror) the picture.
	Adjust exposure, saturation, hue, sharpness, and other color options.
	Select a color and draw on the picture, or add some text or mosaics to the picture and adjust the effect.
	Add a frame to the picture, or decorate people in the picture with mustaches, eyeglasses, hats, and more.

3. Tap to keep the change or to cancel it.
4. Tap to save the new picture.

NOTE: Tap in the Photo Editor screen to see the edits you have made and undo or redo them.

Making a GIF or a Collage

You can put together a few pictures in the same album to make an animated GIF or a collage of pictures.

1. Open the Gallery app and tap > **GIF maker** or **Collage maker**.
2. Tap an album.

Gallery

3. Tap the pictures you want.
 - To make a GIF, tap 2 to 50 pictures in the order (or reverse of the order) that you want them to appear in the GIF.
 - To make a collage, tap 2 to 9 pictures.The pictures you tapped are displayed along the bottom of the screen. Tap  to remove the pictures you do not want.
4. Tap **NEXT**. The GIF or collage is displayed.
5. Tap the options along the bottom to adjust the final picture.
 - For GIF, you can adjust the speed, order, and size. Tap **MORE** to adjust each picture, and then tap **Manage Frame** to add more pictures or change their order.
 - For collage, tap **TEMPLATE**, **FREE**, or **COLLAGE** and then select a border, shading, and style.
6. When you are satisfied with the final picture, tap  to save the GIF or tap  to save the collage.

Depending on your storage setting, the picture is saved to the `zte_editor/Save` folder in your phone storage or your microSDXC card.

Playing Videos

1. Tap an album in Gallery, and then tap the thumbnail of a video.
 2. Tap  at the center and select a player to start playing.
 3. Tap the video to view the playback controls.
- In the Video Player, you can tap  to play the video in a small floating window and continue with other tasks on the phone.

Music

Press the **Home Key** >  > **Music** to play audio files stored on your phone. Music supports a wide variety of audio formats, so it can play music you purchase from online stores, music you copy from your CD collection, and more.

Viewing Your Music Library

Press the **Home Key** >  > **Music**, and your music library is displayed. All your audio files are cataloged according to the information stored in the files.

- Tap **All Songs** to view all music files on your phone.
- Tap **Artists** or **Albums** to browse music files on your phone organized by the artist or album name.
- Tap **Folders** to find music files through the folders they are stored in.
- Tap **Favorites** to browse music files you have marked as favorites.
- Tap **Playlists** to view all music playlists you have created.

NOTE: If an audio file is being played, its name and player controls are displayed at the bottom of the screen. Tap the area to open the playback screen.

Setting a Song as the Default Ringtone

The song will be used as the ringtone for all incoming calls, except those from contacts you have assigned special ringtones to (see *Contacts – Editing Contacts – Setting a Ringtone for a Contact*).

1. Press the **Home Key** >  > **Music** to see the music library.
2. Tap  next to a song in any list.
3. In the menu that opens, tap **Set as ringtone**.
4. Tap **Phone Ringtone** or **Notification Ringtone**.

NOTE: If the song is being played and you're on the playback screen, tap  > **Set as ringtone** and select **Phone Ringtone** or **Notification Ringtone**.

Playing Music

Tap a song in the music library to listen to it. Tap the playback bar at the bottom of the screen to open the following playback screen.



Number	Function
1	Return to the music library.
2	Album artwork (if available). Slide left/right to switch to the next/previous song in the playlist.
3	Open the Dolby Audio app to adjust the sound effect.
4	Check the track information.
5	Turn shuffle on or off.

6	Playback control: Skip songs or pause and resume playback. Drag the progress bar to jump to any part of the track.
7	Toggle repeat mode: no repeat, repeat the current track, or repeat the current playlist.
8	Add the track to the Favorites playlist.
9	Tap to see the current playlist (queue).
10	Access additional options.

You can still control the music when you are not in the playback screen.

- In other apps, swipe down the Notification Panel. Tap the song title to restore the playback screen, or you can pause/resume playback or skip songs.
- When the screen is locked, the song information, album cover, and playback controls are displayed on the screen. Tap the song title to restore the playback screen, or you can pause/resume playback or skip songs.

Managing Playlists

Create playlists to organize your music files into sets of songs, so that you can play the songs you like in the order you prefer.

- Tap > **Add to playlist** next to a song to add it to a playlist or create a new playlist.
- Tap > **Delete** next to a playlist to delete the playlist.
- Tap > **Rename** next to a playlist to rename the playlist.
- Tap a playlist to view its content. To delete a song, press and hold the song. Tap additional songs to select multiple songs for removal. Tap to remove the songs from the playlist.

Video Player

Use the Video Player to manage your video library and to watch videos.

Opening the Video Library

Press the **Home Key** >  > **Video Player** to view your video library. Swipe up or down to find the video you want. You can also tap  to search for video files, or tap  > **View by** or **Sort by** to change the display mode or sort the list.

Playing and Controlling Videos

Tap a video in the video library to play it. Tap the screen to show the playback controls. You can control the video and audio or carry out other operations.



Number	Function
1	Return to the video library list.
2	Rotate the video.
3	Change the video ratio (fit to screen).
4	Playback control: Skip videos or pause and resume playback. Drag the slider to jump to any part of the video.
5	Play the video in a small window and continue with other tasks on the phone.
6	Share, trim, or delete the video, or configure player settings.
7	Hide video playback controls and lock the touch screen.
8	Take a screenshot.
9	Open the Dolby Audio app to adjust the sound effect.

Video Player

NOTES:

- Slide horizontally on the video to rewind or fast forward.
- Slide vertically on the right or left part of the screen to adjust volume or brightness, respectively.
- Tap  or  to skip to the previous or the next video.

Managing Video Files

Deleting Videos

1. In the video library, tap  > **Multi-Select**, or press and hold a video.
2. Tap the videos you want to delete.
3. Tap  > **OK**.

Sharing Videos

1. In the video library, tap  > **Multi-Select**, or press and hold a video.
2. Tap the videos you want to share.
3. Tap  and select how you want to share them.

Trimming a Video

1. Tap a video to start playing it.
2. Tap  > **Trim**.
3. Drag the two tabs on the progress bar to select the portion you want to keep. You can tap  to preview the selected portion.
4. Tap . The trimmed video is saved as a new video file.

Video Player

Renaming a Video

1. Tap  next to the video you want to rename.
2. Tap **Rename**.
3. Type the new video name and tap **OK**.

Viewing Details of a Video

1. Tap  next to a video for which you want to view details.
2. Tap **Details**.
3. Tap **CLOSE** to close the window.

Sound Recorder

Sound Recorder enables you to record voice memos and listen to them whenever you like.

Recording a Voice Memo

1. Press the **Home Key** >  > **Sound Recorder**.
2. Tap  to turn on or off high-quality recording.
3. Tap  to start recording. Tap  to pause and  to continue recording.
4. Tap  to stop recording. The memo is automatically saved.

Playing a Voice Memo

Playing a Memo You Just Recorded

Tap  at the bottom of the screen.

Playing Any Saved Memo

1. Tap  at the top right of the screen to see all recordings.
2. Tap the title of a memo to play it.

NOTE: You can also tap  at the right of the memo to delete, share, rename, tag, or trim it, check its file information, or set it as your phone ringtone.

More Apps

Calculator

Press the **Home Key** >  > **Calculator** to use the phone's convenient built-in calculator for some basic as well as advanced mathematical equations.

NOTE: To see more calculator options, swipe left while holding the phone in portrait view or turn the phone to landscape view.

Clock

Press the **Home Key** >  > **Clock**. The Clock app allows you to check local time in places around the world, set alarms, and use timers.

Setting a New Alarm

1. Open the Clock app and tap .
2. Tap a default alarm to configure it, or tap  at the bottom of the screen to create a new alarm.
3. Set up the alarm options, such as time, alarm days, snooze, and alarm ringtone.
4. Tap **SAVE** to save and exit.

NOTES:

- To enable or disable existing alarms directly, tap **On**  or **Off**  on the right side of each alarm.
- Tap  to configure alarm settings, including ringtone volume, vibration, alarm duration, volume crescendo, and alarm in silent mode.

Using World Time

1. Open the Clock app and tap .
2. World time lets you check local times for cities around the world. Tap  to add a new city.

More Apps

Using Stopwatch and Countdown

1. Open the Clock app and tap  or .
2. Stopwatch allows you to record lap times, while countdown allows you to set a time and count down to zero.

Dolby Audio

Press the **Home Key** >  > **Dolby Audio** to select or customize a Dolby profile. You can also tap  to turn off Dolby Audio.

Downloads

The Downloads app keeps a record of the files you have downloaded using apps such as Browser or Email.

Press the **Home Key** >  > **Downloads**.

- Tap a file to open it with the appropriate application.
- Press and hold a file to delete or share it.

File Manager

Quickly access all of your images, videos, audio clips, and other types of files on your phone and on the memory card.

Press the **Home Key** >  > **File Manager**. Tap **CATEGORY** to find the file you need by category, or tap **LOCAL** to browse folders and files on the phone storage or the microSDXC card.

- Tap folders and files to access stored items.
- Tap  to create a new folder in the current directory.
- Tap  to search for a file or folder by name.
- Press and hold a folder or file for options: copy , move , share , delete , and more options .

More Apps

- To copy or move an item:
 1. Press and hold the folder or file.
 2. Tap  or .
 3. Navigate to a new location within File Manager and tap **PASTE**.

Wi-Fi Utility

Wi-Fi Utility can manage your Wi-Fi settings to provide free and high-speed data by automatically connecting your phone to reputable Wi-Fi hotspots.

Press the **Home Key** >  > **Wi-Fi Utility**, and select a Wi-Fi settings option.

Google Apps

NOTE: Some Google services may not be available in your region.

- **Chrome:** Use the Chrome app to browse the Internet and get your bookmarks, browsing history, and more synced with your Google account.
- **Drive:** Store files on Google servers for free after you sign in to your Google account. You can access them on your computers, your phones, and other devices, share them, or collaborate with others.
- **Gmail:** Send and receive emails via your Gmail account or other personal email accounts.
- **Google:** Use Google search or get information when you need it with Google Now.
- **Hangouts:** Chat with Google+ friends or send text or multimedia messages.
- **Maps:** Find your place and find your way in the world.
- **Photos:** Manage photos on the phone and on your Google account.
- **Play Movies & TV:** Purchase, download, and watch movies and TV shows.
- **Play Music:** Play music on the phone and on your Google account.

More Apps

- **Play Store:** Purchase and download apps, games, and more from the Google Play store.
- **Voice Search:** Search for information with your voice.
- **YouTube:** Watch video clips from YouTube.com, or upload your own and share with the world.

Settings

Press the **Home Key** >  > **Settings**. Settings contains most of the tools for customizing and configuring your device.

Wireless & Networks

Wi-Fi

Turn Wi-Fi on or off and configure your Wi-Fi connections (see *Connecting to Networks and Devices – Connecting to Wi-Fi*).

Bluetooth

Turn *Bluetooth* on or off and configure your *Bluetooth* connections (see *Connecting to Networks and Devices – Connecting to Bluetooth Devices*).

Mobile Networks

Control mobile data use and data roaming and adjust other network settings (see *Connecting to Networks and Devices – Connecting to Mobile Networks*).

Wi-Fi Hotspot

Share your phone's mobile data connection with other devices via Wi-Fi (see *Connecting to Networks and Devices – Sharing Your Mobile Data Connection*).

Data Usage

Tap the **Mobile data** or **Set mobile data limit** switches to turn on or off mobile data or the mobile data limit.

You can check how much data has been used during the time cycle you set, set a mobile data limit and warning, see what apps have been using mobile data, or restrict background data for individual apps.

NOTE: The data usage is measured by your phone, and your carrier's data usage accounting may differ.

Settings

Tap  > **Network restrictions** to select Wi-Fi networks that are mobile hotspots. Apps may warn you before using these networks for large downloads to avoid high mobile data bills.

Airplane Mode

In the Settings app, tap **More** > **Airplane mode** to turn airplane mode on or off. All the phone's radios that transmit voice or data are turned off when airplane mode is on.

VPN

In the Settings app, tap **More** > **VPN** to set up and connect to virtual private networks (see *Connecting to Networks and Devices – Connecting to Virtual Private Networks*).

Default SMS App

In the Settings app, tap **More** > **Default SMS app** to choose the preferred application for sending and receiving messages.

Personal

Display

- **Brightness level:** Set the brightness of the display.
- **Adaptive brightness:** Automatically adjust screen brightness.
- **Wallpaper:** Select a background image or animation for the home screen or lock screen.
- **Sleep:** Set the length of time of inactivity before the screen turns off automatically.
- **Daydream:** Manage the Daydream function. When Daydream is enabled, photos or animations will be displayed as a screensaver.
- **Font size:** Set the font size of the text on the screen.
- **Auto-rotate screen:** Select whether the screen contents should rotate when the phone is rotated.
- **Pulse notification light:** Flash the backlight on the Home Key to notify you of missed calls, new messages, and other events.

Settings

- **Navigation key light duration:** Control the backlight of the Home Key, Back Key, and Recent Apps Key. Choose one of the following options to set the backlight duration:
 - **Always off:** Turn off their backlight.
 - **Always on:** Keep their backlight on while the screen is turned on.
 - **2 seconds / 5 seconds:** Their backlight comes on for two or five seconds each time you touch the screen or keys while the screen is on.
 - **Auto:** Let your phone turn their backlight on or off automatically.

Sound & Notification

Adjust different types of volume (see *Personalizing – Adjusting Volumes*), adjust Dolby Audio settings, set Do not disturb options (see *Personalizing – Using Do Not Disturb Mode*), set up ringtone and notification sound (see *Personalizing – Changing the Ringtone and Notification Sound*), select system sounds (see *Personalizing – Turning System Sounds On/Off*), set notification mode (see *Personalizing – Switching to Silent or Vibration Mode*), enable/disable silent power-on/off, control notification display, or check apps that have requested notification or Do not disturb access.

Security

- **Screen lock:** Lock the screen with long press, pattern, PIN, or password (see *Personalizing – Protecting Your Phone With Screen Locks*).
- **Make pattern visible:** Show the pattern as you draw it. This option is available when unlock pattern is set.
- **Automatically lock:** Set the time needed for the lock protection to be activated after the screen turns off. This option is available when unlock pattern, PIN, or password is set.
- **Power button instantly locks:** Lock protection is activated immediately when you press the Power/Lock Key. This option is available when unlock pattern, PIN, or password is set.
- **Lock screen message:** Set the text that you may display on the lock screen.

Settings

- **Fingerprint:** Set up to five fingerprints and use them to unlock the phone. You can also press the fingerprint sensor to take a photo, answer an incoming call, or open a bound app when the screen is off or locked. See *Personalizing – Using Your Fingerprint*.
- **Smart Lock:** Keep the phone unlocked when connected to trusted devices, in trusted places, when recognizing trusted faces or voices, or while being held or carried.
NOTE: You need to sign in to your Google account on the phone to use the Smart Lock feature.
- **Encrypt phone:** Your phone is already encrypted.
- **Set up SIM card lock:** Lock the nano-SIM card and change the nano-SIM PIN.
 - **Lock SIM card:** Activate or deactivate the PIN lock to require PIN before accessing the nano-SIM card.
 - **Change SIM PIN:** Change the PIN used to access the nano-SIM card.
NOTE: Put all your confidential passwords in a safe place for future use. If you enter the wrong SIM PIN more times than allowed, your nano-SIM card will be locked and you cannot access the mobile phone network. Contact your operator for a PIN Unlock Key (PUK) to restore the nano-SIM card.
- **Make passwords visible:** Display passwords as you enter them.
- **Device administrators:** View or deactivate apps you have authorized to be device administrators.
- **Unknown sources:** Permit installation of apps from sources other than the Play Store.
- **Storage type:** Check the credential storage type.
- **Trusted credentials:** Display trusted CA certificates.
- **Install from SD card:** Install certificates from the internal storage or the microSDXC card.
- **Clear credentials:** Delete all certificates.
- **Trust agents:** View or deactivate trust agents.
- **Screen pinning:** Keep a screen of your choice in view so others cannot switch apps and access personal information (see *Personalizing – Protecting Your Phone With Screen Pinning*).

Settings

- **Apps with usage access:** Turn on or off some apps' access to your phone usage information.

Navigation Key

You can swap the positions of the **Back Key** and the **Recent Apps Key**. Select an option to make the switch.

Date & Time

Set date, time, time zone, and how time is displayed. You can also use network-provided data (see *Personalizing – Setting the Date and Time*).

Language & Input

- **Language:** Select a language for your system.
- **Spell checker:** Activate Google Spell Checker to check for spelling errors when entering text, and change its settings.
- **Personal dictionary:** Add new words to the phone's dictionary or remove words from the dictionary. The words you add are used for spelling check and word suggestion.
- **Keyboard & input methods:** Configure text input settings (see *Knowing the Basics – Changing Input Methods*).
- **Text-to-speech output**
 - **Preferred engine:** Select the speech synthesis engine you want to use, or change its settings.
 - **Speech rate:** Select how quickly you want the synthesizer to speak.
 - **Pitch:** Adjust the tone of spoken text.
 - **Listen to an example:** Play a brief sample of the speech synthesizer, using your current settings.
 - **Default language status:** Check the default language status.
- **Pointer speed:** Select how fast the pointer/mouse should scroll when you connect the phone to a trackpad or mouse accessory.

Settings

Google

Manage settings for Google apps and services that are installed on your device.

Device

Location

Activate location services to determine your location. To use location-related applications, such as finding your location on Google Maps, you must have location services turned on on your phone.

1. Press the **Home Key** >  > **Settings** > **Location**.
2. Slide the **Location** switch to the **On**  position to turn on location access.
3. When location access is enabled, tap **Mode** to select the location sources you want to use. To get your accurate location, choose **High accuracy**. To save battery power and get approximate location, choose **Battery saving**. To use only GPS to pinpoint your location, choose **Device only**.

NOTE: Tap **Accelerated location** and check **Location consent** to use Qualcomm® IZat™ hardware accelerated location to determine your location.

Storage

The Storage settings menu lets you check memory information for your microSDXC card and phone storage.

You can choose the default location for new data, such as photos captured and voice recorded. Tap **Save location** and select to store items in the phone storage or the installed microSDXC card.

Under Device storage, tap **Phone** to get a detailed breakdown of space usage by type. Tap a data type to see more information or delete the files you do not need.

For more information about using the internal storage and the microSDXC card, see *Connecting to Networks and Devices – Using the microSDXC Card as Portable Storage*.

Settings

When you connect a USB storage device (such as a USB flash drive) to your phone with an OTG adapter cable, you can view its storage status, unmount it, or erase all data on it. See *Connecting to Networks and Devices – Using USB On-the-Go (OTG)*.

Battery

View remaining battery power and check which items have been using the battery. Tap an app or service to adjust its settings in order to save battery life. For example, tap **Screen** > **Reduce the screen brightness and/or screen timeout** to change screen brightness and sleep setting.

Tap  > **Battery saver** to manage battery saving mode. You can turn Battery saver on or off, or set a battery level at which it turns on automatically.

Tap  > **Battery optimization**. Battery optimization helps prolong battery standby time when you're not using the phone. To turn battery optimization off for specific apps, tap **Not optimized** > **All apps**. Tap the app name, and then tap **Don't optimize** > **DONE**.

Apps

Press the **Home Key** >  > **Settings** > **Apps** to see apps installed on your phone and manage them.

Tap  > **Show system/Hide system** to show/hide system apps in the list.

Tap  > **Reset app preferences** to reset all preferences. (You will not lose app data, but app preferences will be restored to default.)

Tap  to configure apps.

In the app list, tap an app to see its information. The following options may be available:

- **DISABLE/ENABLE:** Disable or enable the app.
- **FORCE STOP:** Stop the app.
- **Storage:** Check the amount of storage required and clear its data or cache.
- **Data usage:** Check data used by the app during a specified time cycle and change background data restriction settings.

Settings

- **Permissions:** Check or change the app permissions.
- **Notifications:** Manage the app notifications in the Notification Panel and the lock screen.
- **Open by default:** Check or change settings of the app links and clear defaults.
- **Battery:** Check the battery use details of the app since last full charge.
- **Memory:** Check how much memory has been used by the app.

NOTE: Not all options are available for all apps.

Memory

Monitor the average memory use and performance of your phone. You can also check which apps use the most memory.

Connect to PC

Select the USB connection mode between your phone and PC (see *Connecting to Networks and Devices – Connecting to Your Computer via USB – Connecting Your Phone to a Computer via USB*).

Backup & Reset

- **Back up my data:** Back up app data, Wi-Fi passwords, and other settings to Google servers after you sign in to your Google account.
- **Backup account:** Set the Google account that the data is backed up to.
- **Automatic restore:** Restore previously backed up settings and data when you reinstall an app.
- **Network settings reset:** Reset all your network settings, including Wi-Fi, cellular data, and *Bluetooth*.
- **Factory data reset:** Reset your phone to factory default settings. All your personal data from the phone's internal storage will be erased. You can also erase the data on the microSDXC card during the process.

Settings

Accounts

Manage your accounts and synchronization. Tap **Add account** to sign in to or create accounts on your phone.

Tap an account type to see accounts of that type you have added and adjust their settings.

System

Accessibility

Configure the system accessibility options and accessibility plug-ins on your phone, such as using **Color inversion** or **Large text** for users with sight problems.

Printing

Configure Google Cloud Print™ service or other printer plug-ins installed from the Google Play Store or your printer manufacturer.

About phone

View phone status, legal information, and other information. Tap **Software Update** to check for available software updates for your phone.

Upgrading the Phone Software

There are several ways to upgrade your phone software:

1. Use the online upgrade tool for mobile terminal products.
2. Use the one-press upgrade package offered by your mobile service provider.
3. Use your PC to download an upgrade package to your microSDXC card and install it to your phone from the card.

NOTE: Visit the ZTE official handset service support website (<http://www.ztedevice.com/support>) and click your country or region to learn more about the above upgrade methods, as well as which phones and methods are supported.

Troubleshooting

If you encounter problems while using the phone, or if it performs abnormally, you can refer to the chart below. If your particular problem cannot be resolved using the information in the chart, contact the dealer where you purchased the phone.

Problem	Possible Causes	Possible Solution
Poor reception	The network signal is too weak at your current location (for example, in a basement or near a tall building) because wireless transmissions cannot effectively reach it.	Move to a location where the network signal can be properly received.
	The network is busy at the current time (for example, during peak times, there may be too much network traffic to handle additional calls).	Avoid using the phone at such times, or try again after waiting a short time.
	You are too far away from a base station for your service provider.	You can request a service area map from your service provider.
Echo or noise	Poor network link quality on the part of your service provider.	End the call and dial again. You may be switched to a better-quality network link or phone line.
	Poor local telephone line quality.	End the call and dial again. You may be switched to a better-quality network link or phone line.
Unable to select certain features	Your service provider does not support these features, or you have not applied for services that provide these features.	Contact your service provider.

Troubleshooting

Problem	Possible Causes	Possible Solution
Battery not charging	The battery or battery charger is damaged.	Contact the dealer.
	The phone's temperature is below 32°F (0°C) or higher than 113°F (45°C).	Adjust the battery charging environment to avoid extremes of temperature.
	Poor contact between the battery and charger.	Check all connectors to make sure all connections have been properly made.
Shortened standby time	The standby time is related to your service provider system configuration. The same phone used with different service providers' systems will not provide exactly the same length of standby time.	If you are located in an area where signaling is weak, temporarily power off the phone.
	The battery is depleted. In high-temperature environments, battery life will be shortened.	Contact the dealer for a new battery.
	If you are not able to connect to the network, the phone will continue to send out signals as it attempts to locate a base station. Doing so consumes battery power and will consequently shorten standby time.	Change your location to one where the network is accessible, or temporarily turn off your phone.

Troubleshooting

Problem	Possible Causes	Possible Solution
Cannot turn your phone on	Battery power has been depleted.	Recharge the phone's battery.
nano-SIM card error	The nano-SIM card has malfunctioned or is damaged.	Take the nano-SIM card to your service provider for testing.
	The nano-SIM card is inserted improperly.	Insert the nano-SIM card properly.
	Debris is on the nano-SIM card contacts.	Use a soft, dry cloth to clean the nano-SIM card contacts.
Unable to connect to the network	The nano-SIM card is invalid.	Contact your service provider.
	You are not within the network's service area.	Check the service area with your service provider.
	Poor signal.	Move to an open space, or if you are inside a building, move closer to a window.
You cannot answer incoming calls	You have activated the Call barring feature.	Disable this feature. See <i>Phone Calls – Adjusting Your Call Settings – Barring Certain Calls</i> .
You cannot make outgoing calls	You have activated the Call barring feature.	Disable this feature. See <i>Phone Calls – Adjusting Your Call Settings – Barring Certain Calls</i> .
	You have activated the Fixed Dialing Numbers feature.	Disable this feature. See <i>Phone Calls – Adjusting Your Call Settings – Using Fixed Dialing Numbers</i> .

Troubleshooting

Problem	Possible Causes	Possible Solution
PIN code blocked	You have entered an incorrect PIN code three consecutive times.	Contact your service provider. If the service provider provides the nano-SIM card's PUK code, use the PUK code to unlock the nano-SIM card.
Phone crashes, reboots, freezes, or cannot be powered on	Some third-party software is not compatible with your phone.	Uninstall the software that may be causing the problem.
		Upgrade the phone software.
		Reset the phone to factory status.

For Your Safety

General Safety

	Don't make or receive handheld calls while driving. Never text while driving.
	Keep your phone at least 10 mm away from your ear or body while making calls.
	Small parts may cause choking.
	Your phone can produce a loud sound.
	Avoid contact with anything magnetic.
	Keep away from pacemakers and other electronic medical devices.
	Power off when asked to in hospitals and medical facilities.
	Power off when told to in aircrafts and airports.
	Power off when near explosive materials or liquids.

	Don't use at gas stations.
	Your phone may produce a bright or flashing light.
	Don't dispose of your phone in fire.
	To prevent possible hearing damage, do not listen at high volume levels for long periods.
	Avoid extreme temperatures.
	Avoid contact with liquids. Keep your phone dry.
	Don't take your phone apart.
	Only use approved accessories.
	Don't rely on your phone for emergency communications.

For Your Safety

Radio Frequency (RF) Energy

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the United States.

During SAR testing, this device was set to transmit at its highest certified power level in all tested frequency bands, and placed in positions that simulate RF exposure in usage against the head with no separation, and near the body with the separation of 0.4 inches (10 mm). Although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The exposure standard for wireless devices employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg.

This device complies with SAR for general population/uncontrolled exposure limits in ANSI/IEEE C95.1-1992 and has been tested in accordance with the measurement methods and procedures specified in IEEE1528.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/oet/ea/fccid after searching on FCC ID: **SRQ-Z986DL**.

For this device, the highest reported SAR value for usage against the head is **0.68 W/kg**, for usage near the body is **1.19 W/kg**.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirements.

SAR compliance for body-worn operation is based on a separation distance of 0.4 inches (10 mm) between the unit and the human body. Carry this device at least 0.4 inches (10 mm) away from your body to ensure RF exposure level compliant or lower to the

For Your Safety

reported level. To support body-worn operation, choose the belt clips or holsters, which do not contain metallic components, to maintain a separation of 0.4 inches (10 mm) between this device and your body.

RF exposure compliance with any body-worn accessory, which contains metal, was not tested and certified, and use such body-worn accessory should be avoided.

FCC Regulations

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

For Your Safety

Hearing Aid Compatibility (HAC) Regulations for Mobile Phones

In 2003, the FCC adopted rules to make digital wireless telephones compatible with hearing aids and cochlear implants. Although analog wireless phones do not usually cause interference with hearing aids or cochlear implants, digital wireless phones sometimes do because of electromagnetic energy emitted by the phone's antenna, backlight, or other components. Your phone is compliant with FCC HAC regulations (ANSI C63.19-2011).

While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate. The wireless telephone industry has developed ratings for some of their mobile phones to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that have been rated have a label on the box. These ratings are not guaranteed. Results will vary, depending on the level of immunity of your hearing device and the degree of your hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, consult your service provider or phone retailer.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference with hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

For Your Safety

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. T4 is the better/higher of the two ratings. (Note that not all hearing devices contain telecoils.)

Your **Z986DL** has been tested for hearing aid device compatibility and has an **M4/T3** rating. Hearing devices may also be measured for immunity to this type of interference. Your hearing device manufacturer or hearing health professional may help you find results for your hearing device.

For additional information about the FCC's actions with regard to hearing aid compatible wireless devices and other steps the FCC has taken to ensure that individuals with disabilities have access to telecommunications services, please go to www.fcc.gov/cgb/dro.

Distraction

Driving

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving (even with a hands free kit) can cause distraction and lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

Operating Machinery

Full attention must be given to operating machinery in order to reduce the risk of an accident.

Product Handling

General Statement on Handling and Use

You alone are responsible for how you use your phone and any consequences of its use.

You must always turn off your phone wherever the use of a phone is prohibited.

Use of your phone is subject to safety measures designed to protect users and their environment.

For Your Safety

- Always treat your phone and its accessories with care and keep it in a clean and dust-free place.
- Keep the screen and camera lens clean. Unclean screen or camera lens may slow down the phone's reaction to your operations or lower image quality.
- Clean the device and its accessories with a soft material such as cleaning cloth for eyeglass lenses. Do not use alcohol or other corrosive substances for cleaning or allow them to get inside.
- Do not expose your phone or its accessories to open flames or lit tobacco products.
- Do not expose your phone or its accessories to liquid, moisture or high humidity.
- Do not drop, throw or try to bend your phone or its accessories.
- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.
- Do not paint your phone or its accessories.
- Do not attempt to disassemble your phone or its accessories. Only authorized personnel can do so.
- Do not expose or use your phone or its accessories in an environment with or that can reach extreme temperatures, minimum 23°F (-5°C) and maximum 122°F (+50°C).
- Do not place your phone inside or near heating equipment or high-pressure containers, such as water heaters, microwave ovens, or hot cooking utensils. Otherwise, your phone may be damaged.
- Please check local regulations for disposal of electronic products.
- Do not carry your phone in your back pocket as it could break when you sit down.

Small Children

Do not leave your phone and its accessories within the reach of small children or allow them to play with it. They could hurt themselves or others, or could accidentally damage the phone. Your phone contains small parts with sharp edges that may cause an injury or may become detached and create a choking hazard.

For Your Safety

Demagnetization

To avoid the risk of demagnetization, do not allow electronic devices or magnetic media to be close to your phone for a long time.

Electrostatic Discharge (ESD)

Do not touch the nano-SIM/SD card's metal connectors.

Antenna

Do not touch the antenna unnecessarily.

Normal Use Position

When placing or receiving a phone call, hold your phone to your ear, with the bottom towards your mouth.

Air Bags

Do not place a phone in the area over an air bag or in the air bag deployment area as an airbag inflates with great force and serious injury could result. Store the phone safely before driving your vehicle.

Seizures/Blackouts

The phone can produce a bright or flashing light. A small percentage of people may be susceptible to blackouts or seizures (even if they have never had one before) when exposed to flashing lights or light patterns such as when playing games or watching video. If you have experienced seizures or blackouts or have a family history of such occurrences, please consult a physician. To reduce the risk of blackouts or seizures, you can use your phone in a well-lit room and take frequent breaks.

Repetitive Strain Injuries

To minimize the risk of Repetitive Strain Injury (RSI) when texting or playing games with your phone:

For Your Safety

- Do not grip the phone too tightly.
- Press the buttons lightly.
- Use the special features that are designed to minimize the times of pressing buttons, such as Message Templates and Predictive Text.
- Take many breaks to stretch and relax.

Emergency Calls

This phone, like any wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.

Loud Noise

This phone is capable of producing loud noises, which may damage your hearing. Turn down the volume before using headphones, *Bluetooth* stereo headsets or other audio devices.

Phone Heating

Your phone may become warm during charging and during normal use.

Electrical Safety

Accessories

Use only approved accessories. Do not connect with incompatible products or accessories. Take care not to touch or allow metal objects, such as coins or key rings, to contact or short-circuit the charging jack terminals. Never puncture the surface of the phone with sharp objects.

Connection to Vehicles

Seek professional advice when connecting a phone interface to the vehicle electrical system.

Faulty and Damaged Products

Do not attempt to disassemble the phone or its accessories. Only qualified personnel can service or repair the phone or its accessories. If your phone (or its accessories) has been submerged in water, punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorized service center.

CTIA Requirements

- Do not disassemble or open, crush, bend or deform, puncture, or shred.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.
- Only use the battery for the system for which it is specified.
- Only use the battery with a charging system that has been qualified with the system per CTIA Certification Requirements for Battery System Compliance to IEEE 1725. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Do not short-circuit a battery or allow metallic conductive objects to contact battery terminals.
- Replace the battery only with another battery that has been qualified with the system per this standard, IEEEStd-1725. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.
- Promptly dispose of used batteries in accordance with local regulations.
- Battery usage by children should be supervised.
- Avoid dropping the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- Improper battery use may result in a fire, explosion, or other hazard.
- The phone shall only be connected to CTIA certified adapters, products that bear the USB-IF logo or products that have completed the USB-IF compliance program.

Radio Frequency Interference**General Statement on Interference**

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids. Please consult your doctor and the device manufacturers to determine if the operation of your phone may interfere with the operation of your medical devices.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 6 inches (15 cm) be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this, use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

Hearing Aids

People with hearing aids or other cochlear implants may experience interfering noises when using wireless devices or when one is nearby. The level of interference will depend on the type of hearing device and the distance from the interference source. Increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

Medical Equipment

Turn off your wireless device when requested to do so in hospitals, clinics or healthcare facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

Aircraft

Turn off your wireless device whenever you are instructed to do so by airport or airline staff. Consult the airline staff about the use of wireless devices onboard the aircraft. If your device offers airplane mode, this must be enabled prior to boarding an aircraft.

For Your Safety

Interference in Vehicles

Please note that because of possible interference with electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a hands-free kit with an external antenna is included in the installation.

Explosive Environments

Gas Stations and Explosive Atmospheres

In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other radio equipment. Areas with potentially explosive atmospheres include fueling areas, below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

Blasting Caps and Areas

Power off your mobile phone or wireless device when in a blasting area or in areas posted power off “two-way radios” or “electronic devices” to avoid interfering with blasting operations.

WARNING: This product contains a chemical known to the State of California to cause cancer, birth defects or other reproductive harm.

Specifications

Handset specifications are shown in the following table.

Operating system	Android 6.0.1 (Marshmallow)
Handset standards	LTE/GSM/UMTS/CDMA
Dimensions (H × W × D)	6.5" (H) x 3.3" (W) x 0.37" (D)
Weight	7.36 oz. (with battery)
Display	6" 1920 x 1080
Camera	Front 5 MP; Back 13 MP mono + 13 MP RGB
Internal memory	ROM: 16 GB, RAM: 2 GB
Removable memory card	Supports microSDXC card up to 128 GB
Battery	3,990 mAh (nonremovable)
Continuous idle time	Up to 14 days
Continuous talk time	Up to 30 hours
WAP browser version	WAP 2.0
Bluetooth	BT 4.2
HAC	M4/T3

NOTE: The phone’s talk time and idle time are based on ideal working environments. The use of extended backlighting, browser, and network conditions can reduce battery life and talk/idle time.

Notes

.....
Notes

Notes
