

ZTE

ZTE QUARTZ™

USER MANUAL

Z079584506369



www.zteusa.com

Z797C

 **Bringing you Closer**

About This Manual

Thank you for choosing this ZTE mobile device. In order to keep your device in its best condition, please read this manual and keep it for future reference.

Copyright © 2014 ZTE CORPORATION

All rights reserved.

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

Notice

ZTE Corporation reserves the right to make modifications on print errors or update specifications in this manual without prior notice. This manual has been designed with the utmost care to ensure the accuracy of its content. However, all statements, information and recommendations contained therein do not constitute a warranty of any kind, either expressed or implied. Please refer to chapter *For Your Safety* to be sure to use your phone properly and safely.

We offer self-service for our smart terminal device users. Please visit the ZTE official website (at www.zteusa.com) for more information on self-service and supported product models. Information on the website takes precedence.

Disclaimer

ZTE Corporation expressly disclaims any liability for faults and damages caused by unauthorized modifications of the software.

Images and screenshots used in this manual may differ from the actual product. Content in this manual may differ from the actual product or software.

Trademarks

ZTE and the ZTE logos are trademarks of ZTE Corporation.

Google and Android are trademarks of Google, Inc.

The *Bluetooth*® trademark and logos are owned by the *Bluetooth* SIG, Inc. and any use of such trademarks by ZTE Corporation is under license.

microSDXC Logo is a trademark of SD-3C, LLC.

SRS TruMedia is a trademark of SRS Labs, Inc. SRS TruMedia technology is incorporated under license from SRS Labs, Inc. SRS TruMedia™, a feature-rich audio solution tuned specifically for mobile devices, provides a cinema-like surround headphone performance with deep, rich bass.

Qualcomm® Snapdragon™ processors are products of Qualcomm Technologies, Inc. Qualcomm and Snapdragon are trademarks of Qualcomm Incorporated, registered in the United States and other countries. Used with permission.

Other trademarks and trade names are the property of their respective owners.

Edition Time: May 2014

Manual No.: Z079584506369



Table of Contents

Getting Started	5
Installing a microSDXC™ Card.....	5
Charging the Battery	5
Extending the Battery Life.....	6
Powering Your Phone On/Off	6
Restarting the Phone	6
Setting Up Your Phone for the First Time	6
Locking/Unlocking the Screen and Keys.....	7
Using the Touch Screen	7
Getting to Know Your Phone	8
Personalizing	11
Changing the System Language.....	11
Setting the Date and Time	11
Changing Ringtone and Notification Sound.....	11
Turning On/Off Touch Sounds.....	11
Adjusting Volumes.....	11
Switching to Silent Mode.....	11
Applying New Wallpapers.....	12
Changing the Screen Brightness	12
Protecting Your Phone With Screen Locks.....	12
Protecting Your Phone With Encryption	13
Knowing the Basics	14
Monitoring the Phone Status	14
Managing Notifications	15
Managing Widgets and Apps.....	17
Organizing With Folders.....	17
Rearranging the Favorites Tray	18
Changing Input Methods.....	18
Entering Text	18
Editing Text	19
Opening and Switching Apps.....	20
Connecting to Networks and Devices	21
Connecting to Mobile Networks	21
Connecting to Wi-Fi®	21
Connecting to <i>Bluetooth</i> ® Devices	23
Connecting to Your Computer via USB	25
Connecting to Virtual Private Networks	26
Phone Calls	27
Placing and Ending Calls	27
Answering or Rejecting Calls	27
Working With the Call Log.....	27
Calling Your Contacts	28
Checking Voicemail	28
Using Options During a Call	28
Switching Between Two Calls	29
Adjusting Your Call Settings.....	29
People	32
Checking Contact Details.....	32
Adding a New Contact	32
Setting Up Your Own Profile	32
Importing, Exporting, and Sharing Contacts	32
Working With Favorite Contacts.....	33
Working With Groups.....	33
Searching for a Contact.....	34
Editing Contacts.....	34
Accounts	36
Adding or Removing Accounts	36
Configuring Account Sync.....	36

Table of Contents

Email 37
Setting Up the First Email Account 37
Checking Your Emails 37
Responding to an Email..... 37
Writing and Sending an Email..... 38
Adding a Signature to Your Emails 38
Adding and Editing Email Accounts..... 38
Changing General Email Settings 39

Gmail™ 40
Opening Your Gmail Inbox 40
Switching Accounts 40
Writing and Sending a Message 40
Adding a Signature to Your Gmail Messages 40
Replying to or Forwarding a Message 41
Working With Received Attachments..... 41
Searching for Messages 41
Working With Labels 41
Changing Gmail Settings 42

Messaging 43
Opening the Messaging Screen..... 43
Sending a Text Message 43
Replying to a Message 43
Forwarding a Message 43
Viewing Details About a Message 43
Deleting Messages or Threads..... 44
Changing Message Settings..... 44

Calendar 45
Viewing Your Calendars and Events 45
Creating an Event..... 46
Editing or Deleting an Event 46
Changing Calendar Settings 46

Google+™ 47

Browser 48
Opening the Browser..... 48
Working With an Opened Page..... 48
Using Multiple Browser Tabs..... 49
Downloading Files..... 49
Using Bookmarks 49
Viewing Your Browsing History 50
Changing Browser Settings..... 50

Google Maps™ 51
Activating Location Services..... 51
Getting Your Location..... 51
Searching for a Location 51
Getting Directions to Your Destination 51
Searching for Local Places 52

Google Now™ and Search 53
Enabling Google Now 53
Searching With Text 53
Searching by Speaking..... 53
Changing Search and Voice Search Settings 53

Table of Contents

Camera 54
Capturing a Photo..... 54
Customizing Camera Settings 54
Recording a Video 55
Customizing Camcorder Settings 55

Gallery 56
Opening the Gallery 56
Working With Albums..... 56
Working With Pictures 56
Working With Videos 57

Music 58
Copying Music Files to Your Phone..... 58
Viewing Your Music Library..... 58
Playing Music..... 59
Managing Playlists 59

Play Music 61
Playing Your Music 61
Managing Playlists 62

Video Player..... 63
Opening the Video Library..... 63
Playing and Controlling Videos 63
Managing Video Files 63

Sound Recorder 64
Recording a Voice Memo 64
Playing a Voice Memo 64

More Apps 65
Clock 65
Calculator 65
Google Chrome™..... 65
Downloads..... 66
File Manager..... 66
Full Share..... 66
Mi-EasyAccess..... 67
NotePad..... 67
Play Books 67
Play Movies & TV..... 67
Task Manager 68
YouTube™..... 68

Play Store 69
Browsing and Searching for Apps 69
Downloading and Installing Apps..... 69
Creating a Google Wallet™ Account 69
Managing Your Downloads..... 69
Viewing Your Downloaded Apps 70

Settings 71
General Settings..... 71
Wireless and Networks..... 72
Device..... 73
Personal..... 73
Accounts..... 74
System 74

Table of Contents

Upgrading the Phone Software..... 75

Troubleshooting 76

For Your Safety 79

General Safety..... 79

Radio Frequency (RF) Energy..... 80

FCC Compliance..... 80

Hearing Aid Compatibility (HAC) Regulations
for Mobile Phones 81

Distraction 82

Product Handling 82

Electrical Safety..... 84

CTIA Requirements..... 84

Radio Frequency Interference..... 85

Explosive Environments 86

Specifications 87


Notes 88

Getting Started

Installing a microSDXC Card

You have the option to install a microSDXC card of up to 64 GB to expand your phone’s storage capacity. The microSDXC card can be installed and removed while the phone is turned on. Unmount the microSDXC card before removing it.

 - 1. Remove the back cover.

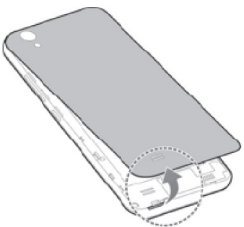

- 2. Hold your microSDXC card with the metal contacts facing down and slide it into the microSDXC card slot.



NOTE: Some applications may not function normally after you remove the card, pre-installed or otherwise.

- 3. Align the back cover with the back of the phone and press the cover back into place. Make sure all the tabs are secure and there are no gaps around the cover.



Charging the Battery

Your phone’s battery should have enough power for the phone to turn on, find a signal, and make a few calls. You should fully charge the battery as soon as possible.

If the battery is low, there will be a pop-up message on the screen. As you charge your phone, the screen will tell you the exact battery level each time you wake up your phone.



WARNING! Use only ZTE-approved chargers and cables. The use of unapproved accessories could damage your phone or cause the battery to explode.

CAUTION: Do not change the built-in rechargeable battery in your phone by yourself. The battery can only be changed by ZTE or ZTE authorized service provider.

1. Connect the adapter to the charging port. Ensure that the adapter is inserted with the correct orientation. Do not force the connector into the charging port.
2. Connect the charger to a standard AC power outlet. If the phone is on, you'll see a charging icon, such as  or , appear in the Status Bar.
3. Disconnect the charger when the battery is fully charged.

NOTE: If the battery is extremely low, you may be unable to power on the phone even when it is being charged. In this case, try again after charging the phone for at least 10 minutes. Contact customer service if you still cannot power on the phone after prolonged charging.

Extending the Battery Life

Active applications, screen brightness levels, *Bluetooth* and Wi-Fi usage, and GPS functionality can drain your battery. You can follow the helpful tips below to conserve your battery power.

- Reduce the screen backlight time.
- Lower the screen brightness.

- Turn auto-sync, Wi-Fi, and *Bluetooth* off when not in use.
- Disable the GPS function when not in use. Most applications using this function will periodically query the GPS satellites for your current location; each query drains your battery.

Powering Your Phone On/Off

- Press and hold the **Power/Lock Key** to turn on your phone.
- To turn it off, press and hold the **Power/Lock Key** to open the options menu. Tap **Power off** and then tap **OK**.

Restarting the Phone

If the screen freezes or takes too long to respond, try pressing and holding the **Power Key** for about 10 seconds to restart the phone.

Setting Up Your Phone for the First Time

When you first power on your phone after you purchase it or reset it to factory settings (see *Settings – Personal – Backup and Reset*), you may need to set it up before using it.

1. Tap the **language field**, select the language you want, and tap **Start**. Then follow the prompts to set up Wi-Fi, Google account, Google location, and other options.

Locking/Unlocking the Screen and Keys

Your phone allows you to quickly lock the screen and keys (put the phone into Sleep mode) when not in use, and also to turn the screen back on and unlock it when you need it.

To lock the screen and keys:

To quickly turn the screen off and lock the keys, press the **Power/Lock Key**.

NOTE: To save battery power, the phone automatically turns off the screen after a certain period of time when you leave it idle. You will still be able to receive messages and calls while the phone screen is off.

To unlock the screen and keys:

1. Press the **Power/Lock Key** to turn the screen on.
2. Tap and hold any blank area of the screen. You can also slide left on the bottom of the screen to access a few basic functions such as People, Phone, and Camera.

 
NOTE: If you have set an unlock pattern, face lock, PIN, or password for your phone (see *Personalizing – Protecting Your Phone With Screen Locks*), you'll need to draw the pattern, look at the front-facing camera, or enter the PIN/password to unlock your screen.

Using the Touch Screen

Your phone's touch screen lets you control actions through a variety of touch gestures.

- **Tap** – When you want to type using the on-screen keyboard, select items on-screen (such as application and settings icons), or press on-screen buttons, simply tap them with your finger.
- **Tap and Hold** – To open the available options for an item (for example, a message or link in a web page), tap and hold the item.
- **Swipe or Slide** – To swipe or slide means to quickly drag your finger vertically or horizontally across the screen.
- **Drag** – To drag, press and hold your finger with some pressure before you start to move your finger. While dragging, do not release your finger until you have reached the target position.
- **Pinch** – In some apps (such as Maps, Browser, and Gallery), you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in).
- **Rotate the screen** – For most screens, you can automatically change the screen orientation from portrait to landscape by turning the phone sideways.

Getting to Know Your Phone

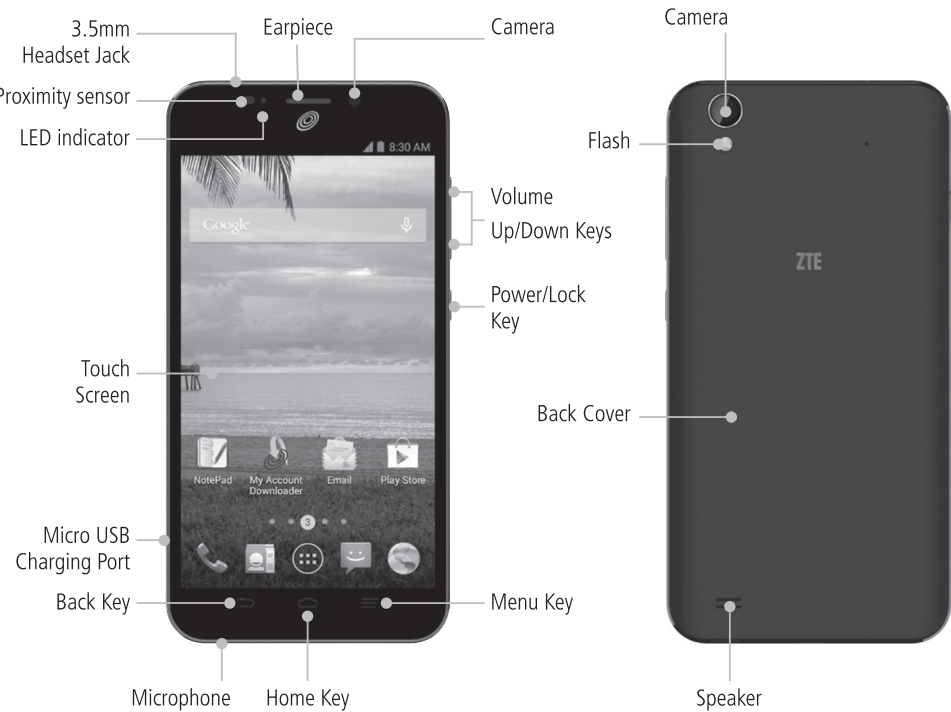


Key Functions

Key	Description
Power/Lock Key	Press and hold to turn on or off Airplane mode, restart, enable silent mode/vibration mode/ sound, or to power off. Press to switch your phone to Sleep mode. Press to wake up your phone.
Home Key	Press to return to the Home Screen from any application or screen. Press and hold to access Google Now. Double tap to see recently used applications.
Menu Key	Press for current screen options.
Back Key	Press to go to the previous screen.
Volume Keys	Press or hold to turn the volume up or down.

Getting Started

Home Screen

 You can customize your home screen. Set your own wallpaper, add the widgets or application shortcuts you need, or remove them as you like.

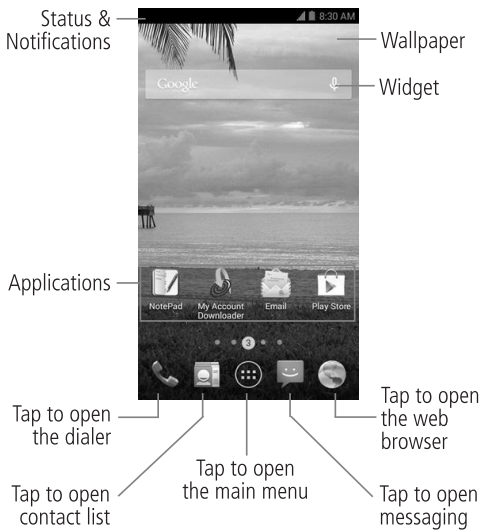

Extended Home Screen

Your home screen extends beyond the initial screen, providing more space to add icons, widgets, and more. Simply swipe left or right on the screen to see the extended Home Screens.

Personalizing

Changing the System Language

1. Press the **Home Key > Menu Key > System settings > Language & input > Language**.
2. Select the language you need.

Setting the Date and Time

1. Press the **Home Key > Menu Key > System settings > Date & time**.
2. Uncheck **Automatic date & time** and **Automatic time zone** if you want to set the date, time, and time zone by yourself.
3. Set the date, time, time zone, and date/time format.

Changing Ringtone and Notification Sound

You can customize the default ringtone for incoming calls and the default notification sound.

1. Press the **Home Key > Menu Key > System settings > Sound**.
2. Tap **Phone ringtone** or **Default notification sound**.
3. Scroll through the ringtone list and select the ringtone you want to use.
4. Tap **OK**.

TIP: See *People – Editing Contacts – Set a Ringtone for a Contact* for how to assign a special ringtone to an individual contact.

Turning On/Off Touch Sounds

1. Press the **Home Key > Menu Key > System settings > Sound**.
2. Check or uncheck **Touch sounds**.

Adjusting Volumes

1. Press the **Home Key > Menu Key > System settings > Sound > Volumes**.
2. Drag the sliders to adjust the volume for each type of audio.
3. Tap **OK** to save.

TIP: You can adjust the media volume when a media application is in use by pressing the **Volume Up/Down Keys**. If no media application is active, press the **Volume Up/Down Keys** to adjust ringtone volume (or the earpiece volume during a call).

Switching to Silent Mode

You can set the phone to silent mode by using one of the following methods:

- Press and hold the **Power/Lock Key** and then tap  to enable silent mode, tap  to enable silent mode with vibration, or tap  to enable sound.
- Keep pressing the **Volume Down Key** when no media application is active. When the  icon appears in the Status Bar, the phone is set to silent mode with vibration. When the  icon appears in

the Status Bar, the phone is in silent mode.

- Press the **Home Key > Menu Key > System settings > Sound > Silent mode**, and tap **Vibrate** or **Mute**.

Applying New Wallpapers

You can set the wallpaper for the home screen or lock screen.

1. Press the **Home Key > Menu Key > Wallpaper**.
2. Tap **Home** or **Lock screen**.
3. Select a wallpaper source from **Gallery**, **Live Wallpapers**, **Photos**, or **Wallpapers** and choose the image or animation you want to use as the wallpaper.
4. For **Gallery** or **Photos** images, tap **OK** or **Done** at the top of the screen to crop the picture. For **Live Wallpapers** or **Wallpapers**, tap **Set Wallpaper**.

NOTE: **Live Wallpapers** and **Photos** are not available for the lock screen.

Changing the Screen Brightness

1. Press the **Home Key > Menu Key > System settings > Display > Brightness**.
2. Tap **AUTO** to turn on or off automatic brightness adjustment. You can also drag the slider to turn off auto-adjustment and change the screen brightness manually.

Protecting Your Phone With Screen Locks

You can protect your phone by creating a screen lock. When a screen lock is enabled, you need to tap and hold the screen, look at the front-facing camera, draw a pattern, or enter a numeric PIN or a password to unlock the phone's screen and keys.

1. Press the **Home Key > Menu Key > System settings > Security**.
2. Tap **Screen lock**.
3. Tap **Long press**, **Pattern**, **PIN**, or **Password**.
 - Tap **Long press** to enable screen lock and allow unlocking with a "tap and hold" gesture. You can unlock the screen by tapping and holding a blank area on the lock screen.
 - Tap **Face Unlock** to let the phone capture your face. You can unlock the screen by looking at the front-facing camera. You also need to set a pattern or PIN in case the phone cannot recognize your face.
 - Tap **Pattern** to create a pattern that you must draw to unlock the screen.
 - Tap **PIN** or **Password** to set a numeric PIN or a password that you must enter to unlock the screen.

The next time you turn on your phone or wake up the screen, you must draw your unlock pattern or enter your PIN or password to unlock it.

IMPORTANT: If you forget the pattern you set, try five times and tap **Forgot Pattern** to sign in to the

Google account you have added on the phone and reset the screen lock. You will need an active Internet connection. You can also upgrade the phone software (see *Upgrading the Phone Software*).

Protecting Your Phone With Encryption

You can encrypt all the data on your phone: Google accounts, application data, music and other media, downloaded information, and so on. If you do, you must enter a numeric PIN or password each time you power on your phone.

WARNING! Encryption is irreversible. The only way to revert to an unencrypted phone is to perform a factory data reset, which erases all your data.

Encryption provides additional protection in case your phone is stolen, and may be required or recommended in some organizations. Consult your system administrator before turning it on. In many cases the PIN or password you set for encryption is controlled by the system administrator.

Before turning on encryption, prepare as follows:

1. Set a lock screen PIN or password.
2. Charge the battery.
3. Keep the phone connected to the charger.
4. Schedule an hour or more for the encryption process. You must not interrupt it or you will lose some or all of your data.

When you're ready to turn on encryption:

1. Press the **Home Key > Menu Key > System settings > Security > Encrypt phone**.
2. Read the information about encryption carefully. The **Encrypt phone** button is dimmed if your battery is not charged or your phone is not plugged in. If you change your mind about encrypting your phone, press the **Back Key**.
WARNING! If you interrupt the encryption process, you will lose data.
3. Tap **Encrypt phone**.
4. Enter your lock screen PIN or password and tap **Next**.
5. Tap **Encrypt phone** again.

The encryption process starts and displays its progress. Encryption can take an hour or more, during which time your phone may restart several times.

When encryption is complete, you'll be prompted to enter your PIN or password.

Subsequently, you must enter your PIN or password each time you power on your phone to decrypt it.

Monitoring the Phone Status

The Status Bar at the top of the Home Screen provides phone and service status icons on the right side. Below are some of the icons you may see.

Indicators and Icons

Indicator	What it means
	GPRS connected
	EDGE connected
	3G connected
	4G connected
	Flight mode
	Battery empty
	Battery low
	Battery partially drained
	Battery full
	Battery charging

Indicator	What it means
	No signal
	Signal strength
	Alarm set
	Ringer off
	Vibrate mode
	Bluetooth on
	Connected to a Wi-Fi network
	Wi-Fi in use
	Wired headset connected

Managing Notifications

The Status Bar at the top of the Home Screen provides notification icons on the left side. Below are some of the icons you may see.

Indicators and Icons

Indicator	What it means
	New SMS/MMS
	New Email
	New Gmail message
	New Google+ Hangouts™ instant message
	Problem with SMS/MMS delivery
	Missed call
	Call in progress
	USB connected
	Song is playing

Indicator	What it means
	microSDXC card unmounted
	microSDXC card removed
	Upcoming event
	New Wi-Fi network detected
	Downloading data
	Sending data
	GPS on
	Updates available

Opening/Closing the Notification Panel

Notifications report the arrival of new messages, calendar events, and alarms, as well as ongoing events such as when you are sending or receiving data via *Bluetooth*. You can open the Notification Panel to view the details of notifications.

- To open the Notification Panel, swipe your finger down from the top of the screen.
- To close the Notification Panel, swipe your finger up from the bottom of the screen or tap the **Back Key**.

Responding to or Removing a Notification

In the Notification Panel, you can respond to a notification or remove the notifications. The Notification Panel also supports expandable notifications that let you perform additional actions right from the notification itself.

- To respond to a notification, tap it.
- Slide down with one finger to expand certain notifications. You can also swipe two fingers vertically or pinch-zoom to expand or collapse certain notifications.
- To remove a notification, swipe it left or right.
- To remove all notifications, tap  at the top of the screen.
- Tap and hold a notification and then touch **App info** to identify the application that created it. To turn off notifications from that application if needed,

unchecked **Show notifications** in the app info screen.

Note: If you turn off notifications for an app, you may miss its important alerts and updates. The notifications of some apps cannot be turned off.

Using Quick Settings

The Quick Settings in the Notification Panel make it convenient to view or change the most common settings for your phone.

Open the Notification Panel and tap  to find the following Quick Settings.

- **OWNER:** Tap the contact icon to open your profile in the People app (see *People – Setting Up Your Own Profile*).
- **BRIGHTNESS:** Tap to turn on or off automatic brightness adjustment. Tap and hold to adjust the brightness level.
- **SETTINGS:** Tap to open the Settings menu (see *Settings*).
- **WI-FI:** Tap to turn on or off Wi-Fi. Tap and hold to open the Wi-Fi settings menu.
- **DATA:** Tap to enable or disable data access over the mobile network. Tap and hold to open the Data usage menu (see *Settings – Wireless & Networks – Data Usage*).
- **AUTO-ROTATE:** Tap to turn on or off the Auto-rotate feature.
- **BATTERY:** Tap to see the battery information.
- **AIRPLANE:** Tap to turn on or off the airplane mode.

Organizing With Folders

You can create folders on the home screen and add several apps in a folder.

Creating a Folder

1. Tap and hold the app on the home screen you want to add into a folder until  **Folder** appears.
2. Drag the app to  **Folder** and release it. A new folder will be created and the app is added to the folder.

Renaming a Folder

1. Tap a folder to open it.
2. Tap the folder name field and enter a new name.

Adding Apps to a Folder

1. Tap and hold an app and then drag it onto a folder icon.
2. Release the app and it will be added into the folder.

Removing Apps From a Folder

1. Tap a folder to open it.
2. Tap and hold the app you want to remove and then drag it to the home screen.
3. Release the app and it will be removed from the folder.

- **BLUETOOTH:** Tap to turn on or off *Bluetooth*. Tap and hold to open the *Bluetooth* settings menu.
- **LOCATION IN USE:** Tap to turn on or off the GPS function. Tap and hold to open the Location access settings menu (see *Settings – Personal – Location Access*).

Managing Widgets and Apps

Adding Widgets and Apps

1. Press the **Home Key** > .
2. Tap **WIDGETS** or **APPS** to view the available widgets and apps.
3. Tap and hold a widget or app and drag it to the home screen.

Moving Widgets or Apps

1. Tap and hold a widget or app on the home screen.
2. Drag it to the place you need.

Removing Widgets or Apps

1. Tap and hold a widget or app on the home screen.
2. Drag it to  **Remove**.

Adjusting Widget Size

1. Tap and hold a widget on the home screen and then release it.
2. An outline appears around the widget. Drag the outline to resize the widget.

NOTE: Not all widgets can be resized.

Rearranging the Favorites Tray

The home screen includes a customizable favorites tray at the bottom visible from all home screens. You can keep at most four items in the favorites tray. Drag apps or folders in or out of the tray to rearrange it.



Changing Input Methods

Besides the pre-installed Google Keyboard, you can install other input methods and switch among them freely while entering text. When you use an on screen keyboard to enter text and there are other input methods available for you to choose,  appears in the status bar.

 
1. Open the Notification Panel and tap **Choose input method**.
2. Select an input method.

Entering Text

You can enter text using the on-screen keyboard. Some apps open it automatically. In others, you open it by tapping where you want to type. You can press the **Back Key** to hide the on-screen keyboard.

Google Keyboard


The Google Keyboard provides a layout similar to a desktop computer keyboard. Turn the phone sideways and the keyboard will change from portrait to landscape. The landscape keyboard is not supported in all applications.

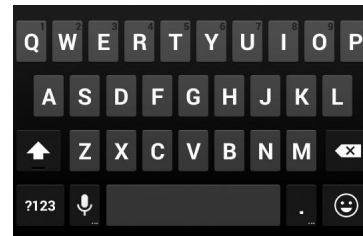

- Tap the alphabetic keys to enter letters. Tap and hold some specific keys to enter associated accented letters or numbers. For example, to enter è, tap and hold  and the available accented letters and number 3 appear. Then slide to choose è.
- Tap  to use uppercase. Double-tap  to lock uppercase. This key also changes to indicate the current case you are using:  for lowercase,  for uppercase, and  when locked in uppercase.
- Tap  to delete the text before the cursor.
- Tap  to select numbers and symbols. You can then tap  to find more.
- Tap  to enter miniature icons, such as expressions, astrological signs, and animals.

Editing Text

 - **Move the insertion point:** Tap where you want to type. The cursor blinks in the new position, and a tab appears below it. Drag the tab to move the cursor.
- **Select text:** Tap and hold or double-tap within the text. The nearest word highlights, with a tab at each end of the selection. Drag the tabs to change the selection.
- **Cut or copy:** Select the text you want to manipulate. Then tap the Cut  or Copy  button to cut or copy the text to the clipboard.
- **Replace text with the clipboard text:** Select the text you want to replace. Then tap  or **PASTE**.

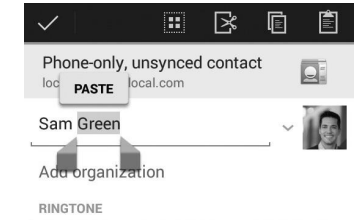

- Tap  to use Google voice typing.
- Tap and hold  to change the input language or access the Google keyboard settings.

Google Voice Typing

Google Voice typing uses the Google voice recognition service to convert speech to text. You must have a data connection on a mobile or Wi-Fi network to use it.

1. Flick down the status bar when entering text and touch **Choose input method**, and then select **Google voice typing**. Or tap  to access the voice typing when you are using the Google keyboard.
2. When you see the microphone image, speak what you want to type.
3. You can continue entering text to keep it or to delete it.

TIP: Say “comma,” “period,” “question mark,” and so on to enter punctuation.

 
Touch Input Settings

Choose the touch input settings by pressing the **Home Key > Menu Key > System settings > Language & input**.

In the **KEYBOARD & INPUT METHODS** section, you can set the default input method and choose the settings for input methods.

Knowing the Basics

- **Insert text from the clipboard:** Move the cursor to the insertion point and then tap and hold the tab below the cursor. Release your finger and tap **PASTE**.

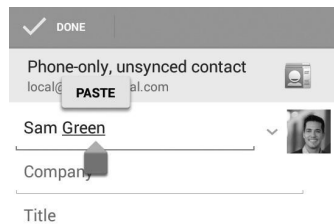

Opening and Switching Apps

Opening an App

1. Press the **Home Key** > .
2. Slide left or right on the screen and tap an app to open it.

Switching Between Recently Opened Apps

1. Double tap the **Home Key**. A list of the names and thumbnails of apps you've recently used opens. If you've been using more apps recently than can fit on the screen, you can scroll the list up and down.
2. Tap a thumbnail to open that app.

NOTE: You can swipe a thumbnail sideways to remove it from the list.

Connecting to Networks and Devices

Connecting to Mobile Networks

Enabling/Disabling Data Access

1. Press the **Home Key** > **Menu Key** > **System settings** > **Mobile networks**.
2. Check **Data enabled** to enable data access over the mobile network. Clear the check box to disable data access.

Keeping Mobile Data Always On

1. Press the **Home Key** > **Menu Key** > **System settings** > **Mobile networks**.
2. Check **Always-on mobile data** to allow applications to update data automatically.

IMPORTANT: When you enable this option, more data traffic will be generated for automatic updates of applications data. Your phone will also consume more power.

Getting Data Services When Roaming

1. Press the **Home Key** > **Menu Key** > **System settings** > **Mobile networks**.
2. Check **Data roaming**.

IMPORTANT: Depending on your service provider and rate plan, data roaming may incur significant roaming charges.

Connecting to Wi-Fi

Wi-Fi is a wireless networking technology that can provide Internet access at distances of up to 100 meters, depending on the Wi-Fi router and your surroundings.

Turning Wi-Fi On and Connecting to a Wi-Fi Network

1. Press the **Home Key** > **Menu Key** > **System settings** > **Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **ON** position to turn on Wi-Fi.
3. Tap a network name to connect to it.
4. If the network is secured, enter the password and tap **Connect**.

NOTE: Your phone automatically connects to previously used Wi-Fi networks when they are in range.

Getting Notified of Open Networks

1. Press the **Home Key** > **Menu Key** > **System settings** > **Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **ON** position.
3. Press the **Menu Key** > **Advanced**.
4. Check **Network notification**.

When Wi-Fi is on, you receive notifications in the Status Bar when your phone detects an open Wi-Fi network. Uncheck the option to turn off notifications.

Adding a Wi-Fi Network

You can add a Wi-Fi network if the network does not broadcast its name (SSID) or add a Wi-Fi network when you are out of range.

To connect to a secured network, you first need to get the security details from the network's administrator.

1. Press the **Home Key > Menu Key > System settings > Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **ON** position.
3. Tap .
4. Enter the network SSID (name). If necessary, enter security or other network configuration details.
5. Tap **Save**.

Forgetting a Wi-Fi Network

You can make your phone forget the details of a Wi-Fi network that you added—for example, if you don't want the phone to connect to it automatically or if it is a network that you no longer use.

1. Press the **Home Key > Menu Key > System settings > Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **ON** position.
3. Tap the Wi-Fi network name and then tap **Forget**.

Connecting to a WPS Network

WPS (Wi-Fi Protected Setup) is a feature that makes it easy to add your phone to access points that support WPS.

You can use one of the following two methods to connect your phone to a wireless network using WPS.

Method One: WPS Button

1. Press the **Home Key > Menu Key > System settings > Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **ON** position.
3. Tap .
4. Press the WPS button on the access point and the access point will recognize your phone and add it to the network.

Method Two: PIN Entry

1. Press the **Home Key > Menu Key > System settings > Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **ON** position.
3. Press the **Menu Key > WPS Pin Entry**.
4. The WPS PIN displays on the screen. Enter the PIN into the access point's setup page.

After entering the PIN, your phone automatically finds the access point and configures the connection.

NOTE: For detailed information about the WPS feature of the access point, please refer to its user documents.

Adjusting Advanced Wi-Fi Settings

1. Press the **Home Key > Menu Key > System settings > Wi-Fi**.
2. Press the **Menu Key > Advanced** to adjust the following settings.
 - **Network notification:** Get notifications in the Status Bar when Wi-Fi is on and an open network is available.
 - **Keep Wi-Fi on during sleep:** Choose whether or not to keep Wi-Fi on in Sleep mode.
 - **Scanning always available:** Let Google's location service and other apps scan for networks, even when Wi-Fi is on.
 - **Avoid AP without Internet:** Only use a Wi-Fi network when the Internet connection is good.
 - **Install certificates:** Check the install address.
 - **Wi-Fi optimization:** Check to minimize battery usage when Wi-Fi is on.
 - **MAC address:** Check the MAC address.
 - **IP address:** Check the phone's IP address.
 - **DLNA auto-IP:** Enable auto IP for use of DLNA features.

Connecting to Bluetooth Devices

Bluetooth is a short-range wireless communication technology. Phones or other devices with *Bluetooth* capabilities can exchange information wirelessly within a distance of about 32 feet (10 meters). The *Bluetooth* devices must be paired before the communication is performed.

Turning Bluetooth On/Off

1. Press the **Home Key > Menu Key > System settings > Bluetooth**.
2. Slide the **Bluetooth** switch to the **ON** or **OFF** position.

When *Bluetooth* is on, the  icon will appear in the Status Bar.

Changing the Device Name

1. Press the **Home Key > Menu Key > System settings > Bluetooth**.
2. Slide the **Bluetooth** switch to the **ON** position if *Bluetooth* is off.
3. Press the **Menu Key > Rename phone**.
4. Edit the name and tap **Rename**.

Pairing With Another *Bluetooth* Device

1. Press the **Home Key > Menu Key > System settings > Bluetooth**.
2. Slide the **Bluetooth** switch to the **ON** position if *Bluetooth* is off.
Your phone automatically scans for and displays the IDs of all available *Bluetooth* devices in range. Tap **SEARCH FOR DEVICES** if you want to scan again.
3. Tap the device you want to pair with.
4. If necessary, confirm that the *Bluetooth* passkeys are the same between the two devices and tap **Pair**. Alternately, enter a *Bluetooth* passkey and tap **Pair**. Pairing is successfully completed when the other device accepts the connection or the same passkey is entered.

NOTE: The *Bluetooth* passkey may be fixed for certain devices, such as headsets and hands-free car kits. You can try entering 0000 or 1234 (the most common passkeys) or refer to the documents for that device.

Sending Data via *Bluetooth*

1. Open the appropriate application and select the file or item you want to share.
2. Select the option for sharing via *Bluetooth*. The method may vary by application and data type.
3. Tap a *Bluetooth* device the phone has paired with or wait for it to search for new devices and tap one of them.

Receiving Data via *Bluetooth*

1. Turn *Bluetooth* on before trying to receive data via *Bluetooth*.
NOTE: If the phone has not been paired with the sending device, you may need to tap **Bluetooth > Z797C** in **Settings** to keep the phone detectable through *Bluetooth*.
2. Flick down the Status Bar and tap .
3. Tap **Accept** to start receiving the data.

Depending on your storage setting and whether a microSDXC card is installed, received files are stored automatically in a dedicated folder (*Bluetooth*, for instance) in the phone storage or microSDXC directory. You can access them with the **File Manager** app. Received contacts (vCard files) are automatically imported to your contact list.

Connecting to Your Computer via USB

You can connect your phone to a computer with a USB cable and transfer music, pictures, and other files in both directions. Your phone stores these files in internal storage or on a removable microSDXC card.

Connecting Your Phone to a Computer via USB

1. Connect your phone to the PC with a USB cable.
2. Open the Notification Panel and tap .
3. Choose one of the following options:
 - **Charge only:** Charge your phone via USB.
 - **USB mass storage:** Transfer files between your PC and the microSDXC card in your phone.
 - **Install driver:** Install the driver needed for some USB connection modes (such as MTP).
 - **Media device (MTP):** Transfer media files on Windows®, or using Android File Transfer on Mac®.
 - **Camera (PTP):** Transfer photos using camera software.

Connecting with Windows Media® Player

You can sync music with your phone and your computer installed with Windows Media Player.

1. Connect the phone with your computer via USB and choose **Media device (MTP)**.
2. Open Windows Media Player and synchronize music files.

Disconnecting Your Phone From the Computer

To disconnect the phone from the computer, simply unplug the USB cable when you're finished.

Removing the microSDXC Card From Your Phone

If you need to remove the microSDXC card while the phone is on, you should unmount it first.

1. Press the **Home Key > Menu Key > System settings > Storage**.
2. Scroll down and tap **Unmount SD card > OK**.
3. When **Unmount SD card** changes to **Mount SD card** you can safely remove the microSDXC card from the phone.

Erasing the microSDXC Card

1. Press the **Home Key > Menu Key > System settings > Storage**.
2. Scroll down and tap **Erase external SD card > Erase SD card > Erase everything**.

CAUTION! The formatting procedure erases all the data on the microSDXC card, after which the files CANNOT be retrieved.

Connecting to Virtual Private Networks

Virtual private networks (VPNs) allow you to connect to the resources inside a secured local network. VPNs are commonly deployed by corporations, schools, and other institutions to let people access local network resources when not on campus, or when connected to a wireless network.

Depending on the type of VPN you are using, you may be required to enter your login credentials or install security certificates before you can connect to your VPN. You can get this information from your network administrator.

Adding a VPN

1. Press the **Home Key > Menu Key > System settings > More > VPN**.
2. You may be prompted to set a lock screen (see *Personalizing – Protecting Your Phone With Screen Locks*). If not, tap  and fill in the information provided by your network administrator.
3. Tap **Save**.

The VPN is added to the list on the VPN screen.

Connecting to a VPN

1. Press the **Home Key > Menu Key > System settings > More > VPN**.
2. Tap the VPN that you want to connect to.
3. When prompted, enter any requested credentials and then tap **Connect**.

When you are connected, the VPN connected icon appears in the Status Bar.

Modifying a VPN

1. Press the **Home Key > Menu Key > System settings > More > VPN**.
2. Tap and hold the VPN that you want to modify.
3. Tap **Edit profile** and edit the VPN settings.
4. Tap **Save**.

Deleting a VPN

1. Press the **Home Key > Menu Key > System settings > More > VPN**.
2. Tap and hold the VPN that you want to delete.
3. Tap **Delete profile**.

Phone Calls

You can place calls from the Phone app, the People app, or other apps or widgets that display contact information. Wherever you see a phone number, you can usually tap it to dial.

Placing and Ending Calls

Placing a Call by Dialing

1. Press the **Home Key > **.
2. In the Phone tab, enter the phone number with the on-screen keypad. Tap  to delete incorrect digits.
NOTE: As you enter digits, your phone searches for contacts that match. If you see the number you want to dial, tap it.
3. Tap  below the keypad to dial.

TIP: To make an international call, tap and hold the **0 Key** to enter the plus (+) symbol. Next, enter the country code followed by the city/area code and then the phone number.

Ending a Call

During a call, tap  on the screen.

Answering or Rejecting Calls

When you receive a phone call, the Incoming Call screen opens, displaying the Caller ID or the information about the caller that you've entered in People. You can answer or reject the call, or reject it with a text message.

Answering a Call

When you receive a phone call, drag  over  to answer the call.

NOTE: To silence the ringer before answering the call, press the **Volume Up/Down Keys**.

Rejecting a Call

When you receive a phone call, drag  over  to reject the call.

You can also drag  over  to reject the call and send a preset text message to the caller.

TIP: To edit the text response from within the Phone app, press the **Menu Key > Settings > Quick responses**.

Working With the Call Log

The call log is a list of all the calls you've placed, received, or missed. It provides a convenient way to redial a number, return a call, or add a number to your Contacts.

To open the call log, press the **Home Key >  > Call log**.

Placing a Call From the Call Log

1. Open the call log.
2. Tap a number for more information about the call, or tap  beside it to call back.

Adding a Call Log Number as a Contact

- 1. Open the call log.
- 2. Tap a number to view more call information.
- 3. Tap .
- 4. To add the number to an existing contact, tap a contact and then tap **OK**. To add a new contact, tap **Create New Contact**.

Taking Other Actions on a Call Log Entry

- 1. Open the call log.
- 2. Tap a number to view more call information. While viewing the call details, you can:
 - Tap the number to call it.
 - Press the **Menu Key > Edit number before call** to edit the number in the dialer before calling it.
 - Tap  to send a message.
 - If the number belongs to a contact you already have, tap  to view contact details.
 - Press the **Menu Key > Remove from call log** to delete the call log.

Calling Your Contacts

Calling a Contact

- 1. Press the **Home Key > ** and then tap the **Favorites** tab .

- 2. Flick the screen up or down to view all your contacts with phone numbers.

TIP: Your favorite contacts and frequently called contacts or numbers are listed at the top of the screen. You can search for a contact by tapping  on the screen.
- 3. Tap a contact to call that contact.

Checking Voicemail

If you have set the phone to divert certain calls to voicemail, callers can leave voicemail messages when they cannot reach you. Here’s how to check the messages they left.

- 1. Press the **Home Key > **.
- 2. Tap and hold  in the dialer. If prompted, enter your voicemail password.
- 3. Follow the voice prompts to listen to and manage your voicemail messages.

NOTE: To set your voicemail service, press the **Menu Key > Settings > Voicemail** in the dialer and tap the voicemail settings you want to change. For detailed information, please contact your service provider.

Using Options During a Call

During a call, you will see a number of on-screen options. Tap an option to select it.

- Tap  to switch to the keypad when you need to enter a code (for example, the PIN for your voicemail or bank account) during the call.

- Tap  /  to turn the speaker on or off.
- Tap  to mute or unmute the microphone.
- Tap  to make another call separately from the first call, which is put on hold.
- Tap the **Menu Key > Record/Stop Recording** to start or stop recording the phone call.
- Tap  to end the current call.

WARNING! Because of higher volume levels, do not place the phone near your ear during speakerphone use.

Switching Between Two Calls

When you’re on a call, you can answer a new incoming call or make a new outgoing call.

NOTE: This feature needs network support and may result in additional charges. Please contact your service provider for more information.

Responding to an Incoming Call While You’re on a Call

Drag  over  to answer the call. This puts the first caller on hold and answers the second call.

Switching Between Two Calls

Tap **FLASH**.

Setting Up a Conference Call

With this feature, you can talk to two people at the same time.

- 1. On the dialer screen, enter a number and tap .

- 2. Once you have established the connection, tap  and dial the second number. This puts the first caller on hold.
- 3. When you’re connected to the second party, tap **MERGE CALLS**.

If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all callers are disconnected.

To end the conference call, tap .

Adjusting Your Call Settings

Selecting Default Ringtone and Vibration

- 1. Press the **Home Key > **.
- 2. Press the **Menu Key > Settings**.
 - Touch **Phone ringtone** to select the default ringtone for incoming calls.
 - Touch **Vibrate pattern** to select the pattern of vibration.
 - Check **Vibrate when ringing** to enable vibration when the phone is ringing.

Setting Up Voicemail

- 1. Press the **Home Key > **.
- 2. Press the **Menu Key > Settings**.
- 3. Tap **Voicemail > Service** to select voicemail service provider. Your carrier is the default.
- 4. Tap **Setup** to edit the voicemail number if necessary.

Enabling/Disabling Phone Dial Pad Sound

1. Press the **Home Key** > .
2. Press the **Menu Key** > **Settings**.
3. Check or uncheck **Dial pad touch tones**.

Editing Quick Response to Rejected Callers

1. Press the **Home Key** > .
2. Press the **Menu Key** > **Settings** > **Quick responses**.
3. Tap the text message to edit it.

Setting Up TTY Mode

Select a TTY mode for your phone to work with a teletypewriter or turn TTY off.

1. Press the **Home Key** > .
2. Press the **Menu Key** > **Settings** > **TTY mode**.
3. Select one of the following options. Consult your teletypewriter manufacturer's manual if necessary.
 - **TTY Off:** Users who can hear and talk can disable TTY support.
 - **TTY Full:** Users who cannot talk or hear may use this mode to send and receive text messages through a TTY device.
 - **TTY HCO:** Users who can hear, but cannot talk, may use this mode to listen to conversation of the other party and respond via text messages.
 - **TTY VCO:** Users who can talk, but cannot hear, may use this mode to talk through the phone and receive responses via text messages.

Turning on Hearing Aid Compatibility

Your phone supports HAC (Hearing Aid Compatibility) function. When you turn on the hearing aid compatibility and use a hearing aid device with a telecoil in it to answer the phone, it will help you hear more clearly during a phone call.

1. Press the **Home Key** > .
2. Press the **Menu Key** > **Settings**.
3. Check **Hearing aids**.

Setting DTMF Tones

You can set the length of Dual-tone multi-frequency (DTMF) signal tones.

1. Press the **Home Key** > .
2. Press the **Menu Key** > **Settings** > **DTMF tones**.
3. Tap **Normal** or **Long**.

Setting Speed Dials

You can tap and hold the 1-9 keys from the dialer to call the corresponding speed dial number.

The **1 Key** is reserved to speed dial your voicemail.

To assign a speed dial key:

1. Press the **Home Key** > .
2. Press the **Menu Key** > **Settings** > **Speed dial**.
3. Tap a speed dial key.
4. Enter a phone number or tap  to select one from the contact list.
5. Tap **OK**.

Forwarding Incoming Calls

Call forwarding feature allows you to forward your incoming calls to another phone number.

1. Press the **Home Key** > .
2. Press the **Menu Key** > **Settings** > **Call forwarding**.
3. Tap an available option (**Always forward**, **Forward when busy**, or **Forward when unanswered**) to enable it. Tap **Cancel All Forward** to disable all forwarding.

Internet Call Settings

To add an Internet calling account:

1. Press the **Home Key** > .
2. Press the **Menu Key** > **Settings** > **SIP Accounts**.
3. Tap **ADD ACCOUNT**.
4. Follow the instructions from your Internet calling service provider to configure the settings for your account.
5. Tap **SAVE**.

To configure which calls use Internet calling:

You can configure your phone to place all calls using Internet calling (when a data network is available), just calls to Internet calling addresses, or to ask each time you place a call.

1. Press the **Home Key** > .
2. Press the **Menu Key** > **Settings** > **Use Internet calling**.
3. Tap the Internet calling option you want.

Configuring your phone to receive Internet calls:

By default, your phone is configured to make Internet calls, but not to ensure that you will receive them. However, you can configure your phone to listen for Internet calls made to an Internet calling account you have added to your phone.

1. Press the **Home Key** > .
2. Press the **Menu Key** > **Settings** > **SIP Accounts**.
3. Check **Receive incoming calls**. Checking this setting will reduce your battery life between charges.

Other Options

1. Press the **Home Key** > .
2. Press the **Menu Key** > **Settings** > **Additional settings**.
3. Tap **Voice privacy** to enable privacy mode. Tap **Plus code dialing setting** to set the plus code replacement for making an international call.

NOTE: Please contact your service provider to check whether the Voice privacy and Plus code features are available.

You can add contacts on your phone and synchronize them with the contacts in your Google account or other accounts that support contact syncing.

To see your contacts, press the **Home Key** > . From there, you can tap the tabs to quickly switch to the contact groups  or favorite contacts .

Checking Contact Details

1. Press the **Home Key** >  and tap the **All contacts** tab .
2. Scroll through the list to view all your contacts.
3. Tap a contact to view its details.

TIP: If you have a lot of contacts stored, you'll see a slider when you tap the right side of the screen. To go directly to a letter, tap and hold the slider and drag it to a letter.

Adding a New Contact

1. Press the **Home Key** >  and tap the **All contacts** tab .
2. Tap  to add a new contact.
3. Tap the account field to choose where to save the contact. If a sync account is selected, the contacts will be synced automatically with your account online.
4. Enter the contact name, phone numbers, email addresses, and other information.
5. Tap **DONE** to save the contact.

Setting Up Your Own Profile

You can create your own name card in your phone.

1. Press the **Home Key** >  and tap the **All contacts** tab .
2. Tap **Set up my profile** or your name, whichever is at the top of the contact list.
3. Press the **Menu Key** > **Edit**.
4. Edit your profile information and tap **DONE**.

Importing, Exporting, and Sharing Contacts

You can import/export contacts to/from your phone storage. This is especially useful when you need to transfer contacts between different devices. You can also quickly share your contacts using *Bluetooth*, Email, Messaging, etc.

Importing Contacts From the Phone Storage

1. Press the **Home Key** > .
2. Press the **Menu Key** > **Import/export** > **Import from phone storage**.
3. Select the vCard file(s) in the phone storage and tap **OK**.

Exporting Contacts to the Phone Storage

1. Press the **Home Key** > .
2. Press the **Menu Key** > **Import/export** > **Export to phone storage**.

3. The phone will prompt you with the name of the vCard file. Tap **OK** to create the file in the phone storage.

Sharing All Contacts

1. Press the **Home Key** >  and tap the **Contacts** tab .
2. Press the **Menu Key** > **Import/export** > **Share visible contacts**.
3. Choose how to share the contacts. Options depend on applications installed.

Working With Favorite Contacts

In the Favorites tab , you can find your favorite contacts and frequently used contacts.

Adding a Contact to Favorites

You can add the contacts you use frequently to Favorites so that you can find them quickly.

1. Press the **Home Key** >  and tap the **All contacts** tab .
2. Tap a contact and then tap  next to the contact name.

Removing a Contact From Favorites

1. Press the **Home Key** >  and tap the **Favorites** tab .
2. Tap a favorite contact and then tap  next to the contact name.

Working With Groups

Viewing Your Contact Groups

1. Press the **Home Key** >  and tap the **Groups** tab .
2. Scroll through the list to view the preset groups and any groups you have created.
3. Tap a group to view its members.

NOTE: To send messages to the group members, you can press the **Menu Key** > **Send group message** and select message recipients from the listed group members.

Setting Up a New Group

1. Press the **Home Key** >  and tap the **Groups** tab .
2. Tap  to create a new group.
3. If you have added contact accounts other than the phone, tap to choose an account for the new group.
4. Enter a group name.
5. Tap **Add member** and select the contacts you wish to be the group members.
6. Tap .
7. If desired, tap **Default** below **RINGTONE** or **NOTIFICATION RINGTONE** to set a special ringtone for incoming calls or messages from the group members.
8. Tap **DONE**.

Deleting a Group

1. Press the **Home Key** >  and tap the **Groups** tab .
2. Tap a group and then press the **Menu Key** > **Disband group**.
3. Tap **OK** to disband the group. The contacts in the group will not be deleted.

Editing a Group

1. Press the **Home Key** >  and tap the **Groups** tab .
2. Tap a group and then press the **Menu Key**.
3. Tap **Edit group** to edit the group name, add more members, or change the ringtones. Or tap **Select item(s)** to select the members you don't need and remove them from the group.

Searching for a Contact

1. Press the **Home Key** > .
2. Tap  at the top of the screen.
3. Input the contact name you want to search for. The contacts matched will be listed.

Editing Contacts

Editing Contact Details

1. Press the **Home Key** > .
2. Tap a contact and press the **Menu Key** > **Edit**.

3. Edit the contact and tap **DONE**.

Setting a Ringtone for a Contact

Assign a special ringtone to a contact, so you know who is calling when you hear the ringtone.

1. Press the **Home Key** > .
2. Tap a contact and press the **Menu Key** > **Set ringtone**.
3. Select a ringtone you like and tap **OK**.

Joining Contacts

As your phone synchronizes with multiple online accounts, you may see duplicate entries for the same contact. You can merge all the separate information of a contact into one entry in the contacts list.

1. Press the **Home Key** > .
2. Tap a contact entry to display the contact's details.
3. Press the **Menu Key** > **Edit** and then press the **Menu Key** > **Join**.
4. Tap the contact whose information you want to join with the first entry.

The information from the second contact is added to the first, and the second contact is no longer displayed in the Contacts list.

You can repeat these steps to join another contact to the main contact.

Separating Contact Information

If contact information from different sources was joined in error, you can separate the information back into individual contacts on your phone.

1. Press the **Home Key** > .
2. Tap a contact entry you have merged and want to separate.
3. Press the **Menu Key** > **Edit** and then press the **Menu Key** > **Separate**.
4. Tap **OK** to confirm.

Deleting a Contact

1. Press the **Home Key** > .
2. Tap a contact you want to delete and then press the **Menu Key** > **Delete**.
3. Tap **OK** to confirm.

Deleting Several Contacts

1. Press the **Home Key** > .
2. Tap and hold a contact you want to delete.
3. Tap to select the contacts you want to remove and then tap  > **OK**.

Accounts

Adding or Removing Accounts

You can add multiple Google accounts and Microsoft Exchange ActiveSync® accounts. You may also add other kinds of accounts, depending on the apps installed on your phone.

Adding an Account

1. Press the **Home Key > Menu Key > System settings > Add account**.
2. Tap the type of account you want to add.
3. Follow the on-screen steps to enter the information about the account. Most accounts require a username and password, but the details may vary. You may also need to obtain some information from IT support or your system administrator.

When the account is successfully added, the account type is displayed in the **ACCOUNTS** list.

Removing an Account

Removing an account will delete it and all information associated with it from your phone, such as emails and contacts.

1. Press the **Home Key > Menu Key > System settings** and tap an account type.
2. If you have more than one account of that type, tap the account you'd like to remove.
3. Press the **Menu Key > Remove account > Remove account**.

Configuring Account Sync

Configuring Auto-Sync Settings

1. Press the **Home Key > Menu Key > System settings > Data usage**.
2. Press the **Menu Key** and check or uncheck **Auto-sync data**.
 - When automatic sync is turned on, changes you make to information on your phone or on the web are automatically synced with each other.
 - When automatic sync is turned off, you need to sync manually to collect emails, updates, or other recent information.

Syncing Manually

1. Press the **Home Key > Menu Key > System settings**.
2. In the **ACCOUNTS** section, tap the account category and then the account you want to sync.
3. Press the **Menu Key > Sync now**.

Changing an Account's Sync Settings

1. Press the **Home Key > Menu Key > System settings**.
2. In the **ACCOUNTS** section, tap the account category and then the account. The Sync screen appears, showing a list of information the account can sync.
3. Check or uncheck items as you need. Checked types of information on the phone and the web will be kept in sync when auto-sync is turned on.

Email

Press the **Home Key > **. Use it to receive and send emails from your webmail or other accounts, using POP3 or IMAP, or access your Exchange ActiveSync account for your corporate email needs.

Setting Up the First Email Account

1. When you open **Email** for the first time, enter your email address and password.
2. Tap **Next** to let the phone retrieve the network parameters automatically.

NOTE: You can also enter these details manually by tapping **Manual setup** or when automatic setup fails.
3. Follow the on-screen instructions to finish the setup.

Your phone will show the inbox of the email account and start to download email messages.

Checking Your Emails

Your phone can automatically check for new emails at the interval you set when setting up the account.

You can also check new emails manually by tapping . Tap **Load more messages** at the bottom of the email list to download earlier messages.

Responding to an Email

You can reply to or forward a message that you receive. You can also delete messages and manage them in other ways.

Replying to or Forwarding an Email

1. Open the email you want to reply to or forward from the Inbox.
2. Choose one of the following:
 - To reply to the sender, tap  at the bottom of the screen.
 - To reply to the sender and all recipients of the original message, tap  at the bottom of the screen.
 - To forward the message, tap  at the bottom of the screen.
3. Edit your message and tap .

Marking an Email as Unread

You can return a read email to the unread state—for example, to remind yourself to read it again later. You can also mark a batch of emails as unread.

- While reading a message, press the **Menu Key > Mark as unread**.
- While in a message list (for instance, the inbox), tap the checkboxes before the messages and then tap .

Deleting an Email

You can delete an email from its folder. You can also delete a batch of emails.

- While reading a message, tap  > **OK**.
- While in a message list (for instance, the inbox), tap the checkboxes in front of the messages and then tap  > **OK**.

Writing and Sending an Email

1. Open your email Inbox and tap .

NOTE: If you have more than one email account added on the phone, tap the sender line to select the account you want to use for sending the message.

2. Enter a contact name or email address in the **To** field. Separate each recipient with a comma. You can also tap  to select recipients from your contacts.
3. Enter the email subject and compose the email text.
4. Press the **Menu Key** > **Attach file** to add audio files, images, videos, and other types of files as attachments.
5. Tap  at the top right of the screen to send the message.

Adding a Signature to Your Emails

You can set a few lines of plain text as a signature for every outgoing email message from an account, such as your name and contact information.

1. Open the **Email** app.
2. Press the **Menu Key** > **Settings** and select the account you want to add a signature to.
3. Tap **Signature** and enter the text.
4. Tap **OK**.

Adding and Editing Email Accounts

Adding an Email Account

After setting up your first email account (see *Email – Setting Up the First Email Account*), you can add more email accounts and manage them separately.

1. Open the **Email** app.
2. Press the **Menu Key** > **Settings** and tap **ADD ACCOUNT** at the top right of the screen.
3. Set up the account as you did with the first one.

Editing an Email Account

You can change a number of settings for an account, including how often you check for email, how you're notified of new emails, and details about the servers the account uses to send and receive emails.

1. Open the **Email** app.
2. Press the **Menu Key** > **Settings** and tap the account whose settings you want to change.
3. Make the changes you want and press the **Back Key** when you're finished.

Removing an Email Account

1. Open the **Email** app.
2. Press the **Menu Key** > **Settings** and tap the account you want to remove.
3. Tap **Remove account** > **OK**.

Changing General Email Settings

General settings apply to all email accounts you add.

1. Open the **Email** app.
2. Press the **Menu Key** > **Settings** > **General**.
3. Make the changes you want and press the **Back Key** when you're finished.

After you sign in to your Google account on the phone, you can send and retrieve Gmail messages with the **Gmail** app.

NOTE: This feature may not be available in certain regions or with certain service providers.

Opening Your Gmail Inbox

Press the **Home Key** >  and select **Gmail**. The Inbox screen appears.

If you haven't signed in, you will be prompted to do so or create a new account.

Press the **Menu Key** > **Refresh** to refresh your Inbox and download new messages. To search for Gmail messages, tap .

Switching Accounts

Gmail displays conversations, messages, and settings from one Google account at a time. If you have signed in to more than one Google account on your phone, you can switch accounts and view information in each account.

1. From your Inbox, tap the current account at the top of the screen.
2. From the drop-down menu, tap the account you want to see. The account's Inbox will open.

Writing and Sending a Message

1. Open your Gmail Inbox and switch to the account you want to use for sending the message.
2. Tap .
3. Enter a contact name or email address in the **To** field. Separate each recipient with a comma.
4. Enter the email subject and compose the email text.
5. To attach a file, press the **Menu Key** > **Attach file** and select a file.
6. Tap  at the top right of the screen to send the message.

Adding a Signature to Your Gmail Messages

You can set a few lines of plain text as a signature for every outgoing Gmail message. The signature you set on the phone is independent of the signature you use for Gmail on the web.

1. Open the **Gmail** app.
2. Press the **Menu Key** > **Settings** and select the account you want to add a signature to.
3. Tap **Signature** and enter the text.
4. Tap **OK**.

Replying to or Forwarding a Message

1. Open the Gmail message you want to reply to or forward to another person.
2. Choose one of the following:
 - Reply to the sender, tap  in the message header.
 - Reply to the sender and all recipients of the original message, tap in the message header  > **Reply all**.
 - Forward the message, tap in the message header  > **Forward**.
3. Edit your message and tap .

Working With Received Attachments

When a message has an attachment, Gmail displays information about it in the **ATTACHMENTS** section of the email.

Depending on the attachment type, the applications installed on your phone as well as your settings, you may tap  to preview, view, or save the attachment.

TIP: For documents with multiple pages, tapping the **Preview** option will only download the pages you view, while tapping other options may download the entire file and cost more time and data.

Searching for Messages

You can search for messages using words that appear in addresses, subjects, labels, or contents.

NOTE: If you search while the phone doesn't have an active Internet connection, only messages synchronized onto your phone can be searched.

1. Open the **Gmail** app and tap .
2. Enter the words to search for and tap the search key on the screen keyboard.

As you type, suggestions may appear below the search field. Tap a suggestion to search for it.

3. In the search results, tap the message you need and work with it just as you would with any Gmail message.

 
Working With Labels

Message labels include both labels you create and default labels such as **Sent**, **Starred**, and **Outbox**. You can organize your emails by labeling them or adding stars to them. Labels also help you sort your messages, just like folders.

Gmail

Adding or Changing a Label

1. Open the **Gmail** app and tap in the message list the sender images next to the messages you want to label.

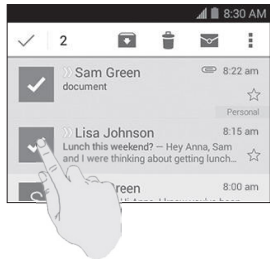

2. Tap > **Change labels**.
3. Check or uncheck labels in the new screen and tap **OK**.

Adding Stars to Messages

1. Open the **Gmail** app and tap in the message list the sender images next to the messages you want to star.
2. Tap > **Add star**.

Viewing Messages by Label

1. Open the **Gmail** app and tap the current account at the top of the screen without checking any message.
2. Tap a label below **ALL LABELS** to view messages with that label.

Changing Gmail Settings

Press the **Menu Key** > **Settings** in any Gmail screen to change **General settings**, which apply to all Gmail accounts, or other settings that only apply to specific accounts.

Messaging

You can use Messaging to exchange text messages (SMS) and multimedia messages (MMS).

Opening the Messaging Screen

Press the **Home Key** > .

The **Messaging** screen opens, where you can create a new message, search for messages, or open an ongoing message thread.

- Tap to write a new text or multimedia message.
- Tap to search for a message using keywords.
- Tap an existing message thread to open the conversation you've had with a certain number.

Sending a Text Message

1. On the **Messaging** screen, tap at the bottom.
2. Add recipients in one of the following ways:
 - Tap the **To** field and manually enter the recipient's number or the contact name. If the phone presents a few suggestions, tap the one you want to add.
 - Select recipients from your contacts by tapping .
3. Tap the **Type message** field and enter the content of your text message.
4. If you want to send a multimedia message, tap to attach a file or slideshow to the message.
5. Tap .

Replying to a Message

Messages you receive are appended to existing threads of the same number. If the new message comes from a new number, a new thread is created.

1. On the **Messaging** screen, tap the thread that has the message you want to reply to.
2. Type your reply in the text box at the bottom. You can tap if you want to reply with an MMS.
3. Tap .

Forwarding a Message

1. On the **Messaging** screen, tap the thread that has the message you want to forward.
2. Tap and hold the message.
3. Tap **Forward** in the menu that opens.
4. Enter a recipient for the message and edit the content if you want.
5. Tap .

Viewing Details About a Message

1. Tap a message in a thread.

Messaging

Deleting Messages or Threads

Deleting Messages in a Thread

1. On the **Messaging** screen, tap a thread.
2. Press the **Menu Key** > **Select item(s)**.
3. Tap the messages you want to delete. The ones you tap will have a check in the box in front of them.
4. Tap  at the bottom.
5. Tap **OK**.

Delete Message Threads

1. On the **Messaging** screen, tap and hold one thread you want to delete.
2. If there are more threads you want to delete, tap them one by one.
3. Tap  at the bottom.
4. Tap **OK**.

Changing Message Settings

Press the **Menu Key** > **Settings** in the Messaging screen to change Messaging settings.

Calendar

Calendar on the phone works with the web-based Google Calendar™ service for creating and managing events, meetings, and appointments. It also works with the Microsoft Exchange ActiveSync calendar once you sign into your Exchange account on the phone.

To open Calendar, press the **Home Key** >  and select **Calendar**.

Viewing Your Calendars and Events

Selecting Visible Calendars

1. Open the **Calendar** app.
2. Press the **Menu Key** > **Calendars to display**.
3. In the new screen, tap the calendars to check the calendars you want to see or uncheck the calendars you'd like to hide.

Events from hidden calendars are not shown in the Calendar app.

Changing Calendar Views

You can view your calendars in different forms. The app offers four views: Month, Week, Day, and Agenda.

To change calendar views, tap **Month**, **Week**, **Day**, and **Agenda** shown at the bottom.

You can also change to Day view from Month view by tapping any day in the grid.



TIPS:

- In Month view, swipe vertically to see earlier months and later months.
- In Week or Day view, swipe horizontally to see earlier weeks/days and later weeks/days.
- When you are viewing earlier or later days, weeks, or months, tap  at the top to quickly switch to today.

Viewing Event Details

In Agenda, Day, or Week view, tap an event to view its details.

In Month view, tap a day to switch to Day view. Then tap an event to view its details.

Calendar

Creating an Event

1. In any Calendar view, tap  at the top to open an event details screen for a new event.
You can also tap a spot in Day or Week view twice to add an event to that time spot.
2. Add details about the event.
Enter a name, location, time span, and other additional details about the event.
NOTE: If you have more than one calendar, you can choose the calendar to which to add the event by tapping the current calendar above the **Event name** box.
3. Tap **SAVE** at the top of the screen to save the new event.

Editing or Deleting an Event

1. Find the event you want to edit or delete.
2. Open its details screen (see *Viewing Your Calendars and Events – Viewing Event Details*).
3. Choose one of the following options:
 - To edit the event, tap  at the bottom of the screen. Tap **SAVE** to save your changes.
 - To delete the event, tap  at the bottom of the screen and then tap **OK**.
 - To share the event, tap  and choose an option.
 - To forward the event, tap .

Changing Calendar Settings

To change Calendar settings, open a Calendar view (Day, Week, Month, or Agenda) and then press the **Menu Key > Settings**.

You can change General settings, which apply to all accounts, or other settings that only apply to specific accounts.

Google+

Google+ is a social networking service offered by Google. The Google+ application on your phone enables you to manage your data, chat with online contacts, organize them in different circles, and share your selected information.

Press the **Home Key** >  and select **Google+**. The first time you open the Google+ app, set up your profile and select the contact sync and photo backup options.

- **Home:** See posts people have shared with you, a circle you are in, or everyone.
- **People:** Find people to add to your Google+ circles, create new circles, view and organize people into circles based on your relationships. You can also follow content posted by people you find interesting.
- **Photos:** View photos you uploaded, photos of you, photos from your posts and more.
- **Communities:** Search and join all kinds of online communities, where people gather for the sharing and discussion of a common topic.
- **Locations:** See your friends' locations on the map and configure your location sharing settings.
- **Events:** Manage your social calendar. You can add events, invite people, and then share photos in real time from the event.
- **Search:** Search for content posted on Google+.

Touch the headshot image next to your account name to view and edit your basic information, view your posts and photos.

NOTE: For a detailed guide to Google+, open Google+ and press the **Menu Key > Help** to view the online instructions.

Use Browser to view web pages and search for information.

Opening the Browser

Press the **Home Key** > . The last web page you were viewing is displayed. If you have not used Browser recently, your home page opens.

Browser also opens when you tap a web link—for example, in an email or a text message.

Opening a Web Page or Searching the Web

1. Open the **Browser** app.
2. Tap the address box at the top of the web page. If the address box isn't visible, swipe down a little to show it.
3. Enter the address (URL) of a web page. Or, enter terms you want to search for. You can also tap  to search by voice.
4. Tap a URL or search suggestion or tap **Go** on the keyboard to open the web page or search results.

TIP: Tap  to open a new web page in a new tab.

Setting the Home Page

Your home page opens when you open a new browser tab, when you start Browser after restarting your phone, or after not using the app for a while.

1. Open the page you want to set as your home page.

2. Press the **Menu Key** > **Settings** > **General** > **Set home page**.
3. Tap **Current page** or one of the following options:
 - **Blank page:** Open browser tab without opening a web page by default. This can make new Browser tabs open more quickly.
 - **Default page:** Set the factory default URL as the home page.
 - **Most visited sites:** Every new browser tab displays a list of your frequently visited sites for you to choose from.
 - **Site Navigation:** Provide a series of sites for you to view.
 - **Other:** Type a URL as the home page.

Get Information About the Current Page

Press the **Menu Key** > **Page info**.

Working With an Opened Page

While viewing most web pages, you can do the following operations:

- **Scroll:** Swipe the screen in any direction.
- **Zoom out:** Tap the screen with two fingers or pinch them together.
- **Zoom in:** Tap the screen with two fingers or spread them apart.

- **Go back:** Tap  to return to the page you've viewed previously in the same window.
- **Go forward:** Tap .
- **Refresh the page:** Tap  beside the address bar.
- **Find text on the page:** Press the **Menu Key** > **Find on page** and type the terms you want to search for.
- **Send the page URL to friends:** Press the **Menu Key** > **Share page** and select how you want to send the URL.
- **Follow a link:** Tap a link on the web page to open it.
- **Save the page for offline reading:** Press the **Menu Key** > **Save for offline reading**. You can press the **Menu Key** > **Bookmarks** > **SAVED PAGES** to read them.

TIP: Besides links, Browser also recognizes some phone numbers, addresses, and similar information for you to act on. Try tapping them and see what happens.

Using Multiple Browser Tabs

You can open several web pages at the same time (one page in each tab) and switch between them freely.

Opening a New Browser Tab

Tap .

Switching Between Tabs

1. Tap  at the bottom of the screen.
2. Swipe vertically to scroll through the list of opened tabs.
3. Tap the thumbnail of the tab you want to open.

TIP: Swipe a thumbnail horizontally or tap its **X** to close the tab.

Downloading Files

Tap and hold an image or a link to a file or to another web page. In the menu that opens, tap **Save image** or **Save link**.

The downloaded files are saved to your phone or the memory card. You can view or open them in the **Downloads** app ( > **Downloads**).

Using Bookmarks

Save web URLs as bookmarks to open them easily in the future.

To open a bookmark, press the **Menu Key** > **Bookmarks** in a browser tab and then tap the bookmark.

Browser

Bookmarking a Web Page

1. Open the web page.
2. Press the **Menu Key** > **Save to bookmarks**.
3. Edit the bookmark label and address if necessary, or choose a different account. Tap the name beside **Add to** to change the place where the bookmark will be stored.
4. Tap **OK**.

Editing a Bookmark

1. Press the **Menu Key** > **Bookmarks**.
2. Tap and hold the bookmark to edit.
3. Tap **Edit bookmark**.
4. Edit the label, address, account, or location of the bookmark in the dialog that opens.
5. Tap **OK**.

NOTE: Preinstalled bookmarks may not be edited.

Deleting a Bookmark

1. Press the **Menu Key** > **Bookmarks**.
2. Tap and hold the bookmark to delete.
3. Tap **Delete bookmark**.
4. Tap **OK**.

NOTE: Preinstalled bookmarks may not be deleted.

Viewing Your Browsing History

1. Open the Browser app and press the **Menu Key** > **Bookmarks**.
2. Tap the **HISTORY** tab.
3. Tap a time span to view the web pages you browsed during that time. You can tap an item to reopen the web page.

Changing Browser Settings

You can configure a number of Browser settings to customize the way you browse the web, including several that you can use to control your privacy.

To open the Browser settings screen, press the **Menu Key** > **Settings**.

Google Maps

Activating Location Services

To use Google Maps, and to find your location on Google Maps, you must have location services turned on on your phone.

1. Press the **Home Key** > **Menu Key** > **System settings** > **Location access**.
2. Select the location options you want to use.
 - **Use GPS satellites:** Use GPS satellites to determine your location.
 - **Wi-Fi & mobile network location:** Use Google's Wi-Fi and mobile networks data to determine your approximate location.

NOTE: To let Google apps such as Maps and Google+ access your location, you need to enable location access for Google apps. Press the **Home Key** >  > **Google Settings** > **Location** and check **Access location**.

Getting Your Location

1. Press the **Home Key** >  and select **Maps**.
2. Tap  at the bottom of the screen.

The map centers on a dot and arrow that indicate your location and the direction the phone is facing.

Searching for a Location

1. Press the **Home Key** >  and select **Maps**.
2. Tap the **Search** field.
3. Enter the address or the type of business or

establishment you're looking for in the search box at the top. If suitable suggestions appear below the search box, tap one to search for it.

TIP: You can also tap  on the keyboard to use voice search.

4. Tap the search icon on the keyboard. Then tap  to view a list of search results, or tap the screen to view the map of search results, which are indicated by red dots.
5. Tap a dot to display a card with more information at the bottom of the screen.
6. Tap the card for directions to the location, street view, and more.

Getting Directions to Your Destination

Maps can provide directions for travel by foot, public transportation, or car.

1. Press the **Home Key** >  and select **Maps**.
2. Tap  beside the search field.
3. Enter a start and end point and select the mode of transportation (car, public transit, bicycle, or walking). If you have enabled My Location, this will appear in the start point field by default.
4. As suggested routes appear, tap one to see it on the map. Tap the estimated travel time to see the route directions in a list.

NOTE: Tap  to use Google Maps Navigation (beta) and get turn-by-turn voice directions.

Google Maps

Searching for Local Places

Google Maps helps you find all kinds of businesses and establishments around you. You can rate these places and get recommendations.

1. Press the **Home Key** >  and select **Maps**.
2. Navigate the map view to the area you'd like to explore. You can explore nearby locations or pan the map to another location.
3. Tap the **Search** field.
4. Tap the **Explore nearby** card and choose one option in the new screen. Results will appear on cards.
5. Tap a location to see it on the map or get directions.

You can also slide up the bottom card to find out more information, such as the street address, website, and street view, or to call that place, save it to your Google account, or share it with others.

NOTE: The “Explore nearby” feature is not available for all areas.

Google Now and Search

You can search for information on the web or on your phone using Google Search, get information when you need with Google Now without searching, or perform certain tasks by speaking.

Enabling Google Now

Google Now gets you just the right information at just the right time. It tells you today's weather before you start your day, how much traffic to expect before you leave for work, and more. You can turn Google Now on or off from within the Google app.

The first time you open the Google app, you'll see a brief explanation of how Google Now works. Tap

Next > YES, I'M IN.

1. Press the **Home Key** >  > **Google**.
2. Press the **Menu Key** > **Settings**.
3. Slide the **ON/OFF** switch next to **Google Now**.

Searching With Text

1. Tap the Google Search box at the top of the Home Screen to start the **Search** app.
2. Enter the terms you want to search for and tap , or tap a search suggestion.

Searching by Speaking

1. Tap the microphone icon to the right of the search box.
2. Speak the terms you want to search for. When you're finished speaking, your speech is analyzed and the search is initiated.

If Google Search didn't quite understand what you said, you are prompted to repeat your search terms. Tap  or say “OK Google” and repeat your search.

Changing Search and Voice Search Settings

Open the **Google** app and press the **Menu Key** > **Settings** to set Google Now, notifications, voice and phone search options, and to change privacy settings for your account.

To set Voice Search settings, press the **Home Key** > **Menu Key** > **System settings** > **Language & input** > **Voice Search**.

You can take photos and record videos. Photos and videos are stored on the phone’s memory card or to the phone’s internal storage. You can copy them to your computer or access them in the Gallery app.

Capturing a Photo

- 1. Press the **Home Key** >  > **Camera**.
- 2. Aim the camera at the subject and make any necessary adjustments.

TIP: Pinch or pan with two fingers on the screen or press and hold the **Volume Up/Down Keys** to zoom in or out.



Number	Function
1	Switch between the front-facing and rear-facing cameras.
2	Turn the flash on or off.
3	Select a color effect.
4	Change camera modes.
5	Change camera settings.
6	View captured photos and videos.
7	Capture a photo.
8	Switch to the camcorder mode.

- 3. Lightly tap .

WARNING: Keep a safe distance when using the flash. Do not point the flash toward the eyes of people or animals.

Customizing Camera Settings

Before taking a photo, you can tap  to open the following camera setting options:

Grid	Show or hide the composition lines.
Self-timer	Set a delay before a picture is taken.
Shutter Tones	Select your preferred shutter tone.
Picture Size	Adjust picture size.
Face detection	Turn on or off face detection, which helps you capture people’s faces in a picture.
Auto-review	Adjust the review time.
Image Settings	Adjust exposure and brightness.
White Balance	Select how the camera adjusts colors in different kinds of light to achieve the most natural looking colors for your shots, or allow the camera to adjust the white balance automatically.
ISO	Adjust the ISO.
Anti-Band	Set the anti-banding value or leave it on Auto. This feature can avoid stripes on pictures you take of TV or computer screens.
Geo-tag	Set whether your location information is stored with each photo you take.
Storage location	Open the Storage settings screen and change the save location for captured photos and videos.
Restore Defaults	Restore camera to default settings.

Recording a Video

- 1. Press the **Home Key** >  > **Camera**.
- 2. Switch to camcorder mode by sliding the  switch.
- 3. Aim the camera at the subject and make any necessary adjustments.

TIP: Pinch or pan with two fingers on the screen or press and hold the **Volume Up/Down Keys** to zoom in or out.



Number	Function
1	Switch between the front-facing and rear-facing cameras.
2	Turn the flash on or off.
3	Select a color effect.
4	Change camcorder settings.
5	View captured photos and videos.
6	Record a video clip.
7	Switch to the camera.

- 4. Tap  to start and  to stop recording.

TIP: While recording is in progress, you can tap  to save the frame as a photo.

Customizing Camcorder Settings

Before recording a video, you can tap  to open the following camcorder setting options:

Video Quality	Adjust video quality.
Time Lapse	Set the time interval between each frame when you shoot time-lapse videos.
White Balance	Select how the camera adjusts colors in different kinds of light to achieve the most natural looking colors for your videos, or allow the camera to adjust the white balance automatically.
Geo-tag	Set whether your location information is stored with each video you record.
Silent Camcorder	Record video without sound.
Storage location	Open the Storage settings screen and change the save location for captured photos and videos.
Restore Defaults	Restore default settings.

Opening the Gallery

Press the **Home Key** >  and select **Gallery** to view albums of your pictures and videos.

Working With Albums

When you open the Gallery, all pictures and videos on your phone are displayed in a number of albums.

Viewing album contents

Tap an album to view the pictures and videos it contains.

Sharing Albums

- 1. Tap and hold an album until it is selected.
- 2. Tap more albums that you want to share.
- 3. Tap  at the top of the screen and select how you want to share the albums.

Deleting Albums

- 1. Tap and hold an album until it is selected.
- 2. Tap more albums that you want to delete.
- 3. Tap  > **OK**.

Working With Pictures

Tap a picture in an album to view the picture in full screen. Double-tap the picture, or pinch two fingers together or spread them apart to zoom out or in. Slide left or right to view other pictures in the album.



Number	Function
1	Tap to return to the album, where all its contents are displayed in a grid.
2	Delete the picture.
3	Edit the picture.
4	Set the picture as wallpaper or a contact photo.
5	Share the picture.
6	View images in a slideshow.

Press the **Menu Key** to rotate the picture, view picture details, rename the picture, or change slideshow settings.

NOTE: Not all the options may be available for certain albums or pictures.

Retouching Your Pictures

You can edit any photos you took and some other pictures in Gallery. The changed picture is saved in the same album as the original one, while the original is never affected.

- 1. While viewing a picture in full screen, tap the screen and tap **Edit** to open the PhotoEditor interface.
- 2. Tap the icons along the bottom of the screen to edit the picture.

	Apply filters.
	Crop, rotate, straighten, or flip (mirror) the picture.
	Adjust saturation, hue, sharpness, and other color options.
	Apply a frame to the picture.
	Decorate people in the picture with comical mustaches, glasses, hats and more.
	Apply a blur effect to the picture.
	Select a color and draw anything on the picture.
	Add some text to the picture and adjust its effect.

- 3. Tap  to keep the change or  to cancel it.
- 4. Tap **Save**. The photo will be saved as a new picture in the same album.

NOTE: Tap **History** in the PhotoEditor screen to see the edits you have made and undo or redo them.

Sharing Your Pictures

- 1. Tap an album in **Gallery** and then tap a picture.
- 2. Tap  at the bottom of the screen. If the icon is invisible, tap the screen first.
- 3. Select how you want to share the picture.

Working With Videos

Playing Videos

- 1. Tap an album in **Gallery** and then tap the thumbnail of a video.
- 2. Tap  at the center to start playing.
- 3. Tap the video to view the playback controls.

TIP: You can tap  to play the video in a small floating window and continue with other tasks on the phone.

Sharing Videos

- 1. Tap an album in **Gallery** and then tap the thumbnail of a video.
- 2. Tap  at the bottom of the screen. If the icon is invisible, tap the screen first.
- 3. Select how you want to share the video.

Press the **Home Key** >  and select **Music** to play audio files stored on your phone. Music supports a wide variety of audio formats, so it can play music you purchase from online stores, music you copy from your CD collection, and so on.

Copying Music Files to Your Phone

Before using Music, you need to copy audio files from your computer to your phone’s memory card.

Copying From a Computer

- 1. Connect your phone and the computer with a USB cable.
- 2. Tap **Media device (MTP)** to browse the files on the phone storage and the microSDXC card.
- 3. Copy the music file from the PC and paste it to the phone storage or microSDXC card.

Downloading From the Internet

You can download music files when browsing web pages (see *Browser – Downloading Files*).

Receiving via Bluetooth

You can receive music files from other devices via *Bluetooth* (see *Connecting to Networks and Devices – Connecting to Bluetooth Devices – Receive Data via Bluetooth*).

Viewing Your Music Library

Press the **Home Key** >  and select **Music** and your music library is displayed. All your audio files are catalogued according to the information stored in the files.

Tap the tabs at the top of the screen to view your music library organized by **Albums**, **Artists**, **Songs**, **Playlists**, **Folders**, or **Genres**. You can also tap **RECENTLY PLAYED** or **FAVORITE** to browse songs you recently played or you have added as favorites.

NOTE: If an audio file is being played, its summary information is displayed at the bottom of the screen. Tap  to open the playback screen.

Setting a Song as the Default Ringtone

The song will be used as the ringtone for all incoming calls, except those from contacts you have assigned special ringtones to (see *People – Editing Contacts – Setting a Ringtone for a Contact*).

- 1. Press the **Home Key** >  and select **Music** to see the music library.
- 2. Tap  next to a song in any list.
- 3. In the menu that opens, tap **Use as ringtone**.

 
TIP: If the song is being played, you can press the **Menu Key** > **Use as ringtone** in the playback screen.

Deleting a Song

- 1. Press the **Home Key** >  and select **Music** to see the music library.
- 2. Tap  next to a song in any list.
- 3. In the menu that opens, tap **Delete** > **OK**.

Playing Music

Tap a song in the music library to listen to it. The following playback screen appears:

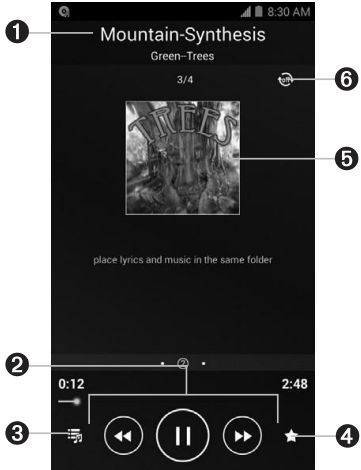

Number	Function
1	Song, album, and artist information.
2	Playback control. Skip songs or pause and resume playback. Drag the slider to jump to any part of the song.
3	Tap to return to the music library.
4	Add the song to your favorites.
5	Album artwork and lyrics (if available).
6	Tap to shuffle the songs in the playlist or toggle repeat modes.

Managing Playlists

Create playlists to organize your music files into sets of songs, so that you can play the songs you like in the order you prefer.

Creating a Playlist

- 1. Tap  next to the song in the music library.
- 2. In the menu that opens, tap **Add to playlist**.
- 3. Tap **New**.
- 4. Type the playlist name and tap **Save**.

The playlist is created and the song you selected is added to the playlist.

Adding a Song to a Playlist

- 1. Tap  next to the song in the music library.
- 2. In the menu that opens, tap **Add to playlist**.
- 3. Tap the name of the playlist you want the song added to.

Music

Removing a Song From a Playlist

- 1. Open a playlist.
- 2. Tap and hold the song or songs you want to remove.
- 3. Tap .

Deleting or Renaming a Playlist

- 1. Tap the **Playlists** tab in the music library to see all the playlists.
- 2. Tap  next to a playlist and tap **Rename Playlist** or **Delete Playlist** in the menu that opens.

 
Play Music

The Play Music app  works with Google Music, Google’s online music store and streaming service. You can stream via mobile data or Wi-Fi and listen to your favorite songs that you’ve added to your online Google Music library. You can also play audio files you’ve copied directly to your phone from a computer.

NOTE: The availability of Google Music is dependent on your region. If it is not available, or you don’t have a mobile data or Wi-Fi connection, you can only play music stored on your phone.

Playing Your Music

- 1. Press the **Home Key** >  and select **Play Music**. If you are prompted, select an account to access its online music library.
The app searches your online library and your phone for music and playlists before displaying your combined music library, organized by **Genres, Artists, Albums, and Songs**. Tap  > **My Library** to view your library or tap  > **Playlists** to view existing playlists. To change views of your library, swipe left or right when holding the phone upright, or tap the view name at the top left of the screen when holding the phone on its side.
- 2. Tap a song to play it. When the song is playing, tap the summary information at the bottom to display the playback screen.

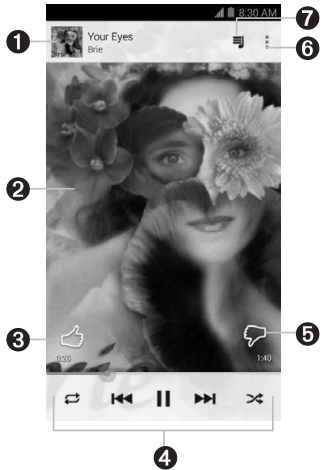

Number	Function
1	Song and artist information. Tap or drag down to return to the music library.
2	Album artwork.
3	Give the song a thumbs up.
4	Playback control. Skip songs, pause and resume playback, use shuffle or repeat. Drag the progress bar to jump to any part of the song.
5	Give the song a thumbs down.
6	View more options.
7	View the current playlist (queue).

Play Music

You can still control the music when you are not in the playback screen.

- In the **Play Music** app, tap the summary information at the bottom of the screen to restore the playback screen.
- In other apps, flick down on the Notification Panel. Tap the song title to restore the playback screen, or just pause/resume playback or skip to the next/previous song.
- When the screen is locked, the song information and playback controls are displayed on top of the screen. You can pause/resume playback or skip songs.

Managing Playlists

Create playlists to organize your music files into sets of songs so that you can play the songs you like in the order you prefer. To view all your playlists, tap  > **Playlists**.

- Tap  > **Add to playlist** next to a song or a playlist to add it to a playlist or create a new playlist.
- Tap  > **Delete** next to a playlist to delete the playlist.
- Tap a playlist to view its content. You can tap  > **Remove from playlist** next to the song you want to remove, or drag  to the left of each song to rearrange its order in the playlist.

Video Player

Use the Video Player to play various kinds of videos.

Opening the Video Library

Press the **Home Key** >  and select **Video Player** to view your video library. Tap  to search the available videos.

Playing and Controlling Videos

- Tap a video in the video library to play it. Rotate the phone on its side to watch the video in landscape view.
- Tap the video to show the playback controls. You can pause and resume the playback or jump to any part of the video. You can also exit the video by pressing the **Back Key**.

NOTE: While playing the video, touch the **Menu Key** > **SRS Setting** to configure SRS sound effects.

Managing Video Files

Deleting Videos

1. Tap and hold a video in the video library to select it.
2. To remove more videos, tap them.
3. Tap  at the bottom left of the screen.
4. Tap **OK**.

Sharing Videos

1. Tap and hold a video in the video library to select it.
2. To share more videos, tap them.
3. Tap  at the bottom right of the screen and select how you want to share them.

Renaming a Video

1. Tap  next to the video you want to rename.
2. Tap **Rename**.
3. Type the new video name and tap **OK**.

Viewing Details of a Video

1. Tap  next to a video.
2. Tap **Details**.

To Save Part of the Video as a New File

1. Tap the video to start playing.
2. Tap the **Menu Key** > **Trim**.
3. Drag the tabs on the timeline of the video to select the start and end points of the new video.
4. Touch the scissors icon at the bottom of the screen to save the new video.

Sound Recorder

Sound Recorder enables you to record voice memos and listen to them whenever you like.

Recording a Voice Memo

1. Press the **Home Key** >  and select **Sound Recorder**.
2. Tap  to start recording. Tap  > **OK** to cancel recording if you change your mind. Tap  to pause and  to continue recording.
3. Tap  to stop recording. The memo is automatically saved.

If you don't want to save the memo after recording it, tap  > **OK** to delete it.

Playing a Voice Memo

Playing a Memo You Just Recorded

Tap  at the bottom of the screen.

Playing Any Saved Memo

1. Tap  at the top right of the screen to see all recordings.
2. Tap the title of a memo to play it.

NOTE: You can also tap  at the right of the memo to share, rename, tag it, trim it, delete it, check its file information, or set it as your phone ringtone.

More Apps

Clock

Touch  in the home screen and select **Clock** to set alarms, turn the phone into a bedside clock, check local time around the world, or use the stopwatch or the countdown alarm.

Setting a New Alarm

1. Press the **Home Key** >  and select **Clock**.
2. Tap a default alarm to configure it, or tap **Add alarm** at the bottom of the screen to create a new alarm.
3. Set up the alarm options, such as time, repeat, and alarm sound.
4. Tap **SAVE** to save and exit.
5. Tap  or  next to an alarm to turn it on or off.

Using the Bed Clock

The Bed Clock displays the current time and the next alarm.

1. Press the **Home Key** >  and select **Clock**.
2. If necessary, press the **Menu Key** > **Bed Clock Preferences** in the Alarm screen to set up the Bed Clock options. Then press the **Back Key** to return to the Alarm screen.
 - **Enable bed clock:** Turn on or off the Bed Clock function.
 - **Bed clock never sleeps:** Keep the Bed Clock screen turned on when charging the phone.
3. Press the **Menu Key** > **Bed Clock** to open the Bed Clock screen.

Checking World Time

Press the **Home Key** >  and select **Clock** > **World time** to check local time for cities around the world.

- Tap  at the bottom to add a new city or country.

Using Stopwatch and Countdown

Press the **Home Key** >  and select **Clock** > **Stopwatch** or **Countdown** to use the stopwatch or the countdown timer.

Stopwatch allows you to record lap times, while Countdown allows you to set a time and count down to zero.

Calculator

Press the **Home Key** >  and select **Calculator**.

TIP: Tap  to see all of the calculator buttons. Tap  to switch back to the other panel.

Google Chrome

Press the **Home Key** >  and select **Chrome** to browse the Internet. Chrome on your phone can sync bookmarks, browsing history, and opened tabs from your Google account, so that you can maintain the same experience across your phone, your PC, your tablet and other devices.

Downloads

The Downloads app keeps a record of the files you have downloaded using the Browser, Email, or Gmail app.

Press the **Home Key** >  and select **Downloads** to check the record.

- Tap a file to open it with the appropriate applications.
- Tap and hold a file, or check the box in front of it, to delete or share it.

File Manager

Quickly access all of your images, videos, audio clips, and other types of files on your phone and on the memory card.

1. Press the **Home Key** >  and select **File Manager**. You can find the file you need by category in the **CATEGORY** tab, or tap **PHONE** or **SD CARD** to browse folders and files on the phone storage or the microSDXC card.
 - Tap folders and files to access stored items.
 - Tap and hold an item to access option icons such as Move , Copy , Share , or Delete .
 - To copy or move an item, navigate to a new location and tap **PASTE**.
 - Tap  to create a new folder in the current directory.

Full Share

Full Share offers a wireless solution to sharing media files among devices connected to the same Wi-Fi network. You can use this feature to easily access media content on different devices without having to transfer files.

Share Media Files on Your Phone

1. Connect your phone to a Wi-Fi network.
2. Press the **Home Key** >  and select **Full Share**.

NOTE: The first time you launch Full Share, you can follow the wizard to start sharing files or accessing files on other devices.

3. Tap **Set shared files** and check or uncheck **Audio**, **Video**, or **Image**. Only checked types of files will be shared.
4. Tap **Add directory** to select the folders you want to share.
5. Tap the **ON/OFF** switch at the top to turn on file sharing.

Now your phone works as a media server and you can access the shared files from other devices that support Full Share and are connected to the same Wi-Fi network as your phone.

Access Shared Files on Other Devices

After another device has shared its media contents while connected to a Wi-Fi network, you can access them with your phone.

1. Connect your phone to the same Wi-Fi network as the other device.
2. Press the **Home Key** >  and select **Full Share**.
3. Tap **Search for devices nearby** to discover the other device, which should appear in the Server List.
4. Tap the device and select a category to access its contents.
5. Tap a file (and select a media render if prompted) to start playing it with the dedicated player for shared media contents.

You can also tap and hold a file to select multiple items to download the files to your phone or upload to other media servers.

Mi-EasyAccess

With Mi-EasyAccess, you can access selected applications right from the lock screen when the screen lock is set as “Long press” by sliding to the left on the bottom of the screen (see *Getting Started – Locking/Unlocking the Screen and Keys*).

To select the applications you can access, press the **Home Key** >  and select **Mi-EasyAccess**. Tap  to add an application, or tap  to remove one. You can also slide the **ON/OFF** switch at the top to enable or disable this feature.

NotePad

Press the **Home Key** >  and select **NotePad** to save and view your text notes.

- Tap **New** to create a new note. Then enter your text and tap **Save** to save it.
- Tap a note to view its entire content. You can also edit it, delete it, share it, or export it as a text file (*.txt) to your phone storage or the microSDXC card.

Play Books

Press the **Home Key** >  and select **Play Books** to read ebooks purchased from Play Store.

- Tap  > **My library** to view your book library. Tap a book cover to read it.
- Tap  > **Shop** to buy more books from the Play Store. Tap  to search by book title or author name.

Play Movies & TV

Press the **Home Key** >  and select **Play Movies & TV** to watch movies you rent from Play Store as well as your personal videos stored on the phone.

- Tap  > **My Movies** or **My TV Shows** to view your movies or TV shows. You can stream them for online watching or download them to watch offline.

More Apps

Task Manager

Press the **Home Key** >  and select **Task Manager** to view or stop applications.

- Tap a task in the **Tasks** tab.
- Tap the **Apps** tab to manage all the apps on your phone.
- Tap the **Resources** tab to view the real-time use of the system resources (CPU, RAM, and storage).

YouTube

Press the **Home Key** >  and select **YouTube**. You can watch YouTube videos or upload your own.

Play Store

Press the **Home Key** > . You can buy or rent music, books, movies, and apps and download them to your phone.

NOTE: The content you can access in Play Store depends on your region and your service provider.

Browsing and Searching Apps

You can browse apps by category and sort them in different ways. Tap a top-level category, such as Games, and tap the app from any subcategory.

You can also search for apps using an app's name or description, or the developer's name. Just tap  and enter the search terms.

Downloading and Installing Apps

When you find the app you are interested in through browsing or searching, tap it to open its details screen, where more information about the app is displayed.

1. Tap **INSTALL** (free apps) or the price (paid apps) in the app details screen. If the app is not free, you will need to sign in to your Google Wallet™ account and select a payment method.

CAUTION: Once installed, some apps can access many functions or a significant amount of your personal data. The Play Store will show you what the app can access. Tap **ACCEPT** to accept the permissions for the app. Your app will start downloading immediately or once payment is successfully authorized.

2. The app is successfully installed when  appears in the status bar. You can find the new app after tapping the **Home Key** > .

Creating a Google Wallet Account

You must have a Google Wallet account associated with your Google account to purchase items from the Google Play Store app. Do one of the following:

1. On your computer, go to **checkout.google.com** to create a Google Wallet account.
2. The first time you use your phone to buy an item from Google Play Store, you're prompted to enter your billing information to set up a Google Wallet account.

WARNING: When you've used Google Wallet once to purchase items from the Google Play Store app, the phone remembers your password so you don't need to enter it the next time. For this reason, you should secure your phone to prevent others from using it without your permission.

Managing Your Downloads

After you've downloaded and installed an app, you can rate it, view it in a list with your other downloaded apps, configure it to update itself automatically, and so on.

Play Store

Viewing Your Downloaded Apps

1. In the Apps screen of Play Store, tap  > **My apps**.
2. Your list of installed apps opens. You can tap one to rate it, uninstall it, request a refund, update it, and so on.

Uninstalling an App

1. In the Apps screen of Play Store, tap  > **My apps**.
2. Tap an app to open its details screen.
3. Tap **UNINSTALL** > **OK**.

Settings

Press the **Home Key** >  and select **Settings**. The Settings app contains most of the tools for customizing and configuring your device.

General Settings

Airplane Mode

Turn voice and data transmission on or off.

Wi-Fi

Turn Wi-Fi on or off and configure your Wi-Fi connections (see *Connecting to Networks and Devices – Connecting to Wi-Fi*).

Bluetooth

Turn *Bluetooth* on or off and configure your *Bluetooth* connections (see *Connecting to Networks and Devices – Connecting to Bluetooth Devices*).

Mobile Networks

Control mobile data use and data roaming (see *Connecting to Networks and Devices – Connecting to Mobile Networks*).

Sound

Adjust volumes (see *Personalizing – Adjusting Volumes*), toggle sound and mute (see *Personalizing – Switching to Silent Mode*), set up ringtone and notification sound (see *Personalizing – Changing Ringtone and Notification Sound*), configure SRS sound effects, and

select system sounds (see *Personalizing – Turning On/Off Touch Sounds*).

Tap **Silent mode** to turn off all sounds except media and alarm, or enable silent mode with vibration.

Display

- **Brightness:** Set the brightness of the display.
- **Wallpaper:** Select a background image for the home screen.
- **Auto-rotate screen:** Check this option to let the phone automatically change the orientation of some on-screen content based on the position of the phone.
- **Sleep:** Set the length of time of inactivity before the screen turns off automatically.
- **Daydream:** Manage the Daydream function. When Daydream is enabled, photos or animations will be displayed as a screensaver.
- **Font size:** Set the font size of the text on the screen.
- **Pulse notification light:** Flash the LED light to notify you of missed calls, new messages, and other events.
- **Touch key light duration:** Set the back light duration for the **Home Key**, the **Menu Key**, and the **Back Key**.

Date and Time

Set the time zone, and how date and time are displayed. You can also use network-provided data.

Language and Input

- **Language:** Select a language and region for your system.
- **Spell checker:** Check the spelling of text you enter or set the spell checker options.
- **Personal dictionary:** Add new words to the phone's dictionary or remove words from the dictionary. The words you add are used for spelling check and word suggestion.
- **KEYBOARD & INPUT METHODS:** Configure text input settings (see *Knowing the Basics – Entering Text – Touch Input Settings*).
- **Voice Search**
 - **Language:** Select the language you use when entering text by speaking or searching by speaking.
 - **“OK Google” hotword detection:** Enable this feature so that you can say “OK, Google” to launch voice search.
 - **Speech output:** To turn on speech output only when you've got a headset attached to your phone, select **Hands-free only**.
 - **Block offensive words:** Hide offensive words when you use Google voice recognition to transcribe your voice into text.
 - **Offline speech recognition:** Select one or more additional language packages so you can use speech recognition when you do not have a network connection.

- **Google Account dashboard:** Open the Google Account dashboard in the web browser to manage the data that Google can collect from you.
- **Bluetooth headset:** Listen for your voice input through a *Bluetooth* headset when it is connected to your phone.
- **Text-to-speech output**
 - **PREFERRED ENGINE:** Select the speech synthesis engine you want to use or change its settings.
 - **Speech rate:** Select how quickly you want the synthesizer to speak.
 - **Listen to an example:** Play a brief sample of the speech synthesizer, using your current settings.
- **Pointer speed:** Select how fast the pointer/mouse should scroll when you connect the phone to a trackpad or mouse accessory.

Wireless and Networks

Data Usage

Tap the **ON/OFF** switch to turn on or off mobile data. You can check how much data has been used during the time cycle you set, set a mobile data limit and warning, see what apps have been using mobile data, allow data roaming, or restrict background data for individual apps.

NOTE: The data usage is measured by your phone, and your carrier's data usage accounting may differ.

Press the **Menu Key > Mobile HotSpots** to select Wi-Fi networks that are mobile hotspots. Data usage on recognized mobile hotspots will be restricted to avoid high mobile data bills.

VPN

Set up and connect to virtual private networks (see *Connecting to Networks and Devices – Connecting to Virtual Private Networks*).

Device

Storage

Check memory information for your external memory card and internal storage.

- **Unmount SD card:** Unmount the memory card from your phone so that you can safely remove the card while the phone is on.
- **Erase external SD card:** Erase all data on your memory card and prepare it for use with your phone.

Battery

Check how much power remains for the battery and what has been using the battery.

You can tap an app to adjust its settings in order to save battery life.

Apps

See apps installed on your phone and manage them. Tap an app in the **DOWNLOADED, RUNNING**, or **ALL** tab to see its information. You can stop the app, uninstall or disable the app, or clear data and cache.

NOTE: Not all applications can be uninstalled.

Connect to PC

Select the USB connection mode between your phone and PC (see *Connecting to Networks and Devices – Connecting to Your Computer via USB – Connecting Your Phone to a Computer via USB*).

Personal

Location Access

Activate location services to determine your location (see *Maps – Activating Location Services*).

Check **Wi-Fi & mobile network location** search to let Google apps access your location and use your location to improve search results and other services.

Security

- **Screen lock:** Lock the screen with long press, face unlock, pattern, PIN, or password (see *Personalizing – Protecting Your Phone With Screen Locks*).
- **Owner info:** Set the text that you may display on the lock screen.

Settings

- **Encrypt phone:** Encrypt your data on the phone to protect your privacy (see *Personalizing – Protecting Your Phone With Encryption*).
- **Make passwords visible:** Display passwords as you enter them.
- **Device administrators:** View or deactivate apps you have authorized to be device administrators.
- **Unknown sources:** Check this option to permit installation of apps from sources other than the Play Store.
- **Verify apps:** Disallow or warn before installation of apps that may cause harm.
- **Storage type:** Choose the storage type.
- **Trusted credentials:** Display trusted CA certificates.
- **Install from SD card:** Install certificates from the memory card.
- **Clear credentials:** Delete all certificates.

Backup and Reset

- **Back up my data:** Back up app data, Wi-Fi passwords, and other settings to Google servers after you sign in to your Google account.
- **Backup account:** Back up data to a Gmail address.
- **Automatic restore:** Restore previously backed up settings and data when you reinstall an app.
- **Factory data reset:** Reset your phone to factory default settings. All your personal data from the phone's internal storage will be erased. You can also erase the data on the memory card during the process.

Accounts

Manage your accounts and synchronization. Tap **Add account** to sign in to or create account on your phone.

Tap an account type to see that type of accounts you have added and adjust the account settings.

System

Accessibility

Configure the system accessibility options and accessibility plug-ins on your phone, such as using **TalkBack** for low-vision users.

Developer Options

Developer options contains settings that are useful when developing Android applications. The menu is hidden until you tap **Build Number** in the **About phone** menu 7 times.

WARNING: The developer option settings are intended for development use only. They can cause your phone and applications on it to break or misbehave.

Software Update

You can check your system's software version or check for available updates.

About Phone

View phone status, legal notice, model number, software version and other information.

Upgrading the Phone Software

There are several ways to upgrade your phone software:

1. Use the online upgrade tool for mobile terminal products.
2. Use the one-press upgrade package offered by your mobile service provider.
3. Use the upgrade package on your microSDXC card.

NOTE: Visit the ZTE official handset service support website (<http://www.ztedevice.com/support>) and click your country or region to learn more about the above upgrade methods, as well as which phones and methods are supported.

Troubleshooting

If you encounter problems while using the phone, or if it performs abnormally, you can refer to the chart below. If your particular problem cannot be resolved using the information in the chart, contact the dealer where you purchased the phone

Problem	Possible Causes	Possible Solution
Poor reception	The network signal is too weak at your current location, for example, in a basement or near a tall building, because wireless transmissions cannot effectively reach it.	Move to a location where the network signal can be properly received.
	The network is busy at the current time (for example, during peak times, there may be too much network traffic to handle additional calls).	Avoid using the phone at such times, or try again after waiting a short time.
	You are too far away from a base station for your service provider.	You can request a service area map from your service provider.
Echo or noise	Poor network link quality on the part of your service provider.	End the call and dial again. You may be switched to a better-quality network link or phone line.
	Poor local telephone line quality.	End the call and dial again. You may be switched to a better-quality network link or phone line.
Unable to select certain features	Your service provider does not support these features, or you have not applied for services that provide these features.	Contact your service provider.

Troubleshooting

Problem	Possible Causes	Possible Solution
Battery not charging	The battery or battery charger is damaged.	Contact the dealer.
	The phone's temperature is below 32°F (0°C) or higher than 113°F (45°C).	Adjust the battery charging environment to avoid extremes of temperature.
	Poor contact between the battery and charger.	Check all connectors to make sure all connections have been properly made.
Shortened standby time	The standby time is related to your service provider system configuration. The same phone used with different service providers' systems will not provide exactly the same length of standby time.	If you are located in an area where signaling is weak, temporarily power off the phone.
	The battery is depleted. In high temperature environments, battery life will be shortened.	Use a new battery.
	If you are not able to connect to the network, the phone will continue to send out signals as it attempts to locate a base station. Doing so consumes battery power and will consequently shorten standby time.	Change your location to one where the network is accessible, or temporarily turn off your phone.
Cannot turn your phone on	Battery power has been depleted.	Recharge the phone's battery.
Unable to connect to the network	You are not within the network's service area.	Check the service area with your service provider.
	Poor signal.	Move to an open space, or if you are inside a building, move closer to a window.
PIN Code blocked	You have entered an incorrect PIN code three consecutive times.	Contact your service provider. If the service provider provides the SIM card's PUK code, use the PUK code to unlock the SIM card.

Troubleshooting

Problem	Possible Causes	Possible Solution
Unable to enter information into the phonebook	The phonebook's memory is already full.	Delete unnecessary data from the contacts.
Phone crashes, reboots, freezes, or cannot be powered on	Some third-party software is not compatible with your phone.	Reset the phone to factory status.
		Enter safety mode and uninstall the software that may cause the problem.
		Upgrade the phone software.

For Your Safety

General Safety

	Don't make or receive handheld calls while driving. Never text while driving.
	Keep your phone at least 10 mm away from your ear or body while making calls.
	Small parts may cause choking.
	Your phone can produce a loud sound.
	Avoid contact with anything magnetic.
	Keep away from pacemakers and other electronic medical devices.
	Turn off when asked to in hospitals and medical facilities.
	Turn off when told to in aircrafts and airports.
	Turn off when near explosive materials or liquids.

	Don't use at gas stations.
	Your phone may produce a bright or flashing light.
	Don't dispose of your phone in fire.
	To prevent possible hearing damage, do not listen at high volume levels for long periods.
	Avoid extreme temperatures.
	Avoid contact with liquids. Keep your phone dry.
	Don't take your phone apart.
	Only use approved accessories.
	Don't rely on your phone for emergency communications.

Radio Frequency (RF) Energy

This model phone meets the government's requirements for exposure to radio waves.

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government:

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. * Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The highest SAR values for this model phone as reported to the FCC when tested for use at the ear and on the body are:

Head: 0.56 W/kg, Body: 1.32 W/kg

(Body-worn measurements differ among phone models, depending upon available enhancements and FCC requirements.)

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/ea/fccid/> after searching on FCC ID: **SRQ-Z797C**.

For body-worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and positions the handset a minimum of 0.59 inches (1.5 cm) from the body. Use of other enhancements may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 0.59 inches (1.5 cm) from your body when the phone is switched on.

*In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

FCC Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: *Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.*

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Hearing Aid Compatibility (HAC) Regulations for Mobile Phones

In 2003, the FCC adopted rules to make digital wireless telephones compatible with hearing aids and cochlear implants. Although analog wireless phones do not usually cause interference with hearing aids or cochlear implants, digital wireless phones sometimes do because of electromagnetic energy emitted by the phone's antenna, backlight, or other components. Your phone is compliant with FCC HAC regulations (ANSI C63.19- 2011). While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate. The wireless telephone industry has developed a rating system for wireless phones to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box. Ratings are not guaranteed. Results will vary, depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

For Your Safety

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, consult your service provider or phone retailer.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference with hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. T4 is the better/higher of the two ratings. (Note that not all hearing devices contain telecoils.)

Your Z797C has been tested for hearing aid device compatibility and has an M4/T4 rating. Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. For more information about FCC Hearing Aid Compatibility, please go to <http://www.fcc.gov/cgb/dro>.

Distraction

Driving

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving (even with a hands-free kit) can cause distraction and lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

Operating Machinery

Full attention must be given to operating machinery in order to reduce the risk of an accident.

Product Handling

General Statement on Handling and Use

You alone are responsible for how you use your phone and any consequences of its use.

You must always turn off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

- Always treat your phone and its accessories with care and keep it in a clean and dust-free place.
- Keep the screen and camera lens clean. Unclean screen or camera lens may slow down the phone's reaction to your operations or lower image quality.
- Clean the device and its accessories with a soft material such as cleaning cloth for eyeglass lenses.

For Your Safety

Demagnetization

To avoid the risk of demagnetization, do not allow electronic devices or magnetic media to be close to your phone for a long time.

Antenna

Do not touch the antenna unnecessarily.

Normal Use Position

When placing or receiving a phone call, hold your phone to your ear, with the bottom towards your mouth.

Air Bags

Do not place a phone in the area over an air bag or in the air bag deployment area as an air bag inflates with great force and serious injury could result. Store the phone safely before driving your vehicle.

Seizures/Blackouts

The phone can produce a bright or flashing light. A small percentage of people may be susceptible to blackouts or seizures (even if they have never had one before) when exposed to flashing lights or light patterns such as when playing games or watching video. If you have experienced seizures or blackouts or have a family history of such occurrences, please consult a physician.

Repetitive Stress Injuries

To minimize the risk of Repetitive Strain Injury (RSI) when texting or playing games with your phone:

- Do not grip the phone too tightly.

Do not use alcohol or other corrosive substances for cleaning or allow them to get inside.

- Do not expose your phone or its accessories to open flames or lit tobacco products.
- Do not expose your phone or its accessories to liquid, moisture or high humidity.
- Do not drop, throw or try to bend your phone or its accessories.
- Do not paint your phone or its accessories.
- Do not attempt to disassemble your phone or its accessories. Only authorized personnel can do so.
- Do not expose or use your phone or its accessories in an environment with or that can reach extreme temperatures, minimum - [5] and maximum + [50] degrees Celsius.
- Do not place your phone inside or near heating equipment or high-pressure containers, such as water heaters, microwave ovens, or hot cooking utensils. Otherwise, your phone may be damaged.
- Please check local regulations for disposal of electronic products.
- Do not carry your phone in your back pocket as it could break when you sit down.

Small Children

Do not leave your phone and its accessories within the reach of small children or allow them to play with it. They could hurt themselves or others, or could accidentally damage the phone. Your phone contains small parts with sharp edges that may cause an injury or may become detached and create a choking hazard.

For Your Safety

- Press the buttons lightly.
- Use the special features that are designed to minimize the times of pressing buttons, such as Message Templates and Predictive Text.
- Take many breaks to stretch and relax.

Emergency Calls

This phone, like any wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.

Loud Noise

This phone is capable of producing loud noises, which may damage your hearing. Turn down the volume before using headphones, *Bluetooth* stereo headsets or other audio devices.

Phone Heating

Your phone may become warm during charging and during normal use.

Electrical Safety

Accessories

Use only approved accessories. Do not connect with incompatible products or accessories. Take care not to touch or allow metal objects, such as coins or key rings, to contact or short-circuit the battery terminals. Never puncture the surface of the battery with sharp objects.

Connection to a Car

Seek professional advice when connecting a phone interface to the vehicle electrical system.

Faulty and Damaged Products

Do not attempt to disassemble the phone or its accessories. Only qualified personnel can service or repair the phone or its accessories. If your phone (or its accessories) has been submerged in water, punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorized service center.

CTIA Requirements

- Do not disassemble or open, crush, bend or deform, puncture, or shred.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.
- Only use the battery for the system for which it is specified.
- Only use the battery with a charging system that has been qualified with the system per CTIA Certification Requirements for Battery System Compliance to IEEE 1725. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Do not short-circuit a battery or allow metallic conductive objects to contact battery terminals.

For Your Safety

- Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.
- Promptly dispose of used batteries in accordance with local regulations.
- Battery usage by children should be supervised.
- Avoid dropping the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- Improper battery use may result in a fire, explosion, or other hazard.
- The phone shall only be connected to CTIA certified adapters, products that bear the USB-IF logo or products that have completed the USB-IF compliance program.

Radio Frequency Interference

General Statement on Interference

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this, use the phone on

the opposite ear to your pacemaker and do not carry it in a breast pocket.

Hearing Aids

People with hearing aids or other cochlear implants may experience interfering noises when using wireless devices or when one is nearby. The level of interference will depend on the type of hearing device and the distance from the interference source. Increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

Medical Devices

Please consult your doctor and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

Hospitals

Turn off your wireless device when requested to do so in hospitals, clinics or health-care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

Aircraft

Turn off your wireless device whenever you are instructed to do so by airport or airline staff. Consult the airline staff about the use of wireless devices onboard the aircraft. If your device offers a 'flight mode', this must be enabled prior to boarding an aircraft.

For Your Safety

Interference in Cars

Please note that because of possible interference with electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a hands-free kit with an external antenna is included in the installation.

Explosive Environments

Gas Stations and Explosive Atmospheres

In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other radio equipment. Areas with potentially explosive atmospheres include fueling areas, below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

Blasting Caps and Areas

Power off your mobile phone or wireless device when in a blasting area or in areas posted power off "two-way radios" or "electronic devices" to avoid interfering with blasting operations.

Specifications

Handset specifications are shown in the following table.

Operating System	Android 4.3 Jelly Bean
Technology	CDMA
Dimensions	6.13" (H) x 3.09" (W) x 0.35" (D)
Weight	6.88 oz. (with battery)
Display	5.5"
Camera	Rear 8MP with auto flash, auto focus, auto zoom / Front 1MP
Internal memory	ROM 8GB eMMC / RAM 1GB
Removable memory card	Supports up to 64GB SD Card
Battery	3400 mAh
Continuous idle time	Up to 16 days
Continuous talk time	Up to 18 hours
WAP browser version	2.0
HAC	M4/T4
<i>Bluetooth</i>	BT 4.0

NOTE: The phone's talk time and idle time are based on ideal working environments. The use of extended backlighting, browser, and network conditions can reduce battery life and talk/idle time.

Notes
