

Tureis

User Manual

LEGAL INFORMATION

Copyright © 2011 ZTE CORPORATION.

All rights reserved.

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

ZTE Corporation reserves the right to make modifications on print errors or update specifications in this guide without prior notice.

The *Bluetooth*[®] trademark and logos are owned by the Bluetooth SIG, Inc. and any use of such trademarks by ZTE Corporation is under license. Other trademarks and trade names are the property of their respective owners.

Version No.: R1.0

Edition Time: 2011.8

Contents

For Your Safety	14
General Safety	14
Radio Frequency (RF) Exposure	15
General Statement on RF Energy	15
Specific Absorption Rate (SAR)	16
Body Worn Operation	17
Limiting Exposure to Radio Frequency (RF) Fields.....	17
Regulatory Information	18
Distraction	18
Driving	18
Operating Machinery	18
Product Handling	19
General Statement on Handling and Use.....	19
Small Children	20
Demagnetization	20
Electrostatic Discharge (ESD).....	21
Antenna	21
Normal Use Position.....	21
Air Bags	22

Seizures/Blackouts	22
Repetitive Motion Injuries.....	23
Emergency Calls.....	23
Loud Noise.....	23
Phone Heating	23
Electrical Safety.....	24
Accessories.....	24
Connection to a Car	24
Faulty and Damaged Products	24
Interference	25
General Statement on Interface.....	25
Pacemakers	25
Hearing Aids	25
Medical Devices.....	26
Hospitals	26
Aircraft.....	26
Interference in Cars	26
Explosive Environments	27
Petrol Stations and Explosive Atmospheres	27
Blasting Caps and Areas	27

Getting Started.....	28
Overview	29
Keys Explained	31
Starting Up	32
Installing the SIM/microSD Card and Battery	32
Removing the Battery and SIM/microSD Card	35
Charging the Battery	36
Switching Your Phone On/Off	37
Setting Up Your Phone for the First Time	37
Switching to Sleep Mode	38
Waking Up Your Phone	39
Getting Around Your Phone	39
Touch Control	39
Home Screen	40
Status and Notification Icons	42
Applications and Settings Preview	46
Phone Calls	52
How to Make Calls	52
Calling from the Dialer	52
Calling from Your Contacts	53

Calling from Your Call History	53
Calling from a Text Message	53
Using Speed Dial	54
Making Emergency Calls	54
Making International Calls.....	55
How to Receive Calls	55
Answering a Call	55
Rejecting a Call.....	56
Muting a Call	56
Putting a Call on Hold	57
Turning the Speakerphone On/Off.....	57
Ending a Call.....	57
Adjusting Your Call Settings	57
Contacts	59
Importing and Exporting Contacts	60
Sharing Contacts Information	61
Creating a Contact	61
Adding a Contact to Favourites	61
Searching for a Contact.....	62
Editing a Contact	62

Deleting a Contact	62
Creating a New Group	63
Using the Hardware Keyboard to Enter Text.....	64
Text Input Settings	66
Using the Onscreen Keyboard to Enter Text	67
Text Input Settings	68
Messages	70
Sending a Text Message	70
Sending an MMS	71
Managing Messages and Their 'Threads'	72
Replying to a Message.....	72
Deleting a Message Thread	72
Message Settings.....	73
Email	76
Creating an Email Account	76
Writing and Sending Emails.....	77
Replying to and Forwarding Emails	78
Email Settings	78
Getting Connected to the Internet.....	81

Adding a New GPRS/EDGE/3G Connection.....	81
Turning on Wi-Fi.....	82
Connecting to a Wi-Fi Network.....	83
Checking the Wi-Fi Network Status.....	83
Using the Phone as a Modem	83
Enabling the Modem Function	84
Disabling the Modem Function	85
Using the Phone as a Wi-Fi Hotspot	85
Enabling the Wi-Fi Hotspot	86
Disabling the Wi-Fi Hotspot	86
Browsing the Internet	87
Browsing Options	87
Opening Links in Web Pages	88
Downloading Apps from the Web	89
Using Bookmarks	89
Editing a Bookmark.....	90
Deleting a Bookmark.....	90
Browser Settings	90
Bluetooth®	93
Turning Bluetooth on/off	93

Making Your Phone Visible.....	93
Changing Your Phone's Name	94
Hooking Up With Another Bluetooth Device	94
Making the Most of Multimedia.....	96
Taking Pictures With Your Camera	96
Adjusting Camera Settings.....	96
Shooting Video With Your Camcorder.....	97
Adjusting Your Video Settings.....	97
Listening to Your FM Radio	98
Playing Your Music	99
Creating Playlists.....	101
Managing Playlists	101
Setting a Song as Ringtone.....	102
Playing Your Videos	102
Opening Your Gallery	103
Making Memorable Memos	104
Using Your Google™ Applications	106
Gmail.....	106
Google Calendar.....	107
Google Talk.....	107

Places.....	108
Latitude.....	109
Sorting out Your Phone Settings.....	110
Setting Time and Date.....	110
Changing Display Settings	110
Adjusting Screen Brightness.....	111
Adjusting Screen-timeout.....	111
Switching Screen Orientation Automatically	111
Showing Animation When Opening/Closing Windows	111
Sound Settings	112
Choosing Your Ringtone.....	112
Setting the Default Notification Ringtone	112
Switching Your Phone to Silent Mode.....	113
Switching to Vibrate	113
Flipping to Turn off Ringtone.....	114
Adjusting Volume	114
Turning on Haptic Feedback.....	114
Turning on Touch Tones.....	115
Turning on Selection Sound.....	115
Turning on Screen Lock Sound	115

Language Settings	115
Mobile Network Services	116
Getting Data Services While Roaming	116
Enabling Data Services	116
Switching Network Modes	116
Switching Networks	117
Setting Access Point Names	117
Security Settings	118
Protecting Your Phone With a Screen Unlock Pattern	118
Protecting Your Phone with a PIN or Password	120
Disabling Screen Unlock Security	121
Protecting Your SIM Card With a PIN	121
Setting Up Credential Storage	122
Managing Your Memory Card	123
Checking Memory Card Space	123
Unmounting Your Memory Card	123
Checking Phone Memory	124
Resetting to Factory Settings	124
Managing Applications and Their Settings	124
Viewing Your Applications	124

Allowing Installation of Non-Market Applications	125
Installing an Application	125
Removing an Application	126
Moving an Application to or from the Memory Card	126
Setting Quick Launch of Your Applications.....	127
Managing Other Settings.....	128
Search Settings.....	128
Voice Input and Output	128
Accessibility	128
About phone.....	129
Other Applications.....	130
Alarm	130
Calculator	130
Note Pad	130
SIM Tool Kit.....	131
Stopwatch.....	131
Task Manager	131
Specifications.....	132
Declaration of RoHS Compliance	133

Disposal of Your Old Appliance	134
EC DECLARATION OF CONFORMITY.....	135

For Your Safety

General Safety

	Don't make or receive handheld calls while driving. And never text while driving.		Don't use at petrol stations.
	Keep your phone at least 15mm away from your ear or body while making calls.		Your phone may produce a bright or flashing light.
	Small parts may cause a choking.		Don't dispose of your phone in fire.
	Your phone can produce a loud sound.		Avoid contact with anything magnetic.
	Keep away from pacemakers and other electronic medical devices.		Avoid extreme temperatures.

	Switch off when asked to in hospitals and medical facilities.		Avoid contact with liquids. Keep your phone dry.
	Switch off when told to in aircrafts and airports.		Don't take your phone apart.
	Switch off when near explosive materials or liquids.		Only use approved accessories.
	Don't rely on your phone for emergency communications.		

Radio Frequency (RF) Exposure

General Statement on RF Energy

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Specific Absorption Rate (SAR)

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the ear was 1.08 W/kg*. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide**.

As SAR is measured utilizing the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum power required to communicate with the network.

* The tests are carried out in accordance with EN 50360, EN 62209-1, EN 62209-2.

** Please see body worn operation.

Body Worn Operation

Important safety information regarding radio frequency radiation (RF) exposure:

To ensure compliance with RF exposure guidelines the phone must be used with a minimum of 15 mm separation from the body.

Failure to observe these instructions could result in your RF exposure exceeding the relevant guideline limits.

Limiting Exposure to Radio Frequency (RF) Fields

For individuals concerned about limiting their exposure to RF fields, the World Health Organization (WHO) provides the following advice:

Precautionary measures: Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using 'hands-free' devices to keep mobile phones away from the head and body.

Further information on this subject can be obtained from the WHO home page <http://www.who.int/peh-emf> (WHO Fact sheet 193: June 2000).

Regulatory Information

The following approvals and notices apply in specific regions as noted.

Please find the section Declaration of RoHS Compliance and CE DOC in the end of this manual.

Distraction

Driving

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving (even with a hands free kit) can cause distraction and lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

Operating Machinery

Full attention must be given to operating the machinery in order to reduce the risk of an accident.

Product Handling

General Statement on Handling and Use

You alone are responsible for how you use your phone and any consequences of its use.

You must always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

- Always treat your phone and its accessories with care and keep it in a clean and dust-free place.
- Do not expose your phone or its accessories to open flames or lit tobacco products.
- Do not expose your phone or its accessories to liquid, moisture or high humidity.
- Do not drop, throw or try to bend your phone or its accessories.
- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.
- Do not paint your phone or its accessories.
- Do not attempt to disassemble your phone or its accessories, only

authorized personnel must do so.

- Do not expose your phone or its accessories to extreme temperatures, minimum - [5] and maximum + [50] degrees Celsius.
- Please check local regulations for disposal of electronic products.
- Do not carry your phone in your back pocket as it could break when you sit down.

Small Children

Do not leave your phone and its accessories within the reach of small children or allow them to play with it.

They could hurt themselves or others, or could accidentally damage the phone.

Your phone contains small parts with sharp edges that may cause an injury or may become detached and create a choking hazard.

 
Demagnetization

To avoid the risk of demagnetization, do not allow electronic devices or magnetic media close to your phone for a long time.

Electrostatic Discharge (ESD)

Do not touch the SIM card's metal connectors.


Antenna

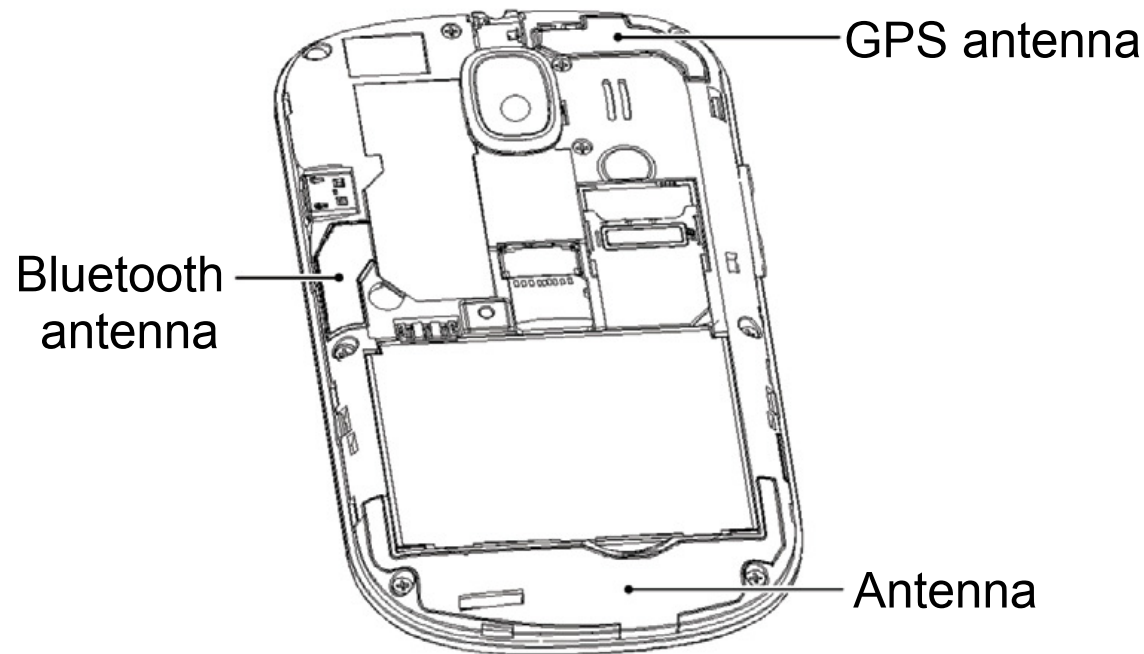

Do not touch the antenna unnecessarily.

Normal Use Position

 When making or receiving a phone call, hold your phone to your ear, with the bottom towards your mouth.

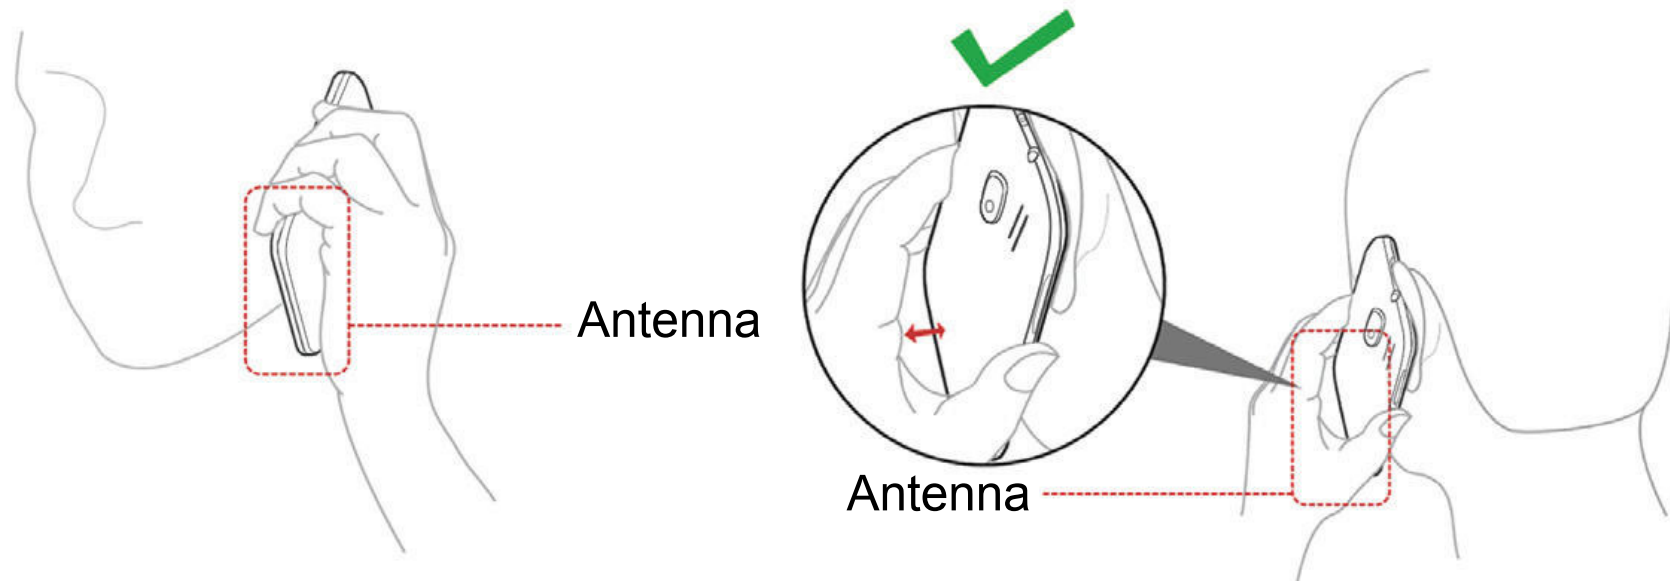

Air Bags

Do not place the phone in the area over an air bag or in the air bag deployment area.

Store the phone safely before driving your vehicle.

Seizures/Blackouts

The phone can produce a bright or flashing light.

Repetitive Motion Injuries

To minimize the risk of RSI when texting or playing games with your phone:

- Do not grip the phone too tightly.
- Press the buttons lightly.
- Use the special features which are designed to minimize the times of pressing buttons, such as Message Templates and Predictive Text.
- Take lots of breaks to stretch and relax.

Emergency Calls

This phone, like any wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.

Loud Noise

This phone is capable of producing loud noises, which may damage your hearing. Turn down the volume before using headphones, Bluetooth stereo headsets or other audio devices.

Phone Heating

Your phone may become warm during charging and during normal use.

Electrical Safety

Accessories

Use only approved accessories.

Do not connect with incompatible products or accessories.

Take care not to touch or allow metal objects, such as coins or key rings, to contact or short-circuit in the battery terminals.

Connection to a Car

Seek professional advice when connecting a phone interface to the vehicle electrical system.

Faulty and Damaged Products

Do not attempt to disassemble the phone or its accessory.

Only qualified personnel should service or repair the phone or its accessory.

If your phone or its accessory has been submerged in water, punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorized service centre.

Interference

General Statement on Interface

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this, use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

Hearing Aids

People with hearing aids or other cochlear implants may experience interfering noises when using wireless devices or when one is nearby.

The level of interference will depend on the type of hearing device and the distance from the interference source, increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

Medical Devices

Please consult your doctor and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

Hospitals

Switch off your wireless device when requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

Aircraft

Switch off your wireless device whenever you are instructed to do so by airport or airline staff.

Consult the airline staff about the use of wireless devices on board the aircraft, if your phone offers a 'flight mode' this must be enabled prior to boarding an aircraft.

Interference in Cars

Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their

vehicles unless a hands-free kit with an external antenna is included in the installation.

Explosive Environments

Petrol Stations and Explosive Atmospheres

In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other radio equipment.

Areas with potentially explosive atmospheres include fuelling areas, below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

Blasting Caps and Areas

Power off your mobile phone or wireless device when in a blasting area or in areas posted power off “two-way radios” or “electronic devices” to avoid interfering with blasting operations.

Getting Started

Thanks for choosing the Tureis. If you'd like your new phone to live a long and fruitful life, please read this guide carefully and keep it for future reference. You never know when you might need it.

 
And don't worry if the pictures we use to demonstrate your phone's functions look a little different from what you see on its screen. It's the functions they show that matter.

 
and get in touch with your phone

Another thing you'll notice is that we talk about 'tapping' a lot. That's because your phone has a touch-screen, which means a simple tap with your finger can both select and open a file. Indeed, you can 'slide' switches on the screen, 'hold' files until a list of shortcuts pops up, casually 'flick' from page to page, 'drag' items into the bin with a well-aimed index finger, or even 'pinch' images to zoom in or zoom out. It's a joy to use.

And that's exactly what this guide is about: making sure the relationship with your new phone is a pleasure from day one. So please read on and enjoy...

Overview

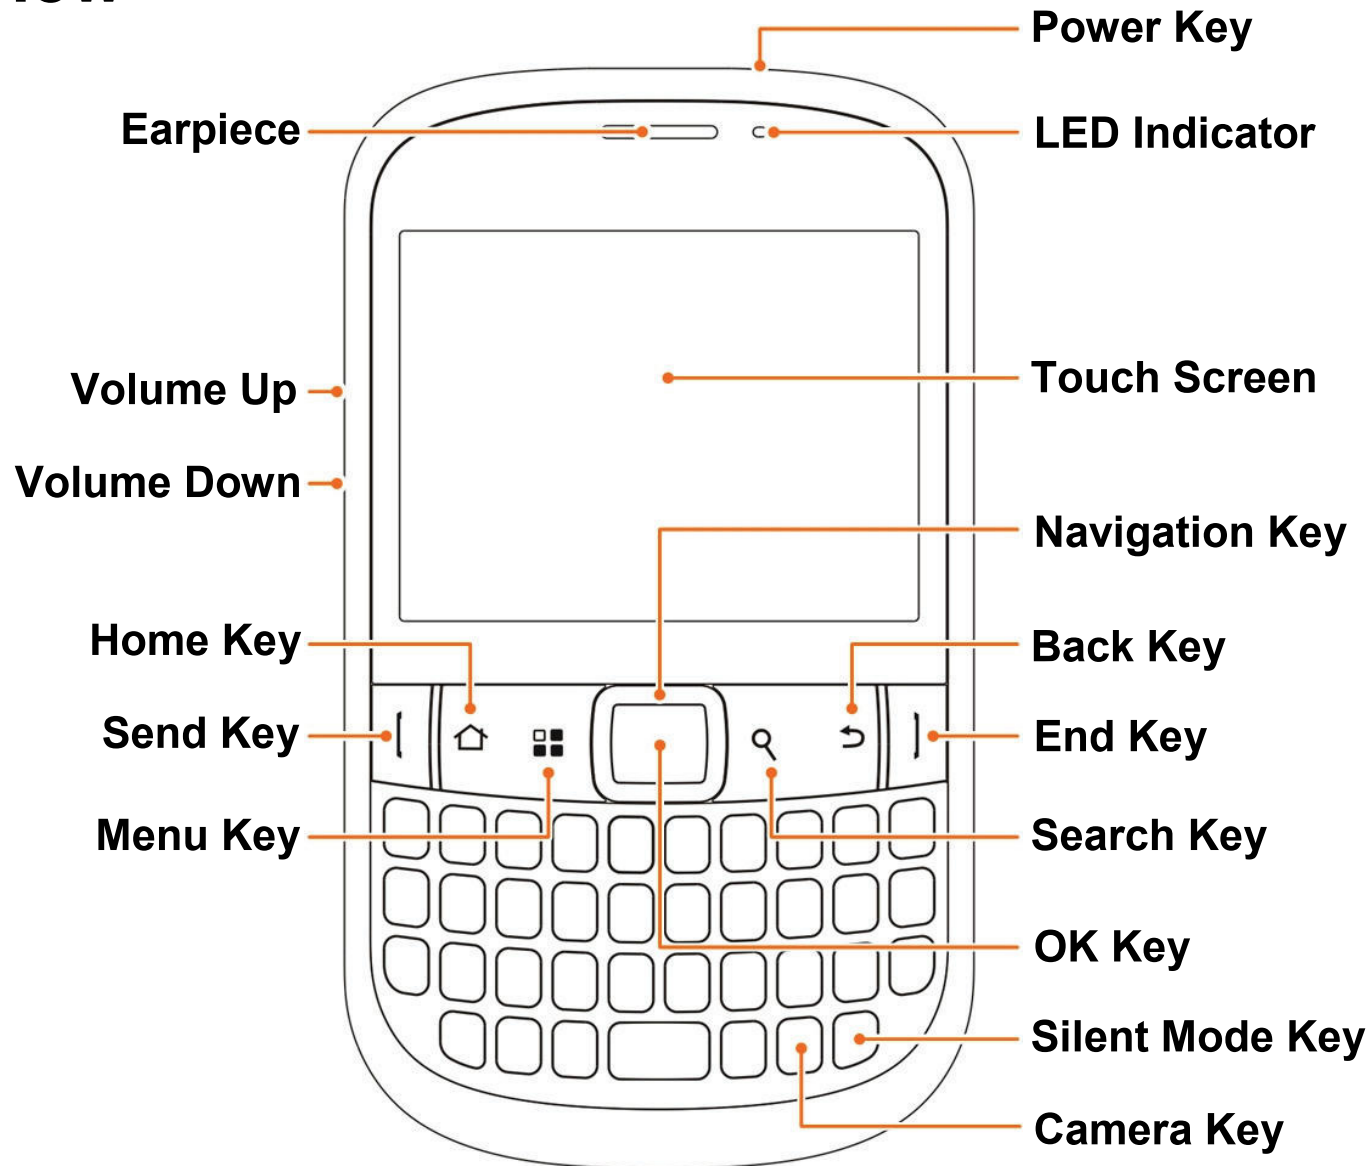

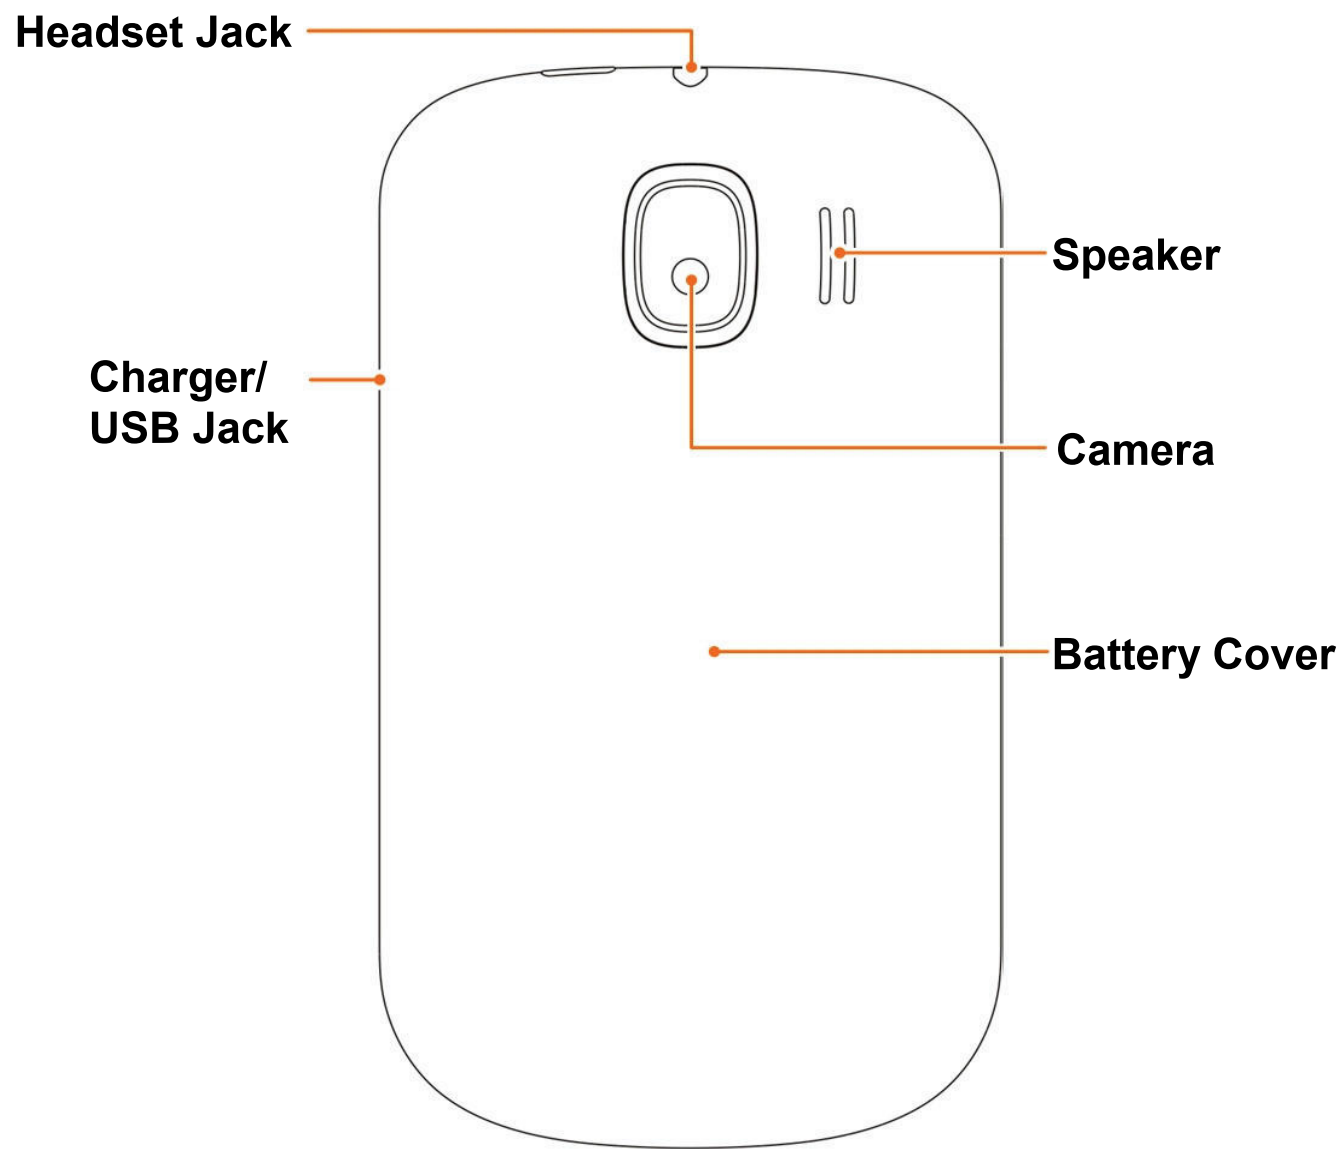

Keys Explained

Key	Function
Power Key	• When the phone is powered off, hold on to power on your phone. • After power on, hold on for phone options: Silent mode, Airplane mode or Power off. • Press to switch your phone to sleep mode. • Press to wake up your phone.
Home Key	• Press to return to the Home Screen from any application or screen. • Hold to see recently used applications.
Menu Key	Press to get the options on the current screen.
Back Key	Press to go to the previous screen.
Search Key	Press to use the search feature.
Navigation Key	Scroll through the menu options or items on the screen.
OK Key	Press to confirm actions or make selections.
Send Key	Press to open the dialer or answer phone calls.


Key	Function
End Key	• Press to end phone calls. • After power on, hold on for phone options: Silent mode, Airplane mode or Power off.
Camera Key	Hold to open the camera screen.
Silent Mode Key	Hold to turn on/off the silent mode.
Volume Keys	Press higher end of the key to turn the volume up and press lower end of the key to turn it down.

Starting Up


Installing the SIM/microSD Card and Battery

Switch off your phone before installing or replacing the battery, SIM card, or microSD card.

 
1. Remove the back cover.

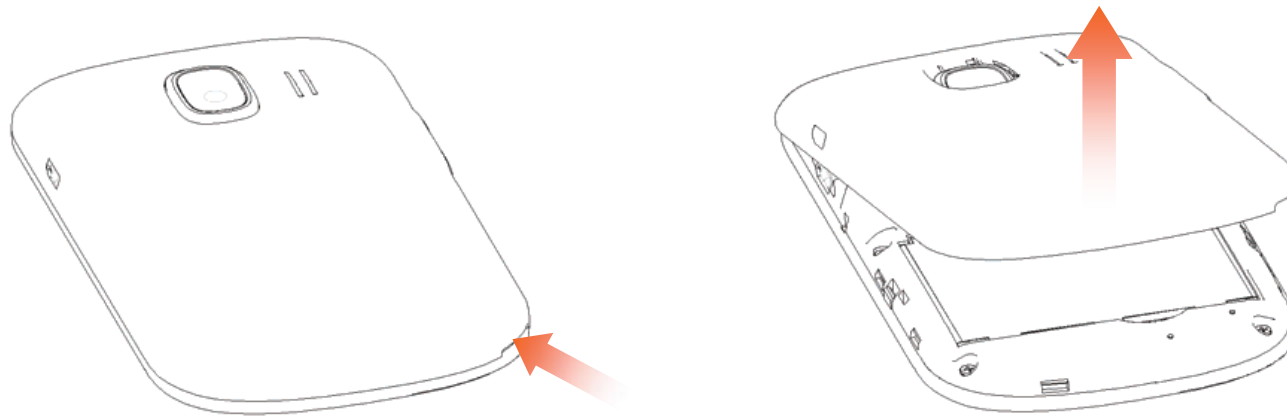

 2. Hold the SIM card with the cut corner oriented as shown and slip it into the card holder.

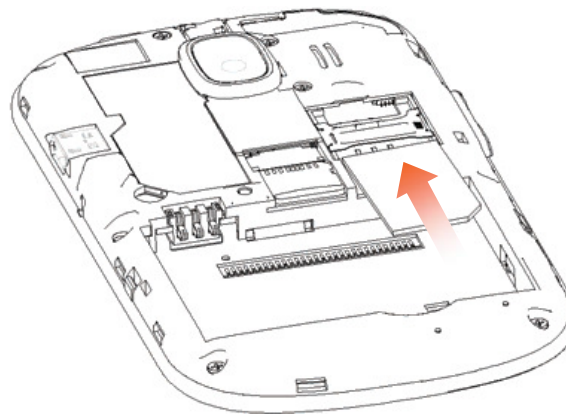


 3. Hold the microSD card with the cut corner oriented as shown and slip it into the card holder.

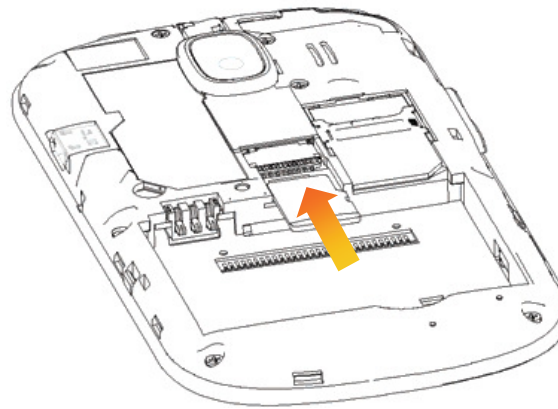


microSD logo  is a trade mark of the SD Card Association.

 4. Insert the battery by aligning the gold contacts on the battery with the gold contacts in the battery compartment. Gently push down on the battery until it clicks into place.

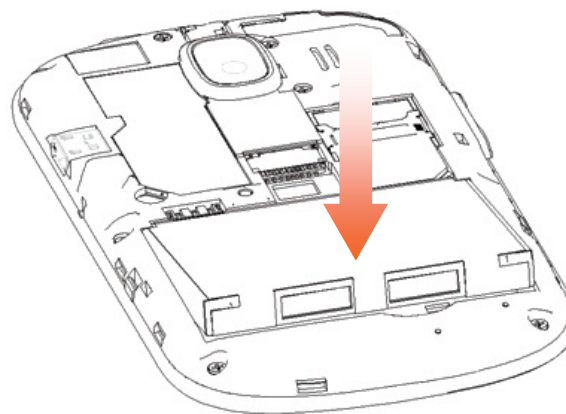


 5. Press the cover gently back into place until you hear a click.

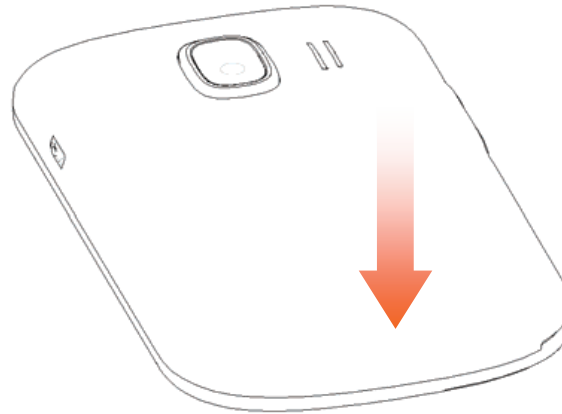

Removing the Battery and SIM/microSD Card

 1. Make sure that your mobile phone is off.
2. Remove the back cover.
3. Lift the battery up and out.

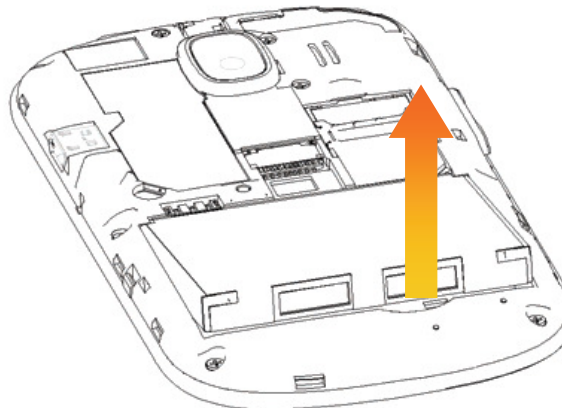


4. Slide the SIM card and microSD card out.

Charging the Battery

When you first get your new phone you'll need to charge the battery like this.

 1. Connect the adapter to the charger jack. Ensure that the adapter is inserted with the correct orientation. Do not force the connector into the charger jack.

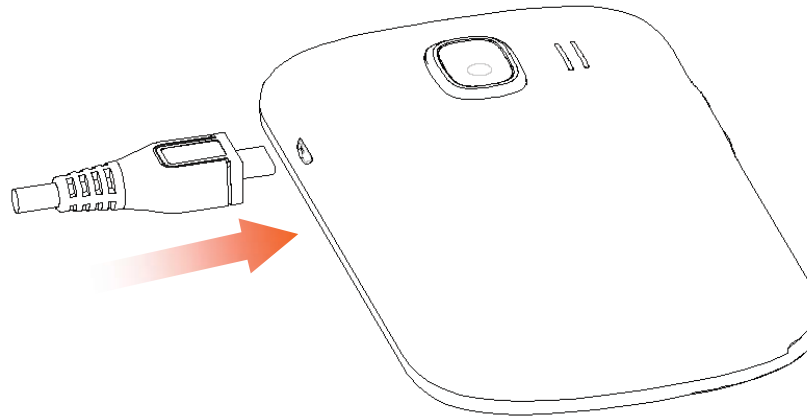

2. Connect the charger to a standard AC wall outlet.
3. Disconnect the charger when the battery is fully charged.

how much charge have you got?

If the battery is low, there will be a pop-up message on the screen. As you charge your phone, the screen will tell you the exact battery level each time you wake up your phone.

If the phone is on, you'll see this charging icon  appear on the status bar. As soon as charging is completed, this icon  appears on the status bar.

Switching Your Phone On/Off

1. Make sure the SIM card is in your device and the battery is charged.
2. Hold the **Power Key** to switch on your phone.
3. To switch it off, hold the **Power Key** or **End Key** to get the phone options. Select **Power off**, and then tap **OK**.

Note: If the screen is locked, unlock it before holding the **Power Key** or **End Key** to get the phone options.

Setting Up Your Phone for the First Time

When you first switch on your phone (or if you've reset it to Factory Settings) you need to select some settings before you can use it.

1. Insert your SIM card and switch on your phone.
2. Tap the android image on the screen to begin. You can select to change the language or make an emergency call.
3. Follow the on-screen instructions to continue. You can set up your Google account, set Google location service, and set the date and time.
4. The Home Screen appears when all settings are finished.

Note: It's recommended to create or sign in a Google account on your phone. If you forget the screen unlock pattern, you can use the Google account to unlock your phone (see [Sorting out Your Phone Settings – Unlocking the screen With Your Pattern](#)).

Switching to Sleep Mode

To save battery power, Sleep Mode suspends your device to a low-power-consumption state while the display is off. Your device also goes into Sleep Mode by itself when the display is automatically turned off after a certain period of time, which you can set in **Settings > Display > Screen timeout**.

Press the **Power Key** to switch to Sleep Mode.

Waking Up Your Phone

1. Press the **Power Key** to activate your screen display.
2. Drag the  icon down.

NOTE: If you have set up screen lock (see Sorting out Your Phone Settings – Protecting Your Phone with a Screen Unlock Pattern), you need to draw an unlock pattern, or enter PIN or password to unlock your screen.

Getting Around Your Phone

Touch Control

You can use finger gestures to control your phone. The controls on your touch screen change dynamically depending on the tasks you're performing.

1. Tap the buttons, icons, or applications to select items or to open applications.
2. Hold your finger on an item to see the available options.
3. Flick the screen to scroll up, down, left or right.
4. Point, drag and drop to move particular items across the screen.
5. Pinch with two fingers to zoom in/out an image.

NOTE: You can view the phone screen in landscape or portrait in some applications when you hold the phone upright or turn it on its side.

You can also use the **Navigation Key** and **OK Key** to scroll through the menu options or items on the screen and make selections or confirm actions.

Home Screen

You can choose what is shown on your Home Screen. Just add or remove stuff to make it your own.

Status & Notifications

Wallpaper
You can add or
remove items here.



Tap to open the web
browser.

Applications

Tap to open the main menu.

Tap to open the dialer.

Extended Home Screen

The Home Screen extends beyond the screen width, giving you loads more

space to add more stuff. Simply slide your finger to the left or right to see the extended Home Screen.

Choosing Your Wallpaper

1. Press **Home Key** to return to the Home Screen.
2. Press **Menu Key** and select **Wallpaper**.
3. Select the wallpaper you want to use from **Download Wallpapers**, **Gallery**, **Live wallpaper**, or **Wallpaper**.
4. Tap **Save** or **Set wallpaper**.

Adding Items to Your Home Screen

1. Press **Home Key** to return to the Home Screen.
2. Slide left or right to find an extended Home Screen where there is space to add an item.
3. Press **Menu Key** and select **Add**.

 
You can also tap and hold the blank area of the Home Screen to get the **Add to Home screen** menu.

4. Select an item type and the item you want to add to the Home Screen.

Removing Items from Your Home Screen

1. Press **Home Key** to return to the Home Screen.




2. Tap and hold the item you want to delete until the  icon appears on the screen.
3. Drag the item to .


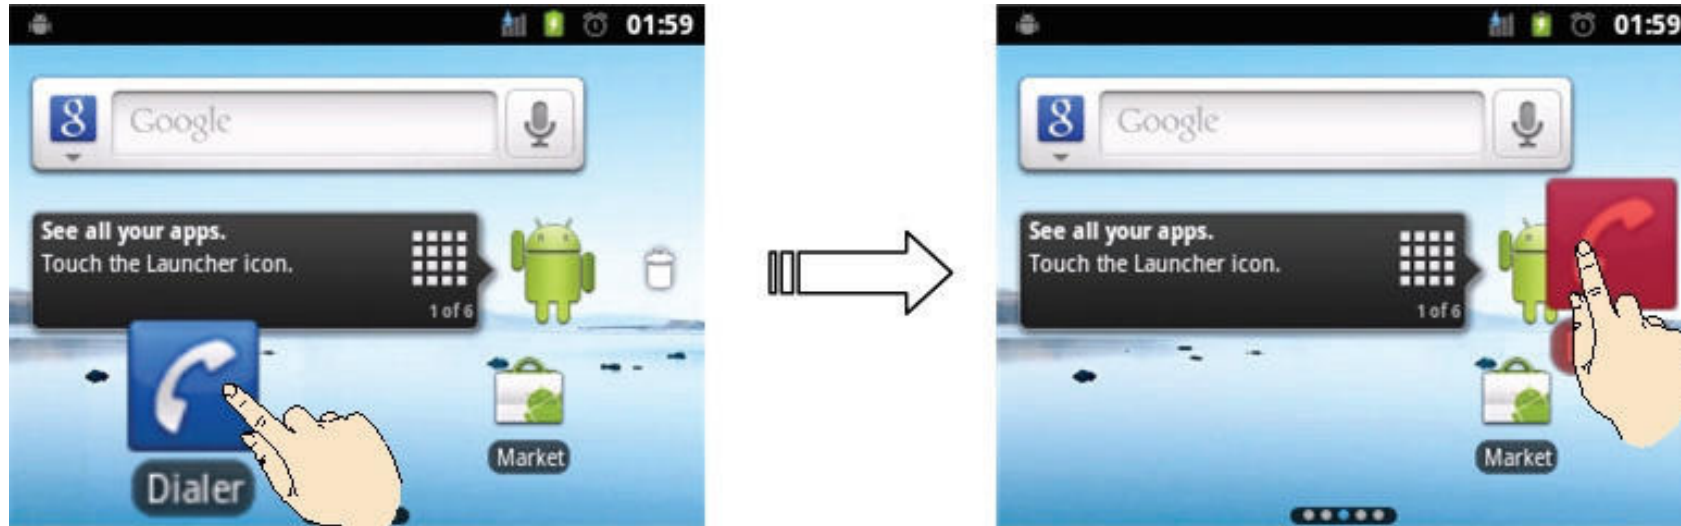


Status and Notification Icons

Your phone will tell you exactly what's going on by showing you simple icons. Here's what they mean.

	GPRS connected		No signal
	GPRS in use		Signal strength

   	EDGE connected		Phone speaker off
	EDGE in use		Phone microphone off
	3G connected		No SIM installed
	3G in use		GPS on
	USB connected		Recording phone call
	Battery flat		microSD card removed
	Battery very low		Preparing microSD card
	Battery low		Connected to a Wi-Fi network

  	Battery partially drained		Alarm set
	Battery full		Wired microphone headset
	Battery charging		Bluetooth on
	Syncing		Speaker on
	Vibrate mode		Problem with SMS/MMS delivery
	Airplane mode		New instant message
	New mail		Upcoming event
	New SMS/MMS/ voicemail		Song is playing
	New Gmail message		Downloading data

	Missed call		Content downloaded and installed successfully
	Call in progress		Sending data
	Call on hold		USB tethering is on
	Call forwarding		Portable Wi-Fi hotspot is on
	More (not displayed) notifications		New Wi-Fi network detected
	Error or warning		

Using the Notification Panel

Flick the status bar downwards to open the Notification Panel, where you can see your calendar events, new messages, and current settings – such as call forwarding or call status. From here you can also open messages, reminders, etc.

TIPS: You can also open the Notification Panel from the Home Screen by

tapping **Menu Key > Notifications**.

Applications and Settings Preview

Application Preview

Your phone has lots of functions. Tap  to see the following applications.

Applications	Description
Alarm	Set alarms.
Browser	Browse the Internet.
Calculator	Do basic calculation.
Calendar	Schedule appointments and events.
Call log	View the incoming, outgoing and missed calls.
Camcorder	Shoot video clips.
Camera	Take some great pictures.
Contacts	Manage your contacts information.
Dialer	Dial a number.
Downloads	Download the files.
Email	Send and receive emails.

Applications	Description
Filer	Manage files on your microSD card.
FMRadio	Search for, listen to and save radio channels.
Gallery	Manage multimedia files.
Gmail	Access your Gmail account and check email on your phone.
Google Search	Search for information online or on your phone.
Latitude	See your friends' locations on the map and share yours with them.
Maps	Track your current location, view real-time traffic, and receive detailed directions to your destination.
Market	Access useful applications and fun games to download.
Messages	Open the Messages screen, where you can send and receive SMS and MMS messages.
Music	Browse your audio files and listen to them in Music player.

Applications	Description
Navigation	Use Google Maps Navigation which is an Internet-connected GPS navigation system.
News & Weather	Check the weather forecast and the latest news.
Note pad	Create text notes.
Places	Use the online map to search for the places such as restaurants, hotels, bars, etc.
SIM Tool Kit	Only appears on the screen if your SIM card provides this function. Please contact the service provider for more information.
Settings	Adjust phone settings.
Sound Recorder	Capture audio clips.
Stopwatch	Measure exactly how long it (whatever 'it' may happen to be) takes to do.
Talk	Use Google Talk to send and receive instant messages.

Applications	Description
Task Manager	Manage all the programs running on your phone.
Videos	Browse and watch video files.
Voice Search	Use the Google Voice Search.
YouTube	Watch YouTube videos and upload your own.

Checking Your Settings

To change or view your phone's settings, tap **Home Key** >  > **Settings**. Or from the Home Screen tap **Menu Key** > **Settings**.


Wireless & networks	Configure and manage wireless connections, such as Wi-Fi, Bluetooth [®] , mobile networks, mobile data connection sharing and Virtual Private Networks. You can also select Airplane mode from here.
Call settings	Set up fixed dialing numbers, voicemail, speed dial, call barring, call forwarding, call waiting, caller ID and international call settings etc.

Sound	Set sound settings, such as ringtones and notifications.
Display	Set display settings, such as screen brightness.
Location & security	Create your screen unlock pattern, set the SIM card lock, manage the phone's credential storage or select device administrators. You can also select the sources to use when determining locations from My Location .
Applications	Manage your applications and installation of new ones.
Accounts & sync	Manage your accounts and configure synchronization settings.
Privacy	Configure privacy settings, such as back-up settings, and personal data.
Storage	Check available memory on the external card and the internal phone storage.
Language & keyboard	Set the system language and region, plus text input options.
Voice input & output	Set up voice recognition and text-to-speech options.
Accessibility	Choose accessibility options after you have installed accessibility related applications.

Date & time	Set the date, time, time zone, and date/time format.
About phone	View phone status, battery use, legal information, etc. You can also check for system updates.

Opening Recently Used Applications

 1. Hold **Home Key** from any screen until the following recently used applications screen appears.

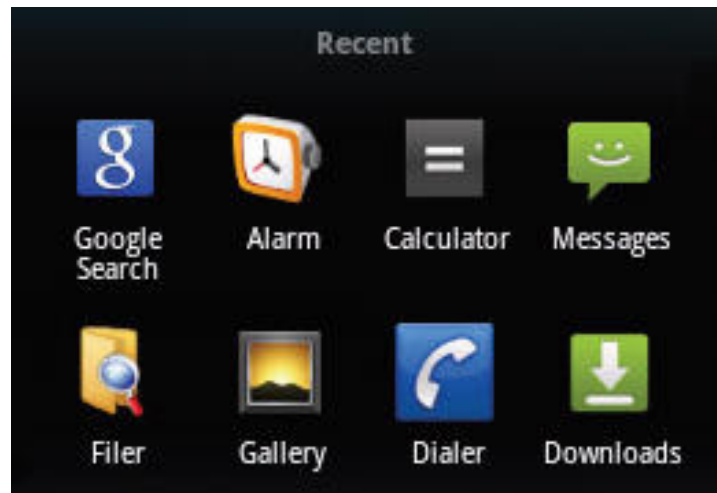

2. Tap the application you want to open.

Phone Calls

How to Make Calls

Calling from the Dialer

1. Open the dialer in one of the following ways.

- Tap **Home Key** >  > **Dialer**.
- Tap  on the Home Screen.
- Press the **Send Key**.

2. Enter the phone number you want to call.

If you make a mistake, tap  on the screen or press  on the

keyboard to erase a wrong entry. Hold  or  to clear all digits.

Your phone automatically lists the matching contacts. You can tap  and see if there are more matching numbers or contacts.

3. Tap  or press the **Send Key**.

Calling from Your Contacts

1. Tap **Home Key** >  > **Contacts**.
2. Slide your finger to scroll the contacts list and tap the contact you want to call.

You can search for a contact by tapping **Menu Key** > **Search**.

3. Tap .

Calling from Your Call History

1. Open the call log in one of the following ways.
 - Tap **Home Key** >  > **Call log**.
 - Tap **Home Key** >  > **Dialer** > .
 - Tap **Home Key** >  > **Contacts** > **Call log**.
2. Tap  next to the number you want to call.

Calling from a Text Message

If a text message contains a phone number that you want to call, you can make the call while viewing the text message.

1. Tap **Home Key** >  > **Messages** and tap the message that contains the phone number you want to call.

2. Tap the message content.
3. Select a number.
4. Tap  or press the **Send Key**.

Using Speed Dial

Press and hold 1 ~ 9 key from the dialer to call the corresponding speed dial number.

The number key 1 is reserved to speed dial your voicemail.

Assigning a speed dial key:

1. Tap **Menu Key > Settings > Call settings > Speed dial** from the Home Screen.
2. Tap a speed dial key.
3. Enter a phone number or tap  to select one from the contact list.
4. Tap **OK**.

Making Emergency Calls

1. Enter the emergency number for your location from the dialer.
2. Tap  or press the **Send Key**.

TIPS: It's possible to dial emergency numbers when your SIM card is not

inserted. Please call the service provider to find out more information. For instance, what emergency numbers are supported?

Making International Calls

1. Open the dialer and press  on the keyboard to enter '+'.
The plus icon is a small square button with a white plus sign on a dark background.
2. Enter the full phone number.

For example: +44-123-12345678 in the following format: + country code / area code / phone number.

3. Tap  or press the **Send Key**.
The Call button is a green rectangular button with the word 'Call' in white text.

 
Whether you can make international calls depends on network status and/or your tariff. Please call the service provider to find out more.

How to Receive Calls

Answering a Call

Press the **Send Key** or drag  down to answer the call.
The phone receiver icon is a green circular button with a white telephone handset icon.

TIPS: Press the **Volume Keys** to adjust the in-call volume.

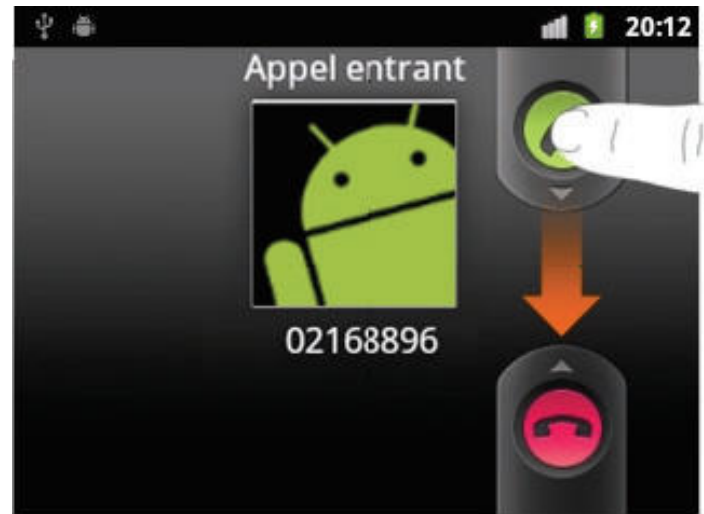

Rejecting a Call

Press the **End Key** or drag  up to reject the call.

Muting a Call

During a call, you can mute your microphone so that the person you are speaking to cannot hear you, but you can still hear him.

Tap **Menu Key > Mute** to turn your microphone off. The mute icon  will appear on the screen. To turn your microphone back on, tap **Menu Key > Mute** again.

Putting a Call on Hold

During a call, you can put it on hold by tapping **Menu Key > Hold**. The  icon will appear on the screen.

TIPS: If you accept an incoming call while you're on another call, the first call automatically goes on hold. Just tap **Menu Key > Swap calls** to switch between the two callers.

Turning the Speakerphone On/Off

Tap **Menu Key > Speaker** during a call to turn the speakerphone on. This icon  will appear in the status bar. Tap **Menu Key > Speaker** again to turn it off.

Ending a Call

Just press the **End Key** or tap **Menu Key > End call** to finish a call.

Adjusting Your Call Settings

From the Home Screen, you can open the call settings menu by tapping **Menu Key > Settings > Call settings**.


Fixed dialing numbers	Restrict outgoing calls to a fixed set of numbers. To do this you must know your SIM card's PIN2 code.	
Voicemail service	Select a voicemail service provider.	
Voicemail settings	Specify a voicemail number.	
Speed dial	Set speed dialing keys.	
Call Barring Settings	Forbid certain types of calls.	
Call forwarding	Forward your incoming calls to a different number. And choose when to forward: Always forward ; Forward when busy ; Forward when unanswered , or Forward when unreachable .	
Additional settings	Caller ID	Choose whether people you call can see your number.
	Call waiting	See new incoming call notification while you're on another call.
Accounts	Set up Internet calling (SIP) accounts.	
Use Internet calling	Choose when to use the Internet calling function.	

Contacts

You can save contacts to your phone memory or your SIM card. If you store their information on the phone memory, you can add emails, postal addresses, pictures, nicknames, websites, etc.

To access your contacts, tap **Home Key** >  > **Contacts**.

 There are five tabs on the Contacts Screen: **Dialer**, **Call log**, **Contacts**, **Favourites** and **Groups**.

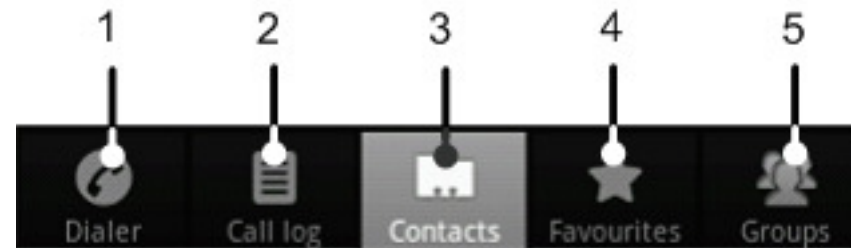

1	Dial the number you want to call.
2	View the call history.
3	View all contacts.
4	Access your favourite and frequently-called contacts.
5	Sort contacts into groups so that you can send

	messages to a group of people quickly.
--	--

Importing and Exporting Contacts

You can import/export contacts from/to your SIM card (or microSD card).

First, let's do it for the SIM card.

1. Tap /Menu Key > **Import/Export** from the Contacts Screen.
2. Choose to import or export contacts. Your phone will automatically read the contacts.
3. Select the contacts you want to import/export. Or, just tap  or **Menu Key > Select all**.
4. Tap .

And this is how you import/export contacts from/to a microSD card.

1. Tap **Menu Key > Import/Export** from the Contacts Screen.
2. Choose to import or export contacts. If you want to import contacts from the microSD card, you should have vCard files saved in the microSD card. If there's more than one vCard file, you need to select the vCard file and tap **OK**.

Sharing Contacts Information

1. Tap /Menu Key > **Import/Export** > **Share visible contacts** from the Contacts Screen. Your phone will export all information of the contacts in the Contact Screen to a temporary vCard file.
2. Choose how you want to send the vCard file. You can either send it via Bluetooth to another device, or as an attachment in an Email, a Gmail or a Message.

Creating a Contact

1. Tap  or /Menu Key > **New contact** from the Contacts Screen.
2. Select where you want to save your contact.
3. Enter the name and phone number(s), email addresses, chat addresses, postal addresses, etc if needed.
4. Tap **Done** to save the contact.

Adding a Contact to Favourites

1. Tap and hold the contact you want to add to **Favourites** from the Contacts Screen.

2. Tap **Add to favourites** from the shortcut menu.

TIPS: You can also tap a contact and then tap  next to the contact's name to add it to **Favourites**.

Searching for a Contact

1. Tap  at the bottom of the Contacts Screen.
2. Input the contact name you want to search for.

The contacts matched will be listed.

Editing a Contact

1. Tap the contact you want to edit from the Contacts Screen.
2. Tap .
3. Edit the contact and tap **Done**.

TIPS: You can also edit a contact by holding it in the Contacts Screen and selecting **Edit contact** from the pop-up shortcut menu.

Deleting a Contact

1. Tap / **Menu Key** > **Delete contacts** from the Contacts Screen.

2. Select the contacts you want to delete.
3. Tap .
4. Tap **OK** to delete the contacts.

Creating a New Group

1. Tap the **Groups** tab from the Contacts Screen.
2. Tap  at the bottom of the screen.
3. Enter the group name and tap **Done**.
4. Tap the new group and tap  to add group members.
5. Tick the check boxes next to the contacts you want. Then tap .

To send messages to the group members, you can tap  next to the group and select message recipients from the listed group members.

Using the Hardware Keyboard to Enter Text

Your phone has a hardware keyboard – a compact version of standard computer keyboard.



When entering text, do the following:

- To enter lowercase letters, press the letter keys on the hardware keyboard.
- To enter a single uppercase letter, press  and then press the corresponding key.

- To enter all uppercase letters, press  twice and then press the letter keys. To change back to all lowercase letters, press  again.
- To enter a character, number or symbol (labeled at the upper part of the key), press  and then press the corresponding keys. Press  twice to enter all characters, numbers or symbols (labeled at the upper part of the key). And then the same again to go to normal type.
- To open the symbol pad, press . You can tap on the screen or use **Navigation Key** and **OK Key** to enter a symbol.
- To move the cursor, tap on the screen or press **Navigation Key**.
- To delete the character before the cursor, press .
- To start a new line, press .
- To enter a space, press .

Note: Holding a specific letter key may result in multiple accented character options (like á, ü, é, etc). Tap on the screen or use **Navigation Key** and **OK**

Key to enter the character you need.

Text Input Settings

You can choose the text input settings for the hardware keyboard by tapping **Menu Key > Settings > Language & keyboard > Built-in keyboard** from the Home Screen.

Tick the check boxes to enable the following options:

 
- **Auto-replace:** Correct the mistyped words automatically.
- **Auto-cap:** Capitalise the first letter in each sentence automatically.
- **Auto-punctuate:** Press the space key twice to insert “.”

Using the Onscreen Keyboard to Enter Text

You can also use the onscreen Android keyboard to enter text. If the keyboard is enabled, it automatically appears on the screen when you enter a field that needs text.


To enable the onscreen keyboard:

1. Tap **Home Key** >  > **Settings** > **Language & keyboard**.
2. Tick the **Android keyboard** check box.
3. Tap **Android keyboard** and tick the **Enable the soft keyboard** check box.

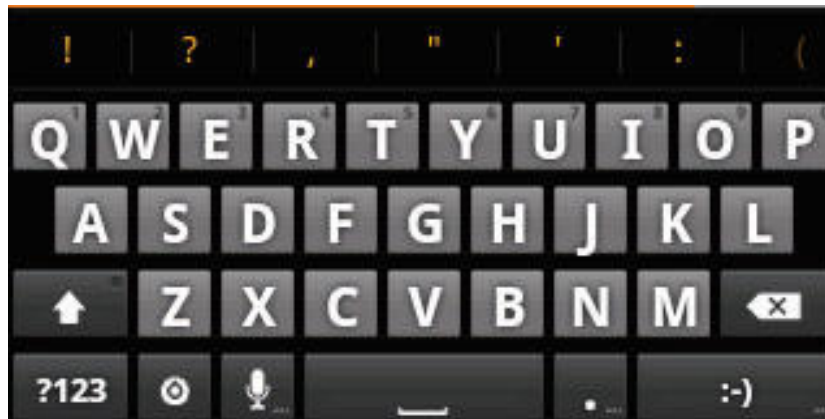

- Tap the alphabetic keys to enter letters. Tap and hold the keys to enter associated accented letters or numbers. For example, to enter È, tap

 and hold  and the available accented letters and number 3 appear. Then slide to choose È.

- Tap  to use uppercase or lowercase. This key also changes to indicate the current case you are using:  for lowercase,  for uppercase, and  when locked in uppercase.
- Tap  to delete any text you have entered.
- Tap  to select numbers and symbols. You can then tap  to find more. Also, often used symbols are displayed on top of the keyboard. Flick left or right to find the one you need and tap to enter.
- Tap  to enter a smiley face; hold the key and swipe to choose more emoticons.
- Tap  to change input method or set up Android keyboard.
- Tap  to use Google's networked voice input.

Text Input Settings

To choose the text input settings for the onscreen Android keyboard, tap **Menu Key > Settings > Language & keyboard > Android keyboard** from the Home Screen.

You can tick the check boxes to enable:

- Enable the soft keyboard
- Vibrate on key-press
- Sound on key-press
- Pop-up on key press
- Touch to correct words
- Auto-capitalisation of the first letter in each sentence
- Show settings key

You can also set the following options:

- **Voice input:** Select to display the voice input icon on the main or symbols keyboard. You can also hide the icon.

Messages

Your SMS (text message) and MMS (multimedia messaging service) files are located in **Messages** ( > **Messages**).

From **Messages**, you can receive and send an SMS or MMS.

When you receive a new message, you can open it from the Notification Panel, or from the Messages Screen. Simply tap on the new message to read it.

Sending a Text Message

1. Tap **Home Key** >  > **Messages**.
2. Tap **New message**.
3. Tap the **To** field and enter the recipient's number, or tap  to add recipients from the Contact list. You can also enter the first letters of the recipient's name to display a list of matching names stored in **Contacts**, and then select their names from the list.
4. Tap **Type to compose** and type your message.
5. Tap **Send** to send your text.

Sending an MMS

1. Tap **Home Key** >  > **Messages**.
2. Tap **New message**.
3. Tap **To** field and enter the recipient's number, or tap  to add recipients from the Contact list. You can also enter the first letters of the recipient's name to display a list of matching names stored in **Contacts**, and then select their names from the list.
4. Tap **Menu Key** > **Add subject** to enter the subject of your MMS.
5. Tap **Type to compose** and type your message.
6. Tap **Menu Key** > **Attach** if you want to add an attachment to your MMS.
 - **Pictures**: Select a picture to add to your MMS.
 - **Capture picture**: Take a photo to attach to your MMS.
 - **Videos**: Select a video clip to attach to your MMS.
 - **Capture video**: Shoot a video clip and attach to your MMS.
 - **Audio**: Select an audio file to attach to your MMS.
 - **Record audio**: Record an audio file to attach to your MMS.
 - **Slideshow**: Edit a slideshow to attach to your MMS.

7. When you've finished, tap **Send**.

NOTE: Add an attachment to text message and it will be converted into an MMS without you having to do a thing. Likewise if you remove the attachment from an MMS, it'll automatically become a text message.

Managing Messages and Their 'Threads'

Text and MMS messages sent to and received from the same contact (or number) are grouped into a message thread in your Messages Screen. That way you can tap a message thread and see the 'conversation' you've had with someone – like a chat program. These message threads are arranged according to when you received them, with the latest one on top.

Replying to a Message

1. Tap the message thread you want to reply to from the Messages Screen.
2. Tap **Type to compose** and type your message.
3. Tap **Send**.

Deleting a Message Thread

1. Tap **Menu Key > Delete threads** from the Messages Screen.
2. Select the threads you want to delete.

3. Tap **Delete**.
4. Tap **Delete** again to confirm.

You can also delete a message or thread by opening it from the Messages Screen and tapping **Menu Key > Delete**.

Message Settings

To configure your message settings, tap **Menu Key > Settings** from the Messages Screen.

Storage settings:

- **Delete old messages:** Select to delete old messages when your storage limits are reached.
- **Text message limit:** Set the maximum number of text messages allowed in a single thread.
- **Multimedia message limit:** Set the maximum number of multimedia messages allowed in a single thread.

Text message (SMS) settings:

- **Delivery reports:** Request a delivery report for every text message you send.
- **Manage SIM card messages:** Manage the messages saved on your SIM

card.

- **SMS validity:** Set the validity time for outgoing text messages.
- **SMS priority:** Set the priority of outgoing text messages.
- **Service Center:** Enables you to view and edit the service centre number.

Multimedia message (MMS) settings:

- **Delivery reports:** Request a delivery report for every MMS message you send.
- **Read reports:** Request a read report for each MMS message you send.
- **Auto-retrieve:** Automatically retrieve MMS messages.
- **Roaming auto-retrieve:** Automatically retrieve MMS messages while roaming.
- **MMS validity:** Set the validity time for outgoing MMS messages.
- **MMS creation mode:** Select to create an MMS message with or without restriction, or receive warning when adding restricted attachment to an MMS message.

Notification settings:

- **Notifications:** Show message notifications in the status bar.
- **Select ringtone:** Choose a ringtone for your incoming messages.

- **Vibrate:** Make your phone vibrate when a new message arrives.

Signature settings:

- **Edit signature:** Edit your signature, which can be added automatically to outgoing messages.
- **Add signature:** Add the signature to all outgoing messages.

Email

Go to the Email Screen to set up your email account and exchange emails:
Tap **Home Key** >  > **Email**.

Creating an Email Account

1. Enter your email address and password. Then tap **Next** when you enter the Email Screen for the first time.
2. Select the type of your account, edit the incoming server settings, and then tap **Next** or **Next [Check]**.

After you tap **Next [Check]**, your phone will check the incoming server settings. If you are notified that the setup could not be finished, you'll need to correct some settings to finish it. If there is any problem, please contact your mobile service provider and email service provider.

3. Edit the outgoing server settings and tap **Next** or **Next [Check]**.

After you tap **Next [Check]**, your phone will check the outgoing server settings.

NOTE: Your device 'knows' the client settings for lots of email service providers. If the email service you use is from those providers, the phone

will automatically check the incoming and outgoing settings after you enter your email account and password.

4. Set the Email checking frequency, download options, account name and other settings. Tap **Done** when you finish.

Your phone will show the inbox of the Email account and start to download Email messages.

TIPS: To add more Email accounts, open Email to get the Inbox screen. Then tap **Menu Key > More > Accounts > Menu Key > Add account**.

Writing and Sending Emails

After creating your email account, you're ready to write and send emails.

1. Tap **Menu Key > Compose** from the Email Screen.
2. Tap **To** field and enter the recipient's email address.

When you enter the email address, the matching addresses saved in your Contacts will be displayed. You can tap the recipient from the list.

TIPS: You can also tap **Menu Key > Add Cc/Bcc** to add recipients.

3. Enter the subject and the content of your email. If necessary, change the email priority.
4. Tap **Menu Key > Add attachment** to add files to the email.

5. Tap **Send**.

Replying to and Forwarding Emails

1. From the Email Screen open the email you want to reply to/forward.
2. Tap **Reply** or **Menu Key > Forward**.

You can also tap **Reply all** if you want to include everybody who got the original email. If forwarding, enter the email address(es) your message will be sent to.

3. Type your email.
4. Tap **Send**.

Email Settings

Tap the account you want to set from the Email Screen and tap **Menu Key > More > Account settings**. Here's what you can choose from.

General settings:

- **Account name:** Set your account name.
- **Your name:** Set the name shown on your outgoing emails.
- **Email address:** Set the email address of the account.

- **Use signature:** Choose to use your signature.
- **Signature:** Set your signature.
- **Use reply to:** Use reply to email address
- **Reply to:** Edit reply to email address.
- **Email check frequency:** Choose how often you want to check for emails.
- **Power-saving mode:** Enable the email synchronization time intelligent adjustment.
- **Default account:** Select the check box to send email from this account by default.

Download settings:

- **Download settings:** Select download options and message number per download.
- **Sync deleted message:** Delete emails on the server and the emails will be deleted on the phone, too.

Notification settings:

- **Email notifications:** Select to be notified in status bar when email arrives.
- **Select ringtone:** Select the ringtone for incoming email.
- **Vibrate:** Make phone vibrates when email arrives.

Server settings:

- **Incoming settings:** Set the incoming email server.
- **Outgoing settings:** Set the outgoing email server.

Getting Connected to the Internet

Your phone's impressive networking capabilities will get you onto the Internet or a corporate network (intranet) with ease.

You can use default connection settings to connect to the web via your mobile network (GPRS/EDGE/3G), or Wi-Fi.

The GPRS/EDGE/3G connection can be enabled/disabled manually. Just select  > **Settings** > **Wireless & networks** > **Mobile networks** from the Home Screen and tick or clear the **Data enabled** check box.

Adding a New GPRS/EDGE/3G Connection

To get connected via GPRS/EDGE/3G you need a data plan with your service provider. Also if the GPRS/EDGE/3G settings are not pre-configured on your phone, please contact your provider to get the following information. Changing the settings without talking to your service provider could stop your phone from working.

- Access Point Name (APN).
- Your user name and password if needed.
- Server IP and the port number if the network uses a proxy server.

1. Tap **Home Key** >  > **Settings** > **Wireless & networks** > **Mobile**

networks > Access Point Names.

2. Tap **Menu Key > New APN.**
3. Tap **Name** to enter your APN name (it can be whatever you like).
4. Tap **APN** to enter the APN you want to add.
5. Tap **Proxy** and **Port** to enter the Server IP and port if the network uses a proxy server.
6. Tap and enter **Username** and **Password**. (If there's no user name or password, leave them blank.)
7. If needed, tap and enter **APN type**.
8. Tap **Menu Key > Save** to complete.

TIPS: To set the APN to default settings, tap **Menu Key > Reset to default**.

Turning on Wi-Fi

Wi-Fi provides wireless Internet access over distances of up to 300 feet (about 100 meters).

1. Tap **Home Key >  > Settings > Wireless & networks.**
2. Tick the **WiFi** box to turn it on.

Connecting to a Wi-Fi Network

1. Tap **Home Key** >  > **Settings** > **Wireless & networks** > **Wi-Fi settings**.

The Wi-Fi network names and security settings (open or secured) that your phone has detected are shown in **Wi-Fi networks** section.

2. Tap a network to connect to it.

If the network is secured, you'll need to enter a password.

Checking the Wi-Fi Network Status

You can check the Wi-Fi network by looking at the  icon in the status bar.

Or tap **Home Key** >  > **Settings** > **Wireless & networks** > **Wi-Fi settings**. Next, tap the wireless network that the phone is currently connected to. You can check the network status from the pop-up window.

Using the Phone as a Modem

You can access the Internet on your PC via your phone as a modem. Note the function may result in data charges from your mobile phone carrier.

Please contact them for detail.

Enabling the Modem Function

You can use your phone's mobile data connection via USB to connect to the Internet on your computer.

NOTE:

- Make sure that USB storage is turned off before enabling the modem function. You can flick down the notification panel and tap **Turn off USB storage > Turn off USB storage**.
- The PC accesses the Internet via the phone's mobile network. Therefore, set up the GPRS/EDGE/3G connection correctly before you try to use the phone as a modem.
 1. Make sure your phone's data connection is enabled.
 2. When you connect your phone to your PC with the provided USB cable for the first time, a window will pop up and prompt you to install the driver.
 3. Double click the executable file (.exe) in the window and follow the prompt to finish the driver installation.

NOTE: If the window doesn't pop up automatically for some reason, please open the new CD-ROM drive on your PC manually and find the executable file to run it.
 4. Tap on the phone **Home Key > Menu Key > Settings > Wireless &**

networks > Tethering & portable hotspot and tick the **USB tethering** check box. A new network connection will be created on your PC.

5. Go to **Control Panel > Network** on your PC to enable the new network connection.

Now you can launch the Internet browser on your PC and start surfing.

Disabling the Modem Function

Tap **Home Key > Menu Key > Settings > Wireless & networks > Tethering & portable hotspot** and clear the **USB tethering** check box.

You can also just pull out the USB cable.

Using the Phone as a Wi-Fi Hotspot

You can use the phone as a portable wireless router, sharing the Wi-Fi connection for one or more computers or other devices. The function need data connection on a mobile network and may result in data charges.

NOTE:

- The PC accesses the Internet via the phone's mobile network. Therefore, set up the GPRS/EDGE/3G connection correctly before you try to use the phone as a Wi-Fi hotspot.
- When the portable Wi-Fi hotspot function is enabled, you cannot use your

phone's applications to access the Internet via its Wi-Fi connection.

Enabling the Wi-Fi Hotspot

1. Make sure your phone's data connection is enabled.
2. Tap **Home Key > Menu Key > Settings > Wireless & networks > Tethering & portable hotspot** and tick the **Portable Wi-Fi hotspot** check box.
3. Tap **Portable Wi-Fi hotspot settings > Configure Wi-Fi hotspot**.
4. Change the name of the hotspot and its security setting, if necessary.
NOTE: The default hotspot is set as an open one. You can tap **Open** and choose **WPA2 PSK** to set up a password.
5. Tap **Save**. Now you can find the hotspot on other devices and connect to it.

Disabling the Wi-Fi Hotspot

Tap **Home Key > Menu Key > Settings > Wireless & networks > Tethering & portable hotspot** and clear the **Portable Wi-Fi hotspot** check box.

Browsing the Internet

You can use your phone to get on the Internet. Your phone automatically creates a GPRS, EDGE or 3G connection while you browse web pages.

Tap **Home Key** >  > **Browser**.

There are different ways to open web pages.

- Tap the address bar to enter the website you want to browse. Then tap  or press .
- Tap  beside the address bar or tap **Menu Key** > **Bookmarks**. Select an item to open.
- Tap  beside the address bar or tap **Menu Key** > **Bookmarks**. Choose an item from the **Most visited** tab or **History** tab.

Browsing Options

- **Refresh:** **Menu Key** > **Refresh**.
- **Forward:** **Menu Key** > **More** > **Forward** to browse the next web page.
- **Add the page to Bookmarks:** **Menu Key** > **More** > **Add bookmark**.
- **Search:** **Menu Key** > **More** > **Find on page** and enter the search item.

- **Copy: Menu Key > More > Select text** and slide your finger on the page to select the text you want to copy. Your phone automatically copies the selected text to the clipboard.
- **Share pages: Menu Key > More > Share page** to send a page by Bluetooth, Email, Gmail or Messages.
- **Download/page info: Menu Key > More > Page info/Downloads.**
- **Landscape browser: Menu Key > More > Settings.** Tick the **Landscape-only display** box to view the landscape browser screen only.
- **Open new browser window: Menu Key > New window.** Then tap the address bar to enter the website you want to browse.
- **Switch browser windows:** If you have more than one browser windows opened, you can switch between these windows by tapping **Menu Key > Windows**. Then tap the page you want to browse. You can also tap  to close a window.

Opening Links in Web Pages

When you're on a web page with a link to another site, either tap the link to open the page, or hold on the link to open the shortcut menu, giving you these options:

- Open
- Open in new window
- Bookmark link
- Save link
- Share link
- Copy link URL

Downloading Apps from the Web

If a web page has link to an application you'd like to download, just hold on the link and select **Save link**. The application will be saved to your microSD card.

Using Bookmarks

To bookmark a web page, open it, tap  or **Menu Key > Bookmarks**, and then **Add**. Give the bookmark a name and tap **OK**.

TIPS: To change how you view bookmarks on your phone screen, tap **Menu Key > List view/Thumbnail view**.

Editing a Bookmark

Open a browser window. Tap  or **Menu Key > Bookmarks**. Select the bookmark you want to edit – holding on it until the shortcut menu pops up and select **Edit bookmark**. Edit the name or location, and then tap **OK** to save.

Deleting a Bookmark

Open a browser window. Tap  or **Menu Key > Bookmarks**. Choose the bookmark you want to get rid of by holding on it until the shortcut menu pops up. Then select **Delete bookmark** and tap **OK** to confirm.

Browser Settings

You can set the browser text size, home page etc. by tapping **Menu Key > More > Settings** from a browser window.

Page content settings

- **Text size**
- **Default zoom**
- **Open pages in overview**
- **Text encoding**

- **Block pop-up windows**
- **Load images**
- **Auto-fit pages**
- **Landscape-only display**
- **Enable JavaScript**
- **Enable plug-ins**
- **Open in background**
- **Set homepage**

Privacy settings

- **Clear cache:** Clear locally cached content and databases.
- **Clear history:** Clear the browser navigation history.
- **Accept cookies:** Allow websites to use cookies.
- **Clear all cookie data:** Clear the browser cookies – deleting all history data.
- **Remember form data:** Remember the data you type in forms for later use.
- **Clear form data:** Clear all the saved form data.
- **Enable location:** Allow sites to request access to your location.

- **Clear location access:** Clear location access for all websites.

Security settings

- **Remember passwords:** Save usernames and passwords for websites.
- **Clear passwords:** Clear all saved passwords.
- **Show security warnings:** Warn if there's a problem with a site's security.

Advanced settings

- **Set search engine:** Select a search engine.
- **Website settings:** View advanced settings for individual websites. (Only available for some websites.)
- **Reset to default:** Clear all browser data and reset all settings to default.

Bluetooth®

Bluetooth® is a short-range wireless communication technology. Phones or other devices with Bluetooth capabilities can exchange information wirelessly within a distance of about 10 meters. The Bluetooth devices must be paired before the communication is performed.

Turning Bluetooth on/off

Tap **Home Key** >  > **Settings** > **Wireless & networks** and tick the **Bluetooth** check box. When Bluetooth is on, the  icon will appear in the status bar.

If you want to turn Bluetooth off, just clear the **Bluetooth** check box.

NOTE: If you switch off your phone while Bluetooth is turned on, when you switch on the phone again, Bluetooth will turn on automatically.

Making Your Phone Visible

In order to work with other phones or devices that have Bluetooth, you need to make your phone 'visible' to them.

1. Tap **Home Key** >  > **Settings** > **Wireless & networks** > **Bluetooth**

settings.

2. Tick the **Bluetooth** check box if it isn't already ticked.
3. Tick the **Discoverable** check box to make your device visible.

To make your phone 'invisible' simply clear the **Discoverable** check box.

Changing Your Phone's Name

When your phone is visible to other Bluetooth devices it will be seen by its name, and you can make that anything you want – like 'Ben's Android edition STARTEXT'.

1. Tap **Home Key** >  > **Settings** > **Wireless & networks** > **Bluetooth settings**.
2. Tick the **Bluetooth** box if it is not already ticked.
3. Tap **Device name**.
4. Enter the name and tap **OK**.

Hooking Up With Another Bluetooth Device

You can pair your phone with another device that has Bluetooth capabilities. Once you do this, the two devices can exchange information with Bluetooth

turned on.

1. Tap **Home Key** >  > **Settings** > **Wireless & networks** > **Bluetooth settings**.
2. Tap **Scan for devices**. Your phone will show all visible Bluetooth devices (in range) in its **Bluetooth devices** list.
3. Select the device you want to pair with.
4. If required, enter your PIN and tap **OK**.

If a PIN is required, the same PIN should be entered on the other device.

Making the Most of Multimedia

Taking Pictures With Your Camera

Your phone has a 3.2-megapixel camera. Open it by holding the **Camera Key**  or tapping **Home Key** >  > **Camera**.

Aim the camera at the subject, then tap  or press the **OK Key** to take a shot. To view it, just tap the picture in the right up corner of the screen. Or select **Menu Key** > **Gallery** to view all your pictures.

Adjusting Camera Settings

From the Camera Screen, you can do the following settings.

- Tap  to set up focus mode, exposure, picture size/quality, color effect, ISO, anti-banding, saturation, contrast, sharpness, or restore the camera settings to default.
- Tap  to enable or disable saving of pictures' locations.
- Tap  to change white balance.
- Tap  to zoom in or out.

TIPS: To change quickly from camera to camcorder or vice versa, use the switch icon . Use the  bar to adjust the brightness.

Shooting Video With Your Camcorder

Open the camcorder by tapping **Home Key** >  > **Camcorder**. Then tap  or press the **OK Key** to start shooting, and tap  or press the **OK Key** to stop. Tap the picture in the right up corner of the screen to view the video you've just shot. Or tap **Menu Key** > **Gallery** to see all your video clips.

Adjusting Your Video Settings

From the Camcorder Screen, you can do the following settings.

- Tap  to adjust color effect, video quality, video/audio encoder, video duration, and restore the camcorder settings to default.
- Tap  to change white balance.
- Tap  to change video quality, video/audio encoder, and video duration together. And the icon will change to **High**, **Low**, **MMS** or **YouTube**.

Listening to Your FM Radio

The FM Radio on your phone lets you search for, listen to and save radio channels. And when you get a call, the radio will automatically switch off.

 
To tune in, plug your headset into your phone.

Tap **Home Key** >  > **FMRadio** and then tap  if needed. This  icon will pop up in the status bar.

Tap  or  to scan for available FM channels. If you need to fine tune the radio's reception, tap **Menu Key** > **Adjust**. Select  /  to make the frequency go up or down by +/- 0.1 MHz.

Once you get the best reception of a channel, hold the frequency shown until a red box appears on the screen, and then drag it into the box to save – as shown in the following diagram.

IMPORTANT: The quality of your radio's reception depends on the coverage of the radio station where you are. The wired headset that comes with your phone works as an antenna, so always connect the headset when using the FM Radio.

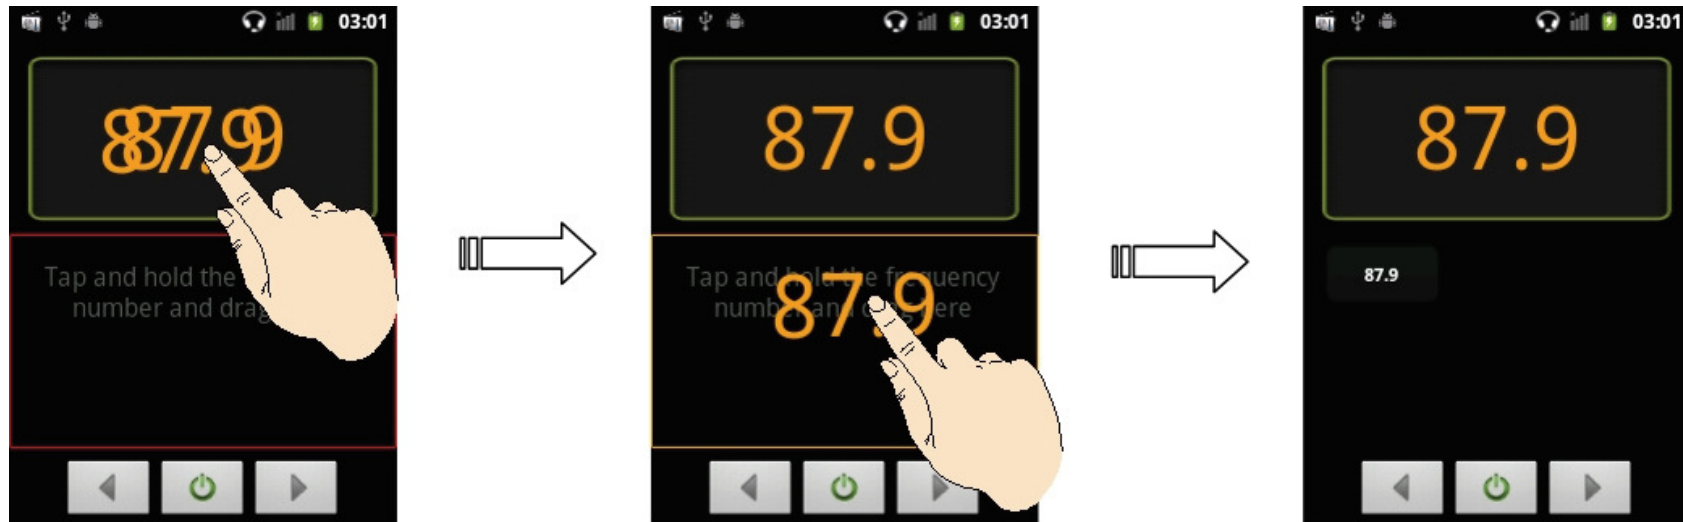


- Press the **Volume Keys** to adjust the volume.
- Tap **Menu Key** > **Sleep** to set the FM radio sleep timer.
- Tap  to switch off the radio.

Playing Your Music

You can play digital audio files from your phone's memory card in **Music**.

1. Tap **Home Key** >  > **Music** to open the Music Screen.
2. Select **Artists/Albums/Songs/Playlists** to see the songs you want to play.

 3. Tap a song from the list to start playing.
4. Press the **Volume Keys** to adjust the volume.

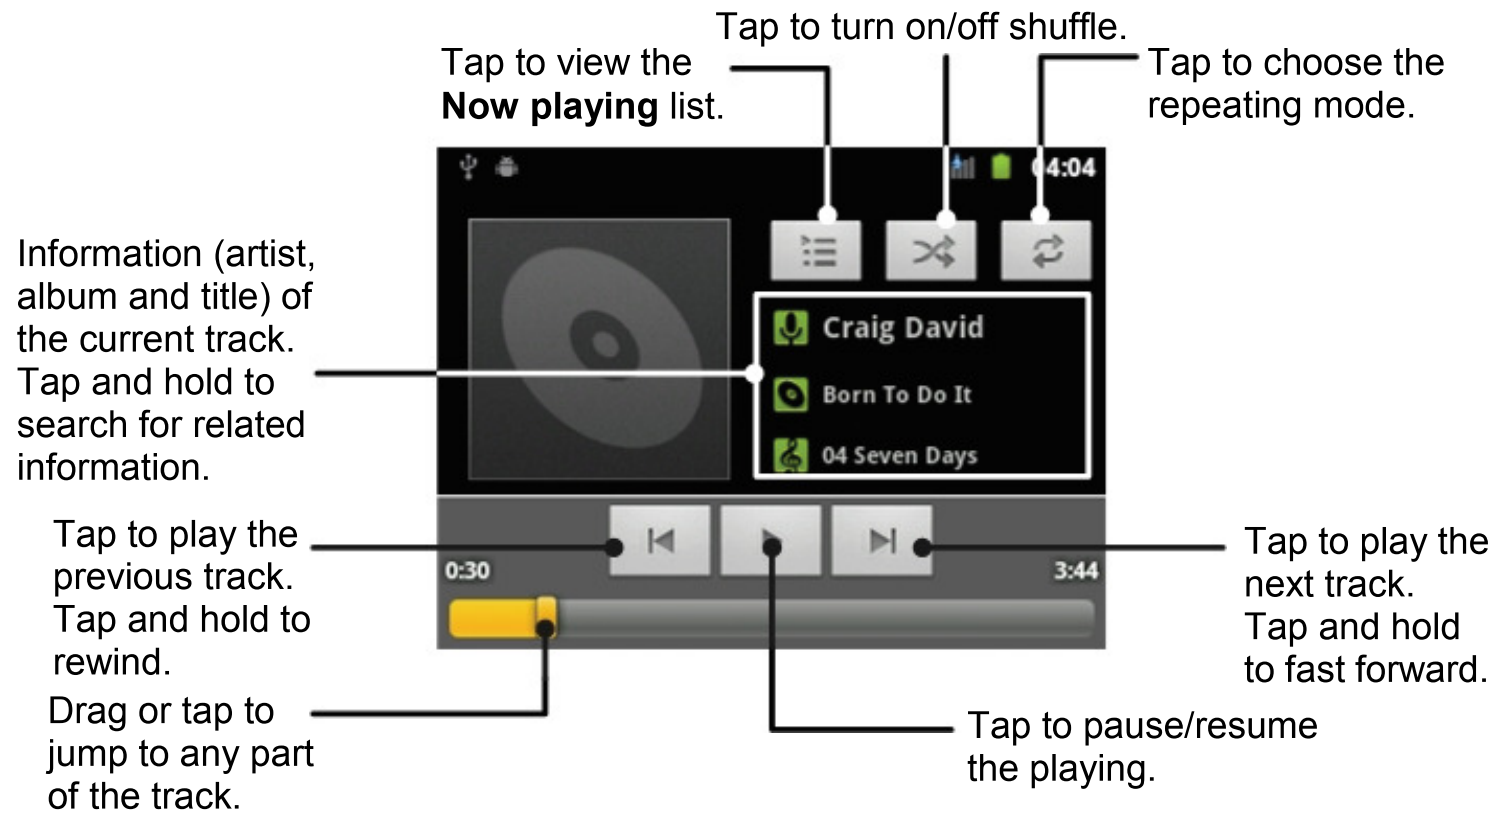

Creating Playlists

Playlists help you organize your music files:

1. Select a music file you want to add to a new playlist.
2. Tap and hold on the file until a shortcut menu pops up.
3. Tap **Add to playlist**.
4. Tap **New**.
5. Type the playlist name and tap **Save**.

Managing Playlists

1. From the Music Screen tap **Playlists** to see them all.
2. Hold on the playlist you want to play or edit until a shortcut menu pops up.
3. Tap **Play**, **Delete** or **Rename**.

Adding a Song to a Playlist

1. Select **Artists/Albums/Songs/Playlists** to see the songs.
2. Hold on the song until a shortcut menu pops up.
3. Select **Add to playlist**.
4. Select a playlist.

Setting a Song as Ringtone

 
1. Select **Artists/Albums/Songs/Playlists** to see the songs.
2. Hold on the song until a shortcut menu pops up.
3. Select **Use as phone ringtone**.

TIPS: You can also set a song as ringtone when you are playing it by tapping **Menu Key > Use as ringtone**.

Playing Your Videos

First, you need to copy video files to your memory card. Then, to play a video file, tap **Home Key >  > Videos**. This will open the Videos Screen and show the video files saved to your memory card.


Choose a video file and the video player will open. Tap on the screen and the control bar will appear as below. So now you can play, pause, fast forward, etc.

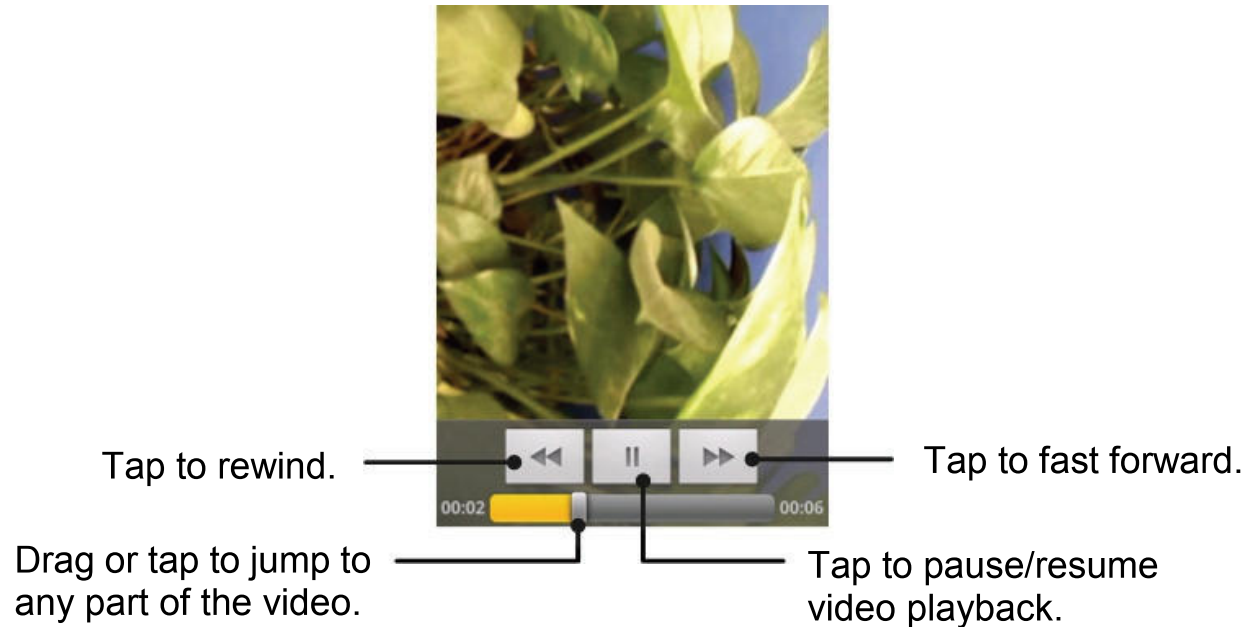

Opening Your Gallery

Gallery helps you view pictures and play videos. You can also do some basic editing of your pictures – such as setting them as wallpaper or contact icons, cropping them and sharing them with friends.

 TIPS: When viewing a picture, you can double-tap to zoom in/out. You can also pinch to zoom in or out.

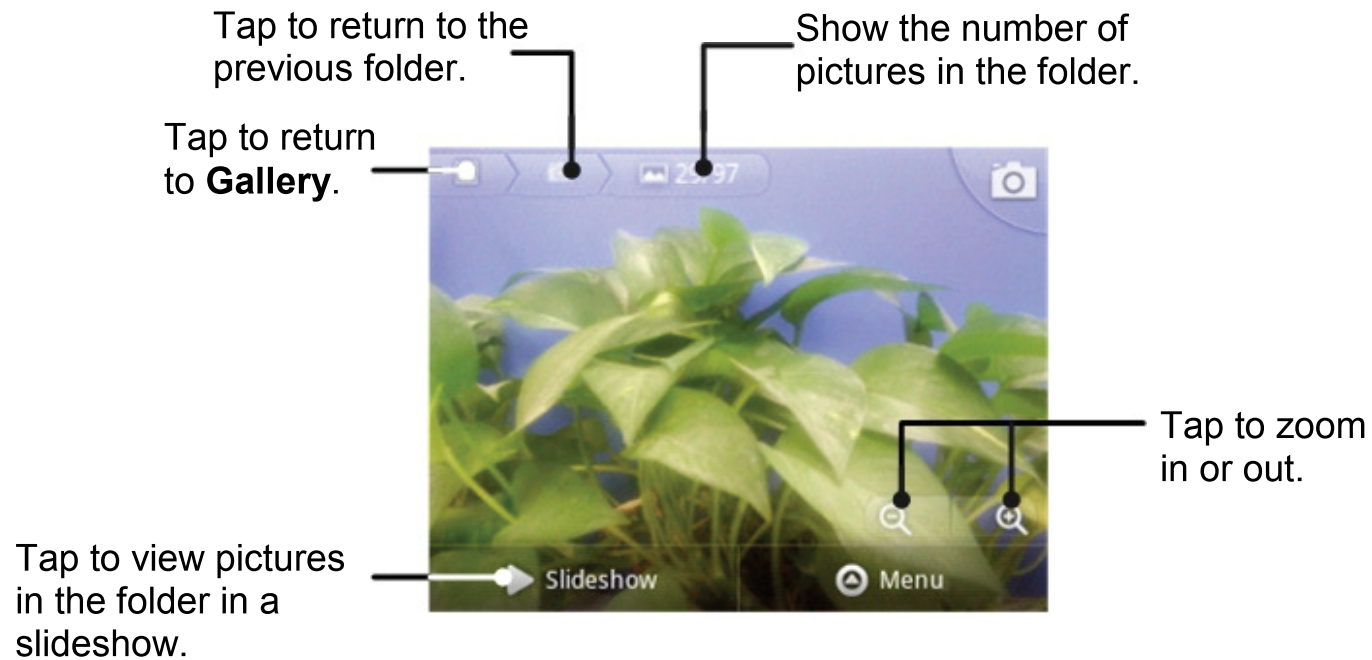

Making Memorable Memos

Sound Recorder enables you to record your voice memos. You need a microSD card to use it.

1. Tap **Home Key** >  > **Sound Recorder**.
2. Make sure your mouth is near the phone's microphone.

3. Tap  to start recording.
4. Tap  to stop recording.
5. Tap  to play back the voice recording.
6. Tap **OK** to save the voice recording, or tap **Discard** to delete it.

TIPS: Where are your recordings? You'll find them by going to **Home Key >  > Music > Playlists > My recordings**. And if you'd like to use a recording as a ringtone, hold the recording and select **Use as phone ringtone** from the pop-up shortcut menu.

Using Your Google™ Applications

Signing in to your Google Account lets you synchronize Gmail, Calendar, and Contacts between your phone and the web. And if you don't have an account, you can easily create one.

1. Tap a Google application, such as **Market**.
2. Read the instructions and select **Next**.
3. If you've got a Google account, tap **Sign in**. Enter your user name and password. Then tap **Sign in**. (Or tap **Create** if you don't have a Google account.)

Gmail

Gmail is a web-based email service that's configured when you sign in to your Google account. Depending on your synchronization settings, the Gmail on your phone can be automatically synchronized with your Gmail account on the web.

This is how you create and send an email:

1. Open **Gmail** by tapping **Home Key** >  > **Gmail**.
2. Tap **Menu Key** > **Compose**.

3. Enter the email address of the person you're contacting in the '**To**' field. If you're sending the email to several people, separate the email addresses with a comma. You can add as many recipients as you want.
4. Enter the email subject, and then write your email.
5. Tap **Menu Key > Send**.

Google Calendar

Tap **Home Key >  > Calendar** to use Google Calendar, Google's time management application. You can use the calendar to schedule appointments, including meetings and other events. Your appointments will be displayed on the screen as scheduled. You can also synchronize appointments to your Google account, which enables you to manage your schedule online on your PC.

Google Talk

Tap **Home Key >  > Talk** to use Google Talk. Google Talk is Google's instant Messages program, which enables you to communicate with other people who also use Google Talk.

This is how you add a new friend:

You can only add people who have a Google Account.

1. In the Friends list, tap **Menu Key > Add friend**.
2. Enter the Google email address of the friend you want to add.

This is how you start a chat:

1. Tap a friend in the Friends list.
2. Chat with your friend by entering text using the on-screen keyboard.
3. Tap **Send**.

TIPS: Tap the talk status bar above the friends list, tap  to change status, and then enter your status message in the text box.

Places

Google Places helps you find all kinds of businesses near you.

1. Tap **Home Key >  > Settings > Location & security** and tick the **Use GPS satellites** or **Use wireless networks** check box.
2. Tap **Home Key >  > Places**. Wait while you are being located.
3. Select a business category and the information of that type of business near you will be displayed. You can also use the **Find places** search box on the top to find the business you need.

NOTE: Tap **Add** to add new business categories.

4. Tap a result you are interested in and check out the details and reviews about that place. You can also see the place on Google Maps, find out how to get there, or give that business a call.

Latitude

Google's Latitude service is a social tool for sharing your location information with selected friends.

Tap **Home Key** >  > **Latitude** to enable Latitude service.

Each time you launch the **Maps** application, your location will be determined by GPS or the phone network and your Latitude status will be updated. You can tap **Menu Key** > **Join Latitude** in **Maps** or **Home Key** >  > **Latitude** to see your status as well as that of your selected friends.

In Latitude, tap **Menu Key** to refresh friends' status, see them on Maps, add new friends, show stale friends or change the settings.

You can also turn off Latitude service. In Latitude Screen, tap **Menu Key** > **Settings** > **Sign out of Latitude**.

Sorting out Your Phone Settings

Setting Time and Date

1. Tap **Home Key > Menu Key > Settings > Date & time**.
2. Clear the **Automatic** tick box if you want to set the time and date by yourself.
3. Tap **Set date**. Adjust the date, and tap **Set** to save it.
4. Tap **Select time zone** and tap where you are in the world.
5. Tap **Set time**. Adjust the time, and tap **Set** to save it.
6. Tap the tick box behind **Use 24-hour format** if you want to change the time format.
7. Tap **Select date format** to select the one you prefer.

Changing Display Settings

By tapping **Home Key > Menu Key > Settings > Display**, you can adjust the display settings as you like.

Adjusting Screen Brightness

1. Tap **Brightness** in the display settings.
2. Adjust the screen brightness bar.
3. Tap **OK** to confirm.

Adjusting Screen-timeout

When not in use, your phone will turn the screen off after a set length of time. If that time is too long or short, you can adjust it.

1. Tap **Screen timeout** in the display settings.
2. Select your preferred time from the list.

Switching Screen Orientation Automatically

You can select to switch your screen orientation to landscape or portrait automatically when rotating your phone. Simply tick the **Auto-rotate screen** check box in the display settings.

And when you want to disable this function, just clear the check box.

Showing Animation When Opening/Closing Windows

1. Tap **Animation** in the display settings.

2. Select the animation type you like.

When you want to disable this function, select **No animations**.

Sound Settings

By tapping **Home Key > Menu Key > Settings > Sound**, you can adjust the sound settings, such as ringtones and alerts.

Choosing Your Ringtone

1. Tap **Phone ringtone** in the sound settings.
2. Scroll through the ringtone list and select the ringtone you want to use.
3. Tap **OK** to save.

 
Setting the Default Notification Ringtone

1. Tap **Notification ringtone** in the sound settings.
2. Scroll through the ringtone list and select one as the default notification ringtone.
3. Tap **OK** to save.

Switching Your Phone to Silent Mode

In the sound settings, tick the **Silent mode** check box.

You can also switch to **Silent mode** by holding the **Volume Key (down)** or – if the screen is locked – by dragging the **Sound off** bar up, as shown below.

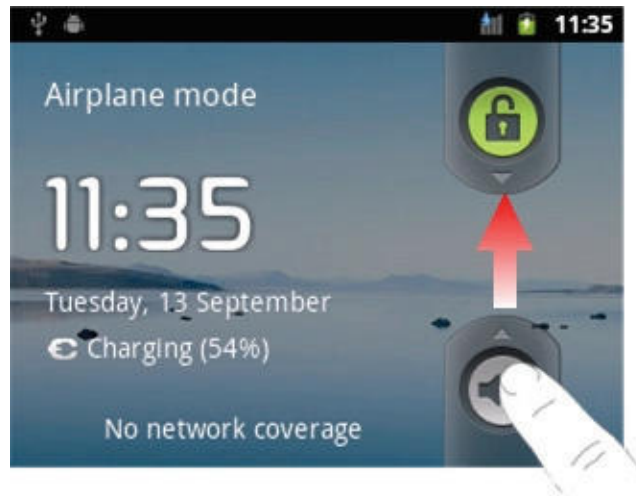

By default, vibration is enabled in silent mode, and the icon  appears in the status bar. If vibration is disabled, the silent icon  will appear in the status bar.

Switching to Vibrate

In the sound settings, tap **Vibrate** and choose the condition for vibration. If your phone is already in **Silent mode**, the icon  will appear in the status bar when vibration is enabled.

Flipping to Turn off Ringtone

In the sound settings, tick the **Silence Ringer When Face Down** box. Then you can flip your phone over to mute the ringtone when there is an incoming call

Adjusting Volume

1. Make sure your phone isn't in **Silent mode**.
2. Tap **Volume** in the sound settings.
3. Adjust the ringtone volume, media volume, and alarm volume.
4. Tap **OK** to save.

TIPS: You can adjust the media volume when a media application is in use by pressing the **Volume Keys**. If no media application is active, press the keys to adjust ringtone volume. And if you'd like to adjust the notification volume together with the ringer volume, tick the **Use incoming call volume for notifications** box.

Turning on Haptic Feedback

If you'd like your phone to vibrate when pressing soft keys and on certain UI interactions, then you need to turn on the **Haptic feedback**.

Tick the **Haptic feedback** box in the sound settings.

Turning on Touch Tones

To make your phone play tones whenever you use dial pad, tick the **Audible touch tones** box in the sound settings.

Turning on Selection Sound

Tick the **Audible selection** box in the sound settings, and your phone will play sound when you touch the screen to make a selection.

Turning on Screen Lock Sound

Tick the **Screen lock sounds** box in the sound settings, and your phone will play sound as a notification when you lock or unlock the screen.

Language Settings

You can change the language of your phone's operating system in two simple steps.

1. Tap **Home Key** >  > **Settings** > **Language & keyboard** > **Select language**.
2. Select a language from the list given.

Mobile Network Services

Both GSM and WCDMA are supported by your phone. You can configure the network settings according to the phone service you use.

Getting Data Services While Roaming

1. Tap **Home Key** >  > **Settings** > **Wireless & networks** > **Mobile networks**.
2. Tick the **Data roaming** box.

IMPORTANT: Data roaming may incur significant roaming charges.

Enabling Data Services

1. Tap **Home Key** >  > **Settings** > **Wireless & networks** > **Mobile networks**.
2. Tick the **Data enabled** box to enable data services over the mobile network. To disable data services, just clear the tick box.

Switching Network Modes

1. Tap **Home Key** >  > **Settings** > **Wireless & networks** > **Mobile networks** > **Network Mode**.

2. Select one of the following: **GSM/WCDMA auto**, **WCDMA only**, or **GSM only**.

Switching Networks

1. Tap **Home Key** >  > **Settings** > **Wireless & networks** > **Mobile Networks** > **Network operators**. The phone automatically searches for all available networks.
2. Tap a network to register manually, or tap **Select automatically**.

Setting Access Point Names

To connect to the Internet you can use the default Access Point Names (APN). And if you want to add a new APN, please contact your service provider to find out more.

1. Tap **Home Key** >  > **Settings** > **Wireless & networks** > **Mobile networks** > **Access Point Names**.
2. Tap **Menu Key** > **New APN**.
3. Set the necessary parameters. (See Adding a New GPRS/ EDGE/3G Connection on page 81.)
4. Tap **Menu Key** > **Save**.

 
Security Settings

Here's how to protect your phone and SIM card from unauthorized use.

Protecting Your Phone With a Screen Unlock Pattern

Creating Your Screen Unlock Pattern


1. Tap **Home Key** >  > **Settings** > **Location & security** > **Set up screen lock** > **Pattern**.
2. Read the instructions and tap **Next**.
3. Watch the example pattern and tap **Next**.
4. Draw your own pattern and tap **Continue**.
5. Draw the pattern again and tap **Confirm**.
6. Press the **Power Key** to lock the screen.

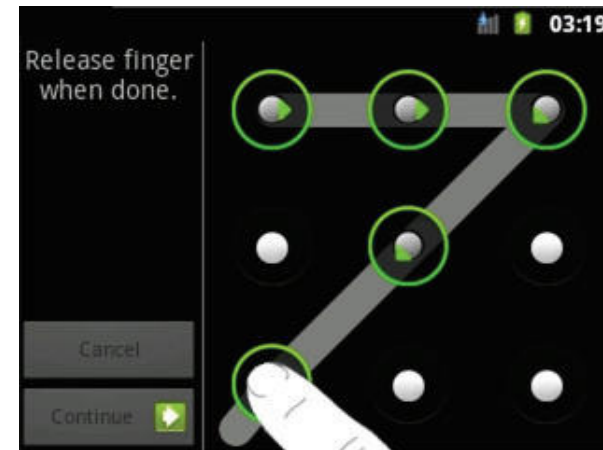

TIPS: You can also clear the **Use visible pattern** box in the Location & security screen if you don't want to display your screen unlock pattern as you draw it on the screen.

Unlocking the Screen With Your Pattern

 1. Press the **Power Key**.
2. Draw the pattern you set to unlock the screen.

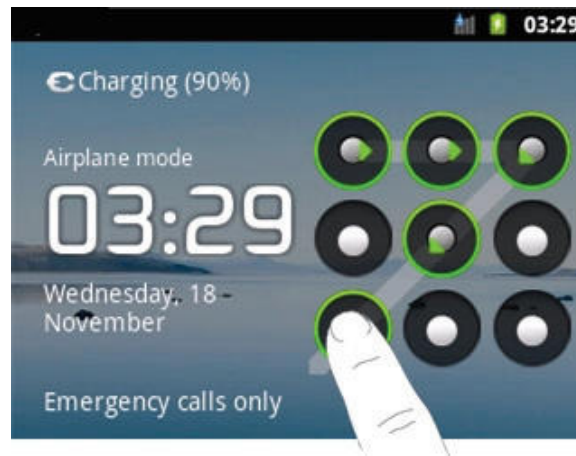

If you make a mistake, your phone will ask you to try again.

Forgot your screen unlock pattern?

If you've forgotten your screen unlock pattern, you have up to five attempts to unlock your phone. If the pattern has been drawn incorrectly five times, you can enter your Google account user name and password to unlock your phone.

IMPORTANT: You must sign in or create a Google account on your phone before using the following method to reset or cancel the lock pattern.

1. Draw the unlock pattern on the screen.

2. After the fifth attempt, you're prompted to try again in 30 seconds. Then tap **OK**.

Note: If the display turns off, press the **Power Key** to turn the display on.

3. Tap **Forgot pattern?** on the screen.
4. Enter your Google account user name and password, and then tap **Sign in**.
5. You will be asked to draw a new unlock pattern. If you do not need an unlock pattern, tap **Cancel**.

Protecting Your Phone with a PIN or Password

Creating a PIN or Password

1. Tap **Home Key** >  > **Settings** > **Location & security** > **Set up screen lock**.
2. Tap **PIN** or **Password**.
3. Enter the numeric PIN or any password you like. Then tap **OK**.
4. Enter it again and tap **OK** to confirm.

Unlocking the Screen With Your PIN or Password

1. Press the **Power Key** to wake up the phone.

2. Drag the  icon down.
3. Enter the PIN or password you set.
4. Tap **OK**.

Disabling Screen Unlock Security

If you have created an unlock pattern, PIN or password, you can disable it.

1. Tap **Home Key** >  > **Settings** > **Location & security** > **Change screen lock**.
2. Draw the screen unlock pattern or enter your PIN/password you have created.
3. Tap **None**.

Protecting Your SIM Card With a PIN

Every SIM card comes with a PIN. The initial PIN is provided by your service provider. It's best to lock your SIM card as soon as you can.

1. Tap **Home Key** >  > **Settings** > **Location & security** > **Set up SIM card lock**.
2. Tick the **Lock SIM card** check box.
3. Enter the PIN you've been given and tap **OK**.

Changing Your SIM PIN

You can change the PIN you've been given to one easier for you to remember and harder for others to guess.

1. Tap **Home Key** >  > **Settings** > **Location & security** > **Set up SIM card lock**.
2. Make sure you already tick the **Lock SIM card** check box.
3. Tap **Change SIM PIN**.
4. Enter the old PIN and tap **OK**.
5. Enter your new PIN and tap **OK**.
6. Enter the new PIN again and tap **OK**.

Setting Up Credential Storage

This lets you select applications to access secure certificates and other credentials.

Enabling Secure Credentials

1. Tap **Home Key** >  > **Settings** > **Location & security**.
2. Tap **Set password** and create a password for the credential storage.
3. Tick the **Use secure credentials** box if needed.

TIPS: You can also install encrypted certificates from your microSD card by tapping **Install from SD card**.

Deleting Secure Credentials

1. Tap **Home Key** >  > **Settings** > **Location & security**.
2. Tap **Clear storage** to clear credentials and reset the password.

Managing Your Memory Card

Checking Memory Card Space

Tap **Home Key** >  > **Settings** > **Storage**.

You can view the space information from **Total space/Available space** in **SD card** section.

Unmounting Your Memory Card

Unmounting makes your memory card unavailable to the phone's operating system, and ready for removal or replacement.

1. Tap **Home Key** >  > **Settings** > **Storage**.
2. Tap **Unmount SD card**.

The  icon will appear in the status bar. You can tap **Mount SD card** to

mount the memory card again.

Checking Phone Memory

Tap **Home Key** >  > **Settings** > **Storage**.

You can view the **Available space** in the **Internal storage** section.

Resetting to Factory Settings

1. Tap **Home Key** >  > **Settings** > **Privacy**.
2. Tap **Factory data reset**.
3. Tap **Reset phone**.
4. Tap **Erase everything**.

WARNING: All your personal information and downloaded applications on your phone will be erased after the resetting.

Managing Applications and Their Settings

Viewing Your Applications

Tap **Home Key** >  > **Settings** > **Applications** > **Manage applications**.

You can check the running applications or view the applications installed on your phone and memory card.

Allowing Installation of Non-Market Applications

1. Tap **Home Key** >  > **Settings** > **Applications**.
2. Tick the **Unknown sources** box.

Installing an Application

You can install an application from the Android Market (**Home Key** >  > **Market**) by selecting the item you want to download and tapping **Install**.

You can also install a non-Market application if you have allowed the installation of it. Make sure that you select an application developed for your device and processor type before installing it.

1. Tap **Home Key** >  > **Filer**, and open the folder where the application you want to install is.
2. Tap the application to start installation.
3. Follow the instructions that come with the application to complete the installation.

Removing an Application

1. Tap **Home Key** >  > **Settings** > **Applications** > **Manage applications**.
2. Select the application you want to delete.
3. Tap **Uninstall** and **OK** to confirm.

TIPS: Market applications can also be removed by going to the **Downloads** page in **Market**, selecting the unwanted application, and tapping **Uninstall**.

Moving an Application to or from the Memory Card

You can move the applications downloaded or installed on your phone to the memory card when the phone memory is full. You can also move applications to your phone if the memory card is getting full.

NOTE: Not all applications can be move to your phone or memory card.

1. Tap **Home Key** >  > **Settings** > **Applications** > **Manage applications**.
2. Tap the application you want to move on the **Downloaded** tab.
3. Tap **Move to phone** or **Move to SD card**.

Setting Quick Launch of Your Applications

You can use keyboard shortcuts to launch the applications quickly.

Assigning a keyboard shortcut:

1. Tap **Home Key** >  > **Settings** > **Applications** > **Quick launch**.
2. Tap a shortcut entry and then select an application.

Clearing a keyboard shortcut:

1. Tap **Home Key** >  > **Settings** > **Applications** > **Quick launch**.
2. Hold an assigned shortcut entry to open the pop-up window.
3. Tap **OK** to confirm.

Using the keyboard shortcuts to launch applications:

Press and hold the **Search Key** and then press an alphanumeric key on the keyboard to open the corresponding application.

For example, if the 'b' key is assigned to **Browser**, you can press and hold the **Search Key** and then press the 'b' key to open the web browser quickly.

Managing Other Settings

Search Settings

You can manage search settings and search history by opening the **Google Search** application and tapping **Menu Key > Search settings**.

- **Google search:** Adjust Google search settings.
- **Searchable items:** When you search for an item on your phone, only the searchable items will be looked for.

You can also clear shortcuts to recently chosen search suggestions.

Voice Input and Output

You can set the voice recognition and text-to-speech options by tapping **Home Key >  > Settings > Voice input & output**.

NOTE: You need to download voice data in order to use the text-to-speech function. Just tap **Install voice data** in **Text-to-speech settings**.

Accessibility

Configure accessibility options for accessibility-related applications.

About phone

Check system updates, phone status and battery use, or view legal information and software versions.

Other Applications

Alarm

1. Tap **Home Key** >  > **Alarm**.
2. Tap the default alarm set to configure it. Or, to create a new alarm, tap **Menu Key** > **Add alarm**.
3. Tick the **Turn on alarm** box and set up the alarm options.

TIPS: You can use the phone as a bedside clock. In Alarm Screen, tap **Menu Key** > **Bed Clock**.

Calculator

Tap **Home Key** >  > **Calculator**.

TIPS: Tap **Menu Key** > **Advanced panel** to use scientific calculation.

Note Pad

Tap **Home Key** >  > **Note pad**. **Note pad** is for your memos. Tap **Menu Key** to add or delete them. Hold an existing note to edit or delete it, or change its title.

SIM Tool Kit

Services SIM Tool Kit will only appear on the screen if your SIM card provides this function. To use SIM services, insert your SIM card in the phone first.

Tap **Home Key** >  > **SIM Tool Kit**.

Stopwatch

1. Tap **Home Key** >  > **Stopwatch**.
2. Tap **Start** to start timing. You can **Pause** or **Resume**.
3. **Reset** will take the stopwatch back to 00:00.0.

Task Manager

Tap **Home Key** >  > **Task Manager**. Go to **Task Manager** to view or stop applications.

Specifications

Dimensions		Approx. 114 mm × 65 mm × 10.9 mm
Weight		Approx. 126 g (with battery)
Bearer		GSM/WCDMA support
Main display dimension, resolution		2.6 inches 320*240
Back Camera	Sensor type	CMOS
	Still image capture resolution	3.2 M Pixels
Internal memory		ROM: 512MB, RAM: 256MB
Removable memory card		Support microSD card, maximum capacity: 32 GB
Battery	Capacity	1100 mAh
	Standby time	Approx. 200 hours (subject to network status)
	Voice talk time	Approx. 210 minutes (subject to network status)
WAP browser version		WAP2.0

Declaration of RoHS Compliance

To minimize the environmental impacts and take more responsibilities to the earth we live on, this document shall serve as a formal declaration that the Android™ edition by sfr STARTEXT manufactured by ZTE CORPORATION is in compliance with the Directive 2002/95/EC of the European Parliament - RoHS (Restriction of Hazardous Substances) with respect to the following substances:

1. Lead (Pb)
2. Mercury (Hg)
3. Cadmium (Cd)
4. Hexavalent Chromium (Cr (VI))
5. Polybrominated biphenyls (PBBs)
6. Polybrominated diphenyl ethers (PBDEs)

The Android™ edition by sfr STARTEXT manufactured by ZTE CORPORATION, meets the requirements of EU 2002/95/EC.

Disposal of Your Old Appliance

	1. When this crossed-out wheeled bin symbol is attached to a product, it means the product is covered by the European Directive 2002/96/EC. 2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities. 3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
---	---

For this product's recycling information based on WEEE directive, please send an e-mail to weee@zte.com.cn

EC DECLARATION OF CONFORMITY



It is hereby declared that following designated product:

Product Type: WCDMA/GSM(GPRS)Dual-Mode Digital Mobile Phone

Model No: Tureis

Complies with the essential protection requirements of the Radio and Telecommunication Terminal Equipment Directive (EC Directive 1999/5/EC) and the Electromagnetic Compatibility Directive (2004/108/EC)

This declaration applies to all specimens manufactured identical to the samples submitted for testing/evaluation.

Assessment of compliance of the product with the requirements relating to the Radio and Telecommunication Terminal Equipment Directive (EC Directive 1999/5/EC) was performed by American TCB (Notified Body No.1588), based on the following standards:

Safety	EN 60950-1:2006/A11:2009
EMC	EN 301 489-1 V1.8.1; EN 301 489-7 V1.3.1;

	EN 301 489-17 V2.1.1; EN 301 489-24 V1.5.1; EN 55013:2001+A2:2006; EN 55020:2007;
Radio	EN 301 511 V9.0.2; EN 301 908-1 V3.2.1; EN 301 908-2 V3.2.1; EN 300 328 V1.7.1; EN 300 487 A1:1997
Health	EN 50360:2001; EN 62209-1:2006; EN 62209-2:2010; EN 50332-1:2000; EN 50332-2:2003

This declaration is the responsibility of the manufacturer:

ZTE Corporation

ZTE Plaza, Keji Road South, Hi-Tech, Industrial Park,
Nanshan District, Shenzhen, Guangdong, 518057, P.R.China

Authorised person signing for the company:

Xu Feng

Quality Director Of ZTE Corporation

Name in block letters & position in the company

Shenzhen, 22 June 2011

Place & date

徐峰

Legally valid signature