

ZTE V987

WCDMA/GSM Mobile Phone

Quick Start Guide

LEGAL INFORMATION

Copyright © 2013 ZTE CORPORATION.

All rights reserved.

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

Notice

ZTE Corporation reserves the right to make modifications on print errors or update specifications in this guide without prior notice.

We offer self-service for our smart terminal device users. Please visit the ZTE official website (at www.zte.com.cn) for more information on self-service and supported product models. Information on the website takes precedence.

Disclaimer

ZTE Corporation expressly disclaims any liability for faults and damages caused by unauthorized modifications of the software.

Images and screenshots used in this guide may differ from the actual product. Content in this guide may differ from the actual product or software.

Trademarks


ZTE and the ZTE logos are trademarks of the ZTE Corporation. Google and Android are trademarks of Google, Inc. The Bluetooth® trademark and logos are owned by the Bluetooth SIG, Inc. and any use of such trademarks by ZTE Corporation is under license. The microSD logo  is a trademark of the SD Card Association. Other trademarks and trade names are the property of their respective owners.

Version No. : R1.0

Edition Time : 20130401

Manual No. : 079584505557

 Getting to Know Your Phone

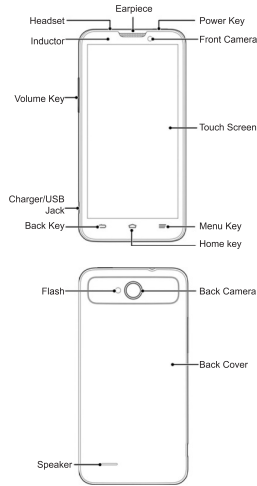

Power Key

- Press and hold to power on, select phone modes, reboot, turn on/off airplane mode, or power off.
- Press to turn off or on the screen display.

Home Key

- Touch to return to the home screen from any application or screen.
- Touch and hold to see recently used applications.

Menu Key

Touch to get the options for the current screen.

Back Key

Touch to go to the previous screen.

Volume Up/Volume Down

Press or hold to turn the volume up or down.

Starting Up

Switch off your phone before installing or replacing the battery or the SIM card. The microSD card is optional and can be installed and removed while the phone is turned on. Unmount the microSD card before removing it.

- Place your finger in the slot of the back cover to lift and remove the cover.



- Hold the SIM card with its cut corner oriented as shown and slip it into the card holder.



Caution: Install your WCDMA or GSM SIM card into SIM slot 1.

Install your GSM SIM card into SIM slot 2.

- Hold your microSD card with the metal contacts facing down and slide it into the microSD card slot.



- Align the connectors on the phone and the battery and slide the battery into the compartment. Then gently press the battery down until it is secured.



- Press the cover gently back into place until you hear a click.

Charging the Battery

- Connect the adapter to the charging jack. Ensure that the adapter is inserted with the correct orientation. Do not force the connector into the charging jack.



- Connect the charger to a standard AC power outlet.
- Disconnect the charger when the battery is fully charged.

Powering On/Off Your Phone

Make sure the battery is charged before powering on.

- Press and hold the **Power Key** to turn on your phone.
- To turn it off, press and hold the **Power Key** to open the options menu. Touch **Power off** > **OK**.

Getting to Know the Home Screen

The home screen is the starting point for your phone's applications, functions, and menus. You can customize your home screen by adding application shortcuts, folders, widgets, and more.

1

2

3

4

5

6

7



NOTE: Your home screen extends beyond the initial screen, providing more space for shortcuts, widgets, and folders. Simply swipe left or right to see the extended home screens.

Opening Applications

- Touch the **Home Key** if the current screen is not the home screen.
- Touch .
- Slide left or right on the screen and touch an app icon to open it.

Adding Shortcuts or Widgets

- Touch the **Home Key** > .
- If you want to add a widget, touch **WIDGETS**.
- Touch and hold a widget or an app icon and drag it to the home screen.

Removing Shortcuts or Widgets

- Touch and hold a widget or shortcut on the home screen.

- Drag it to  to remove it.

Organizing Shortcuts With Folders

- Touch and hold a shortcut on the home screen.
- Drag the shortcut icon over another and release your finger. A new folder is created and both shortcuts are added into the folder.
- If needed, drag more shortcuts and drop them into the folder.

Applying New Wallpapers

You can set the wallpaper for the home screen.

- Touch the **Home Key** > **Menu Key** > **Wallpaper**.
- Select a wallpaper source from **Gallery**, **Live Wallpapers**, **Video Wallpaper**, or **Wallpapers** and touch the image or animation you want to use as the wallpaper.
- Touch **Set wallpaper**.

Checking the Phone Status

The status bar at the top of the screen displays phone and service status with various icons. Below are some of the icons and their meanings.

	Signal strength		No signal
	Mobile data in use		Flight mode
	Ringer off		Bluetooth on
	Vibrate mode		Connected to a Wi-Fi network
	Battery full		New SMS / New MMS

	Alarm set		New Email
	Portable Wi-Fi hotspot		New Gmail message
	USB tethering is on		

Setting Ringtone and Sounds

Setting Ringtone or Notification Sound

- Touch the **Home Key** >  > **Settings** > **Audio profiles** > **General**.
- Touch **Voice call ringtone**, **Video call ringtone** or **Default notification**.
- Select the ringtone you want to use.
- Touch **OK**.

Setting System Sounds

- Touch the **Home Key** >  > **Settings** > **Audio profiles** > **General**.
- Scroll to the **SYSEM** section and check the sounds you want to hear or uncheck those you do not need.

Adjusting Volumes

To adjust call volume, press the **Volume Key** while on a call. To adjust other volumes, follow the steps below.

- Touch the **Home Key** >  > **Settings** > **Audio profiles** > **General** > **Volumes**.
- Drag the sliders to adjust the volume for the ringtone and notification volume, and the alarm volume.
- Touch **OK** to save.

TIP: Press and hold the **Power Key** and then touch  to enable the silent mode, touch  to enable the vibration mode, or touch  to disable the silent mode.

Setting a Screen Lock

You can protect your phone by creating a screen lock. When enabled, you need to draw a pattern, or enter a numeric PIN or password to unlock the phone's screen and keys.

- Touch the **Home Key** > **Menu Key** > **System settings** > **Security** > **Screen lock**.
- Touch **None**, **Press**, **Pattern**, **PIN** or **Password**.
 - Touch **Press** to enable unlock with a 'touch and hold' gesture. You can unlock the screen by touching and holding  at the center of the display.
 - Touch **Pattern** to create a pattern that you must draw to unlock the screen.
 - Touch **PIN** or **Password** to set a numeric PIN or a password you must enter to unlock your screen.

Checking Voicemail

- Touch the **Home Key** > .
- In the dialer tab , touch and hold .
- Select a SIM card.
- If prompted, enter your voicemail password.
- Follow the voice prompts to listen to and manage your voicemail messages.

Making a Call

- Touch the **Home Key** > .
- In the dialer tab , enter the phone number with the on-screen keypad. Touch  to delete incorrect digits.
- Touch the  icon below the keypad to place the call.

NOTE: To call a contact, touch the **Home Key** >  >  and touch a contact or a number.

Adding Contacts

Creating a New Contact

- Touch the **Home Key** >  >  and touch the all contacts tab .
- Touch .
- Store the contact to SIM/Phone.
- Enter the contact name, phone, numbers. Touch **DONE** to save the contact.

Importing Contacts in Batches

- Touch the **Home Key** >  > .
- Touch the **Menu Key** > **Import/export**.
- Select SIM card, phone, or phone storage.
- Touch **Next**.
- If prompted, select an account in which to save the contacts.
- For importing from the SIM card, touch all the SIM contacts you want to import and touch **OK**.

Sending a Message

- Touch  in the home screen and select **Messaging**, then touch .
- Enter the recipient(s) and message text. If you want to send an MMS, add subject and attachments.
- Touch  to send the message.

Setting Up Email Accounts

Setting Up Gmail

- Touch  in the home screen and select **Gmail**.

NOTE: If another Gmail account is already set up, touch the **Menu Key** > **Settings** > **ADD ACCOUNT**.
- Touch **Existing** to sign in to your existing Google Account. If you have no Google Accounts, touch **New** to create one.
- Follow the instructions on the screen to set up the account.

Setting Up Email

- Touch  in the home screen and select **Email**.

NOTE: If another email account is already set up, touch the **Menu Key** > **Account settings** > **ADD ACCOUNT**.
- Enter the email address and password.
- Touch **Next** and follow the onscreen instructions.

Connecting With a Bluetooth Headset

- Turn on the Bluetooth headset and switch it to pairing mode. Refer to the headset's user guide for more information.
- Touch  in the home screen and select **Settings** > **Bluetooth**.
- Slide the **ON/OFF** switch if Bluetooth is off. When Bluetooth is on, the  icon appears in the status bar.

NOTE: Your phone automatically scans for and displays the IDs of all available Bluetooth devices in range. You could touch **SEARCH FOR DEVICES** if you wanted to scan again.
- Touch the ID of the headset, or any other device you want to pair with your phone. Enter a passcode if prompted.
- If necessary, touch the ID of the paired headset to connect with it. Once connected, the  icon in the status bar turns blue.

TIP: Touch the ID again to end the connection.

Installing Apps From the Google Play Store

There are tens of thousands of games and applications in the Google Play Store for you to download and install. You can send feedback or comments on an application.

Before you begin, make sure that you have signed in to your Google account.

8

9

10

11

12

13

14

 
NOTE: The content you can access in the Play Store depends on your region and your service provider.

1. Touch the **Home Key** >  > **Play Store**.
The first time you launch **Play Store**, accept the Google Play Terms of Service.
2. Find the apps you need either by category or by touching  .
3. Touch the app to see detailed description.
4. Touch **Install** (free apps) or the price (paid apps). If the app is not free, you need to sign in to your Google Wallet account and select a payment method.
- CAUTION:** Once installed, some apps can access many functions or a significant amount of your personal data. The Play Store will show you what the app can access. Touch **Accept & download** (free apps) or **Accept & buy** (paid apps) to proceed, or touch the **Back Key** to cancel.
5. Wait for the app to be downloaded and installed automatically. Payment needs to be authorized before paid apps start downloading.

The app is successfully installed when the  icon appears in the status bar. You can find the new app after touching the **Home Key** > .

Taking a Photo

1. Touch  in the home screen and select **Camera**.
2. Aim the camera at the subject and make any necessary adjustment.

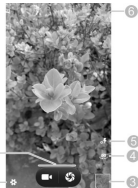

Number	Function
1	Capture a photo.
2	Change the camera settings.
3	View photos and videos you have captured.
4	Switch between the front camera and the back camera.
5	Switch the flash.
6	Select the camera mode.

3. Touch the area where you want the camera to focus. Green brackets appear around the focused area.
4. Lightly touch the button .

Recording a Video

1. Touch  in the home screen and select **Camera**.
2. Aim the camera at the subject and make any necessary adjustment.




Number	Function
1	Start or stop recording a video.
2	View photos and videos you have captured.

3. Touch  to start and  to stop recording.

Playing Music

 1. Touch  in the home screen and select **Music**.
2. Touch a category, such as Artists or Albums, to find the song you want to play.
3. Touch the song to play it back.

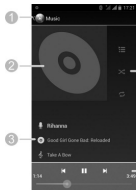

Number	Function
1	Touch to return to the library.
2	Album artwork.
3	Song and artist names.
4	Playback control. Skip songs, pause and resume playback. Drag the progress bar to jump to any part of the song.
5	Touch to see the current playlist (queue), Shuffle, or Repeat.

Connecting to PC

You can connect your phone to a computer with a USB cable and transfer music, pictures, and other files in either direction. Your device stores these files in internal storage or on a removable microSD card.

1. Touch and hold the status bar across the top of the screen and flick down.
2. Touch  (**Connected as** [current connection mode]).
3. Choose one of the following options:
 - **USB storage:** XP recommended. Lets you transfer files between your computer and your Android device.
 - **Media device (MTP):** Lets you transfer media files on Windows, or using Android File Transfer on Mac (See www.android.com/filetransfer)
 - **Camera (PTP):** Lets you transfer photos using camera software, and transfer any files on computers that don't support MTP.
 - **Charge only:** Stop all USB functions. Lets you speed up USB charging and decrease power consumption.
 - **Built-in CD-ROM:** Show a virtual CD-ROM containing some useful software.

To disconnect the device from the computer, simply unplug the USB cable when you're finished.

Connecting to the Internet

Connecting via Wi-Fi

1. Touch the **Home Key** > **Menu Key** > **System settings** > **Wi-Fi**.
2. Slide the ON/OFF switch if Wi-Fi is off.
Your phone automatically searches for Wi-Fi networks in range and displays their names and security settings. Your phone also connects to previously linked networks when they are in range.
3. Touch a network name to connect to it.
If the network is secured, enter a password or other credentials. (Ask your network administrator for details.)

Connecting via Mobile Network

To connect to the Internet via mobile network you can use the default Access Point Names (APN). If you want to add a new APN, please contact the service provider to get the necessary information. Do not change the default settings unless instructed by the service provider. Otherwise the service might stop working.

1. Touch the **Home Key** > **Menu Key** > **System settings** > **More** > **Mobile networks** > **Access Point Names**.
2. Select a SIM card.
3. Touch the **Menu Key** > **New APN**.
4. Touch each item to enter the information you get from your service provider.
5. Touch the **Menu Key** > **Save** to complete.

Extending Battery Life

There are several things you can do to make your battery last longer.

- Turn on Wi-Fi, Bluetooth, GPS, mobile data, auto-sync only when you need to.
- Lower the screen brightness.
- Use Bluetooth tethering or USB tethering (when you have a cable) instead of portable Wi-Fi hotspot to share your phone's data service.
- From the home screen, touch  > **Settings** > **Apps** and close the apps you do not need but still run in the background.
- From the home screen, touch  > **Settings** > **Audio profiles** > **General** and uncheck **Vibrate on touch**.

Freeing Up Memory Space

Use **Apps** to free up memory space and optimize system speed.

1. From the home screen, touch  > **Settings** > **Apps**.
2. Touch the app and touch the **Stop** button next to the application you do not need.

Managing the Phone Storage

Deleting Old Messages

You can manually delete old messages to free up some storage space. You may also set up auto deletion of the oldest messages when the limits are reached.

1. From the home screen, touch  > **Messaging**.
2. Touch the **Menu Key** > **Settings** > **General**.
3. Check **Delete old messages** to enable auto deletion. Touch **Delete old messages** to enable auto deletion.
4. Touch **Text message limit** or **Multimedia message limit** to set the maximum limit.
5. Touch **Set**.

Clearing Browser's Local Content

1. From the home screen, touch  > **Browser**.
2. Touch the **Menu Key** > **Settings** > **Privacy & security**.
3. Touch **Clear cache**, **Clear history**, and **Clear all cookie data**.

Product Safety Information

	Do not use hand-held while driving
	Do not use while re-fuelling
	For body-worn operation maintain a separation of 15 mm
	This device may produce a bright or flashing light
	Small parts may cause a choking hazard
	Do not dispose of it in a fire
	This device may produce a loud sound
	To prevent possible hearing damage, do not listen at high volume levels for long periods.
	Avoid contact with magnetic media
	Avoid Extreme Temperatures
	Keep away from pacemakers and other personal medical devices
	Avoid any contact with liquid, keep it dry

	Switch off when instructed in hospitals and medical facilities
	Do not attempt to disassemble
	Switch off when instructed in aircrafts and airports
	Only use approved accessories
	Switch off in explosive environments
	Do not rely on this device for emergency communications

Declaration of RoHS Compliance

To minimize the environmental impacts and take more responsibilities to the earth we live on, this document shall serve as a formal declaration that the ZTE V987 manufactured by ZTE CORPORATION is in compliance with the Directive 2002/95/EC of the European Parliament - RoHS (Restriction of Hazardous Substances) with respect to the following substances:

1. Lead (Pb)
 2. Mercury (Hg)
 3. Cadmium (Cd)
 4. Hexavalent Chromium (Cr (VI))
 5. Polybrominated biphenyls (PBBs)
 6. Polybrominated diphenyl ethers (PBDEs)
- The ZTE V987 manufactured by ZTE CORPORATION meets the requirements of EU 2002/95/EC.

Disposal of Your Old Appliance

	1. When this crossed-out wheeled bin symbol is attached to a product, it means the product is covered by the European Directive 2002/96/EC. 2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities. 3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
--	---

For this product's recycling information based on WEEE directive, please send an e-mail to weee@zte.com.cn

SAR

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested was 0.212 W/kg. As mobile devices offer a range of functions, they can be used in other positions, such as on the body.

As SAR is measured utilizing the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum power required to communicate with the network.

This equipment may be operated in:				AT	BE
CY	CZ	DK	EE	FI	FR
DE	GR	HU	IE	IT	LV
LT	LU	MT	NL	PL	PT
SK	SI	ES	SE	GB	IS
LI	NO	CH	BG	RO	TR