

MOTOROLA EX225

LIFE.  POWERED.



SAR

This product meets the applicable limit for exposure to radio waves (known as SAR) of 2.0 W/kg (ICNIRP). See tests and guidelines include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health. The highest SAR value measured for the device are listed in the regulatory information packaged with your product.

Note: When carrying the product or using it while worn on your body, either use an approved accessory such as a headset or otherwise maintain a distance of 2.5 cm (1 inch) from the body to ensure compliance with RF exposure requirements. Note that the product may be transmitting even if you are not making a phone call.

880135011001

WELCOME

EX225 is a phone with exciting features including music, photo, video, browsing, and more—with an easy-to-use QWERTY keypad.


- **Music.** Instantly play your music. Just open your media player and select a playlist.
- **Photos.** Use your phone's camera to take photos and send them to your friends.

We've crammed all the main features of your phone into this handy guide, and in a matter of minutes we'll show you just how easy your phone is to use. You may be surprised at what you discover.

Note: Your phone may not appear exactly as the images in this guide.

Caution: Before assembling, charging, or using your phone for the first time, please read the important safety, regulatory and legal information in this guide.

YOUR PHONE

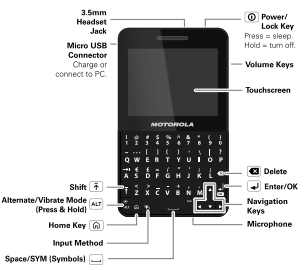

LET'S GO



BASICS

Turn it on & off

Press and hold **Power/Lock** key (on top of the phone) for a few seconds to turn the phone on/off.

Touch Tips

- **Touch:** Choose an icon or option.
- **Drag/Flick:** Scroll/thrive slowly (drag) or quickly (flick).

Menu navigation

Touch **Menu** to open the main menu.

Press Home **Home** to close any menu or app screen and return to the home screen.

Touch **Back** to go back.

Drag **Back** down to open the settings menu.

Click the menu screen left or right to view more panels.

PERSONALIZE

Profiles

Your phone has different profiles. You can customize ringtones, alerts, and volumes for each profile.

Touch **Menu** > **Profiles**, then select from these profiles:

- **General:** Standard profile default setting.
- **Silent:** Ringtone is off, vibrate is off.
- **Meeting:** Vibrate is on, ringtone is off.
- **Outdoor:** Ringtone and key tone volume set to maximum.
- **My style:** Set your own ring style.

Display settings

To set display settings such as wallpaper, touch **Menu** > **Phone settings** > **Display**

Date & time

Set date, time, time zone, and formats:

touch **Menu** > **Phone settings** > **Time and date**

MESSAGES

Send an SMS or MMS

- Touch **Menu** > **More** > **Message** > **Write message**
- Enter your message.
- Touch the icons at the bottom of the screen to add pictures, videos, and more.
- Touch **Done** > **Enter recipient or Add from Phonebook**
- Touch **Done** > **Send**

Read messages

When you receive a message, your phone plays an alert and shows the new message indicator **Message** at the top of the screen.

To read the new message, touch **View**. To read messages stored in your inbox, touch **Menu** > **More** > **Message** > **Inbox**.

CALLS

Make calls

From the home screen, touch **Menu** > **Dial pad**, then enter a number and touch **Call**.

Answer calls

When your phone rings or vibrates, touch **Call**.

End a call

Touch **End**.

In-call options

During a call, touch **Hold**, **End**, make a **New call**, and more.

Touch **Mute** to mute your call.

Redial number

- Touch **Menu** > **Call log**
- Highlight the contact you want to call, then touch **Redial**.

Emergency calls

To call an emergency number, enter the emergency number and touch **Call**.

Your service provider programs emergency phone numbers, such as 112 or 911, that you can call under any circumstances, even when your phone is locked.

Emergency numbers vary by country. Your phone's pre-programmed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

TIPS & TRICKS

Recent calls

To see your **Missed Calls**, **Dialed Calls** and **Received Calls**, touch **Menu** > **Call log**.

Voicemail

From the home screen, touch **Menu**, then touch and hold **1**. If your voicemail number is preset, you will connect.

Backlight time


To set how long your backlight stays on, touch **Menu** > **Phone settings** > **Misc. settings** > **LCD backlight** > **Backlight**.

Battery tips

Want to extend your battery life? Try these:

- Turn off Bluetooth™ power: Touch **Menu** > **Connection** > **Bluetooth** > **Power** > **Off**
- Turn off Wi-Fi: Touch **Menu** > **Connection** > **Wi-Fi** > **Disable Wi-Fi**


MUSIC

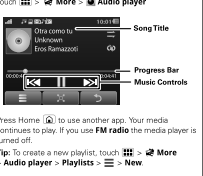

Press Home **Home** to use another app. Your media continues to play. If you use **FM radio** the media player is turned off.

Tip: To create a new playlist, touch **Menu** > **More** > **Audio player** > **Playlists** > **New**.

MENU MAP

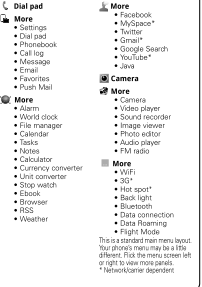

YOU TUBE™

The YouTube user-generated content web site lets you share videos with YouTube users everywhere. You don't need a YouTube account to browse and view videos.

Touch **Menu** > **YouTube**

Note: If you don't have a YouTube account, visit www.youtube.com to find out more.

To **Search**, **Upload**, or **Share** videos, touch **Menu**.

Watch videos

See popular video categories, like Most viewed, Most discussed and Most recent. Touch a category, then touch the video to start playing it. To see more video categories, touch **Menu** > **Categories**.

CONTACTS

Create contacts

Touch **Menu** > **More** > **Phonebook** > **Enter**, enter the contact name and details, then touch **Save**.

Call contacts

Touch a contact, then touch **Call**.

Tip: Press the volume keys to scroll to a contact, then touch **Call** to call.

BLUETOOTH™

Turn on or off

Touch **Menu** > **Connection** > **Wi-Fi**

Touch **Menu** > **Connection** > **Bluetooth** > **Power** > **On** or **Off**

When Bluetooth power is on, the Bluetooth indicator **Bluetooth** appears in the home screen.

Connect new bluetooth devices

To connect with a new device, you need to pair with it. You only need to do this once for each device.

- Make sure the device you are pairing with is in discoverable mode (see device instructions).

Touch **Menu** > **Connection** > **Bluetooth** > **My device** > **Search new device**

Your phone lists the devices it finds within range. Select a device to connect.

If necessary, enter the device passkey (like 0000) to connect to the device.

PHOTOS & VIDEOS

Photos: Touch **Menu** > **Camera**. To take the photo, touch **Shutter**.

Videos: Touch **Menu** > **Camera** > **Video** > **Recorder**. To record the video, touch **Shutter**. Touch **Stop** to stop.

After you've taken the photo or video, touch **Menu**, then:

- To send in a message, email, or via bluetooth, touch **Forward**.
- To delete the photo or video and return to the viewfinder, touch **Delete**.

Photo editor

To see the photos and videos you've taken, touch **Menu** > **More** > **Image viewer** or **Video player**.

WEB

Use your phone's browser to surf your favorite Web sites, upload videos to a video blog, and download files and applications to your phone. Log onto your internet-based email account to check your email.

Touch **Menu** > **Browser**

To edit browser settings, touch **Menu**.

Note: If you can't connect, contact your service provider.

HOME SCREEN



Note: Your home screen might look a little different.

