

Blade S7
ZTE T920
Quick Start Guide

LEGAL INFORMATION

Copyright © 2015 ZTE CORPORATION.

All rights reserved.

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

Notice

ZTE Corporation reserves the right to make modifications on print errors or update specifications in this guide without prior notice. We offer self-service for our smart terminal device users. Please visit the ZTE official website (at www.ztedevice.com) for more information on self-service and supported product models. Information on the website takes precedence.

Disclaimer

ZTE Corporation expressly disclaims any liability for faults and damages caused by unauthorized modifications of the software.

Images and screenshots used in this guide may differ from the actual product. Content in this guide may differ from the actual product or software.

Trademarks

ZTE and the ZTE logos are trademarks of ZTE Corporation.

Google and Android are trademarks of Google, Inc. The Bluetooth® trademark and logos are owned by the Bluetooth SIG, Inc. and any use of such trademarks by ZTE Corporation is under license.

microSDHC Logo is a trademark of SD-3C, LLC.


Other trademarks and trade names are the property of their respective owners.

Version No.: R2.0

Edition Time : November 19, 2015

Manual No. : 079584507530

Getting to Know Your Phone

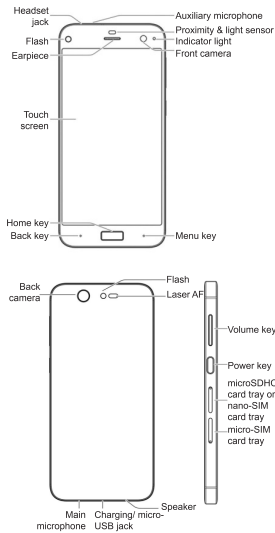

Key	Function
Power Key	- Press and hold to turn on or off airplane mode, manage notification sound and vibration, restart, or power off. - Press to turn off or on the screen display.
Home Key	- Touch to return to the home screen from any application or screen. - Touch and hold to use Google search. - Touch to use fingerprint identification.
Back Key	Touch to go to the previous screen.
Menu Key	- Touch to view the options for the current screen. - Touch and hold to see recently used applications.
Volume Key	Press or hold either end of the key to turn the volume up or down.

NOTE:

You can switch the positions of the **Back** key and the **Menu** key. Touch **Settings > Custom bottom key** from the home screen and select one case.


Installing the micro-SIM Card or nano-SIM Card

Power off your phone before installing or removing the micro-SIM card or nano-SIM card.

WARNING!

To avoid damage to the phone, do not use any other kind of SIM cards, or any non-standard micro-SIM card or nano-SIM card cut from a SIM card. You can get a standard micro-SIM card or nano-SIM card from your service provider.

1. Insert the tip of the tray eject tool into the hole on the micro-SIM card tray or nano-SIM card tray.

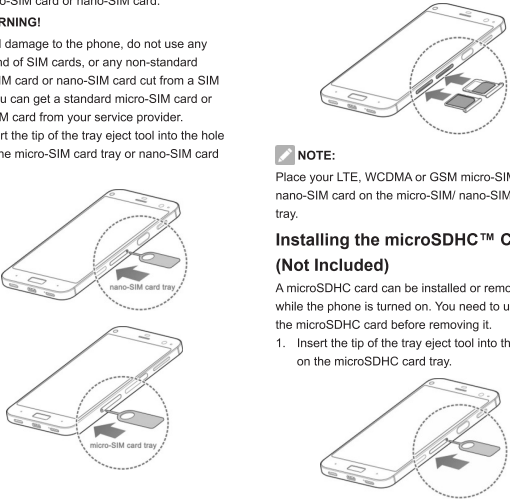

NOTE:


Place your LTE, WCDMA or GSM micro-SIM / nano-SIM card on the micro-SIM/ nano-SIM card tray.

Installing the microSDHC™ Card (Not Included)

A microSDHC card can be installed or removed while the phone is turned on. You need to unmount the microSDHC card before removing it.

1. Insert the tip of the tray eject tool into the hole on the microSDHC card tray.

2. Pull out the tray and place the card on the tray, as shown. Then carefully install the tray back.

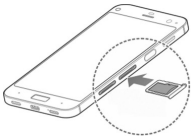

NOTE:

Some applications may require a microSDHC card to work normally or may store certain data on it. Therefore, it is recommended that you keep a microSDHC card installed and not remove or replace it randomly.

Charging the Battery

Your phone's battery should have enough power for the phone to turn on, find a signal, and make a few calls. You should fully charge the battery as soon as possible.


WARNING!

Use only ZTE-approved chargers and cables. The use of unapproved accessories could damage your phone or cause the battery to explode.

CAUTION:

Do not remove or change the built-in rechargeable battery in your phone by yourself. The battery can only be changed by ZTE or ZTE authorised service provider.

1. Connect the adapter to the charging jack. Ensure that the adapter is inserted in the correct direction.

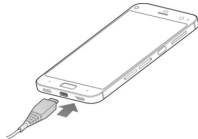

2. Connect the charger to a standard AC power outlet.
3. Disconnect the charger when the battery is fully charged.

NOTE:

If the battery is extremely low, you may be unable to power on the phone even when it is being charged. In this case, try again after charging the phone for at least 20 minutes. Contact the customer service if you still cannot power on the phone after prolonged charging.

Powering On/Off Your Phone

Ensure that the battery is charged.

- Press and hold the **Power** key to turn on your phone.
- To turn it off, press and hold the **Power** key to open the options menu. Touch **Power off** and then touch **OK**.

You can also press and hold the **Power** key for about 10 seconds to turn off your phone.

Waking Up Your Phone

Your phone automatically goes into sleep mode when it is not in use for some time. The display is turned off to save power and the keys are locked to prevent accidental operations.

You can wake up your phone by turning on the display and unlocking the keys.

- Press the **Power** key to turn the screen on.
- Swipe up or down to unlock.

NOTE:

If you have set an unlock pattern, a PIN/ a password or a fingerprint for your phone, you'll need to draw the pattern, enter the PIN/password or enter the fingerprint to unlock your phone.

Using the Touch Screen

Your phone's touch screen enables you to control actions through a variety of touch gestures.

- Touch**
When you want to type using the onscreen keyboard, select items on the screen such as the application and settings icons, or press the onscreen buttons, simply touch them with your finger.



- Touch and Hold**
To open the available options for an item (for example, a message or link in a web page), touch and hold the item.



- Swipe or Slide**
To swipe or slide means to quickly drag your finger vertically or horizontally across the screen.



- Drag**
To drag, press and hold your finger with some pressure before you start to move your finger. While dragging, do not release your finger until you have reached the target position.



- Pinch**
In some apps (such as Maps, Browser, and Gallery), you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in).



- Rotate the screen**
For most screens, you can automatically change the screen orientation from portrait to landscape by turning the phone sideways.

Product Safety Information

	Don't make or receive phone calls while driving. Never text while driving.
	For body-worn operations, maintain a separation of 15 mm.
	Small parts may cause choking.
	Your phone can produce a loud sound.
	To prevent possible hearing damage, do not listen at high volume levels for long periods.
	Avoid contact with anything magnetic.
	Keep away from pacemakers and other electronic medical devices.
	Turn off when asked to in hospitals and medical facilities.
	Turn off when told to on aircraft and at airport.
	Turn off when near explosive materials or liquids.
	Don't use at gas stations.
	Your phone may produce a bright or flashing light.

	Don't dispose of your phone in fire.
	Avoid extreme temperatures.
	Avoid contact with liquids. Keep your phone dry.
	Do not attempt to disassemble your phone.
	Only use approved accessories.
	Don't rely on your phone as a primary device for emergency communications.

Specific Absorption Rate (SAR)

The SAR limit for mobile devices is 2 W/kg and the highest reported SAR value for usage against the head is 0.7 W/kg, for usage near the body is 0.71 W/kg complies with this limit.