

ZTE[®] LEVER[™] LTE

USER MANUAL

Z079584506902



www.zteusa.com

Z936L

 *Bringing you Closer*

About This Manual

Thank you for choosing this ZTE mobile device. In order to keep your device in its best condition, please read this manual and keep it for future reference.

Copyright © 2015 ZTE CORPORATION

All rights reserved.

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

Notice

ZTE Corporation reserves the right to make modifications on print errors or update specifications in this manual without prior notice. This manual has been designed with the utmost care to ensure the accuracy of its content. However, all statements, information and recommendations contained therein do not constitute a warranty of any kind, either expressed or implied. Please refer to chapter *For Your Safety* to be sure to use your phone properly and safely.

We offer self-service for our smart terminal device users. Please visit the ZTE official website (at www.ztedevice.com) for more information on self-service and supported product models. Information on the website takes precedence.

Disclaimer

ZTE Corporation expressly disclaims any liability for faults and damages caused by unauthorized modifications of the software.

Images and screenshots used in this manual may differ from the actual product. Content in this manual may differ from the actual product or software.

Trademarks

ZTE and the ZTE logos are trademarks of ZTE Corporation.

Google and Android are trademarks of Google, Inc.

The *Bluetooth*® trademark and logos are owned by the *Bluetooth* SIG, Inc. and any use of such trademarks by ZTE Corporation is under license.

The microSDHC logo is a trademark of SD-3C, LLC.

Qualcomm® Snapdragon™ processors are products of Qualcomm Technologies, Inc. Qualcomm and Snapdragon are trademarks of Qualcomm Incorporated, registered in the United States and other countries. Used with permission.

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

Other trademarks and trade names are the property of their respective owners.

Edition Time: January 2015

Manual No.: Z079584506902



Table of Contents

Getting Started	5	Hiding Application Icons	19
Installing a microSDHC™ Card.....	5	Uninstalling or Disabling an Application.....	19
Charging the Battery	5	Rearranging the Primary Shortcuts	19
Extending the Battery Life.....	6	Entering Text	19
Powering Your Phone On/Off	6	Changing Input Methods.....	19
Restarting Your Phone	6	Editing Text	20
Setting Up Your Phone for the First Time	6	Opening and Switching Apps	21
Locking/Unlocking the Screen and Keys.....	6	Connecting to Networks and Devices	22
Using the Touch Screen	7	Connecting to Mobile Networks	22
Getting to Know Your Phone	8	Connecting to Wi-Fi®	22
Getting to Know the Home Screen.....	10	Connecting to <i>Bluetooth</i> ® Devices	24
Personalizing	11	Connecting to Your Computer via USB	26
Changing the System Language.....	11	Connecting to Virtual Private Networks.....	27
Setting the Date and Time	11	Phone Calls	28
Changing the Ringtone and Notification Sound...	11	Placing and Ending Calls	28
Turning Touch Sounds On/Off.....	11	Answering or Rejecting Calls	28
Adjusting Volumes.....	11	Working With the Call Log.....	28
Switching to Silent Mode.....	11	Calling Your Contacts	29
Applying New Wallpapers.....	12	Checking Voicemail	29
Changing the Screen Brightness	12	Using Options During a Call	29
Protecting Your Phone With Screen Locks	12	Managing Multi-party Calls	30
Protecting Your Phone With Encryption	13	Adjusting Your Call Settings.....	31
Knowing the Basics	15	People	32
Monitoring the Phone Status	15	Checking Contact Details.....	32
Managing Notifications	16	Adding a New Contact	32
Managing Apps and Widgets	18	Setting Up Your Own Profile	32
Organizing With Folders.....	18	Importing, Exporting, and Sharing Contacts	32
Setting the Home Screen Transition Effect.....	18	Working With Favorite Contacts.....	33
Application List Screen	18	Working With Groups	34
Organizing Application Icons With a Folder	18	Searching for a Contact	34

Table of Contents

Editing Contacts..... 34

Accounts..... 36

Adding or Removing Accounts..... 36

Configuring Account Sync..... 36

Email..... 37

Setting Up the First Email Account..... 37

Checking Your Emails..... 37

Responding to an Email..... 37

Writing and Sending an Email..... 38

Adding a Signature to Your Emails..... 38

Adding and Editing Email Accounts..... 38

Changing General Email Settings..... 39

Gmail™..... 40

Opening Your Gmail Inbox..... 40

Switching Accounts..... 40

Writing and Sending a Message..... 40

Adding a Signature to Your Gmail Messages..... 40

Replying to or Forwarding a Message..... 40

Working With Received Attachments..... 41

Working With Labels..... 41

Changing Gmail Settings..... 41

Messaging..... 42

Opening the Messaging Screen..... 42

Sending a Text Message..... 42

Replying to a Message..... 42

Forwarding a Message..... 42

Copying a Message..... 43

Deleting Messages or Threads..... 43

Changing Message Settings..... 43

Calendar..... 44

Viewing Your Calendars and Events..... 44

Creating an Event..... 44

Editing or Deleting an Event..... 45

Changing Calendar Settings..... 45

Google+™..... 46

Getting Started With Google+..... 46

Changing Google+ Settings..... 46

Signing out of Google+..... 46

Browser..... 47

Opening the Browser..... 47

Working With an Opened Page..... 47

Using Multiple Browser Tabs..... 48

Downloading Files..... 48

Using Bookmarks..... 48

Viewing Your Browsing History..... 49

Changing Browser Settings..... 49

Google Maps™..... 50

Activating Location Services..... 50

Getting Your Location..... 50

Searching for a Location..... 50

Getting Directions to Your Destination..... 50

Searching for Local Places..... 51

Google Now™ and Search..... 52

Enabling Google Now..... 52

Searching With Text..... 52

Searching by Speaking..... 52

Changing Search and Voice Search Settings..... 52

Table of Contents

Camera..... 53

Capturing a Photo..... 53

Using Manual Camera Mode..... 53

Using Fun Camera Mode..... 54

Recording a Video..... 54

Customizing Camera and Video Settings..... 54

Gallery..... 56

Opening the Gallery..... 56

Working With Albums..... 56

Working With Pictures..... 56

Playing Videos..... 57

Music..... 58

Copying Music Files to Your Phone..... 58

Viewing Your Music Library..... 58

Playing Music..... 59

Managing Playlists..... 59

Play Music..... 60

Playing Your Music..... 60

Managing Playlists..... 61

Video Player..... 62

Opening the Video Library..... 62

Playing and Controlling Videos..... 62

Managing Video Files..... 62

Sound Recorder..... 63

Recording a Voice Memo..... 63

Playing a Voice Memo..... 63

More Apps..... 64

Calculator..... 64

Chrome™..... 64

Clock..... 64

Dolby®..... 64

Downloads..... 65

Google Drive™..... 65

File Manager..... 65

Note..... 65

Play Books..... 65

Play Movies & TV..... 66

Unlock Shortcuts..... 66

Voice Dialer..... 66

Task Manager..... 66

YouTube™..... 66

Play Store..... 67

Browsing and Searching Apps..... 67

Downloading and Installing Apps..... 67

Creating a Google Wallet™ Account..... 67

Requesting a Refund for a Paid App..... 68

Managing Your Downloads..... 68

Settings..... 69

General Settings..... 69

Wireless and Networks..... 70

Device..... 71

Personal..... 71

Accounts..... 72

System..... 72

Table of Contents

Upgrading the Phone Software..... 74

Troubleshooting 75

For Your Safety 78

General Safety..... 78

Radio Frequency (RF) Energy..... 79

FCC Compliance..... 79

Hearing Aid Compatibility (HAC) Regulations for
Mobile Phones 80

Distraction 81

Product Handling 81

Electrical Safety..... 83

Radio Frequency Interference..... 84

Explosive Environments 85

Specifications 86


Notes 87

Getting Started


Installing a microSDHC Card

You have the option to install a microSDHC card of up to 32 GB to expand your phone’s storage capacity. The microSDHC card can be installed and removed while the phone is turned on. Unmount the microSDHC card before removing it.

- 1. Insert the tray eject tool (or end of a paper clip) into the hole on the microSDHC card tray and pull the tray out.

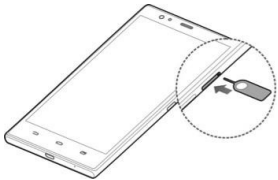

- 2. Place a microSDHC card (not included) in the tray with the gold-colored contacts facing down.

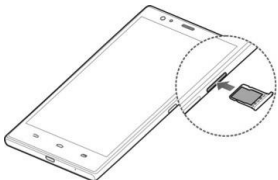

NOTE: Some applications may require a microSDHC card to work normally or may store certain data on it. Therefore, it is recommended that you keep a microSDHC card installed and not remove or replace it randomly.

- 3. Carefully slide the tray back in place.

Charging the Battery

When you first get your new phone you’ll need to charge the battery. If the battery is low, there will be a pop-up message on the screen. As you charge your phone, the screen will tell you the exact battery level each time you wake up your phone.

WARNING! Use only ZTE-approved chargers and cables. The use of unapproved accessories could damage your phone or cause the battery to explode.

CAUTION: Do not remove or change the built-in rechargeable battery in your phone by yourself. The battery can only be changed by ZTE or a ZTE authorized service provider.

- 1. Connect the adapter to the charging port. Ensure that the adapter is inserted with the correct orientation. Do not force the connector into the charging port.



- 2. Connect the charger to a standard AC wall outlet. If the phone is on, you’ll see a charging icon, such as  or , appear in the Status Bar.
- 3. Disconnect the charger when the battery is fully charged.

NOTE: If the battery is extremely low, you may be unable to power on the phone even when it is being charged. In this case, try again after charging the phone

for at least 10 minutes. Contact customer service if you still cannot power on the phone after prolonged charging.

Extending the Battery Life

Active applications, screen brightness levels, *Bluetooth* and Wi-Fi usage, and GPS functionality can drain your battery. You can follow the helpful tips below to conserve your battery power:

- Reduce the screen backlight time.
- Lower the screen brightness.
- Turn auto-sync, Wi-Fi, and *Bluetooth* off when not in use.
- Disable the GPS function when not in use. Most applications using this function will periodically query the GPS satellites for your current location; each query drains your battery.

Powering Your Phone On/Off

- Press and hold the **Power/Lock Key** to turn on your phone.
- To turn it off, press and hold the **Power/Lock Key** to open the options menu. Tap **Power off** and then tap **OK**.

Restarting Your Phone

If the screen freezes or takes too long to respond, try pressing and holding the **Power/Lock Key** for about 10 seconds to restart the phone.

Setting Up Your Phone for the First Time

When you first power on your phone after you purchase it or reset it to factory settings (see *Settings – Personal – Backup and Reset*), you may need to set it up before using it.

1. Tap the **language field**, select the language you want, and tap **Start**.
2. Connect to a Wi-Fi network and tap **Next**.
3. Set the date, time, and time zone, or use date and time data provided by the network. Then tap **Next**.
4. If you have a Google™ account, tap **Existing** to sign in. Tap **New** to create a Google account or tap **Not now** to set up an account later.
5. Configure the Google location options and tap **Next**.
6. Enter your name, which the phone uses to personalize some apps, and then tap .
7. You will be prompted to accept the Google terms of service. Tap **Next** to continue.
8. Tap **Finish** to complete the setup.

Locking/Unlocking the Screen and Keys

Your phone allows you to quickly lock the screen and keys (put the phone into Sleep mode) when not in use, and also to turn the screen back on and unlock it when you need it.

To lock the screen and keys:

To quickly turn the screen off and lock the keys, press the **Power/Lock Key**.

NOTE: To save battery power, the phone automatically turns off the screen after a certain period of time when you leave it idle. You will still be able to receive messages and calls while the phone screen is off.

To unlock the screen and keys:

1. Press the **Power/Lock Key** to turn the screen on.
2. Press and hold a blank area of the screen or tap and hold an application shortcut at the bottom of the screen to unlock the screen and open the application quickly.

NOTE: If you have set face unlock, an unlock pattern, PIN, or password for your phone (see *Personalizing – Protecting Your Phone With Screen Locks*), you'll be prompted to look at the front camera, draw the pattern, or enter the PIN/password to unlock your phone.

Using the Touch Screen

Your phone's touch screen lets you control actions through a variety of touch gestures.


- **Tap** – When you want to type using the on-screen keyboard, select on-screen items (such as application and settings icons), or press on-screen buttons, simply tap them with your finger.
- **Tap and Hold** – To open the available options for an item (for example, a message or link in a web page), tap and hold the item.

- **Swipe or Slide** – To swipe or slide means to quickly drag your finger vertically or horizontally across the screen.
- **Drag** – To drag, press and hold your finger with some pressure before you start to move your finger. While dragging, do not release your finger until you have reached the target position.
- **Pinch** – In some apps (such as Maps, Browser, and Gallery), you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in).
- **Rotate the screen** – For most screens, you can automatically change the screen orientation from portrait to landscape by turning the phone sideways.

NOTE: The Auto-rotate screen check box needs to be selected for the screen orientation to automatically change. Press the **Home Key** > **Apps icon** > **Settings** > **Display** > **Auto-rotate screen**.

You can also access the screen rotation control by sliding down the status bar and tap  > **ROTATION LOCKED/AUTO ROTATE**.

Getting to Know Your Phone

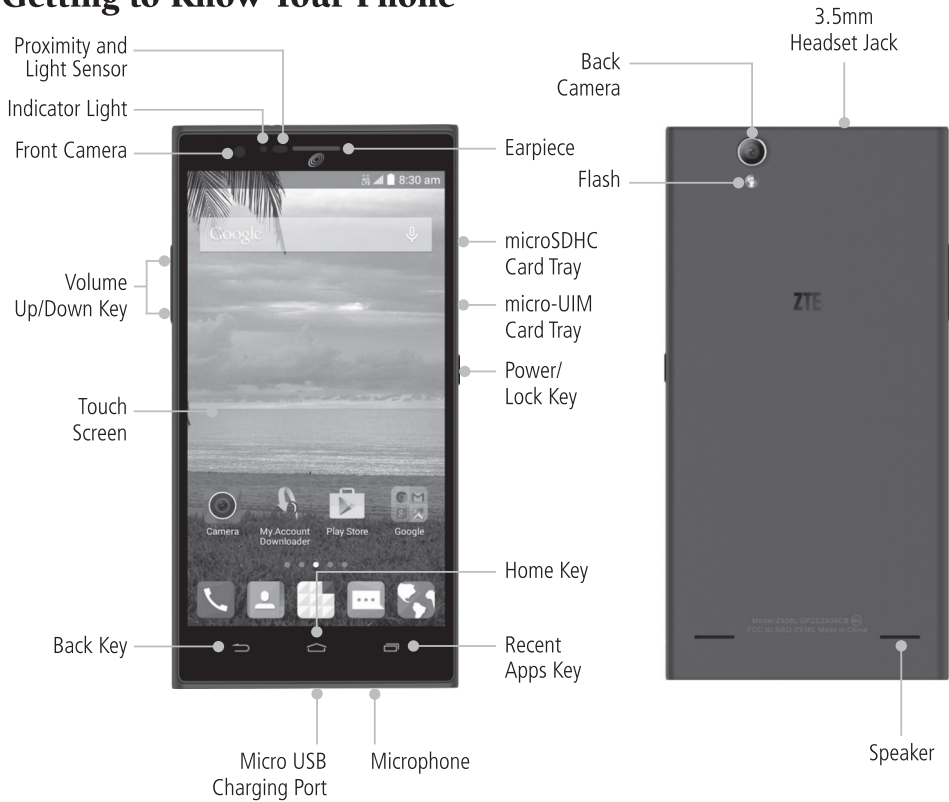

Key Functions

Key	Description
Power/Lock Key	Press and hold to turn Airplane mode on or off, restart, enable silent mode/vibration mode/sound, or to power off. Press to change your phone to Sleep mode. Press to wake up your phone.
Home Key	Press to return to the home screen from any application or screen. Press and hold to access Google Now.
Recent Apps Key	Press to see recently used applications.
Back Key	Press to go to the previous screen.
Volume Up/Down Key	Press or hold to turn the volume up or down.

Getting Started

Getting to Know the Home Screen

The home screen is the starting point for your phone's applications, functions, and menus. You can customize your home screen by adding application icons, shortcuts, folders, widgets, and more. Your home screen extends beyond the initial screen. Swipe the screen left or right to display additional screens.



Extended Home Screen Panels

Your home screen is extendable, providing more space for shortcuts, widgets, and more. Simply swipe left or right on the home screen to see the extended panels.

Personalizing

Changing the System Language

1. Press the **Home Key > Apps icon > Settings > Language & input > Language**.
2. Select the language you need.

Setting the Date and Time

1. Press the **Home Key > Apps icon > Settings > Date & time**.
2. Uncheck **Automatic date & time** and **Automatic time zone** if you want to set the date, time, and time zone by yourself.
3. Set the date, time, time zone, and date/time format.

Changing the Ringtone and Notification Sound

You can customize the default ringtone for incoming calls and the default notification sound quickly.

1. Press the **Home Key > Apps icon > Settings > Sound**.
2. Tap **Phone ringtone** or **Default notification**.
3. Scroll through the list and select the ringtone you'd like to use.
4. Tap **OK**.

NOTE: See *People – Editing Contacts – Setting a Ringtone for a Contact* for how to assign a special ringtone to an individual contact.

Turning Touch Sounds On/Off

1. Press the **Home Key > Apps icon > Settings > Sound**.
2. Check or uncheck **Dial pad touch tones**, **Touch sounds**, **Screen lock sounds**, or **Vibrate on touch**, or set the emergency tone.

Adjusting Volumes

1. Press the **Home Key > Apps icon > Settings > Sound > Volumes**.
2. Drag the sliders to adjust the volume for each type of audio.
3. Tap **OK** to save.

NOTE: You can adjust the media volume when a media application is in use by pressing the **Volume Up/Down Key**. If no media application is active, press the **Volume Up/Down Key** to adjust ringtone volume (or the earpiece volume during a call).

Switching to Silent Mode

You can set the phone to silent mode by using one of the following methods:

- Press and hold the **Power/Lock Key** and then tap  to enable silent mode, tap  to enable silent mode with vibration, or tap  to disable silent mode.
- Keep pressing the **Volume Down Key** when no media application is active. When the  icon appears in the Status Bar, the phone is set to silent.

- mode with vibration. When the  icon appears in the Status Bar, the phone is in silent mode.
- Press the **Home Key > Apps icon > Settings > Sound > Silent mode**, and tap **Off, Vibrate**, or **Mute**.

Applying New Wallpapers

You can set the wallpaper for the home screen or lock screen.

1. Tap and hold any blank area of a home screen.
2. Tap **Wallpaper**.
3. Select a wallpaper source from **Gallery**, **Wallpapers**, **Live Wallpapers**, or **Photos**, and choose the image or animation you want to use as the wallpaper.
4. For Gallery images, tap **OK** at the top of the screen. For Live or Wallpapers, tap **Set wallpaper**. For Photos, tap **SET WALLPAPER**.

NOTES:

- **Live Wallpapers** and **Photos** are not available for the lock screen.
- To change the home screen wallpaper blur effect, swipe up on the home screen and drag the **Wallpaper Blurriness** bar to adjust it.

Changing the Screen Brightness

1. Press the **Home Key > Apps icon > Settings > Display > Brightness**.

12

2. Tap **AUTO** to make the phone adjust the screen brightness automatically, or drag the slider to adjust the brightness manually.

NOTE: You can turn on or off automatic adjustment without going to the Settings menu. Just swipe down the status bar at the top of the screen, tap  > **BRIGHTNESS**. See *Knowing the Basics – Using Quick Settings* for more information.

Protecting Your Phone With Screen Locks

You can protect your phone by creating a screen lock. When a screen lock is enabled, you need to tap and hold the screen, look at the front-facing camera, draw a pattern, or enter a numeric PIN or a password to unlock the phone's screen and keys.

1. Press the **Home Key > Apps icon > Settings > Security**.
2. Tap **Screen lock**.
3. Tap **None**, **Long press**, **Face Unlock**, **Pattern**, **PIN**, or **Password**.
 - Tap **None** to disable screen lock protection.
 - Tap **Long press** to enable screen lock and allow unlocking with a "tap and hold" gesture. You can unlock the screen by tapping and holding a blank area on the lock screen.
 - Tap **Face Unlock** to let the phone capture your face. You can unlock the screen by looking at the front camera. You also need to set a pattern or PIN in case the phone cannot recognize your face.

- Tap **Pattern** to create a pattern that you must draw to unlock the screen.
- Tap **PIN** or **Password** to set a numeric PIN or a password that you must enter to unlock the screen.

NOTE: Screen lock options are listed in the approximate order of the strength of their security, starting with **None** and **Long press**, which provide no security. A pattern provides minimal security, although it can be more convenient than the stronger options.

IMPORTANT: If you forget the pattern you set, try five times and tap **Forgot pattern** to sign in to the Google account you have added on the phone and reset the screen lock. You will need an active Internet connection. You can also upgrade the phone software (see *Settings – System – About Phone*).

Protecting Your Phone With Encryption

You can encrypt all the data on your phone: Google accounts, application data, music and other media, downloaded information, and more. If you do, you must enter a numeric PIN or password each time you power on your phone.

WARNING! Encryption is irreversible. The only way to revert to an unencrypted phone is to perform a factory data reset, which erases all your data.

Encryption provides additional protection in case your phone is stolen, and may be required or recommended in some organizations. Consult your system

administrator before turning it on. In many cases the PIN or password you set for encryption is controlled by the system administrator.

Before turning on encryption, prepare as follows:

- Set a lock screen PIN or password.
- Charge the battery.
- Keep the phone connected to the charger.
- Schedule an hour or more for the encryption process. You must not interrupt it or you will lose some or all of your data.

When you're ready to turn on encryption:

1. Press the **Home Key > Apps icon > Settings > Security > Encrypt phone**.
2. Read the information about encryption carefully. The **Encrypt phone** button is dimmed if your battery is not charged or your phone is not plugged in. If you change your mind about encrypting your phone, press the **Back Key**.

WARNING! If you interrupt the encryption process, you will lose data.
3. Tap **Encrypt phone**.
4. Enter your lock screen PIN or password and tap **Next**.
5. Tap **Encrypt phone** again.

The encryption process starts and displays its progress. Encryption can take an hour or more, during which time your phone may restart several times.

13

Personalizing

When encryption is complete, you'll be prompted to enter your PIN or password.

Subsequently, you must enter your PIN or password each time you power on your phone to decrypt it.

Knowing the Basics

Monitoring the Phone Status

The Status Bar at the top of the home screen provides phone and service status icons on the right side. Below are some of the icons you may see.

Indicators and Icons

Indicator	What it means
	No signal
	Signal strength
	4G LTE connected
	Battery empty
	Battery low
	Battery partially drained
	Battery full
	Battery charging

Indicator	What it means
	Alarm set
	Ringer off
	Vibration mode
	Airplane mode
	Wired headset connected
	<i>Bluetooth</i> on
	Connected to a Wi-Fi network
	Wi-Fi in use

Managing Notifications

The Status Bar at the top of the home screen provides notification icons on the left side. Below are some of the icons you may see.

Indicators and Icons

Indicator	What it means
	New SMS
	New MMS
	New email
	New Gmail message
	Updates available
	Problem with SMS/MMS delivery
	Missed call
	Call in progress

Indicator	What it means
	microSDHC card removed
	microSDHC card unmounted
	Upcoming event
	Downloading data
	GPS on
	USB connected
	Song is playing

Opening/Closing the Notification Panel

Notifications report the arrival of new messages, calendar events, and alarms, as well as ongoing events. You can open the Notification Panel to view the details of notifications.

- To open the Notification Panel, swipe your finger down from the top of the screen.
- To close the Notification Panel, swipe your finger up from the bottom of the screen or press the **Back Key**.

Responding to or Removing a Notification

In the Notification Panel, you can respond to a notification or remove the notifications. The Notification Panel also supports expandable notifications that let you perform additional actions right from the notification itself.

- To respond to a notification, tap it.
- To remove a notification, swipe it left or right.
- To remove all notifications, tap  in the top right corner.
- Tap and hold a notification and then tap **App info** to identify the application that created it. To turn off notifications from that application if needed, uncheck **Show notifications** in the App info screen.
- Most apps that send notifications, such as Gmail, have notification settings that you can adjust.

NOTE: If you turn off notifications for an app, you may miss its important alerts and updates. The notifications of some apps cannot be turned off.

Using Quick Settings

The Quick Settings in the notification panel make it convenient to view or change the most common settings for your phone.

In the Notification Panel, tap  at the top of the notifications list to get to the quick settings menu.

- **OWNER:** Tap to add your personal information.
- **BRIGHTNESS:** Tap to adjust the screen brightness.
- **SETTINGS:** Tap to go to the settings menu.
- **WI-FI:** Tap to turn on or off Wi-Fi.
- **DATA:** Tap to enable or disable data access over the mobile network.
- **AUTO ROTATE:** Tap to turn on or off the Auto-rotate feature.
- **BATTERY:** Tap to see the battery information.
- **AIRPLANE MODE:** Tap to turn on or off the airplane mode.
- **BLUETOOTH:** Tap to turn on or off *Bluetooth*.
- **LOCATION:** Tap to turn on or off the GPS function.
- **SOUND:** Tap to switch between vibration and sound.
- **SYNC:** Tap to turn on or off account synchronization.
- **FLASHLIGHT:** Tap to turn on or off the flashlight.

Managing Apps and Widgets

Adding Apps and Widgets

1. Tap and hold an empty place on the home screen, and then tap **Widgets** or **Apps**.
2. Tap and hold an item and drag it to a home screen thumbnail at the bottom of the screen.

Moving Apps or Widgets

1. Tap and hold a widget or app on the home screen.
2. Drag it to the place you need.

Removing Apps or Widgets

1. Tap and hold a widget or app on the home screen.
2. Drag it to  **Delete** to remove it.

Adjusting Widget Size

1. Tap and hold a widget on the home screen and then release it.
2. An outline appears around the widget. Drag the outline to resize the widget.

NOTE: Not all widgets can be resized.

Organizing With Folders

You can create folders on the home screen and add several apps in a folder.

You can move or remove folders the same way as moving or removing apps.

1. Tap and hold the app on the home screen you want to add into a folder until  **Folder** appears.

2. Drag the app to  **Folder** and release it. A new folder will be created and the app is added into the folder.
3. To add more apps into the folder, tap and hold each app and drag it over the folder before releasing it. You can also open the folder, tap  and check the apps you want to add into the folder, and then tap **DONE**.

NOTE: Tap the folder and then tap the name field to rename the folder.

Setting the Home Screen Transition Effect

1. Tap and hold any blank area of a home screen.
2. Tap **Effect**.
3. Select an effect.

Application List Screen

Press the **Home Key** > **Apps icon** to open the application list screen and find all your apps on the phone. You can uninstall or disable the apps, hide the apps or organize them into folders.

Organizing Application Icons With a Folder

1. Press the **Home Key** > **Apps icon** to open the application list screen.
2. Tap and hold an app and drag it into a folder on the top of the screen.

3. To add more apps into the folder, tap and hold each app and drag it over the folder before releasing it.
4. Press the **Back Key** when complete.

NOTE: You can also drag an app to **New Folder**. A new folder will be created in the application list screen and the app is added.

Hiding Application Icons

1. Press the **Home Key** > **Apps icon** to open the application list screen.
2. Tap  > **Hide apps**.
3. Tap the apps you want to hide and then tap **DONE**.

NOTE: To find the hidden apps, tap  > **Display hidden apps**. You can then tap the icons and tap **DONE** to display them again in the application list screen.

Uninstalling or Disabling an Application

1. Press the **Home Key** > **Apps icon** to open the application list screen.
2. Tap and hold an app and then release it.
3. Tap  to uninstall the app or tap  to disable it.

NOTE: To find the disabled applications, press the **Home Key** > **Apps icon** > **Settings** > **Apps** > **DISABLED**. You can then tap an application and tap **Enable** to enable it.

Not all applications can be uninstalled or disabled.

Rearranging the Primary Shortcuts

The home screen includes a customizable primary shortcuts area at the bottom of all home screens. You can drag apps, folders, and other priority items in or out of the area for instant access from any home screen.



Entering Text

You can enter text using the on-screen keyboard. Some apps open it automatically. In others, you open it by tapping where you want to type. You can press the **Back Key** to hide the on-screen keyboard. You can also enter text by speaking with the Google voice typing feature.


Changing Input Methods

1. When you use the on-screen keyboard to enter text,  icon appears on the status bar.
2. Swipe down on the notification panel and tap **Choose input method**.
3. Select the input method you need.

NOTE: The  icon appears only when more than one input method is installed.

Google Keyboard

The Google keyboard provides a layout similar to a desktop computer keyboard. Turn the phone sideways and the keyboard will change from portrait to landscape. The landscape keyboard is not supported in all applications.

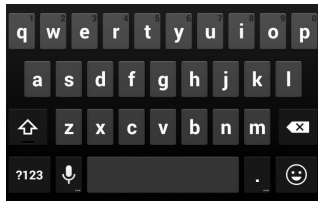

- Tap the alphabetic keys to enter letters. Tap and hold some specific keys to enter associated accented letters or numbers. For example, to enter è, tap and hold **e** and the available accented letters and number 3 appear. Then slide to choose è.
- Tap **⇧** to use uppercase. Double-tap **⇧** to lock uppercase. This key also changes to indicate the current case you are using: **⇧** for lowercase, **⇧** for uppercase, and **⇧** when locked in uppercase.
- Tap **✕** to delete the text before the cursor.
- Tap **?123** to select numbers and symbols. You can then tap **=\<** to find more.
- Tap **☺** to enter miniature icons.
- Tap **🔊** to use Google's networked voice input.
- Tap and hold **🔊** to change the input languages or set up the Google keyboard.

Google Voice Typing

Google voice typing uses the Google voice recognition service to convert speech to text.

1. Tap **🔊** to access the voice typing when you are using the Google keyboard.
2. When you see the microphone image, speak what you want to type.
3. You can continue entering text to keep it or to delete it.

NOTE: Say "comma," "period," "question mark," "exclamation mark," or "exclamation point" to enter punctuation.

Input Method Settings

Choose the input method settings by pressing the **Home Key > Apps icon > Settings > Language & input**.

In the **KEYBOARD & INPUT METHODS** section, you can set the default input method and choose the settings for input methods.

Editing Text


- **Move the insertion point:** Tap where you want to type. The cursor blinks in the new position, and a tab appears below it. Drag the tab to move the cursor.
- **Select text:** Tap and hold or double tap within the text. The nearest word highlights, with a tab at each end of the selection. Drag the tabs to change the selection.

Switching Between Recently Opened Apps


1. Tap the **Recent Apps Key**. A list of the names and thumbnails of apps you've recently used opens. If you've been using more apps recently than can fit on the screen, you can scroll the list up and down.
2. Tap a thumbnail to open that app.

NOTE: You can swipe a thumbnail sideways to remove it from the list.

- **Cut or copy:** Select the text you want to manipulate. Then tap **✂** or **📄** to cut or copy the text to the clipboard.
- **Replace text with the clipboard text:** Select the text you want to replace. Then tap **📄** or **PASTE**.

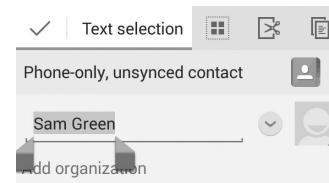

- **Insert text from the clipboard:** Move the cursor to the insertion point and then tap and hold the tab below the cursor. Release your finger and tap **PASTE**.

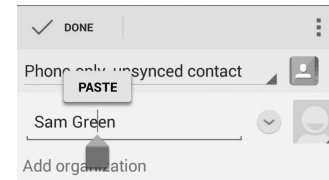

Opening and Switching Apps

Opening an App

1. Press the **Home Key > Apps icon**.
2. Slide left or right on the screen and tap an app to open it.

Connecting to Networks and Devices

Connecting to Mobile Networks

Controlling Mobile Data Use

To enable or disable data access:

1. Press the **Home Key > Apps icon > Settings > Mobile networks**.
2. Check **Data enabled** to enable data access over the mobile network. Clear the check box to disable data access.

To enable always-on data access:

1. Press the **Home Key > Apps icon > Settings > Mobile networks**.
2. Check **Always-on mobile data** to allow applications to update data automatically.

NOTE: When you enable this option, more data traffic will be generated for automatic updates of applications data, and your phone will consume more power.

To get data services when roaming:

1. Press the **Home Key > Apps icon > Settings > Mobile networks**.
2. Check **Data roaming**.

NOTE: Data roaming may incur significant roaming charges.

Setting Access Point Names

To connect to the Internet you can use the default Access Point Names (APN).

1. Press the **Home Key > Apps icon > Settings > Mobile networks > Access Point Names**.
2. If the default APN is not enabled, tap the APN to enable it.

NOTE: To set the APN to default, tap  > **Reset to default**.

Connecting to Wi-Fi

Wi-Fi is a wireless networking technology that can provide Internet access at distances of up to 100 meters, depending on the Wi-Fi router and your surroundings.

Turning Wi-Fi On and Connecting to a Wi-Fi Network

1. Press the **Home Key > Apps icon > Settings > Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **ON**  position to turn on Wi-Fi.
3. Tap a network name to connect to it.
4. If the network is secured, enter the password and tap **Connect**.

NOTES:

- Your phone automatically connects to previously used Wi-Fi networks when they are in range.
- To connect to a Wi-Fi router that supports WPS, tap  on the phone's Wi-Fi menu and press the WPS button on your router.

Getting Notified of Open Networks

1. Press the **Home Key > Apps icon > Settings > Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **ON**  position.
3. Tap  > **Advanced**.
4. Check **Network notification**.

When Wi-Fi is on, you receive notifications in the Status Bar when your phone detects an open Wi-Fi network. Uncheck the option to turn off notifications.

Adding a Wi-Fi Network

You can add a Wi-Fi network if the network does not broadcast its name (SSID) or add a Wi-Fi network when you are out of range.

To connect to a secured network, you first need to get the security details from the network's administrator.

1. Press the **Home Key > Apps icon > Settings > Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **ON**  position.
3. Tap .
4. Enter the network SSID (name). If necessary, enter security or other network configuration details.
5. Tap **Save**.

Forgetting a Wi-Fi Network

You can make your phone forget the details of a Wi-Fi network that you added—for example, if you don't

Connecting to Networks and Devices

want the phone to connect to it automatically or if it is a network that you no longer use.

1. Press the **Home Key > Apps icon > Settings > Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **ON**  position.
3. Tap the Wi-Fi network name and then tap **Forget**.

Connecting to a WPS Network

Wi-Fi Protected Setup (WPS) is a feature that makes it easy to add your phone to the access points which support WPS.

You can use one of the following methods to connect your phone to a wireless network using WPS.

Method one: WPS button (Recommended)

1. Press the **Home Key > Apps icon > Settings > Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **ON**  position.
3. Tap .
4. Press the WPS button on the wireless router and the access point will recognize your phone and add it to the network.

Method two: PIN

1. Press the **Home Key > Apps icon > Settings > Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **ON**  position.
3. Tap  > **WPS Pin Entry**.

Connecting to Networks and Devices

4. The WPS PIN displays on the screen. Enter the PIN into the access point's setup page.

After entering the PIN, your phone automatically finds the access point and configures the connection.

NOTE: For detailed information about the WPS feature of access point, please refer to its documentation.

Adjusting Advanced Wi-Fi Settings

1. Press the **Home Key > Apps icon > Settings > Wi-Fi**.
2. Tap  > **Advanced** to adjust the following settings.
 - **Network notification:** Get notifications in the Status Bar when Wi-Fi is on and an open network is available.
 - **Keep Wi-Fi on during sleep:** Choose whether or not to keep Wi-Fi on in Sleep mode.
 - **Scanning always available:** Let Google's location service and other apps scan for networks, even when Wi-Fi is off.
 - **Avoid no internet connections:** Only use a Wi-Fi network when the Internet connection is good.
 - **Install certificates:** Check the installed certificates.
 - **Wi-Fi optimization:** Check to minimize battery usage when Wi-Fi is on.
 - **MAC address:** Check the MAC address.
 - **IP address:** Check the phone's IP address.

Connecting to Bluetooth Devices

Bluetooth is a short-range wireless communication technology. Phones or other devices with *Bluetooth* capabilities can exchange information wirelessly within a distance of about 32 feet (10 meters). The *Bluetooth* devices must be paired before the communication is performed.

Turning Bluetooth On/Off

1. Press the **Home Key > Apps icon > Settings > Bluetooth**.
2. Slide the **Bluetooth** switch to the **ON**  or **OFF**  position.

When *Bluetooth* is on, the  icon will appear in the Status Bar.

Making Your Phone Visible

In order to work with other phones or devices that have *Bluetooth*, you need to make your phone visible to them.

1. Press the **Home Key > Apps icon > Settings > Bluetooth**.
2. Slide the **Bluetooth** switch to the **ON**  position if *Bluetooth* is off.
3. Tap your device name on the top of the screen to make your phone visible or invisible.

NOTE: Tap  > **Visibility timeout** to set the *Bluetooth* visibility timeout of your phone.

Connecting to Networks and Devices

Changing the Device Name

1. Press the **Home Key > Apps icon > Settings > Bluetooth**.
2. Slide the **Bluetooth** switch to the **ON**  position if *Bluetooth* is off.
3. Tap  > **Rename phone**.
4. Edit the name and tap **Rename**.

Pairing With Another Bluetooth Device

1. Press the **Home Key > Apps icon > Settings > Bluetooth**.
2. Slide the **Bluetooth** switch to the **ON**  position if *Bluetooth* is off.

Your phone automatically scans for and displays the IDs of all available *Bluetooth* devices in range. Tap **SEARCH FOR DEVICES** if you want to scan again.
3. Tap the device you want to pair with.
4. If necessary, confirm that the *Bluetooth* passkeys are the same between the two devices and tap **Pair**. Alternately, enter a *Bluetooth* passkey and tap **Pair**. Pairing is successfully completed when the other device accepts the connection or the same passkey is entered.

NOTE: The *Bluetooth* passkey may be fixed for certain devices, such as headsets and hands-free car kits. You can try entering 0000 or 1234 (the most common passkeys) or refer to the documents for that device.

Unpairing From a Bluetooth Device

You can make your phone forget its pairing connection with another *Bluetooth* device. To connect to the device again, you may need to enter or confirm a passkey.

1. Press the **Home Key > Apps icon > Settings > Bluetooth** and ensure that *Bluetooth* is turned on.
2. In the list of paired devices, tap  beside the *Bluetooth* device you want to unpair.
3. Tap **Unpair**.

Sending Data via Bluetooth

1. Open the appropriate application and select the file or item you want to share.
2. Select the option for sharing via *Bluetooth*. The method may vary by application and data type.
3. Tap a *Bluetooth* device the phone has paired with or wait for it to search for new devices and tap one of them.

Receiving Data via Bluetooth

1. Turn *Bluetooth* on before trying to receive data via *Bluetooth*.

NOTE: If the phone has not been paired with the sending device, you may need to tap **Bluetooth > Z936L** in **Settings** to keep the phone detectable through *Bluetooth*.

2. Swipe down on the Status Bar and tap .
3. Tap **Accept** to start receiving the data.

Connecting to Networks and Devices

Depending on your storage setting and whether a microSDHC card is installed, received files are stored automatically in a dedicated folder (*Bluetooth*, for instance). You can access them with the File Manager app.

Connecting to Your Computer via USB

You can connect your phone to a computer with a USB cable and transfer music, pictures, and other files in both directions. Your phone stores these files in internal storage or on a removable microSDHC card.

Connecting Your Phone to a Computer via USB

1. Connect your phone to the PC with a USB cable.
2. Open the Notification Panel and tap  (Connected as...).
3. Choose one of the following options:
 - **Charge only:** Charge your phone via USB.
 - **USB mass storage:** Transfer files between your PC and the microSDHC card on your phone.
 - **Install driver:** Select this option when features (Connect to PC software, Media device) are enabled for the first time, or when they're unavailable.

NOTE: You can also install the driver on the PC by running the executable file in the CD-ROM drive.

- **Media device (MTP):** Transfer media files on Windows®, or using Android File Transfer on Mac®.

NOTE: For Windows XP, please install the drivers and Media Player 11 (or later version) when you use Media device (MTP) for the first time.

- **Camera (PTP):** Transfer photos using camera software.

NOTE: To make your phone connect to the computer automatically using the selected connection type, check **Don't ask me again**.

Connecting with Windows Media® Player

You can sync music with your phone and your computer installed with Windows Media Player.

1. Connect the phone with your computer via USB and choose **Media device (MTP)**.
2. Open Windows Media Player and synchronize music files.

Disconnecting Your Phone From the Computer

To disconnect the phone from the computer, simply unplug the USB cable when you're finished.

Removing the microSDHC Card From Your Phone

If you need to remove the microSDHC card while the phone is on, you should unmount it first.

1. Press the **Home Key > Apps icon > Settings > Storage**.
2. Scroll down and tap **Unmount SD card > OK**.
3. The  icon appears in the Status Bar and you can now safely remove the microSDHC card from the phone.

NOTE: If you unmount the microSDHC card, some apps that you are using will stop and may be unavailable until you remount the microSDHC card.

Erasing the microSDHC Card

1. Press the **Home Key > Apps icon > Settings > Storage**.
2. Scroll down the screen and tap **Erase external SD card > Erase SD card > Erase everything**.

CAUTION! The formatting procedure erases all the data on the microSDHC card, after which the files CANNOT be retrieved.

Connecting to Virtual Private Networks

Virtual private networks (VPNs) allow you to connect to the resources inside a secured local network. VPNs are commonly deployed by corporations, schools, and other institutions to let people access local network resources when not on campus, or when connected to a wireless network.

Depending on the type of VPN you are using, you may be required to enter your login credentials or install security certificates before you can connect to your

Connecting to Networks and Devices

VPN. You can get this information from your network administrator.

NOTE: You need to set a lock screen pattern, PIN, or password before you using credential storage.

Adding a VPN

1. Press the **Home Key > Apps icon > Settings > More... > VPN**.
2. Tap **ADD VPN PROFILE** and fill in the information provided by your network administrator.
3. Tap **Save**.

The VPN is added to the list on the VPN screen.

Connecting to a VPN

1. Press the **Home Key > Apps icon > Settings > More... > VPN**.
2. Tap the VPN that you want to connect to.

NOTE: You need to set a lock screen PIN or password before you can use credential storage.

3. When prompted, enter any requested credentials and then tap **Connect**.

When you are connected, the VPN connected icon appears in the Status Bar.

Modifying a VPN

1. Press the **Home Key > Apps icon > Settings > More... > VPN**.
2. Tap and hold the VPN that you want to modify.
3. Tap **Edit profile** and edit the VPN settings.
4. Tap **Save**.

You can place calls from the Phone app, the People app, or other apps or widgets that display contact information. Wherever you see a phone number, you can usually tap it to dial.

Placing and Ending Calls

Placing a Call by Dialing

1. Press the **Home Key** >  > .
2. Enter the phone number or the contact name with the dialpad. The phone will display matching information from your contact list. Tap  to delete incorrect digits.
3. Tap the matching contact to call the contact or tap  to call the number.

NOTES:

- You can also tap the search box at the top of the Phone app screen and enter the phone number or contact name you want to call. Tap the matching contact or tap  to place the call.
- To redial the last call you made, just press the **Home Key** >  >  >  and tap  again.

Ending a Call

During a call, tap  **End** on the screen.

Answering or Rejecting Calls

When you receive a phone call, the Incoming Call screen opens, displaying the Caller ID or the information about the caller that you've entered in People. You can answer or reject the call, or reject it with a text message.

Answering a Call

When you receive a phone call, slide  down to answer the call.

NOTE: To silence the ringer before answering the call, press the **Volume Up/Down Key**.

Rejecting a Call

When you receive a phone call, slide  up to reject the call.

You can also slide  up to reject the call and send a preset text message to the caller.

NOTE: To edit the text response from within the Phone app, tap  > **Settings** > **Quick responses**.

Working With the Call Log

The Call Log is a list of all the calls you've placed, received, or missed. It provides a convenient way to redial a number, return a call, or add a number to your Contacts.

To open the call log, press the **Home Key** >  > .

Placing a Call from the Call Log

1. Open the Call Log.
2. Tap a number for more information about the call, or tap  beside it to call back.

Adding a Call Log Number as a Contact

1. Open the Call Log.
2. Tap a number to view more call information.
3. Tap .
4. To add the number to an existing contact, tap a contact in the list. To add a new contact, tap **CREATE NEW CONTACT**.

Taking Other Actions on a Call Log Entry

1. Open the Call Log.
2. Tap a number to view more call information. While viewing the call details, you can:
 - Tap the number to call it.
 - Tap  > **Edit number before call** to edit the number in the dialer before calling it.
 - Tap  to send a message.
 - If the number belongs to a contact you already have, tap  to view contact details.
 - Tap  > **Remove from call log** to delete the call log.

Calling Your Contacts

1. Press the **Home Key** >  and then tap the **All Contacts** tab .
2. Swipe the screen up or down to view all your contacts with phone numbers.
3. Tap a contact name to call that contact.

Checking Voicemail

If you have set the phone to divert certain calls to voicemail, callers can leave voicemail messages when they cannot reach you. Here's how to check the messages they left.

1. Press the **Home Key** >  > .
2. Tap and hold the **1 Key** in the dialer. If prompted, enter your voicemail password.
3. Follow the voice prompts to listen to and manage your voicemail messages.

NOTE: To set your voicemail service, tap  > **Settings** > **Voicemail** in the dialer and tap the voicemail settings you want to change. For detailed information, please contact your service provider.

Using Options During a Call

During a call, you will see a number of on-screen options. Tap an option to select it.

- Tap  to view all call options.
- Tap  to switch to the keypad when you need to enter a code (for example, the PIN for your voicemail or bank account) during the call.
- Tap  to mute or unmute the microphone.
- Tap  to turn the speaker on or off.
- Tap  to make another call separately from the first call, which is put on hold.
- Tap  to go to your messaging inbox.
- Tap  to go to contacts.

- Tap to merge the separate calls into a single conference call.
 - Tap to put the caller you are speaking to on hold, and switch to the other call that has been put on hold.
 - Tap End to end the current call.
- WARNING!** Because of higher volume levels, do not place the phone near your ear during speakerphone use.

Managing Multi-party Calls

When the call waiting and three-way call features are available, you can switch between two calls or set up a conference call.

NOTE: The call waiting and three-way call features need network support and may result in additional charges. Please contact your service provider for more information.

Switching Between Current Calls

When you’re on a call, your phone screen informs you that another call is coming in and displays the caller ID.

To respond to an incoming call while you’re on a call:

Tap to answer the call. This puts the first caller on hold and answers the second call. Or tap to reject the second call.

NOTE: Tap to reject the second call and select a preset text message or edit one to send to the caller.

To switch between two calls:

Tap .

Setting Up a Conference Call

With this feature, you can talk to two people at the same time.

1. On the dialer screen, enter a number and tap .
2. Once you have established the connection, tap and dial the second number. This puts the first caller on hold and dials the second number.
3. When you’re connected to the second party, tap .

If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all callers are disconnected.

To end the conference call, tap End.

Adjusting Your Call Settings

Press the **Home Key > Apps icon > Settings > Call settings** to configure the call options.

Phone ringtone	Select the default ringtone for incoming calls.	
Vibrate pattern	Select the vibration pattern for incoming calls.	
Vibrate when ringing	Check this option to enable vibration when the phone is ringing.	
Voicemail	Service	Select voicemail service provider.
	Setup	Edit the voicemail number.
	Sound	Set the notification sound for new voicemails.
	Vibrate	Set the condition for vibration.
Dial pad touch tones	Check this option to enable the phone dial pad sound.	
Quick responses	Edit the text message that you can send to the caller while rejecting his/her call.	
TTY mode	Your phone is a TTY compatible device. A TTY device can allow people who have hearing or speech disabilities to communicate by telephone. Simply connect the TTY device to the phone’s headset jack. Select a TTY mode for your phone to work with a TTY device, or turn TTY off.	

Hearing aids	Check this option to turn on hearing aid compatibility.	
DTMF tones	Set the length of dual-tone multi-frequency (DTMF) signal tones.	
Speed dial	Set speed dialing keys.	
Call ended operation tips	Check to use the tips.	
Auto answer	Set to answer incoming calls automatically. You can also set auto answer details, like Call duration and Auto answer conditions.	
Call forwarding	Forward your incoming calls to a different number. And choose when to forward: Always forward, Forward when busy, Forward when unanswered, or Cancel All Forward.	
Additional settings	Voice privacy	Check to enable enhanced privacy mode.
	Plus code dialing setting	Set plus code dialing number.
Accounts	Set up Internet calling accounts.	
Use Internet calling	Set your Internet calling preference: For all calls when data network is available, Only for Internet calls, or Ask for each call.	

You can add contacts on your phone and synchronize them with the contacts in your Google account or other accounts that support contact syncing.

To see your contacts, press the **Home Key** > . From there, you can tap the tabs to quickly switch to your contact groups  or favorite contacts .

Checking Contact Details

- 1. Press the **Home Key** > .
- 2. Scroll through the list to view all your contacts.
- 3. Tap a contact to view its details.

NOTE: If you have a lot of contacts stored, you'll see a slider on the right side of the screen. To go directly to a letter, tap and hold the slider and drag it to a letter.

Adding a New Contact

- 1. Press the **Home Key** > .
- 2. Tap  to add a new contact.
NOTE: If you have not added any contacts, tap **Create a new contact**.
- 3. Tap the account field to choose where to save the contact. If a sync account is selected, the contacts will be synced automatically with your account online.
- 4. Enter the contact name, phone numbers, email addresses, and other information.
- 5. Tap **DONE** to save the contact.

Setting Up Your Own Profile

You can create your own name card in your phone.

- 1. Press the **Home Key** >  > .
- 2. Tap **Set up my profile** or your name, whichever is at the top of the contact list.
- 3. Tap **Edit**.
- 4. Edit your profile information and tap **DONE**.

Importing, Exporting, and Sharing Contacts

You can import/export contacts to/from your phone storage or microSDHC card. This is especially useful when you need to transfer contacts between different devices. You can also quickly share your contacts using *Bluetooth*, Email, Messages, etc.

Importing Contacts From the micro-UIM Card

- 1. Press the **Home Key** > .
- 2. Tap  > **Import/Export** > **Manage SIM card contacts**.
- 3. If you have added contact accounts other than the phone, select an account in which to save the contacts.
- 4. Tap a contact to import it, or tap  > **Import all** to import all contacts in the micro-UIM card.

Importing Contacts From the microSDHC Card or Phone Storage

- 1. Press the **Home Key** > .
- 2. Tap  > **Import/Export** > **Import from storage**.
- 3. If you have added contact accounts other than the phone, select an account in which to save the contacts.
- 4. Select the vCard file(s) in the microSDHC card or the phone storage and tap **OK**.

NOTE: If the microSDHC card is not installed in the phone, you can import vCard file(s) from the phone storage.

Exporting Contacts to the micro-UIM Card

- 1. Press the **Home Key** > .
- 2. Tap  > **Import/Export** > **Export to SIM card** > **OK**.

NOTE: If the micro-UIM card is full, you cannot export contacts to the card.

Exporting Contacts to the microSDHC Card or Phone Storage

- 1. Press the **Home Key** > .
- 2. Tap  > **Import/Export** > **Export to storage**.
- 3. The phone will prompt you with the name of the vCard file. Tap **OK** to create the file.

NOTE: If the microSDHC card is not installed in the phone, you can export vCard file(s) into the phone storage.

Sharing Contacts

- 1. Press the **Home Key** > .
- 2. Tap  > **Multi-Select**.
- 3. Tap the contacts you want to share to select them and then tap .
- 4. Choose to share the contacts via **Bluetooth**, **Drive**, **Email**, **Gmail**, or **Messaging**.

Working With Favorite Contacts

In the Favorite contacts tab, you can find your favorite contacts and frequently used contacts.

Adding a Contact to Favorites

You can add the contacts used frequently to Favorites so you can find them quickly.

- 1. Press the **Home Key** >  > .
- 2. Tap a contact and then tap  next to the contact name.

Removing a Contact from Favorites

- 1. Press the **Home Key** >  > .
- 2. Tap a favorite contact and then tap  next to the contact name.

Working With Groups

Viewing Your Contact Groups

1. Press the **Home Key** >  > .
2. Scroll through the list to view the preset groups and any groups you have created.
3. Tap a group to view its members.

Setting Up a New Group

1. Press the **Home Key** >  > .
2. Tap  to create a new group.
3. If you have added contact accounts other than the phone, tap to choose an account for the new group.
4. Enter a group name.
5. Tap **Add member** and select the contacts you wish to be the group members.
6. Tap .
7. If necessary, tap **Default** below RINGTONE to set a special ringtone for incoming calls from the group members.
8. Tap **DONE**.

Deleting a Group

1. Press the **Home Key** >  > .
2. Tap a group and then tap  > **Delete**.
3. Tap **OK** to delete the group. The contacts in the group will not be deleted.

Editing a Group

1. Press the **Home Key** >  > .
2. Tap a group.
3. Tap  > **Rename group** to edit the group name.
Or tap  > **Multi-Select** to select the members you don't need and remove them.

Searching for a Contact

1. Press the **Home Key** >  > , and then tap  to search.
2. Input the contact name you want to search for. The contacts matched will be listed.

Editing Contacts

Editing Contact Details

1. Press the **Home Key** > .
2. Tap a contact and then tap .
3. Edit the contact and tap **DONE**.

Setting a Ringtone for a Contact

Assign a special ringtone to a contact, so you know who is calling when you hear the ringtone.

1. Press the **Home Key** > .
2. Tap a contact and then tap  > **Set ringtone**.
3. Select a ringtone you like and tap **OK**.

Deleting a Contact

1. Press the **Home Key** > .
2. Tap a contact you want to delete and then tap  > **Delete**.
3. Tap **OK** to confirm.

Deleting Several Contacts

1. Press the **Home Key** > .
2. Tap  > **Multi-Select**.
3. Tap to select the contacts you want to remove and then tap .
4. Tap **OK** to confirm.

Joining Contacts

As your phone synchronizes with multiple online accounts, you may see duplicate entries for the same contact. You can merge all the separate information of a contact into one entry in the contacts list.

1. Press the **Home Key** > .
2. Tap a contact to display the contact's details.
3. Tap **Edit** >  > **Join**.
4. Tap the contact whose information you want to join with the first entry.
5. Tap **DONE**.

The information from the second contact is added to the first contact, and the second contact is no longer displayed in the contacts list.

You can repeat these steps to join another contact to the main contact.

Separating Contact Information

If contact information from different sources was joined in error, you can separate the information back into individual contacts on your phone.

1. Press the **Home Key** > .
2. Tap a contact you want to separate.
3. Tap **Edit** >  > **Separate**.
4. Tap **OK** to confirm.

Accounts

Adding or Removing Accounts

You can add multiple Google accounts and Microsoft Exchange ActiveSync® accounts. You may also add other kinds of accounts, depending on the apps installed on your phone.

Adding an Account

1. Press the **Home Key > Apps icon > Settings > Add account**.
2. Tap the type of account you want to add.
3. Follow the on-screen steps to enter the information about the account. Most accounts require a username and password, but the details may vary. You may also need to obtain some information from IT support or your system administrator.

When the account is successfully added, it is displayed in the **ACCOUNTS** list.

Removing an Account

Removing an account will delete it and all information associated with it from your phone, such as emails and contacts.

1. Press the **Home Key > Apps icon > Settings**. In the **ACCOUNTS** section, tap the account type.
2. If you have more than one account of that type, tap the account you'd like to remove.
3. Tap  > **Remove account > Remove account**.

Configuring Account Sync

Configuring Auto Sync Setting

1. Press the **Home Key > Apps icon > Settings > Data Usage**.
2. Tap  and check or uncheck **Auto-sync data**.

When automatic sync is turned on, changes you make to information on your phone or on the web are automatically synced with each other.

When auto sync is turned off, you need to sync manually to collect emails, updates, or other recent information.

Syncing Manually

1. Press the **Home Key > Apps icon > Settings**.
2. In the **ACCOUNTS** section, tap the account category and then the account you want to sync.
3. Tap  > **Sync now**.

Changing an Account's Sync Settings

1. Press the **Home Key > Apps icon > Settings**.
2. In the **ACCOUNTS** section, tap the account category and then the account. The Sync settings screen appears, showing a list of information the account can sync.
3. Check or uncheck items as you need. Checked types of information on the phone and the web will be kept in sync when auto-sync is turned on.

Email

Press the **Home Key > Apps icon > Email**. Use it to read and send emails from services other than Gmail.

Setting Up the First Email Account

1. When you open **Email** for the first time, enter your email address and password.
2. Tap **Next** to let the phone retrieve the network parameters automatically.
NOTE: You can also enter these details manually by tapping **Manual setup** or if automatic setup fails.
3. Follow the on-screen instructions to finish setup.

Your phone will show the inbox of the email account and start to download email messages.

Checking Your Emails

Your phone can automatically check for new emails at the interval you set when setting up the account.

You can also check new emails manually by tapping  in any of the email account's boxes. Tap **Load more messages** at the bottom of the email list to download earlier messages.

Responding to an Email

You can reply to or forward a message that you receive. You can also delete messages and manage them in other ways.

Replying to or Forwarding an Email

1. Open the email you want to reply to or forward from the Inbox.
2. Choose one of the following:
 - To reply to the sender, tap  at the bottom of the screen.
 - To reply to the sender and all recipients of the original message, tap  at the bottom of the screen.
 - To forward the message, tap  at the bottom of the screen.
3. Edit your message and tap .

Marking an Email as Unread

You can return a read email to the unread state—for example, to remind yourself to read it again later. You can also mark a batch of emails as unread.

- While reading a message, tap  > **Mark as unread**.
- While in a message list (for instance, the inbox), tap the checkboxes before the messages and then tap .

Deleting an Email

You can delete an email from its folder. You can also delete a batch of emails.

- While reading a message, tap  > **OK**.
- While in a message list (for instance, the inbox), tap the checkboxes in front of the messages and then tap  > **OK**.

Writing and Sending an Email

1. Open the Email app and tap .
NOTE: If you have more than one email account added on the phone, tap the sender line to select the account you want to use for sending the message.
2. Enter a contact name or email address in the **To** field. Separate each recipient with a comma. You can also tap  to select recipients from your contacts.
NOTE: Tap  > **Add Cc/Bcc** to send a carbon copy or blind carbon copy to other recipients.
3. Enter the email subject and compose the email text.
4. Tap  > **Attach file** to add audio files, images, videos, and other types of files as attachments.
5. Tap  at the top of the screen to send the message.

Adding a Signature to Your Emails

You can set a few lines of plain text as a signature for every outgoing email message from an account, such as your name and contact information.

1. Open the Email app.
2. Tap  > **Settings** and select the account you want to add a signature to.
3. Tap **Signature** and enter the text.
4. Tap **OK**.

Adding and Editing Email Accounts

Adding an Email Account

After setting up your first email account (see *Email – Setting Up the First Email Account*), you can add more email accounts and manage them separately.

1. Open the Email app.
2. Tap  > **Settings** and tap **ADD ACCOUNT** at the top right of the screen.
3. Set up the account as you did with the first one.

Editing an Email Account

You can change a number of settings for an account, including how often you check for email, how you're notified of new emails, and details about the servers the account uses to send and receive emails.

1. Open the Email app.
2. Tap  > **Settings** and tap the account whose settings you want to change.
3. Make the changes you want and press the **Back Key** when you're finished.

Removing an Email Account

1. Open the Email app.
2. Tap  > **Settings** and tap the account you want to remove.
3. Tap **Remove account** > **OK**.

Changing General Email Settings

General settings apply to all email accounts you add.

1. Open the Email app.
2. Tap  > **Settings** > **General**.
3. Make the changes you want and press the **Back Key** when you're finished.

After you sign in to your Google account on the phone, you can send and retrieve Gmail messages with the Gmail app.

NOTE: This feature may not be available in certain regions or with certain service providers.

Opening Your Gmail Inbox

Press the **Home Key > Google > Gmail**. The Inbox screen appears.

If you haven't signed in, you will be prompted to do so or create a new account.

Swipe down on the screen to refresh your inbox and download new messages.

Switching Accounts

Gmail displays conversations, messages, and settings from one Google account at a time. If you have signed in to more than one Google account on your phone, you can switch accounts and view information in each account.

- 1. From your Inbox, tap .
- 2. Tap your account name.
- 3. Tap the account you want to see. The account's Inbox will open.

Writing and Sending a Message

- 1. Open your Gmail Inbox and switch to the account you want to use for sending the message.

- 2. Tap  at the bottom of the screen.
- 3. Enter a contact name or email address in the **To** field. Separate each recipient with a comma.
- 4. Enter the email subject and compose the email text.
- 5. To attach an image, tap .
- 6. Tap  at the top of the screen to send the message.

Adding a Signature to Your Gmail Messages

You can set a few lines of plain text as a signature for every outgoing Gmail message. The signature you set on the phone is independent of the signature you use for Gmail on the web.

- 1. Open the Gmail app.
- 2. Tap  > **Settings** and select the account you want to add a signature to.
- 3. Tap **Signature** and enter the text.
- 4. Tap **OK**.

Replying to or Forwarding a Message

- 1. Open the Gmail message you want to reply to or forward to another person.
- 2. Choose one of the following:
 - To reply to the sender, tap  in the message header.
 - To reply to the sender and all recipients of the original message, tap .

- To forward the message, tap .
 - Tap  > **Print** to print the message.
- 3. Edit your message and tap .

Working With Received Attachments


When a message has an attachment, Gmail displays information about it in the ATTACHMENTS section of the email.

Working With Labels

Message labels include both labels you create and default labels such as **Sent**, **Starred**, and **Outbox**. You can organize your emails by labeling them or adding stars to them. Labels also help you sort your messages, just like folders.

Adding or Changing a Label

- 1. Open the Gmail app and tap the sender images next to the messages you want to label.

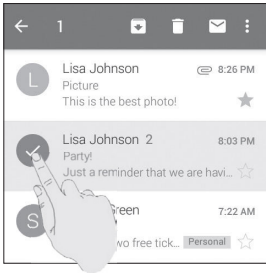

- 2. Tap  > **Change labels**.
- 3. Check or uncheck labels in the new screen and tap **OK**.

Adding Stars to Messages

- 1. Open the Gmail app and tap the sender images next to the messages you want to star.
- 2. Tap  > **Add star**.
- 3. To add a star to just one message, tap  beside the message.

Viewing Messages by Label

- 1. Open the Gmail app and tap  at the top of the screen.
- 2. Tap a label below **All labels** to view messages with that label.

Changing Gmail Settings

Open the Gmail app and tap  > **Settings** to change **General settings**, which apply to all Gmail accounts, or other settings that only apply to specific accounts.

Messaging

You can use Messaging to exchange text messages (SMS) and multimedia messages (MMS).

Opening the Messaging Screen

Press the **Home Key** > .

The Messaging screen opens where you can create a new message, search for messages, or open an ongoing message thread.

- Tap  to write a new text or multimedia message.
- Tap  to search for a message using keywords.
- Tap an existing message thread to open the conversation.

Sending a Text Message

1. On the Messaging screen, tap .
2. Add recipients in one of the following ways:
 - Tap the **To** field and manually enter the recipient's number or the contact name. If the phone presents a few suggestions, tap the one you want to add.
 - Select recipients from your contacts by tapping .
3. Tap the **Type message** field and enter the content of your text message.
4. If you want to send a multimedia message, tap  to attach a file or a slideshow to the message.
5. Tap .

42

NOTES:

- You can also include email addresses as recipients for multimedia messages.
- Do not add any attachment if you want to send a text message. Otherwise you may be charged for a multimedia message.

Replying to a Message

Messages you receive are appended to existing threads of the same number. If the new message comes from a new number, a new thread is created.

1. On the Messaging screen, tap the thread that has the message you want to reply to.
2. Type your reply in the text box at the bottom. You can tap  if you want to reply with an MMS.
3. Tap .

Forwarding a Message

1. On the Messaging screen, tap the thread that has the message you want to forward.
2. Tap the message.
3. Tap **Forward** in the menu that opens.
4. Enter a recipient for the message and edit the content if needed.
5. Tap .

Messaging

Copying a Message

You can copy text messages in the phone storage to the micro-UIM card, or vice versa.

Copying a Text Message from the Phone to the micro-UIM Card

1. On the Messaging screen, tap the thread that has the message you want to copy.
2. Tap the message and then tap **Copy to SIM card**.

Copying a Text Message from the micro-UIM Card to the Phone

1. On the Messaging screen, tap  > **Settings** > **Manage SIM card messages**.
2. Tap and hold a message and then tap **Copy to phone memory**.

Deleting Messages or Threads

Deleting Messages in a Thread

1. On the Messaging screen, tap a thread.
2. Tap  > **Select item(s)**.
3. Tap the messages you want to delete.
4. Tap  > **OK**.

Deleting Message Threads

1. On the **Messaging** screen, tap and hold one thread you want to delete.
2. If there are more threads you want to delete, tap them one by one.
3. Tap  > **OK**.

Changing Message Settings

Tap  > **Settings** in the Messaging screen to change Message settings.

43

Calendar on the phone works with the web-based Google Calendar™ service for creating and managing events, meetings, and appointments. It also works with the Microsoft Exchange ActiveSync calendar once you sign into your Exchange account on the phone.

To open Calendar, press the **Home Key** > **Apps icon** > **Calendar**.

Viewing Your Calendars and Events

Selecting Visible Calendars

- 1. Open the Calendar app.
- 2. Tap  > **Calendars to display**.
- 3. In the new screen, tap to check the calendars you want to see or uncheck the calendars you'd like to hide.

Events from hidden calendars are not shown in the Calendar app.

Changing Calendar Views

You can view your calendars in different forms. The app offers four views: **Month**, **Week**, **Day**, or **Agenda** shown at the bottom.

You can also change to Day view from Month view by tapping any day in the grid.



- In Month view, swipe vertically to see earlier months and later months.
- In Week or Day view, swipe horizontally to see earlier weeks/days and later weeks/days.
- When you are viewing earlier or later days, weeks, or months, tap  at the top to quickly switch to today.

Viewing Event Details

In Agenda, Day, or Week view, tap an event to view its details.

In Month view, tap a day to switch to Day view. Then tap an event to view its details.

Creating an Event

- 1. In any Calendar view, tap  to open an event details screen for a new event.

You can also tap a spot in Day or Week view twice to add an event to that time spot.
- 2. Add details about the event.

Enter a name, location, time span, and other additional details about the event.

NOTE: If you have more than one calendar, you can choose the calendar to which to add the event by tapping the current calendar above the **Event name** box.
- 3. Tap **DONE**.

Editing or Deleting an Event

- 1. Find the event you want to edit or delete.
- 2. Open its details screen (see *Viewing Your Calendars and Events – Viewing Event Details*).
- 3. Choose one of the following options:
 - To edit the event, tap . Tap **DONE** to save your changes.
 - To delete the event, tap  > **OK**.

Changing Calendar Settings

To change Calendar settings, open a Calendar view (Day, Week, Month, or Agenda) and then tap  > **Settings**.

Google+

Google+ is a social networking service offered by Google. The Google+ application on your phone enables you to manage your data, chat with online contacts, organize them in different circles, and share your selected information.

Press the **Home Key** > **Google** > **Google+**. The first time you open the Google+ app, select the photo and video backup and contact sync options.

NOTE: For a detailed guide for Google+, open Google+ and tap  > **Help** to view the online instructions.

Getting Started With Google+

Open the Google+ app and tap **Home** near the top of the screen to use the following features:

- **Home:** Add a suggested person, or see posts people have shared with you, a circle you are in, or everyone.
- **Circles:** Find people to add to your Google+ circles, create new circles, or view and organize people into circles based on your relationships. You can also follow content posted by people you find interesting.
- **Find communities:** Search and join all kinds of online communities, where people gather for the sharing and discussion of a common topic.
- **Photos:** View photos you uploaded, photos of you, photos from your posts, and more.

- **Locations:** See your friends' locations on the map and configure your location sharing settings.
- **Events:** Manage your social calendar. You can add events, invite people, and then share photos in real time from the event.

Changing Google+ Settings

To change Google+ settings, open Google+ and tap  > **Settings**.

Signing out of Google+

If you are already signed in to the app, you can sign out by following these steps.

Press the **Home Key** > **Google** > **Google+**.

2. Tap  > **Settings** and then tap your account.
3. Tap **Sign out**.

Browser

Use Browser to view web pages and search for information.

Opening the Browser

Press the **Home Key** > . The last web page you were viewing is displayed. If you have not used Browser recently, your home page opens.

Browser also opens when you tap a web link—for example, in an email or a text message.

Opening a Web Page or Searching the Web

1. Open the Browser app.
2. Tap the address box at the top of the web page. If the address box isn't visible, swipe down a little to show it.
3. Enter the address (URL) of a web page. Or, enter terms you want to search for. You can also tap  to search by voice.
4. Tap a URL or search suggestion or tap **Go** on the keyboard to open the web page or search results.

NOTES:

- Tap  at the bottom of the screen if you want to stop opening the page.
- Tap  at the bottom of the screen if you want to open a new page.

Setting the Home Page

Your home page opens when you open a new browser tab, when you start Browser after restarting your phone, or after not using the app for a while.

1. Open the page you want to set as your home page.
2. Tap  > **Settings** > **General** > **Set homepage**.
3. Tap **Current page** or one of the following options:
 - **Blank page:** Open browser tab without opening a web page by default. This can make new Browser tabs open more quickly.
 - **Default page:** Set the factory default URL as the homepage.
 - **Most visited sites:** Every new browser tab displays a list of your frequently visited sites for you to choose from.
 - **Other:** Type a URL as the homepage.

Getting Information About the Current Page

Tap  > **Page info**.

Working With an Opened Page

While viewing most web pages, you can do the following operations:

- **Scroll:** Swipe the screen in any direction.
- **Zoom out:** Tap the screen or pinch two fingers together.

- **Zoom in:** Tap the screen or spread two fingers apart.
- **Go back:** Tap  to return to the page you've viewed previously in the same window.
- **Go forward:** Tap .
- **Refresh the page:** Tap  beside the address bar.
- **Find text on the page:** Tap  > **Find on page** and type the terms you want to search for.
- **Send the page URL to friends:** Tap  > **Share page** and select how you want to send the URL.
- **Follow a link:** Tap a link on the web page to open it.
- **Save the page for offline reading:** Tap  > **Save for offline reading**. You can tap  > **Bookmarks** > **SAVED PAGES** to read them. To go back to a live webpage, tap  > **Go live**.

NOTE: Besides links, Browser also recognizes some phone numbers, addresses, and similar information for you to act on. Try tapping them and see what happens.

Using Multiple Browser Tabs

You can open several web pages at the same time (one page in each tab) and switch between them freely.

Opening a New Browser Tab

1. Tap  at the bottom of the screen. The number in the icon indicates the number of currently active browser windows.
2. Tap . A new browser window opens and the homepage is loaded.

Switching Between Tabs

1. Tap  at the bottom of the screen.
2. Swipe vertically to scroll through the list of opened tabs.
3. Tap the thumbnail of the tab you want to open.

NOTE: Swipe a thumbnail horizontally or tap its **X** to close the tab.

Using Incognito Tabs for Privacy Browsing

Pages you view in incognito tabs won't appear in your browsing history or search history. No trace will be left on your phone once you close the tab.

1. Tap  at the bottom of the screen.
2. Tap  > **New incognito tab**.

Downloading Files

Tap and hold an image or a link to a file or to another webpage. In the menu that opens, tap **Save image** or **Save link**.

The downloaded files are saved to your phone or the memory card. You can view or open them in the Downloads app (**Home Key** > **Apps icon** > **Downloads**).

Using Bookmarks

Save web URLs as bookmarks to open them easily in the future.

To open a bookmark, tap  > **Bookmarks** in a browser tab and then tap the bookmark.

Bookmarking a Web Page

1. Open the web page.
2. Tap  > **Save to bookmarks**.
3. Edit the bookmark label and address if necessary, or choose a different account. Tap the name beside **Add to** to change the place where the bookmark will be stored.
4. Tap **OK**.

Editing a Bookmark

1. Tap  > **Bookmarks**.
2. Tap and hold the bookmark.
3. Tap **Edit bookmark**.
4. Edit the label, address, account, or location of the bookmark in the dialog that opens.
5. Tap **OK**.

NOTE: Preinstalled bookmarks may not be edited.

Deleting a Bookmark

1. Tap  > **Bookmarks**.
2. Tap and hold the bookmark.
3. Tap **Delete bookmark**.
4. Tap **OK**.

NOTE: Preinstalled bookmarks may not be deleted.

Viewing Your Browsing History

1. Open the Browser app and tap  > **Bookmarks**.
2. Tap the **HISTORY** tab.
3. Tap a time span to view the web pages you browsed during that time. You can tap an item to reopen the web page.

Changing Browser Settings

You can configure a number of Browser settings to customize the way you browse the web, including several that you can use to control your privacy.

To open the Browser settings screen, tap  > **Settings**.

Activating Location Services

To use Google Maps, and to find your location on Google Maps, you must have location services turned on on your phone.

1. Press the **Home Key > Apps icon > Settings > Location**.
2. Slide the **Location** switch to the **ON**  position to turn on location access.
3. When location access is enabled, tap **Mode** to select location modes you want to use.
 - **High accuracy:** Get accurate location using both GPS and Wi-Fi as well as mobile networks.
 - **Battery saving:** Use only Wi-Fi and mobile networks to get your approximate location. This will drain less power from your battery than using GPS.
 - **Device only:** Use GPS to pinpoint your location.
 - **Accelerated location:** Slide the switch to turn on/off the Qualcomm® IZat™ hardware accelerated location feature.

Getting Your Location

1. Press the **Home Key > Google > Maps**.

The map centers on a blue dot and arrow that indicate your location and the direction the phone is facing.

Searching for a Location

1. Press the **Home Key > Google > Maps**.
2. Tap the **Search** field.
NOTE: You can also tap  beside the search box to use voice search.
3. Enter the place you're looking for in the search box at the top. You can enter an address, a city, or a type of business or establishment, for example, "museums in Shanghai." As you enter information, suggestions from your previous searches and from popular searches appear in a list below the search box. You can tap a suggestion to search for it.
4. Tap the search icon on the keyboard. Red points indicating search results appear on the map.
5. Tap a red point to open a card at the bottom of the screen that contains summary information about the location. Slide the card up to find more information about the location as well as options for getting directions and more.

Getting Directions to Your Destination

Maps can provide directions for travel by foot, public transportation, or car.

1. Press the **Home Key > Google > Maps**.
2. Tap .

3. Select the mode of transportation and then enter a start and end point. If your location is found, it will appear in the start point field by default. As suggested routes appear, tap one to see it on the map. Slide the bottom card up to see the route directions in a list.

NOTE: Tap  to use Google Maps Navigation (beta) and get turn-by-turn voice directions.

Searching for Local Places

Google Maps helps you find all kinds of businesses and establishments around you. You can rate these places and get recommendations.

1. Press the **Home Key > Google > Maps**.
2. Navigate the map view to the area you'd like to explore and tap .
3. Swipe left or right under each category to view more options.
4. Tap a location for more information.

You can also slide up the bottom card to find out more information, such as the street address, website, and street view, or to call that place, save it to your Google account, or share it with others.

NOTE: This feature is not available for all areas.

Google Now and Search

You can search for information on the web or on your phone using Google Search, get information when you need with Google Now without searching, or perform certain tasks by speaking.

Enabling Google Now

Google Now gets you just the right information at just the right time. It tells you today's weather before you start your day, how much traffic to expect before you leave for work, and more. You can turn Google Now on or off from within the Google app.

1. Press and hold the **Home Key**.
The first time you open the Google app, you'll see a brief explanation of how Google Now works. Tap **NEXT > YES, I'M IN.**

Searching With Text

1. Tap the Google Search box at the top of the home screen to search.
2. Enter the terms you want to search for and tap , or tap a search suggestion.

Searching by Speaking

1. Tap  to the right of the search box, or tap the search box and then say "OK Google".
2. Speak the terms you want to search for. When you're finished speaking, your speech is analyzed and the search is initiated.

If Google Search didn't quite understand what you said, you are prompted to repeat your search terms. Tap  or say "OK Google" and repeat your search.

Changing Search and Voice Search Settings

Open the Google app and tap  > **Settings** to set Google Now, notifications, voice and phone search options, and to change privacy settings for your account.

To set Voice Search settings, press the **Home Key** > **Apps icon** > **Settings** > **Language & input** > **Voice Search**.

Camera

You can take photos and record videos. Photos and videos are stored to the phone's memory card or to the phone's internal storage. You can copy them to your computer or access them in the Gallery app.

Capturing a Photo

1. Press the **Home Key** > .
2. You can either let the camera autofocus on the center of the screen, or tap another area on the screen that you want to focus on.
NOTE: You can pinch or spread on the screen or press the Volume keys to zoom in or zoom out.
3. Tap  to take the photo.

WARNING! Keep a safe distance when using the flash. Do not point the flash towards the eyes of people or animals.



Number	Function
1	Switch between the front and the back cameras.
2	Set a delay from the time the shutter button is tapped to the time the camera takes a picture.

3	Change the flash mode for the rear-facing camera. For the front-facing camera, turn Smile Detection mode on or off.
4	Change the camera settings.
5	View photos and videos you have captured.
6	Switch to Manual camera mode (only available for the rear camera).
7	Capture a photo.
8	Switch to Fun camera mode (only available for the rear camera).
9	Record a video.

Using Manual Camera Mode

You can use the manual camera mode to adjust more camera options for your photo, such as ISO, white balance, exposure, contrast, saturation, sharpness, etc.

1. Press the **Home Key** > .
2. Tap **Manual**.
3. Aim the camera at the subject and you can make the following adjustments.
 - Drag  to any area on the screen that you want to focus on.
 - Drag  to any area on the screen where you want the camera to meter exposure so as to adjust the photo brightness.
 - Tap  to show or hide the grid or the golden spiral.
 - Tap  to enable or disable the gradienter.

- Tap to change white balance scenario or leave it at Auto.
 - Tap to select ISO level or leave it at Auto.
 - Tap to adjust the photo exposure.
4. Tap to take the photo.

Using Fun Camera Mode

1. From the home screen, tap .
2. Tap **Fun**.
3. Tap to select a shot mode as follows:
 - **Special effect:** Chose a camera effect for your shot, such as Fisheye, Sepia, or Mosaic.
 - **Smile:** Takes a photo automatically when the camera detects a smile.
 - **HDR:** Adds more luminosity to your photo.
 - **Interval:** Takes multiple shots at a set interval.
 - **Panorama:** Move your camera horizontally to capture a wide panorama shot.
 - **Multi-exposure:** Layer two images on top of each other with different effects.
4. Follow the on-screen instructions to take photos and add different effects.
5. Tap to take a photo.

Recording a Video

1. Press the **Home Key** > .
2. Aim the camera at the subject. You can tap any area on the screen that you want the camcorder to focus on before and during recording.
NOTE: You can pinch or spread on the screen or press the **Volume Key** to zoom in or zoom out before and during recording.
3. Tap to start and to stop recording. You can also tap to pause and resume recording.
NOTE: While recording is in progress, you can tap to save the frame as a photo.

Customizing Camera and Video Settings

Before taking a photo, you can tap to open the following camera setting options:

CAMERA	Picture size: Set the image size of your photo.
	Full screen: Set the viewfinder screen as full screen or not when the back camera is in use.
	Auto-review: Select whether to review the picture after you shot it. You can also set the review time.
	Shutter tone: Select your preferred shutter tone.
	Geo-tagging: Select whether to store the GPS location in captured photos.
	Storage location: Change the storage location for captured photos.
	Restore defaults: Restore the default camera settings.

VIDEO	Video quality: Set the quality for the video clips.
	Time lapse: Set the time interval between each frame when you shoot time lapse videos.
	Focus lock when recording: Select whether to lock the focus point on the center of the screen during video recording.
	Geo-tagging: Select whether to store the GPS location in captured videos.
	Storage location: Change the storage location for captured videos.
	Restore defaults: Restore the default video settings.

NOTE: Some camera and video options will change in different camera modes.

Opening the Gallery

Press the **Home Key** > **Apps icon** > **Gallery** to view albums of your pictures and videos.

Working With Albums

When you open the Gallery, all pictures and videos on your phone are displayed in a number of albums.

Viewing album contents

Tap an album to view the pictures and videos it contains.

Sharing Albums, Pictures, or Videos

- 1. Tap and hold an item in the Albums view to select an album or after you open an album to select a picture or a video.
- 2. Tap more items that you want to share.
- 3. Tap  at the top of the screen and select how you want to share the items.

Viewing details of an item

- 1. Tap and hold an item until it is selected.
- 2. Tap  > **Details**.

Deleting Albums

- 1. Tap and hold an album until it is selected.
- 2. Tap more albums that you want to delete.
- 3. Tap  > **OK**.

Working With Pictures

Tap a picture in an album to view the picture in full screen. Double-tap the picture, or pinch two fingers together or spread them apart to zoom out or in. Slide left or right to view other pictures in the album.



Number	Function
1	Tap to return to the album, where all its contents are displayed in a grid.
2	Delete the picture.
3	Edit the picture.
4	Set the picture as contact photo or wallpaper.
5	Share the picture.
6	View more options.
7	Browse the album contents in a slideshow.

NOTES:

- You can delete a picture or video by swiping it up or down in the filmstrip view. If you accidentally delete one, tap **UNDO** to retrieve it.
- Not all the options may be available for certain albums or pictures.

Retouching Your Pictures

You can edit any photos you took and some other pictures in Gallery. The changed picture is saved in the same album as the original one, while the original is never affected.

- 1. While viewing a picture in full screen, tap the screen and tap  to open the Photo Editor interface.
- 2. Tap the icons along the bottom of the screen to edit the picture.

	Apply style effects such as bleach, blue crush, instant, and more.
	Crop, straighten, mirror, or rotate the picture.
	Adjust exposure, vignette, shadows, sharpness, and more.
	Apply a frame to the picture.
	Decorate people in the picture with comical moustaches, eye glasses, hats and more.
	Apply a blur effect to the picture.

	Select a color and draw anything on the picture.
	Add some text to the picture and adjust its effect.

- 3. To cancel or accept the changes you've made to the picture, tap  or  at the top of the screen.
- 4. Tap **Save** to save the new picture.

NOTE: Tap **History** in the Photo Editor screen to see the edits you have made and undo or redo them.

Playing Videos

- 1. Tap an album in **Gallery** and then tap the thumbnail of a video.
- 2. Tap  at the center to start playing.
- 3. Tap the video to view the playback controls.

NOTE: In the Video Player, you can tap  to play the video in a small floating window and continue with other tasks on the phone.

Press the **Home Key > Apps icon > Music** to play audio files stored on your phone. Music supports a wide variety of audio formats, so it can play music you purchase from online stores, music you copy from your CD collection, and more.

Copying Music Files to Your Phone

Before using Music, you need to copy audio files from your computer to your phone or memory card.

Copying From a Computer

- 1. Connect your phone and the computer with a USB cable.
- 2. Tap **Media device (MTP)** (if supported on the PC) or **Camera (PTP)** to browse the files on the phone storage and the microSDHC card. (see *Connecting to Networks and Devices – Connecting to Your Computer via USB*).
- 3. Copy the music file from the PC to the phone storage or microSDHC card.

Downloading From the Internet

You can download music files when browsing web pages (see *Browser – Downloading Files*).

Receiving via Bluetooth

You can receive music files from other devices via *Bluetooth* (see *Connecting to Networks and Devices – Connecting to Bluetooth Devices – Receive Data via Bluetooth*).

Viewing Your Music Library

Press the **Home Key > Apps icon > Music** and your music library is displayed. All your audio files are cataloged according to the information stored in the files.

Tap the tabs at the top of the screen to view your music library organized by **Songs, Playlists, Folders, Albums, Artists, or Genres**. You can also tap **RECENTLY PLAYED** or **FAVORITE** to browse songs you recently played or you have added as favorites.

NOTE: If an audio file is being played, its summary information is displayed at the bottom of the screen. Tap  to open the playback screen.

Setting a Song as the Default Ringtone


The song will be used as the ringtone for all incoming calls, except those from contacts you have assigned special ringtones to (see *People – Editing Contacts – Setting a Ringtone for a Contact*).

- 1. Press the **Home Key > Apps icon > Music** to see the music library.
- NOTE:** If you are in the playback screen, tap  to return to the music library.
- 2. Tap  next to a song in any list.
- 3. In the menu that opens, tap **Use as ringtone**.
- 4. Tap **Phone Ringtone** or **Notification Ringtone**.

NOTE: If the song is being played, you can tap  > **Use as ringtone** in the playback screen.

Playing Music

Tap a song in the music library to listen to it. The following playback screen appears:

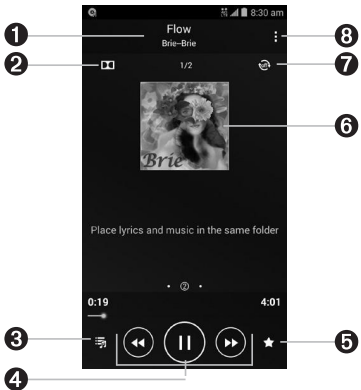

Number	Function
1	Song and artist information.
2	Tap to open the Dolby app.
3	Tap to open the current playlist.
4	Playback control. Skip songs or pause and resume playback. Drag the slider to jump to any part of the song.
5	Tap to add a song to the Favorites playlist.
6	Album artwork.
7	Tap to toggle shuffle and repeat mode: no repeat, repeat the current song, or repeat the current playlist.
8	View more options.

Managing Playlists

Create playlists to organize your music files into sets of songs, so that you can play the songs you like in the order you prefer.

- Tap  > **Add to playlist** next to a song to add it to a playlist or create a new playlist.
- Tap  > **Delete Playlist** next to a playlist to delete the playlist.
- Tap  > **Rename Playlist** next to a playlist to rename the playlist.

The Play Music app  works with Google Music, Google's online music store and streaming service. You can stream via mobile data or Wi-Fi and listen to your favorite songs that you've added to your online Google Music library. You can also play audio files you've copied directly to your phone from a computer.

NOTE: The availability of Google Music is dependent on your region. If it is not available, or you don't have a mobile data or Wi-Fi connection, you can only play music stored on your phone.

Playing Your Music

1. Press the **Home Key** > **Google** > **Play Music**. If you are prompted, select an account to access its online music library.
The app searches your online library and your phone for music and playlists before displaying your recent activity. Tap  > **My Library** to view your library, which is organized by **GENRES**, **ARTISTS**, **ALBUMS**, and **SONGS**. Tap  > **Playlists** to view existing playlists.
2. Tap a song to play it. When the song is playing, tap the summary information at the bottom to display the playback screen.



Number	Function
1	Song and artist information. Tap or drag down to return to the music library.
2	Album artwork.
3	Give the song a thumbs up.
4	Playback control. Skip songs, pause and resume playback, use shuffle or repeat. Drag the progress bar to jump to any part of the song.
5	Give the song a thumbs down.
6	View more options.
7	View the current playlist (queue).

- You can still control the music when you are not in the playback screen.
- In the Play Music app, tap the summary information at the bottom of the screen to restore the playback screen.
 - In other apps, swipe down on the Notification Panel. Tap the song title to restore the playback screen, or just pause/resume playback or skip to the next/previous song.
 - When the screen is locked, the song information and playback controls are displayed on top of the screen. You can pause/resume playback or skip songs.

Managing Playlists

- Create playlists to organize your music files into sets of songs so that you can play the songs you like in the order you prefer. To view all your playlists, tap  > **Playlists**.
- Tap  > **Add to playlist** next to a song or a playlist to add it to a playlist or create a new playlist.
 - Tap  > **Delete** > **OK** next to a playlist to delete the playlist.
 - Tap a playlist to view its content. You can tap  > **Remove from playlist** next to the song you want to remove, or drag  to the left of each song to rearrange its order in the playlist.

Video Player

Use the Video Player to play various kinds of videos.

Opening the Video Library

Press the **Home Key > Apps icon > Video Player** to view your video library.

Playing and Controlling Videos

- Tap a video in the video library to play it. Rotate the phone on its side to watch the video in landscape view.
- Tap the video to show the playback controls. Tap  to play the video in a small floating window and continue with other tasks on the phone.

Managing Video Files

Deleting Videos

1. Tap and hold a video in the video library.
2. To remove more videos, tap them.
3. Tap  at the bottom left of the screen.
4. Tap **OK**.

Sharing Videos

1. Tap and hold a video in the video library.
2. To share more videos, tap them.
3. Tap  at the bottom right of the screen and select how you want to share them.

Renaming a Video

1. Tap  next to the video you want to rename.
2. Tap **Rename**.
3. Type the new video name and tap **OK**.

Viewing Details of a Video

1. Tap  next to a video you want to view the details of.
2. Tap **Details**.

Trimming a Video

1. Tap a video in the video library to start playing it.
2. Tap  > **Trim**.
3. Drag the two tabs on the progress bar to select the portion you want to keep.
If necessary, tap  to preview the selected portion.
4. Tap . The trimmed video is saved as a new video file.

Sound Recorder

Sound Recorder enables you to record voice memos and listen to them whenever you like.

Recording a Voice Memo

1. Press the **Home Key > Apps icon > Sound Recorder**.
2. Tap  to start recording. Tap  > **OK** to cancel recording. Tap  to pause and  to continue recording.
3. Tap  to stop recording. The memo is automatically saved.

If you don't want to save the memo after recording it, tap  > **OK** to delete it.

Playing a Voice Memo

Playing a Memo You Just Recorded

Tap  at the bottom of the screen.

Playing Any Saved Memo

1. Tap  at the top right of the screen to see all recordings.
2. Tap the title of a memo to play it.

NOTE: You can also tap  at the right of the memo to delete, share, rename, tag, trim it, check its file information, or set it as your phone ringtone.

More Apps

Calculator

Press the **Home Key > Apps icon > Calculator**.

NOTES:

- Turn the phone to landscape to view more calculator options.
- Tap **Tip** to access the tip calculator.

Chrome

Use Google Chrome to browse the Internet. Chrome on your phone can sync bookmarks, browsing history, and opened tabs from your Google account.

Press the **Home Key > Google > Chrome** to browse the Internet.

Clock

Set alarms or turn the phone into a bedside clock.

Setting a New Alarm

1. Press the **Home Key > Apps icon > Clock**.
2. Tap a default alarm to configure it, or tap  at the bottom of the screen to create a new alarm.
3. Set up the alarm options, such as time, repeat, alarm sound and label.
4. Tap **Save** to save and exit.

NOTE: To enable or disable existing alarms, tap  or .

Using the Bed Clock

The Bed Clock displays the current time and the next alarm.

1. Press the **Home Key > Apps icon > Clock**.
2. If necessary, tap  > **Preferences** in the Alarm screen to set up the Bed Clock options. Then press the **Back Key** to return to the Alarm screen.
 - **Enable bed clock:** Turn on or off the Bed Clock function.
 - **Bed clock never sleeps:** Keep the Bed Clock screen turned on when charging the phone.
3. Tap  > **Bed clock** to open the Bed Clock screen.

Stopwatch and Countdown

1. Tap  /  in **Clock** to use the countdown or stopwatch.
2. Countdown allows you to set a time and count down to zero, while Stopwatch allows you to record lap times.

World Time

1. Tap  in **Clock** to check local time for cities around the world.
2. Tap  at the bottom to add a new city.

Dolby

Press the **Home Key > Apps icon > Dolby** to select or customize a Dolby profile. You can also tap  to turn off Dolby.

Downloads

The Downloads app keeps a record of the files you have downloaded using the Browser, Email, or Gmail app.

Press the **Home Key > Apps icon > Downloads** to check the record.

- Tap a file to open it with the appropriate applications.
- Tap and hold a file, or check the box in front of it, to delete or share it.

Google Drive

Press the **Home Key > Google > Drive**. The Drive app allows you to store files on Google servers for free after you sign in to your Google account. You can access them on your computers, your phones and other devices, share them, or collaborate with others.

File Manager

Quickly access all of your images, videos, audio clips, and other types of files on your phone and on the memory card.

1. Press the **Home Key > Apps icon > File Manager**. The folders are organized by category, phone storage, and memory card storage.
 - Tap folders and files to access stored items.
 - Tap and hold an item to access option icons, such as Copy, Move, Share, or Delete.

More Apps

- To copy or move an item, navigate to a new location and tap **PASTE**.
- Tap **Phone/SD card** >  to create a new folder in the current directory.

Note

Press the **Home Key > Apps icon > Note** to save and view your text notes.

- Tap a category of note, and tap  to create a new note. Then enter your text and tap **SAVE** to save it.
- Tap a note to view its entire content. You can also edit it, delete it, share it, export it, or move it to a notebook.

Play Books

Press the **Home Key > Google > Play Books** to read ebooks purchased from the Play Store.

- Tap  > **My Library** to view your book library. Tap a book cover to read it.
- Tap  > **Shop** to buy more books from the Play Store. Tap  to search by book title or author name.

More Apps

Play Movies & TV

Press the **Home Key** > **Google** > **Play Movies & TV** to watch movies you rent from Play Store as well as your personal videos stored on the phone.

- Tap  > **My Library** to view your movies or TV shows. You can stream them for online watching or download them to watch offline.

Unlock Shortcuts

You can change or delete the application shortcuts at the bottom of the lock screen.

1. Press the **Home Key** > **Apps icon** > **Unlock Shortcuts**.
2. Tap an application icon to delete its shortcut on the lock screen, or tap **+** and then select an application from the list to add it as the shortcut.

Voice Dialer

Voice Dialer is speech recognition software. You can use it to dial a phone number in your contacts, open menus or launch phone functions.

1. Press the **Home Key** > **Apps icon** > **Voice Dialer**.
2. When you see “Listening”, follow the on-screen examples to speak “Call...”, “Dial...”, or “Open...” to make phone calls or open phone menus and applications.

Task Manager

Press the **Home Key** > **Apps icon** > **Task Manager** to view or stop applications.

- Tap a task in the **Tasks** tab to switch to its screen, force stop it, or see its details.
- Tap the **Apps** tab to manage all the apps on your phone.
- Tap the **Resources** tab to view the real-time system resources information.

YouTube

Press the **Home Key** > **Google** > **YouTube**.

You can watch YouTube videos or upload your own.

Play Store

Press the **Home Key** > . You can buy or rent music, books, movies, and apps and download them to your phone.

NOTE: The content you can access in Play Store depends on your region and your service provider.

Browsing and Searching Apps

You can browse apps by category and sort them in different ways. Tap a top-level category, such as Games, and tap the app from any subcategory.

You can also search for apps using an app’s name or description, or the developer’s name. Just tap  and enter the search terms.

Downloading and Installing Apps

When you find the app you are interested in through browsing or searching, tap it to open its details screen, where more information about the app is displayed.

1. Tap **INSTALL** (free apps) or the price (paid apps) in the app details screen. If the app is not free, you will need to sign in to your Google Wallet™ account and select a payment method.

CAUTION: Once installed, some apps can access many functions or a significant amount of your personal data. The Play Store will show you

what the app can access. Tap **ACCEPT** to accept the permissions for the app or tap the **Back Key** to cancel. Your app will start downloading immediately or once payment is successfully authorized.

2. The app is successfully installed when  appears in the status bar. You can find the new app after pressing the **Home Key** > **Apps icon**.

Creating a Google Wallet Account

You must have a Google Wallet account associated with your Google Account to purchase items from the Google Play Store app.

Do one of the following:

- On your computer, go to wallet.google.com to create a Google Wallet account.
- The first time you use your phone to buy an item from Play Store, you’re prompted to enter your billing information to set up a Google Wallet account.

WARNING! When you’ve used Google Wallet once to purchase items from the Play Store app, the phone remembers your password so you don’t need to enter it the next time. For this reason, you should secure your phone to prevent others from using it without your permission.

Play Store

Requesting a Refund for a Paid App

If you are not satisfied with an app, you can ask for a refund within 15 minutes of the purchase. Your credit card is not charged and the app is uninstalled from your phone.

If you change your mind, you can install the app again, but you can't request a refund a second time. For details, please read the Play Store help information.

1. Press the **Home Key** > .
2. Tap  > **My apps**.
3. Tap the app to uninstall for a refund. The details screen for the app opens.
4. Tap **REFUND** and then tap **UNINSTALL**. Your app is uninstalled and the charge is cancelled.

Managing Your Downloads

After you've downloaded and installed an app, you can rate it, view it in a list with your other downloaded apps, configure it to update itself automatically, and more.

Viewing Your Downloaded Apps

1. In the Apps screen of Play Store, tap  > **My apps**.
2. Your list of installed apps opens. You can tap one to rate it, uninstall it, request a refund, update it, and more.

Uninstalling an App

1. In the Apps screen of Play Store, tap  > **My apps**.
2. Tap an app to open its details screen.
3. Tap **UNINSTALL** > **OK**.

Settings

Press the **Home Key** > **Apps icon** > **Settings**. Settings contains most of the tools for customizing and configuring your device.

General Settings

Airplane Mode

Turn voice and data transmission on or off.

Wi-Fi

Turn Wi-Fi on or off and configure your Wi-Fi connections (see *Connecting to Networks and Devices – Connecting to Wi-Fi*).

Bluetooth

Turn *Bluetooth* on or off and configure your *Bluetooth* connections (see *Connecting to Networks and Devices – Connecting to Bluetooth Devices*).

Mobile Networks

Control mobile data use and data roaming (see *Connecting to Networks and Devices – Connecting to Mobile Networks*).

Sound

Adjust volumes (see *Personalizing – Adjusting Volumes*), toggle sound and mute (see *Personalizing – Switching to Silent Mode*), set up ringtone and notification sound (see *Personalizing – Changing the Ringtone and Notification Sound*), and select system sounds (see *Personalizing – Turning Touch Sounds On/Off*). Tap

Silent mode to turn off all sounds except media and alarm, or enable silent mode with vibration.

Display

- **Brightness:** Set the brightness of the display.
- **Wallpaper:** Select a background image for the home screen or lock screen.
- **Auto-rotate screen:** Click the checkbox to auto-rotate screen.
- **Sleep:** Set the length of time of inactivity before the screen turns off automatically.
- **Daydream:** Set the daydream on the screen.
- **Font size:** Set the font size of the text on the screen.
- **Pulse notification light:** The LED flashes to notify you of missed calls, new messages, and other events.
- **Touch key light duration:** Tap to set the duration of the touch key light.

Date and Time

Set date, time, time zone, and how date and time are displayed. You can also use network-provided data.

Language and Input

- **Language:** Select a language for your system.
- **Spell checker:** Use Google Spell Checker to check for spelling errors when entering text and change its settings.
- **Personal dictionary:** Add new words to the phone's dictionary or remove words from the

dictionary. The words you add are used for spelling check and word suggestion.

- **KEYBOARD & INPUT METHODS:** Configure text input settings (see *Knowing the Basics – Entering Text – Touch Input Settings*).
- **Voice Search**
 - **Languages:** Select the language you use when entering text by speaking or searching by speaking.
 - **“OK Google” Detection:** When this is checked, you can say “OK Google” when viewing the Google Now screen rather than tapping the Microphone icon to initiate a voice search or action.
NOTE: This feature is not available in Spanish.
 - **Speech output:** To turn on speech output only when you’ve got a headset attached to your phone, select **Hands-free only**.
 - **Offline speech recognition:** Select one or more additional language packages so you can use speech recognition when you do not have a network connection.
 - **Block offensive words:** Replace offensive words with an asterisk (*) when you use Google voice recognition to transcribe your voice into text.
 - **Bluetooth headset:** Listen for your voice input through a *Bluetooth* headset when it is connected to your phone.

- **Text-to-speech output**
 - **PREFERRED ENGINE:** Select the speech synthesis engine you want to use or change its settings.
 - **Speech rate:** Select how quickly you want the synthesizer to speak.
 - **Listen to an example:** Play a brief sample of the speech synthesizer, using your current settings.
 - **Default language status:** Check the default language status.
- **Pointer speed:** Select how fast the pointer/mouse should scroll when you connect the phone to a trackpad or mouse accessory.

Wireless and Networks

Data Usage

Tap the **ON/OFF**  switch to turn on or off mobile data.

You can check how much data has been used during the time cycle you set, set a mobile data limit and warning, see what apps have been using mobile data, allow data roaming, or restrict background data for individual apps.

NOTE: The data usage is measured by your phone, and your carrier’s data usage accounting may differ.

VPN

Set up and connect to virtual private networks (see *Connecting to Networks and Devices – Connecting to Virtual Private Networks*).

Default SMS App

In the Settings app, tap **More** under WIRELESS & NETWORKS and select **Default SMS app** to choose the preferred application for sending and receiving SMS.

Device

Storage

Check memory information for your external memory card and internal storage.

- **Unmount SD card:** Unmount the memory card from your phone so that you can safely remove the card while the phone is on.
- **Erase external SD card:** Erase all data on your memory card and prepare it for use with your phone.

Power saving mode

Check how much power remains for the battery and what has been using the battery, or select your preferred power save mode.

Apps

See apps installed on your phone and manage them. Tap an app in the **DOWNLOADED**, **RUNNING**, or **ALL** tab to see its information. You can stop the app,

uninstall or disable the app, clear data and cache, or move the app between the internal storage and the memory card.

NOTE: Not all applications can be moved or uninstalled.

Connect to PC

Select the USB connection mode between your phone and PC (see *Connecting to Networks and Devices – Connecting to Your Computer via USB – Connecting Your Phone to a Computer via USB*).

Call settings

Configure phone call related options, such as ringtone, voicemail and Internet call. For more information, see *Phone Calls – Adjusting Your Call Settings*.

Personal

Location

Activate location services to determine your location (see *Google Maps – Activating Location Services*).

Security

- **Screen lock:** Lock the screen with long press, pattern, PIN, or password (see *Personalizing – Protecting Your Phone With Screen Locks*).
- **Owner info:** Set the text that you may display on the lock screen.

- **Encrypt phone:** Encrypt your data on the phone to protect your privacy (see *Personalizing – Protecting Your Phone With Encryption*).
- **Set up SIM card lock:** Require a PIN to use the phone.
- **Make passwords visible:** Display passwords as you enter them.
- **Device administrators:** View or deactivate apps you have authorized to be device administrators.
- **Unknown sources:** Check this option to permit installation of apps from sources other than the Play Store.
- **Verify apps:** Disallow or warn before installation of apps that may cause harm.
- **Storage type:** Choose the storage type.
- **Trusted credentials:** Display trusted CA certificates.
- **Install from SD card:** Install certificates from the memory card.
- **Clear credentials:** Delete all certificates.

Backup and Reset

- **Back up my data:** Back up app data, Wi-Fi passwords, and other settings to Google servers after you sign in to your Google account.
- **Backup account:** Back up data to a Gmail address.
- **Automatic restore:** Restore previously backed up settings and data when you reinstall an app.
- **Factory data reset:** Reset your phone to factory default settings. All your personal data from the

phone's internal storage will be erased. You can also erase the data on the memory card during the process.

Accounts

Manage your accounts and synchronization. Tap **Add account** to sign in to or create accounts on your phone.

Tap an account type to see that type of accounts you have added and adjust the accounts' settings.

System

Accessibility

Configure the system accessibility options and accessibility plug-ins on your phone, such as using **TalkBack** for low-vision users.

Printing

Configure cloud printing service options, manage print jobs and more.

Developer Options

Developer options contains settings that are useful when developing Android applications. The menu is hidden until you tap **Build Number** in the About phone menu 7 times.

Software Update

You can check your system's software version, check for updates, continue update, or check the profile.

About Phone

View phone status, legal information and other information. Meanwhile, you can also update your phone software through storage card updates.

Upgrading the Phone Software

There are several ways to upgrade your phone software:

- Use the online upgrade tool for mobile terminal products.
- Use the one-press upgrade package offered by your mobile service provider.
- Use your PC to download an upgrade package to your microSDHC card and install it to your phone from the card.

NOTE: Visit the ZTE official handset service support website (<http://www.ztedevice.com/support>) and click your country or region to learn more about the above upgrade methods, as well as which phones and methods are supported.

Troubleshooting

If you encounter problems while using the phone, or if it performs abnormally, you can refer to the chart below. If your particular problem cannot be resolved using the information in the chart, contact the dealer where you purchased the phone.

Problem	Possible Causes	Possible Solution
Poor reception	The network signal is too weak at your current location, for example, in a basement or near a tall building, because wireless transmissions can not effectively reach it.	Move to a location where the network signal can be properly received.
	The network is busy at the current time (for example, during peak times, there may be too much network traffic to handle additional calls).	Avoid using the phone at such times, or try again after waiting a short time.
	You are too far away from a base station for your service provider.	You can request a service area map from your service provider.
Echo or noise	Poor network link quality on the part of your service provider.	End the call and dial again. You may be switched to a better-quality network link or phone line.
	Poor local telephone line quality.	End the call and dial again. You may be switched to a better-quality network link or phone line.
Unable to select certain features	Your service provider does not support these features, or you have not applied for services that provide these features.	Contact your service provider.
Battery not charging	The battery or battery charger is damaged.	Contact the dealer.
	The phone's temperature is below 32°F (0°C) or higher than 113°F (45°C).	Adjust the battery charging environment to avoid extremes of temperature.
	Poor contact between the battery and charger.	Check all connectors to make sure all connections have been properly made.

Troubleshooting

Problem	Possible Causes	Possible Solution
Shortened standby time	The standby time is related to your service provider system configuration. The same phone used with different service providers' systems will not provide exactly the same length of standby time.	If you are located in an area where signaling is weak, temporarily power off the phone.
	The battery is depleted. In high temperature environments, battery life will be shortened.	Use a new battery.
	If you are not able to connect to the network, the phone will continue to send out signals as it attempts to locate a base station. Doing so consumes battery power and will consequently shorten standby time.	Change your location to one where the network is accessible, or temporarily turn off your phone.
Cannot turn your phone on	Battery power has been depleted.	Recharge the phone's battery.
Unable to connect to the network	You are not within the network's service area.	Check the service area with your service provider.
Cannot make outgoing calls	Poor signal.	Move to an open space, or if you are inside a building, move closer to a window.
	You have activated the Fixed dial numbers feature.	Go to Call settings to check the Fixed Dialing Numbers and disable it.
	You have activated the Call barring feature.	Upgrade the phone software.
PIN Code blocked	You have entered an incorrect PIN code three consecutive times.	Contact your service provider.
Unable to enter information into the phonebook	The phonebook's memory is already full.	Delete unnecessary data from the contacts.

Troubleshooting

Problem	Possible Causes	Possible Solution
Phone crashes, reboots, freezes, or cannot be powered on	Some third-party software is not compatible with your phone.	Reset the phone to factory status.
Cannot answer incoming calls	You have activated the Call barring feature.	Enter safety mode and uninstall the software that may cause the problem.

For Your Safety

General Safety

	Don't make or receive handheld calls while driving. Never text while driving.
	Keep your phone at least 15 mm away from your ear or body while making calls.
	Small parts may cause choking.
	Your phone can produce a loud sound.
	Avoid contact with anything magnetic.
	Keep away from pacemakers and other electronic medical devices.
	Power off when asked to in hospitals and medical facilities.
	Power off when told to in aircrafts and airports.
	Power off when near explosive materials or liquids.

	Don't use at gas stations.
	Your phone may produce a bright or flashing light.
	Don't dispose of your phone in fire.
	To prevent possible hearing damage, do not listen at high volume levels for long periods.
	Avoid extreme temperatures.
	Avoid contact with liquids. Keep your phone dry.
	Don't take your phone apart.
	Only use approved accessories.
	Don't rely on your phone for emergency communications.

For Your Safety

Radio Frequency (RF) Energy

This model phone meets the government's requirements for exposure to radio waves.

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government:

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. *Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The highest SAR values for this model phone as reported to the FCC when tested for use at the ear and on the body are:

Head: 0.60 W/kg, Body: 1.11 W/kg

*In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

(Body-worn measurements differ among phone models, depending upon available enhancements and FCC requirements.)

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/ea/fccid/> after searching on FCC ID: **SRQ-Z936L**.

For body-worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and positions the handset a minimum of 0.6 inches (15 mm) from the body. Use of other enhancements may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 0.6 inches (15 mm) from your body when the phone is switched on.

FCC Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: *Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.*

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Hearing Aid Compatibility (HAC) Regulations for Mobile Phones

In 2003, the FCC adopted rules to make digital wireless telephones compatible with hearing aids and cochlear implants. Although analog wireless phones do not usually cause interference with hearing aids or cochlear implants, digital wireless phones sometimes do because of electromagnetic energy emitted by the phone's antenna, backlight, or other components. Your phone is compliant with FCC HAC regulations (ANSI C63.19- 2011).

While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate. The wireless telephone industry has developed ratings for some of their mobile phones to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that have been rated have a label on the box. These ratings are not guaranteed. Results will vary, depending on the level of immunity of your hearing device and the degree of your hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

This phone has been tested and rated for use with

hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, consult your service provider or phone retailer.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference with hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. T4 is the better/higher of the two ratings. (Note that not all hearing devices contain telecoils.)

Your Z936L has been tested for hearing aid device compatibility and has an M4/T4 rating.

Hearing devices may also be measured for immunity to this type of interference. Your hearing device manufacturer or hearing health professional may help you find results for your hearing device.

For additional information about the FCC's actions with regard to hearing aid compatible wireless devices and

other steps the FCC has taken to ensure that individuals with disabilities have access to telecommunications services, please go to www.fcc.gov/cgb/dro.

Distraction

Driving

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving (even with a hands free kit) can cause distraction and lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

Operating Machinery

Full attention must be given to operating machinery in order to reduce the risk of an accident.

Product Handling

General Statement on Handling and Use

You alone are responsible for how you use your phone and any consequences of its use.

You must always turn off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

For Your Safety

- Always treat your phone and its accessories with care and keep it in a clean and dust-free place.
- Keep the screen and camera lens clean. Unclean screen or camera lens may slow down the phone's reaction to your operations or lower image quality.
- Clean the device and its accessories with a soft material such as cleaning cloth for eyeglass lenses. Do not use alcohol or other corrosive substances for cleaning or allow them to get inside.
- Do not expose your phone or its accessories to open flames or lit tobacco products.
- Do not expose your phone or its accessories to liquid, moisture or high humidity.
- Do not drop, throw or try to bend your phone or its accessories.
- Do not paint your phone or its accessories.
- Do not attempt to disassemble your phone or its accessories. Only authorized personnel can do so.
- Do not expose or use your phone or its accessories in an environment with or that can reach extreme temperatures, minimum - [5] and maximum + [50] degrees Celsius.
- Do not place your phone inside or near heating equipment or high-pressure containers, such as water heaters, microwave ovens, or hot cooking utensils. Otherwise, your phone may be damaged.
- Please check local regulations for disposal of electronic products.

- Do not carry your phone in your back pocket as it could break when you sit down.

Small Children

Do not leave your phone and its accessories within the reach of small children or allow them to play with it. They could hurt themselves or others, or could accidentally damage the phone. Your phone contains small parts with sharp edges that may cause an injury or may become detached and create a choking hazard.

Demagnetization

To avoid the risk of demagnetization, do not allow electronic devices or magnetic media to be close to your phone for a long time.

Electrostatic Discharge (ESD)

Do not touch the UIM/microSDHC card's metal connectors.

Antenna

Do not touch the antenna unnecessarily.

Normal Use Position

When placing or receiving a phone call, hold your phone to your ear, with the bottom towards your mouth.

Air Bags

Do not place a phone in the area over an air bag or in the air bag deployment area as an airbag inflates with great force and serious injury could result. Store the phone safely before driving your vehicle.

For Your Safety

Seizures/Blackouts

The phone can produce a bright or flashing light. A small percentage of people may be susceptible to blackouts or seizures (even if they have never had one before) when exposed to flashing lights or light patterns such as when playing games or watching video. If you have experienced seizures or blackouts or have a family history of such occurrences, please consult a physician.

Repetitive Stress Injuries

To minimize the risk of Repetitive Strain Injury (RSI) when texting or playing games with your phone:

- Do not grip the phone too tightly.
- Press the buttons lightly.
- Use the special features that are designed to minimize the times of pressing buttons, such as Message Templates and Predictive Text.
- Take many breaks to stretch and relax.

Emergency Calls

This phone, like any wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.

Loud Noise

This phone is capable of producing loud noises, which may damage your hearing. Turn down the volume before using headphones, *Bluetooth* stereo headsets or other audio devices.

Phone Heating

Your phone may become warm during charging and during normal use.

Electrical Safety

Accessories

Use only approved accessories. Do not connect with incompatible products or accessories. Take care not to touch or allow metal objects, such as coins or key rings, to contact or short-circuit in the charging jack terminals. Never puncture the surface of the phone with sharp objects.

Connection to a Car

Seek professional advice when connecting a phone interface to the vehicle electrical system.

Faulty and Damaged Products

Do not attempt to disassemble the phone or its accessories. Only qualified personnel can service or repair the phone or its accessories. If your phone (or its accessories) has been submerged in water, punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorized service center.

CTIA Requirements

- Do not disassemble or crush, bend or deform, puncture, or shred.

- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.
- Only use the battery for the system for which it is specified.
- Only use the battery with a charging system that has been qualified with the system per CTIA Certification Requirements for Battery System Compliance to IEEE 1725. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Do not short-circuit a battery or allow metallic conductive objects to contact battery terminals.
- Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.
- Promptly dispose of used batteries in accordance with local regulations.
- Battery usage by children should be supervised.
- Avoid dropping the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- Improper battery use may result in a fire, explosion, or other hazard.
- The phone shall only be connected to CTIA certified adapters, products that bear the USB-IF logo or products that have completed the USB-IF compliance program.

Radio Frequency Interference

General Statement on Interference

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this, use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

Hearing Aids

People with hearing aids or other cochlear implants may experience interfering noises when using wireless devices or when one is nearby. The level of interference will depend on the type of hearing device and the distance from the interference source. Increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

Medical Devices

Please consult your doctor and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

Hospitals

Turn off your wireless device when requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

Aircraft

Turn off your wireless device whenever you are instructed to do so by airport or airline staff. Consult the airline staff about the use of wireless devices onboard the aircraft. If your device offers a 'flight mode', this must be enabled prior to boarding an aircraft.

Interference in Cars

Please note that because of possible interference with electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a hands-free kit with an external antenna is included in the installation.

Explosive Environments

Gas Stations and Explosive Atmospheres

In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other radio equipment. Areas with potentially explosive atmospheres include fueling areas, below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

Blasting Caps and Areas

Power off your mobile phone or wireless device when in a blasting area or in areas posted power off "two-way radios" or "electronic devices" to avoid interfering with blasting operations.

Specifications

Handset specifications are shown in the following table.

Operating System	Android 4.4 (KitKat)
Handset Standards	LTE/CDMA
Dimensions (H × W × D)	6.50" (H) x 3.27" (W) x 0.31" (D)
Weight	5.99 oz. (with battery)
Display	6" 720 x 1280
Camera	8 MP rear camera and 2 MP front camera
Internal memory	ROM: 16 GB, RAM:2 GB
Removable memory card	Supports microSDHC card up to 32 GB
Battery	3,200 mAh (Non removable)
Continuous idle time	Up to 10 days
Continuous talk time	Up to 15 hours
WAP browser version	WAP 2.0
<i>Bluetooth</i>	BT 4.0
HAC	M4/T4

NOTE: The phone’s talk time and idle time are based on ideal working environments. The use of extended backlighting, browser, and network conditions can reduce battery life and talk/idle time.

Notes