



LG

Life's Good

ENGLISH
हिन्दी

User Guide LG-A155



C€ 0168

P/NO : MFL67005501 (1.0)

www.lg.com

Bluetooth QD ID B017062

I LG-A155 I USER GUIDE

This manual may differ from the phone depending on the phone software version and service provider used.



Contents

Installing the SIM card and the handset battery.....	3
Phone Components	4
Selecting functions and options	6
Entering Text	7
Installing a Memory Card	8
How to set the tone	9
FM Radio.....	10
Activating SIM cards.....	11
Anti Theft Mobile Tracker (ATMT)	12
Menu Tree.....	13
Quick feature reference.....	14
Installing LG PC Suite on your computer.....	22
Guidelines for safe and efficient use	23
Troubleshooting	27
Accessories	30
Technical Data	31

Installing the SIM card and the handset battery

Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

Important! › The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.

Illustrations


Always switch the device off and disconnect the charger before removing the battery.

- 1 Remove the back cover.
- 2 Lift battery away.
- 3 Insert the SIM card.
- 4 Insert the battery pack.
- 5 Attach the back cover.
- 6 Charge the battery.

Note: Fully charge the battery before using it for the first time.



Phone Components

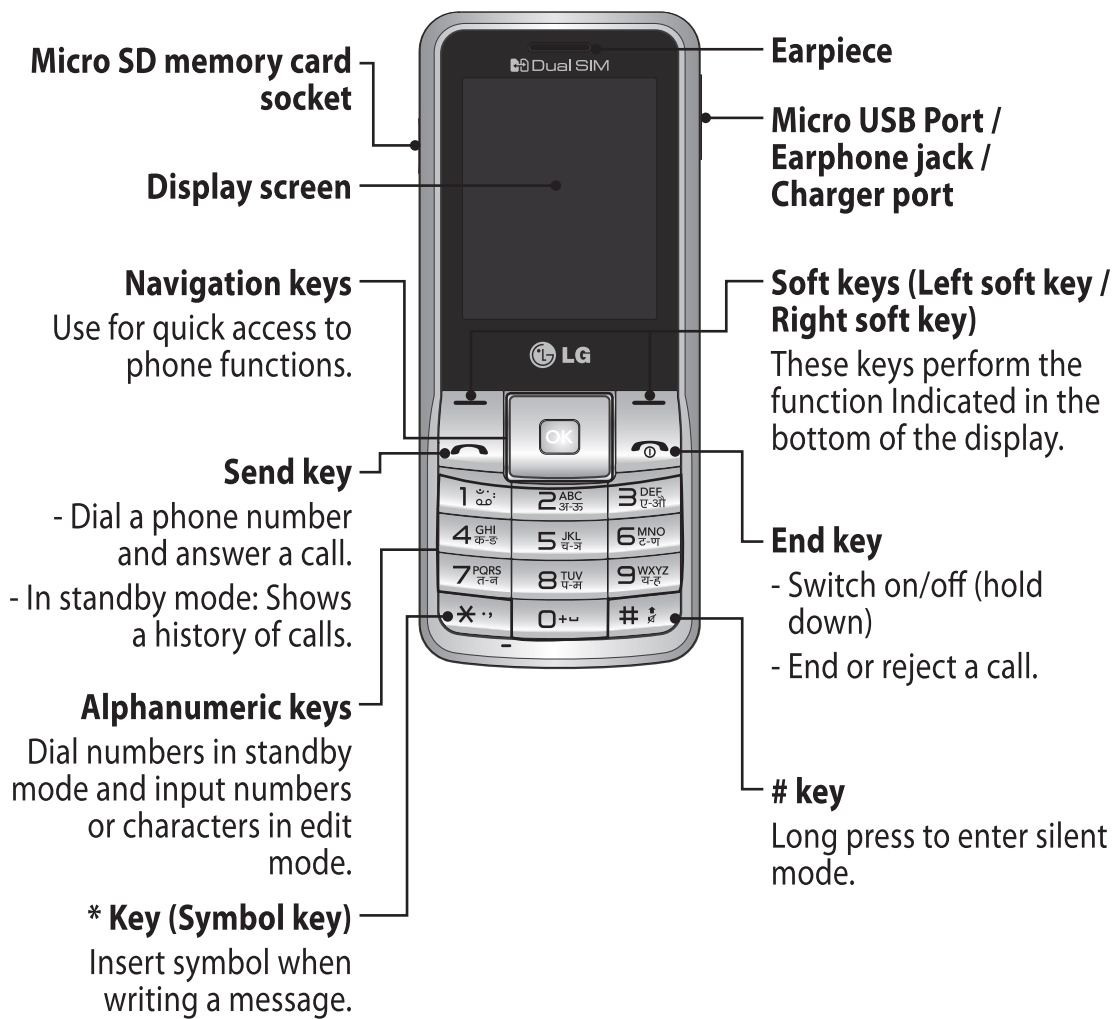

Turning Your Phone On and Off

1. Press and hold the End key until the power comes on.
2. Press and hold the End key until the power goes off.

Making a call

1. Enter a phone number including the area code.
2. Press the  [Send] key or select options > call to call the number.
3. To end the call, press the  key.

Making an international call

1. Press and hold the  key for the international prefix. The '+' character automatically selects the international access code.
2. Enter the country code, area code, and the phone number.
3. Press the  [Send] key or select options > call to call the number.


Answering a call

1. When you receive a call, the phone rings.
2. Press the  [Send] key or select option > OK to answer a call.
3. To end the call, press the  key.

Selecting functions and options

Your phone offers a set of functions that allow you to customize the phone. These functions are arranged in menus and sub-menus, accessed via the two soft keys marked  and . Each menu and sub-menu lets you view and alter the settings of a particular function.

The roles of the soft keys vary according to the current context; the label on the bottom line of the screen just above each key indicates its current role.

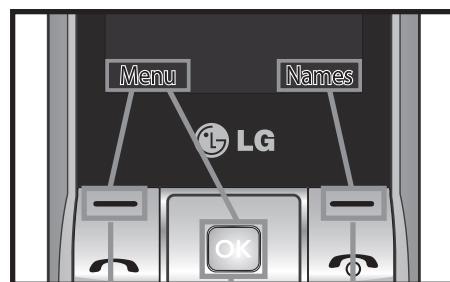

Press the left soft key or center soft key to access the available Menu.

Press the right soft key to access the available Names (Names).

Entering Text

You can enter alphanumeric characters by using the phone's keypad.

T9 Mode

The T9 predictive text input mode lets you enter words easily with a minimum number of key presses. As you press each key, the phone begins to display the characters that it thinks you are typing based on the built-in dictionary.

123 mode

Type numbers using one keystroke per number. You can also add numbers while remaining in letter modes by pressing and holding the desired key.

Symbol Mode

The symbol mode enables you to enter various symbols or special characters. To enter a symbol, select **Options** → **Insert Symbol** or press  Key. Use the navigation keys to select the desired symbol and press the OK key.

Installing a Memory Card

Using a memory card can expand the available storage space of your mobile phone. To insert a memory card, insert it into the card slot until it clicks into place. Ensure that the golden contact area faces downwards, as shown in the figure.

Note: A memory card is an optional accessory.



How to set the tone

You may set up the following different profiles to adapt to different environmental conditions.

1. Select Settings from the main menu, then Select Profiles.
2. Select a profile and press [Options - Customize] to set the ring tone.
3. Press the left soft key [OK] and then you can set the desired ring tone.

Your phone also provides the following options to customize tones/alert types:

- › **Tone settings:** Selects a tone type (Incoming call, Power on, Power off, Message, Keypad).
- › **Volume:** Sets desired volume (Ringtone, Key tone).
- › **Alert type:** Selects an alert type (Ring only, Vib. only, Vib. and ring, Vib. then ring) for the ringing tone.
- › **Ring type:** Selects a ring type (Single, Repeat).
- › **Extra tone:** Selects a extra tone (Warning, Error, Camp on).
- › **Answer mode:** If you select the Any key, you can receive a call by pressing any key except the  key and the right soft key.

FM Radio (This function may be different in different regions.)

Listens to FM radio station. You can enjoy listening FM without using headset as phone supports wireless FM service.

1. From main menu select Media then select FM radio.
2. Use navigation keypad to search radio station. You can also press Options to search radio frequency for available channels and automatically store to the channel list.
3. Press **Options** to edit the channel list. There are 9 stations you may pre-set. Your phone provides the following options for FM radio:
 - › **Record:** Records your favorite radio programs.
 - › **Channel list:** Bookmark up to 9 radio stations by entering the channel name and frequency.
 - › **Manual input:** You can input frequency manually by using this option.
 - › **Minimize:** This function allows you to do other work on phone by minimizing FM radio.
 - › **Auto search:** Auto search available channels and automatically store them to the channel list.
 - › **Settings:** Allows you to switch the record audio quality and the record format. You can record in AMR or WAV formats.
 - › **Schedule FM record:** You can record FM program on schedule when you set up the recording time.
 - › **Append:** Resumes a previously recorded file.

Activating SIM cards

Your phone supports the Dual SIM cards mode, enabling you to use two SIM cards at the same time without changing them. When there are two SIM cards installed, you can activate one of two or both SIM cards.

1. Select [Settings] from the main menu, and then select [Dual SIM settings].

Anti Theft Mobile Tracker (ATMT)

Anti-theft mobile tracker (ATMT) allows you to track your lost phone. When someone uses your phone without your permission, the tracking service will be activated.

You are reminded by a text message sent to the default phone number you have set, without the unauthorized user's knowledge. You can always activate the ATMT and configure your personal settings.

To activate Anti-theft mobile tracker

1. From the main menu, select **Settings > Security settings > Anti-theft mobile tracker** and press **OK**.
2. Then in the Anti-theft mobile tracker menu, edit and save the name in **Sender name** and numbers in **Sending number list**.
3. Select **Set Anti-theft** and press **OK**.
4. Switch **On** or **Off** and press **OK**.
5. Input the security code to enable or disable this function.

Note

› The default ATMT code is "0000". You have to enter the code before configuring the ATMT settings.

Menu Tree

1. Messaging

- 1.1 Create message
- 1.2 Inbox
- 1.3 Drafts
- 1.4 Outbox
- 1.5 Sent items
- 1.6 Saved items
- 1.7 Broadcast message
- 1.8 Templates
- 1.9 Message settings
- 1.10 SOS message
- 1.11 Schedule SMS

2. Contacts

- 2.1 Add new contact

3. Log

- 3.1 Sim1 call log
- 3.2 Sim2 call log

4. Settings

- 4.1 Dual SIM settings
- 4.2 Profiles
- 4.3 Display
- 4.4 Connectivity

4.5 Call

- 4.6 Phone
- 4.7 Network
- 4.8 Security settings
- 4.9 Restore factory settings

5. Gallery

- 5.1 My images
- 5.2 My sounds
- 5.3 My videos
- 5.4 My game & apps
- 5.5 Others

6. Media

- 6.1 Image viewer
- 6.2 Media player
- 6.3 FM radio
- 6.4 Voice recorder

7. Organiser

- 7.1 Alarm clock
- 7.2 Calendar
- 7.3 To-do list
- 7.4 Notes
- 7.5 Calculator
- 7.6 Stopwatch

7.7 Converter

- 7.8 World time
- 7.9 Go to
- 7.10 File manager
- 7.11 SIM services

8. Applications

- 8.1 My games & apps
- 8.2 Settings

9. Web

- 9.1 Home
- 9.2 Bookmarks
- 9.3 Last web address
- 9.4 Settings
- 9.5 Go to address
- 9.6 Saved pages
- 9.7 Open file
- 9.8 Recent pages

Quick feature reference

This section provides brief explanations of features on your phone.

Messaging Menu 1

Create message	This menu includes functions related to SMS (Short Message Service) and MMS (Multimedia Message Service). You can send SMS to many contacts at a time. Tip: User can send SMS to Many recipients by selecting 'Add from Contacts' from Send to option. (User can select Maximum 20 contacts from the list). User Can send SMS to groups by selecting Group icon by pressing left navigation key from "Add from Contacts" options.
Inbox	You will be alerted when you have received messages. They will be stored in Inbox. Tip: SMS Sorting: Inbox Messages can be sorted with the given sorting options for an easy access of messages (Sender, Subject, Unread/read, Message type, Message size).
Drafts	You can save the message temporarily in Drafts.
Outbox	This is a temporary storage folder for the unsent messages or messages that you have sent but fail to deliver.
Sent items	After sending out the message, the text message or multimedia message is saved in the Sent folder.
Saved items	You can access your saved messages.

Messaging Menu 1 (Continued)

- Broadcast message** Choose whether to receive, block, view or edit channels to receive information service messages (broadcast messages). Also choose the languages of information service messages.
- Templates** There are pre-defined messages in the list. You can view and edit the template messages or create new messages.
- Message settings** This menu allows you to set features of your network service provider.
- SOS message** An emergency message can be sent to the predefined number's (3 maximum) by long press of 9 Key. On long press of 9 key, a popup comes, 'Set SOS message?'. Press 'Yes' then type the required message and input 3 numbers for which you want to send the message in emergency mode and press Save/Done.
- Schedule SMS** User can schedule an SMS, so that it can be sent to the pre define number/contact on Set date and Set time.

Contacts Menu 2

You can search for contacts in phonebook.

Note: Instant searching is available by inputting the initial letter of the name you want to search.

Add new contact You can add phonebook entries by using this menu.

Log Menu 3

Call log

You can view all lists of outgoing or incoming calls. Select sim1 call log or sim2 call log and from that select the following.

- › **missed calls:** You can view the unanswered calls.
- › **received calls:** You can view the Received calls.
- › **dialled numbers:** You can view the outgoing call numbers.
- › **call duration:** Allows you to view the duration of your incoming and outgoing calls. You can also reset the call timers.
- › **text msg. counter:** This application will count the number of messages received and sent from the phone.
- › **packet data counter:** You can check the amount of data transferred over the network.
- › **call costs:** View the charges applied to your dialled numbers and the call duration of all your received and dialled calls. Also you can do Cost Settings.

Settings Menu 4

Dual SIM settings

Choose from the options what you want to change: Dual SIM open / Only SIM1 open / Only SIM2 open / Flight mode.

Tip: Dual SIM Single Talk : while one of Dual SIM is operating with network such like WAP/JAVA/MMS/Call, another SIM can not use network related service.

Settings Menu 4 (Continued)

- Profiles** You can adjust and customize the phone tones for different events, or environments.
- Display** You can change settings for the phone display.
- Connectivity**
- › **Bluetooth:** You can adjust setting on BT connection.
 - › **Data account:** You can manage data account list that is used for profile setting on WAP or MMS.
- Call** You can set the menu relevant to a call.
- Tip:** Enable the Black list, by selecting Mode to ON in Black list, from Advance Settings. Once you switch On the Black List Mode, Type the Required Number to be in the Black List and save it. User can not receive any calls from the numbers which are saved in Black list.
- Phone**
- › **Time and date:** Set date, time, time zone, and formats.
 - › **Schedule power on/off:** This menu allows you to set up time for the phone automatically power on or off. Once the time is set by you, the phone will power on automatically at the time specified. As for the powering off, the phone will ask you for the confirmation before powering off at the time specified by you. You can specify up to 4 different times.
 - › **Language/Writing language:** You can change the language for the display texts in your phone. This change will also affect the Language Input mode.

Settings Menu 4 (Continued)

- › **Themes:** Allows you to change the whole look of your phone display.
- › **Greeting text:** This menu allows you to customize the greeting text upon the phone's power on. You can also choose whether you want the greeting text on or off upon power on.
- › **Dedicated key:** Allows you to change the preferences on the Hotkeys that are currently assigned for your navigation keys (when in standby mode).
- › **Auto update of date and time:** Allows you to set the phone to automatically update the time and date according to the current local time zone.
(The Auto-update feature is network dependent.)
- › **UART settings:** User will be able to perform the operation from PC using modem for selected SIM card in UART settings (like AT command using HyperTerminal, PC dialup). User will be able to make the GPRS dialup on PC using the SIM which is selected in UART setting for e.g. if SIM1 is selected then user will be able to make the connection using selected SIM card.
- › **Misc. settings:** You can set the brightness and time of the display screen.

Network

You can set select network and network mode settings using this menu. Also you can add a preferable network to be connected to Preferred lists.

Settings Menu 4 (Continued)

- Security settings**
- › **sim1/sim2 security settings:** This menu allows you to set the phone's safety.
 - › **Phone lock:** You can use a security code to avoid unauthorized use of the phone.
 - › **Auto keypad lock:** You can make the key pad locked automatically after some time.
 - › **Change password:** Changing your phone password, enter the old code followed by the new code.
 - › **Anti-theft mobile tracker:** The ATMT feature of this phone provides you with the ability to have a tracking system in place for your mobile in case you lose or misplace it.
- Restore factory settings** You can initialize all factory defaults. You need Security code to activate this function.

Gallery Menu 5

- My images** Shows the list of image files.
- My sounds** Saved audio files are displayed in the list.
- My videos** Displays the list of video files.
- My game & apps** You can access a great selection of games and applications on your phone.
- Others** When you receive files of an undefined format via Bluetooth, the files are saved in this folder.

Media Menu 6

- Image viewer** Choose to View the picture which are stored in Photos [Gallery > My image > photos].
- Media player** The player allows you play audio and video files. You can also manage play lists.
- FM radio** You can use FM radio with or without your external earphone. You can listen to your favourite radio station anytime.
Note: You have to insert Ear-mic into Handsfree connector in order to listen to the Radio and keep the good radio reception.
- Voice recorder** You can record voice memo.

Organiser Menu 7

- Alarm clock** You can set the alarm clock to go on at a specified time.
- Calendar** You can see the calendar and add the events here in selected date.
- To-do list** You can view, edit and add tasks to do.

Organiser Menu 7 (Continued)

Notes	You can add new memo, view and manage saved memos.
Calculator	The calculator provides the basic arithmetic functions: addition, subtraction, multiplication and division.
Stopwatch	This option allows you to use the function of a stopwatch.
Converter	This converts any measurement into a unit you want. There are many types that can be converted into units: Currency, Length, Weight.
World time	The World time function provides time information on major cities worldwide.
Go to	It helps you to go to the menu you search for. You can set the item as Go to.
File manager	This function allows you to view the content in your internal phone memory and the external memory card.
SIM services	Display additional functions or applications provided by your network service provider.

Applications Menu 8

My games & apps	Your LG-A155 comes with preloaded games to keep you amused when you have time to spare. If you choose to download any additional games or applications they will be saved into this folder. Press Menu and select Applications. Choose My games & apps.
----------------------------	---

Web Menu 9

Home	Connects to a homepage. The homepage will be the site which is defined in the activated profile.
Bookmarks	This menu allows you to store the URL of favorite web pages for easy access at a later time.
Last web address	You can view the latest page when you connected internet.
Settings	You can set the profile, cache and security related to internet service.
Go to address	You can connect directly to the site you want. After entering a specific URL, press OK key to make the connection done to connect to the site.
Saved pages	Allows you to view your saved web pages.
Open file	You can open the following files saved in the phone. WML, XHTML, HTM, HTML.
Recent pages	This menu shows the history of recently browsed pages.

Installing LG PC Suite on your computer

1. Go to www.lgapplication.com and choose your country.
2. Select Manual & Software Download and click Download to Download LG Mobile Support Tool to PC.
3. Follow the instructions on screen to complete the LG PC Suite Installation on your PC.

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal. Further detailed information is given in this manual.

Warning

- › For your safety, use ONLY specified ORIGINAL batteries and chargers.
- › Switch off the phone in any area where required by special regulations, e.g. in a hospital where it may affect medical equipment.
- › Batteries should be disposed off in accordance with relevant legislation.

Product care and maintenance

WARNING! Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- › Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
Repairs under warranty, at LG's option, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- › The unit should be kept away from heat sources such as radiators or cookers.
- › Use a dry cloth to clean the exterior of the unit. (Do not use any solvents.)
- › Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.

Guidelines for safe and efficient use (Continued)

Electronic devices

All mobile phones may get interference, which could affect performance.

- › Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over a pacemaker, i.e. in your breast pocket.

Road safety

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- › Do not use a hand-held phone while driving.
- › Use a hands-free kit, if available.
- › Pull off the road and park before making or answering a call if driving conditions so require.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

Do not use the phone at a refueling point. Do not use near fuel or chemicals.

In aircraft

Wireless devices can cause interference in aircraft.

- › Turn off your mobile phone before boarding any aircraft.

Children

Keep the phone in a safe place out of children's reach. It includes small parts which if detached may cause a choking hazard.

Guidelines for safe and efficient use (Continued)

Emergency calls

Emergency calls may not be available under all cellular networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- › You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- › Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- › Do not disassemble or short-circuit the battery pack.
- › Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times before it needs to be replaced.
- › Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- › Risk of explosion if battery is replaced by an incorrect type.
- › Dispose off used batteries according to the manufacturer's instructions.

❑ Guidelines for safe and efficient use (Continued)

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model LG-A155 has been designed to comply with applicable safety requirement for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to ensure safety of all persons, regardless of age and health.

- › The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- › While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- › The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over ten (10) gram of tissue.
- › The highest SAR value for this model phone tested by DASY4 for use at the ear is 1.19W/kg (10g) and when worn on the body is 1.19W/kg (10g).
- › SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE) is 1.6 W/kg averaged over one (1) gram of tissue.

❏ Troubleshooting

Problem	Possible Solution
Telephone cannot be switched on	Please take out battery and insert again. Then press Power on key to power on the phone.
Battery empty	Charge battery. Check charging indicator on display.
The battery doesn't charge properly or the phone sometimes turns itself off	Wipe the charging contacts, both on the phone and on the battery, with a clear soft cloth.
Usage time of battery becomes shorter	If the battery time is short, it may be due to the user environment, a large volume of calls, or weak signals.
Charging error— Temperature out of range	Make sure the ambient temperature is right, wait for a while, and then charge again.
Charging error— Wrong charger	Only use original LG accessories.
Charging error— Battery defective	Replace battery.
Charging error—No battery icon appears when charging	The battery is empty or has been not used for a long time. It may take a while before the battery icon appears on the screen.

❑ Troubleshooting (Continued)

Problem	Possible Solution
Forgot the phone code or password	The default phone code is "0000".
Enter PUK	The PIN code has been entered incorrectly three times in succession, and the phone is now blocked. Enter the PUK supplied by your service provider.
Loss of Network	You may be in a weak signal area. Move and try again. You are trying to access an option for which you have no subscription with your service provider. Contact the service provider for further details.
You have entered a number but it was not dialed	Be sure that you have pressed Talk/Yes key . Be sure that you have accessed the right network service. Be sure that you have not set an outgoing call barring option. Be sure that you have entered the area code.
Your correspondent cannot reach you	Be sure that your phone is switched on. Press Talk/Yes key for more than one second. Be sure that you are accessing the network service. Be sure that you have not set an incoming call barring option.

Troubleshooting (Continued)

Problem	Possible Solution
Your correspondent cannot hear you speaking	Be sure that you have switched off the loudspeaker. Be sure that you are holding the phone close enough to your mouth. The microphone is located at the bottom of the phone.
The voice quality of the call is poor	Check the signal strength indicator on the display. The number of bars indicates the signal strength. Try moving the phone slightly or moving closer to a window if you are in a building.
No number is dialed when you recall a contact	Use the Phonebook Search feature to ensure the number has been stored correctly. Resave the number, if necessary.
Cannot use the Browser	Your subscription does not include data capability. You will need to contact your service provider to enable the service.
If the above guidelines do not help you to solve the problem	Take note of the model number of your mobile phone and a clear description of the problem. Contact your phone dealer or LG Service Center for help.

Accessories

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.

Standard Battery



Travel Adapter



Headset



Note

- › Always use genuine LG accessories. Failure to do this may invalidate your warranty.
- › Accessories may be different in different regions; please check with our regional service company or agent for further enquires.

Technical Data

General

- › Product name : LG-A155
- › System : GSM 850 / E-GSM 900 /
DCS 1800 / PCS 1900

Ambient Temperatures

- › Max : +55°C (discharging)
+45°C (charging)
- › Min : -10°C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc. LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad band Terminal Equipment

Model Name

LG-A155

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.8.1, EN 301 489-07 V1.3.1, EN 301 489-17 V2.1.1
EN 301 511 V9.0.2
EN 50360:2001, EN62209-1:2006
EN 60950-1:2001
EN 300 328 V1.7.1

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)
BABT, Forsyth House-Churchfield Road - Walton-on-ThamesSurrey - KT12 2TD , United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility
that the product mentioned above to which this
declaration relates complies with the above
mentioned standards and Directives

LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands

Name

Doo Haeng Lee / Director

Issued Date

12. October. 2010

Signature of representative



I LG-A155 I उपयोगकर्ता मार्गदर्शिका

यह मैन्युअल फ़ोन सॉफ़्टवेयर संस्करण और उपयोग किए गए सेवा प्रदाता के आधार पर फ़ोन से भिन्न हो सकता है.



सामग्रियों की तालिका

सिम कार्ड और हैंडसेट बैटरी स्थापित करना	3
फ़ोन घटक	4
फ़ंक्शंस और विकल्पों का चयन करना	6
पाठ दर्ज करना	7
मेमोरी कार्ड स्थापित करना	8
टोन कैसे सेट करें	9
FM रेडियो	10
SIM कार्ड्स सक्रिय और स्विच करना	11
एंटी-थेफ़्ट मोबाइल ट्रैकर (ATMT)	12
अक्षर व अंक प्रविष्ट करने की तालिका	13
हिन्दी शब्द लिखने के उदाहरण	14
मेनू ट्री	15
त्वरित सुविधा संदर्भ	16
आपके कंप्यूटर पर LG PC सूट स्थापित करना	24
सुरक्षित और प्रभावी उपयोग के लिए दिशानिर्देश	25
समस्या निवारण	29
सहायक उपकरण	32
तकनीकी डेटा	33

सिम कार्ड और हैंडसेट बैटरी स्थापित करना

सिम कार्ड स्थापित करना

जब आप किसी सैल्यूलर नेटवर्क को सबस्क्राइब करते हैं, तो आपको आपके सबस्क्रिप्शन विवरणों, जैसे कि आपका PIN, कोई अन्य उपलब्ध वैकल्पिक सेवा और बहुत सी अन्य सेवाओं के साथ लोड एक SIM कार्ड प्रदान किया जाएगा।

महत्वपूर्ण! > प्लग-इन सिम कार्ड और उसके संपर्क, खरोंचों या मुड़ने से आसानी से खराब हो सकते हैं, इसलिए कार्ड को हैंडल करते समय, डालते या निकालते समय सावधानी रखें। सभी सिम कार्ड छोटे बच्चों की पहुँच से दूर रखें।

उदाहरण


बैटरी निकालने से पहले डिवाइस हमेशा बंद करें और चार्जर डिस्कनेक्ट कर दें।

- 1 बैक कवर निकालें।
- 2 बैटरी बाहर निकालें।
- 3 सिम कार्ड डालें।
- 4 बैटरी पैक डालें।
- 5 बैक कवर संलग्न करें।
- 6 बैटरी चार्ज करें।

नोट: पहली बार बैटरी का उपयोग करने से पहले इसे पूर्ण चार्ज करें।



फोन घटक

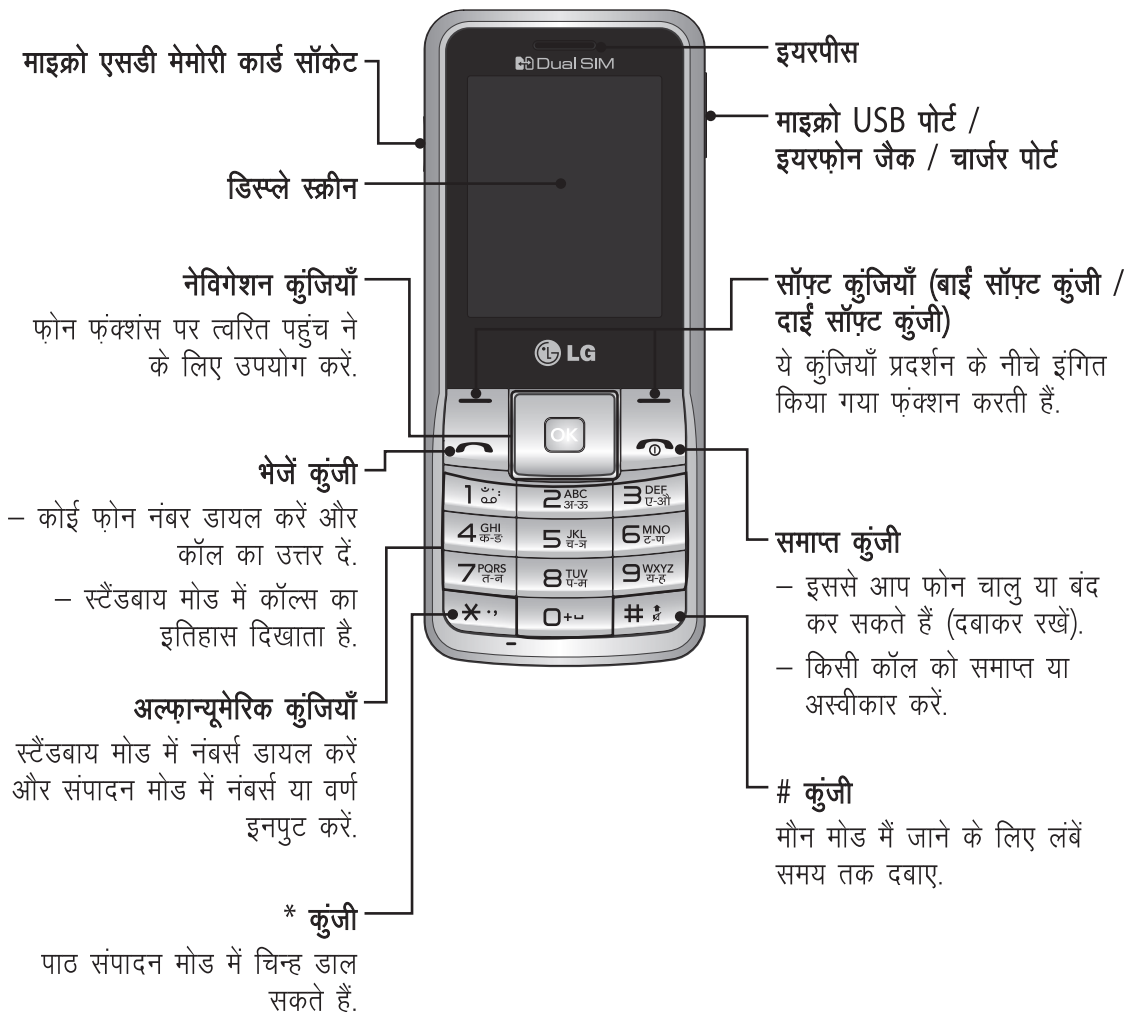

अपने फ़ोन को चालू या बंद करना

1. पॉवर के आ जाने तक समाप्त कुंजी दबा कर रखें.
2. पॉवर के चले जाने तक समाप्त कुंजी दबा कर रखें.

कॉल करना

1. क्षेत्र कोड के साथ एक फ़ोन नंबर दर्ज करें.
2.  [भेजें] कुंजी दबाएँ या नंबर पर कॉल करने के लिए विकल्प > डायल करें.
3. कॉल को समाप्त करने के लिए,  (समाप्त कुंजी) कुंजी दबाएँ.

अंतराष्ट्रीय कॉल करना

1. अंतराष्ट्रीय उपसर्ग वर्ण के लिए  कुंजी को दबाकर रखें. '+' वर्ण स्वचालित रूप से अंतराष्ट्रीय पहुँच कोड का चयन करता है.
2. देश का कोड, क्षेत्र कोड और फ़ोन नंबर दर्ज करें.
3.  [भेजें] कुंजी दबाएँ या नंबर पर कॉल करने के लिए विकल्प > डायल करें.


कॉल का उत्तर देना

1. जब आप कोई कॉल प्राप्त करते हैं, तो फ़ोन रिंग होता है.
2.  [भेजें] कुंजी दबाएँ या कॉल का उत्तर देने के लिए विकल्प > उत्तर दें.
3. कॉल को समाप्त करने के लिए,  (समाप्त कुंजी) कुंजी दबाएँ.

फंक्शंस और विकल्पों का चयन करना

आपका फ़ोन आपको फंक्शंस का ऐसा सेट प्रदान करता है, जो आपको फ़ोन को अनुकूलित करने की अनुमति देता है। ये फंक्शंस मेनू और सबमेनू में व्यवस्थित होते हैं  और  से चिह्नित दो सॉफ़्ट कुंजियों द्वारा इन तक पहुँचा जाता है। प्रत्येक मेनू और सबमेनू आपको किसी विशेष फंक्शन को देखने और उसकी सेटिंग्स परिवर्तित करने देता है।

सॉफ़्ट कुंजियों के कार्य वर्तमान संदर्भ के अनुसार भिन्न होती हैं प्रत्येक कुंजी के ठीक ऊपर स्क्रीन की निचली पंक्ति पर एक लेबल इसके वर्तमान कार्य को इंगित करता है।

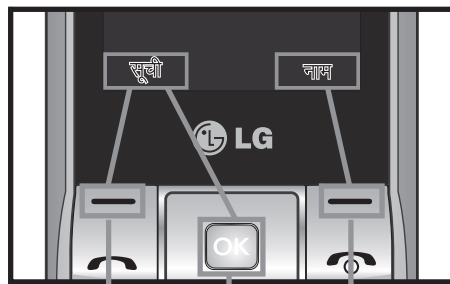

उपलब्ध मेनू तक पहुंच प्राप्त करने के लिए बाईं सॉफ़्ट कुंजी या मध्य सॉफ़्ट कुंजी दबाएँ।

उपलब्ध नाम (नामों) तक पहुंच प्राप्त करने के लिए दाईं सॉफ़्ट कुंजी दबाएँ।

पाठ दर्ज करना

आप फ़ोन के कीपैड का उपयोग करके अल्फ़ान्यूमेरिक वर्ण दर्ज कर सकते हैं।
मोड्स बदलने के लिए,  कुंजी दबाएँ।

T9 मोड

T9 प्रीडिक्टिव पाठ इनपुट मोड आपको कम से कम कुंजियाँ दबाकर आसानी से शब्दों को दर्ज करने देता है। जैसे ही आप प्रत्येक कुंजी दबाते हैं, तो फ़ोन अक्षरों को प्रदर्शित करने लगता है जो यह सोचता है कि आप अंतर्निहित शब्दकोश के आधार पर टाइप कर रहे हैं।

123 मोड

प्रति संख्या एक कुंजीस्ट्रोक के उपयोग से संख्याएं टाइप करें। आप अक्षर मोड में रहते हुए भी इच्छित कुंजी को दबाए रखकर अंक डाल सकते हैं।

प्रतीक मोड

प्रतीक मोड आपको विभिन्न प्रतीकों या विशेष अक्षरों को दर्ज करने में सक्षम बनाता है। चिह्न को दर्ज करने के लिए, **विकल्प** का चयन करें → **चिह्न डालें** या  कुंजी दबाएँ। इच्छित प्रतीक का चयन करने के लिए नेविगेशन कुंजियों का उपयोग करें और ठीक कुंजी दबाएँ।

मेमोरी कार्ड स्थापित करना

मेमोरी कार्ड का उपयोग करने से आपके मोबाइल फोन का संग्रहण स्थान बढ़ाया जा सकता है। मेमोरी कार्ड डालने के लिए उसे कार्ड स्लॉट में डालें जब तक कि वह अपने स्थान पर बैठ न जाए। सुनिश्चित करें कि सुनहेरा संपर्क क्षेत्र निचे की दिशा की ओर स्थित हो, जैसा कि चित्र में दिखाया गया है।

नोट: मेमोरी कार्ड एक वैकल्पिक सहायक उपकरण है।



टोन कैसे सेट करें

अलग-अलग वातावरण की परिस्थितियों को अपनाने के लिए आपका फोन वभिन्न प्रोफाइल्स उपलब्ध कराता है। प्रत्येक प्रोफाइल में, आप मनचाही रिंग टोन्स और अलर्ट प्रकार सेट कर सकते हैं।

1. मुख्य मेनू से सेटिंग का चयन करें और फिर प्रोफाइल का चयन करें।
2. रिंग टोन सेट करने के लिए, किसी एक प्रोफाइल का चयन करें और विकल्प दबाएँ, कस्टोमाइज करें।
3. रिंग टोन्स और अलर्ट प्रकारों को अनुकूलित करने के लिए आपका फोन निम्न विकल्प उपलब्ध कराता है:
 - › **टोन सेटिंग:** टोन प्रकार चयन करें (आने वाली कॉल, पावर चालु, पावर बंद, संदेश, कीपैड)।
 - › **वॉल्यूम:** ऊपर/नीचे नेवीगेशन कुंजियाँ दबाते हुए रिंग टोन का वॉल्यूम व्यवस्थित करता है (रिंगटोन, कीटोन)।
 - › **एलर्ट प्रकार:** रिंग टोन के लिए, किसी एक एलर्ट प्रकार का चयन करें (केवल रिंग, केवल कंपन, कंपन तथा रिंग, कंपन फिर रिंग)।
 - › **रिंग प्रकार:** रिंग प्रकार चयन करें (एक, पुनः)।
 - › **अतिरिक्त टोन:** अतिरिक्त टोन प्रकार चयन करें (चेतावनी, त्रुटि, कैम्प चालु)।
 - › **उत्तर प्रकार:** यदि कोई कुंजी मेनू विकल्प सेट किया गया है, तो  (समाप्त कुंजी) या दाईं सॉफ्ट कुंजी के अलावा अन्य किसी भी कुंजी को दबाने पर कॉल का उत्तर दिया जाएगा।

FM रेडियो (यह फंक्शन अलग-अलग क्षेत्रों में अलग-अलग हो सकता है.)

FM रेडियो स्टेशन को सुनता है. आप हेडसेट के बिना FM सुनने का आनंद उठा सकते हैं क्योंकि फोन वायरलेस FM सेवा का समर्थन करता है.

1. मुख्य मेनू से मीडिया, का चयन करें और फिर FM रेडियो, का चयन करें.
2. रेडियो चैनल्स को खोजने के लिए नेवीगेशन कुंजी का उपयोग करें.
3. चैनल्स सूची का संपादन करने के लिए विकल्प, दबाएँ. आपका फोन FM रेडियो के लिए निम्न विकल्प उपलब्ध कराता है:
 - › **रिकॉर्ड:** आपके पसंदीदा रेडियो कार्यक्रम रिकॉर्ड करता है.
 - › **चैनल सूची:** चैनल का नाम और आवृत्ति दर्ज करते हुए 9 रेडियो चैनल्स तक को बुकमार्क करता है.
 - › **मैन्युअल इनपुट:** मैन्युअल रूप से रेडियो चैनल सेट करे.
 - › **छोटा करें:** इस समारोह रेडियो को मिनीमाइज करके आपको फोन में अन्य काम करने की सुविधा देती है.
 - › **पूर्व निर्धारित ऑटो सर्च:** उपलब्ध रेडियो चैनल्स को स्वचालित रूप से खोजता है और उन्हें चैनल सूची पर संग्रहीत करता है.
 - › **सेटिंग्स:** रिकॉर्ड फॉर्मेट, ध्वनि गुणवत्ता और रिकॉर्ड के संग्रह को परिवर्तित करती हैं.
 - › **शेड्यूल FM रिकॉर्ड:** समय पर FM कार्यक्रम रिकॉर्ड करने के लिए सेटिंग कर सकते हैं.
 - › **संलग्न करें:** रिकॉर्ड की गई पिछली फाइलों को प्रबंधित करता है.

SIM कार्ड्स सक्रिय और स्विच करना

आपका फोन Dual SIM कार्ड्स मोड का समर्थन करता है और आपको एक बार में दो SIM कार्ड्स को न बदलते हुए उपयोग करने में सक्षम करता है. जब दो SIM कार्ड्स स्थापित हों, तो आप दो में से एक या दोनों SIM कार्ड्स को सक्रिय कर सकते हैं.

1. मुख्य मेनू से सेटिंग्स, का चयन करें और फिर दोहरी SIM सेटिंग्स का चयन करें.

एंटी-थेफ़्ट मोबाइल ट्रैकर (ATMT)

चोरी-रोधी मोबाइल ट्रैकर (ATMT) आपको आपके खोए हुए फ़ोन को ट्रैक करने की अनुमति देता है। जब कोई आपकी अनुमति के बिना आपके फ़ोन का उपयोग करता है, तो ट्रैकिंग सुविधा सक्रिय हो जाएगी।

आपको, अनधिकृत उपयोगकर्ता को बताए बिना आपने जो डिफ़ॉल्ट फ़ोन नंबर सेट किया है, उसपर पाठ संदेश भेजकर याद दिलाया जाता है। आप हमेशा ATMT को सक्रिय कर सकते हैं और अपनी व्यक्तिगत सेटिंग्स कॉन्फ़िगर कर सकते हैं।

एंटी-थेफ़्ट मोबाइल ट्रैकर सक्रिय करने के लिए

1. मुख्य मेनू से, **सेटिंग > सुरक्षा सेटअप > चोरी-रोधी मोबाइल ट्रैकर का चयन करें और ठीक दबाएँ**।
2. फिर चोरी-रोधी मोबाइल ट्रैकर मेनू में, **भेजने वाले का नाम में नाम को और नंबर लिस्ट भेज रहा हैं** में नंबरों को संपादित करें और सहेजें।
3. चोरी-रोधी सेट करें **का चयन करें और ठीक दबाएँ**।
4. चालू या **बंद करें और ठीक दबाएँ**।
5. इस फ़ंक्शन को सक्षम या अक्षम करने के लिए सुरक्षा कोड इनपुट करें।

नोट

› डिफ़ॉल्ट ATMT कोड "0000" है। आपको ATMT सेटिंग्स कॉन्फ़िगर करने से पहले कोड डालना होगा।

अक्षर व अंक प्रविष्ट करने की तालिका

कुंजी	अक्षर / अंक (कुन्जियों को इतनी बार दबाएं)													
	1 बार	2 बार	3 बार	4 बार	5 बार	6 बार	7 बार	8 बार	9 बार	10 बार	11 बार	12 बार	13 बार	14 बार
1	ँ	ं	ः	र्	1									
2	ा	ि	ी	ु	ू	ृ	अ	आ	इ	ई	उ	ऊ	ऋ	2
3	े	ै	ँ	ो	ौ	ॉ	ए	ऐ	एँ	ओ	औ	औँ	3	
4	क	ख	ग	घ	ङ	4	क	ख	ग					
5	च	छ	ज	झ	ञ	5	ज							
6	ट	ठ	ड	ढ	ण	6	ड	ढ						
7	त	थ	द	ध	न	7	न							
8	प	फ	ब	भ	म	8	फ							
9	य	र	ल	व	श	ष	स	ह	9	ळ	र	ळ	य	
0	—	0												

हिन्दी शब्द लिखने के उदाहरण

1) किताब

- क :- कुंजी 4 को 1 बार दबाएं ।
- ि :- कुंजी 2 को 2 बार दबाएं ।
- त :- कुंजी 7 को 1 बार दबाएं ।
- । :- कुंजी 2 को 1 बार दबाएं ।
- ब :- कुंजी 8 को 3 बार दबाएं ।

2) क्षत्रिय

- क :- कुंजी 4 को 1 बार दबाएं ।
- ् :- कुंजी 1 को 4 बार दबाएं ।
- ष :- कुंजी 9 को 6 बार दबाएं ।
- त :- कुंजी 7 को 1 बार दबाएं ।
- ् :- कुंजी 1 को 4 बार दबाएं ।
- र :- कुंजी 9 को 2 बार दबाएं ।
- ि :- कुंजी 2 को 2 बार दबाएं ।
- य :- कुंजी 9 को 1 बार दबाएं ।

3) ज्ञानी

- ज :- कुंजी 5 को 3 बार दबाएं ।
- ् :- कुंजी 1 को 4 बार दबाएं ।
- ञ :- कुंजी 5 को 5 बार दबाएं ।
- । :- कुंजी 2 को 1 बार दबाएं ।
- न :- कुंजी 7 को 5 बार दबाएं ।
- ी :- कुंजी 2 को 3 बार दबाएं ।

मेनू ट्री

1. संदेश

- 1.1 मैसेज बनाएँ
- 1.2 इनबॉक्स
- 1.3 ड्राफ्ट्स
- 1.4 आउटबॉक्स
- 1.5 भेजे गए आइटम
- 1.6 सुरक्षित किए गए आइटम
- 1.7 प्रसारण संदेश
- 1.8 टेम्प्लेट
- 1.9 संदेश सेटिंग्स
- 1.10 एस.ओ.एस मैसेज
- 1.11 अनुसूची संदेश

2. संपर्क व्यक्ति

- 2.1 नया संपर्क जोड़ें

3. लॉग

- 3.1 SIM 1 कॉल लॉग
- 3.2 SIM 2 कॉल लॉग

4. सेटिंग

- 4.1 दोहरी SIM सेटिंग्स
- 4.2 प्रोफाइल
- 4.3 डिस्प्ले

4.4 कनेक्टिविटी

- 4.5 कॉल
- 4.6 फोन
- 4.7 नेटवर्क
- 4.8 सुरक्षा सेटअप
- 4.9 मूल सेटिंग्स रिस्टोर करें

5. गैलरी

- 5.1 मेरी छवियाँ
- 5.2 मेरी साउंड्स
- 5.3 मेरे वीडियोस
- 5.4 मेरा गेम और एप्लीकेशन्स
- 5.5 अन्य

6. मीडिया

- 6.1 इमेज व्यूअर
- 6.2 मीडिया प्लेयर
- 6.3 FM रेडियो
- 6.4 वॉइस रिकॉर्डर

7. आर्गनाइज़र

- 7.1 अलार्म क्लॉक
- 7.2 कैलेंडर
- 7.3 टु-डू लिस्ट
- 7.4 नोट्स

7.5 कैलकुलेटर

- 7.6 स्टॉपवॉच
- 7.7 परिवर्तक
- 7.8 विश्व समय
- 7.9 में जाएं
- 7.10 फाइल मैनेजर
- 7.11 SIM सेवाएँ

8. एप्लीकेशन्स

- 8.1 खेल और अनुप्रयोग
- 8.2 सेटिंग्स

9. वेब

- 9.1 होम
- 9.2 बुकमार्क
- 9.3 अंतिम वेब पता
- 9.4 सेटिंग
- 9.5 एड्रेस में जाएं
- 9.6 सुरक्षित किए गए पेज
- 9.7 ओपन फाइल
- 9.8 हाल के पृष्ठ

त्वरित सुविधा संदर्भ

यह अनुभाग आपके फ़ोन पर उपलब्ध सुविधाओं की संक्षिप्त जानकारी देता है।

संदेश मेनू 1

मैसेज बनाएँ

यह मेनू **SMS** (शार्ट मैसेज सर्विस) और **MMS** (मल्टीमीडिया मैसेज सर्विस) से संबंधित फ़ंक्शंस को शामिल करता है।

सुझाव: उपयोगकर्ता एक समय में कई संपर्कों को एसएमएस भेज सकते हैं। कई संपर्कों को एसएमएस भेजने के लिए विकल्प से 'को भेजें' चुनें, उसमें से 'फोन पुस्तिका से जोड़ें' विकल्प चुनने से संपर्कों की सूची खुल जाएगी। उपयोगकर्ता केवल 20 संपर्कों को संदेश भेज सकते हैं। उपयोगकर्ता समूह को एसएमएस भेज सकते हैं, समूह को एसएमएस भेजने के लिये 'प्राप्तकर्ता दर्ज करें' विकल्प चुने।

इनबॉक्स

जब आप संदेश प्राप्त करेंगे तो आपको सूचित किया जाएगा। वे इनबॉक्स में संग्रहीत किए जाएंगे।

सुझाव: इनबॉक्स में पाए गए संदेश का आसान एक्सेस अनुक्रमित विकल्पों के साथ हल किया जा सकता है। (प्रेषक, विषय, अपठित/पठित, संदेश प्रकार, संदेश आकार)

ड्राफ़्ट्स

आप अस्थायी रूप से संदेश को ड्राफ़्ट्स में सहेज सकते हैं।

आउटबॉक्स

यह न भेजे गए संदेशों या उन संदेशों हेतु जिन्हें आपने भेजा है, लेकिन उनका वितरण विफल हो गया है, का एक अस्थायी संग्रहण फ़ोल्डर है।

भेजे गए आइटम

संदेश भेजे जाने के बाद, पाठ संदेश या मल्टीमीडिया संदेश भेजे गए फ़ोल्डर में सहेजा जाता है।

सुरक्षित किए गए आइटम

आप अपने सहेजे गए संदेशों तक पहुँच प्राप्त कर सकते हैं।

संदेश मेनू 1 (जारी)

प्रसारण संदेश	यदि जानकारी सेवा संदेशों (प्रसारित संदेश) को प्राप्त करने के लिए चैनल्स को प्राप्त करना, अवरोधित करना, देखना या संपादित करना है तो प्रसारण संदेश चुनें. साथ ही जानकारी सेवा संदेशों के लिए भाषाएँ भी चुनें.
टेम्पलेट	सूची में पूर्व-निर्धारित संदेश हैं. आप टेम्पलेट संदेशों को देख सकते हैं और संपादित कर सकते हैं या नए संदेशों को बना सकते हैं.
संदेश सेटिंग्स	यह मेनू आपको नेटवर्क सेवा प्रदाता की सुविधाओं को सेट करने की अनुमति देता है.
एस.ओ.एस मैसेज	9 कुंजी को देर तक दबाकर पहले से निर्धारित नंबर पर (अधिकतम 3) कोई आपातकालीन संदेश भेजा जा सकता है. 9 कुंजी को देर तक दबाकर रखने पर, 'एस.ओ.एस मैसेज सेट करें?' पॉप अप आता है. 'हां' दबाएँ, फिर आवश्यक संदेश लिखें और उन 3 नंबरों को इनपुट करें, जिन्हें आप आपातकालीन मोड में संदेश भेजना चाहते हैं, सेव करें और हाँ दबाएँ.
अनुसूची संदेश	उपयोगकर्ता कोई अनुसूची संदेश कर सकते हैं, ताकि यह सेट की गई दिनांक और सेट किए गए समय पर पहले से निर्धारित नंबर/संपर्क को भेजा जा सके.

संपर्क व्यक्ति मेनू 2

आप फ़ोनबुक में संपर्क खोज सकते हैं.

नोट: आप जिस नाम को खोजना चाहते हैं, उसका पहला अक्षर डालने से तुरंत खोज उपलब्ध है.

नया संपर्क जोड़ें आप इस मेनू का प्रयोग कर फ़ोनबुक प्रविष्टियां जोड़ सकते हैं.

लॉग मेनू 3

कॉल लॉग

आप आउटगोइंग या इनकमिंग कॉल्स की सभी सूचियाँ देख सकते हैं।
सिम1 कॉल लॉग या सिम2 कॉल लॉग का चयन करें और फिर उसमें से निम्न का चयन करें।

- › **छूटी हुई कॉलें:** आप अनुत्तरित कॉल्स देख सकते हैं।
- › **प्राप्त कॉलें:** आप प्राप्त की गई कॉल्स देख सकते हैं।
- › **डायल किए गए नंबर्स:** आप आउटगोइंग कॉल नंबर्स को देख सकते हैं।
- › **कॉल अवधि:** आपको आपकी इनकमिंग और आउटगोइंग कॉल्स की अवधि देखने की अनुमति देता है। आप कॉल टाइम्स को भी रीसेट कर सकते हैं।
- › **SMS काउंटर:** यह अनुप्रयोग फोन में प्राप्त किए हुए और फोन से भेजे गए संदेशों की गिनती करता है।
- › **पैकेट डेटा काउंटर:** आप नेटवर्क पर स्थानांतरित डेटा की मात्रा को चेक कर सकते हैं।
- › **कॉल लागत:** अपने डायल किए गए नंबर्स पर लागू किए गए शुल्क और अपनी सभी प्राप्त और डायल की गई कॉल्स की अवधि देखें। आप लागत सेटिंग्स भी कर सकते हैं।

सेटिंग मेनू 4

दोहरी SIM सेटिंग्स

विकल्पों से चुनें कि आप क्या परिवर्तित करना चाहते हैं: दोहरी SIM ओपन / केवल SIM1 ओपन / केवल SIM2 ओपन / फ़्लाइट मोड।

युक्ति: दोहरी सिम एकल वार्तालाप: जब दोहरी सिम में से कोई एक WAP/JAVA/MMS/कॉल जैसे नेटवर्क के साथ क्रिया कर रहें हों, तो दूसरी सिम नेटवर्क संबंधित सेवा का उपयोग नहीं कर सकती।

सेटिंग मेनू 4 (जारी)

- प्रोफाइल** प्रोफाइल में, आप भिन्न ईवेंट्स, या वातावरणों के लिए फ़ोन टोन्स को समायोजित या कस्टोमाइज कर सकते हैं। सात प्रोफाइल पहले से ही सेट हैं सामान्य, सम्मेलन, बाहरी, भीतरी, मौन, हैडसेट और ब्लूटूथ।
- डिस्प्ले** आप फ़ोन प्रदर्शन के लिए सेटिंग्स बदल सकते हैं।
- कनेक्टिविटी** आप अन्य डिवाइस या नेटवर्क से कनेक्ट करने के लिए फ़ोन सेटअप कर सकते हैं।
ब्लूटूथ: आप ब्लूटूथ कनेक्शन पर सेटिंग समायोजित कर सकते हैं।
डाटा एकाउंट: आप डाटा एकाउंट सुची को प्रबंधित कर सकते हैं, जो की प्रोफाइल पर **WAP** और **MMS** स्थापित करने के लिए प्रयोग किया जाता है।
- कॉल** आप किसी कॉल के संगत मेनू को सेट कर सकते हैं।
सुझाव: ब्लैक लिस्ट सुविधा उपलब्ध करने के लिए उन्नत सेटिंग मेनू में जाये और ब्लैक लिस्ट चालु करें । ब्लैक लिस्ट मोड चालु करने के बाद जो नंबर आप ब्लैक लिस्ट में डालना चाहते हैं, उसे चुनें और संरक्षित करें । ब्लैक लिस्ट में संरक्षित किए गए नंबर से उपयोगकर्ता को कॉल प्राप्त नहीं होगी ।
- फ़ोन**
› **समय तथा दिनांक:** आप दिनांक और समय से संबंधित फंक्शंस सेट कर सकते हैं।
› **निर्धारित पावर चालू/बंद:** यह विकल्प आपको फ़ोन पावर को स्वचालित रूप से ऑन या ऑफ़ करने के लिए समय सेटअप करने की अनुमति देता है। एक बार आपके द्वारा समय सेट किए जाने के बाद, फ़ोन स्वचालित रूप से निर्दिष्ट समय पर पावर को ऑन करेगा। पावर ऑफ़ करने के विषय में, आपके द्वारा निर्दिष्ट समय से पहले फ़ोन आपसे पावर ऑफ़ करने के लिए पुष्टिकरण हेतु पूछेगा। आप 4 भिन्न समय तक समय निर्दिष्ट कर सकते हैं।

सेटिंग मेनू 4 (जारी)

- › **भाषा/लेखन भाषा:** आप अपने फ़ोन में प्रदर्शन पाठों के लिए भाषा बदल सकते हैं. यह बदलाव भाषा इनपुट मोड को भी प्रभावित करेगा.
- › **थीम्स:** आपको आपके फ़ोन प्रदर्शन की संपूर्ण दिखावट को बदलने की अनुमति देता है.
- › **अभिनंदन टेक्स्ट:** यह विकल्प आपको फ़ोन की पॉवर ऑन होने पर अभिनंदन टेक्स्ट को अनुकूलित करने की अनुमति देता है. आप चुन सकते हैं कि यदि आपको पॉवर ऑन होने पर अभिवादन पाठ ऑन या ऑफ़ चाहिए.
- › **समर्पित कुंजी:** उन हॉट कीज पर प्राथमिकताएँ बदलने की अनुमति देता है, जो वर्तमान में आपकी नेविगेशन कुंजियों (जब स्टैंडबाय मोड में हों) के लिए असाइन की गई हैं.
- › **दिनांक तथा समय का ऑटो अपडेट:** आपको फ़ोन को वर्तमान स्थानीय समय जोन के अनुसार स्वचालित रूप से समय और दिनांक को अपडेट करने पर सेट करने की अनुमति देता है.
(ऑटो अपडेट एक नेटवर्क डिपेंडेंट सुविधा है)
- › **UART सेटअप:** उपयोगकर्ता UART सेटअप से चयनित सिम कार्ड के लिए मोडेम उपयोग कर के पीसी में कार्य करने के लिए सक्षम हो पायेगा. (जैसे पीसी डायलअप, हाइपर टरमिनल उपयोग करके एटि कमांड). उपयोगकर्ता UART सेटअप से चयनित सिम कार्ड के लिए पीसी पर डायलअप बनाने के लिए सक्षम हो पाएगा. उदाहरण स्वरूप: अगर सिम1 चयनित है तो उपयोगकर्ता सिम चयन करके कनेक्शन बनाने के लिए सक्षम हो पाएगा.

सेटिंग मेनू 4 (जारी)

- फोन** › **विभिन्न सेटिंग्स:** आप प्रदर्शन स्क्रीन की चमक और समय को सेट कर सकते हैं.
- नेटवर्क** आप इस मेनू का उपयोग करके नेटवर्क और नेटवर्क सेटिंग्स का चयन करें को सेट कर सकते हैं. आप पसंदीदा सूचियों से कनेक्ट रहने के लिए, पसंदीदा नेटवर्क को भी जोड़ सकते हैं.
- सुरक्षा सेटअप** › **SIM1/SIM2 सुरक्षा सेटिंग:** यह मेनू आपको फोन की सुरक्षा को सेट करने की अनुमति देता है.
- › **फोन लॉक:** आप फोन के अनधिकृत उपयोग से बचने के लिए सुरक्षा कोड का उपयोग कर सकते हैं.
- › **ऑटो कुंजीपट लॉक:** आप कुछ समय बाद स्वचालित रूप से कीपैड को लॉक कर सकते हैं.
- › **पासवर्ड बदलें:** अपने फोन कोड को बदलने के लिए, पुराना कोड दर्ज करें फिर नया कोड सेट करें.
- › **चोरी-रोधी मोबाइल ट्रैकर:** इस फोन की ATMT सुविधा आपको आपके फोन के खो जाने पर या कहीं गलत जगह रखने पर आपके मोबाइल के लिए एक ट्रैकिंग सिस्टम क्षमता प्रदान करता है.
- मूल सेटिंग्स रिस्टोर करें** आप सभी फ़ैक्ट्री डिफॉल्ट्स प्रारंभ कर सकते हैं. इस फ़ंक्शन को सक्रिय करने के लिए आपको सुरक्षा कोड की आवश्यकता होती है. डिफॉल्ट कोड 0000 हैं.

गैलरी मेनू 5

- मेरी छवियाँ** छवि फ़ाइलों की सूची दिखाता है.
- मेरी साउंड्स** सहेजी गई ऑडियो फ़ाइलें सूची में प्रदर्शित करता हैं.
- मेरे वीडियोस** वीडियो फ़ाइलों की सूची को प्रदर्शित करता है.
- मेरा गेम और एप्लीकेशन्स** आप अपने फोन पर गेम्स और अनुप्रयोगों के शानदार संग्रह तक पहुंच प्राप्त कर सकते हैं.

गैलरी मेनू 5

अन्य जब आप ब्लूटूथ के माध्यम से किसी अनिर्धारित स्वरूप की फाइलें प्राप्त करते हैं, तो फाइलें इस फोल्डर में सहेजी जाती हैं।

मीडिया मेनू 6

इमेज व्यूअर आप सभी इमेज देख सकते हैं जो फोटोज में सेव हैं।
(गैलरी > मेरी छवियाँ > photos)

मीडिया प्लेयर प्लेयर आपको ऑडियो या वीडियो फाइल्स चलाने की अनुमति देता है। आप प्लेलिस्ट्स को भी प्रबंधित कर सकते हैं।

FM रेडियो आप अपने बाहरी इयरफोन के साथ या उसके बिना FM रेडियो का उपयोग कर सकते हैं। आप किसी भी समय अपना पसंदीदा रेडियो स्टेशन सुन सकते हैं।
नोट: आपको रेडियो सुनने और रेडियो के अच्छे सिग्नल प्राप्त करने के लिए, हैंड्सफ्री कनेक्टर में ईयर-माइक को डालना आवश्यक है।

वॉइस रिकॉर्डर आप वॉइस मेमो रिकॉर्ड कर सकते हैं।

आर्गनाइज़र मेनू 7

अलार्म क्लॉक एक निर्दिष्ट समय पर जाने के लिए आप अलार्म घड़ी को सेट कर सकते हैं।

आर्गनाइज़र मेनू 7 (जारी)

कैलेंडर	आप यहाँ चयनित दिनांक में कैलेंडर देख सकते हैं और ईवेंट्स जोड़ सकते हैं.
टु-डू लिस्ट	आप करने के लिए कार्यों को देख, संपादित और जोड़ सकते हैं.
नोट्स	आप नया मेमो जोड़ सकते हैं, सहेजे गए मेमोज को देख और व्यवस्थित कर सकते हैं.
केलकुलेटर	केलकुलेटर में मूलभूत गणितीय फ़ंक्शन: जोड़, घटा, गुणा और भाग होते हैं.
स्टॉपवॉच	यह विकल्प आपको स्टॉपवॉच फ़ंक्शन के उपयोग की अनुमति देता है.
परिवर्तक	यह किसी भी माप को इच्छित इकाई में कनवर्ट कर देता है. कई प्रकार हैं, जिन्हें इकाईयों में परिवर्तित किया जा सकता है: मुद्रा, लंबाई, भार.
विश्व समय	विश्व समय फ़ंक्शन दुनियाभर के मुख्य शहरों की समय जानकारी प्रदान करता है.
में जाएं	आप जिस मेनू को खोज रहे हैं, वहाँ तक जाने में यह आपकी मदद करता है. आप आइटम को यहाँ जाएँ के रूप में सेट कर सकते हैं.
फ़ाइल मैनेजर	यह फ़ंक्शन आपको आपकी आंतरिक फ़ोन मेमोरी और बाह्य मेमोरी कार्ड में सामग्री देखने की अनुमति देता है.
SIM सेवाएँ	आपके नेटवर्क सेवा प्रदाता द्वारा उपलब्ध कराए गए अतिरिक्त फ़ंक्शंस या अनुप्रयोगों को प्रदर्शित करता है.

एप्लीकेशन्स मेनू 8

खेल और अनुप्रयोग	आपका LG-A155 आपको आपके खाली समय में मनोरंजन के लिए पहले से लोड किया गए गेम्स के साथ आता है. यदि आप कोई भी अतिरिक्त गेम या अनुप्रयोग डाउनलोड करना चुनते हैं, तो वे इस फ़ोल्डर में सहेजे जाएँगे. मेनू दबाएँ और एप्लीकेशन्स का चयन करें. खेल और अनुप्रयोग चुनें.
------------------	---

वेब मेनू 9

होम	होम से कनेक्ट करता है. मुख पृष्ठ वह स्थल होगा जो सक्रिय किए गए प्रोफाइल में परिभाषित किया गया है.
बुकमार्क	बाद में आसान पहुँच के लिए यह मेनू आपको पसंदीदा वेब पृष्ठों के लिए URL को संग्रहीत करने की अनुमति देता है.
अंतिम वेब पता	जब आपने इंटरनेट से कनेक्ट किया हो, तो आप नवीनतम पृष्ठ देख सकते हैं.
सेटिंग	आप इंटरनेट सेवा से संबंधित प्रोफाइल और सुरक्षा सेट कर सकते हैं.
एड्रेस में जाएं	आप इच्छित साइट से सीधे कनेक्ट हो सकते हैं. कोई निर्दिष्ट URL दर्ज करने के बाद, साइट से कनेक्ट करने के लिए कनेक्शन को पूर्ण करने हेतु ठीक कुंजी दबाएँ.
सुरक्षित किए गए पेज	आपको आपके सहेजे गए वेब पृष्ठ देखने की अनुमति देता है.
ओपन फाइल	आप फोन में सहेजी गई निम्न फाइलों को खोल सकते हैं. WML, XHTML, HTM, HTML.
हाल के पृष्ठ	यह मेनू हाल ही में ब्राउज किए गए पृष्ठों के इतिहास को दिखाता है.

आपके कंप्यूटर पर LG PC सूट स्थापित करना

1. www.lgapplication.com पर जाएँ और अपना देश चुनें.
2. Manual & Software Download का चयन करें और Download LG Mobile Support Tool to PC, डाउनलोड करने के लिए Download क्लिक करें.
3. आपके PC में LG PC सूट इंस्टॉलर विजार्ड पूर्ण करने के लिए स्क्रीन पर दिए गए निर्देशों का पालन करें.

❑ सुरक्षित और प्रभावी उपयोग के लिए दिशानिर्देश

कृपया इन सरल दिशानिर्देशों को पढ़ें। इन दिशानिर्देशों का पालन न करना खतरनाक या गैरकानूनी हो सकता है। अन्य विस्तृत जानकारी इस मैन्युअल में दी गई है।

चेतावनी

- › अपनी सुरक्षा के लिए, केवल निर्दिष्ट वास्तविक बैटरियां और चार्जर्स ही उपयोग करें।
- › जहाँ कहीं भी विशेष विनियमों के अनुसार वांछित हो, वहाँ फ़ोन बंद कर दें, जैसे किसी अस्पताल में, जहाँ ये मेडिकल उपकरणों को प्रभावित कर सकता है।
- › बैटरियां संगत कानून के अनुसार नष्ट की जानी चाहिए।

उत्पाद की देखभाल और रखरखाव

चेतावनी! इस विशेष फ़ोन मॉडल के साथ केवल बताई गई बैटरियां, चार्जर्स और सहायक उपकरणों का ही उपयोग करें। किसी भी दूसरे प्रकार का उपयोग करने पर फ़ोन पर लागू होने वाले अनुमोदन या वॉरंटी अमान्य हो सकते हैं और यह खतरनाक हो सकता है।

- › इस यूनिट को डिसअसेंबल न करें। सुधारने की आवश्यकता होने पर इसे योग्य सेवा तकनीशियन के पास ले जाएँ।
LG के विकल्प पर वॉरंटी के अंतर्गत किए जाने वाले सुधारों में, नए या सुधार किए गए पुर्जों या बोर्ड्स का प्रतिस्थापन शामिल है, बशर्ते उनकी क्रियात्मकता प्रतिस्थापित किए जाने वाले पुर्जों के बराबर हो।
- › यूनिट को गर्मी के स्रोतों जैसे रेडिएटर्स या कुकर से दूर रखना चाहिए।
- › यूनिट के बाहरी हिस्से को साफ करने के लिए सूखे कपड़े का उपयोग करें। (किसी घोल का उपयोग न करें।)
- › फ़ोन को क्रेडिट कार्ड्स या ट्रांसपोर्ट टिकटों के पास न रखें यह चुंबकीय पट्टियों पर अंकित जानकारी को प्रभावित कर सकता है।

❑ सुरक्षित और प्रभावी उपयोग के लिए दिशानिर्देश (जारी)

इलेक्ट्रॉनिक डिवाइसेज

सभी मोबाइल फोन में व्यवधान आ सकता है, जो कार्यक्षमता को प्रभावित कर सकता है.

- › बिना अनुमति के अपने मोबाइल फोन का उपयोग मेडिकल उपकरण के पास न करें. फोन को किसी पेसमेकर, जैसे दिल के पास वाले पॉकेट में रखने से बचें.

सड़क सुरक्षा

जिन क्षेत्रों में आप गाड़ी चलाते हैं, वहां मोबाइल फोन के उपयोग से संबंधित कानूनों और विनियमों की जानकारी ले लें.

- › वाहन चलाते समय हैंड-हेल्ड फोन का उपयोग न करें.
- › यदि उपलब्ध हो, तो हैंड्स-फ्री किट का उपयोग करें.
- › यदि वाहन चलाते समय आवश्यक हो, तो कॉल करने या उत्तर देने से पहले वाहन को सड़क के किनारे लगाएँ.

विस्फोटक क्षेत्र

फोन का उपयोग ऐसे स्थान पर न करें जहाँ विस्फोट हो रहे हों. प्रतिबंधों पर ध्यान दें, और विनियमों या नियमों का पालन करें.

संभावित रूप से विस्फोट वाले वातावरण

फोन का उपयोग ईंधन भरने के स्थान पर न करें. ईंधन या रसायनों के पास उपयोग न करें.

एयरक्रॉफ्ट में

वायरलेस डिवाइस से एयरक्रॉफ्ट में व्यवधान उत्पन्न हो सकता है.

- › किसी एयरक्रॉफ्ट में जाने से पहले अपना मोबाइल फोन बंद कर दें.

बच्चे

फोन को बच्चों की पहुँच से दूर सुरक्षित स्थान पर रखें. इसमें ऐसे कई भाग होते हैं, जिन्हें हटाने पर चोक होने का खतरा हो सकता है.

■ सुरक्षित और प्रभावी उपयोग के लिए दिशानिर्देश (जारी)

आपातकालीन कॉल्स

सभी सेल्युलर नेटवर्क्स के अंतर्गत हो सकता है आपातकालीन कॉल्स उपलब्ध न हों। इसलिए, आपको आपातकालीन कॉल्स के लिए केवल फ़ोन पर ही निर्भर नहीं रहना चाहिए। अपने स्थानीय सेवा प्रदाता से इसकी जानकारी लें।

बैटरी जानकारी और देखभाल

- › बैटरी रिचार्ज करने के पहले आपको उसे पूरी तरह डिस्चार्ज करने की आवश्यकता नहीं है। अन्य बैटरी सिस्टम्स के विपरीत, ऐसा कोई मेमोरी प्रभाव नहीं है जिससे बैटरी के प्रदर्शन पर असर पड़ता है।
- › केवल **LG** बैटरियों और चार्जर्स का उपयोग करें। **LG** चार्जर्स को बैटरी की आयु अधिकतम करने के लिए डिज़ाइन किया गया है।
- › बैटरी पैक को डिसअसेंबल न करें या उसे शॉर्ट-सर्किट से बचाएं।
- › बैटरी का प्रदर्शन अपेक्षानुसार न रहने पर उसे बदल दें। बैटरी को प्रतिस्थापित करने की आवश्यकता पड़ने से पहले, बैटरी पैक को सैकड़ों बार रीचार्ज किया जा सकता है।
- › बैटरी चार्जर को सीधे धूप में न रखें या अधिक नमी वाली जगहों पर जैसे कि बाथरूम में इसका उपयोग न करें।
- › यदि बैटरी को एक गलत प्रकार से प्रतिस्थापित किया जाए, तो विस्फोट होने का खतरा है।
- › उपयोग की गई बैटरियों का निपटान, निर्माता के निर्देशों के अनुसार ही करें।

❑ सुरक्षित और प्रभावी उपयोग के लिए दिशानिर्देश (जारी)

रेडियो फ्रीक्वेंसी ऊर्जा के संपर्क में आना

रेडियो तरंग एक्सपोजर और स्पेसिफिक एब्जॉर्प्शन रेट (SAR) की जानकारी

यह मोबाइल फोन मॉडल LG-A155 रेडियो तरंगों के प्रति एक्सपोजर के लिए उपयुक्त सुरक्षा आवश्यकताओं के संगत डिजाइन किया गया है। यहाँ आवश्यकता वैज्ञानिक निर्देशों पर आधारित है, जिसमें आयु और स्वास्थ्य पर ध्यान दिए बिना, सभी लोगों की सुरक्षा को सुनिश्चित करने के लिए डिजाइन किए गए सुरक्षा उपाय शामिल हैं।

- › रेडियो तरंग एक्सपोजर दिशानिर्देश, स्पेसिफिक अब्सॉर्प्शन रेट या SAR कहलाने वाली एक मापन इकाई का उपयोग करते हैं। फोन पर SAR के परीक्षण मानक विधियों के उपयोग से किए जाते हैं, इसके लिए उपयोग होने वाले सभी फ्रीक्वेंसी बैंड्स में फोन के उच्चतम प्रमाणित पावर स्तर पर संप्रेषण किया जाता है।
- › वैसे तो विभिन्न LG फोन मॉडल के SAR स्तर में भिन्नता हो सकती है, किंतु उन सभी को रेडियो तरंगों के प्रति एक्सपोजर के लिए संबंधित दिशानिर्देशों को पूरा करने के लिए बनाया गया है।
- › गैर-आयोनाइजिंग रेडिएशन सुरक्षा पर अंतर्राष्ट्रीय आयोग (ICNIRP) द्वारा अनुशंसित SAR सीमा दस (10) ग्राम टिशू पर औसतन 2वॉट/किग्रा है।
- › DASY4 द्वारा परिक्षित, कान के पास उपयोग के लिए इस मॉडल फोन का उच्चतम SAR मान 1.19 W/kg (10ग्राम) है और जब शरीर पर पहना जाए तो 1.19 W/kg (10ग्राम) है।
- › इलेक्ट्रिकल एंड इलेक्ट्रॉनिक्स इंजिनियर्स संस्थान (IEEE) द्वारा अनुशंसित SAR सीमा को अपनाने वाले देशों/क्षेत्रों के निवासियों के लिए SAR डेटा जानकारी एक (1) ग्राम टिशू पर औसतन 1.6 वॉट/किग्रा।

समस्या निवारण

समस्या	संभावित हल
टेलीफोन चालू नहीं किया जा सकता	कृपया बैटरी निकालकर फिर से लगाएँ. उसके बाद फ़ोन की पावर चालू करने के लिए पावर चालू कुंजी दबाएं.
बैटरी खाली	बैटरी चार्ज करें. प्रदर्शन पर चार्जिंग संकेतक जाँचें.
बैटरी ठीक से चार्ज नहीं होती है या कभी-कभी फ़ोन स्वयं बंद हो जाता है	फ़ोन और बैटरी पर चार्जिंग की सतहों को साफ़ नर्म कपड़े से पोछें.
बैटरी का उपयोग समय कम हो जाता है	यदि बैटरी का समय कम है, तो ऐसा उपयोगकर्ता वातावरण, अधिक कॉल्स या कमजोर सिग्नल्स के कारण हो सकता है.
चार्जिंग त्रुटि—कृत्यापमान सीमा से अधिक है	सुनिश्चित करें कि परिवेशी तापमान ठीक है, कुछ देर प्रतीक्षा करें, और तब पुनः चार्ज करें.
चार्जिंग त्रुटि—गलत चार्जर	केवल मूल LG सहायक सामग्री का उपयोग करें.
चार्जिंग त्रुटि—बैटरी खराब है	बैटरी बदलें.
चार्जिंग त्रुटि—चार्जिंग के समय कोई बैटरी चिह्न नहीं दिखाई देता	बैटरी खाली है या बहुत समय से उपयोग नहीं की गई है. स्क्रीन पर बैटरी चिह्न दिखाई देने में कुछ समय लग सकता है.
फ़ोन कोड या पासवर्ड भूल गए हैं	डिफ़ॉल्ट फ़ोन कोड "0000" है.

समस्या निवारण (जारी)

समस्या	संभावित हल
PUK दर्ज करें	पिन कोड लगातार तीन बार गलत दर्ज किया गया है, और फ़ोन अब अवरोधित हो गया है। आपके सेवा प्रदाता द्वारा दिया गया PUK दर्ज करें।
नेटवर्क गुम	हो सकता है कि आप कमजोर सिग्नल क्षेत्र में हों। वहाँ से हटें और फिर से प्रयास करें। आप ऐसे विकल्प का उपयोग करने का प्रयास कर रहे हैं जिसके लिए आपने अपने सेवा प्रदाता से सदस्यता नहीं ली है। आगे की जानकारी के लिए अपने सेवा प्रदाता से संपर्क करें।
आपने एक नंबर दर्ज किया है किंतु उसे डायल नहीं किया गया था	सुनिश्चित करें कि आपने टॉक/हाँ कुंजी दबाई है। सुनिश्चित करें कि आप सही नेटवर्क सेवा तक पहुँचे हैं। सुनिश्चित करें कि आपने कोई जावक कॉल रोधन विकल्प नहीं सेट किया है। सुनिश्चित करें कि आपने क्षेत्र कोड दर्ज कर दिया है।
आपका संवाददाता आप तक नहीं पहुँच सकता	सुनिश्चित करें कि आपका फ़ोन चालू है। टॉक/हाँ कुंजी को एक सेकेंड से अधिक देर तक दबाएँ। सुनिश्चित करें कि आप नेटवर्क सेवा का उपयोग कर रहे हैं। सुनिश्चित करें कि आपने कोई आवक कॉल रोधन विकल्प नहीं सेट किया है।
आपका संवाददाता आपकी आवाज नहीं सुन सकता	सुनिश्चित करें कि आपने लाउडस्पीकर बंद कर दिया है। सुनिश्चित करें कि आपने अपना फ़ोन मुँह के पास रखा है। माइक्रोफ़ोन, फ़ोन के नीचे स्थित है।

❑ समस्या निवारण (जारी)

समस्या	संभावित हल
कॉल की वॉइस क्वालिटी बहुत खराब है	डिसप्ले पर सिग्नल शक्ति संकेतक को जाँचें. पट्टियों की संख्या सिग्नल क्षमता दर्शाती है. यदि आप किसी बिल्डिंग में हैं तो फ़ोन को थोड़ा घुमाकर या खिड़की के पास ले जाकर प्रयास करें.
जब आप किसी संपर्क को रीकॉल करते हैं, तो कोई नंबर डायल नहीं किया जाता	नंबर सही तरह से संग्रहीत किया गया है, यह सुनिश्चित करने के लिए फ़ोनबुक खोज सुविधा का उपयोग करें. यदि आवश्यकता हो, तो नंबर फिर से सहेजें.
ब्राउजर का उपयोग नहीं कर सकता	आपकी सदस्यता में डेटा क्षमता शामिल नहीं है. आपको सेवा सक्षम करने के लिए अपने सेवा प्रदाता से संपर्क करना होगा.
यदि उपरोक्त दिशानिर्देशों से आपकी समस्या हल करने में मदद नहीं मिलती है	आपके मोबाइल फ़ोन का मॉडल नंबर और समस्या का स्पष्ट वर्णन नोट कर लें. मदद के लिए अपने फ़ोन डीलर या LG सेवा केंद्र से संपर्क करें.

सहायक उपकरण

सहायक उपकरण भिन्न क्षेत्रों में भिन्न हो सकते हैं कृपया अधिक पूछताछ के लिए हमारे क्षेत्रीय सेवा कंपनी एजेंट से संपर्क करें.

मानक बैटरी



ट्रैवल एडॉप्टर



हेडसेट



नोट

- › हमेशा प्रामाणिक **LG** सहायक उपकरणों का उपयोग करें.
- › ऐसा नहीं करने पर आपकी वॉरंटी अमान्य हो सकती है.

तकनीकी डेटा

सामान्य

- › उत्पाद नाम : LG-A155
- › सिस्टम : GSM 850 / E-GSM 900 /
DCS 1800 / PCS 1900

परिवेश का तापमान

- › अधिकतम. : 55°C (डिस्चार्जिंग)
45°C (चार्जिंग)
- › न्यूनतम : 10°C

Declaration of Conformity		 LG Electronics
Suppliers Details		
Name	LG Electronics Inc	
Address	LG Electronics Inc. LG Twin Towers 20, Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721	
Product Details		
Product Name	GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad band Terminal Equipment	
Model Name	LG-A155	
Trade Name	LG	
CE 0168		
Applicable Standards Details		
R&TTE Directive 1999/5/EC		
EN 301 489-01 V1.8.1, EN 301 489-07 V1.3.1, EN 301 489-17 V2.1.1 EN 301 511 V9.0.2 EN 50360:2001, EN62209-1:2006 EN 60950-1:2001 EN 300 328 V1.7.1		
Supplementary Information		
The conformity to above standards is verified by the following Notified Body(BABT) BABT, Forsyth House-Churchfield Road - Walton-on-ThamesSurrey - KT12 2TD , United Kingdom Notified Body Identification Number : 0168		
Declaration		
I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives	Name Doo Haeng Lee / Director	Issued Date 12. October. 2010
LG Electronics Logistics and Services B.V. Veluwezoom 15, 1327 AE Almere, The Netherlands	 Signature of representative	



CHOLAMANDALAM MS GENERAL INSURANCE CO. LTD.
2nd Floor, 9B, DLF Cyber City, Phase-III,
Gurgaon - 122002

TO

CHOLAMANDALAM MS GENERAL
INSURANCE CO. LTD.

DATE...../...../.....

2nd Floor, 9B, DLF Cyber City,
Phase-III, Gurgaon - 122002.
Haryana

Dear Sir,

RE: Loss of mobile phone no.:

MAKEMODEL

This is to inform that my mobile phone has been lost due to theft on
.....at.....FIR/DD entry has been lodged
with Police Station. I am enclosing the Claim
Form cum Bill along with required documents for settlement of the claims.

Thanking you

Yours Sincerely,

Signature of the Insured

Name

CLAIM FORM CUM CLAIM BILL

To be filled in by the ultimate consumer

Name

Present Address

Tel. No.

Make & Model of the Handset

Invoice No. Date of Purchase

Dealer Name

Address

Tel. No.

IMEI No.

Date of Theft Time

Place of Theft

Details of Theft

FIR No./DD No. Date

Police Station

Amount Claimed

Block the SIM Card within 3 days YES ☐ NO ☐

DATE

PLACE

SIGNATURE OF CUSTOMER

TERMS AND CONDITIONS:

POLICY COVERAGE

1. Theft coverage of LG GSM HANDSET for one year from the date of purchase/invoice only. No other loss covered.
2. Offer applicable on all purchases made from 7th April 2010 to 6th April 2011 under Policy No. **PBG-00016391-000-00** Dated 07/04/2010
3. Only theft registered under section 379 IPC or theft reported under Daily Dairy with Police FIR is covered.
4. Reimbursement will be subject to following depreciation/ deduction on the invoice value from date of purchase:

Handset upto 3 months old	-10%
More than 3 months upto 6 months	-15%
More than 6 months upto 9 months	-25%
More than 9 months upto 12 months	-35%

CLAIM PROCESSING DOCUMENTS

In the event of handset loss, the buyer should follow the understated procedure:

- a) (i) Lodge FIR under Section 379 IPC or theft to be entered in Daily Dairy with the Police Station in whose jurisdiction the theft occurred within 24 hours of occurrence of the same.
- (ii) Block the SIM Card with your service provider within 3 days.
- (iii) Send information to the insurance company within 7 days of the loss.
- b) Documents required:
 - (i) Original Invoice & Cash Memo.
 - (ii) Original certified copy of DD/FIR u/s 379 by the police authority.
 - (iii) Translation of vernacular documents in English/Hindi.
 - (iv) Complete claim Form cum Bill and Discharge Voucher.

These documents should be sent to the Policy Issuing Office within 7 days of the loss by regd. post/courier. All document to be submitted in English/Hindi language. The company reserves the right to call for any other necessary document in addition to the documents listed above.

Subject to all the conditions being fulfilled, claim will be settled within 15 days of our receipt of the above documents.

Deduction of Rs. 350/- will be applicable towards accessories.

Note: In case the handset cost is more than Rs. 20,000/-, a survey is required. Contact nearest office of Cholamandalam MS General Insurance Co. Ltd. for survey.

For any future queries assistance related to the policy exclusion and claim settlement you may write to Cholamandalam MS General Insurance Co. Ltd. 2nd Floor, 9B, DLF Cyber City, Phase-III, Gurgaon - 122002. Tel. No. 1800-200-5544, Fax No. 0124-30051-99, e-mail id : customercare@cholams.murugappa.com



DISCHARGE VOUCHER

Received from Cholamandalam MS General Insurance Co. Ltd. under Policy No..... in full and final discharge of our claim, the sum of (in words) Rs.

Signature of Insured /Customer
across revenue stamp

Affix Re.1 revenue stamp

Date:

Place:

Customer Information Center

For any query related to the after sales service and customer support please contact us at below details

 **LG**

24 x 7 CALL CENTER OPERATIONS

 **1800-180-9999**
CALL (Toll Free)

 **5757554**
SMS (Send SMS)

 **www.lgindia.com**
lgservice@lgindia.com



