



LG

Life's Good

繁體中文
簡體中文
ENGLISH

使用手冊

GD550



C€0168

P/N : MMBB0379405 (1.0) G

www.lg.com

Bluetooth QD ID B016313

GD550 使用手冊 - 繁體中文

此手冊中的部份內容可能會因手機程式之改良或不同網絡商提供的服務而令實際情況有所不同,這並不會另行通知。

恭喜您購買了 LG 先進輕巧的 GD550 手機，本手機設計採用最新的數碼流動通訊科技。



了解您的手機

電源鍵 
開啓/關閉手機。

主屏幕

導覽鍵

確定鍵
選擇功能表選項
並確認操作。


通話鍵 
撥打電話號碼及接聽
來電。

軟鍵
這些軟鍵會執行
其正上方顯示
的文字所指示的
功能

結束鍵 
結束或拒接通
話。使用此功
能表時將返回至
桌面。

清除鍵



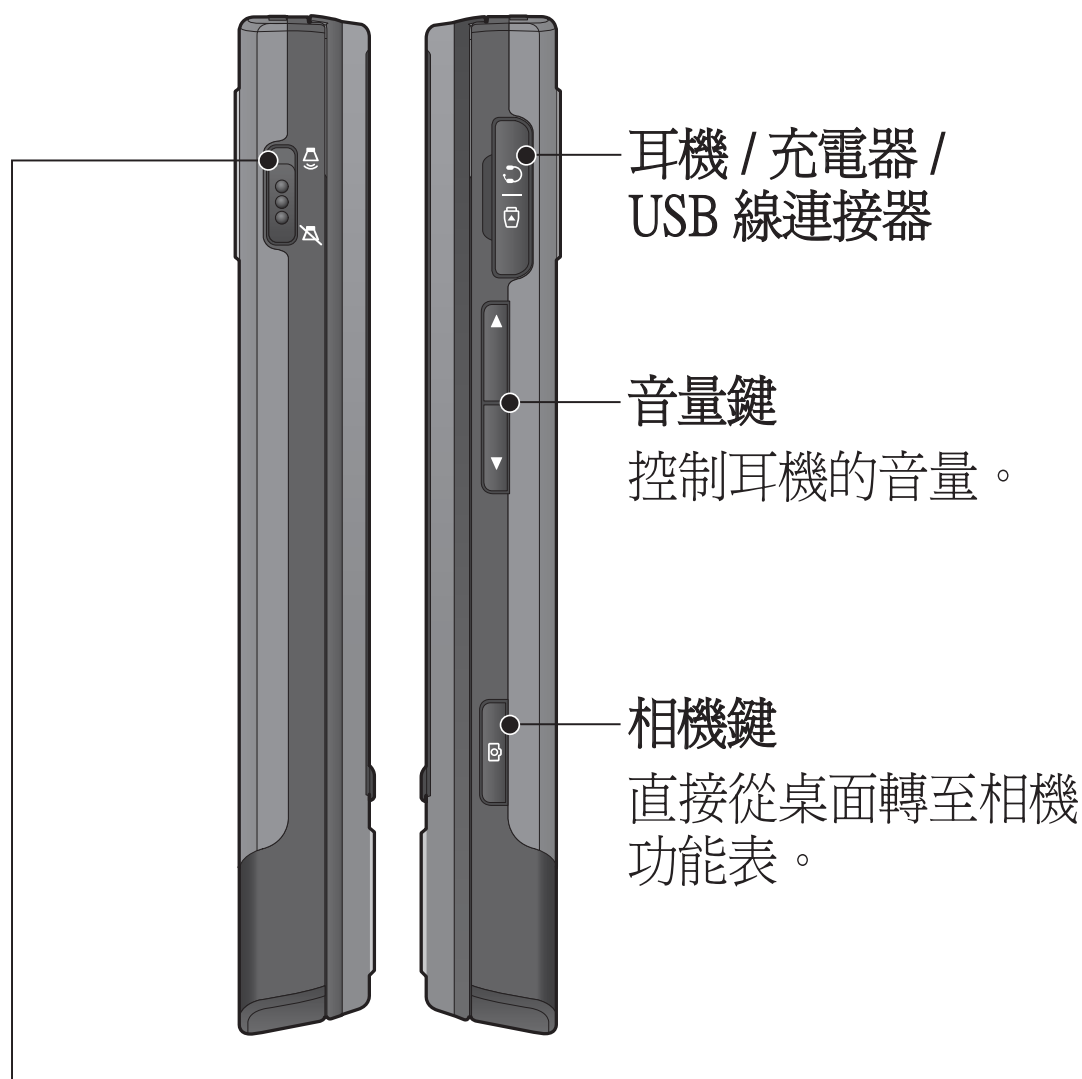

情景模式切換

可以向上和向下滑動該開關來開啓或關閉任何屏幕的聲音，包括鎖定畫面中的來電、音樂、鬧鐘鈴聲等。

此開關僅適用於聲音。如果想要更改震動設定，轉至**更多 > 設定 > 提示音 > 通話與訊息**。預設情況下，**震動提示**設定為開啓。

安裝智能咭和為電池充電

安裝智能咭


申請手機網絡後，您將獲得一張智能咭，當中有申請的詳細資料，如 PIN 碼、各種可選服務和其他內容。

重要資訊！

由於智能咭容易因刮痕或彎曲而損壞，因此在使用、插入或取出智能咭時要加倍小心。將所有智能咭放置在兒童無法觸及的地方。

插圖

- 1 取下電池蓋
- 2 取下電池
- 3 插入智能咭
- 4 插入電池
- 5 裝回電池蓋
- 6 為電池充電

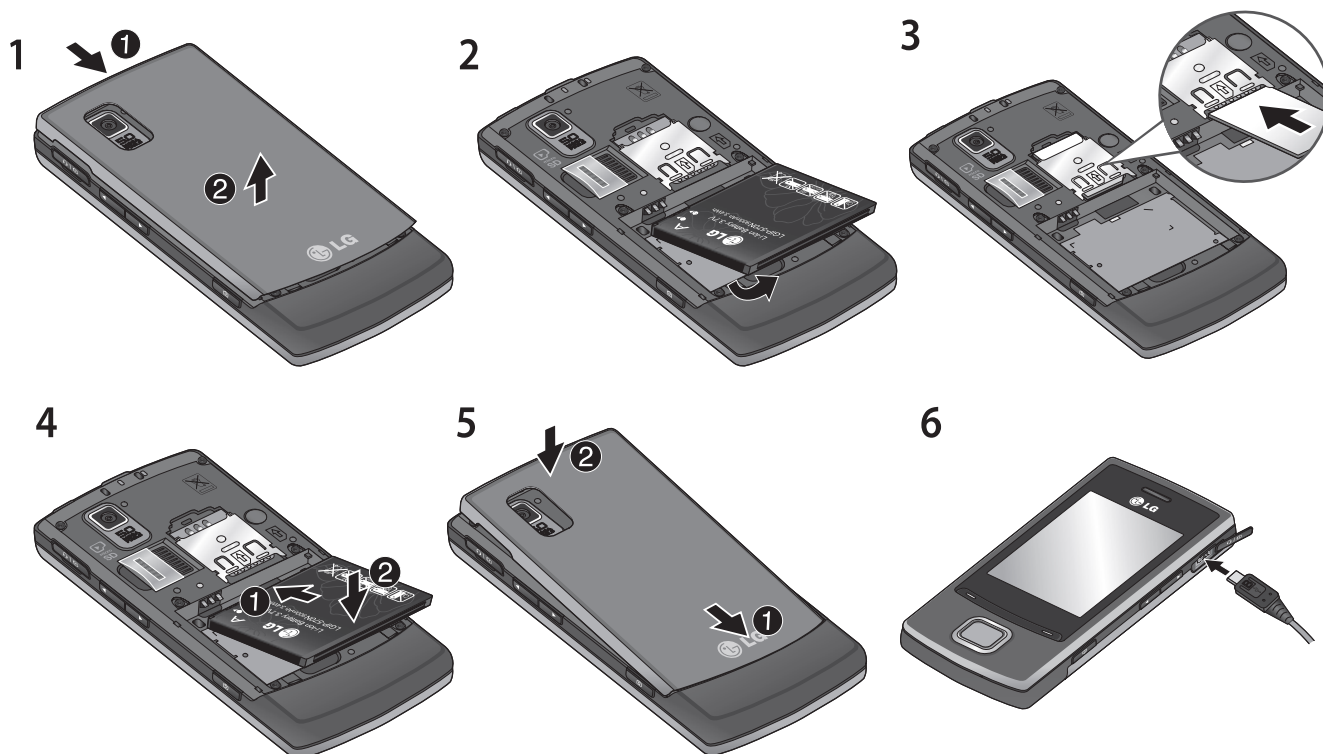

警告：手機開機時，不要取下電池，因為這樣可能會損壞手機。


桌面

GD550 手機有一個帶旋轉檢視的簡單易用的桌面，能夠讓您將功能表從一側移動至另一側。

在桌面的上側有五個點。每個點均表示一個不同的功能表，您可以透過按左右導覽鍵在它們中間移動。

可以選擇的功能表數量

凸顯的點表示當前的位置。

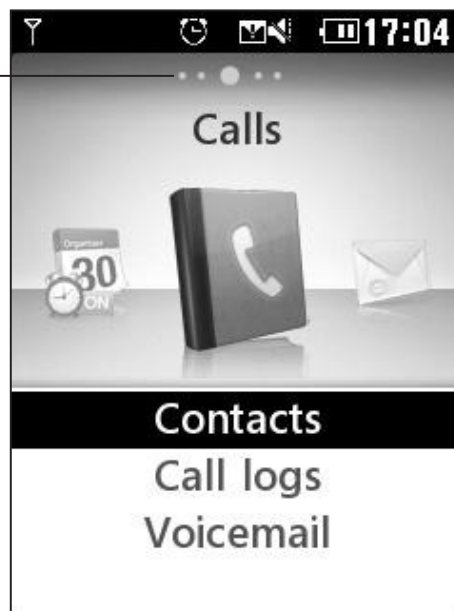

主功能表圖示

使用左導覽鍵或右導覽鍵在主功能表之間移動。

對應的子功能表

使用上導覽鍵或下導覽鍵來搜尋子功能表。

桌面總是以**通話**功能表為開始，您可以從此處向右或向左進行移動。

在**通訊錄**、**通話記錄**和**訊息匣**功能表中，您可以使用此旋轉檢視。

提示！ 如果在**通訊錄**、**通話記錄**和**訊息匣**功能表中輸入字母或數字，將會搜尋相應的結果。

鎖定畫面

合上手機蓋時，通常都將會終止活動應用程式並顯示鎖定畫面。

在合上手機蓋後設定活動應用程式

- 1 在桌面上使用左導覽鍵或右導覽鍵選擇**更多**，然後選擇**設定**。
- 2 選擇**裝置**，然後選擇**關閉滑蓋設定**。
- 3 按「確定」鍵以標記您不想在合上手機蓋時終止的應用程式。

設定鎖定畫面

- 1 在桌面上使用左導覽鍵或右導覽鍵選擇**更多**，然後選擇**設定**。
- 2 選擇**屏幕**，然後選擇**鎖定畫面**。
- 3 您可以透過按左導覽鍵或右導覽鍵從預設圖像，或按屏幕左下部的**專輯**，從相片專輯中選擇牆紙圖

像。此外，也可以更改鎖定畫面的時鐘式樣。

提示！ 合上手機蓋時，將會終止正在使用的功能表並顯示鎖定畫面。但是，如果您正在聆聽音樂或收聽 FM 收音機或檢視影片，即使合上手機蓋，也不會終止這些應用程式。您可以在設定 > 裝置 > 關閉滑蓋設定中，更改此功能的設定。可供選擇的選項有：通話、相機、影片播放器、音樂播放機。

通話

撥打電話

- 1 使用鍵盤輸入號碼。要刪除數字，請按 。
- 2 按  開始通話。
- 3 要結束通話，請按 。

提示！ 要在撥打國際電話時輸入「+」，請按住 0。

提示！ 您可以透過在桌面上從任何功能表輸入數字轉至撥號屏幕。

使用聯絡人清單撥打電話

- 1 從桌面選擇**通訊錄**。
- 2 使用鍵盤輸入想要通話的聯絡人姓名或聯絡人所屬群組名稱的首字母。例如，要撥打名為 **Office** 的電話，請連接按三次「6」，選擇首字母「O」。您可以按鍵盤上的  按鈕，將輸入模式從字母數字模式更改為數字模式，或從數字模式更改為字母數字模式。
- 3 從**選項**中選擇**通話**，或按  開始通話。

接聽來電和拒接來電

手機響鈴後，按  鍵接聽來電。

要使響鈴中的手機靜音，只需將**情景模式**切換向下滑動至關閉位置。如果在開會時忘記將情景模式更改為**靜音**，此功能將派上用場。

按  或使用右導覽鍵選擇**拒絕**以拒接來電。

提示！您可以在轉至**更多 > 設定 > 提示音 > 通話與訊息 > 震動提示**後，將震動提示設定為**開啓**。

使用喇叭

在通話中或撥打電話時，可以選擇**啓用喇叭**來啓用喇叭，啓用喇叭後可以在免提模式中輕鬆使用手機。（當有來電時，您可以選擇**接聽至喇叭**來接聽來電。）

如果已啓動喇叭，可以選擇**停用喇叭**以恢復正常的手機通話模式。

快速撥號

您可以為常撥聯絡人指定一個快速撥號號碼。要指定快速撥號，請轉至**通訊錄 > 選項 > 設定 > 快速撥號**。

您可以在屏幕上使用旋轉檢視，為儲存在手機上的所有聯絡人指定一個號碼。快速撥號 1 已設定為留言訊息，無法更改。

您可以最多指定 8（編號從 2 至 9）個快速撥號。

一旦指定快速撥號，您可以透過按住快速撥號號碼開始通話。

提示！ 按住  至  鍵時，如果指定的快速撥號號碼為空，則您可以直接指定快速撥號號碼。

示在聯絡人圖像的下方。如果輸入聯絡人的首字母，則該聯絡人的所有通話記錄都將會合併為一項。

您可以使用下導覽鍵檢視每位聯絡人的所有詳細記錄，包括時間和通話時間。

檢視通話記錄

從桌面轉至**通話**，然後選擇**通話記錄**。

您可以使用旋轉檢視來檢查未接來電、已接來電和已撥電話的通話記錄。也可以使用右導覽鍵來檢視先前的通話記錄。

如果手機未儲存該號碼，也可以透過輸入聯絡人姓名的首字母或電話號碼直接轉至所需聯絡人的通話記錄。

相同聯絡人的持續通話記錄將會顯示為一個記錄，且該聯絡人的未接來電、已接來電或已撥電話的數量將會顯

通訊錄

搜尋通訊錄

- 1 從桌面轉至**通話**。
- 2 選擇**通訊錄**。
- 3 按右導覽鍵以字母順序搜尋聯絡人，或輸入聯絡人姓名的首字母可直接找到。

如果聯絡人擁有的詳細資訊（如電話號碼、電子郵件地址等）條目超過 3 項，則可以按下導覽鍵來檢視下一項。

提示！ 如果想要將聯絡人清單作為列表（而非旋轉檢視）進行檢視，轉至**選項 > 設定 > 顯示設定**，然後在聯絡人屏幕將**通訊錄圖像**設定為**關閉**。

建立本機號碼咭

此選項將會顯示您的所有相關資訊。您可以在此處更改名稱和提示資訊，如**電子郵件**、**職位**和**備忘錄**等。

- 1 從桌面轉至**通話**。

- 2 選擇**通訊錄**。

- 3 按左導覽鍵至功能表名稱。這是預設的名稱。如果您按新增並提供新名稱，則將會顯示該名稱（而不是功能表）。

- 4 按「儲存」儲存本機號碼。

新增聯絡人

- 1 從桌面轉至**通話**。

- 2 選擇**通訊錄**。

- 3 按左導覽鍵至「新增通訊錄」並按「選擇」來新加通訊錄。您也可在選項選擇「新增通訊錄」。

- 4 選擇智能咭或內部記憶體儲存通訊錄，以及是否新增名字和姓氏。您可以透過按鍵盤上的  按鈕來更改輸入模式（如大/小寫或數字）。

- 5 聯絡人圖像預設為隨機指定，您可以更改聯絡人的圖片。如果想要從指定列表中選擇圖片，按右導覽鍵。按左導覽鍵一次可從相片專輯中選擇，按左導覽鍵多次可拍攝圖片並直接使用圖片。如果選擇了特大尺寸的聯絡人圖像，可以進入**剪裁**屏幕，根據需要剪裁圖像，然後將圖像設定為聯絡人圖像。

提示！ 當您從桌面拍照並在「設定」功能表中將圖像大小設定為**通訊錄**時，能夠獲得最大尺寸的聯絡人圖片。

- 6 儲存電話號碼。
當您新增聯絡人或新群組時，屏幕上的點將會逐個增加。
- 7 選擇 + **更多**，如果您需要其他資訊（如**電子郵件**、**鈴聲**或**主頁**等）的話。

提示！ 如果想要儲存聯絡人的電子郵件地址，可以透過選擇**更多**功能表中的**電子郵件**，以及按屏幕左下部的**選項**並從列表中選擇一個來輕鬆新增電子郵件地址結尾。提供的選項有：**@hotmail.com**、**@msn.com**、**@yahoo.com**、**@gmail.com**。

新增聯絡人至群組

您可以按群組來儲存和管理通訊錄（如同事和家人）。

要新增群組，按通訊錄功能表中的**左軟鍵**轉至選項並選擇**新群組**。您可以選擇是否將群組新增至**內部記憶體**或**智能咭**，以及是否命名群組並設定群組的鈴聲。

選擇屏幕右下部的**儲存**後，屏幕上將會彈出提示訊息要求您新增成員。您可以按此訊息中的「**確定**」鍵，直接將成員新增至群組。也可以使用右導覽鍵或左導覽鍵來搜尋聯絡人清單。

訊息

GD550 手機具備與 SMS（文字訊息服務）、MMS（多媒體訊息服務）、電子郵件及網絡服務訊息相關的功能。

檢視訊息

- 1 從桌面轉至訊息。
- 2 選擇訊息匣。
- 3 訊息將會顯示為旋轉檢視。首先將會在下方顯示最近收到或已發送的訊息。要檢視右側的訊息，可以按聯絡人姓名查看訊息記錄。開始將會顯示最近收到訊息的聯絡人姓名。您也可以透過輸入聯絡人姓名的首字母，直接檢視某些聯絡人的訊息。在最左側，您可以查看儲存未發送訊息的草稿資料夾。

提示！ 如果有未讀訊息，將會在草稿資料夾的後面顯示「新訊息」資料夾。

- 4 透過按下導覽鍵，可查看聯絡人收發的所有訊息的詳細記錄。
黃色訊息表示新訊息。綠色表示已收到的訊息，而灰色則表示已發送的訊息。

提示！ 您可以透過按  來展開和折疊訊息顯示。也可以在**更多 > 設定 > 訊息 > 訊息顯示**中，選擇**展開檢視**或**摺疊檢視**作為預設顯示。

發送訊息

- 1 從桌面轉至訊息。
- 2 選擇**編寫訊息**以發送文字訊息或多媒體訊息。
- 3 新的訊息編輯器將會開啓。訊息編輯器可以合併**文字訊息**和**多媒體訊息**。訊息編輯器的預設設定爲文字訊息。
- 4 選擇屏幕底部的**選項**，然後選擇**附加**以新增圖像、影片、聲音、文字範本、多媒體範本、名稱及號碼等。
- 5 按「確定」鍵後選擇發送到以新增收件者。您可以輸入聯絡人姓名包括的任何字母或按「確定」鍵從聯絡人清單中選擇聯絡人。
- 6 按**發送**。

輸入文字

可以透過按  來更改文字輸入方法，可供選擇的輸入方法有 ABC/Abc/abc/123等。如果想要使用 T9 模式，按住

 鍵。或者，按左軟鍵並選擇**編寫選項**，也可以開啓或關閉 T9 字典。

插入符號

如果想要插入符號，首先按 ，然後才可選擇符號。或者，也可以按**選項**，然後選擇**附加符號**。

其他選項

在**選項**中，您也可以使用**儲存至草稿**、**附加**和**複製/貼上**。如果使用**複製/貼上**，可以在編寫屏幕中選擇所輸入的部分或全部文字，並按照需要可進行多次複製和貼上的操作。在編寫電子郵件或建立備忘錄時，也可以使用此功能。

更改語言

GD550 手機可支援多種語言。

有兩種方法可以從編寫屏幕更改寫入語言。可以按**選項**，轉至**編寫選項**並選擇**寫入語言**，然後設定所需的語


言。或者，只需按住  鍵。編寫選項可能會依所選語言而有所差異。

例如，如果選擇 한국어 作為寫入語言，可以按**選項** > **編寫選項** > 한글자판보기 來使用韓語鍵盤。

發送電子郵件

- 1 從桌面轉至訊息。
- 2 選擇**電子郵件**，然後選擇帳戶。資料夾（如收件匣、已發送項目、垃圾等）的顯示方式就像桌面顯示旋轉檢視一樣。**收件匣**資料夾顯示於第一位，**編寫電郵**功能表顯示於最靠左側。
- 3 連續按左導覽鍵以選擇**編寫電郵**。
- 4 輸入收件者地址并撰寫標題。
- 5 輸入您的訊息。
- 6 按**選項**，然後選擇附加以新增**圖像**、**影片**、**聲音**、**文字範本**及**簽名**等。
- 7 按**發送**可發送您的電子郵件。

相機 快速拍照

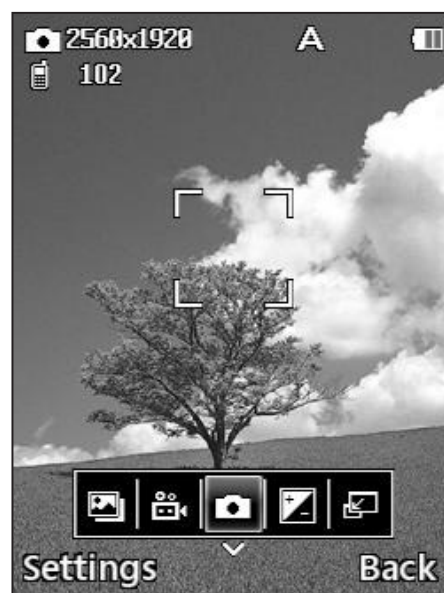

從桌面轉至**相機**，然後選擇**拍照**。

或者，只需按手機右側的相機鍵。

- 1 水平握住手機，將鏡頭對準拍攝對象。
- 2 輕按**相機鍵**，對焦方塊將會顯示在取景器屏幕的中央。
- 3 定位手機，以便您看到對焦方塊中的對象。
- 4 當對焦方塊變綠，則表示相機對焦完成。

5 再次按相機鍵。

一旦完成拍照

拍攝的相片將會顯示在屏幕上。

影集 - 選擇該選項可檢視影集。

發送 - 選擇該選項可經訊息、電子郵件或藍芽發送相片。

新增 - 選擇該選項可拍攝新的相片。

設為 - 選擇該選項可將圖像用作牆紙、通訊錄圖像、開機圖像或關機圖像。

刪除 - 選擇該選項可刪除圖像。

視像攝錄機

拍攝快速影片



從桌面轉至相機，然後選擇錄製影片。或者，您可以按住手機右側的相機鍵。

- 1 將會在屏幕上顯示視像攝錄機的取景器。
- 2 水平握住手機，將鏡頭對準拍攝對象。
- 3 按相機鍵或「確定」鍵一次開始錄製。
- 4 REC 將會顯示在取景器底部，還有一個計時器顯示影片長度。
- 5 重複按相機鍵或「確定」鍵停止錄製。

拍攝影片之後

將在屏幕上顯示一張靜態影片圖像。

影集 - 選擇該選項可檢視影集。

播放 - 選擇該選項可播放影片。

新增 - 選擇該選項可拍攝新的影片。

發送 - 選擇該選項可經訊息、電子郵件或藍芽發送影片。

刪除 - 選擇該選項可刪除影片。

記事簿

鬧鐘

從桌面轉至記事簿，然後選擇鬧鐘。

從鬧鐘屏幕中，按左軟鍵可開啓或關閉鬧鐘，並設定鬧鐘開始響鈴的時間。設定時間後，GD550 手機將會通知您距離鬧鐘響鈴還有多少時間。

日曆

從桌面轉至記事簿，然後選擇日曆。在當前日期上將會標有一個方形游標。您可以使用導覽鍵將游標移動至其他日期。按「確定」鍵可檢視當日的日程表。

如果沒有任何日程表，可以按新增日程表來新增日程表並可輸入有關資訊。手機將會在您設定特定的日程表項目時發出鬧鐘提示音。

備忘錄

從桌面轉至**記事簿**，然後選擇**備忘錄**。

- 1 選擇屏幕上的**新增備忘錄**以建立新的備忘錄。
- 2 輸入備忘錄，並按「**確定**」鍵以儲存。將會新增備忘錄，並且屏幕會顯示所新增的備忘錄。

可以使用導覽鍵搜尋備忘錄。

在鎖定屏幕顯示備忘錄

- 1 使用左導覽鍵或右導覽鍵選擇備忘錄，然後按左軟鍵開啓**選項**。
- 2 選擇在鎖定屏幕顯示，然後會將紅色大頭針附加到備忘錄。
- 3 您可以在合上手機蓋後查看備忘錄。如果想要從屏幕移除備忘錄，按**選項**並選擇**從鎖定屏幕移除**。

更多新聞

進入此功能表後，將會顯示天氣預測屏幕。如果選擇「**連接**」鍵，則可以查看更多詳細的天氣資訊。或者，可以按右導覽鍵查看新聞。

如果在我的新聞中按「**新增**」鍵，可新增所需要的RSS「**簡易內容匯集**」讀取器搜集更多新聞摘要，或在上網時將它儲存為我的摘要。也可以按左軟鍵使用**選項**來設定**更新行程表**。

應用程式

• 音樂

您可以按**演出者**、**專輯**和**類型**來播放歌曲，並對其進行分類，或建立**我的播放列表**。

正在播放 - 在播放 BGM 的同時才會顯示此功能表。您可以使用多種選項（如**新增至播放列表**、**等級**等），並按屏幕左下部的選項選擇設定

來更改重複、隨機播放和均衡器設定。

注意：音樂檔案可能受版權和知識產權法的保護。請確保您在下載或複製檔案之前，遵守有關實質性法律的適用使用條款。

• FM 收音機

LG GD550 手機配備內置 FM 收音機功能，您在外出途中可以調諧至最愛的電台進行收聽。如果按左軟鍵，您可以使用**編輯頻道**、**新增頻道**和**編輯電台名稱**選項。如果按「確定」鍵，可以查看**頻道列表**。在**頻道列表**中，您也可以設定頻道並重新調整設定。

注意：您必須佩戴耳機才能收聽電台。將耳機插入手機右側的耳機插孔。

• 互聯網

您可以存取互聯網。互聯網可讓您在手機上快速、盡情享受遊戲、音樂、新聞、體育和娛樂等。無論您在何地，無論您在做什麼。

注意：連線至這些服務並下載內容時，會產生其他費用。請向網絡供應商諮詢收費詳情。

• Google 地圖

檢查目前的位置和交通，並接收到目的地的指示。

• 我的檔案

您可以在此功能表中存取數據。

將會在**全部**標籤中顯示所有數據，如果按右導覽鍵，僅可檢查內部記憶體數據。

工具

• 計算機

計算機功能能讓您進行加、減、乘和除運算。您可以使用鍵盤輸入數字和運算符。

使用  鍵可刪除數字。

對於更複雜的計算，按**選項**並在 +/-、sin、cos、tan、log、ln、exp、sqrt、deg、rad、x^y 或 X² 之間進行選擇。

• 語音備忘錄

使用**語音備忘錄**錄製語音備忘錄或其他聲音。

按「選擇」鍵開始錄製。

按左軟鍵可暫停錄製。要繼續錄製，再次按該按鈕。

要停止錄製，按「確定」鍵。將會自動儲存錄製的備忘錄。

選項 - 如果按**選項**，可使用播放、刪除、設為鈴聲或訊息提示音、經由訊息、電子郵件或藍芽發送選項。

• 秒錶

此功能表可記錄某個活動已進行的時間。將會顯示單個來回（單圈）時間（最多 99 次）的時間，並且也會顯示總時間。

• 單位轉換器

此功能可將任何測量數據轉換至所需的單位。

可以轉換 7 種類型的單位：匯率、面積、重量、長度、溫度、體積和速度。

• 世界時鐘

世界時鐘功能可提供世界主要城市的時間資訊。您可以按左軟鍵新增城市，也可使用設為次要城市、編輯目前日期及時間、夏令時間、時鐘類型、刪除和刪除全部選項。

設定

• 裝置

(更多 > 設定 > 裝置)

您可以個人化裝置設定。選擇想要更改的功能表並設定值。

日期和時間

您可以設定與日期和時間相關的功能。

語言

您可以將用於顯示的語言設定更改為**主要語言**，並將用於寫入文字的語言更改為**寫入語言**。

安全

更改安全設定，以安全保護 GD550 手機和重要資訊。

鎖定裝置 - 選擇鎖定手機的時間。

鎖定應用程式 - 選擇要從列表中鎖定的功能表。

PIN 碼要求 - 選擇開啓手機時需要輸入的 PIN 碼。

更改密碼 - 更改 PIN 碼、PIN2 碼、安全密碼。

記憶體資訊

您可以使用**記憶體資訊**來確定每個記憶體的使用情況，並查看可用的空間：**內置共用記憶體**、**內置預留記憶體**、**智能咕記憶體**和**主要儲存裝置**設定。

電源節省

選擇可切換電源節省模式：**開啓**或**關閉**。如果設定為**開啓**，即可節省電池電力。

飛航模式

使用此功能可開啓飛航模式。開啓飛航模式後，您將無法撥打電話、連接至互聯網或發送訊息。

關閉滑蓋設定

您可以在合上手機蓋時設定活動應用程式。

重設設定

使用重設設定可將所有設定都重設定爲原廠預設值。您需要安全密碼，才能啓用此功能。預設的安全密碼爲「0000」。

• 提示音

（更多 > 設定 > 提示音）

您可以選擇提示音並調節裝置的音量。

您可以從下列選項中進行選擇：

通話與訊息
其他鈴聲

• 屏幕

（更多 > 設定 > 屏幕）

您可以更改手機畫面的設定。

鎖定畫面

您可以設定鎖定畫面上的牆紙和時鐘。

字體

您可以設定字體式樣和字型大小。

背光燈

您可以設定屏幕背光燈保持亮起的時間。

開機圖像

您可以設定開機的圖像。

關閉圖像

您可以設定關機的圖像。

- 通話

(更多 > 設定 > 通話)

您可以更改通話設定。

通用設定

您可以設定與一般通話設定相關的功能：**顯示來電者 ID、來電拒接清單、自動重撥、藍芽接聽模式等。**

通話時間

您可以檢查通話的時間。也可以在進入安全模式後，透過按左軟鍵來重設通話時間。

數據用量

您可以檢視數據用量。也可以在進入安全模式後，透過按左軟鍵來重設數據用量。

通話費用

您可以檢查**最後通話**單位或**所有通話**單位。或者，設定**通話費用**和**設定限制**。也可以在進入 PIN2 碼

後，透過按左軟鍵來重設**最後通話**和**所有通話**。

來電轉駁

您可以選擇將通話重新路由至另一個號碼：**所有通話、線路繁忙時等**。如果按左軟鍵，可以選擇**停用、停用全部等**。

通話限制

您可以限制撥出電話和來電。

固定撥號號碼

您可以選擇**固定撥號號碼**，以開啓並編譯可從此手機撥出的號碼列表。將需要輸入從網絡商處獲得的 **PIN2 碼**。僅可從手機撥出固定撥號列表包含的號碼。

來電等候

您可以將此選項設定為在通話過程中通知來電。

- 訊息

(更多 > 設定 > 訊息)

訊息顯示

您可以選擇不同的顯示選項以便查看訊息。

文字訊息

您可以設定與文字訊息相關的功能。

多媒體訊息

您可以設定與多媒體訊息相關的功能。

電子郵件

您可以設定與電子郵件相關的功能。

簽名

您可以建立文字簽名
可將符號和文字作為簽名的一部分。

服務訊息

您可以設定與服務訊息相關的功能，包括服務安全。

訊息計數器

您可以設定在某特定時段獲知有關已發送訊息的資訊。
如果選擇**重新設定**，將會初始化數據。

資訊廣播

您可以設定與**資訊廣播**相關的功能。

- **區域廣播**開啓/關閉
- **頻道**：建立、檢視或編輯頻道以接收資訊訊息。
- **語言**：選擇資訊訊息使用的語言。

- **互聯網**

(更多 > 設定 > 互聯網)

網絡設定

您可以檢視互聯網設定。也可以使用左軟鍵來新增、刪除和編輯互聯網設定。但是，無法刪除或編輯預設設定。

外觀設定

您可以選擇瀏覽器的外觀設定。

(如字元編碼、捲動控制、字型大小、顯示圖像和 Java 指令碼。)

快取記憶

存取過的網頁都將會儲存在手機的記憶體中。

- **清除快取記憶**：全部清除記憶體中的所有快取記憶數據。

Cookies

存取過的有關服務的資訊都將會儲存在 Cookies 中。

- **清除 Cookies**：移除全部記憶體中的全部 Cookies。

安全

- **認證**：您可以查看認證列表並檢視其詳細資料。
- **清除工作階段**：清除安全工作階段。

- **藍芽**

(更多 > 設定 > 藍芽)

為 GD550 手機設定藍芽功能。您可調整是否向其他裝置顯示您的手機，或搜尋已與手機配對的裝置。

藍芽開啓/關閉

您可以開啓或關閉藍芽。

搜尋新裝置

GD550 手機將會搜尋裝置。完成搜尋後，將會在屏幕上顯示**新增**和**重新整理**。選擇想要配對的裝置，在預設狀態下，手機將會在每次連接時建立一個密碼。

然後，手機將會連接至其他裝置。

密碼保護藍芽連接已準備就緒。

- **連接**

(更多 > 設定 > 連接)

網絡商已經設定連接設定，因此您可以立即開啓新手機。如果要更改任何設定，請使用此功能表。您可在此功能表設定網絡設定與資料存取網絡設定。

USB 連接

您可以在手機上選擇 USB 連接模式以用於不同場合。

- **電腦互聯網**：可以使用 USB 線將手機用作電腦的數據機。
- **大容量儲存**：選擇此選項，然後將手機連接至電腦，將檔案拖放至 GD550 手機可移除裝置資料夾。
- **PC Suite**：選擇此選項，然後在電腦同步模式中將手機連接至電腦。
- **每次詢問**：選擇此選項，每當手機連接至電腦時系統均將會提供選項，以讓您選擇連接模式。

- **說明**

(更多 > 設定 > 說明)

您可以檢視更多有關 GD550 手機的詳細資訊。

軟件升級

LG 行動手機軟件升級程式


有關安裝和使用本程式的更多資訊，請瀏覽 <http://www.lgmobile.com>

此功能可讓您在網上快捷方便地將軟件升級到最新版本，而無需到訪我們的服務中心。由於行動手機軟件升級程式在升級過程中需要用戶格外留意，因此，在繼續升級之前，請務必要仔細閱讀各步驟中顯示的任何說明和注意事項。請注意，在升級過程中移除 USB 數據傳輸線或電池可能會對行動電話造成嚴重損壞。由於製造商不會為升級過程中的數據損失承擔任何責任，因此建議您事先備份好任何重要資料以策安全。


配件

以下配件隨 GD550 手機一起提供。

充電器

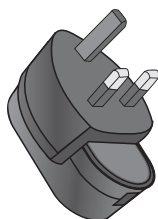

USB 線

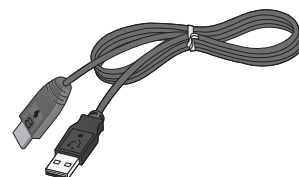

電池



立體聲
耳機



注意：

- 只可用原裝LG 配件。
- 不使用原裝LG 配件，保養可能失效。
- 配件在不同地區可能會有所不同，請向我們的地區服務公司或代理商瞭解更多詳情。

環境溫度

最高： +55°C（放電）
+45°C（充電）

最低： -10°C

Declaration of Conformity



Supplier's Details

Name

LG Electronics Inc

Address

: LG Electronics Inc. LG Twin Towers 20, Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

Model Name

GD550

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.8.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.3.2/ EN 301 489-24 V1.4.1
EN 300 328 V 1.7.1
EN 60950-1 : 2001
EN 50360:2001/EN62209-1:2006
EN 301 511 V9.0.2
EN 301 908-1 V3.2.1, EN 301 908-2 V3.2.1

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility
that the product mentioned above to which this
declaration relates complies with the above mentioned
standards and Directives

LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands

Name

Seung Hyoun, Ji / Director

Issued Date

16. Mar 2010

Signature of representative

安全及有效使用準則

請讀取以下簡易的使用規則。違反這些準則可能會發生危險或觸犯法律。

射頻能量暴露準則

無線電波暴露及比吸收率 (SAR) 資訊。本手機型號 GD550 已為遵守無線電波暴露的應用安全要求而設計。此要求包括可確保市民安全的設計準則，範圍涵蓋各年齡階層與所有的健康狀況。

- 無線電波暴露指引的強度單位叫作比吸收率或 SAR。SAR 測試使用標準方法進行，用手機以在所有使用的頻帶最高的合格電源水平傳輸。
- 雖然不同型號的 LG 電話的 SAR 水平有所差異，但所有這些電話都為達到無線電波暴露的相關指引而設。
- 國際非離子化輻射保護委員會 (ICNIRP) 建議的 SAR 限制，即平均 10 克組織 2W/kg。

- 經 DASY4 測試，本型號手機在耳邊使用的最高 SAR 值為 1.45 W/kg (10 克)，攜帶於身上時則為 1.31 W/kg (10 克)。
- 採用了電氣與電子工程師學會 (IEEE) 建議的 SAR 限制，即平均 1 克組織 1.6 W/kg 的國家/地區居民的 SAR 數據資訊。

產品護理及維修

警告

請僅使用經認可適用於此特定型號手機的電池、充電器及配件。使用其他種類的配件可能會導致手機的認可或保養失效，並可能引致危險。

- 請勿拆開此裝置。需要對手機進行維修時，請將其帶到合資格的維修技師處。
- 根據 LG 的政策，保固期內的維修可能會包括更換部件或主板，這些用於更換的部件或主板可能是新亦可能是返修的，但其功能與被更換的部件相同。

安全及有效使用準則

- 請遠離如電視、收音機或個人電腦等電器產品而使用手機。
- 裝置需遠離發熱來源，如散熱器或烹調器具。
- 請勿摔落手機。
- 請勿讓此裝置遭機械震動或電擊。
- 請於任何有特殊限制的地方關閉手機。例如，請勿在醫院內使用手機，否則，它可能會對敏感的醫療設備造成影響。
- 請勿以潮濕的雙手對充電中的手機進行操作。這可能會引致觸電和造成手機嚴重損壞。
- 請不要在易燃材料附近為手機充電，因為充電期間手機會發熱並導致火災。
- 使用乾布清潔裝置表面（請勿使用如苯、稀釋劑或酒精等溶劑）。
- 切勿在柔軟家具上為手機充電。
- 手機應在通風良好的環境中充電。
- 請勿讓此裝置接觸過多煙或塵埃。
- 請勿將手機置於信用卡或車票附近，這可能會影響磁帶上的資料。
- 請勿以尖銳物件敲打熒幕，否則可能會對手機造成損毀。
- 請勿將手機暴露於液體、濕氣或潮濕環境中
- 請小心使用配件，如耳機。如非必要，請勿觸及天線。
- 切勿在高濕度（如泳池、溫室、日光浴室）或熱帶環境中使用手機或配件，這可能會對手機造成損壞和使保用失效。

有效手機操作

電子裝置

所有手機都可能會因為受到干擾而影響效能。

- 請勿在未得到批准下在醫療儀器附近使用您的手機。避免將手機放置在起搏點上，例如您的胸部口袋。
- 手機可能影響到某些助聽器。
- 輕微干擾可影響電視、收音機、個人電腦等。

道路安全

檢查您駕駛時地區使用手機的法例及規則。

- 駕駛時請勿使用手提手機。
- 請專心一致駕駛。
- 如有免提耳機，請使用免提耳機。
- 若有駕駛條例要求，請駛離馬路並停泊好汽車後才撥打或接聽電話。
- RF 能量可能會影響車內某些電子系統，例如車載立體聲音響及安全設備等。
- 如果您的汽車配有氣囊，切勿讓已安裝的無線設備

或手提無線設備阻擋氣囊。它有可能因使用不當而失靈或造成嚴重損傷。

- 如果在外出時聆聽音樂，請確保將音量設定至合適水平，以便可以對周圍環境產生警覺。這在馬路旁邊時尤為必要。

避免損害您的聽覺

如果長時間以較大音量收聽，可能會對聽覺造成損害。所以我們建議開啓或關閉手機時，不要將它放於太近耳朵。我們亦建議將音樂及通話音量設定至合適水平。

爆破地區

請勿在進行爆破時使用手機。請嚴格遵守相關限制、規定或條例。

潛在爆炸氣壓

- 請勿在燃料補給點使用手機。
- 請勿在燃料或化學物質旁使用。

安全及有效使用準則

- 請勿使用放置了手機及配件的汽車傳輸或放置易燃氣體、液體或爆炸物。

在飛機上

無線裝置可引致飛機干擾。

- 登機前，請先關掉手機。
- 未經地勤人員批准，請勿在陸上使用手機。

兒童

請將手機放在兒童接觸不到的安全地方。手機包含微細零件，如果拆開，可能造成哽咽危險。

緊急呼叫

緊急電話可能在某些流動網絡中不能發出。因此，您不應僅倚賴手機作為緊急電話方式。請向您本地的服務供應商查詢。

電池資料及保護

- 充電前，您無須完全放電。跟其他電池系統不同，沒有記憶影響可緩和電池的效能。

- 只使用 LG 電池及充電器。LG 充電器是為將電池壽命擴至最大而設。
- 請勿拆解電池組或造成電池組短路。
- 請保持電池組的金屬接點清潔。
- 當電池不再提供可接受的效能，請更換電池。電池組可重充數百次直至需要更換為止。
- 如果電池很久沒有使用來擴展其用量，需重充電池。
- 請勿直接將充電器暴露於日光下或高濕度環境（如浴室）中。
- 請勿把電池放置在熱或冷的地方，這可損害電池效能。
- 若使用類型不當的電池，則有發生爆炸的危險。
- 請根據製造商的指示來處理廢棄電池。請盡量回收利用。請勿作為家庭廢棄物處理。

- 如果需要更換電池，請帶同手機前往最近的授權 LG 電子產品服務點或經銷商以尋求協助。
- 請謹記在手機完全充電後從牆壁插座拔出充電器，避免充電器造成不必要的電力損耗。
- 電池的實際壽命將取決於網絡設定、產品設定、使用模式、電池及環境條件。

GD550 用户手册 - 简体中文

此手册中的部份内容可能会因手机程序之改良或不同网络商提供的服务而令实际情况有所不同,这并不会另行通知。

恭喜您购买此款功能先进、外观小巧的 LG GD550 手机,它采用了最新的数字移动通信技术,专注于为您提供便利的操作。



开始了解您的手机

电源键 
开机/关机。



主屏

导航键


确定键
选择菜单选项并
确认操作。


通话键 
拨打电话号码并接听
来电。

软键
这两个按键分别
执行它们上方的
屏幕文字所指示
的功能。

结束键 
挂断或拒接来
电。使用菜单
时返回主屏。

清除键

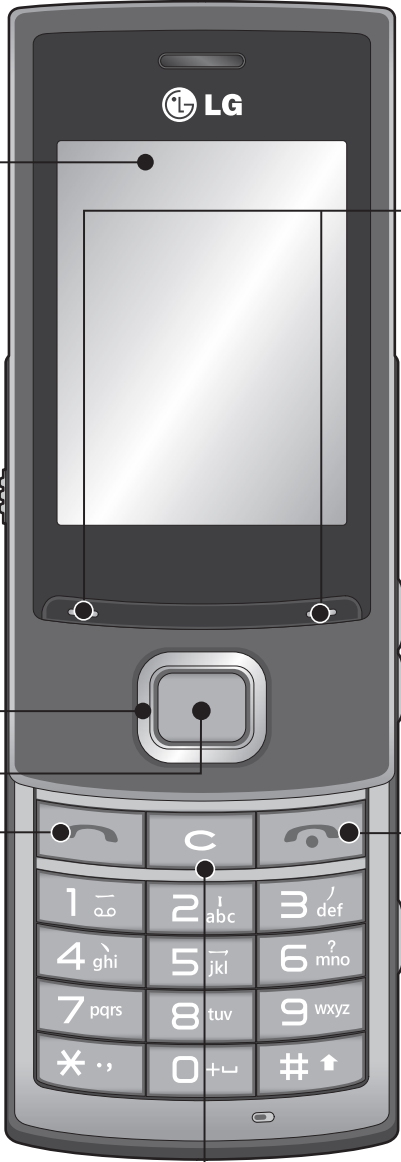

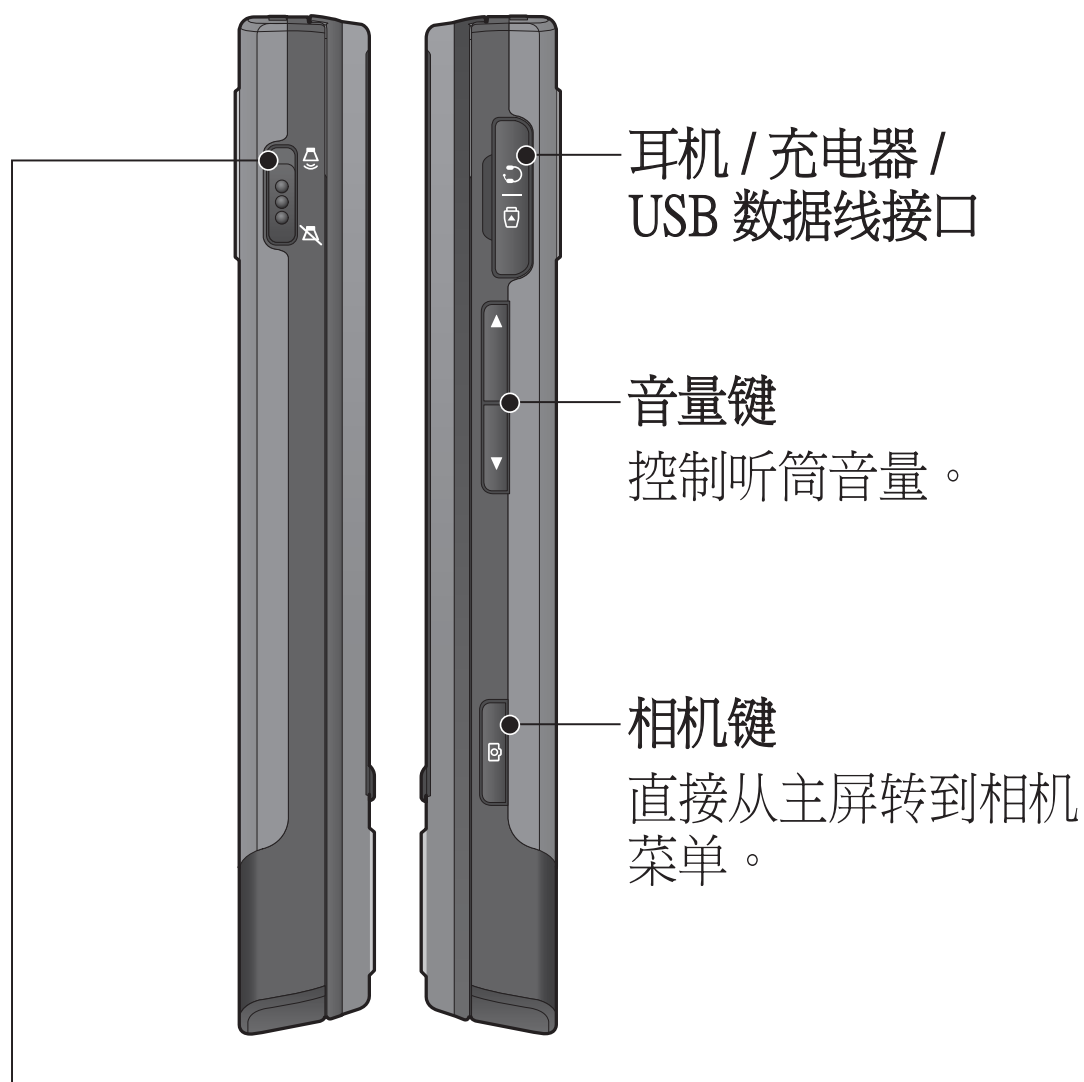

情景模式切换

通过向上或向下滑动任何屏幕（包括锁定屏幕）打开或关闭声音。（来电、聆听音乐、闹铃等等）

这仅适用于声音。如果要更改振动的设置，转到**更多 > 设置 > 按键音 > 通话和信息**。默认情况下，振动提示设为开。

安装 SIM 卡和充电

安装 SIM 卡


当您预定了手机网络后，您将得到一个 SIM 卡，该卡上载入了您的预定详细信息，如您的 PIN 码、任何可用的可选服务以及其他服务。

重要！

› SIM 卡很容易因刮擦或弯折而损坏，因此，在处理、插入或取出卡时，请小心谨慎。请将所有 SIM 卡置于儿童无法接触的地方。

说明

- 1 打开电池盖
- 2 取出电池
- 3 插入 SIM 卡
- 4 插入电池
- 5 关闭电池盖
- 6 充电

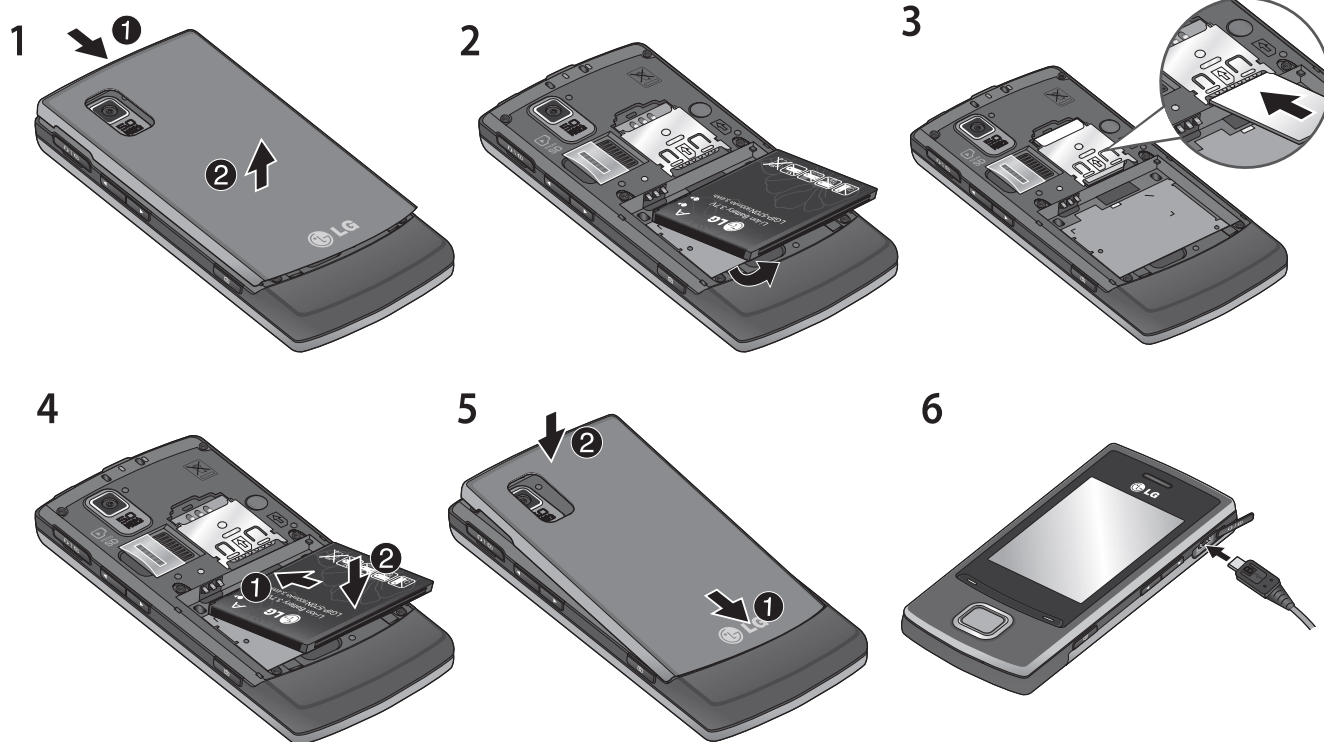

警告：手机开机时，不要取出电池，这可能会损坏您的手机。

主屏

GD550 提供简单易用的主屏和旋转视图，允许您来回移动菜单。

主屏上方有五个圆点。每个圆点表示一个不同的菜单，通过按向右和向左导航键您可以在菜单之间移动。

您可以选择的菜单数
突出显示的点显示您
当前的位置。



主菜单图标

使用左或右导航键在主菜单之间移动。

相应的子菜单

使用向上或向下导航键搜索子菜单。

主屏始终以**通话菜单**为第一界面，您可以从此处向右或向左移动。

在**电话簿**、**通话记录**和**信息框**菜单中，您可以使用此旋转视图。

提示！ 如果在**电话簿**、**通话记录**和**信息框**菜单中输入字母或数字，将搜索到相应的结果。

锁定屏幕

当滑盖关闭时，通常处于活动状态的应用程序将终止，出现锁定屏幕。

滑下手机滑盖时，设置处于活动状态的应用程序

- 1 通过使用主屏上的向左或向右导航键，然后选择**设置**来选择更多。
- 2 选择**设备**，然后选择**滑盖下滑设置**。
- 3 按“确定”键标记滑盖关闭时您不想终止的应用程序。

设置您的锁定屏幕

- 1 通过使用主屏上的向左或向右导航键，然后选择**设置**来**选择更多**。
- 2 选择**屏幕**，然后选择**锁定屏幕**。
- 3 按向右或向左导航键，您可以从默认图像中选择墙纸图像，或者按屏幕左下角的**相册**从相册中选择图

纸图像。您还可以更改锁定屏幕的时钟样式。

提示！ 滑下手机滑盖时，您正使用的菜单将终止，出现锁定屏幕。但是，如果您正在聆听音乐或 FM 收音机，或者正在观看视频，即便滑下手机滑盖，这些应用程序也将不会终止。您可以在**设置 > 设备 > 滑盖下滑设置**中更改此功能的设置。选项包括：通话、相机、视频播放器、音乐播放器。

通话

拨打电话

- 1 使用键盘键入号码。要删除一个数字，请按 。
- 2 按  开始通话。
- 3 要结束通话，请按 。

提示！ 要输入 + 以拨打国际电话，请按住 0。

提示！ 您可通过在主屏的任何菜单中输入号码转到拨号屏幕。

使用联系人列表拨打电话

- 1 从您的主屏中选择电话簿。
- 2 使用键盘输入您要呼叫的联系人姓名的第一个字母或者联系人所属群组的名称。例如，要输入 **Office**，请按三次 6 选择第一个字符“O”。按键盘上的按钮，您可以将输入模式从字母模式更改为数字模式 ，反之亦然。
- 3 从选项中选择通话，或按  开始通话。

接听和拒接来电

当手机响铃时，请按  接听来电。

要在手机响铃时静音，关闭**情景模式**切换即可。如果您在开会时忘记将情景模式更改为**静音**，这非常有帮助。

按  或使用向右导航键**选择拒绝**拒接来电。

提示！ 转到更多 > 设置 > 按键音 > 通话和信息 > 振动提示时，您可以将振动提示设为开。

使用扬声器

在通话过程中或拨打电话时，您可以通过选择激活扬声器来**激活扬声器**，并且您可以在免提模式下使用手机。（当您收到来电时，您可以通过选择**扬声器接听**实现此操作。）

如果扬声器处于活动状态，选择**停用扬声器**将恢复标准手机会话模式。

快速拨号

您可以为常用联系人指定快速拨号号码。要指定快速拨号，请转到**电话簿 > 选项 > 设置 > 快速拨号**。

您可以使用旋转视图，该功能允许您在屏幕上为保存在手机中的任何联系人指定号码。快速拨号 1 设置为您的语音邮件，不能更改。

您最多可以指定 8 个快速拨号（编号从 2 到 9）。

一旦指定了快速拨号，您按住快速拨号号码便可开始通话。

提示！ 按住键  至  时，如果指定的快速拨号号码为空，您可以直接指定快速拨号号码。

像下方。如果您键入联系人的第一个字母，联系人的所有通话记录显示为一个项目。

您可以使用向下导航键查看每位联系人的所有详细记录（包括时间和通话时间）。

查看通话记录

从主屏转到**通话**并选择**通话记录**。

使用旋转视图，您可检查未接来电、已接来电和已拨电话的通话记录。使用向右导航键查看之前的通话记录。

如果输入联系人姓名的第一个字母或者电话号码（如果号码未保存在您的手机中），您还可以直接转到所需的电话簿通话记录。

同一联系人的连续通话记录将显示为一条记录。联系人的未接电话、已接电话或已拨电话数量显示在联系人图

联系人

正在搜索联系人

- 1 从主屏转到通话。
- 2 选择“电话簿”。
- 3 按向右导航键按字母顺序搜索联系人，或输入联系人姓名的第一个字母直接查找。

如果联系人有 3 条以上的详细信息（如电话号码、地址、邮件地址等），您可以按向下导航键查看下一条信息。

提示！ 如果要以列表而不是旋转视图的形式查看联系人列表，请转到联系人屏幕上的**选项 > 设置 > 显示设置**并将**联系人图像**设为关。

创建我的联系人卡

此选项显示您的信息。在此，您可以更改姓名以及修改信息，如电子邮件、职务、备忘录等等。

- 1 从主屏转到通话。
- 2 选择电话簿。

- 3 按左导航键两次选择 **Me**。这是默认名称。如果您按**添加**并提供新的姓名，将显示该姓名，而不是 **Me**。
- 4 按“确定”键或选择“选项”并从 SIM 中选择“添加”，然后您可以从 SIM 中添加您的号码。

添加新联系人

- 1 从主屏转到通话。
- 2 选择电话簿。
- 3 按左导航键一次并按“确定”键以添加联系人。您还可以通过选择**选项**和选择**新联系人**来添加新联系人。
- 4 选择是将联系人保存到内存还是 **SIM 卡** 并且添加姓和名。
按键盘上的按钮，您可以更改输入模式 （例如大小写字母或数字）。

- 5 默认情况下，联系人图像是随机指定的。您可以更换联系人的图片。如果要从指定的列表中选择图片，请按向右导航键。按左导航键一次从相册中选择图片，再次按左导航键可以拍照以及直接使用图片。如果您选择尺寸过大的联系人图像，您转到裁切屏幕，因此您可以根据需要裁切图像并且将其设为联系人图像。

提示！ 从主屏拍照并且在设置菜单中将图像大小设置为**联系人**，您可以获得最大尺寸的联系人图片。

- 6 保存电话号码。
当您添加新联系人或新群组时，将逐一添加屏幕顶部的圆点。
- 7 如果**需要**添加其他信息，如**电子邮件**、**铃声**或**主页**等，请选择**+更多**。

提示！ 要保存联系人的电子邮件地址，通过选择**更多**菜单中的**电子邮件**然后按屏幕左下方的**选项**并从列表中选择一个选项，您可以轻松添加电子邮件后缀。选项包括：**@hotmail.com**、**@msn.com**、**@yahoo.com**、**@gmail.com**。

将联系人添加到群组

您可以按“群组”（例如工作同事和家人）保存并管理您的联系人。

要添加群组，请通过从“电话簿”菜单按**左软键**并选择**新群组**转到“选项”。您可以选择是将群组添加到**内存**还是**SIM卡**、为群组命名以及设置铃声。

选择屏幕右下方的**保存**时，屏幕上将弹出要求您添加成员的提示信息。您可以从此信息中按确定键，直接向群组添加成员。使用向右或向左导航键搜索联系人列表。

信息

GD550 包含与短信（短信服务）、彩信（多媒体信息服务）、电子邮件，以及网络服务消息相关的功能。

查看信息

- 1 从主屏转到信息。
- 2 选择“信息”框。
- 3 信息将显示为旋转视图。最近接收或发送的信息将先显示在下方。在右边，您可以按联系人姓名查看信息历史记录。最近信息的联系人姓名将先显示。您还可以通过输入联系人姓名的第一个字母，直接从某个电话簿中查看信息。在最左边，您可看到草稿箱文件夹，其中存储了未发送的信息。

提示！ 如果您有未读信息，草稿箱文件夹后面将显示“新信息”文件夹。

- 4 按向下导航键，您可以查看指定联系人发送或接收的所有信息的详细历史记录。
黄色信息为新信息。绿色信息为收到的信息，灰色信息为已发送的信息。

提示！ 按 ，您可以展开和折叠信息显示。您可以在 **更多 > 设置 > 信息 > 信息显示** 中选择 **展开视图** 和 **折叠视图** 之间的默认显示。

发送信息

- 1 从主屏转到信息。
- 2 选择**写信息**以发送短信或多媒体信息。
- 3 此时将打开新信息编辑器。信息编辑器组合了**文本信息**和**多媒体信息**。信息编辑器的默认设置为文本信息。
- 4 选择屏幕左下角的“选项”，然后选择“**插入**”以添加图像、视频、声音、文本模板、多媒体模板、姓名和号码等等。
- 5 按“确定”键选择**发送至以添加收件人**。您可以输入联系人姓名中包含的任何字母或按“确定”键选择电话簿从联系人列表中进行选择。
- 6 按**发送**。

输入文本

文本输入方法可以通过按 ：ABC/Abc/abc/123 进行更改。

如果要使用 T9 模式，请按住  键。或者在按左软键并选择**编写选项**时，您可以打开或关闭 **T9 字典**。

插入符号

如果您要插入符号，请按 ，然后您可以选择符号。或者您可以按**选项**，然后选择**插入符号**。

其它选项

在**选项**中，您还可以使用**保存草稿箱**、**插入**和**复制/粘贴**。如果您使用**复制/粘贴**，您可以选择您已输入到书写屏的部分或全部文本，并且可根据需要多次复制和粘贴此文本。写电子邮件或创建备忘录时，您也可以使用此功能。

更改语言

GD550 支持多种语言。

有两种方式可以从书写屏上更改编写语言。您可以按**选项**，转到**编写选项**，选择**编写语言**，然后设置您需要的语言。或者，您只需按住  键。编写选项可能会因您选择的语言而有所不同。

例如，当您选择 한국어 作为编写语言时，您可以按**选项** > **编写选项** > 한글자판보기 使用韩语键盘。


发送电子邮件

- 1 从主屏转到信息。
- 2 选择**电子邮件**，然后选择账户。文件夹（例如**收件箱**、**已发送信息**、**垃圾箱**等）将显示为旋转视图，和主屏一样。**收件箱**文件夹将先显示，**写电子邮件**菜单是最左侧的菜单。
- 3 连续按向左导航键，选择**写电子邮件**。
- 4 输入收件人的地址和主题。

- 5 输入您的信息。
- 6 按**选项**，选择**插入**以添加**图像**、**视频**、**声音**、**文本模板**、**签名**等等。
- 7 按**发送**，您的电子邮件将被发送。

相机

快速拍照

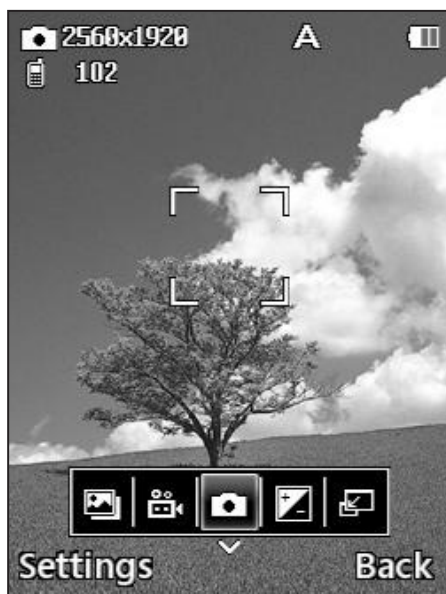

从主屏转到**相机**并选择**拍照**。

或者，您可以短按手机右侧的相机键。

- 1 水平拿稳手机，将镜头对准您要拍摄的物体。
- 2 轻按**相机键**，取景器屏幕的中间会出现一个对焦框。
- 3 调整手机位置，以便您能看到物体处于对焦框中。
- 4 对焦框变绿时，表示相机已对好焦。
- 5 再次按**相机键**。

拍摄照片后

拍好的照片将显示在屏幕上。

相册 - 选择此选项可查看相册。

发送 - 选择此选项可通过信息、电子邮件或蓝牙发送照片。

新建 - 选择此选项可拍摄一张新照片。

设为 - 选择此选项可将图像用作**墙纸**、**联系人图像**、**开机图像**或**关机图像**。

删除 - 选择此选项可删除图像。

摄像机

快速摄像



从主屏转到相机并选择录制视频。或者，您可以按住手机右侧的相机键。

- 1 屏幕上将显示摄像机的取景器。
- 2 水平放置相机，将镜头对准要拍摄的物体。
- 3 按相机键或“确定”键一次以开始录制。
- 4 REC 将显示在取景器底部，计时器将显示视频长度。
- 5 再次按相机键或“确定”键以停止录制。

拍摄视频后

屏幕上将显示所拍摄视频的静态图像。

相册 - 选择此选项可查看相册。

播放 - 选择此选项可播放视频。

新建 - 选择此选项可拍摄新视频。

发送 - 选择此选项可通过信息、电子邮件或蓝牙发送视频。

删除 - 选择此选项可删除视频。

管理器

闹钟

从主屏转到**管理器**并选择**闹钟**。

从“闹钟”屏幕，按左软键打开或关闭闹钟，并且设置您想让闹钟停止的时间。在设置时间后，GD550 将通知您闹钟关闭之前的剩余时间。

日历

从主屏转到**管理器**并选择**日历**。当前日期上有一方形光标。您可以使用导航键将光标移到另一日期。按“确定”键可查看该日期的日程表。

如果没有日程表，您可以按新建日程表添加和自定义**新日程表**。如果您已为特定日程表项目设置了闹钟，手机将会播放闹钟铃声。

备忘录

从主屏转到**管理器**并选择**备忘录**。

- 1 在屏幕上选择**新备忘录**可创建新的备忘录。
- 2 输入备忘录并按“确定”键保存。您的备忘录将添加到并显示在屏幕上。

使用导航键搜索您的备忘录。

在锁定屏幕上显示备忘录

- 1 使用向左或向右导航键选择备忘录，然后按左软键打开**选项**。
- 2 选择**显示在锁定屏幕上**，随后红色的回形针将附加至备忘录。
- 3 滑盖关闭时，您可以查看备忘录。如果要从屏幕中将其删除，请按**选项**并选择**从锁定屏幕中删除**。

更多 新闻

进入此菜单后，天气预报屏幕将会显示。如果选择“确定”键，您可看到更详细的天气信息。或者，您可通过按右导航键查看新闻。

如果按“我的新闻”菜单下的**确定键**，网上冲浪时，你可以根据所需**添加**更多源或将其作为“我的源”进行**存储**。您还可以按左软键使用**选项设置更新日程表**。

使用多

• 音乐

您可以播放歌曲、按**艺术家、专辑和流派**对歌曲进行分类或创建**播放列表**。

当前播放 - 此菜单仅在 BGM 正在播放时出现。您可以使用多个选项（例如**添加到播放列表、评级等**）并且可以通过按屏幕左下角的**选项**更改设置**重复、随机和均衡器**。

备注：音乐文件可能受版权法和知识产权法的保护。请确保在下载或复制文件之前，遵守适用的物质法律使用条款。

• FM 收音机

LG GD550 内置了 FM 收音机，因此您在路上也能转到喜爱的电台并收听无线广播。如果按左软键，您可以使用**编辑频道、新建频道和编辑电台名称**选项。如果按“确定”键，您可以查看**频道列表**。在**频道列表**中，您也可以设置频道和重置设置。

备注：您必须连接耳机才能收听无线广播。将耳机插入手机右侧的耳机插孔。

• 互联网

您可以访问互联网。互联网为您提供了一个涵盖游戏、音乐、新闻、体育、娱乐等更多内容的缤纷世界，您可以快速通过手机访问。畅行无阻、精彩无限。

备注：连接这些服务并下载内容时，可能会产生额外费用。查看网络提供商要求的数据付费。

• Google 地图

检查您当前的位置和交通并接收目的地的方向指引。

• 我的文档

您可以访问您在此菜单中的数据。

所有数据都显示在**全部**选项卡，并且如果按向右导航键，您仅可以检查内存数据。

工具

• 计算器

计算器功能允许您执行加、减、乘、除操作。您可以使用键盘输入数字和运算符。

使用  键可删除数字。

对于较复杂的计算，请按**选项**，然后在 $\pm$ 、sin、cos、tan、log、ln、exp、sqrt、deg、rad、 x^y 或 X^2 之间选择。

• 语音备忘录

使用**语音备忘录**可录制语音备忘录或其他声音。

按“确定”键开始录制。

按左软键可暂停录制。要继续录制，请再按一次。

要停止录制，请按“确定”键。手机将自动保存录制内容。

选项 - 如果按**选项**，您可以使用**播放**、**删除**、**设为铃声**或**信息提示音**或者通过**信息**、**电子邮件**、或**蓝牙发送选项**。

- **秒表**

可用此菜单记录事件所用时间。还可以显示单圈时间长度（最多 99 次）和总时间。

- **单位换算器**

此功能可将任何测量转换为您需要的单位。

可以转换的单位有 7 种：货币、面积、重量、长度、温度、体积/容积和速度。

- **世界时钟**

世界时钟功能提供有关世界各地主要城市的时间信息。您可以按左软键添加城市，也可以使用设为第二个城市、编辑当前的日期和时间、夏令时、时钟类型、删除和全部删除选项。

设置

- **设备**

（更多 > 设置 > 设备）

您可以个性化您的设备设置。选择要更改的菜单并设置值。

日期和时间

您可以设置与日期和时间相关的功能。

语言

您可以更改设为显示屏主语言和编写文本编写语言的语言。

安全性

更改安全设置以保护 GD550 及重要信息。

锁定设备 - 选择锁定手机的情况。

锁定应用程序 - 从列表中选择要锁定的菜单。

PIN 码要求 - 选择开机时要请求的 PIN 码。

更改密码 - 更改 PIN 码

（如果将 IPN 码请求设为“开”，将显示此菜单项）、PIN2 码、安全码。

内存信息

您可以使用内存信息确定已用内存以及查看可用空间：内部共用内存、内部预留内存、USIM 卡内存和主存储器设置。

省电

选择该选项可将省电设置切换为：打开或关闭。如果设为打开，可以节省电池电量。

飞行模式

使用此功能，将飞行模式设为打开。飞行模式被设为开时，您将无法拨打电话、连接互联网或发送信息。

滑盖下滑设置

您可以设置在滑下滑盖时处于活动状态的应用程序。

恢复初始设定

使用**重设设置**可将所有设置重置为其出厂默认设置。要启动此功能，您需要安全密码。默认安全密码设为“0000”。

• 按键音

（更多 > 设置 > 按键音）

您可以选择按键音并调整设备的音量。

选项包括：

通话和信息

其它铃声

• 显示

（更多 > 设置 > 屏幕）

您可以更改手机显示的设置。

锁定屏幕

您可以设置在锁定屏幕时显示的图像和时钟。

字体

您可以设置字体样式和大小。

背景灯

您可以设置屏幕背景灯的时长以保持其亮着。

开机图像

您可以设置开机时显示的图像。

关机图像

您可以设置关机时显示的图像。

- 通话

(更多 > 设置 > 通话)

您可以更改通话设置。

常用设置

您可以设置与常用通话设置相关的功能：显示我的本机号码、拒接来电列表、自动重拨、蓝牙接听模式等。

通话时间

您可以检查通话的时长。输入安全码之后再按左软键，您可以重置时长。

数据量

您可以查看数据量。输入安全码之后再按左软键，您可

以重置音量。

通话费用

您可以检查上次通话

单位或所有通话单元。或者设置通话费用和设置限制。输入 PIN2 码后再按左软键，您可以重置上次通话和所有通话。

呼叫转接

您可以选择将来电转移到另一号码：所有通话、正在通话时的来电等。如果按左软键，您可以选择停用、全部停用等。

呼叫限制

您可以限制拨出和呼入的通话。

固定拨号

您可以选择要打开的固定拨号号码并编辑一个可从您的手机拨打的号码列表。您需要由运营商提供的 PIN2 码。仅可以使用手机拨打此号码列表中的号码。

呼叫等待

您可以设置此选项以在通话期间有电话呼入时发出通知。

• 信息

(更多 > 设置 > 信息)

信息显示

您可以选择用于查看信息的不同显示选项。

文本信息

您可以设置与文本信息相关的功能。

多媒体信息

您可以设置与多媒体信息相关的功能。

电子邮件

您可以设置与电子邮件相关的功能。

签名

您可以创建文本

签名 您可以在签名中使用符号和文本。

服务信息

您可以设置与服务信息（包括服务安全性）相关的功能。

信息中心

您可以设置通知已发送信息所需的特定期限。 如果选择重设，数据将被初始化。

小区广播

您可以设置与小区广播相关的功能。

- 小区广播开/关

- 频道：创建、查看或编辑用于接收小区广播的频道。

- 语言：选择小区广播的语言。

- **互联网**
(更多 > 设置 > 互联网)

情景模式

您可以查看互联网网络设定。您可以使用左软键添加、删除和编辑互联网网络设定。但是，您不能删除或编辑默认配置。

外观设置

您可以选择浏览器外观的设置。

(字符编码、滚动控制、字体大小、显示图像和 Java 脚本。)

缓存

您访问过的网页存储在手机的内存中。

- **清除缓存**：删除内存中缓存的所有数据。

Cookie

有关您已访问的服务信息存储在所谓的 **Cookies** 之中。

- **清除 Cookie**：删除内存中的所有 Cookie。

安全性

- **证书**：您可以看到证书的列表并查看其详细信息。
- **清除会话**：删除安全会话。

• 蓝牙

(更多 > 设置 > 蓝牙)

设置 GD550 以使用蓝牙。您可以调整对其它设备的可见性，或搜索您可以与之配对的设备。

打开/关闭蓝牙

您可以打开或关闭蓝牙。

搜索新设备

GD550 将搜索设备。搜索完成时，屏幕上将显示添加和刷新。选择您要与之配对的设备，手机将在您每次连接时默认创建一个密码。

随后，手机将连接到其它设备。

现在，受通行码保护的蓝牙连接已经准备就绪了。

• 连接

(更多 > 设置 > 连接)

网络运营商已为您设置连接设置，因此，您开机即可使用手机。如果要更改设置，请使用此菜单。在此菜单中，您可以配置网络设置和数据访问配置文件。

USB 连接

您可以在手机上选择用于多种用途的 USB 连接模式。

- **PC internet**：通过使用 USB 数据线，您可以将手机用作电脑的调制解调器。
- **批量存储**：选择此选项并将手机连接到电脑，将文件拖放到 GD550 可移动设备文件夹。
- **PC 套件**：选择此模式并以 PC Sync 模式将手机连接到电脑。
- **始终询问**：选择此模式，每次手机连接到电脑时会提供一个选项，以供选择模式。

• 帮助

(更多 > 设置 > 帮助)

您可以查看有关 GD550 的更多详细资料。

软件升级

LG 手机软件升级计划


有关安装和使用此计划的详细信息，请访问 <http://WWW.lgmobile.com>

使用此功能，无需访问服务中心，您即可快速方便地将软件升级到 Internet 上的最新版本。由于手机软件升级计划要求用户注意升级过程的持续时间，因此，在继续执行操作之前，请留意每一个步骤中出现的任何说明和提示。请注意，在升级过程中移除 USB 数据线或取出电池将严重损坏您的手机。对于升级过程中造成的任何数据丢失，制造商不承担任何责任，为了安全起见，建议您事先记录下任何重要信息。


配件

这些配件随 GD550 提供。

充电器

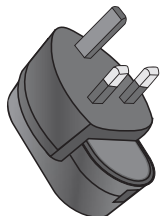

数据线

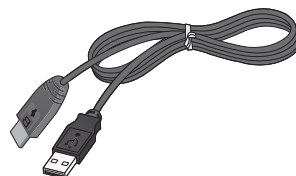

电池



立体声
耳机



备注：

- 务必使用原装 LG 配件。
- 否则可能导致保修失效。
- 在不同地区提供的配件可能不同；如需要进一步查询有关情况，请与我们的地区服务公司或代理联系。

外部环境

最高温度： +55℃（放电）
+45℃（充电）

最低温度： -10℃

Declaration of Conformity



Supplier's Details

Name

LG Electronics Inc

Address

: LG Electronics Inc. LG Twin Towers 20, Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

Model Name

GD550

Trade Name

LG

CE0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.8.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.3.2/ EN 301 489-24 V1.4.1
EN 300 328 V 1.7.1
EN 60950-1 : 2001
EN 50360:2001/EN62209-1:2006
EN 301 511 V9.0.2
EN 301 908-1 V3.2.1, EN 301 908-2 V3.2.1

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility
that the product mentioned above to which this
declaration relates complies with the above mentioned
standards and Directives

LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands

Name

Seung Hyoun, Ji / Director

Issued Date

16. Mar 2010

Signature of representative

关于安全有效使用手机的准则

请阅读以下简单的准则。违反这些准则可能造成危险或者触犯法律。

暴露在射频能量之下

无线电波暴露和“特定吸收率”(SAR)信息。此款GD550型手机已设计为遵守有关适用的无线电波暴露安全要求。此要求基于相关的科学准则，其中包括为确保所有人员（无论年龄和健康状况）安全而设计的安全裕量。

- 不同的LG手机型号可能有不同的SAR能级，但它们均符合相关的无线电波暴露准则。
- 国际非游离辐射防护委员会(ICNIRP)建议的SAR上限值为：每10g重的人体组织吸收的能量平均值不超过2W/kg。
- 由DASY4对该型号手机进行的测试，人耳能够承受的SAR最大值为1.45 W/kg（10克），戴在身体上时，其值为1.31 W/kg（10克）。

- 电气电子工程师协会(IEEE)建议的SAR上限值为1.6 W/kg，平均值超过1克薄纸，此SAR数据适用于各个国家/地区的居民。

产品保养和维护

警告

仅使用经核准为用于此特定手机型号的电池、充电器和配件。使用任何其它类型可能导致适用于此手机的许可或保修失效，并可能造成危险。

- 不要拆解本机。当需要维修时，请将手机送往合格的服务技术人员处。
- 保修（由LG决定）可能包括使用新的或返修的更换部件或板，只要其功能与更换的部件等效。
- 远离诸如电视、收音机或个人计算机之类的电器。
- 远离诸如暖气片或厨灶之类的热源。

关于安全有效使用手机的准则

- 小心不要让手机摔落。
- 不要让手机受到机械振动或撞击。
- 在任何有特殊条例要求的区域关闭手机。例如，请勿在医院使用手机，因为它可能影响敏感的医疗装置。
- 手机充电时，请勿用湿手操作手机。这可能会导致电击或手机严重受损。
- 请勿在靠近易燃物体的位置充电，因为手机可能变热并引发火灾。
- 用包装材料或乙烯基包装纸包裹手机可能会损坏手机涂层。
- 如果手机置于柔软物体之上，请不要充电。
- 应将手机放在完全通风的位置充电。
- 不要在烟雾或灰尘过多的环境中使用或存放手机。
- 不要将手机放在信用卡或卡式车票旁边，它可能会影响磁条上的信息。

- 不要用尖锐物体敲击屏幕，这可能会损坏手机。
- 不要将手机暴露在液体或潮气中。
- 谨慎使用诸如耳机之类的配件。在不必要的情况下，不要触摸天线。

有效的手机操作

电子设备

所有手机都可能受到干扰，这种干扰会对性能造成影响。

- 在未经允许的情况下，不得在医疗装置附近使用手机。不要将手机放在心脏起搏点上，即胸前的口袋内。
- 手机可能会对某些助听器造成干扰。
- 微弱的干扰可能会影响电视、收音机、个人计算机等。

行车安全

查阅有关在驾驶时使用手机的本地法律法规。

- 不要在驾驶时使用手持式手机。
- 将注意力完全集中在驾驶上。
- 如果有免提装置，请使用免提装置。
- 如果行驶条件需要，请在拨打或接听电话之前将车辆驶离道路并停车。
- 射频能量可能影响车辆内的电子系统，例如立体声音响、安全设备等。
- 当车辆配备气囊时，不要让安装的便携式的无线设备阻挡气囊。由于不适当的个人行为，可能造成严重伤害。
- 如果您在外出时使用耳机收听音乐，请确保将音量设置为合理的音量级别，以便注意周围的情况。在过马路时，尤其要注意这一点。

防止损伤您的听力

如果您长时间置于高音环境中，那么您的听力可能会遭到伤害。因此，我们建议您在开机或关机时不要将手机置于耳边。同时，我们还建议您将音乐和通话音量设置为合理的音量级别。

爆破区域

不要在正进行爆破的地区使用手机。请依照有关限制，并遵守任何规章或规定。

易爆环境

- 不要在加油站内使用手机。
- 不要在靠近燃料或化学制品处使用手机。
- 不要在放有手机和配件的车厢内运输或存放可燃气体、液体或爆炸品。

关于安全有效使用手机的准则

在飞机上

无线设备可能对飞机造成干扰。

- 飞机飞行过程中，请关闭手机或激活飞行模式。
- 未经机务人员允许，不得在地面上使用手机。

儿童

将手机放在儿童接触不到的安全地方。手机中包含细小零件，如果脱落可能导致窒息危险。

紧急电话

并非在所有手机网络中均可使用紧急电话。因此，您不应仅依赖于手机的紧急呼叫功能。请向本地的服务提供商核准。

电池信息及保养

- 您无需在再次充电前对电池进行完全放电。与其它电池系统不同，本机电池不具有可能影响电池性能的记忆效应。

- 只能使用 LG 电池和充电器。LG 充电器设计为最大程度地延长电池使用寿命。
- 不要拆解电池组或将其短路。
- 保持电池组的金属触点清洁。
- 当电池不再提供合乎要求的性能时，请更换电池。在需要更换之前，电池组可以反复充电数百次。
- 如果电池已经使用很长一段时间，请对电池再次进行充电以保持最佳使用状态。
- 不要将电池充电器暴露在直射阳光下，也不要放在诸如浴室之类的高湿环境中使用。
- 不要将电池存放在过热或过冷的地方，这可能损害电池的性能。
- 如果用不适当的电池进行替换，可能会有爆炸危险。
- 请按制造商的说明处置用过的电池。如果可能，请循环使用电池。不要象处理家用废物一样处理电池。

- 如果要更换电池，请将其携带至 LG Electronics 授权服务点或经销商处以寻求帮助。
- 手机充好电后，请务必将充电器从墙上插座拔下，以避免不必要的耗电。
- 实际的电池寿命将取决于网络配置、产品设置、使用方式、电池和环境条件。

GD550 User Guide - English

This guide will help you understand your new mobile phone. It will provide you with useful explanations of features on your phone.

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.



Disposal of your old appliance

- 1** When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
- 2** All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- 3** The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
- 4** For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.



Getting to know your phone

Power key

Turns the phone on/off.



Main screen

Navigation keys

OK key

Selects menu options and confirms actions.

Call key

Dials a phone number and answers incoming calls.


Soft keys


Each of these keys performs the functions indicated by the text on the display immediately above them.

End key

Ends or rejects a call. Returns to the home screen when you use the menu.

Clear key

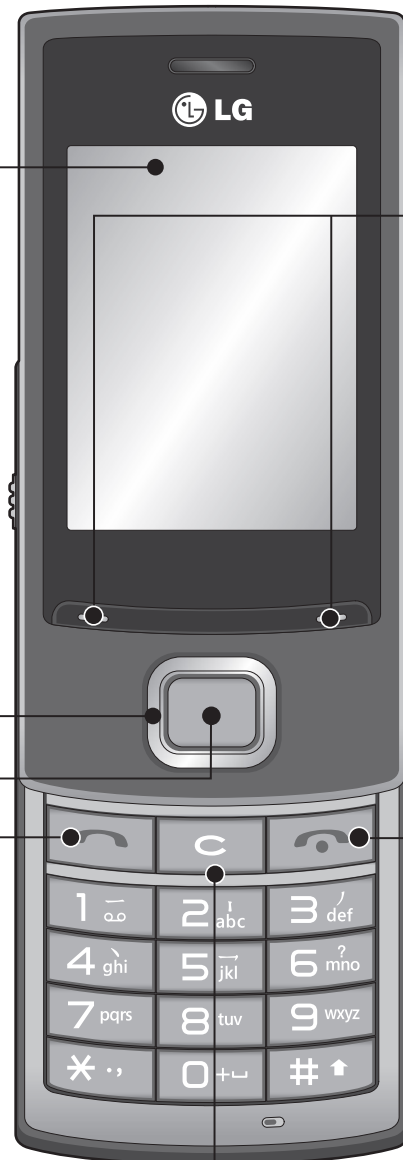

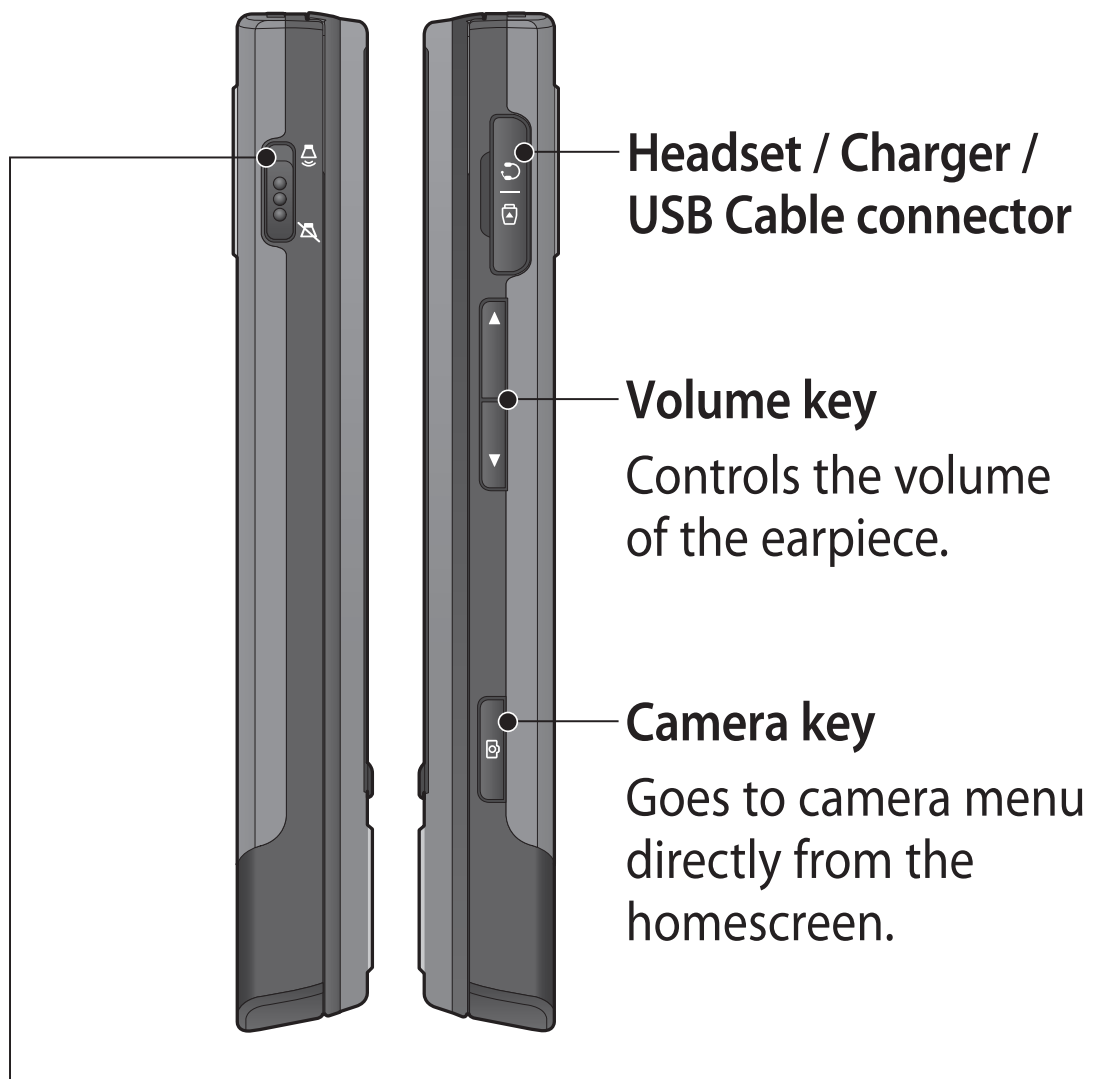

Profile switch

Turns the sound on or off from any screen including the lock screen by sliding it up and down. (Incoming call, listening to music, alarm rings, and etc.)

This is only for the sound. If you want to change the settings for vibration, go to **More > Settings > Tones > Call and message**. **Vibrating alert** is set to **On** as default.

Installing the SIM Card and Charging the Battery

Installing the SIM Card

When you subscribe to a cellular network, you are provided with a SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.


Important!

› The SIM card can be easily damaged by scratches or bending it, so be careful when

handling, inserting or removing the card. Keep all SIM cards out of reach of small children.

Illustrations

- 1 Open battery cover
- 2 Remove the battery
- 3 Insert your SIM
- 4 Insert your battery
- 5 Close the battery cover
- 6 Charge your battery



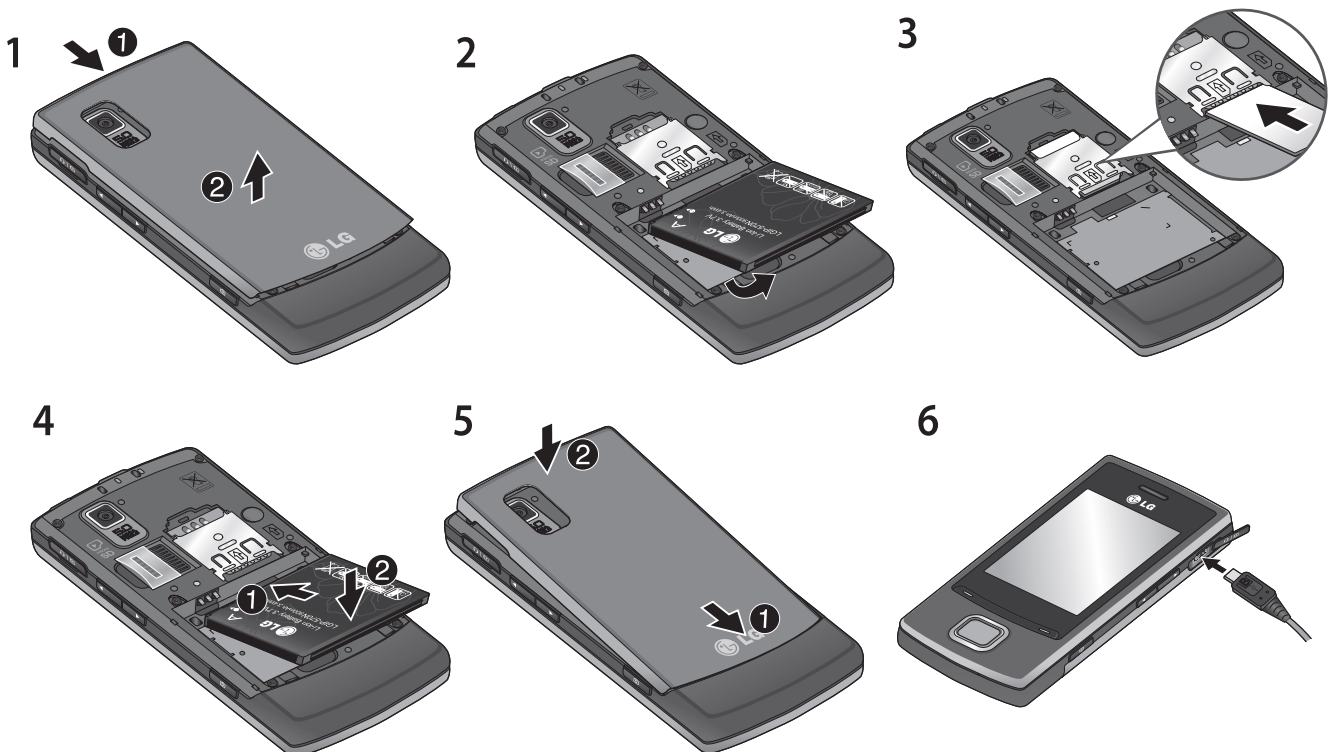


WARNING: Do not remove the battery when the phone is switched on, as this may damage your phone.

Installing a memory card

Lift the battery cover and insert a micro SD card into the card socket with the gold contact area facing downwards.

Note: A memory card is an optional accessory.

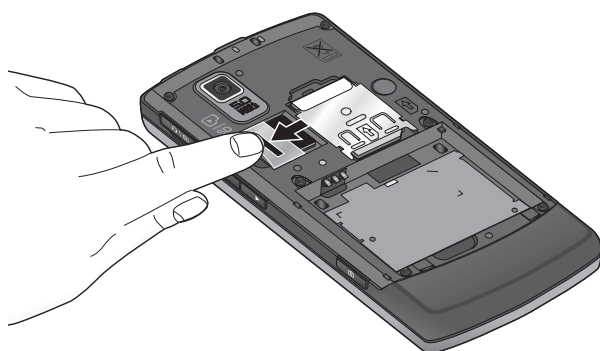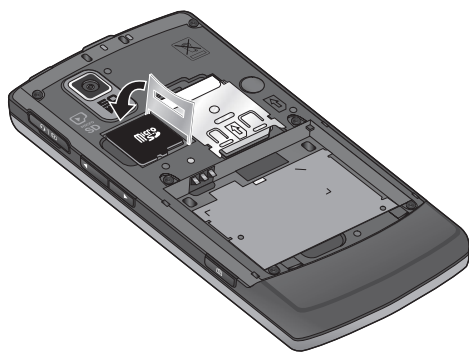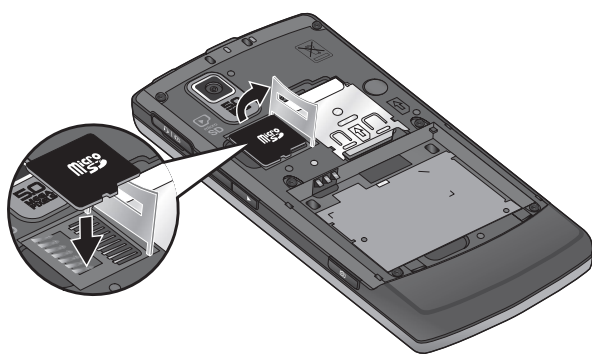

Formatting the memory card

Tap **More** and choose **Settings** > **Device** > **Memory info**.

Select **External memory** and press **Clear** using the left soft key, select **Yes** and enter the security code and select **OK**.

WARNING: When you format your memory card, the entire contents will be wiped. If you do not want to lose the data on your memory card, back it up first.


Your home screen

GD550 provides a simple,easy home screen with the carousel view which allows you to move to menus from side to side.

There are five dots on the upper side of the home screen. Each dot indicates a different menu and you can move among them by pressing the right and left navigation keys.

Number of menus you can choose

The focused dot shows your current position.

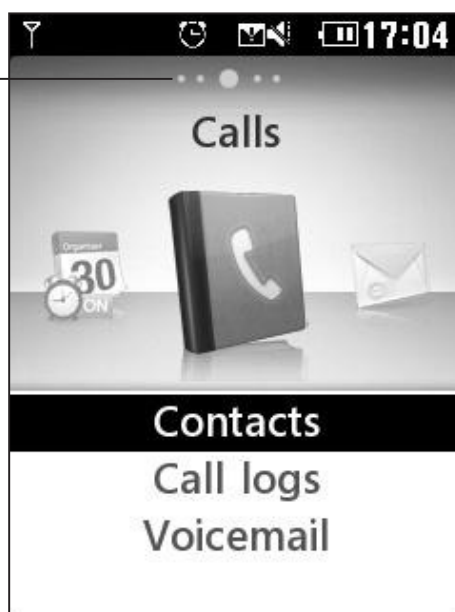

Main menu icons

Use left or right navigation keys to move among the main menus.

Corresponding sub-menu

Use the up or down navigation keys to search the sub-menu.

Your home screen always starts with the **Calls** menu and you can move right or left from here.

In **Contacts**, **Call logs** and **Message box** menus, you can use this carousel view.

TIP! If you enter the alphabet or numbers in **Contacts**, **Call logs** and **Message box** menus, the corresponding results are searched.

Your lock screen

When the slide is closed, typically the active applications are terminated and the lock screen appears.

Setting the active applications when the phone slide is down

- 1 Select **More** by using the left or right navigation key on your home screen and choose **Settings**.
- 2 Choose **Device**, then select **Slide down settings**.
- 3 Press the OK key to mark the applications you don't want to terminate when slide is closed.

Setting your lock screen

- 1 Select **More** by using the left or right navigation key on your home screen and choose **Settings**.
- 2 Choose **Screen**, then select

Lock screen.

- 3 You can choose the wallpaper image from the default images by pressing the right or left navigation key or from the photo album by pressing **Album** at the bottom left of the screen. You can also change the clock style for your lock screen.

TIP! When you slide your phone down, the menu you are using is terminated and the lock screen appears. However, if you are listening to Music or FM radio, or viewing the Video, these applications will not be terminated even when you slide your phone down. You can change the settings for this function in **Settings > Device > Slide down settings**. The options are: **Call, Camera, Video player, Music Player**.

Calls

Making a call

- 1 Key in the number using the keypad. To delete a digit press .
- 2 Press  to initiate the call.
- 3 To end the call, press .

TIP! To enter + when making an international call, press and hold 0.

TIP! You can go to the dialling screen by entering numbers from any menu on your home screen.

Making a call using your contacts list

- 1 Select **Contacts** from your home screen.
- 2 Using the keypad, enter the first letter of the contact name you want to call or the group name to which the contact belongs. For

example, for **Office**, Press 6 three times to select the first character, "O". You can change the input mode from alphabet mode to number mode or vice versa by pressing  button on the keypad.

- 3 Select **Call** from **Options** or press  to initiate the call.

Answering and rejecting a call

When your phone rings, press  to answer the call.

To mute your phone while it is ringing, simply slide the **Profile switch** down to off.

This is useful if you have forgotten to change your profile to **Silent** for a meeting.

Press  or select **Reject** (right soft key) to reject the incoming call.

TIP! You can set the vibrating alert to **On** when you go to **More > Settings > Tones > Call and message > Vibrating alert**.

Using the speakerphone

During a call or when you are making a call, you can activate the speakerphone by selecting **Activate speaker** and you can use the handset in hands-free mode.

If the speakerphone is active, select **Deactivate speaker** to resume normal handset conversation mode.

Speed dialing

You can assign a speed dial number to a contact you call frequently. To assign speed dial go to **Contacts > Options > Settings > Speed dials**.

You can use the carousel view which allows you to assign a number to any contact saved in your phone on a screen.

Speed dial 1 is set to your voice mail and you cannot change it.

You can assign up to 8 speed dials numbered from 2 to 9.

Once you have assigned a speed dial, you can initiate a call by pressing and holding the speed dial number.

TIP! When you press and hold keys  to , if the assigned speed dial number is empty, you can assign the speed dial number directly.

Viewing your call logs

Go to **Calls** from the home screen and select **Call logs**.

You can check the call record of missed, received, and dialled calls using the carousel view. Use the right navigation key to view older call logs.

You can also go directly to the desired contact's call logs if you enter the first letter of the

contact name or the phone number if the number is not saved in your phone.

Continuous call logs for the same contact will be shown as one log and the number of missing, received, or dialled calls for the contact is shown below the contact image. If you type the first letter of the contact, all call logs for the contact are combined as one item.

You can use the down navigation key to view all detailed logs for each contact including time and call duration.

Contacts

Searching for a contact

- 1 Go to **Calls** from the home screen.
- 2 Select **Contacts**.
- 3 Press the right navigation key to search for a contact in alphabetical order, or enter the first letter of the contact name to find it directly.

If a contact has more than 3 items of detailed information such as phone number, e-mail address and so on, you can view the next item by pressing the down navigation key.

TIP! If you want to view the contact list as a list, not a carousel view, go to **Options > Settings > Display settings** and set **Contacts image** to **Off** on the contact screen.

Creating Me Card

This option shows your information. Here you can change the name and alter information such as **E-mail, Job title, Memo** and etc.

- 1 Go to **Calls** from the home screen.
- 2 Select **Contacts**.
- 3 Press the left navigation key twice to select **Me**. This is a default name. If you press **Add** and provide a new name, this will be shown instead of **Me**.
- 4 Select **Options** and choose Add from my number, so that you can add your number from sim.

Note: This option will be available only if you set my number (to set my number go to options and choose sim contacts then select my number then select options and select my new number and enter the details and press save).

Adding a new contact

- 1 Go to **Calls** from the home screen.
- 2 Select **Contacts**.
- 3 Press the left navigation key once and press the OK key to add a contact.
You can also add a new contact by selecting **Options** and choosing **New contact**.
- 4 Choose whether to save a contact to **Internal memory** or **SIM** and add the first name, and the last name. You can change the entry mode (e.g. upper/lower case letter, or number) by pressing the  button on the keypad.
- 5 The contact image is assigned randomly as default and you can change the picture for that contact. If you want to choose a picture from a given list, press the right navigation

key. Press the left navigation key once to select from the photo album and press left navigation key once more to take a picture and use the picture directly. If you choose the oversized picture for the contact image, you are directed to the **Crop** screen so that you can crop the image as you wish and set the image as the contact image.

TIP! When you take a photo from the home screen and set the image size in the Settings menu to **Contact**, you can acquire a maximum sized contact picture.

- 6 Select + **More** if additional information is required such as **E-mail**, **Ringtone** or **Homepage** etc.
- 7 Save the phone number. Dots on the top of the screen will be added one by one when you add a new

contact or a new group.

TIP! When you want to store the e-mail address of a contact, you can easily add the E-mail endings by selecting **E-mail** in the **More** menu and pressing **Options** on the bottom left-hand side of the screen and choosing one from the list. The options are: **@hotmail.com**, **@msn.com**, **@yahoo.com**, **@gmail.com**.

Adding a contact to a group

You can save and manage your contacts by groups, such as work colleagues and family. To add a group go to the option by pressing the left soft key from the contact menu and select **New group**. You can choose whether to add the group to **Internal memory** or **SIM**, name the group and set the ringtone for the group. When you select **Save** at the bottom right of the screen,

the prompt message asking you to add members pops up on the screen. You can add a member to the group directly by pressing the OK key from this message. Use the right or left navigation key to search the contact list.

Messaging

Your GD550 includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service), and e-mail as well as service messages for the network.

Viewing your messages

- 1 Go to **Messages** from the home screen.
- 2 Select **Message box**.
- 3 Messages will be displayed as a carousel view. The most recent received or sent message will be shown first below. To the right-hand side, you can see the

message history by contact name. The contact name for the most recent message is shown first. You can also view messages from certain contacts directly by entering the first letter of the contact name. To the leftmost you can see the draft folder which stores unsent messages.

TIP! If you have unread messages, then the 'New message' folder will appear after the draft folder.

- 4 By pressing the down navigation key, you can see the detailed history of all messages received from and sent to that contact. Yellow messages are new messages. Green messages have been received and grey messages are sent messages.

TIP! You can expand and collapse the message display by pressing . You can choose the default display between **Expanded view** and **Collapsed view** in **More > Settings > Messages > Message display**.

Sending a message

- 1 Go to **Messages** from the home screen.
- 2 Choose **Write message** to send an SMS or MMS.
- 3 A new message editor will open. The message editor combines text messages and multimedia messages. The default setting for the message editor is the text message.
- 4 Select **Options** at the bottom left of the screen and choose **Insert** to add an Image, Video, Sound, Text templates, Multimedia templates, Name & Number, etc.

- 5 Select **Send to** to add recipients by pressing the OK key. You can enter any letters included the contact name or select **Contacts** by pressing the OK key to choose from contact list.

- 6 Press **Send**.

TIP! You can select your message type as **Multiple SMS** or **MMS** when you enter a text longer than 1 page in the message field. If you want to change the type of message to send, press **More > Settings > Messages > Text message**, and choose **Send long text as**.

WARNING: If you add an image, video, sound or multimedia templates, etc. to the message, it will be converted automatically to MMS mode and you will be charged accordingly.

Features of MMS

When you receive an MMS, you will only see the first slide of the MMS. This MMS message status will not be changed to 'read' unless you select the message and press the OK key to select **View**, then select the play button in the centre of the bottom of the screen.

For a received SMS message, you can reply to it simply by pressing the OK key.

Entering text

The text input methods can be changed by pressing  : ABC/Abc/abc/123.

If you want to use T9 mode, press and hold the  key. Or when you press Left soft key and select **Writing options**, you can turn the **T9 Dictionary** on or off.

T9 mode

T9 mode uses a built-in dictionary to recognise the words you are writing based on the sequence of the keys you press. Simply press the number key associated with the letter you want to enter, and the dictionary will recognise the word once all the letters are entered.

Abc mode

This mode allows you to enter letters by pressing the key labelled with the required letter once, twice, three or four times until the letter is displayed.

123 mode

Type numbers by using one keystroke per number. You can also add numbers while remaining in letter modes by pressing and holding the desired key.

Changing the language

GD550 supports various languages.

There are two ways to change the writing language from the writing screen. You can press **Options**, go to **Writing options**, choose **Writing language** and then set the language you want. Or, you can simply press and hold the  key. The writing options may differ depending on the language you choose. For example, when you choose 한국어 as **Writing language** you can use the Korean keypad by pressing **Options > Writing options > 한글자판보기**.

Inserting symbols

If you want to insert symbols, press , then you can choose a symbol. Or you can press **Options** and then choose **Insert symbol**.

Other Options

In **Options**, you can also use **Save to drafts**, **Insert**, and **Copy/Paste**. If you use **Copy/Paste**, you can choose part of or the entire text you have entered in the writing screen and copy and paste this as many times as you wish. You can also use this function when you write an e-mail or create a memo.

Setting up your e-mail

You can stay in touch on the move using e-mail on your GD550. It's quick and simple to set up a POP3, IMAP4 or MS Exchange e-mail account.


- 1 Go to **Messages** from the home screen.
- 2 Select **E-mail**.
- 3 Select **Yes** when the setup message appears and follow the setting up procedure for each account.

Sending an e-mail

- 1 Go to **Messages** from the home screen.
- 2 Select **E-mail**, then choose an account. The folders such as **Inbox**, **Sent items**, **Trash**, etc. are shown as the carousel view just like the home screen. **The Inbox** folder is shown first and the **Write e-mail** menu is the menu furthest to the left.
- 3 Choose **Write e-mail** by pressing the left navigation key continuously.
- 4 Enter the recipient's address and a subject.
- 5 Enter your message.
- 6 Press **Options**, select **Insert** to add an **Image**, **Video**, **Sound**, **Text templates**, **Signature**, etc..
- 7 Press **Send** and your e-mail will be sent.

Camera

Taking A Quick Photo

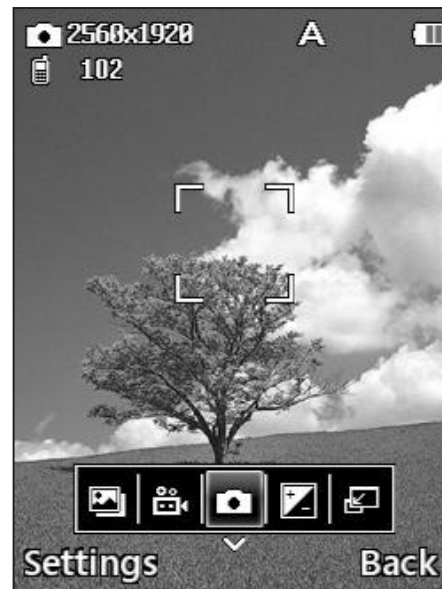

Go to **Camera** from the home screen and select **Take photo**.

Or you can press the camera key on the right-hand side of the phone briefly.

- 1 Holding the phone horizontal, point the lens towards the subject you want to photograph.
- 2 Press the camera key lightly, and a focus box will appear in the centre of the viewfinder screen.

- 3 Position the phone so you can see the subject in the focus box.
- 4 When the focus box turns green, the camera has focused on your subject.
- 5 Press the camera key again.

TIP! You can zoom in or out by pressing the volume keys on the right-hand side of the phone or by pressing the up and down keys on the navigation keys.

Set as - Select to use the image as **Wallpaper, Contacts image, Startup image, or Shutdown image.**

Delete - Select to delete the image.

Once you have taken the photo

Your captured image will appear on the screen.

Album - Select to view the album.

Send - Select to send the photo by **Message, E-mail or Bluetooth.**

New - Select to take a new photo.

Video Camera

Shooting a quick video



Go to **Camera** from the home screen and select **Record video**. Or you can press the camera key on the right-hand side of the phone.

- 1 The viewfinder for the video camera will appear on the screen.
- 2 Holding the phone horizontal, point the lens towards the subject of the video.

3 Press the camera key or the OK key once to start recording.

4 **REC** will appear at the bottom of the viewfinder with a timer showing the length of the video.

5 Press the camera key or the OK key once more to stop recording.

After taking a video

A still image representing your video will appear on the screen.

Album - Select to view the album.

Play - Select to play the video.

New - Select to take a new video.

Send - Select to send the video by **Message**, **E-mail** or **Bluetooth**.

Delete - Select to delete the video.

Organiser

Alarm clock

Go to **Organiser** from the home screen and select **Alarm clock**.

From the alarm clock screen, press the left soft key to turn the alarm on or off, and set the time at which you want the alarm to go off. After you set the time, the GD550 will notify you how much time is left before the alarm goes off.

Calendar

Go to **Organiser** from the home screen and select **Calendar**. A square cursor is located on the current date. You can move the cursor to another date by using the navigation keys. Press the OK key to view schedules for that day. If there is no schedule, you can add a new one and customise it by pressing **New schedule**. The phone will

sound an alarm tone which you have set for the specific schedule item.

The following [Options] are available:

- ▶ **New schedule** - Allows you to set your personal schedule on the selected date.
- ▶ **Go to Date** - Allows you to jump to a specific date.
- ▶ **Key functions** - Allows you to see the key functions for the calendar.
- ▶ **Settings**

Memo

Go to **Organiser** from the home screen and select **Memo**.

- 1 Select **New Memo** on the screen to create a new memo.
- 2 Enter the memo and press the OK key to save. Your memo will be added and displayed on the screen.

Use the navigation keys to search your memo.

Showing a memo on the lock screen

- 1 Select the memo using the left or right navigation keys and press the left soft key to open **Options**.
- 2 Select **Show on lockscreen**, then the red pin will be attached to the memo.
- 3 You can see the memo when the slide is closed. If you want to remove it from the screen, press **Options** and select **Remove from lockscreen**.

More

News

When you enter this menu, the weather forecast screen will be displayed. If you select the OK key you can see more detailed weather information. Or you can see the news by pressing the right navigation key.

If you press the OK key at **My news**, you can **Add** more feeds as you wish or store it as **My feed** while surfing. You can also press the left soft key to use **Options** to set the **Update schedule**.

Applications

• Music

You can play songs, categorise songs by **Artists**, **Albums**, and **Genres**, or create **My playlists**. **Now playing** - This menu only appears while BGM is playing.

You can use several options such as **Add to playlist**, **Rating**, etc. and change the Settings for Repeat, **Shuffle** and **Equalizer** by pressing **Options** on bottom left of the screen.

Last played song - This menu appears while BGM is not playing. When you choose this menu, you can listen to the song which was played last. You can use the same options as **Now playing**.

All Songs - You can view all the songs in the internal and external memory. If you press **Options**, you can use several options such as Set as **Ringtone**, **Send via Bluetooth**, **Search** and etc.

My playlists - You can make and view your playlists.

Artists - Shows the list of artists for all the songs in your music library, and shows all the songs by a chosen artist.

Albums - Shows the list of albums for all the songs in your music library, and shows all the songs on a chosen album.

Genres - Shows the list of genres for all the songs in your music library, and shows all songs for a specific genre.

Shuffle all songs - You can view all the songs in your music library with shuffle.

Note: Music files may be protected by copyright and intellectual property laws. Please ensure that you adhere to the applicable Terms of Use relating to material laws prior to downloading or copying files.

- **FM radio**

Your LG GD550 has a built-in FM radio so you can tune in to your favourite stations and listen on the move. If you press the left soft key, you can use **Edit channel**, **New channel**, and **Edit station name** options. If you press the OK key, you can see the **Channel list**. In **Channel list**, you can also set your channels and readjust your settings.

Note: You must attach your headphones to listen to the radio. Insert them into the headphone jack on the right-hand side of the phone.

- **Internet**

You can access the internet. Internet gives you a fast, colourful world of games, music, news, sports, entertainment, and much more, on your mobile phone. Wherever you are and whatever you're doing.

Note: Additional charges apply when connecting to these services and downloading content. Check data charges with your network provider.

- **Google Maps**

Check your current location and traffic and receive directions to your destination.

• My stuff

You can access your data in this menu.

All data is shown in the **All** tab and if you press the right navigation key, you can check only the internal memory data.

Images - You can view all images in the phone and use **Options: Set as Wallpaper** and etc, **Rename, Edit, Send via, Print via, Sort by** and etc.

Videos - You can play all videos in the phone and use **Options** as for **Images**.

Sounds - You can play all sound files in the phone and use **Options** as for **Images**.

Games & apps. - You can see all games and applications in the phone and use **Options: Send file info, File info, Permission**, etc.

Documents - You can see all documents in the phone.

Other content - You can check other content besides the above.

Tools

• Calculator

The calculator function allows you to add, subtract, multiply and divide. You can enter numbers and operators by using the keypad.

Use the  key to delete numbers.

For more complex calculations, press **Options** and choose between **+/-, sin, cos, tan, log, ln, exp, sqrt, deg, rad, x^y** or **X^2**.

• Voice recorder

Use the **Voice recorder** to record voice memos or other sounds.

Press the OK key to start recording.

Press the Left soft key to pause recording. To continue recording, press again.

To stop recording, press the OK key. The recording will be saved automatically

Options - If you press **Options**, you can use **Play**, **Delete**, **Set as Ringtone** or **Message tone**, or **Send via Message**, **E-mail** or **Bluetooth** options.

Album - You can choose audio files to record.

Storage - When the Memory card exists, you can assign the default storage to External memory or Internal memory.

Recording mode - MMS record mode shortens the time so that the recording can fit in a MMS.

Normal mode provides a longer recording time.

• **Stopwatch**

This menu allows you to record the elapsed time of an event. The duration of an individual lap time (up to 99 times) and the total time can also be displayed.

• **Unit converter**

This function converts any measurement into a unit you want.

There are 7 types of units that can be converted: **Currency**, **Area**, **Weight**, **Length**, **Temperature**, **Volume**, and **Velocity**.

• **World clock**

The World clock function provides time information in major cities worldwide. You can add cities by pressing the left soft key and also use **Set as second city**, **Edit current date & time**, **Daylight saving**, **Clock type**, **Delete** and **Delete all** options.

Settings

• Device

(More > Settings > Device)

You can personalise your device setting. Select the menu you want to change and set the value.

Date and time

You can set functions relating to the date and time.

Language

You can change the language set as **Main language** for display and **Writing language** for writing texts.

Security

Change your security settings to keep your GD550 and the important information safe.

Lock device - Choose when to lock your handset.

Lock application - Choose the menu to lock from the list.

PIN code request - Choose a PIN code to be requested when you turn your phone on.

Change codes - Change your **PIN code** (This menu item will appear if PIN code request is set to On), **PIN2 code**, **Security code**.

Memory info

You can use **Memory info** to determine how each memory is used and to see how much space is available: **Internal common memory**, **Internal reserved memory**, **USIM memory** and **Primary storage settings**.

Power save

Choose to switch the power save settings : **On** or **Off**. If you set **On**, you can save battery power.

Flight mode

Use this function to switch the flight mode on. You will not be able to make calls, connect to the Internet, or send messages when flight mode is switched on.

Slide down settings

You can set the active applications when the slide is down.

Reset settings

Use **Reset settings** to reset all the settings to their factory defaults. You need the security code to activate this function. The default security code is set to "0000".

• Tones

(More > Settings > Tones)

You can select the tones and adjust the volumes for the device.

Your options are:

Call and message

Other tones

• Screen

(More > Settings > Screen)

You can change the settings for the phone display.

Lock screen

You can set images and clocks on the lock screen.

Font

You can set font style and size.

Backlight

You can set the duration for the screen backlight to remain lit.

Startup image

You can set images for startup.

Shutdown image

You can set images for shutdown.

• Calls

(More > Settings > Calls)

You can change the call settings.

Common settings

You can set functions relating to the common call settings: **Show my caller ID**, **Call reject list**, **Auto redial**, **Bluetooth answer mode**, etc.

Call durations

You can check the duration of your call. You can reset the duration by pressing the left soft key after entering security code.

Data volume

You can view your data volume. You can reset the volume by pressing the left soft key after entering security code.

Call costs

You can check the **Last call** units or **All calls** units. Or **Set call cost** and **Set limit**. You can reset **Last call** and **All calls** by pressing the left soft key after entering the **PIN2 code**.

Call divert

You can choose to reroute calls to another number: **All calls**, **If busy** and etc. If you press the left soft key, you can choose **Deactivate**, **Deactivate all**, etc.

Call barring

You can restrict outgoing and incoming calls.

Fixed dial numbers

You can select **Fixed dial numbers** to turn on and compile a list of numbers that can be called from your phone. You will need your **PIN2 code**, which is available from your operator. Only

numbers within the fixed dial list can be called from your phone.

Call waiting

You can set this to be notified of incoming calls during a call.

• Messages

(More > Settings > Messages)

Message display

You can select different display options for viewing a message.

Text message

You can set functions relating to the **Text message**.

Multimedia message

You can set functions relating to the **Multimedia message**.

E-mail

You can set functions relating to **E-mail**.

Signature

You can create your text signature You can use symbols and text as part of the signature.

Service message

You can set functions relating to the **Service message** including **Service security**.

Message counter

You can set the specific period in which to be informed of the sent message information. If you choose **Reset**, data will be initialised.

Info message

You can set functions relating to the **Info message**.

- **Cell broadcast** on/off
- **Channels** : create, view or edit channels to receive information messages.
- **Languages** : choose the languages for information messages.

• Internet

(More > Settings > Internet)

Profiles

You can view the internet profiles. You can add, delete and edit internet profiles by using the left soft key. However, you cannot delete or edit default configurations.

Appearance settings

You can choose the settings for the browser appearance. (Character encoding, Scrolling control, Font size, Show image, and Java script.)

Cache

The web pages you have accessed are stored in the memory of the phone.

- **Clear cache**: Remove all cached data in the memory.

Cookies

The information about services you have accessed is stored in what are called **Cookies**.

- **Clear cookies:** Remove all cookies in the memory.

Security

- **Certificates:** You can see the list of certificates and view them in detail.
- **Clear session:** Removes the secure session.

• Bluetooth

(More > Settings > Bluetooth)

Set up your GD550 for **Bluetooth** use. You can adapt your visibility to other devices or search through devices with which your phone is paired.

Bluetooth on/off

You can turn the **Bluetooth on or off**.

Search new device

Your GD550 will search for devices. When the search is completed **Add** and **Refresh** will appear on screen. Choose the device you want to pair with, then the handset will create a passcode by defaulting every time you connect.

Your phone will then connect to the other device.

Your passcode protecting the Bluetooth connection is now ready.

Paired devices

You can check the paired devices.

If you press the left soft key and select **New Device**, then you can search for devices to connect to.

Settings

Make your changes to:

- **My device visibility:** Choose whether to be **Visible**, **Hidden**, or **Visible for 1 min** from your device to others.
- **My device name:** Enter a name for your LG GD550.
- **Supported services:** Shows what the phone supports.
- **Remote SIM Mode On/Off**
- **My address:** View your Bluetooth address.

• Connectivity

(More > Settings > Connectivity)

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone from switch on. If you want to change any settings, use this menu. You can configure the network setting and data access profiles in this menu:

USB connection

You can select the USB connection mode on your phone for several uses.

- **PC internet:** You can use the phone as a modem for your computer by using a USB cable.
- **Mass storage:** Select this option and connect the handset to your computer and drag and drop files to the removable device folder of the GD550.

- **PC Suite:** Select this mode and connect the handset to your computer in PC Sync mode.
- **Always Ask:** Selecting this mode will give an option to select the mode, whenever the handset is connected to the computer.

• Help

(More > Settings > Help)

You can view more detail information for your GD550.

Software Upgrade

LG Mobile Phone Software Upgrade Program

For more information on installing and using this program, please visit <http://www.lgmobile.com>

This feature allows you to upgrade your software to the latest version quickly and conveniently on the Internet without needing

to visit our service centre.


The mobile phone software upgrade program requires the user's full attention for the duration of the upgrade process, so please be sure to check any instructions and notes that appear at each step before proceeding.

Please note that removing the USB data communication cable or batteries during the upgrade may seriously damage your mobile phone. The manufacturer takes no responsibility for loss of data during the upgrade process, so you are advised to note down any important information in advance for safekeeping.


Accessories

These accessories are supplied with the GD550.

Charger

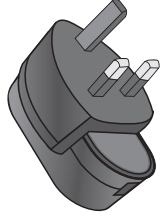

Data cable

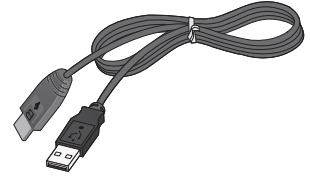

Battery



Stereo
headset



NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

Ambient Temperatures

Max.: +55°C (discharging)
+45°C (charging)

Min.: -10°C

Declaration of Conformity



Supplier's Details

Name

LG Electronics Inc

Address

: LG Electronics Inc. LG Twin Towers 20, Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

Model Name

GD550

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.8.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.3.2/ EN 301 489-24 V1.4.1
EN 300 328 V 1.7.1
EN 60950-1 : 2001
EN 50360:2001/EN62209-1:2006
EN 301 511 V9.0.2
EN 301 908-1 V3.2.1, EN 301 908-2 V3.2.1

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility
that the product mentioned above to which this
declaration relates complies with the above mentioned
standards and Directives

LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands

Name

Issued Date

Seung Hyoun, Ji / Director

16. Mar 2010


Signature of representative

Guidelines for Safe and Efficient Use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information
This mobile phone model GD550 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 1.45 W/kg (10g) and when worn on the body is 1.31 W/Kg(10g).
- SAR data information for residents in countries/ regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

- **Product care and maintenance**



WARNING: Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Repairs under warranty, at LG's option, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.

Guidelines for Safe and Efficient Use

- Do not to charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.

- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

Efficient Phone Operation

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.

- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid Damage to Your Hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Guidelines for Safe and Efficient Use

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off or activate flight mode before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.

- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.



Warranty Card

產品保用證

Mobile Phone

手提電話

Warranty Card

產品保用證

LG Customer Care Centre
客戶維修服務中心

Welcome to contact for detailed information
歡迎致電查詢詳細資料

Customer Service Hotline 客戶服務熱線 : (852) 3543 7777
E-mail Us 客戶查詢電郵 : cshelpdesk@lge.com
LG Website 瀏覽網站 : www.lg.com

If you want to receive an additional 3 months warranty, please complete warranty registration within 1 month after purchase at
<http://www.lg.com/hk/support/registration/support-sign-in.jsp>
or (852) 3543 7777.

如欲享受額外3個月產品保養，請在購買產品後1個月內登入
<http://www.lg.com/hk/support/registration/support-sign-in.jsp>
或致電(852) 3543 7777 登記

Privacy Statement

You are aware that any information supplied by you after purchase of our product will be retained by LG Electronics HK Ltd. and will not be released to third parties. You also authorize LG Electronics HK Ltd. to send you direct promotion materials. Please contact our Customer Service Hotline at (852) 3543 7777 if you wish to modify or erase your provided personal information.

私隱聲明

閣下在購買本公司產品後所提供的任何資料，將會由LG Electronics HK Ltd. 保有，不會透露給予第三方，並授權本公司對閣下發出直接推廣通訊。如希望修改或刪除所提供的個人資料，可聯絡本公司客戶服務熱線(852) 3543 7777作出相關安排。

Thank you for your purchase of LG Electronics product under the terms and conditions listed on this warranty card.

多謝閣下購買及使用本公司之產品，請參閱保用證所列之產品保用條款。

IMPORTANT : Please keep and present this warranty card and purchase invoice when services are rendered. Otherwise, this warranty will be voided.

重要事項 : 顧客請保留此保用證及購貨發票，並需在檢查/維修時出示，否則保用無效。

Mobile Phone Warranty Policy

手提電話保用條款

- (1) LG Electronics Hong Kong Limited (hereafter LGEHK) provides warranty period from the date of purchase are as follows and only valid for mobile purchase in Hong Kong only (any promotion gift item is not included):

(i) Handset	: 12 months	(ii) Charger	: 6months
(iii) Battery	: 6months	(iv) Hand free earphone	: 3months
- (2) Warranty is valid only for authorized product; parallel import and counterfeit product are invalid.
- (3) Product is under warranty against manufacturing defects by reason of faulty workmanship or internal electronic parts materials. This warranty does not cover defects arising from natural wear of the product (Including casing, key pad, display, antenna, and accessories, etc.)
- (4) If check-up or repairing are required, customer must present the original invoice and warranty card on which the relevant IMEI number was printed. Upon any failure to present the above documentation, customer must pay for the costs of the services provided.
- (5) All parts replaced within the warranty period are the property of LGEHK. We have rights to handle those parts as necessary.
- (6) Data stored in handsets may be lost after the repair and thus should be properly stored by customer beforehand.
- (7) Warranty will be voided under the following conditions, and LGEHK reserves the right to refuse providing service and/or shall demand charges for any costs of servicing from customer:
 - (i) Product has been tampered with or undergone unauthorized repair by third parties, improper installation, alternation or modification to this product, or damage, tearing, removal of the warranty sticker that is affixed to this product.
 - (ii) Defects arising from misuse, mishandling, abuse, accident, negligence and damage caused directly or indirectly by fire, flood, liquid water, corrosion, convulsion of nature, war, riot or civil commotion.
 - (iii) The IMEI number sticker on this product has been erased or modified.
 - (iv) The content of warranty policy has been modified without authorization.
- (8) LGEHK is not responsible for any loss of data or system corruption during the process of transportation or repair to and from the Service Centre and due to the forces of nature.
- (9) LGEHK reserves the right to terminate or modify the terms of this warranty card. For exceptional cases, subject to report of our investigation, we reserve the right to terminate this warranty card or modify terms of warranty policy.
- (10) Our company will not be liable for any loss directly or indirectly caused by the breakdown of the product.
- (11) This warranty card is restricted within Hong Kong SAR only.
- (12) LG and its Authorized Service Centers reserve the right to use refurbished or reconditioned parts or whole products for the same or functionally equivalent model when conducting product repairs and replacement.

- (1) 本公司為客戶提供保修期如下，只適用於香港購買之手機，並不包括各促銷活動之贈品(由購買日起計)

(i) 機身	: 12個月	(ii) 充電器	: 6個月
(iii) 電池	: 6個月	(iv) 免提耳機	: 3個月
- (2) 保修服務只適用於原裝行貨；水貨及冒牌貨均屬無效。
- (3) 此保修只適用於生產上的瑕疵，如電子零件偶然出現毛病，並不包括手機的自然磨損包括外殼、鍵盤、顯示屏、天線、附件等。
- (4) 用戶要求維修服務時，須同時攜同手機、保用證及印有IMEI號碼之有效發票正本到本公司指定之維修中心進行維修，否則保修服務無效，客戶須繳付維修費用。
- (5) 在保修期內維修更換後的所有零件、配置及附件，均屬本公司所有，本公司有權作出任何處理。
- (6) 手機內存資料有可能因維修後遺失，請顧客要自行保存。
- (7) 在下列情況下本保用證將自動失效，本公司有權拒絕維修該手機或向客人徵收所有的維修費用。
 - (i) 手機曾作未許可之維修、不適當的安裝、更改，或貼於其上的維修貼紙遭受損毀、撕破、除去，保修服務即無效。
 - (ii) 手機曾被錯誤使用，錯誤處理，疏忽使用，直接或間接意外由火、液體、火災、腐蝕、地震、戰爭、暴亂或天災所造成的損壞。
 - (iii) 手機上的IMEI號碼貼紙一經修改或除去，保修服務即無效。
 - (iv) 擅自修改本保用證的內容。
- (8) 本公司將對任何於使用、維修或運送時引致之系統錯誤及資料流失，或因天然災害，意外事件造成之損失概不負責。
- (9) 本保用證的發出及終止權均屬本公司所有。就不明的情況或個案，經審查後，本公司有權發出或終止本保用證。
- (10) 本公司將不負責由於產品損壞而直接或間接引致之任何損失。
- (11) 此保用證只適用於香港特別行政區範圍內。
- (12) 本公司及其授權之維修中心在維修或更換產品時，保留使用與產品或功能相同的部分或全部再生零件之權利。

Service Commitment

服務承諾

LG's mission is to create value for customers. We are committed to improve the life of our customers by putting the customers first, and delivering the best possible pre and after sales services in the way they want.

為顧客創造價值乃LG一貫宗旨。我們致力提供最貼心的售前及售後服務，一切以顧客為先，希望為客戶帶來最優質的生活。

