



LG

Life's Good

繁體中文
简体中文
ENGLISH

使用手冊

GX500



CE 0168 

P/NO : MMBB0371105 (1.2) 

www.lg.com

Bluetooth QD ID B016312



此手冊中的部份內容可能會因手機程式之改良或不同網絡商提供的服務而令實際情況有所不同,這並不會另行通知。



GX500 使用手冊

恭喜您購買了 LG 先進輕巧的 GX500
手機，本手機專為最新 的數碼流動
通訊科技而設計。

內容

安全及有效使用準則	6	通訊錄	25
了解您的手機	10	搜尋通訊錄	25
手機背面	12	新增通訊錄	25
安裝智能咭和電池	13	建立群組	26
記憶咭	15	變更通訊錄設定	26
功能表總覽	16	檢視資訊	27
您的備用屏幕	17	訊息	28
觸控屏幕提示	17	訊息	28
快捷鍵	18	發送訊息	28
從狀態列變更狀態	20	輸入文字	28
使用多項工作功能	20	T9 模式	29
通話功能	21	Abc 模式	29
撥打電話	21	鍵盤	29
透過通訊錄撥打電話	21	手寫識別	29
接聽來電和拒接來電	21	設定電子郵件	30
快速撥號	21	擷取電子郵件	30
撥打其他電話	22	變更電子郵件設定	31
檢視通話記錄	22	訊息資料夾	31
使用來電轉駁	23	變更文字訊息設定	32
使用通話限制	23	變更多媒體訊息設定	33
變更一般通話設定	24	變更其他設定	33
		相機	34
		快速拍照	34
		拍攝相片後	34
		使用進階設定	35
		檢視已儲存相片	35

內容

視像攝錄機	36	其他	42
拍攝快速影片	36	音樂	43
錄製影片後	36	將音樂傳送至手機	43
調整曝光	37	播放歌曲	44
使用進階設定	37	建立播放列表	44
觀看已儲存影片	37	使用收音機	44
相片及影片	38	搜尋電台	44
檢視相片及影片	38	重設頻道	45
檢視照片時使用縮放	38	記事簿	46
檢視影片時調節音量	38	錄製聲音或語音	46
將相片設為牆紙	38	使用計算機	46
編輯相片	39	轉換單位	46
多媒體	40	新增城市至全球時間	46
圖片	40	使用秒錶	46
發送相片	40	PC Suite	47
列印圖像	40	在電腦上安裝 LG PC	
移動或複製圖像	40	Suite	47
聲音	41	連接手機和電腦	47
影片	41	備份和還原手機資訊	47
觀看影片	41	在電腦上檢視手機檔案	48
發送錄像片段	41	同步處理通訊錄	48
遊戲和應用程式	41	同步訊息	48
透過本地安裝，安裝遊戲/		音樂同步	48
應用程式	41	使用 Windows Media	
玩遊戲	42	Player 傳輸音樂	49
文件	42	DivX 轉換器	49
傳送檔案到手機	42		
檢視檔案	42		

網絡功能.....	51	配件	60
瀏覽器	51	網絡服務	61
存取網絡	51	技術數據.....	61
新增並存取書籤	51	故障排解.....	63
使用 RSS 閱讀器.....	51		
儲存網頁	52		
存取已儲存的網頁	52		
檢視瀏覽器記錄	52		
變更網頁瀏覽器設定	52		
將手機用作數據機	53		
設定.....	54		
使用雙智能咭功能表.....	54		
個人化情景模式	54		
變更屏幕設定.....	54		
變更手機設定.....	55		
變更連接設定.....	56		
網絡設定	56		
連接設定	56		
使用記憶體管理	56		
使用藍芽發送和接收 檔案.....	57		
同其他藍芽裝置配對.....	58		
使用藍芽耳機.....	59		
Wi-Fi.....	59		
軟件升級	59		

安全及有效使用準則

請讀取以下簡易的使用規則。
違反這些準則可能會發生危險或觸犯法律。

射頻能量暴露準則

無線電波暴露及比吸收率 (SAR) 資訊。

本手機型號 GX500 已為遵守無線電波暴露的應用安全要求而設計。此要求包括可確保市民安全的設計準則，範圍涵蓋各年齡階層與所有的健康狀況。

- 無線電波暴露指引的量度單位叫作比吸收率或 SAR。SAR 測試使用標準方法進行，用手機以在所有使用的頻帶最高的合格電源水平傳輸。
- 雖然不同型號的 LG 電話的 SAR 水平有所差異，但所有這些電話都為達到無線電波暴露的相關指引而設。
- 國際非離子化輻射保護委員會 (ICNIRP) 建議的 SAR 限制，即平均 10 克組織 2W/kg。
- 經 DASY4 測試，本型號手機在耳邊使用的最高 SAR 值為 1.45 W/kg (10 克)，攜帶於身上時則為 0.841 W/kg (10 克)。

- 採用了電氣與電子工程師學會 (IEEE) 建議的 SAR 限制，即平均 1 克組織 1.6 W/kg 的國家/地區居民的 SAR 數據資訊。

產品護理及維修

⚠ 警告：僅請使用經認可可用於此特定手機型號的電池、充電器及配件。使用其他種類的配件可能會導致手機的認可或保養失效，並可能引致危險。

- 請勿拆開此裝置。需要對手機進行維修時，請將其帶到合資格的維修技師處。根據 LG 的政策，保固期內的維修可能會包括更換部件或主板，這些用於更換的部件或主板可能是新亦可能是返修的，但其功能與被更換的部件相同。
- 請遠離如電視、收音機或個人電腦等電器產品而使用手機。
- 裝置需遠離發熱來源，如散熱器或烹調器具。
- 請勿摔落手機。

- 請勿讓此裝置遭機械震動或電擊。
- 請於任何有特殊限制的地方關閉手機。例如，請勿在醫院內使用手機，否則，它可能會對敏感的醫療設備造成影響。
- 請勿以潮濕的雙手對充電中的手機進行操作。這可能會導致觸電和造成手機嚴重損壞。
- 請不要在易燃材料附近為手機充電，因為充電期間手機會發熱並導致火災。
- 使用乾布清潔裝置表面（請勿使用如苯、稀釋劑或酒精等溶劑）。
- 切勿在柔軟家具上為手機充電。
- 手機應在通風良好的環境中充電。
- 請勿讓此裝置接觸過多煙或塵埃。
- 請勿將手機置於信用卡或車票附近，這可能會影響磁帶上的資料。
- 請勿以尖銳物件敲打屏幕，否則可能會對手機造成損毀。
- 請勿將手機暴露於液體或濕氣中。
- 請小心使用配件，如耳機。如非必要，請勿觸及天線。

有效手機操作 電子裝置

所有手機都可能會因為受到干擾而影響效能。

- 請勿在未得到批准下在醫療儀器附近使用您的手機。避免將手機放置在起搏點上，例如您的胸部口袋。
- 手機可能影響到某些助聽器。
- 輕微干擾可影響電視、收音機、個人電腦等。

道路安全

檢查您駕駛時地區使用手機的法例及規則。

- 駕駛時請勿使用手提手機。
- 請專心一致駕駛。
- 如有免提聽筒套件，請使用免提聽筒套件。
- 若有駕駛條例要求，請駛離馬路並停泊好汽車後才撥打或接聽電話。
- RF 能量可能會影響車內某些電子系統，例如車載立體聲音響及安全設備等。
- 如果您的汽車配有氣囊，切勿讓已安裝的無線設備或手提無線設備阻擋氣囊。它有可能因使用不當而失靈或造成嚴重損傷。

安全及有效使用準則

- 如果在外出時聆聽音樂，請確保將音量設定至合適水平，以便可以對週圍環境產生警覺。這在馬路旁邊時尤為必要。

避免損害您的聽覺

如果長時間以較大音量收聽，可能會對聽覺造成損害。所以我們建議開啟或關閉手機時，不要將它放於太近耳朵。我們亦建議將音樂及通話音量設定至合適水平。

爆破地區

請勿在進行爆破時使用手機。請嚴格遵守相關限制、規定或條例。

潛在爆炸氣壓

- 請勿在燃料補給點使用手機。
- 請勿在燃料或化學物質旁使用。
- 請勿使用放置了手機及配件的汽車傳輸或放置易燃氣體、液體或爆炸物。

在飛機上

無線裝置可引致飛機干擾。

- 登機前，請先關掉手機。
- 未經地勤人員批准，請勿在陸上使用手機。

兒童

請將手機放在兒童接觸不到的安全地方。手機包含微細零件，如果拆開，可能造成哽咽危險。

緊急撥號

緊急電話可能在某些流動網絡中不能發出。因此，您不應僅倚賴手機作為緊急電話方式。請向您本地的服務供應商查詢。

電池資料及保護

- 充電前，您無須完全放電。跟其他電池系統不同，沒有記憶影響可緩和電池的效能。
- 只使用 LG 電池及充電器。LG 充電器是為將電池壽命擴至最大而設。
- 請勿拆解電池組或造成電池組短路。
- 請保持電池組的金屬接點清潔。
- 當電池不再提供可接受的效能，請更換電池。電池組可重充數百次直至需要更換為止。
- 如果電池很久沒有使用來擴展其用量，需重充電池。

- 請勿直接將充電器暴露於日光下或高濕度環境（如浴室）中。
- 請勿將電池置於過熱或過冷處，此類場合可能會損害電池效能。
- 若使用類型不當的電池，則有發生爆炸的危險。
- 根據製造商說明棄置廢舊電池。請盡量回收利用。請勿作為家庭廢棄物處理。
- 如果需要更換電池，請帶同手機前往最近的授權 LG 電子產品服務點或經銷商以尋求協助。
- 請謹記在手機完全充電後從牆壁插座拔出充電器，避免充電器造成不必要的電力損耗。
- 電池的實際壽命將取決於網絡設定、產品設定、使用模式、電池及環境條件。

了解您的手機

關閉/電源鍵

結束或拒接通話。
開啟/關閉手機。
按一下可返回備用屏幕。



多項工作鍵

通話鍵


撥打電號碼及接聽來電。



⚠ 警告：手機置於口袋中時，若將較重物體置於手機上，或坐在手機上會損壞手機的 LCD 和觸控屏幕功能。

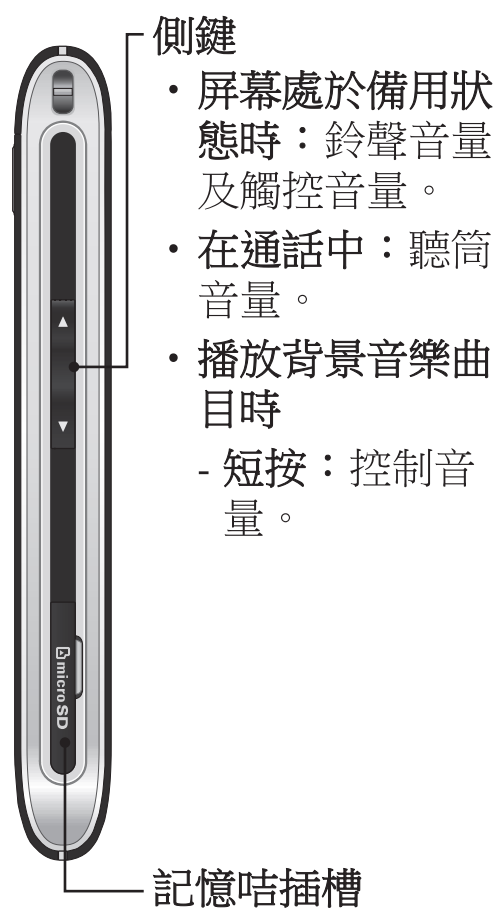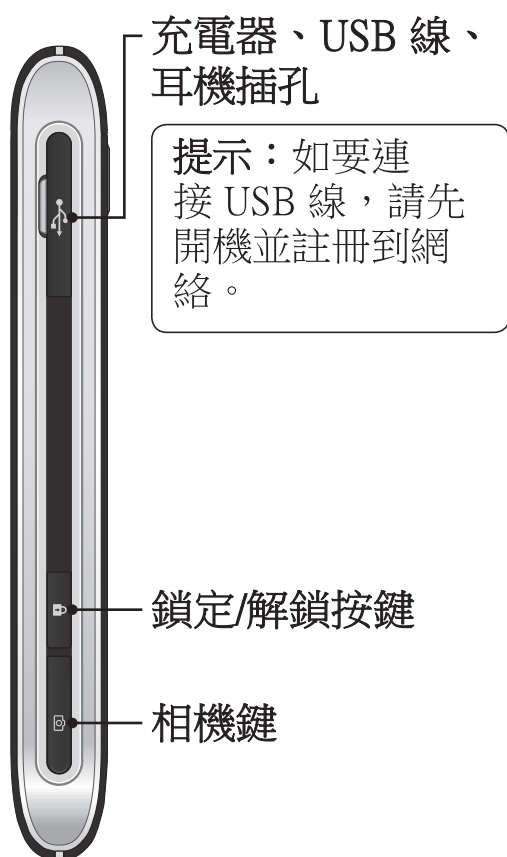


手機背面

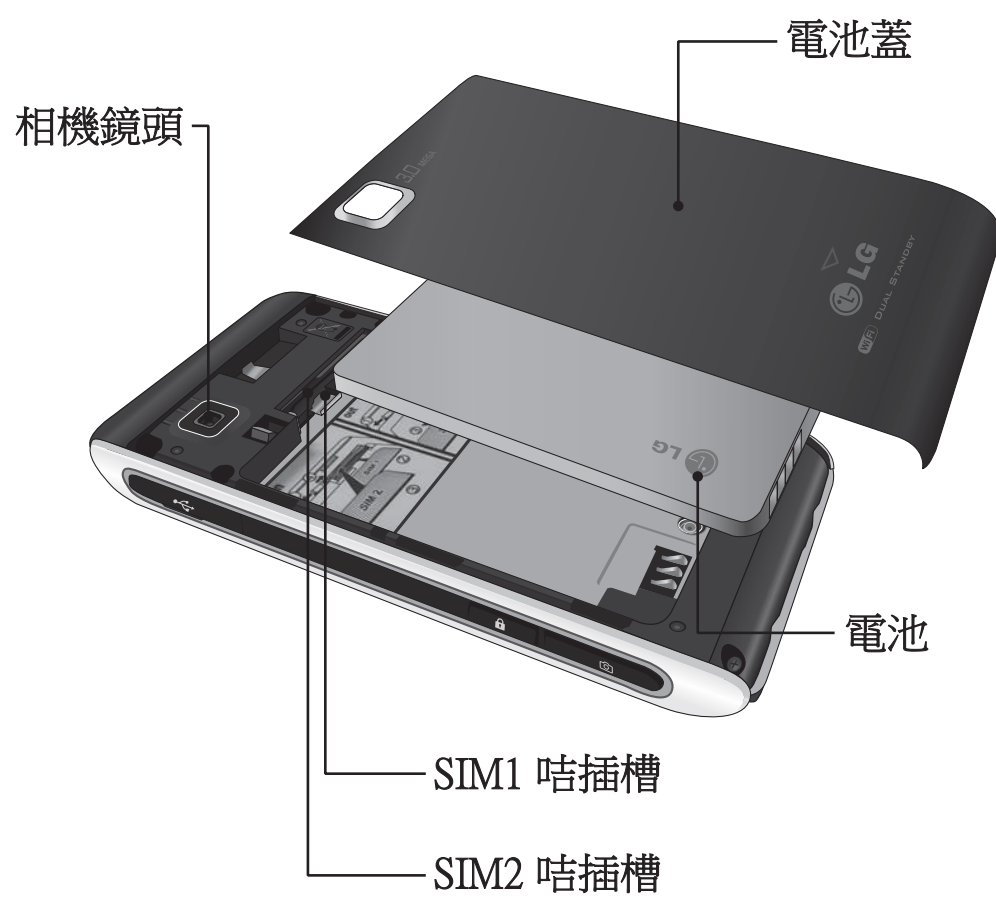

安裝智能咭和電池


1 取下電池蓋

向下滑動電池蓋並取下。

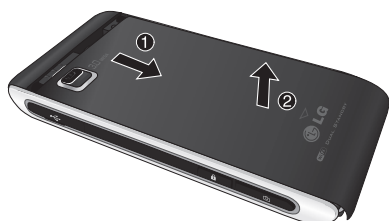

2 取下電池

拉起電池上方的邊緣，將其從電池格中取出。

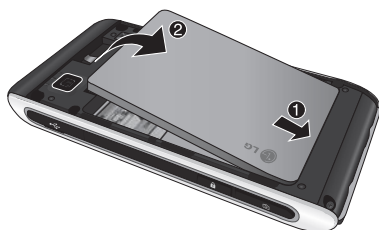


⚠ 警告：請勿使用指甲取出電池。


⚠ 警告：手機開機時，不要取下電池，因為這樣會損壞手機。

3 安裝智能咭

將智能咭滑入智能咭插槽。確保智能咭的金屬接觸面朝下。若要取出智能咭，請向相反方向輕輕取出。

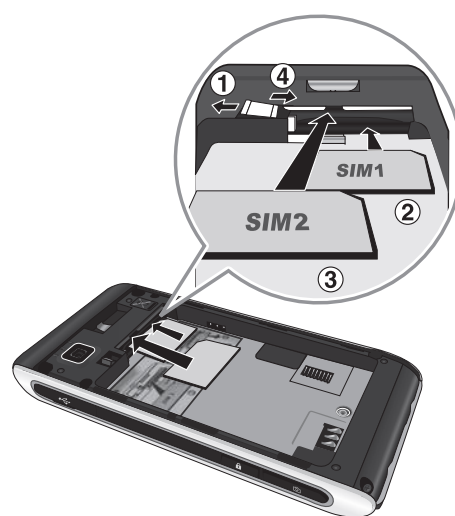

⚠ 警告

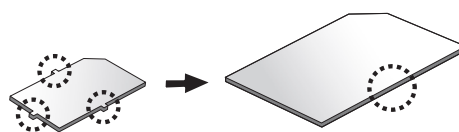


將智能咭插入固定座前，請先確保智能咭切邊平整。

安裝智能咭和電池

4 安裝電池

先將電池底部放入電池格下方邊緣。請確保電池觸點對準手機觸點。將電池的頂部壓入定位。

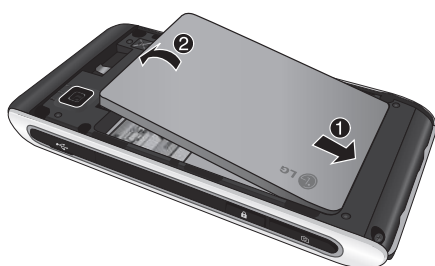

5 為手機充電

打開 GX500 手機側面的充電器插槽蓋。插入充電器並將充電器插頭插入電源插座。為您的 GX500 手機充電，直至屏幕上顯示「電池已滿」訊息。




記憶咭

安裝記憶咭

使用記憶咭，擴展手機的記憶體空間。

注意：記憶咭是選購配件。

- 1 開啟手機右側的記憶咭插槽蓋。
- 2 將記憶咭滑入插槽，直到卡緊為止。
- 3 重新合上插槽蓋。

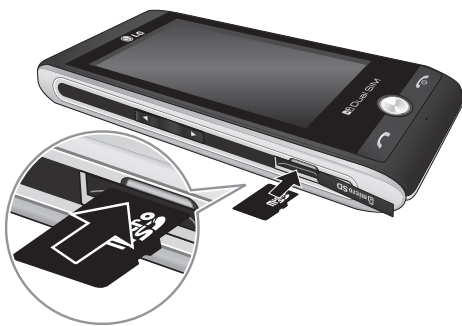

格式化記憶咭

您的記憶咭可能已格式化了。若記憶咭尚未格式化，則在開始使用前需要進行格式化。

- 1 從備用屏幕中選擇 ，然後點按  (手機設定)。
- 2 點按**記憶體資訊**，然後選擇**外置記憶體**。
- 3 點按**格式化**並確認您的選擇。
- 4 若設定有密碼，則輸入密碼，且咭將被格式化以便隨時使用。

注意：若記憶咭中已包含內容，則其中內容會被記錄至正確的資料夾中；例如，影片會儲存到「我的影片」資料夾中。

功能表總覽

在備用屏幕中點按  開啟**功能表**。您可從此處存取下一級功能表：**通訊**、**娛樂**、**實用程式**和**設定**。



通訊

通訊錄
最近記錄
訊息
電郵
撥號
Social networking
(社交網絡)
快速撥號
新訊息



娛樂

相機
媒體匣
音樂
我的檔案
遊戲及應用程式
Pocket Apps
(便攜應用程式)
FM 收音機
視像攝錄機



實用程式

瀏覽器
Google
鬧鐘
記事簿
備忘錄
語音備忘錄
工具
繪圖面板



設定

雙智能咭設定
情景模式
屏幕設定
手機設定
通話設定
藍芽
連接
Wi-Fi

您的備用屏幕

您可從備用屏幕存取所有功能表選項，快速撥打電話並檢視手機狀態以及很多其他內容。

觸控屏幕提示

主屏幕亦是熟悉觸控屏幕的最佳位置。

要選擇某個項目，請準確點按相應圖示。若能識別出您所點按的操作，GX500 便會輕微震動。(視乎設定)

如要捲動清單，請點按屏幕上顯示的最後一個項目並用手指向屏幕上方滑動。該清單會向上移動以便顯示更多項目。

- 點按觸控屏時無需重按，只需要輕輕按中即可。

- 使用指尖點按所需的選項。小心不要按附近的任何其他選項。
- 屏幕背燈熄滅後，按右側的解鎖/鎖定鍵即可返回主屏幕。
- 請不要用保護套或保護蓋蓋住手機。因為一旦觸控屏幕上蓋有任何東西，它將無法正常運作。
- 有兩種類型的備用屏幕。左右捲動即可在備用屏幕中變更備用屏幕類型。
 - 1 Widget 備用 - 點按  時，手機 Widget 控制板會出現。
 - 2 快速撥號備用 - 點按  時，快速撥號清單會出現。您可立即在兩種備用類型中拖動及點按所需內容。

您的備用屏幕

快捷鍵

快捷鍵提供簡單的方法存取最常用的功能。



點按以顯示觸控撥號盤，以撥打電話。使用標準鍵盤輸入所需號碼，然後點按**通話**或按  硬鍵。



點按以開啟您的通訊錄。若要搜尋撥號號碼，請使用觸控板在屏幕頂部輸入聯絡人名稱。您亦可以新增通訊錄或編輯現有通訊錄。



點按以存取「訊息」選項目錄。您可在**此處**建立新訊息，或檢視訊息資料夾。



點按以開啟完整的上層功能表，此功能表分為四個子功能表。點按各子功能表標籤以檢視進一步選項。

狀態列

狀態列透過使用多種圖示，指明如訊號強度、新訊息和電池電量等情況，亦告訴您藍芽或 GPRS 是否已啟動。下表解釋了狀態列中最有可能看到的圖示的含義。

圖示	說明
	多項工作
	網絡訊號強度 (列數會有變化)
	無網絡訊號
	電池電量
	電池已耗盡
	新文字訊息
	新語音訊息
	訊息收件匣已滿
	發送訊息失敗
	多媒體訊息發送失敗
	鬧鐘已設定
	正在使用自訂情景 模式

圖示	說明
	正在使用標準情景 模式
	正在使用戶外情景 模式
	正在使用靜音情景 模式
	正在使用耳機情景 模式
	通話線路已轉接
	正在使用 EDGE
	漫遊
	飛航模式已開啟
	藍芽已啟動
	背景音樂播放
	背景音樂暫停
	記憶咭可使用
	Wi-Fi

您的備用屏幕

從狀態列變更狀態

點按狀態列以開啟「狀態摘要」。將顯示目前時間、網絡、電池、手機記憶體、外置記憶體、情景模式、MP3 和藍芽狀態。您可在此處設定情景模式，播放/暫停 MP3 及啟用/暫停藍牙功能。

使用多項工作功能

按多項工作硬鍵  開啟多項工作功能表。您可從此處檢視最愛應用並透過點按進行存取。

當某些應用程式正在使用時 (例如，遊戲或 FM 收音機)，則  會顯示在狀態列中。

通話功能

撥打電話

- 1 點按  開啟鍵盤。
- 2 使用鍵盤輸入號碼。若要刪除某個數字，請點按清除鍵。
- 3 按  鍵或點按通話開始通話。
- 4 若要結束通話，請按  鍵。

提示！ 若要在撥打國際電話時輸入「+」，請按住 。

透過通訊錄撥打電話

- 1 從備用屏幕點按  開啟通訊錄。
- 2 輸入要通話的聯絡人的前幾個字母。
- 3 從篩選清單中點按要通話的聯絡人，然後選擇要使用的電話號碼（若存有多個記錄）。
- 4 點按 。

接聽來電和拒接來電

手機響鈴後，按  鍵或點按  接聽來電。

點按  可使響鈴靜音。如果在開會時忘記將情景模式變更為「靜音」，此功能將十分有用。

按  鍵或點按  拒接來電。

快速撥號

您可為常撥聯絡人指定一個快速撥號號碼。

- 1 從主屏幕，點按  開啟通訊錄。
- 2 點按  並選擇快速撥號。
- 3 您的語音郵件已設定至快速撥號 1。您無法變更此設定。點按任何其他號碼，為其指定快速撥號聯絡人。

通話功能

- 4 通訊錄將開啟。透過點按一下相應的電話號碼，選擇要將其指定給此號碼的聯絡人。若要尋找某個聯絡人，請點按搜尋欄位方塊，然後輸入所需聯絡人名稱的首字母。

撥打其他電話

- 1 初始通話中，點按  並輸入要通話的號碼。
- 2 撥打電話或搜尋通訊錄。
- 3 按  連接通話。
- 4 兩個通話均將顯示於通話屏幕上。初始通話將會被保留。
- 5 若要變更兩個通話，請點按  並選擇**切換通話**或按保留通話之號碼。
- 6 若要結束其中一個或兩個通話，請按  並依次選擇**結束通話**和**使用中通話**、**保留通話**或**所有通話**。

提示！ 透過選擇**加入通話**以連接通話。檢查網絡供應商是否支援多方會議通話。

注意：您需為撥打的每個電話付費。

檢視通話記錄

點按  並選擇**通訊**中的**最近記錄**。選擇要檢視的對象：

全部 - 檢視所有已撥、已接和未接來電的完整清單。

撥出通話 - 檢視所有已撥出通話的列表。

已接來電 - 檢視所有已接聽來電的列表。

未接來電 - 檢視所有未接來電的列表。

提示！ 從任何通話記錄點按  和**刪除全部**，刪除所有記錄項目。

使用來電轉駁

- 1 點按 ，選擇 。
- 2 點按**來電轉駁**。
- 3 選擇所有語音通話、線路繁忙時、無人接聽或無法接通時。
- 4 輸入轉駁號碼。
- 5 點按**要求**予以啟用。

注意：轉駁電話需要收費。請聯絡網絡供應商，了解詳情。

提示！ 要關閉所有來電轉駁，請從**來電轉駁**功能表選擇**停用全部**。

使用通話限制

- 1 點按 ，選擇  並選擇 。
- 2 點按**通話限制**。

- 3 選擇以下六個選項的任何一個：

所有撥出通話

國際通話撥號

本地以外的國際撥號

所有來電

國際漫遊時來電

停用全部

- 4 輸入通話限制密碼。請向您的網絡商查詢這項服務。

提示！ 選擇**固定撥號號碼**，開啟並編譯可從此手機撥出的號碼清單。您需要從您的網絡商處得到一個 PIN2 碼。僅固定撥號清單中包含的號碼可從手機撥出。

通話功能

變更一般通話設定

- 1 點按 ，選擇 。
- 2 點按通用設定。您可從此處修改以下選項的設定：

來電拒接 - 滑動開關至開啟以反白顯示拒接列表。您可選擇拒接所有通話、通訊錄、群組、無名稱記錄、無來電號碼。點按儲存變更設定。

發送我的號碼 - 選擇撥出通話時，是否顯示您的號碼。

自動重撥 - 向左滑動開關為開啟，或向右為關閉。

接聽模式 - 選擇是否按發送鍵或按任何鍵接聽來電。

分鐘提示 - 左右滑動以開關此功能，以便在通話時聽到分鐘提示音。

藍芽接聽模式 - 選擇免提，可使用藍芽耳機接聽來電，或選擇手機，便可透過按手機上的按鍵接聽來電。

儲存新號碼 - 選擇是儲存新號碼。

通訊錄

搜尋通訊錄

有兩種方法可搜尋通訊錄：

從備用屏幕

- 1 從備用屏幕點按  開啟通訊錄。從清單中選擇聯絡人。
- 2 點按  或按  鍵開始通話。

從主功能表

- 1 點按 ，選擇 。
- 2 然後點按**搜尋**。
- 3 您會看到一個聯絡人清單，輸入聯絡人名稱的第一個字母，使功能表跳至清單中包含該字母的區域。

提示！ 點按名稱空白區域後，將會顯示文字按鍵。

新增通訊錄

- 1 從備用屏幕點按 ，並點按**新增通訊錄**。
- 2 選擇是否將聯絡人儲存到手機或智能咭 (SIM 1/SIM 2)。

- 3 輸入新聯絡人的名字和姓氏。您不必同時輸入名和姓，但必須輸入其中一個。
- 4 您最多可為每個聯絡人輸入五個不同的號碼。每個記錄包含**手機**、**住宅**、**辦公室**、**傳呼機**、**傳真**和**一般**預設類型。完成後，請點按**關閉**。
- 5 新增電郵地址。
- 6 將聯絡人編入一個群組。您可選擇**無群組**、**家庭**、**朋友**、**同事**、**學校**或**重要人士**。
- 7 您亦可新增**鈴聲**、**生日**、**週年紀念**、**主頁**、**住宅地址**、**公司名稱**、**職位**、**公司地址**和**備忘錄**。
- 8 點按**儲存**可儲存通訊錄。

通訊錄

建立群組

- 1 點按 。
- 2 點按**通訊錄**，然後點按**群組**。
- 3 點按 。
- 4 選擇**新增群組**。
- 5 為您的新群組輸入名稱。您亦可為群組指定鈴聲。
- 6 點按**儲存**。

注意：若要刪除某群組，群組內的聯絡人將不會刪除。它們仍會保留在您的通訊錄中。

變更通訊錄設定

您可對通訊錄設定進行調整，以便通訊錄符合您自己的喜好。

提示！ 如要檢視更多選項清單，請點按屏幕上顯示的最後一個項目並用指尖向上滑動屏幕。該清單會向上移動以便顯示更多項目。

- 1 從備用屏幕點按 。
- 2 點按**通訊錄**，然後點按**設定**。
- 3 您可從此處對以下設定進行調整：

通訊錄列表設定 - 您亦可選擇通訊錄中先顯示名字還是姓氏。

複製 - 在您的智能咭（SIM1 或 SIM2）與手機之間複製通訊錄。您可選擇依次序進行或同時複製全部。若選擇依次序，您需要逐一選擇要複製的每個聯絡人。

移動 - 這和複製一樣，但聯絡人僅會儲存於您所移動至的位置。因此，如果您將一個通訊錄從 SIM 移動至手機，它將從 SIM 記憶體中刪除。

透過藍芽傳送所有通訊錄 - 使用藍芽將您的通訊錄發送至另一裝置。若選定此選項，系統將會提示您開啟藍芽。

備份通訊錄 - 請參閱「電腦同步」部分中的「備份和還原手機資訊」。

還原通訊錄 - 請參閱「電腦同步」部分中的「備份和還原手機資訊」。

清除通訊錄資料 - 刪除您所有的通訊錄。若確定要清楚整個通訊錄，請點按**是**。

檢視資訊

- 1 從備用屏幕點按 。
- 2 點按**通訊錄**，然後點按**資訊**。
- 3 您可從此處檢視**服務撥號號碼**、**本手機號碼**、**記憶體資訊**及**我的名片**。

提示！ 若尚未為自己新增名片，請選擇**我的名片**，並輸入要個人通訊資料。點按**儲存**以完成操作。

訊息

訊息

GX500 手機將文字訊息、多媒體訊息和電子郵件集中在同一功能表中，使用起來方便簡單。

您可以透過以下兩種方法，進入訊息中心：

- 1 從備用屏幕上點按 。
- 2 從備用屏幕點按 ，然後選擇 。

發送訊息

- 1 點按**新訊息**，開啟一則空白訊息。
- 2 您可從此處發送短訊或多媒體訊息。若要發送電子郵件，請從備用屏幕中點按 ，然後選擇與電郵。
- 3 點按**附加**以便新增圖像、影片、聲音或常用範本。
- 4 點按屏幕頂部的**收件者**，輸入收件者號碼，或點按搜尋圖示，開啟通訊錄。您可以新增多個聯絡人。完成後，請點按**發送**。

注意：您可以將文字訊息一次發送給多個收件者。按一下通訊錄搜尋圖示，然後從「選項」選擇多重選擇，您可在此選擇要發送訊息的聯絡人。若要向特定聯絡人群組發送訊息，請按一下聯絡人搜尋圖示，然後在編寫訊息後選擇按群組搜尋。

 **警告：**您將按收件者每頁文字訊息計費。

 **警告：**若向文字訊息加插了圖像、影片或聲音，它將自動轉換為多媒體，而您亦需為此支付相應費用。

輸入文字

有五種方法輸入文字：

按鍵、鍵盤、手寫屏幕、手寫方塊、雙格區手寫輸入。

您可透過點按  和輸入法模式選擇輸入法模式。

點按一下屏幕，鍵盤會出現。

 點按開啟 T9 文字。

 您可選擇寫入語言。

 點按以變換數字、符號和文字鍵盤。

使用  捲動每種文字輸入模式下的不同鍵盤類型（例如，大寫或小寫）。

T9 模式

T9 模式使用內置字典，識別根據點按按鍵順序寫入的單字。只需點按與要輸入字母關聯的數字按鍵，字典便可預測要使用的單字。

例如，按 8、3、5、3、7、4、6、6、3 可得到「telephone」。

Abc 模式

在 Abc 模式下，您必須重複點按按鍵，才能輸入字母。例如，要寫入「hello」，請按 4 兩次、3 兩次、5 三次、5 又三次，然後按 6 三次。

鍵盤

在鍵盤模式下，屏幕會切換到橫向模式，且屏幕上顯示完整的鍵盤。

只要點按各個字母，便可寫入訊息，並按：

 切換到大寫字母。

手寫識別

在手寫模式下，您只需要在屏幕上寫入要輸入的字，GX500 手機即會將手寫內容轉換為訊息。根據個人檢視偏好，選擇手寫屏幕或雙格區手寫輸入。

訊息

提示！ 在此模式下，您會發現使用觸控筆將十分容易。請記住輕輕觸控，以保護屏幕免受損壞。

手寫識別功能將觸控筆手勢轉換成字母、數字或其他字元，並將這些字元顯示為文字。手寫識別功能僅在可輸入文字的區域使用。

設定電子郵件

即使出門在外，您亦可使用 GX500 上的電子郵件功能與他人保持聯絡。設定 POP3 或 IMAP4 電子郵件帳戶簡單方便。

- 1 點按 。
- 2 選擇 ，然後捲動功能表至**設定**。
- 3 點按**電子郵件**並點按**電子郵件帳戶**。

- 4 點按**新增帳號**。
- 5 「設定精靈」將協助您設定電子郵件設定。
- 6 透過選擇清單中的帳戶，您可查看和編輯設定。您亦可查看建立帳戶時自動填充的其他設定。
- 7 透過點按啟用，您可變更預設電子郵件帳戶。

擷取電子郵件

您可以自動或手動檢查帳戶中的新電子郵件。

要手動查收：

- 1 點按 ，然後選擇 。
- 2 點按**郵箱**。
- 3 點按要使用的帳戶，然後點按 。
- 4 選擇**擷取**後，GX500 便會連接到您的電子郵件帳戶並擷取您的新訊息。

變更電子郵件設定

您可根據自己的喜好，變更電子郵件設定。

- 1 點按 ，然後選擇 。
- 2 點按**設定**和**電子郵件**，然後您可調整以下設定：

允許回覆電郵 - 選擇是否允許發送「閱讀確認」訊息。

要求回覆電郵 - 選擇是否請求讀取確認訊息。

擷取時隔 - 選擇 GX500 查收新電子郵件訊息的頻率。

擷取數量 - 選擇任何一次擷取的電子郵件數量。

轉寄與回覆時加入原始訊息 - 選擇回覆中是否加入原始訊息。

包括附件 - 選擇是否在任何回覆中加入原始附件。

在漫遊時自動擷取 - 選擇是否自動擷取訊息。

新電子郵件通知 - 選擇是否要獲得新電子郵件的通知。

簽名 - 建立電郵簽名並啟用此功能。

重要性 - 選擇電郵的優先等級。

訊息資料夾

由於各資料夾的名稱相當清楚，您可辨識用於 GX500 的資料夾結構。

新訊息 - 開啟新的空白訊息。

收件匣 - 接收到的所有訊息會置於收件匣中，您可從此處進行檢視、刪除及更多操作，欲知詳情，請參閱以下的**管理您的訊息**。

草稿 - 若沒有足夠的時間寫完訊息，您可將已寫的部份儲存於此處。

訊息

寄件匣 - 這是存放發送中訊息的臨時儲存資料夾。

已發送項目 - 發送的訊息會置於此資料夾中。

我的資料夾 - 建立資料夾以儲存訊息。

常用範本 - 使用常用文字和多媒體訊息範本清單。

情感圖示 - 在訊息中新增和插入情感圖示。

設定 - 更換文字和多媒體訊息的設定。

變更文字訊息設定

您的 GX500 已預先定義訊息設定，以便您可立即發送訊息。您可根據自己的偏好變更這些設定。

提示！ 如要檢視更多選項清單，請點按屏幕上顯示的最後一個項目並用指尖向上滑動屏幕。該清單會向上移動以便顯示更多項目。

點按 ，然後從以下位置選擇**設定** 。選擇**文字訊息**。您可對以下各項進行變更：

文字訊息中心 - 輸入訊息中心的詳細資料。

發送報告 - 向左右滑動以開關，接收已發送訊息之確認訊息。

有效時期 - 選擇訊息儲存在訊息中心的時間。

訊息類型 - 將文字轉換成文字、語音、傳真、X.400 或電子郵件。

字元編碼 - 選擇字元的編碼方式。這將影響到您的訊息大小，進而影響資料費用。

發送長文字時設為 - 選擇以多個文字訊息或以多媒體訊息的方式發送長訊息。

變更多媒體訊息設定

您的 GX500 已預先定義訊息設定，以便您可立即發送訊息。您可根據自己的偏好變更這些設定。

點按 ，選擇 。

選擇**設定與多媒體訊息**。

您可對以下各項進行變更：

接收模式 - 選擇**本地**或**漫遊網絡**。如果選擇**手動**，將僅收到多媒體訊息通知，然後選擇是否進行完整下載。

發送報告 - 選擇是否允許及/或請求發送報告。

閱讀回覆 - 選擇是否允許及/或請求回覆報告。

重要性 - 選擇多媒體訊息的優先等級。

有效時期 - 選擇訊息儲存在訊息中心的時間。

投影片播放時間 - 選擇投影片在屏幕上的播放時間。

建立模式 - 選擇您的訊息模式。

發送時間 - 選擇隔多久發送訊息。

多媒體訊息中心 - 輸入訊息中心的詳細資料。

變更其他設定

點按 ，然後從以下位置選擇設定：

留言信箱 - 點按  新增語音信箱服務。聯絡網絡商，瞭解他們提供服務的更多詳情。

服務訊息 - 選擇要接收還是阻止服務訊息。您亦可透過建立受信任的和不受信任的寄件者列表來設定您的訊息安全性。

資訊服務 - 選擇區域廣播、頻道或語言。

相機

快速拍照

- 1 短按手機右側的相機鍵。
- 2 取景器將顯示在屏幕上。
- 3 水平握住手機，將鏡頭對準拍照對象。
- 4 定位手機，這樣您可在預覽屏幕中看到拍照對象。
- 5 按手機側面的相機鍵拍照。

拍攝相片後

拍攝的照片會顯示在屏幕上。



點按以**訊息、電子郵件**或**藍芽**方式發送相片。請參閱「發送訊息」以及「使用藍芽發送和接收檔案」。

注意：在漫遊時下載多媒體訊息可能會收取額外費用。



點按以重新命名圖片。



點按以使用不同工具編輯圖像。



設定圖像使用方式。



點按以返回至前一個功能表。



點按以刪除圖像。



點按以拍攝新相片。



點按以檢視已儲存的相片集。

使用進階設定

從取景器中點按  以開啟所有進階設定選項。

色彩效果 - 選擇色調，以應用於拍攝的相片。

白平衡 - 選擇自動、白熱光、陽光、日光燈或陰天。

自拍器 - 自拍定時讓您設定按拍攝按鈕後，相機開始拍照前的延遲時間。

可供選擇的選項為：**關**

閉、**3 秒**、**5 秒**或**10 秒**。

當您要加入拍攝的群組照片中時，此選項十分有效。

隱藏圖示 - 選擇手動或自動隱藏照相機設定圖示。

質素 - 在**特細緻**、**細緻**及**正常**之間選擇。質量越細緻，相片便越清晰，但佔用的檔案空間會增大。這表示記憶體中儲存的相片會相應減少。

快門聲 - 從三種快門聲中選擇一種聲音。

格線畫面 - 可選擇關閉、簡單十字或三等分。

重設設定 - 重設所有相機設定。

檢視已儲存相片

- 1 您可從相機模式存取已儲存的相片。只需點按 ，您的圖片集即會顯示在屏幕上。

視像攝錄機

拍攝快速影片

- 1 按住手機右側的相機鍵。
- 2 然後，在相機模式下滑動取景器中的 ，切換至視像攝錄機。
- 3 視像攝錄機的取景器將顯示於屏幕上。
- 4 水平握住手機，將鏡頭對準拍攝對象。
- 5 按一下拍攝按鈕，開始錄製。
- 6 **Rec** 將顯示在取景器的底部，計時器出現在底部，顯示拍攝影片的長度。
- 7 要暫停影片，請點按  並透過選擇  以繼續。
- 8 點按屏幕上的 ，或再次按拍攝按鈕，停止錄製。

錄製影片後

已錄製的影片會顯示在屏幕上。影片名稱會同圖示一起顯示在屏幕側邊。



點按以播放影片。



點按以**訊息或電子郵件**或**藍芽**方式發送影片。



點按以編輯影片。



點按編輯選定圖片的名稱。



點按以返回至上一個功能表。



點按以刪除剛剛錄製的影片，透過點按**是**予以確定。取景器將再次出現。



點按立即拍攝新影片。當前影片將會被儲存。



點按以檢視已儲存的影片和圖片集。

調整曝光

曝光定義影片在有光和黑暗（對比度）中的區別。

- 1 點按 。
- 2 將曝光度指示符沿列向左滑動，曝光度將降低，獲得的影片較模糊，向右滑動，對比度將提高，獲得的影片較清晰。

使用進階設定

從取景器中點按  以開啟所有進階設定選項。

色彩效果 - 選擇要套用於已拍攝相片的色調。

白平衡 - 白平衡可確保影片中的任何白色顯示得真實。為了使相機正常調整白平衡，您可能需要確定光線條件。

質素 - 在特細緻、細緻及正常之間。

設定時間 - 為影片設定播放時間限制。

提示！ 若選擇多媒體訊息播放時間，則可嘗試選擇較低圖片品質，以讓您錄製較長的影片。

選擇儲存 - 選擇是將影片儲存至**手機記憶體**，還是儲存至**外置記憶體**。

語音 - 選擇靜音以錄製影片，而沒有聲音。

重設設定 - 重設所有視像攝錄機設定。

觀看已儲存影片

- 1 在取景器中點按 。
- 2 圖庫將顯示於屏幕上。
- 3 點按一下要檢視的影片，使其顯示在圖庫的最前端。
- 4 再點按一下影片，可完全開啟照片。

相片及影片

檢視相片及影片

- 1 點按相機預覽屏幕上的 。
- 2 圖片集將顯示在屏幕上。
- 3 點按影片或相片，以便完全開啟。

提示！ 左右滑動以檢視其他相片或影片。

提示！ 要刪除相片或影片，請開啟它並選擇 。點按**是**以確認。

檢視照片時使用縮放

檢視照片時，您可以進行縮放。

檢視影片時調節音量

要於播放時調整影片音量，請按音量圖示並點按屏幕的音量控制。或者，使用手機側面的音量鍵調節音量。

將相片設為牆紙

- 1 點按要將其設為牆紙的相片以便打開。
- 2 點按屏幕打開選項功能表。
- 3 點按主設為牆紙。
- 4 您可以縮放相片，並使用屏幕底端的縮圖移動圖片裁剪部分。

編輯相片

您可對相片執行多種變更操作、新增相片或保持原樣。

- 1 開啟您要編輯的相片，然後點按  來顯示選項。
- 2 點按圖示，以修改相片：
 -  裁剪相片。選擇裁剪區域，並用指尖在屏幕上滑動以選擇區域。
 -  在相片上進行手繪。從四個選項中選擇線條粗細以及要使用的色彩。
 -  在圖片上新增文字。
 -  在相片中加蓋圖章。在不同的印章中進行選擇並在相片中點按要放置印章的位置。
 -  清除剛手繪的線條。您可選擇使用的橡皮擦大小。

 點按以返回到圖片集。

 儲存對相片作出的變更。選擇以將變更儲存為**原始檔案**或**新檔案**。選擇**新檔案**後，輸入檔案名稱。

 清除對照片所做的變更。

 點按以開啟更多效果選項，包括**旋轉**。同時，存在更多的進階編輯選項。

 點按以將效果選項應用於相片。

 此選項有助於使用自動色彩和亮度等調整拍攝的圖片。

多媒體

您可將多媒體檔案儲存在手機記憶體中，以便輕鬆存取所有圖像、聲音、影片和遊戲。亦可將檔案儲存至記憶咭中。使用記憶咭的好處在於，您可以釋放手機記憶體的空間。

若要存取多媒體功能表，請點按 。點按  以開啟儲存所有多媒體檔案的資料夾清單。

圖片

我的圖像包括圖片清單，其中有預載至手機的預設圖像、下載的圖像和透過手機相機拍攝的圖像。

點按  將檢視模式從多格子檢視變更為列表檢視。

發送相片

- 1 點按 。
- 2 點按  然後選擇**我的圖像**。
- 3 點按**發送**並從**訊息、電子郵件或藍芽**中選擇。

- 4 若選擇**訊息**或**電子郵件**，您的相片會附加至訊息中，且您可按正常方式編寫和發送訊息。選擇**藍芽**後，藍芽功能將會自動開啟，且手機將搜尋裝置以發送圖片。

列印圖像

- 1 點按 。
- 2 點按  然後點按**我的圖像**。
- 3 選擇圖像，並點按 。
- 4 點按**列印**，然後選擇**藍芽**。

提示！ 您可透過藍芽連接至相容的打印機進行列印。

移動或複製圖像

您可以在手機記憶體和記憶咭之間移動或複製圖像。若要釋放某記憶庫中的部份空間，或要確保圖像不會遺失，您便需要進行這項程序。

- 1 依次點按 。
- 2 點按  然後點按**我的圖像**。
- 3 點按 ，然後選擇**移動或複製**。
- 4 透過連續點按圖像，您可選擇全部或複製的圖像並點按**複製/移動**。

聲音

我的聲音資料夾包含已下載的聲音、**預設聲音**和**錄音記錄**。您可在此處管理、發送或將聲音設定為鈴聲。

影片

我的影片資料夾會顯示已下載的影片清單以及您在手機上錄製的影片清單。

觀看影片

- 1 點按 。
- 2 點按  然後點按**我的影片**。
- 3 選擇一個影片進行播放。

發送錄像片段

- 1 選擇影片並點按 。
- 2 點按 **發送**並從**訊息**、**電子郵件**或**藍芽**中選擇。
- 3 若選擇**訊息**或**電子郵件**，則錄像片段會附加至訊息中，您亦可正常編寫和發送訊息。選擇**藍芽**後，藍芽功能將自動開啟，且手機將搜尋裝置以發送影片。

遊戲和應用程式

您可以將新遊戲與應用程式安裝在手機上，以使用其打發空閒時間。

透過本地安裝，安裝遊戲/應用程式

- 1 點按 。
- 2 點按**其他**或**我的記憶咭**。
- 3 選擇要安裝的檔案（*.jad 或 *.jar）並按**安裝**指令。應用程式將進行安裝。

注意：jad 應包含其本身的 jar。

多媒體

玩遊戲

- 1 點按 。
- 2 點按  (遊戲及應用程式)。
- 3 開啟遊戲資料夾，選擇並點按一個遊戲以啟動遊戲。

文件

從文件功能表，您可檢視所有文件檔案。您可從此處檢視 Excel、PowerPoint、Word、文字和 PDF 檔案。

傳送檔案到手機

藍芽很可能是將檔案從電腦傳送到手機的最簡易方式。您也可以透過 USB 線使用 LG PC Suite。

若要使用藍芽傳送：

- 1 確保您的手機與電腦均已開啟藍芽，並已被對方偵測到。
- 2 使用電腦透過藍芽發送檔案。

- 3 檔案發送後，您需要按是予以接受。

- 4 該檔案應出現於您的文件或其他資料夾中。

檢視檔案

- 1 點按 。
- 2 點按  然後點按文件。
- 3 選擇一個文件以點按檢視。

其他

此其他資料夾用於儲存圖片、聲音、影片、遊戲或應用程式以外的檔案。其使用方式與文件資料夾相同。您可能會發現，從電腦將檔案傳送到手機時，這些檔案將出現於其他資料夾而不是文件資料夾中。若發生這種情況，您可以將其移走。

若要將檔案從**其他**移動至**文件**：

- 1 點按 。
- 2 點按  然後點按**其他**。
- 3 選擇一個檔案並點按 。
- 4 點按**移動**，並透過點按箭頭圖示從清單中選擇目標資料夾。傳輸完成後，屏幕將顯示**已移動**。

音樂

LG GX500 配備內置音樂播放機，可讓您播放所有最愛的曲目。若要存取音樂播放機，請依次點按  和選擇 。您可從此處存取大量資料夾：

最近播放 - 檢視所有最近播放的歌曲。

全部曲目 - 包含手機上的所有歌曲。

演出者 - 按演出者瀏覽音樂收藏。

專輯 - 按專輯瀏覽音樂收藏。

類型 - 按類型瀏覽音樂收藏。

播放列表 - 包含已建立的所有播放列表。

隨機播放曲目 - 按隨機順序播放曲目。

將音樂傳送至手機

將音樂傳送至手機的最簡單方式是透過藍芽或 USB 線。

您亦可使用 LG PC Suite。
若要使用藍芽傳送：

- 1 確保兩個裝置均開啟藍芽，且彼此可看見對方。
- 2 選擇其他裝置上的音樂檔案並選擇透過藍芽發送。
- 3 準備發送檔案時，您應透過在手機上點按**是**予以接受。
- 4 檔案應顯示於**音樂 > 全部曲目**。

多媒體

播放歌曲

- 1 點按 。
- 2 點按 ，然後點按**全部曲目**。
- 3 選擇要播放的歌曲。
- 4 點按  暫停播放歌曲。
- 5 點按  跳至下一首歌曲。
- 6 點按  跳至上一首歌曲。
- 7 點按  返回至**音樂**功能表。

建立播放列表

透過從**全部曲目**資料夾中選擇歌曲，建立自己的播放列表。

- 1 點按 。
- 2 點按 ，然後點按**播放列表**。
- 3 點按**新增播放列表**，輸入播放清單名稱並點按**儲存**。

- 4 **全部曲目**資料夾將顯示手機中的所有歌曲。點按要納入播放列表的歌曲；記號將顯示於對應的曲目名稱旁。
- 5 點按**完成**。

使用收音機

LG GX500 手機具有 FM 收音機功能，以便您可在外出時收聽喜歡的電台節目。

注意：您需要插入耳機才可收聽收音機。將耳機插入耳機插孔（與插入充電器的插孔相同）。

搜尋電台

透過手動或自動搜尋電台節目，將其保留到手機中。這些節目將儲存至特定頻道編號，如此以來，您就不需要重新調諧。您必須首先將耳機連接至手機以作為天線使用。

自動調諧：

- 1 點按 。
- 2 依次點按 FM 收音機和 。
- 3 點按**自動掃描**。手機將自動搜尋電台，並將找到的電台分配至手機的某個頻道上。

重設頻道

- 1 點按 。
- 2 依次點按 FM 收音機和 。
- 3 選擇**重設頻道**以重設目前頻道，或選擇重設所有頻道。每個頻道將返回至 87.5Mhz 起始頻率。

記事簿

錄製聲音或語音

- 1 點按 。
- 2 點按**語音備忘錄**。
- 3 點按 ，以開始錄製。
- 4 點按 ，以結束錄製。
- 5 點按 ，以收聽錄音。

使用計算機

- 1 從備用屏幕中選擇 ，然後選擇工具。
- 2 選擇**計算機**。
- 3 點按數字鍵，輸入數字。
- 4 對於簡單計算，點按所需的運算 (+、-、*、/)，然後按 =。
- 5 對於較為複雜的計算，點按  並選擇 sin、cos、tan、log、ln、exp、sqrt、deg 或 rad 等。

轉換單位

- 1 從備用屏幕中選擇 ，然後選擇工具。
- 2 選擇**單位轉換器**。
- 3 選擇是否要轉換**匯率、面積、長度、重量、溫度、體積或速度**。

- 4 然後，您可選擇單位，輸入要轉換的值，然後輸入要轉換至的單位。

新增城市至全球時間

- 1 從備用屏幕中選擇 ，然後選擇工具。
- 2 選擇**世界時鐘**。
- 3 點按 ，然後點按**新增城市**。開始輸入所需的城市名稱，且其將顯示於屏幕的頂端。

使用秒錶

- 1 從備用屏幕中選擇 ，然後選擇工具。
- 2 選擇**秒錶**。
- 3 點按**開始**開始使用計時器。
- 4 如果要記錄圈速，點按**分段**。
- 5 點按**停止**結束計時器。
- 6 點按**恢復**以在停止的時刻處重新啟動秒錶，或點按**重新設定**重新開始計時。

PC Suite

您可同步電腦和手機。此功能將確保所有重要詳情與日期相配對，還可執行資料備份，讓您安心無憂。

提示！ 您需要安裝 CD-ROM 提供的 PC Suite 應用程式，或可以瀏覽 <http://update.lgmobile.com> 並揀選手冊軟體下載。

在電腦上安裝 LG PC Suite

- 1 在桌面中，點按 ，然後按一下**連接**。
- 2 選擇 **USB 連接**，並按一下 **PC Suite**。
- 3 使用 USB 線連接手機和電腦，並稍等片刻。
- 4 電腦屏幕上將會顯示安裝指引訊息。

注意！ 若電腦中沒有顯示安裝指引訊息，請檢查 Windows 上的 CD-ROM 設定。

- 5 插入提供的 CD-ROM 或按一下「下載」按鈕從互聯網直接下載 LG PC Suite 程式。
- 6 按一下顯示在屏幕上的 LG PC Suite 安裝程式。

連接手機和電腦

- 1 從「連接」功能表中選擇 PC Suite 模式，然後將 USB 線連接至手機和電腦。
- 2 電腦上的 LG PC Suite 將自動啟用。
- 3 手機和電腦現已連接。

備份和還原手機資訊

- 1 如同以上所述，將手機連接到電腦。
- 2 在功能表上工具選擇備份或還原，並選擇備份或還原。
- 3 選擇備份內容，通訊錄/日程表/待辦事項/備忘錄等。選擇資訊備份或還原位置。然後進行備份或確定。
- 4 資訊將會備份。

PC Suite

在電腦上檢視手機檔案

- 1 如同以上所述，將手機連接到電腦。
- 2 按一下「相片」、「影片」或「音樂」圖示。
- 3 所有儲存在手機上的圖像及聲音檔將會顯示在屏幕上 LG 手機資料夾中。

提示！ 在電腦上檢視手機中的內容，有助於您管理不再需要的檔案。

同步處理通訊錄

- 1 連接手機和電腦。
- 2 按一下通訊錄圖示。
- 3 按一下同步通訊錄按鈕，電腦現將會匯入並顯示已儲存在手機上的所有聯絡人。
- 4 按一下**功能表**並選擇**匯出**。現在，您可以選擇要儲存通訊錄的位置。

同步訊息

- 1 連接手機和電腦。
- 2 按一下「訊息」圖示。
- 3 將會在屏幕資料夾中顯示全部手機訊息。
- 4 使用位於屏幕頂端的工具列，編輯和重新排列所有手機訊息。

音樂同步

此功能表允許您新增音樂至 GX500 手機。開始將電腦上的音樂傳輸至手機之前，請確保電腦具有如下設定和配件：

- Microsoft Windows XP 或 Vista
- Windows Media Player 10 或更高版本
- USB 線
- 記憶咭（如果您想要將外置記憶體用作音樂儲存體。）

⚠ 警告： 傳輸過程中請勿中斷手機連接。

使用 Windows Media Player 傳輸音樂

- 1 在桌面中選擇 ，然後捲動至設定標籤中的**連接**。
- 2 選擇 **USB 連接**，然後選擇**音樂同步**。
- 3 使用相容 USB 線連接手機與電腦。
- 4 嘗試連接手機與電腦時，手機將會顯示：「音樂同步」，並隨後會顯示「已連接」。
- 5 電腦將提示您啟動首選的音樂管理軟件。
- 6 選擇 Window Media Player。
- 7 轉至「同步」標籤，然後將想要傳輸至手機的音樂拖放到**同步清單**控制板中。
- 8 按一下**開始同步**按鈕。將開始傳輸流程。

 **警告：**傳輸過程中請勿中斷手機連接。

DivX 轉換器

安裝提供 PC Suite 的同一 CD-ROM 提供的 DivX 轉換器。DivX 會將電腦上的媒體檔案轉換成您可在手機上上載和檢視的某種格式。

安裝完成後，從電腦的「程式檔案」中選擇 **DivX**，然後依次選擇 **DivX 轉換器**和轉換器。

使用應用程式中的箭頭，將轉換格式變更為「Mobile」。若在應用程式方塊上按一下滑鼠右鍵，並選擇**偏好**，則您可變更儲存轉換檔案的位置。

將檔案拖放至應用程式中以進行初始分析。然後，選擇**轉換**開始轉換流程。流程完成後，將會顯示一個轉換完成快顯視窗。

PC Suite

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play DivX Video-on-Demand (VOD) content. To generate the registration code, locate the DivX VOD section in the device setup menu. Go to vod.divx.com with this code to complete the registration process and learn more about DivX VOD.

Pat. 7,295,673

網絡功能

瀏覽器

瀏覽器可讓您快速、盡情享受遊戲、音樂、新聞、體育和娛樂，並直接往手機中載入更多內容。而無論您身在何處，有何種需求，均能一一滿足您。

存取網絡

- 1 從備用屏幕中選擇 ，然後選擇 。
- 2 要直接存取瀏覽器主頁，請選擇**主頁**。或者，選擇**輸入網址**並鍵入所需的網址，然後點按**連接**。

注意：連線至此服務並下載內容時，會產生其他費用。請向網路提供商諮詢資料費用。

新增並存取書簽

為了方便快捷地存取喜愛的網站，您可新增書簽並儲存網頁。

- 1 從備用屏幕中選擇 ，然後選擇 。
- 2 選擇**書簽**。書簽清單將會顯示在屏幕上。
- 3 要新增書簽，請選擇 ，然後點按**新增書簽**。依次輸入書簽標題和連結。
- 4 點按**儲存**。此時，書簽將顯示於書簽清單中。
- 5 若要存取書簽，只需點按書簽，然後點按**連接**。您將連線到該網頁。

使用 RSS 閱讀器

RSS (Really Simple Syndication) 是網絡 Feed 格式成員之一，用於發布經常更新的內容，如 Blog 條目、新聞標題或 Podcasts。RSS 文件也稱為 Feed、Web Feed 或頻道，包含來自關聯網站的內容概要或其完整文字。

網絡功能

RSS 使得人們可以自動跟蹤其最愛網站的更新，這比手動查看要容易多了。

用戶可透過在閱讀器中輸入 feed 連結或按一下啟動訂閱程序的瀏覽器中的 RSS 圖示，即可訂閱 feed 服務。閱讀器會定期檢查用戶訂閱的 feeds，查看是否有新內容更新，並下載其發現的任何更新。

儲存網頁

- 1 按照以上所述操作，存取所需的網頁。
- 2 點按  並選擇**儲存此網頁**。
- 3 為網頁輸入名稱，這樣，您可方便進行識別。
- 4 點按**儲存**。

提示！ 此功能表亦讓您編輯已儲存頁面標題，保護或取消保護屏幕備忘錄並刪除已儲存頁面。

存取已儲存的網頁

- 1 從備用屏幕中選擇 ，然後選擇 。
- 2 選擇**儲存的網頁**。
- 3 選擇所需的頁面後，頁面即會開啟。

檢視瀏覽器記錄

- 1 從備用屏幕中選擇 ，然後選擇 。選擇**記錄**。
- 2 最近存取的網頁標題清單會顯示。若要存取這些網頁中的某個網頁，只要選擇所需網頁即可。

變更網頁瀏覽器設定

- 1 從備用屏幕中選擇 ，然後選擇 。選擇**設定**。
- 2 您可以選擇編輯**網絡設定**、**外觀設定**、**快捷**、**Cookies**、**安全**。

將手機用作數據機

GX500 還具備電腦數據機的功能，讓您透過 USB 線存取電子郵件和網絡。您可以使用 USB 線或藍芽。

使用 USB 線：

- 1 確保已在電腦上安裝 LG PC Suite。
- 2 使用 USB 線連接 GX500 手機和電腦，並啟動 LG PC Suite 軟件。
- 3 按一下電腦上的**互聯網套件** (Internet Kit)。然後按一下**新增按鈕**並選擇**數據機**。
- 4 選擇 **LG Mobile USB 數據機**並選擇**確定**。此時，它將顯示在屏幕上。
- 5 編寫可連接至互聯網的設定檔並儲存相關值。
- 6 建立的設定檔會顯示在電腦屏幕上。選擇該設定檔並按一下**連接**。電腦將連接至 GX500。

使用藍芽：

- 1 確定藍芽已**開啟**並在電腦和 GX500 手機上均可見。
- 2 配對電腦和 GX500 手機，以便按需提供密碼進行連線。
- 3 使用 LG PC Suite 上的**連線精靈**建立有效的藍芽連線。
- 4 按一下電腦上的**互聯網套件**。然後按一下**新增按鈕**。
- 5 選擇 **LG Mobile USB 數據機**並選擇**確定**。此時，它將顯示在屏幕上。
- 6 編寫可連接至互聯網的設定檔並儲存相關值。
- 7 建立的設定檔會顯示在電腦螢幕上。選擇該設定檔並按一下**連接**。電腦將連接至 GX500。

設定

您可透過此資料夾調整各項設定，以便讓 GX500 手機適合您的個人需要。

使用雙智能咭功能表

要選擇或更換智能咭，請按  選擇 。

可設定智能咭內容及智能咭切換。

個人化情景模式

您可以在備用屏幕中快速變更您的情景模式。只需要點按頂部的狀態摘要列，並點按情景模式標籤。

使用設定功能表，您便可個人化每種情景模式設定。

- 1 按 。
- 2 點按**情景模式**，然後選擇您要編輯的情景模式。
- 3 您可對清單中所有可用的聲音和提示選項進行變更。

變更屏幕設定

- 1 點按 。
- 2 點按  並從以下選項中選擇：

牆紙 - 為備用屏幕選擇主題。

上層功能表 - 選擇上層功能表樣式。

撥號 - 調校號碼大小。

字體 - 調整字型大小。

注意：背景燈開啟時間越長，耗費的電量就越多，這樣，手機充電將更頻繁。

亮度 - 調校屏幕亮度。

問候語訊息 - 選擇開啟或關閉，填寫問候語訊息。

開機/關機 - 為開機/關機屏幕選擇圖像。

- 3 點按**儲存**，儲存您的設定。

變更手機設定

您可隨意變更 GX500 的設定，以便適合您的個人喜好。

提示！ 如要檢視更多選項清單，請點按屏幕上顯示的最後一個項目並用指尖向上滑動屏幕。該清單會向上移動以便顯示更多項目。

- 1 點按 。
- 2 點按  然後從以下清單中選擇。

日期及時間 - 調整您的日期和時間設定，或選擇因應旅遊或夏令時間來自動更新時間。

電源節省 - 選擇切換原廠設定省電設定**開啟**或**關閉**。

語言 - 變更 GX500 的顯示語言。

自動按鍵鎖 - 在備用屏幕下自動鎖定按鍵。

安全 - 調節您的安全設定，包括 PIN 碼、手機鎖、更改密碼以及手機遺失追蹤。

記憶體資訊 - 您可以查看已使用了多少記憶體。

重設設定 - 將全部設定重設為原廠設定。

資訊 - 檢視 GX500 手機的技術資訊。

提示！ 手機遺失追蹤 (ATMT)

- 點按**安全與手機遺失追蹤**。如果手機被盜，手機會向真正所有者配置的號碼發送文字訊息。使用者必須在 ATMT 設定中指定所有者名稱、備用電話號碼 (1) 以及備用電話號碼 (2) 等。預設手機追蹤密碼為「000000」
- ATMT 文字訊息將包含被盜手機的 IMEI、目前所在位置及使用此手機的人數。

設定

變更連接設定

您的網絡商已經為您設定連線設定，因而，您可以立即享用您的新手機。若要變更任何設定，請使用此功能表。

依次點按 。選取 .

網絡設定

選擇網絡 - 若設定為**自動**，則 GX500 會自動搜尋網絡，並在網絡上註冊手機。推薦使用這種方式以便獲得最佳的服務和品質。

若設定為**手動**，則將顯示目前可用的所有網絡並且您可選擇其中一個進行註冊。若網絡註冊失敗，則網絡清單會再次列示，且您可選擇任何其他一個進行註冊。

注意：若手機在手動模式下丟失網絡連接，則會在備用屏幕上顯示一則快顯訊息，提示選擇可用網絡。

首選列表 - 若網絡正進行自動搜尋，您可新增首選網絡進行連接。

連接設定

互聯網設定 - 此功能表顯示互聯網設定。透過「選項」功能表，您可新增網絡設定、刪除或編輯這些設定。但是，視乎國家的不同，您可能無法刪除或編輯預設設定。

存取點 - 您的網絡商已經為您儲存此資訊。您可以使用此功能表新增存取點。

分組數據連線 - 選擇何時應為分組資料將裝置連接至網絡。

USB 連接模式 - 選擇資料服務並透過 LG PC Suite 軟件同步您的 GX500，藉此複製您手機中的檔案。如果透過 Windows Media Player 使用音樂同步，請選擇此功能表中的音樂同步。音樂同步僅適用於音樂內容。

使用記憶體管理

GX500 手機具有三種可用記憶體：手機、智能咭和外置記憶咭（您可能需要另行購買記憶咭）。

您可以使用記憶體管理確定如何使用各記憶體，且查看可用的空間。

依次點按  和 。選取**選擇記憶體資訊**。

手機共用記憶體 - 查看 GX500 手機上可用於圖片、聲音、影片、Flash、多媒體訊息、電子郵件、Java 和其他的記憶體。

手機預留記憶體 - 查看手機上可用於文字訊息、通訊錄、日曆、工作、備忘錄、鬧鐘、通話記錄、書籤和其他的記憶體。

智能咭 (SIM1/SIM2) 記憶體 - 檢視智能咭上的可用記憶體。

外置記憶體 - 檢視可用於外置記憶咭的記憶體（您可能需要另行購買記憶咭）。

主要儲存裝置設定 - 選擇首選儲存項目的位置。

使用藍芽發送和接收檔案

藍芽是一種發送和接收檔案的好方法，因為因為不需要 USB 線，且連線方便快捷。您亦可連接到藍芽手機，以接聽來電。

要發送檔案：

- 1 開啟要發送的檔案，通常為相片、影片或音樂檔案。
- 2 選擇**發送**。選擇**藍芽**。
- 3 如果已配對藍芽裝置，GX500 手機將不會自動搜尋其他藍芽裝置。如果尚未配對，GX500 手機將搜尋範圍內其他已啟用藍芽的裝置。
- 4 選擇要將檔案發送至的裝置並點按**選擇**。
- 5 您的檔案將會被送出。

提示！ 留意進度列，確保檔案已發送。

設定

要接收檔案：

- 1 接收檔案前，藍芽必須均設定為**開啟**和**可見**。請參閱右側的「變更藍牙設定」，瞭解更多資訊。
- 2 系統將會顯示一則訊息，提示您接受來自寄件者的檔案。點按**是**以接收檔案。
- 3 您可查看到儲存檔案的位置且選擇**檢視**檔案。檔案通常會儲存至媒體集中的合適資料夾。

變更藍芽設定：

- 1 點按 。
- 2 選擇  點按 ，然後選擇**設定**。

對以下選項作出變更：

顯示我的手機 - 選擇**可見**或**隱藏**或**可見時間為 1 分鐘**。

我的裝置名稱 - 輸入 GX500 的名稱。

支援的服務- 根據不同服務選擇如何使用藍芽。

我的位址 - 顯示您的藍芽地址。

同其他藍芽裝置配對

透過配對 GX500 和其他裝置，您可設定一個受密碼保護的連接。這意味著配對會更安全。

- 1 檢查藍芽是否為**開啟**和**可見**。您可在**設定**功能表中變更您的可見狀態。
- 2 點按**搜尋**。
- 3 GX500 將搜尋裝置。完成搜尋後，**重新整理**將顯示在屏幕上。
- 4 選擇要配對的裝置並輸入密碼，然後點按**確定**。
- 5 然後，手機將連接到其他裝置，且您必須在此裝置上輸入相同的通行碼。
- 6 密碼保護藍芽連接已準備就緒。

使用藍芽耳機

- 1 檢查藍芽是否為**開啟**和**可見**。
- 2 按照隨手機附帶的說明將手機置於配對模式中並配對裝置。
- 3 點按**連線前詢問**或**永遠連線**，點按是立即連接。GX500 將自動切換到手機情景模式。

Wi-Fi

「無線裝置管理程式」可讓您使用裝置上的 Wi-Fi（無線 LAN）管理互聯網連接。

它容許手機連接本地無線網絡或存取無線互聯網。相對於藍芽無線技術，Wi-Fi 速度更快且範圍更廣，並可用於快速收發電郵或瀏覽互聯網。

注意： GX500 支援 WEP 和 WPA-PSK/2 加密，但不支援 EAP 或 WPS 加密。如果 Wi-Fi 服務供應商或網絡管理員已設定網絡安全性的加密，則您應在快顯視窗中

填入對應密鑰。

如果尚未設定加密，則系統將不會顯示此快顯視窗。您可透過 Wi-Fi 服務供應商或網絡管理員獲取此密鑰。

軟件升級

LG 行動手機軟件升級程式

有關安裝和使用本程式的更多資訊，請瀏覽

<http://update.lgmobile.com>

此功能可讓您在網上快捷方便地將軟件升級到最新版本，而無需到訪我們的服務中心。由於行動手機軟件升級程式在升級過程中需要用戶格外留意，因此，在繼續升級之前，請務必要仔細閱讀各步驟中顯示的任何說明和注意事項。請注意，在升級過程中移除 USB 線或電池可能會對行動電話造成嚴重損壞。由於製造商不會為升級過程中的數據損失承擔任何責任，因此建議您事先備份好任何重要資料以策安全。

配件

以下配件隨 GX500 手機一起提供。


充電器



USB 線及
光碟




電池

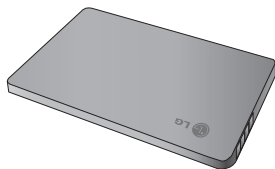

使用手冊



立體聲耳機

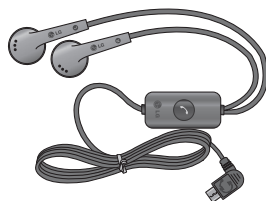

注意：

- 只可用原裝 LG 配件。
- 不使用原裝 LG 配件，保養可能失效。
- 不同的地區可能有不同的配件，請向我們的地區服務公司或代理商瞭解更多詳情。

⚠ 警告：在觸控面板上貼保護膜後，觸控靈敏度可能會有所降低。

網絡服務

本手冊所述之無線電話經認可用於 GSM 850、E-GSM 900、DCS 1800 和 PCS1900 網絡。

手冊中提及的多項功能均為網絡服務。這些特殊服務需向您的無線服務供應商申請。使用這些網絡服務前，您必須向無線網絡供應商訂閱服務並獲取有關如何使用的說明。

技術數據

一般資訊

產品名稱：GX500

系統： GSM 850 /
E-GSM 900 /
DCS 1800 / PCS 1900

環境溫度

最高： +55°C（放電），
+45°C（充電）

最低： -10°C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc. LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad band Terminal Equipment

Model Name

GX500

Trade Name

LG

CE 0168 !

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.6.1, EN 301 489-07 V1.3.1, EN 301 489-17 V1.3.2
EN 301 511 V9.0.2
EN 50360:2001 EN62209-1:2006
EN 60950-1:2001
EN300328 V1.7.1

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House-Churchfield Road - Walton-on-Thames Surrey - KT12 2TD , United Kingdom

Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands

Name

Issued Date

Seung Hyoun, Ji / Director

12. Feb. 2010

Signature of representative

故障排解

本章列出了您在使用手機過程中可能會遇到的一些問題。部份問題可能需要諮詢服務供應商，而絕大部份的問題都可自行輕鬆解決。

訊息	可能原因	可用解決方法
智能咭錯誤	手機中無智能咭，或插入方式不正確。	請確保智能咭正確插入。
無網絡	訊號較弱 位於 GSM 網絡服務範圍外	舉高手機面向窗口或移到開闊的位置。諮詢服務供應商，瞭解服務區域地圖。
密碼不匹配	在變更安全密碼前，您必須再次輸入以確認新密碼。兩次輸入的密碼不匹配。	請聯絡服務供應商。
無法設定功能	服務供應商不支援此功能或功能需要註冊	請聯絡服務供應商。
無法撥打電話	撥號錯誤 新插入的智能咭已達通話費用上限	未獲得新網絡的使用授權。查看新的限制條款。請聯絡服務供應商或使用 PIN 2 碼重設限制。

故障排解

訊息	可能原因	可用解決方法
無法開機	按開/關鍵時間太快 電池已耗盡	按開/關鍵至少兩秒鐘。 為電池充電。檢查屏幕 充電指示器。
	電池觸片不潔淨	清潔觸片。
充電錯誤	電池電量完全耗盡 不在適當溫度範圍內	為電池充電。 確定室溫合適，稍候再 充電。
	接觸問題	檢查電源以及與手機的 連接。檢查電池觸片， 必要時進行清潔。
	電源無電	插入到其他插座或檢查 電壓。
	充電器故障	如果充電器沒有反應， 請更換充電器。
	使用不當充電器 電池故障	只可使用原廠 LG 配件。 更換電池。
手機失去網 絡連接	訊號太弱	自動重新連接到其他服 務供應商。
號碼不准許	固定撥號功能已開 啟。	檢查設定。



视话机软件或服务提供商而定，本手册中的部分内容可能与您的手机有所不同。



GX500 用户手册

恭喜您购买此款功能先进、外观小巧的 LG GX500 手机，它采用了最新的数字移动通信技术，专注于为您提供便利的操作。

目录

关于安全有效使用手机的 准则	6	联系人	25
开始了解您的手机	10	正在搜索联系人	25
打开视图	12	添加新联系人	25
安装 SIM 卡和电池	13	创建群组	26
存储卡	15	更改电话本设置	26
菜单地图	16	查看信息	27
待机屏幕	17	信息	28
触摸屏提示	17	信息	28
快速键	18	发送信息	28
从状态栏更改状态	20	输入文本	28
使用多任务功能	20	T9 预测	29
通话	21	Abc 手动	29
拨打电话	21	键盘	29
从电话本拨打电话	21	手写识别	29
接听和拒接来电	21	设置电子邮件	30
快速拨号	21	检索电子邮件	30
拨打第二个电话	22	更改电子邮件设置	30
查看通话记录	22	信息文件夹	31
使用呼叫转接	23	更改文本信息设置	32
使用呼叫限制	23	更改多媒体信息设置	32
更改常用通话设置	24	更改其它设置	33
		相机	34
		快速拍照	34
		拍照后	34
		使用高级设置	34
		查看保存的照片	35

目录

摄像机	36	查看文件	42
快速摄像	36	其它	43
拍摄视频后	36	音乐	43
调节曝光	37	将音乐传输到手机	44
使用高级设置	37	播放歌曲	44
观看保存的视频	37	创建播放列表	44
		使用收音机	45
照片和视频	38	搜索电台	45
查看照片和视频	38	重置频道	45
查看照片时使用缩放	38		
观看视频时调节音量	38	管理器	46
将照片设为墙纸	38	录制声音或语音	46
编辑照片	39	使用计算器	46
		换算单位	46
多媒体	40	向世界时间添加城市	46
图片	40	使用秒表	46
发送照片	40		
打印图像	40	PC 套件	47
移动或复制图像	41	在电脑上安装 LG PC	
声音	41	套件	47
视频	41	连接手机和电脑	47
观看视频	41	备份和恢复手机信息	48
发送视频剪辑	41	在电脑上查看手机文件	48
我的游戏和应用程序	41	同步电话本	48
通过本地安装安装游戏/		同步信息	48
应用程序	42	音乐同步	49
玩游戏	42	使用 Windows Media	
文档	42	Player 传输音乐	49
将文件传输到手机	42	DivX Converter	50

网络	51	配件	60
浏览器.....	51	网络服务.....	61
访问网页	51	技术参数.....	61
添加并访问书签	51	故障诊断.....	63
使用 RSS 阅读器	51		
保存页面	52		
访问保存的网页	52		
查看浏览器历史记录	52		
更改网络浏览器设置	52		
将手机用作调制解调器	53		
设置	54		
使用 SIM 双卡菜单	54		
个性化情景模式.....	54		
更改显示设置	54		
更改手机设置	55		
更改连接设置	56		
网络设定	56		
连接设置	56		
使用内存管理器	57		
使用蓝牙发送和接收			
文件	57		
与其它蓝牙设备配对	58		
使用蓝牙耳机	59		
Wi-Fi	59		
软件升级	59		

关于安全有效使用手机的准则

请阅读以下简单的准则。违反这些准则可能造成危险或者触犯法律。

暴露在射频能量之下

无线电波暴露和“特定吸收率”(SAR)信息。

此款 GX500 型手机已设计为遵守有关适用的无线电波暴露安全要求。此要求基于相关的科学准则，其中包括为确保所有人员（无论年龄和健康状况）安全而设计的安全裕量。

- 无线电波暴露准则采用一种称为“特定吸收率”或 SAR 的测量单位。SAR 测试是在所有用到的频带中以手机的最高认可功率电平进行发射时使用标准化方法执行的。
- 不同的 LG 手机型号可能有不同的 SAR 能级，但它们均符合相关的无线电波暴露准则。
- 国际非电离辐射防护委员会 (ICNIRP) 建议的 SAR 上限值为：每 10g 重的人体组织吸收的能量平均值不超过 2W/kg。
- 由 DASY4 对该型号手机进行的测试，人耳能够承受的 SAR 最大值为 1.45 W/kg (10 克)，戴在身体上时，其值为 0.841 W/kg (10 克)。

- 电气电子工程师协会 (IEEE) 建议的 SAR 上限值为 1.6 W/kg，平均值超过 1 克薄纸，此 SAR 数据适用于各个国家/地区的居民。

产品保养和维护

⚠ 警告：仅使用经核准为用于此特定手机型号的电池、充电器和配件。使用任何其它类型可能导致适用于此手机的许可或保修失效，并可能造成危险。

- 不要拆解本机。当需要维修时，请将手机送往合格的服务技术人员处。保修（由 LG 决定）可能包括使用新的或返修的更换部件或板，只要其功能与更换的部件等效。
- 远离诸如电视、收音机或个人计算机之类的电器。
- 远离诸如暖气片或厨灶之类的热源。
- 小心不要让手机摔落。
- 不要让手机受到机械振动或撞击。

- 在任何有特殊条例要求的区域关闭手机。例如，请勿在医院使用手机，因为它可能影响敏感的医疗装置。
- 手机充电时，请勿用湿手操作手机。这可能会导致电击或手机严重受损。
- 请勿在靠近易燃物体的位置充电，因为手机可能因加热而引发火灾。
- 用包装材料或乙烯基包装纸包裹手机可能会损坏手机涂层。
- 如果手机置于柔软物体之上，请不要充电。
- 应将手机放在完全通风的位置充电。
- 不要在烟雾或灰尘过多的环境中使用或存放手机。
- 不要将手机放在信用卡或卡式车票旁边，它可能会影响磁条上的信息。
- 不要用尖锐物体敲击屏幕，这可能会损坏手机。
- 不要将手机暴露在液体或潮气中。
- 谨慎使用诸如耳机之类的配件。在不必要的情况下，不要触摸天线。

有效的手机操作

电子设备

所有手机都可能受到干扰，这种干扰会对性能造成影响。

- 在未经允许的情况下，不得在医疗装置附近使用手机。不要将手机放在心脏起搏点上，即胸前的口袋内。
- 手机可能会对某些助听器造成干扰。
- 微弱的干扰可能会影响电视、收音机、个人计算机等。

行车安全

查阅有关在驾驶时使用手机的本地法律法规。

- 不要在驾驶时使用手持式手机。
- 将注意力完全集中在驾驶上。
- 如果有免提装置，请使用免提装置。
- 如果行驶条件需要，请在拨打或接听电话之前将车辆驶离道路并停车。
- 射频能量可能影响车辆内的电子系统，例如立体声音响、安全设备等。

关于安全有效使用手机的准则

- 当车辆配备气囊时，不要让安装的便携式的无线设备阻挡气囊。由于不适当的个人行为，可能造成严重伤害。
- 如果您在外出时使用耳机收听音乐，请确保将音量设置为合理的音量级别，以便注意周围的情况。在过马路时，尤其要注意这一点。

防止损伤您的听力

如果您长时间置于高音环境中，那么您的听力可能会遭到伤害。因此，我们建议您在开机或关机时不要将手机置于耳边。同时，我们还建议您将音乐和通话音量设置为合理的音量级别。

爆破区域

不要在正进行爆破的地区使用手机。请依照有关限制，并遵守任何规章或规定。

易爆环境

- 不要在加油站内使用手机。
- 不要在靠近燃料或化学制品处使用手机。
- 不要在放有手机和配件的车厢内运输或存放可燃气体、液体或爆炸品。

在飞机上

无线设备可能对飞机造成干扰。

- 登机前，请关机。
- 未经机务人员允许，不得在地面上使用手机。

儿童

将手机放在儿童接触不到的安全地方。手机中包含细小零件，如果脱落可能导致窒息危险。

紧急电话

并非在所有手机网络中均可使用紧急电话。因此，您不应仅依赖于手机的紧急呼叫功能。请向本地的服务提供商核准。

电池信息及保养

- 您无需在再次充电前对电池进行完全放电。与其它电池系统不同，本机电池不具有可能影响电池性能的记忆效应。
- 只能使用 LG 电池和充电器。LG 充电器设计为最大程度地延长电池使用寿命。
- 不要拆解电池组或将其短路。
- 保持电池组的金属触点清洁。
- 当电池不再提供合乎要求的性能时，请更换电池。在需要更换之前，电池组可以反复充电数百次。

- 如果电池已经使用很长一段时间，请对电池再次进行充电以保持最佳使用状态。
- 不要将电池充电器暴露在直射阳光下，也不要在此类的高湿环境中使用。
- 不要将电池存放在过热或过冷的地方，这可能损害电池的性能。
- 如果用不适当的电池进行替换，可能会有爆炸危险。
- 请按制造商的说明处置用过的电池。如果可能，请循环使用电池。不要象处理家用废物一样处理电池。
- 如果要更换电池，请将其携带至 LG Electronics 授权服务点或经销商处以寻求帮助。
- 手机充好电后，请务必将充电器从墙上插座拔下，以避免不必要的耗电。
- 实际的电池寿命将取决于网络配置、产品设置、使用方式、电池和环境条件。

开始了解您的手机

结束/电源键

挂断或拒接来电。
开机/关机。
按一次返回待机屏幕。

多任务键

通话键


拨打电话号码并接听来电。



⚠ 警告： 在手机上放置重物或将手机卧放在口袋中可能会损坏手机的 LCD 屏幕及触摸屏的功能。




打开视图

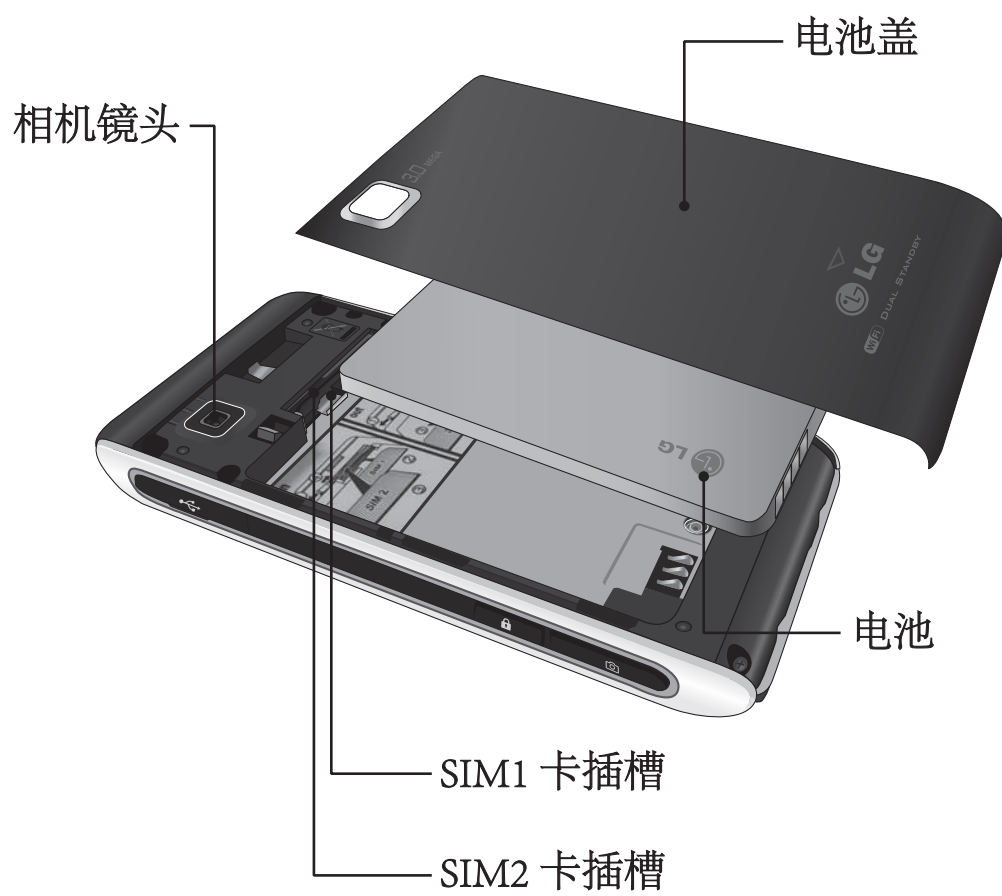

安装 SIM 卡和电池


1 卸下电池盖

将电池盖沿手机底部滑动，卸下电池盖。

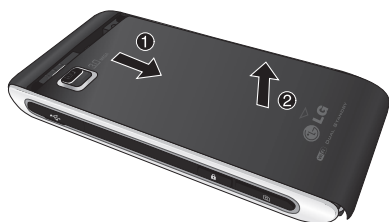

2 取出电池

使用顶部的突出块，将电池从电池盒中取出。

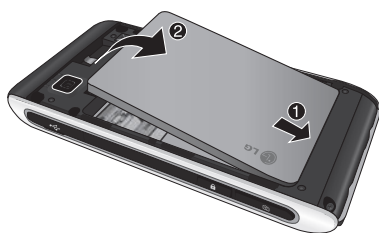


⚠ 警告：不要使用指甲取出电池。


⚠ 警告：手机开机时，不要取出电池，这可能会损坏手机。

3 安装 SIM 卡

将 SIM 卡滑进 SIM 卡弹夹中。确保卡的金色接触区域面朝下。要取出 SIM 卡，沿反方向轻推。

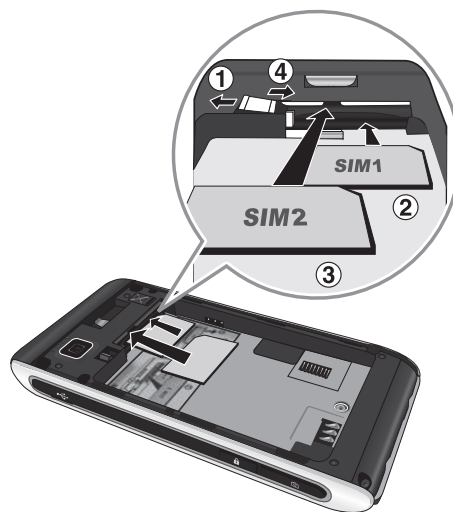

⚠ 警告

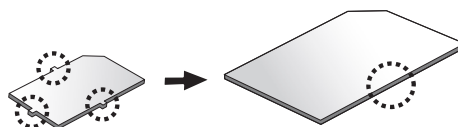

在将 SIM 卡插入到弹夹之前，请确保 SIM 卡的切角边干净整洁。

安装 SIM 卡和电池

4 安装电池

先将电池后端插入电池室底部。请确保电池触点与手机端子对齐。向上推电池底端，直至电池卡入到位。



5 充电

掀开并旋转 GX500 侧面的充电器插槽盖。插入充电器并插入电流插座。当屏幕上出现“电量已满”时，GX500 才充电完毕。




存储卡

安装存储卡

使用 MicroSD 存储卡，可以扩展手机的可用存储空间。

备注：存储卡是可选配件。

- 1 打开手机右侧边缘的存储卡插槽盖。
- 2 将存储卡滑入插槽顶部，直到卡入到位。
- 3 装好插槽盖。

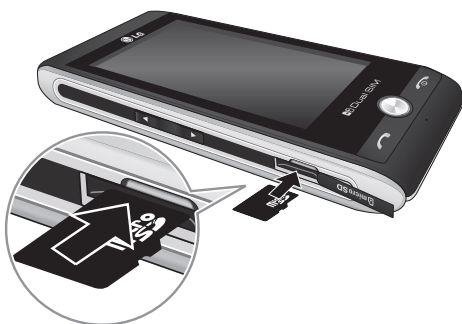

格式化存储卡

如果已格式化存储卡，您可以开始使用。如果您的存储卡尚未格式化，那么在开始使用之前，请先格式化。

- 1 从待机屏幕选择 ，然后点触 ，选择**手机设置**。
- 2 点触**内存信息**，然后选择**外部存储器**。
- 3 点触**格式化**，然后确认选择。
- 4 输入密码（如果已设置）以格式化存储卡，现在，您可以使用该存储卡了。

备注：如果存储卡中已有内容，它将自动保存在正确的文件夹中，例如，视频将保存到“我的视频”文件夹中。

菜单地图

点触待机屏幕中的  以打开顶层菜单。在此，您可以访问更多菜单：**通讯**、**娱乐**、**实用工具**和**设置**。



通讯

- 电话簿
- 近期记录
- 信息
- 电子邮件
- 拨号
- 社交网络
- 快速拨号
- 写信息



娱乐

- 相机
- 图片库
- 音乐
- 我的文档
- 游戏和应用程序
- 口袋应用程序
- FM 收音机
- 录像机



实用工具

- 浏览器
- 谷歌搜索
- 闹钟
- 管理器
- 备忘录
- 录音机
- 工具
- 绘图面板



设置

- 双 SIM 卡设置
- 情景模式
- 显示设置
- 手机设定
- 通话设置
- 蓝牙
- 连接
- Wi-Fi

待机屏幕

从待机屏幕，您可以访问所有菜单选项、快速拨打电话、查看手机状态以及进行其它一些操作。

触摸屏提示

您也可以在主屏上熟悉使用触摸屏。

要选择项目，请准确点触图标。当 GX500 识别您点触的选项时，会轻微振动。

要在列表中滚动，请点触所见的最后一个条目，然后使用手指向上滑过屏幕。列表向上滚动，您将看到更多条目。

- 无需大力按，触摸屏非常敏感，仅需点触即可。

- 使用指尖点触所需选项。请注意不要触碰到旁边的其它选项。
- 屏幕背景灯关时，按右手边的解锁/锁定键可以返回主屏。
- 不要使用手机套。使用金属套可能导致触摸屏不可用。
- 有两种类型的待机屏幕。向左或向右轻弹以更改待机屏幕类型。
 - 1 小工具待机屏 - 点触  时，将出现手机小工具面板。
 - 2 快速拨号待机屏 - 点触  时，将出现快速拨号列表。在两种待机类型下，您都可以拖动并单击所需内容。

待机屏幕

快速键

快速键使您可以一键式轻松访问常用功能。



点触可打开触摸拨号键盘，以拨打电话。按使用普通键盘的方式输入号码，然后点触**呼叫**或按  硬键。



点触以打开电话本。要搜索您要呼叫的号码，请使用触式键盘在屏幕顶部输入联系人的姓名。您也可以创建新的联系人以及编辑现有联系人。



点触可以进入“信息”选项菜单。在此，您可以创建新短信或彩信，或查看信息文件夹。



点触可以打开完整顶层菜单，该菜单被划分为四个垂直子菜单。点触每个子菜单的选项卡以查看更多选项。

状态栏

状态栏使用不同图标指示诸如信号强度、新信息和电池使用寿命等信息，以及告知您是否启动了蓝牙或 GPRS。

下表说明了您最可能在状态栏中看到的不同图标的涵义。

图标	描述
	多任务
	网络信号强度（指示栏数不同）
	无网络信号
	剩余电量
	电池电量空
	新文本信息
	新语音信息
	收件箱已满
	信息发送失败
	多媒体信息发送失败
	闹钟已设置

图标	描述
	正在使用自定义情景模式
	正在使用“标准”情景模式
	正在使用“户外”情景模式
	正在使用“静音”情景模式
	正在使用“耳机”情景模式
	呼叫被转接
	正在使用 EDGE
	正在漫游
	飞行模式开
	蓝牙已启动
	播放 BGM
	暂停 BGM
	允许使用存储卡
	Wi-Fi

待机屏幕

从状态栏更改状态

点触状态栏打开“状态摘要”。它显示当前时间、网络、服务 ID、电池、手机内存、外部存储器、情景模式、MP3 及蓝牙状态。您可以在这里设置情景模式类型、播放/暂停 MP3 及激活/关闭蓝牙。

使用多任务功能

按多任务硬键  打开“多任务”菜单。在此，您可以查看正在运行的所有应用程序，并通过一个点触操作进入该应用程序。

如果后台中正在运行某个应用程序（如，游戏或 FM 收音机），状态栏中将显示 。

通话

拨打电话

- 1 点触  以打开键盘。
- 2 使用键盘键入号码。要删除一个数字，请点触清除键。
- 3 按  硬键或点触“通话”开始通话。
- 4 要结束通话，请按  硬键。

提示！ 要输入 + 以拨打国际电话，请长按 。

从电话本拨打电话

- 1 从待机屏幕点触  以打开电话本。
- 2 输入您要呼叫的联系人的前几个字母。
- 3 从过滤列表中点触您要呼叫的联系人，如果保存了多个号码，请选择您要使用的那个。
- 4 点触 。

接听和拒接来电

电话铃响起时，按  硬键或点触  接听电话。

轻触  以静音。如果您在开会时忘记将情景模式更改为“静音”，这非常有帮助。

按  硬键或点触  拒接来电。

快速拨号

您可以为常用联系人指定快速拨号号码。

- 1 从主屏点触  以打开电话本。
- 2 点触 ，选择快速拨号。
- 3 语音邮件已设为快速拨号 1。不能对此设置进行更改。点触任意其它号码，为其指定快速拨号联系人。

通话

- 4 此时将打开您的地址簿。点触要指定到该号码的联系人的电话号码一次，以选择该联系人。要查找联系人，请点触搜索字段框，输入所需联系人姓名的第一个字母。

拨打第二个电话

- 1 在初始呼叫中，点触  并选择您要呼叫的号码。
- 2 拨号或在电话本中搜索。
- 3 按  以连接通话。
- 4 此时呼叫屏幕上将显示两个呼叫。初始呼叫被锁定，通话方进入保持状态。
- 5 要在通话间更改，请点触 ，然后选择**切换通话**或按保持的通话的号码。
- 6 要结束一个呼叫或同时结束两个呼叫，请按 ，选择**全部**、**已保留**或**启动**，然后选择**结束**。

提示！ 您可以通过选择接受和**加入**连接通话。查看您的网络提供商是否支持多方通话。

备注：您需要为每个通话各自付费。

查看通话记录

点触 ，选择**通讯**，然后点触**近期记录**。选择以查看：

全部 - 查看所有拨电、已接来电和未接来电的完整列表。

已拨电话 - 查看所有已拨打的电话的列表。

已接来电 - 查看打给您的所有电话的列表。

未接来电 - 查看您没接到的所有电话的列表。

提示！ 从通话记录中点触  及**全部删除**以删除所有录制的项目。

使用呼叫转接

- 1 点触 ，选择 ，然后选择 。
- 2 点触**呼叫转接**。
- 3 选择转接电话的情况：
转接所有通话、线路忙时转接、无人接听时转接，或无法接通时转接。
- 4 输入您要转接的号码。
- 5 点触**请求**以激活。

备注：转接通话会产生相应费用。有关详细信息，请联系您的网络提供商。

提示！ 要关闭所有通话转接，请从**呼叫转接**菜单中选择**关闭全部**。

使用呼叫限制

- 1 点触 ，选择 ，然后选择 。
- 2 点触**呼叫限制**。
- 3 选择以下五个选项中的一项或所有项：
所有拨电
国际拨出电话
国际漫游时拨打电话
所有来电
国际漫游时来电
全部停用
- 4 输入呼叫限制密码。请与您的网络运营商联系，了解有关此服务的信息。

提示！ 选择**固定拨号**打开并汇集一个号码列表，可从手机拨打此列表中的号码。您需要运营商提供的 PIN2 码。仅可以使用手机拨打此号码列表中的号码。

通话

更改常用通话设置

1 点触 ，选择 ，然后选择 .

2 点触**常用设置**。在此，您可以修改以下设置：

拒接来电 - 将开关滑动到开以突出显示拒绝列表。您可以点触文本框，从所有通话、特定联系人或未知号码（不在电话本中的号码）中进行选择。点触**保存**以更改设置。

发送本机号码 - 选择当您呼叫对方时是否显示您的号码。

自动重拨 - 向左滑动开关为开，向右滑动开关为关。

接听模式 - 选择是使用发送键还是任意键接听电话。

分钟提示 - 向左滑动开关为开，在通话过程中每隔一分钟将听到提示音。

蓝牙接听模式 - 选择**免提**可使用蓝牙耳机接听来电，或选择**手机**按手机任意键接听来电。

保存新号码 - 选择**是**以保存新号码。

联系人

正在搜索联系人

有两种方式可搜索联系人：

从待机屏幕

- 1 从待机屏幕点触  以打开电话本。从列表中选择您要呼叫的联系人。
- 2 点触  或按  硬键激活通话。

从主菜单

- 1 点触 ，选择 。
- 2 点触**电话簿**和**搜索**。
- 3 您将看到一个联系人列表，键入联系人姓名的首字母会使菜单跳转到该字母区域。

提示！ 当您点触空白方框时，将显示字母键盘。

添加新联系人

- 1 从待机屏幕点触 ，然后点触**添加联系人**。
- 2 选择是将联系人保存到手机还是 SIM 卡 (SIM 1/SIM 2)。

- 3 输入新联系人的姓氏和名称。您无需同时输入姓氏和名称，但必须输入一个。
- 4 对同一个联系人，您最多可以输入 5 个不同的号码。每个条目下的类型包括：**手机、家庭、办公室、传呼机、传真和普通**。完成后，请点触**关闭**。
- 5 添加电子邮件地址。
- 6 将联系人分配到一个群组。从以下选项选择：**无群组、家人、朋友、同事、同学或重要人士**。
- 7 您还可以添加铃声、生日、周年纪念、主页、家庭地址、公司名称、职位、公司地址和备忘录。
- 8 点触**保存**以保存联系人。

联系人

创建群组

- 1 点触 .
- 2 点触**电话簿**，然后点触**群组**。
- 3 点触 .
- 4 选择**添加群组**。
- 5 输入新群组的名称。您也可以为群组指定铃声。
- 6 点触**保存**。

备注：如果您删除一个群组，分配至该群组的联系人不会被删除。他们仍将保留在电话本中。

更改电话本设置

您可以调整您的电话本设置，使电话本符合您的需要。

提示！ 要在选项列表中滚动，请点触所见的最后一个条目，然后使用手指向上滑过屏幕。列表向上滚动，您将看到更多条目。

- 1 从待机屏幕点触 .
- 2 点触**电话簿**，然后点触**设置**。
- 3 在此，您可以调整以下设置：

联系人列表设置 - 选择查看保存在手机、SIM1 卡和 SIM2 卡上的电话本，或单独查看手机、SIM1 卡和 SIM2 卡上的电话本。

您还可以选择是先显示联系人的姓还是名。

复制 - 在 SIM 卡（SIM1 或 SIM2）和手机之间复制联系人。请选择是一次复制一个还是全部复制。如果选择一次复制一个，您需要逐个选择每个联系人以进行复制。

移动 - 其操作与“复制”相同，但联系人仅保存在移动目标位置。因此，如果将联系人从 SIM 卡移动到手机，其将从 SIM 存储卡中删除。

通过蓝牙发送所有联系人 - 使用蓝牙，将所有联系人发送到其它设备或计算机。如果选择此选项，您会收到打开蓝牙的提示。

备份电话簿 - 请参阅“电脑同步”部分的“备份和恢复手机信息”。

恢复电话簿 - 请参阅“电脑同步”部分的“备份和恢复手机信息”。

清空电话簿 - 删除所有联系人。如果确定要清空地址簿，请点触**是**。

提示！ 如果您为自己添加了名片，选择**我的名片**并输入所有您可能为其他联系人输入的详细信息。点触**保存完成**。

查看信息

- 1 从待机屏幕点触 .
- 2 点触**电话簿**，然后点触**信息**。
- 3 在此，您可以查看**服务号码**、**本机号码**以及**存储器资料**。（剩余内存空间）和**我的名片**。

信息

信息

GX500 将短信、多媒体信息和电子邮件结合到一个直观易使用的菜单中。

有两种方式进入信息中心：

- 1 从待机屏幕点触 。
- 2 从待机屏幕点触 ，然后选择 ，然后选择 。

发送信息

- 1 点触**新信息**打开空白信息。
- 2 在此，您可以发送短信或彩信。要发送电子邮件，从待机屏幕点触 ，然后选择  和**电子邮件**。
- 3 点触**插入**添加图像、视频、声音或模板。
- 4 点触屏幕顶部的**收件人**输入收件人号码，或点触搜索图标打开电话本。您可以添加多个联系人。就绪后，请点触**发送**。

备注：您可以一次将短信发送给多个用户。单击联系人搜索图标，从用户可以标记/取消标记联系人以发送短信的选项中选择多个。要将短信发送给特定联系人群组，只需在写完短信后，单击联系人搜索图标，然后选择“按群组搜索”即可。

 **警告：**您将按每个收件人每 1 页文本信息付费。

 **警告：**如果在短信中添加图像、视频或声音，则短信将自动转换为彩信，您需要支付相应费用。

输入文本

有五种方式可输入文本：

数字键盘、键盘、手写屏幕、手写箱、手写双屏。

通过点触  并点触**输入法**，您可以选择输入方法。点触屏幕一次，将出现键盘。

 点触可以打开 T9 预测文本。

 您可以选择编写语言。

 点触以更改号码、符号和文本键盘。

在每种文本输入模式中，使用  在不同键盘类型之间滚动（例如，大写字母或小写字母）。

T9 预测

T9 模式使用内置字典，根据您的点触按键的顺序识别您写入的内容。只需点触与您要输入的字母关联的数字键即可，随着您的键入内容，字典将预测您想要使用的单词。

例如，依次按 8、3、5、3、7、4、6、6、3 输入“telephone”。

Abc 手动

在 Abc 模式中，要输入字母，您必须重复点触按键。例如，要写入“hello”，需要点触两次 4、两次 3、三次 5，再点触三次 5，最后点触三次 6。

键盘

在键盘模式中，屏幕横向展开，屏幕上显示完整的标准键盘。

点触每个字母即可写入您的信息，然后按：

 切换到大写。

手写识别

在手写模式中，您只需在屏幕上书写内容，GX500 即可将您的手写内容转换为信息。根据首选视图选择手写屏幕或手写箱。

提示！ 您可能会发现，在此模式中使用手写笔会非常轻松，请记住，轻触屏幕以保护屏幕不受损坏。

信息

手写识别会将手写笔操作内容转化为字母、数字或其它字符，然后以文本方式显示这些字符。只有在可输入文本的位置，才会激活手写识别。

设置电子邮件

使用 GX500 中的电子邮件，您可以在旅途中随时与他人保持联系。设置 POP3 或 IMAP4 电子邮件帐户非常快捷。

- 1 点触 ，然后轻触 .
- 2 选择 ，然后将菜单滚动到**设置**。
- 3 点触**电子邮件**，然后点触**电子邮件帐户**。
- 4 点触**添加帐户**。
- 5 设置向导将帮助您设置电子邮件设置。
- 6 通过选择列表中的帐户，您可以检查并编辑设置。您还可以检查当您创建帐户时自动填写的其它设置。

- 7 通过点触激活，您可以更改默认电子邮件帐户。

检索电子邮件

您可以自动或手动查看帐户的新电子邮件。

手动查看：

- 1 点触 ，然后选择  和 .
- 2 点触电子邮箱。
- 3 点触您要使用的帐户，然后点触 .
- 4 选择**检索**，GX500 将连接到您的电子邮件帐户并检索新邮件。

更改电子邮件设置

您可以更改电子邮件设置以满足您的个人需要。

- 1 点触 ，然后选择 .
- 2 点触**设置**和**电子邮件**，然后，您可以调整以下设置：
允许回复电子邮件 - 选择是否允许发送读取确认邮件。

要求回复电子邮件 - 选择是否要请求读取确认邮件。

读取间隔时间 - 选择GX500 检查新电子邮件信息的频率。

读取数量 - 选择一次要检索的电子邮件数目。

在转发和回复中包含信息 - 选择在回复时是否要包括原始邮件。

包含附件 - 选择在回复中是否包含原始附件。

漫游时自动检索 - 选择是否自动检索邮件。

新电子邮件通知 - 选择在收到新电子邮件时是否需要提示。

签名 - 创建电子邮件签名并打开此功能。

优先级 - 选择电子邮件信息的优先级级别。

信息文件夹

您可以识别 GX500 中的文件夹结构，完全无需进行说明。

写信息 - 打开新的空白信息。

收件箱 - 您接收到的所有信息将放置在收件箱。在此，您可以查看、删除及执行其它操作，有关详细信息，请参阅**管理信息**。

草稿箱 - 如果您来不及写完一条信息，您可以将已写信息保存在此。

发件箱 - 这是发送信息时的临时储存文件夹。

已发送项目 - 您发送的所有信息将放置在此文件夹。

我的文件夹 - 创建文件夹以存储信息。

模板 - 使用常用文本和多媒体信息模板列表。

情绪符 - 为您的信息添加和插入图释。

设置 - 更改文本和多媒体信息设置。

信息

更改文本信息设置

GX500 已预定义信息设置，因此，您可以立即发送信息。可以根据您的个人需要更改这些设置。

提示！ 要在选项列表中滚动，请点触所见的最后一个条目，然后使用手指向上滑过屏幕。列表向上滚动，您将看到更多条目。

点触 ，然后选择下列选项上的**设置**： 。选择**文本信息**。您可以更改：

文本信息中心 - 输入信息中心的详细信息。

发送报告 - 向左滑动开关，在对方收到您发送的信息时接收确认。

有效期 - 选择信息在信息中心中的最长保存时间。

信息类型 - 将文本转换为文本、语音、传真、X.400 或电子邮件。

字符编码 - 选择符号编码方式。这将影响信息大小并因此产生数据费用。

将长文本另发送为 - 选择是以多条短信还是一条彩信发送长信息。

更改多媒体信息设置

GX500 已预定义信息设置，因此，您可以立即发送信息。可以根据您的个人需要更改这些设置。

点触 ，选择 ，然后点触 。

选择**设置**和**多媒体信息**。您可以更改：

读取模式 - 选择是**本地**还是**漫游网络**。如果选择手动，那么您仅会收到彩信通知，随后，您可以决定是否要完整下载该信息。

发送报告 - 选择是否允许请求状态报告。

已读回复 - 选择是否允许和/或请求阅读报告。

优先级 - 选择多媒体信息的优先级级别。

有效期 - 选择信息在信息中心中的最常保存时间。

幻灯片持续时间 - 选择幻灯片在屏幕上显示多长时间。

创建模式 - 选择信息模式。

发送时间 - 选择信息发送前的时间。

多媒体信息中心 - 输入信息中心的详细信息。

更改其它设置

点触 ，然后下列选项上的设置：  然后：

语音邮件 - 点触  添加新的语音邮件服务。有关其提供的服务的详细资料，请联系您的网络运营商。

服务信息 - 选择是接收还是阻止服务信息。您也可以通过创建可信和不可信发件人列表来设置信息安全性。

小区服务 - 选择接收状态、语言和其它设置。

相机

快速拍照

- 1 短按手机右侧的相机热键。
- 2 屏幕上将显示取景器。
- 3 水平放置相机，将镜头对准要拍摄的物体。
- 4 使用相机定位，以便在预览屏中看到要拍摄的物品。
- 5 当相机对好焦后，按相机侧面的  或屏幕右下角的红色框拍照。

拍照后

拍好的照片将显示在屏幕上。

-  点触可以**信息、电子邮件或蓝牙方式发送照片**。请参阅“发送信息”和“使用蓝牙发送和接收文件”。

备注：漫游时，如果下载彩信将产生一定费用。

-  点触以编辑选定图片的名称。

-  点触以将图像用作墙纸。

-  点触各种工具以编辑图像。

-  点触以返回上一个菜单。

-  点触可以删除图像。

-  点触可以立即拍摄其它照片。

-  点触可以查看保存的图像库。

使用高级设置

从取景器中点触  以打开所有高级设置选项。

色彩效果 - 选择适用于您所拍摄的照片的色调。

白平衡 - 从以下选项中选择：自动、白炽灯、日光、荧光灯或阴天。

自拍器 - 使用自拍器，您可以设置拍照前按下拍摄按钮后的延迟。从关、3 秒、5 秒或 10 秒中选择。如果照片中要包括您自己，自拍器非常有用。

隐藏图标 - 选择手动还是自动隐藏相机设置图标。

质量 - 在超精细、精细和标准之间选择。质量越精细，照片将越清晰，同时，文件更大。这意味着存储器中保存的照片将越少。

快门声音 - 从三种快门声音中选择一种。

网格屏幕 - 从关、简单十字或三等分中选择

重置设置 - 重设所有相机设置。

查看保存的照片

- 1 您可以在相机模式下访问保存的照片。轻触 ，此时屏幕上将显示图片库。

摄像机

快速摄像

- 1 长按手机右侧的相机键。
- 2 或者，在相机模式下点触取景器中的  切换到视频模式。
- 3 屏幕上将显示摄像机的取景器。
- 4 水平放置相机，将镜头对准要拍摄的物体。
- 5 按拍摄按钮一次，开始录制。
- 6 取景器顶部将出现 **Rec**，底部计时器显示视频长度。
- 7 要暂停视频，请点触 ，要恢复录制，请选择 。
- 8 点触屏幕上的  或再按一次拍摄按钮停止录制。

拍摄视频后

屏幕上将显示所拍摄视频的静态图像。视频名称在屏幕底部显示，屏幕右侧将显示六个图标。



点触以播放视频。



点触可以将视频作为**信息或电子邮件**，或通过**蓝牙**发送。



点触可以编辑视频。



点触以编辑选定图片的名称。



点触以返回上一个菜单。



点触可以删除您刚拍摄的视频，点触**是**确认。此时将出现取景器。



点触立即拍摄其它视频。将保存您的当前视频。



点触以查看保存的视频和图像库。

调节曝光

曝光定义视频的深浅（对比度）差别。

- 1 点触 。
- 2 沿滚动条滑动曝光指示器，向左对应曝光度更低、更模糊的视频，向右对应曝光度更高、更清晰的视频。

使用高级设置

从取景器中点触  以打开所有高级设置选项。

色彩效果 - 选择适用于您所拍摄的视频的色调。

白平衡 - 白平衡确保视频中的白色显示真实。要正确调整相机的白平衡，您需要确定光照条件。

质量 - 在**超精细**、**精细**和**标准**之间选择。

设置时间 - 设置视频的长度限制。

提示！ 如果长度选择“彩信”，请尝试选择较低的图像质量以拍摄更长视频。

存储位置 - 选择是将照片保存到**手机内存**还是**外部存储器**。

语音 - 选择“静音”，录制视频而不录制声音。

重设设置 - 重设所有摄像机设置。

观看保存的视频

- 1 从取景器中点触 。
- 2 屏幕上将显示您的图片库。
- 3 点触您要查看的视频一次，将其调到图片屏幕的前方。
- 4 再次点触该视频，完全打开。

照片和视频

查看照片和视频

- 1 点触相机预览屏幕上的 。
- 2 屏幕上将显示您的图像库。
- 3 点触视频或照片可以完全打开。

提示！ 向左或向右轻弹以查看其它照片或视频。

提示！ 要删除照片或视频，请打开它，然后选择 。点触是确认。

查看照片时使用缩放

查看照片时，您可以放大或缩小。

观看视频时调节音量

要在视频播放过程中调节音量，请按扬声器符号，然后点触屏幕底部的音量栏。或者，使用手机侧面的音量键。

将照片设为墙纸

- 1 点触您要设为墙纸的照片两次，以打开它。
- 2 点触屏幕可以打开选项菜单。
- 3 点触主屏菜单。
- 4 您可以使用屏幕底部的缩略图放大及缩小图片，以及移动剪切部分。

编辑照片

您可以对照片执行多项操作以更改、添加或修饰。

1 打开您要编辑的照片，点触  以显示选项。

2 点触图标以调整照片：

 裁切照片。选择方形或圆形裁切区域，使用手指移过选定区域。

 徒手对照片进行绘制更改。从四个选项中选择线条粗细，然后选择要使用的颜色。

 在图片上添加书写内容。请参阅**为照片添加文本**。

 使用标记修饰照片。从不同标记中选择，点触照片中您要放置标记的位置。

 擦除您对图片所做的编辑。您可以选择要使用的橡皮擦大小。

 点触可以返回图片库。

 保存您对照片所做的更改。选择保存所做更改的方式：**更新现有**或**新文件**。如果选择**新文件**，请输入文件名。

 擦除您对照片所做的编辑。

 点触可以打开更多效果选项，包括**旋转**。此外还有一些高级编辑选项。请参阅**添加点彩**和**交换照片中的颜色**。

 点触以对照片应用效果选项。

 此时将使用自动色彩、亮度等对所拍图片进行调整。

多媒体

您可以将任意多媒体文件存储到手机内存中，这样，您可以轻松访问所有图片、声音、视频和游戏。您也可以将文件保存到存储卡中。使用存储卡的优点是：您可以释放手机内存的存储空间。

要访问“多媒体”菜单，请点触 ，然后点触 .

点触  以打开文件夹列表，该列表保存您所有的多媒体文件。

图片

我的图像包含一个图片列表，其中包括预先加载到手机中的默认图像、您下载的图像以及手机相机拍摄的图像。

点触  将视图从缩略图视图更改为列表视图。

发送照片

- 1 点触 ，然后点触 .
- 2 点触 ，然后选择**我的图像**。

- 3 点触**发送**并从**信息**、**电子邮件**或**蓝牙**中选择。
- 4 如果选择**信息**或**电子邮件**，照片将被附加到信息中，您可以照常撰写和发送信息。如果选择**蓝牙**，将自动打开蓝牙，手机将搜索设备以发送图片。

打印图像

- 1 点触 ，然后点触 .
- 2 点触 ，然后点触**我的图像**。
- 3 选择图像并点触 .
- 4 点触**打印**，然后选择**蓝牙**。

提示！ 您可以通过蓝牙连接到兼容的打印机打印。

移动或复制图像

您可以在手机内存和存储卡之间移动或复制图像。您可能需要执行此操作以释放其中一个存储位置的存储空间，或保护图像不丢失。

- 1 点触 ，然后点触 .
- 2 点触 ，然后点触**我的图像**。
- 3 点触 ，然后选择**移动或复制**。
- 4 您可以依次点触图像以标记/取消标记。标记您要移动或复制的图像，然后点触**复制/移动**。

声音

我的声音文件夹包含“下载的声音”、**默认声音**和**录音**。在此，您可以管理、发送或将声音设为铃音。

视频

我的视频文件夹显示已下载的视频以及手机中录制的视频列表。

观看视频

- 1 点触 ，然后点触 .
- 2 点触 ，然后点触**我的视频**。
- 3 选择要播放的视频

发送视频剪辑

- 1 选择视频，然后点触 .
- 2 点触**发送**并从**信息**、**电子邮件**或**蓝牙**中选择。
- 3 如果选择**信息**或**电子邮件**，视频剪辑将被附加到信息中，您可以照常撰写和发送信息。如果选择**蓝牙**，蓝牙将自动打开，您的手机将搜索要将视频发送至的设备。

我的游戏和应用程序

您可以在手机中安装新游戏和应用程序，它们将在闲暇时为您带来乐趣。

多媒体

通过本地安装安装游戏/应用程序

- 1 点触 ，然后点触 。
- 2 点触 ，然后点触**其它**或**外部存储器**（如果插入了外部存储器）。
- 3 选择您要安装的文件（*.jad 或 *.jar），然后按**安装**命令。应用程序即被安装。

备注：jad 文件应包含自己的 jar 文件。

玩游戏

- 1 点触 ，然后点触 。
- 2 点触 ，然后**我的游戏**和**应用程序**。
- 3 打开“游戏”文件夹，选择并点触要启动的游戏。

文档

从文档菜单中，您可以查看所有文档文件。在此，您可以查看 Excel、PowerPoint、Word、文本和 PDF 文件。

将文件传输到手机

蓝牙可能是将文件从计算机传输到手机最简便的方法。您也可以通过同步数据线使用 LG PC 套件。

使用蓝牙传输：

- 1 请确保手机和计算机都已打开蓝牙，彼此可见。
- 2 通过蓝牙，使用电脑发送文件。
- 3 文件发出后，您必须通过点触**是**在您的手机上接受它。
- 4 文件应出现在**文档**或其它文件夹中。

查看文件

- 1 点触 ，然后点触 。
- 2 点触 ，然后点触**文档**。
- 3 选择文档，然后点触**查看**。

其它

其它文件夹用于存储非图片、声音、视频、游戏或应用程序文件。其使用方式与**文档**文件夹相同。当您从计算机传输文件到手机时，您可能发现文件保存在**其它**而不是**文档**文件夹中。如果这样，您可以移动文件。

将文件从**其它**文件夹移到**文档**：

- 1 点触 ，然后点触 .
- 2 点触 ，然后点触**其它**。
- 3 选择文件，然后点触 .
- 4 点触**移动**，然后点触箭头图标从列表中选择目标文件夹。传输完成后，屏幕上将显示**已移动**。

音乐

LG GX500 拥有内置的音乐播放器，因此，您可以播放所有喜爱的曲目。要进入音乐播放器，请依次点触 、、。您可以在访问多个文件夹：

最近播放 - 查看您最近播放的所有歌曲。

所有曲目 - 包含手机中的所有歌曲。

艺术家 - 按艺术家浏览音乐集合。

专辑 - 按专辑浏览音乐集合。

风格 - 按流派浏览音乐集合。

播放列表 - 包含您创建的所有播放列表。

随机曲目 - 以随机顺序播放您的曲目。

多媒体

将音乐传输到手机

将音乐传输到手机的最轻松的方法是通过蓝牙或同步数据线。

您也可以使用 LG PC 套件。使用蓝牙传输：

- 1 请确保双方设备都已打开蓝牙，对对方可见。
- 2 选择另一个设备上的音乐文件，选择通过蓝牙发送。
- 3 文件准备就绪可以发送后，您应点触是在手机上接受。
- 4 文件应显示在音乐 > 所有曲目中。

播放歌曲

- 1 点触 ，然后点触 .
- 2 点触 ，然后点触**所有曲目**。
- 3 选择您要播放的歌曲。

- 4 点触  暂停歌曲。
- 5 点触  跳到下一首歌曲。
- 6 点触  跳到上一首歌曲。
- 7 点触 ，返回到音乐菜单。

创建播放列表

您可以从**所有曲目**文件夹中进行选择，以创建自己的播放列表。

- 1 点触 ，然后点触 .
- 2 点触 ，然后点触**播放列表**。
- 3 点触**新建播放列表**，输入播放列表名称，然后点触**保存**。
- 4 **所有曲目**文件夹将显示手机中的所有歌曲。点触所有要包含在播放列表中的歌曲；这些曲目名称旁边将显示一个勾号。
- 5 点触**保存**。

使用收音机

LG GX500 拥有 FM 收音机功能，以便您转到喜爱的电台并收听无线广播。

备注：要收听收音机，您需要插入耳机。将耳机插入耳机插槽（与插入充电器的插槽相同）。

搜索电台

您可以手动或自动微调电台。搜索后，它们将保存为特定频道编号，这样，您就不用重复进行微调。您必须首先将耳机插入手机以将其用作天线。

自动微调：

- 1 点触 ，然后点触 。
- 2 点触 **FM 收音机**，然后点触 。
- 3 点触**自动扫描**。随后，将自动查找电台并分配给手机中的频道。

重置频道

- 1 点触 ，然后点触 。
- 2 点触 **FM 收音机**，然后点触 。
- 3 选择**重设**以重设当前频道，或选择**全部重设**以重设所有频道。每个频道的开始频率将返回为 87.5 Mhz。

管理器

录制声音或语音

- 1 点触 ，然后点触 .
- 2 点触**录音机**。
- 3 点触  开始录音。
- 4 点触  结束录音。
- 5 点触  以收听录音。

使用计算器

- 1 从待机屏幕选择 ，然后点触 ，选择**工具**。
- 2 选择**计算器**。
- 3 点触数字键以输入数字。
- 4 对于简单计算，点触您所需的函数 (+, -, ×, ÷)，然后点触 =。
- 5 对于较复杂的计算，请点触  并从 sin、cos、tan、log、ln、exp、sqrt、deg 或 rad 等中选择。

换算单位

- 1 从待机屏幕选择 ，然后点触 ，选择**工具**。
- 2 选择**单位换算器**。
- 3 选择要换算的内容：币种、面积、长度、重

量、温度、体积/容量或速度。

- 4 随后，您可以选择单位，输入要换算的初始值，然后选择要换算的目标单位。

向世界时间添加城市

- 1 从待机屏幕选择 ，然后点触 ，选择**工具**。
- 2 选择**世界时钟**。
- 3 点触 ，然后选择**新建城市**。开始键入所需城市的名称时，屏幕顶部即显示该城市。

使用秒表

- 1 从待机屏幕选择 ，然后点触 ，选择**工具**。
- 2 选择**秒表**。
- 3 点触**开始启动计时器**。
- 4 如果您要记录时间，请点触**圈**。
- 5 点触**停止结束计时器**。
- 6 点触**继续**从您停止的时间重新开始秒表，或点触**重设**重新开始计时。

PC 套件

您可以同步电脑与手机。同步有助于确保所有重要信息和日期匹配，同时做好备份。

提示！ 您需要安装 CD-ROM 上提供的应用程序 PC 套件，该程序也可从 <http://update.lgmobile.com> 下载手册和软件。

警告！ 如果电脑上没有显示安装指南信息，请在 Windows 上查看 CD-ROM 设置。

在电脑上安装 LG PC 套件

- 1 从主屏点触 ，然后点触**连接**。
- 2 选择 **USB 连接**，然后点触 **PC 套件**。
- 3 通过 USB 数据线连接手机和电脑，等待片刻。
- 4 此时将显示安装指南信息。

- 5 插入随附的 CD-ROM 或单击下载按钮直接从互联网下载 LG PC 套件程序。
- 6 单击显示在屏幕上的 LG PC 套件安装程序。

连接手机和电脑

- 1 在“连接”菜单中选择 PC 套件模式，然后将 USB 数据线连接到手机和电脑。
- 2 此时将在您的电脑上自动激活 LG PC 套件。
- 3 现在，手机与 PC 已连接。

PC 套件

备份和恢复手机信息

- 1 如上所述，将手机连接到电脑。
- 2 单击**备份**图标，选择**备份或恢复**。
- 3 选择是否要备份**内容数据**和/或**电话本/日程表/任务/备忘录数据**。选择信息的备份目标位置或恢复初始位置。单击**确定**。
- 4 您的信息将备份。

在电脑上查看手机文件

- 1 如上所述，将手机连接到电脑。
- 2 单击**管理照片、视频或音乐**图标。
- 3 您在手机上保存的图像、音频和视频文件将显示在“LG 手机”文件夹屏幕中。

提示！ 在电脑中查看手机内容有助于您管理不再需要的文件。

同步电话本

- 1 将手机连接到电脑。
- 2 单击**电话本**图标。
- 3 单击**同步电话本**按钮，您的电脑现在将导入并显示手机上保存的所有联系人。
- 4 单击**菜单**，然后选择**导出**。现在，您可以选择要保存电话本的位置。

同步信息

- 1 将手机连接到电脑。
- 2 单击**信息**图标。
- 3 所有手机信息将显示在屏幕上的文件夹中。
- 4 使用屏幕顶部的工具栏编辑和排列信息。

音乐同步

此菜单可用于将音乐添加到 GX500。开始从电脑向手机传输音乐之前，请确保电脑已完成以下设置并准备好以下配件：

- Microsoft Windows XP 或 Vista
- Windows Media Player 10 或更高版本
- USB 数据线
- microSD 卡（如果要将外部存储器用作音乐存储位置。）

 **警告：**传输过程中，不要断开手机连接。文件会损坏。

使用 Windows Media Player 传输音乐

- 1 从主屏选择 ，然后滚动到**设置**选项卡下的**连接**。
- 2 选择 **USB 连接模式**，然后选择**音乐同步**。

- 3 使用兼容的 USB 数据线连接手机和电脑。
- 4 尝试将手机连接到电脑时，手机显示“音乐同步...”，然后显示已连接。
- 5 电脑将提示您启动首选音乐管理软件。
- 6 选择 Window Media Player.
- 7 转到“同步”选项卡，然后将要传输的音乐拖动到手机中的**同步列表**面板中。
- 8 单击**开始同步**按钮。此时将开始传输流程。

 **警告：**传输过程中，不要断开手机连接。文件会损坏。

PC 套件

DivX Converter

安装作为 PC 套件软件、在同一 CD-ROM 中提供的 DivX Converter。DivX 将电脑中的媒体文件转换为您可以上传到手机并可在手机中查看的文件格式。

安装后，请从电脑的程序文件中选择 **DivX**，然后，依次选择 **DivX Converter** 和 **Converter**。

使用应用程序中的箭头将转换格式更改为“手机”。如果右键单击应用程序框，选择**首选项**，您可以更改保存转换文件的位置。

将文件拖动到应用程序中以进行初始分析。然后，选择**转换**以开始转换流程。此流程完成后，将显示“转换完成”弹出信息。

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play DivX Video-on-Demand (VOD) content. To generate the registration code, locate the DivX VOD section in the device setup menu. Go to vod.divx.com with this code to complete the registration process and learn more about DivX VOD.

Pat. 7,295,673

网络

浏览器

浏览器为您提供了一个涵盖游戏、音乐、新闻、体育、娱乐和下载的缤纷世界，您可以快速、直接地通过手机访问。畅行无阻、精彩无限。

访问网页

- 1 从待机屏幕选择 , 然后点触 , 然后选择 。
- 2 要直接访问浏览器主页，请选择**主页**。或者，选择**输入地址**并键入所需的URL，然后选择**连接**。

备注：连接此服务并下载内容时，可能会产生额外费用。查看网络提供商要求的数据付费。

添加并访问书签

为了轻松快速地访问收藏的网站，您可以添加书签并保存网页。

- 1 从待机屏幕选择 , 然后点触 , 然后选择 。
- 2 选择**书签**。此时屏幕上将出现一个书签列表。
- 3 要添加新书签，请选择 , 然后点触**添加书签**。输入书签名称和URL。
- 4 点触**保存**。现在，您添加的书签将显示在书签列表中。
- 5 要访问书签，点触书签后点触“连接”即可。您将连接到书签。

使用 RSS 阅读器

RSS（简易供稿）是一种网络订阅源格式，可用于发布最近更新的内容，如博客、新闻标题或播客。RSS 文档通常被称为订阅源、网络订阅源或频道，它包含相关网站的内容摘要或完整文本。

网络

RSS 使人们可以以主动方式随时关注其感兴趣的网站，而无需手动查看。

用户订阅源的方式：将订阅源的链接输入阅读器，或单击浏览器中的 RSS 图标即可开始订阅流程。阅读器将定期检查用户订阅的源以查看新内容并下载找到的任何更新。

保存页面

- 1 如上所述，访问所需网页。
- 2 点触  并选择**保存此页面**。
- 3 为网页输入一个名称，便于您轻松识别。
- 4 点触**保存**。

提示！ 此菜单还允许您编辑已保存页面的标题、保护或取消保护屏幕备忘录，以及删除已保存页面。

访问保存的网页

- 1 从待机屏幕选择 ，然后点触 ，然后选择 。
- 2 选择**保存的页面**。
- 3 选择所需页面，随即将打开该页面。

查看浏览器历史记录

- 1 从待机屏幕选择 ，然后点触 ，然后选择 。选择**历史记录**。
- 2 此时将显示一个您最近访问过网页的标题列表。要访问其中一个页面，只需选择所需页面即可。

更改网络浏览器设置

- 1 从待机屏幕选择 ，然后点触 ，然后选择 。选择**设置**。
- 2 您可以选择以编辑**网络设定、外观设置、缓存、Cookie、安全性**。

将手机用作调制解调器

GX500 可以用作电脑的调制解调器，使您在无法使用有线连接时仍可访问电子邮件和互联网。您可以使用 USB 数据线或蓝牙。

使用 USB 数据线：

- 1 确保 PC 上已经安装了 LG PC 套件。
- 2 用 USB 电缆连接 GX500 和您的电脑并启动 LG PC 套件软件。
- 3 单击电脑上的 **Internet Kit**。随后，单击**新建按钮**并选择**调制解调器**。
- 4 选择 **LG Mobile USB 调制解调器**，然后选择**确定**。此时将在屏幕上打开。
- 5 写入可连接到互联网的**配置**，然后保存值。
- 6 您创建的配置将显示在电脑屏幕上。选择并单击**连接**。电脑将通过 GX500 连接。

使用蓝牙：

- 1 确保已**打开**蓝牙并在电脑和 GX500 上均可见。
- 2 配对电脑和 GX500，此时需要通行码才能建立连接。
- 3 使用 LG PC 套件上的**连接向导**创建一个活动的蓝牙连接。
- 4 单击电脑上的 **Internet Kit**。然后，单击**新建按钮**。
- 5 选择 **LG Mobile USB 调制解调器**，然后选择**确定**。此时将在屏幕上打开。
- 6 写入可连接到互联网的**配置**，然后保存值。
- 7 您创建的配置将显示在电脑屏幕上。选择并单击**连接**。电脑将通过 GX500 连接。

设置

使用此文件夹，您可以调整设置以使 GX500 更具个性化。

使用 SIM 双卡菜单

要选择或更改 SIM 卡，按  并点触 ，然后选择 。

可设定 SIM 卡属性及 SIM 卡切换。

个性化情景模式

您可以在待机屏幕上快速更改情景模式。点触顶部的状态摘要栏及情景模式标签即可。

使用设置菜单，您可以个性化每个情景模式设置。

- 1 按 ，然后选择 。
- 2 点触**情景模式**，然后选择您要编辑的情景模式。
- 3 随后，您可以更改列表中可用的所有声音和提示选项。

更改显示设置

- 1 点触 ，然后选择 。
- 2 点触 ，然后从以下选项中选择：

墙纸 - 为待机屏幕选择主题。

顶层菜单 - 选择顶层菜单样式。

拨号 - 调整数字大小。

字体 - 调整字体大小。

备注：背景灯打开时间越长，电池耗电量就越大，您可能需要更频繁的对手机进行充电。

亮度 - 调整屏幕亮度。

问候语信息 - 选择开或关，然后填写问候语信息。

开机/关机 - 选择开机/关机屏幕的图像。

- 3 点触**保存**以保存设置。

更改手机设置

您可以根据自己的需要，随心所欲地对 GX500 进行调节。

提示！ 要在选项列表中滚动，请点触所见的最后一个条目，然后使用手指向上滑过屏幕。列表向上滚动，您将看到更多条目。

- 1 点触 ，然后选择 .
- 2 点触 ，然后从以下列表中选择。

日期和时间 - 调整日期和时间设置，或者，选择在旅行时或针对夏令时自动更新时间。

省电 - 选择开或关以开启或关闭初始的省电设置。

语言 - 更改 GX500 的显示语言。

自动键盘锁 - 在待机屏幕下自动锁定键盘。

安全性 - 调整您的安全设置，包括 PIN 码、手机锁，更改密码和手机防盗跟踪器。

内存信息 - 您可以使用内存管理器确定已用内存。

重设设置 - 将所有设置重置到其出厂设置。

信息 - 查看 GX500 的技术信息。

提示！ 手机防盗跟踪器 (ATMT)

- 点触**安全性**和 **ATMT**。
一旦被盗，手机将发送一条短信至真正的手机主人所配置的号码。用户需要配置 ATMT 设置，包括所有者姓名、备选号码 (1)、备选号码 (2) 等。
默认手机防盗追踪器码为“000000”
- ATMT 短信将包含有关被盗手机的相关信息：IMEI 号、目前使用该手机的人所在的位置和所用的号码。

设置

更改连接设置

网络运营商已为您设置连接设置，因此，您开机即可使用手机。如果要更改设置，请使用此菜单。

点触 ，然后点触 。
选择 .

网络设定

选择网络 - 如果设置为“自动”，GX500 将自动搜索网络并向网络注册手机。为了得到最佳的服务和质量，建议选择此设置。

如果选择**手动**，所有当前可用网络都会显示，您可以从中选择一个进行注册。如果网络注册失败，则屏幕上会重新列出网络列表，您可以选择另外一个进行注册。

备注：在手动模式下，如果手机失去网络，待机屏幕上会弹出一条信息，其中显示所有可供选择的网络。

首选列表 - 如果自动搜索网络，您可以添加要连接的首选网络。

连接设置

互联网网络设定 - 此菜单显示互联网网络设定。您可以使用“选项”菜单新建、删除或编辑网络设定。但是根据国家/地区不同，您可能无法删除或编辑默认配置。

接入点 - 网络运营商已保存此信息。您可以使用此菜单添加新的接入点。

分组数据连接 - 选择设备何时连接到网络以传输分组数据。

USB 连接模式 - 选择数据服务并使用 LG PC 套件软件同步 GX500 以复制手机中的文件。如果通过 Windows Media Player 使用音乐同步，请在此菜单中选择音乐同步。音乐同步仅可用于音乐内容。

使用内存管理器

GX500 有三种可用存储器：手机、SIM 卡和外部存储卡（您可能需要单独购买存储卡）。

您可以使用内存管理器确定每种存储器的使用方式以及查看可用空间。

点触 ，然后点触 。选择 ，然后选择**内存信息**。

手机公用内存 - 查看 GX500 中针对以下各项的可用内存：图片、声音、视频、Flash、彩信、电子邮件、Java 应用程序、其它。

手机剩余内存 - 查看手机目前针对以下各项的可用内存：短信、电话本、日历、任务列表、备忘录、闹钟、通话记录、书签及其它。

SIM (SIM1/SIM2) 卡内存 - 查看 SIM 卡的可用内存。

外部存储器 - 查看外部存储卡的可用内存（您可能需要单独购买存储卡）。

主存储器设置 - 选择项目的首选保存位置。

使用蓝牙发送和接收文件

蓝牙适用于在无线条件下发送和接收文件，连接快速且方便。您也可以连接蓝牙耳机拨打和接听电话。

发送文件：

- 1 打开要发送的文件，通常是照片、视频或音乐文件。
- 2 选择**发送**。选择**蓝牙**。
- 3 如果已配对蓝牙设备，GX500 将不会自动搜索以配对其它蓝牙设备。否则，GX500 将搜索范围内其它启用了蓝牙的设备。
- 4 选择您要向其发送文件的设备，然后点触**选择**。
- 5 您的文件将被发送。

提示！ 注意进度栏，确保文件已发送。

设置

接收文件：

- 1 要接收文件，您的蓝牙必须为开且可见。有关详细信息，请参阅右侧的“更改蓝牙设置”。
- 2 手机会提示您一条信息，是否接收来自其他发件人的文件。点触**是**以接收文件。
- 3 您可以查看文件的保存位置，可以选择**查看文件**或**用作墙纸**。文件通常保存在“媒体相册”中的相应文件夹。

更改蓝牙设置：

- 1 点触 ，然后选择 .
- 2 选择 ，然后点触  并选择**设置**。

进行更改：

我的设备可见性 - 选择**可见**、**隐藏**或**可见 1 分钟**。

我的设备名称 - 为您的 GX500 输入一个名称。

支持的服务 - 选择在其它关联服务中如何使用蓝牙。

我的地址 - 显示您的蓝牙地址。

与其它蓝牙设备配对

将您的 GX500 与其它设备配对，您可以设置受通行码保护的连接。这意味着配对更加安全。

- 1 查看蓝牙是否为**开且可见**。您可以在**设置**菜单中更改可见性。
- 2 点触**搜索**。
- 3 GX500 将搜索设备。搜索完成时，屏幕上将显示**刷新**。
- 4 选择您要与之配对的设备，输入通行码，然后点触**确定**。
- 5 随后，您的手机将连接到其它设备，您可以在该设备上输入相同的通行码。
- 6 现在，受通行码保护的蓝牙连接已经准备就绪了。

使用蓝牙耳机

- 1 查看蓝牙是否为开且可见。
- 2 根据耳机随附的说明书将耳机置于配对模式下并配对设备。
- 3 点触**连接前询问**或**始终连接**，然后点触**是**立即连接。GX500 将自动切换到“耳机”情景模式。

Wi-Fi

无线管理器允许您通过设备上的 Wi-Fi（无线局域网）管理互联网连接。

它能允许手机连接本地无线网络，或者无线访问互联网。Wi-Fi 比蓝牙无线技术速度更快且连接范围更广，可用于快速收发电子邮件和浏览互联网。

备注： GX500 支持 WEP 和 WPA-PSK/2 加密，但不支持 EAP 或 WPS 加密。如果您的 Wi-Fi 服务提供商或网络管理员为网络安全设置了加密，您应在弹出窗口中输入密钥。

如果未设置加密，不会显示此弹出窗口。您可以从您的 Wi-Fi 服务提供商或网络管理员处获得密钥。

软件升级

LG 手机软件升级计划

有关安装和使用此计划的详细信息，请访问

<http://update.lgmobile.com>

使用此功能，无需访问服务中心，您即可快速方便地将软件升级到 Internet 上的最新版本。由于手机软件升级计划要求用户注意升级过程的持续时间，因此，在继续执行操作之前，请留意每一个步骤中出现的任何说明和提示。请注意，在升级过程中移除 USB 数据线或取出电池将严重损坏您的手机。对于升级过程中造成的任何数据丢失，制造商不承担任何责任，为了安全起见，建议您事先记录下任何重要信息。

配件

这些配件随 GX500 提供。

充电器



数据线和 CD




电池



用户手册



立体声耳机

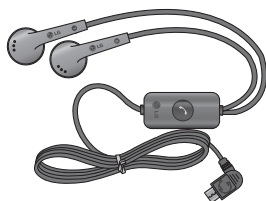

备注：

- 务必使用原装 LG 配件。
- 否则可能导致保修失效。
- 在不同地区提供的配件可能不同；如需要进一步查询有关情况，请与我们的地区服务公司或代理联系。

⚠ 警告：如果触摸屏上贴了保护膜，触摸屏的敏感度将降低。

网络服务

本指南中描述的无线手机适用于 GSM 850、E-GSM 900、DCS 1800 和 PCS 1900 网络。

本指南中包含的一系列功能称为网络服务。这些服务是由您的无线服务提供商提供的特殊服务。在利用这些网络服务之前，必须先向您的服务提供商预订，并获取使用说明。

技术参数

标准

产品名称: GX500

系统: GSM 850 /
E-GSM 900 /
DCS 1800 / PCS 1900

外部环境

最高温度: +55°C (放电)、
+45°C (充电)

最低温度: -10°C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc. LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad band Terminal Equipment

Model Name

GX500

Trade Name

LG

CE 0168 !

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.6.1, EN 301 489-07 V1.3.1, EN 301 489-17 V1.3.2
EN 301 511 V9.0.2
EN 50360:2001 EN62209-1:2006
EN 60950-1:2001
EN300328 V1.7.1

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House-Churchfield Road - Walton-on-Thames Surrey - KT12 2TD , United Kingdom

Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands

Name

Issued Date

Seung Hyoun, Ji / Director

12. Feb. 2010

Signature of representative

故障诊断

本章列出了您在使用手机过程中可能遇到的一些问题。对于某些问题，您可能需要致电服务提供商，但是大部分问题，您都可以执行解决。

信息	可能原因	可行解决措施
SIM 卡错误	手机中无 SIM 卡或 SIM 卡插入不正确。	请确保正确插入 SIM 卡。
无网络连接	信号弱 不在 GSM 网络中	移到靠近窗户或空旷地区的较高位置。检查服务提供商覆盖图。
代码不匹配	更改安全码时，您需要在输入后再确认一次新的安全码。两次输入的代码不匹配。	请与服务提供商联系。
无法设置功能	服务提供商不支持或需要注册	请与服务提供商联系。
无法拨打电话	拨号错误 插入的新 SIM 卡达到尝试次数上限	新网络未获得授权。查看新的限制。与服务提供商联系或重新设置 PIN 2 的限制。

故障诊断

信息	可能原因	可行解决措施
手机无法打开	按开/关键时间过短	请按开/关键至少两秒钟。
	电池电量空	为电池充电。检查显示屏上的充电指示灯。
	电池触点脏	清洁触点。
充电错误	电池电量空	为电池充电。
	温度超出范围	确保外部环境温度适当，稍等片刻，然后重新充电。
	触点问题	检查电源，连接到手机。检查电池触点，如果需要，请清洁。
	无电源电压	插入其它插口，或检查电压。
	充电器故障	如果充电器不发热，请替换。
手机无网络	错误充电器	请仅使用原装 LG 配件。
	电池故障	替换电池。
手机无网络	信号太弱	将自动重新连接到其它服务提供商。
不允许输入号码	已打开固定拨号功能。	检查设置。



Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.



GX500 User Guide

Congratulations on your purchase of the advanced and compact GX500 phone by LG, designed to operate with the latest digital mobile communication technology.

Contents

Guidelines for safe and efficient use.....	6	Contacts.....	25
Getting to know your phone	10	Searching for a contact	25
Open view.....	12	Adding a new contact	25
Installing the SIM and battery....	13	Creating a group.....	26
Memory card	15	Changing your contact settings..	26
Menu map.....	16	Viewing information	27
Your standby screen	17	Messaging	28
Touch screen tips	17	Messaging	28
The quick keys	18	Sending a message	28
Changing your Status from the		Entering text.....	29
status bar.....	20	T9 predictive	29
Using the Multitasking function..	20	Abc manual.....	29
Calls.....	21	Keyboard.....	30
Making a call.....	21	Handwriting recognition.....	30
Making a call from your		Setting up your email	30
contacts.....	21	Retrieving your email	31
Answering and rejecting a call ...	21	Changing your email settings....	31
Speed dialling	21	Message folders	32
Making a second call	22	Changing your text message	
Viewing your call logs.....	22	settings.....	32
Using call divert.....	23	Changing your multimedia	
Using call barring.....	23	message settings	33
Changing the common call		Changing your other settings	34
setting	24	Camera	35
		Taking a quick photo	35
		After you've taken your photo	35
		Using the advanced settings.....	35
		Viewing your saved photos	36

Contents

Video camera.....	37	Playing a game.....	44
Shooting a quick video	37	Documents.....	44
After you've shot your video	37	Transferring a file to your	
Adjusting the Exposure.....	38	phone	44
Using the advanced settings.....	38	Viewing a file.....	44
Watching your saved videos	39	Others.....	45
Your photos and videos	40	Music	45
Viewing your photos and		Transferring music onto your	
videos.....	40	phone	46
Using zoom when viewing		Playing a song.....	46
a photo	40	Creating a playlist.....	46
Adjusting the volume when		Using the radio	47
viewing a video.....	40	Searching for stations	47
Setting a photo as wallpaper	40	Resetting channels	48
Editing your photos	41	Utilities.....	49
Multimedia.....	42	Recording a sound or voice	49
Pictures	42	Using your calculator.....	49
Sending a photo	42	Converting a unit	49
Printing an image	42	Adding a city to your world	
Moving or copying an image.....	43	time.....	49
Sounds	43	Using the stopwatch	50
Videos	43	Adding an item to your	
Watching a video	43	calendar.....	50
Sending a video clip.....	43	Adding an item to your task	
Games and Applications	43	list	50
Installing a game/application		Date finder	51
via local install.....	44	Settings	51

PC Suite	52	Settings	61
Installing the LG PC Suite on your computer	52	Using Dual SIM-card menu.....	61
Connecting your phone and PC	52	Personalising your profiles.....	61
Backing up and restoring your phone's information	53	Changing your screen settings...	61
Viewing phone files on your PC..	53	Changing your phone settings ...	62
Synchronising your contacts	54	Changing your connectivity settings.....	63
Synchronising the messages	54	Network settings	63
Music Sync	54	Connectivity Settings.....	64
Transferring music using Windows Media Player	55	Using memory manager	64
DivX Converter	55	Sending and receiving your files using Bluetooth.....	65
The web.....	57	Pairing with another Bluetooth device	66
Browser	57	Using a Bluetooth headset.....	66
Opera Mini	57	Wi-Fi.....	67
Accessing the web.....	57	Software Upgrade	67
Adding and accessing your bookmarks	58	Accessories	68
Using RSS reader.....	58	Network service.....	69
Saving a page	59	Technical data.....	69
Accessing a saved page.....	59	Trouble Shooting.....	71
Viewing your browser history	59		
Changing the web browser settings.....	59		
Using your phone as a modem	60		

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model GX500 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 1.45 W/kg (10g) and when worn on the body is 0.841 W/Kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

Product care and maintenance

 **WARNING:** Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required. Repairs under warranty, at LG's option, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.

Guidelines for safe and efficient use

- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose off used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

Getting to know your phone

End/Power key

Ends or rejects a call.
Turns the phone on/off.
Press once to return to the
standby screen.



Multitasking key

Call key


Dials a phone number and
answers incoming calls.



⚠ WARNING: Placing a heavy object on the phone or sitting on it while it is in your pocket can damage the phone's LCD and touch screen functionality.

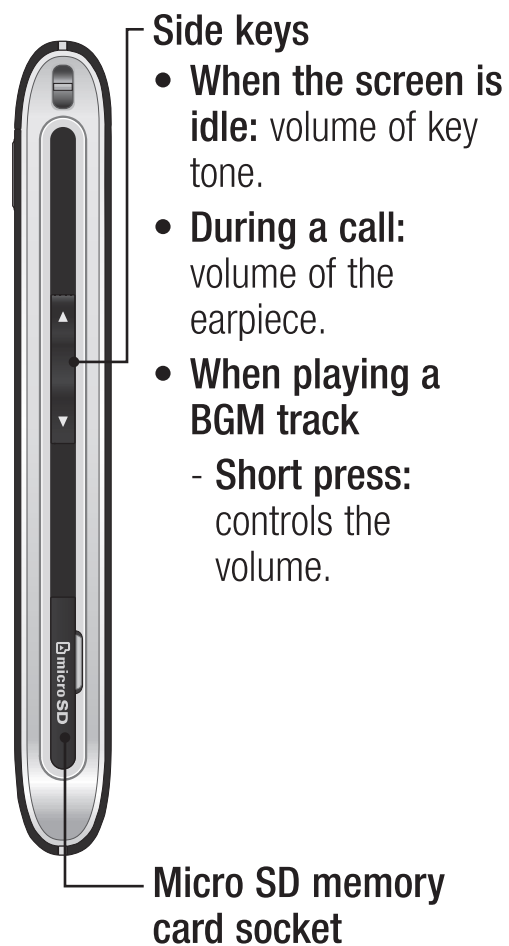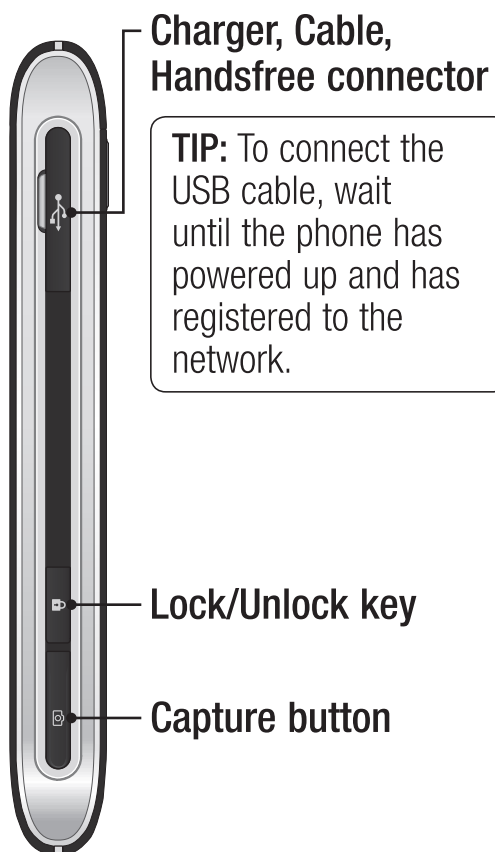


Open view

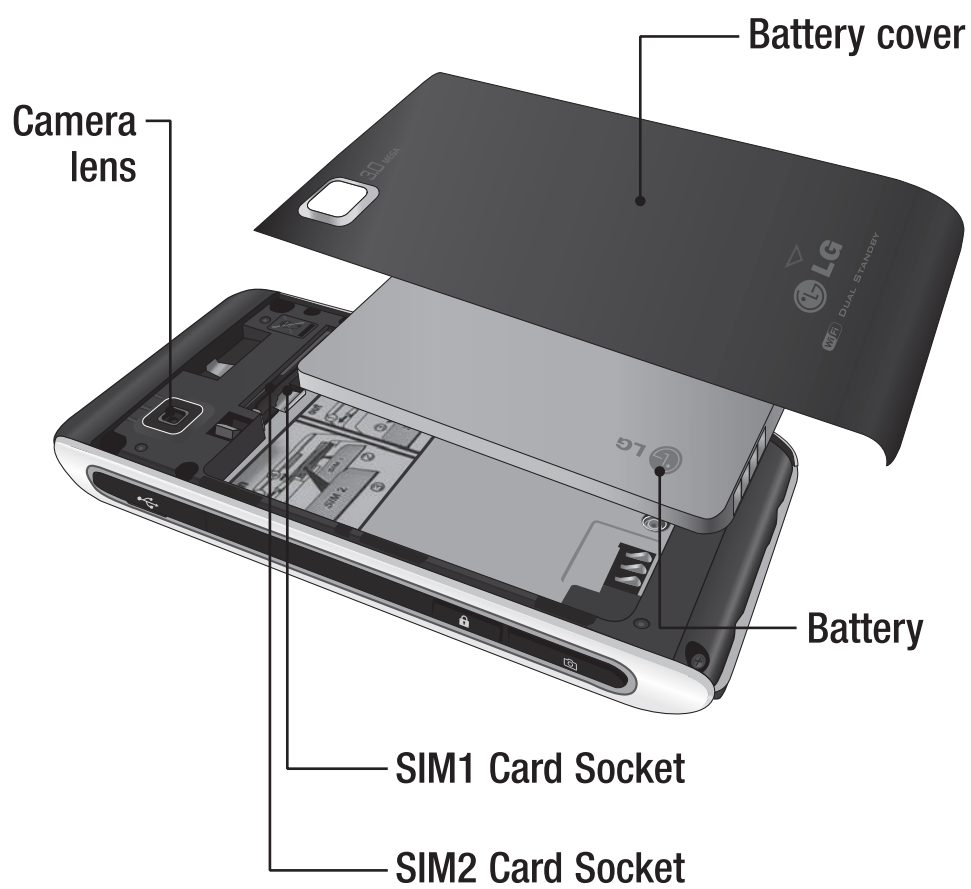

Installing the SIM and battery


1 Remove the battery cover

Slide the battery cover towards the bottom of the phone and away from it.

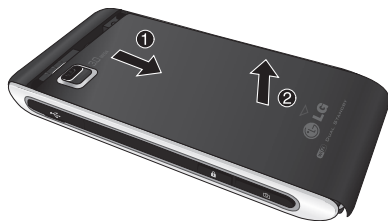

2 Remove the battery

Using the cut-out at the top and lift it from the battery compartment.

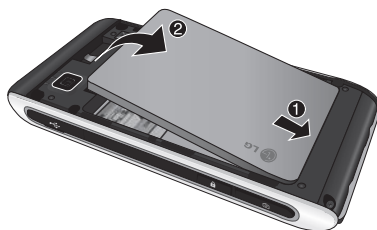


⚠ WARNING: Do not use your fingernail when removing the battery.


⚠ WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

3 Install the SIM card

Slide the SIM card into the SIM card holder making sure that the gold contact area on the card is facing downwards. To remove the SIM card, pull it gently in the opposite direction.

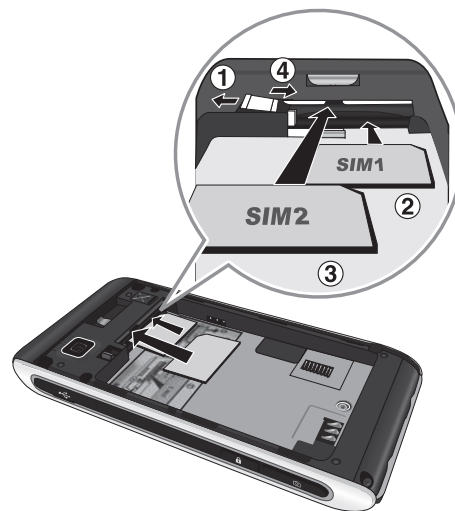

⚠ WARNING

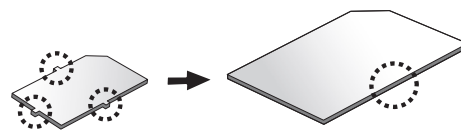

Make sure that your SIM card has a neat and clean cut before you insert it into the holder.

Installing the SIM and battery

4 Install the battery

Insert the bottom of the battery first into the bottom edge of the battery compartment. Ensure that the battery contacts align with the terminals on the phone. Press down the top of the battery until it clicks into place.



5 Replace the battery cover

Slide the battery cover towards the top of the phone until it clicks into place.

6 Charging your phone

Lift and twist the charger socket cover on the side of your GX500. Insert the charger and plug it into a mains electricity socket. Your GX500 needs to be charged until "Battery full" appears on screen.




Memory card

Installing a memory card

You can expand the memory space on your phone by using a MicroSD memory card.

NOTE: A memory card is an optional accessory.

- 1 Open the memory card slot cover on the right hand edge of the phone.
- 2 Slide the memory card into the slot until it clicks into place.
- 3 Replace the cover.

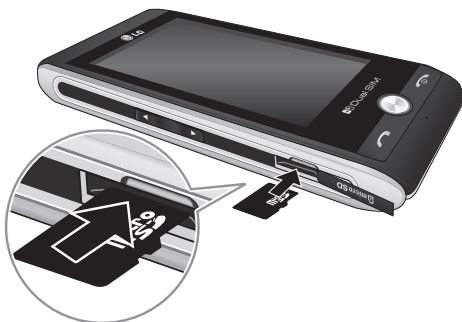

Formatting the memory card

Your memory card may already be formatted. If your card isn't formatted, you will need to format it before you can begin using it.

- 1 From the standby screen select , then scroll through SETTINGS Tab and choose **Phone settings**.
- 2 Touch **Memory info** then choose **External memory**.
- 3 Touch **Format** and then confirm your choice.
- 4 Enter the password, if one is set, and your card will then be formatted and ready to use.

NOTE: If your memory card already has content, it will automatically be filled in the correct folder; for example, videos will be stored in the My Videos folder.

Menu map

Touch  in the standby screen to open a **Top menu**. From here you can access further menus: **COMMUNICATION**, **ENTERTAINMENT**, **UTILITIES** and **SETTINGS**.



COMMUNICATION

- Contacts
- Recent history
- Messaging
- E-mail
- Dialling
- Social networking
- Speed dials
- New message



ENTERTAINMENT

- Camera
- Gallery
- Music
- My stuff
- Games & Apps
- Pocket Apps
- FM radio
- Video camera



UTILITIES

- Browser
- Google
- Alarms
- Organiser
- Memo
- Voice recorder
- Tools
- Drawing Panel



SETTINGS

- Dual SIM settings
- Profiles
- Screen settings
- Phone settings
- Call settings
- Bluetooth
- Connectivity
- Wi-Fi

Your standby screen

From your standby screen you can access all the menu options, make a quick call and view the status of your phone as well as many other things.

Touch screen tips

The home screen is also a great place to get accustomed to the touch screen.

To select an item, touch the icon accurately. Your GX500 will vibrate slightly when it recognises you've touched an option.

To scroll through lists, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

- There's no need to press too hard, the touchscreen is sensitive enough to pick up on a light, yet firm, touch.
- Use the tip of your finger to touch the option you want. Be careful not to touch any other options around it.
- When the screen back light is off, press the Unlock/Lock key on the right hand side to bring back the home screen.
- Don't cover the phone with a case or cover. The touchscreen won't work with any material covering it.
- There are two types of idle screen. Flick left or right to change your idle screen types on the standby screen.
 - 1 Widget idle - When you touch , the mobile widget panel appears.
 - 2 Speed dial idle - When you touch , the speed dial list appears. You can drag and click what you need right away in both idle types.

Your standby screen

The quick keys

The quick keys provide easy, one-touch access to your most used functions.



Touch to bring up the touch dialling pad to make a call. Input the number as you would using a normal key pad and touch **Call** or press the  hard key.



Touch to open your address book. To search for the number you want to call, enter the name of the contact at the top of the screen using the touchpad. You can also create new contacts and edit existing ones.



Touch to access the Messaging options menu. From here you can create a new SMS or MMS, or view your message folder.



Touch to open the full Top menu which is divided into four vertical sub-menus. Touch each sub-menu's tab to view further options.

The status bar

The status bar uses various icons to indicate things like signal strength, new messages and battery life, as well as telling you whether your Bluetooth or GPRS is active.

Below is a table which explains the meaning of the icons you're most likely to see in the status bar.

Icon	Description
	Multitasking
	Network signal strength (number of bars will vary)
	No network signal
	Remaining battery life
	Battery empty
	New text message
	New voice message
	Message inbox is full
	Message sending failed
	Multimedia message sending failed

Icon	Description
	An alarm is set
	Customised Profile in use
	Normal profile in use
	Outdoor profile in use
	Silent profile in use
	Headset profile in use
	Calls are diverted
	EDGE in use
	Roaming
	Flight mode is on
	Bluetooth is active
	BGM play
	BGM pause
	Memory card is enable to use
	Wi-Fi

Your standby screen

Changing your Status from the status bar

Touch the status bar to open the Status Summary. It shows the current Time, Network, SVC ID, Battery, Handset memory, External Memory, Profile, MP3 and Bluetooth status. Here you can set Profile type, play/pause MP3 and activate/deactivate Bluetooth.

Using the Multitasking function

Press the multitasking hard key  to open the Multitasking menu. From here you can view all the applications you have running and access them with one touch.

When you have an application running in the background (e.g. a game or the FM radio),  will appear in the status bar.

Calls

Making a call

- 1 Touch  to open the keypad.
- 2 Key in the number using the keypad. To delete a digit touch the clear key.
- 3 Press the  Hard key or touch call to initiate the call.
- 4 To end the call press the  hard key.

TIP! To enter + for making an international call, press and hold .

Making a call from your contacts

- 1 From the standby screen touch  to open the address book.
- 2 Enter the first few letters of the contact you would like to call.
- 3 From the filtered list, touch the contact you'd like to call and select the number to use if you have more than one saved.
- 4 Touch .

Answering and rejecting a call

When your phone rings press the  hard key or touch  to answer the call.

Tap  to mute the ringing. This is great if you've forgotten to change your profile to Silent for a meeting.

Press the  hard key or touch  to reject an incoming call.

Speed dialling

You can assign a frequently-called contact to a speed dial number.

- 1 From the home screen touch  to open Contacts.
- 2 Touch  and choose **Speed dials**.
- 3 Your Voicemail is already set to speed dial 1. You cannot change this. Touch any other number to assign it a speed dial contact.

Calls

- 4 Your address book will open. Select the contact you'd like to assign to that number by touching their phone number once. To find a contact tap the search field box and enter the first letter of the name of the contact required.

Making a second call

- 1 During your initial call, touch  and select the number you want to call.
- 2 Dial the number or search your contacts.
- 3 Press  to connect the call.
- 4 Both calls will be displayed on the call screen. Your initial call will be locked and the caller put on hold.
- 5 To change between the calls, touch  and choose **Swap call** or press the number of the held call.
- 6 To end one or both calls press  and select **End** followed by **All**, **Held** or **Active**.

TIP! You can combine your calls by selecting **Accept** then **Join**. Check that your network provider supports conference calling.

NOTE: You will be charged for each call you make.

Viewing your call logs

Touch  and select **Communication** and tap **Recent history**. Choose to view:

All - View a complete list of all dialled, received and missed calls.

Dialled - View a list of all the numbers you have called.

Received - View a list of all the numbers that have called you.

Missed - View a list of all the calls you have missed.

TIP! From any call log touch  and **Delete all** to delete all the recorded items.

Using call divert

- 1 Touch , select Settings and choose Call settings.
- 2 Touch **Call divert**.
- 3 Choose whether to divert all calls, when the line is busy, when there is no answer or when you are not reachable.
- 4 Input the number you'd like to divert to.
- 5 Touch **Request** to activate.

NOTE: Charges are incurred for diverting calls. Please contact your network provider for details.

TIP! To turn off all call diverts, choose **Deactivate all** from the **Call divert** menu.

Using call barring

- 1 Touch , select Settings and choose Call settings.
- 2 Touch **Call barring**.

- 3 Choose any or all of the six options:

All outgoing

Outgoing international

Outgoing international calls except home country

All incoming

Incoming when abroad

Deactivate all

- 4 Enter the call barring password. Please check with your network operator for this service.

TIP! Select **Fixed dial number** to turn on and compile a list of numbers which can be called from your phone. You'll need your PIN2 code from your operator. Only numbers included in the fixed dial list can be called from your phone.

Calls

Changing the common call setting

1 Touch , select Settings and choose Call settings.

2 Touch **Common settings**.

From here you can amend the settings for:

Call reject - Slide the switch to **On** to highlight the Reject list. You can touch the text box to choose from all calls, specific contacts or groups, or those from unregistered numbers (those not in your contacts). Touch **Save** to change the setting.

Send my number - Choose whether your number will be displayed when you call someone.

Auto redial - Slide the switch left for **On** or right for **Off**.

Answer mode - Choose whether to answer the phone using the send key or any key.

Minute minder - Slide the switch left to **On** to hear a tone every minute during a call.

BT answer mode - Select **Hands-free** to be able to answer a call using a Bluetooth headset, or select **Handset** to press a key on the handset to answer a call.

Save new number - Select **Yes** to save a new number.

Contacts

Searching for a contact

There are two ways to search for a contact:

From the standby screen

- 1 From the standby screen touch  to open the address book. Select the contact from the list that you want to make a call.
- 2 Touch  or press the  hard key to initiate the call.

From the main menu

- 1 Touch , select .
- 2 Touch **Contacts**, then **Search**.
- 3 You see a list of contacts, typing in the first letter of a contact's name will jump the menu to that alphabetical area of the list.

TIP! The alphabetical keypad is displayed once you tap the blank square.

Adding a new contact

- 1 From the standby screen touch  and touch **Add contact**.
- 2 Choose whether to save the contact to your Handset or SIM (SIM 1/SIM 2).
- 3 Enter the first and last name of your new contact. You do not have to enter both, but you must enter one or the other.
- 4 You can enter up to five different numbers per contact. Each entry has a preset type **Mobile**, **Home**, **Office**, **Pager**, **Fax** and **General**. When you have finished, touch **Close**.
- 5 Add an email address.
- 6 Assign the contact to one or more groups. Choose from **No group**, **Family**, **Friends**, **Colleagues**, **School** or **VIP**.

Contacts

7 You can also add a **Ringtone**, **Birthday**, **Anniversary**, **Homepage**, **Home address**, **Company name**, **Job title**, **Company address** and a **Memo**.

8 Touch **Save** to save the contact.

Creating a group

1 Touch .

2 Touch **Contacts** then **Groups**.

3 Touch .

4 Select **Add group**.

5 Enter a name for your new group. You can also assign a ringtone to the group.

6 Touch **Save**.

NOTE: If you delete a group, the contacts which were assigned to that group will not be lost. They will remain in your address book.

Changing your contact settings

You can adapt your contact settings so that your address book suits your own preferences.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

1 From the standby screen touch .

2 Touch **Contacts**, then **Settings**.

3 From here you can adjust the following settings:

Contact list settings - You can also choose to show the first name or last name of a contact first.

Copy - Copy your contacts between your SIM cards(SIM1 or SIM2) and your handset. Choose to do this one at a time, or all at once. If you select one at a time, you'll need to select each contact to copy one by one.

Move - This works in the same way as Copy, but the contact will only be saved to the location you've moved it to. So if you move a contact from the SIM to the handset it will be deleted from the SIM memory.

Send all contacts via

Bluetooth - Send all of your contacts to another device using Bluetooth. You will be prompted to turn on Bluetooth if you select this option.

Backup contacts - See Backing up and restoring your phone's information in PC Sync part.

Restore contacts - See Backing up and restoring your phone's information in PC Sync part.

Clear contacts - Delete all your contacts. Touch **Yes** if you are sure you want to wipe your address book.

Viewing information

- 1 From the standby screen touch .
- 2 Touch **Contacts**, then **Information**.
- 3 From here you can view your **Service dial numbers**, your **Own number**, your **Memory info**. (how much memory space you've got left) and **My business card**.

TIP! If you've yet to add a business card for yourself, select **My business card** and enter all your details as you would for any contact. Touch **Save** to finish.

Messaging

Messaging

Your GX500 combines SMS, MMS and email into one intuitive and easy to use menu.

There are two ways to enter the messaging centre:

- 1 Touch  from the standby screen.
- 2 Touch  from the standby screen, then select Communication tab and choose .

Sending a message

- 1 Touch **New message**, then select Message to open a blank message.
- 2 From here you can send an SMS or MMS. To send an email, touch  from the standby screen. Then select Communication tab and **E-mail**.
- 3 Touch **Insert**, to add an image, video, sound or template.

- 4 Touch **To** at the top of the screen to enter the recipient's number, or touch the search icon to open your address book. You can add multiple contacts. Touch **Send** when ready.

NOTE: You can send SMS to many users at a time. Click on contact search icon and Select multiple from Options where in user can mark/unmark contacts for sending message. To send the SMS to a particular group of contacts click on contacts search icon and select search by Group after composing the SMS.

 **WARNING:** You will be charged per 1 page text message for each person that you send the message to.

 **WARNING:** If an image, video or sound is added to an SMS it will be automatically convert to an MMS and you will be charged accordingly.

Entering text

There are five ways to enter text: Keypad, Keyboard, Handwriting-Screen, Handwriting-Box, Handwriting-Double Box.

You can choose your input method by tapping  and **Input method**.

Tap the screen once, the keyboard appears.

 Touch to turn on T9 predictive text.

 You can choose writing languages.

 Tap to change numbers, symbols and text keypad.

Use  to scroll through the different keyboard types in each text entry mode (for example, capitals or lowercase).

T9 predictive

T9 mode uses a built-in dictionary to recognise words you're writing based on the key sequences you touch. Simply touch the number key associated with the letter you want to enter, and the dictionary will predict the word you want to use.

For example, press 8, 3, 5, 3, 7, 4, 6, 6, 3 to write 'telephone'.

Abc manual

In Abc mode you must touch the key repeatedly to enter a letter. For example, to write 'hello', touch 4 twice, 3 twice, 5 three times, 5 three times again, then 6 three times.

Messaging

Keyboard

In Keyboard mode the screen flips to landscape and a full keyboard appears on screen. Simply touch each letter to write your message and press:

 to switch to upper case.

Handwriting recognition

In Handwriting mode you simply write on the screen and your GX500 will convert your handwriting into your message. Select **Handwriting-Screen** or **Handwriting-Double Box** depending on your preferred view.

TIP! You may find it easier to use the stylus in this mode, please remember to press lightly to protect your screen from damage.

Handwriting recognition translates stylus gestures into letters, numbers or other character, and displays these characters as text. Handwriting recognition is only active where text can be entered.

Setting up your email

You can stay in touch on the move using email on your GX500. It's quick and simple to set up a POP3 or IMAP4 email account.

- 1 Touch  then select Communication tab.
- 2 Select  then scroll menu to **Settings**.
- 3 Touch **E-mail** then **E-mail accounts**.
- 4 Touch **Add account**.
- 5 Setup Wizard will help you set up your email settings.
- 6 You can check and edit settings by selecting the account in the list. You can also check the additional settings that were filled in automatically when you created the account.
- 7 You can change your default email account by touching **Activate**.

Retrieving your email

You can automatically or manually check your account for new emails.

To check manually:

- 1 Touch  then select .
- 2 Touch Mailbox.
- 3 Touch the account you want to use then .
- 4 Choose **Retrieve** and your GX500 will connect to your email account and retrieve your new messages.

Changing your email settings

You can change your email settings according to your own preferences.

- 1 Touch  then select .
- 2 Touch **Settings** and **E-mail** and then you can adapt the following settings:

Allow reply e-mail - Choose to allow the sending of 'read, confirmation' messages.

Request reply e-mail -

Choose whether to request read confirmation messages.

Retrieve interval - Choose how often your GX500 checks for new email messages.

Retrieve amount - Choose the number of emails to be retrieved at any one time.

Include message in Fwd. & Reply - Choose to include the original message in your reply.

Include attachment - Choose to include the original attachment in any reply.

Auto retrieval in roaming -

Choose whether to retrieve your messages automatically or not.

New e-mail notification -

Choose whether to be alerted to new emails.

Signature - Create an email signature and switch this feature on.

Priority - Choose the priority level of your email messages.

Messaging

Message folders

You'll recognise the folder structure used on your GX500, which is fairly self-explanatory.

New message - Open a new blank message.

Inbox - All the messages you receive are placed into your inbox. From here you can view, delete and more, see **Managing your messages** below for details.

Drafts - If you don't have time to finish writing a message, you can save what you've done so far here.

Outbox - This is a temporary storage folder while messages are being sent.

Sent items - Messages you send are placed in this folder.

My Folders - Create folders to store your messages.

Templates - Use a list of commonly used text and multimedia message templates.

Emoticons - Add and insert emoticons for your messages.

Settings - Change the settings for your text and multimedia messages.

Changing your text message settings

Your GX500 message settings are pre-defined so that you can send messages immediately. These settings can be changed according to your preferences.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up the screen. The list will move up so more items are visible.

Touch  then choose **Settings** on the . Select **Text message**. You can make changes to:

Text message centre - Enter the details of your message centre.

Delivery report - Slide the switch left to receive confirmation that your messages have been delivered.

Validity period - Choose how long your messages are stored at the message centre.

Message types - Convert your text into **Text, Voice, Fax, X.400** or **Email**.

Character encoding - Choose how your characters are encoded. This impacts the size of your messages and therefore data charges.

Send long text as - Choose to send long messages as Multiple SMS or as MMS.

Changing your multimedia message settings

Your GX500 message settings are pre-defined so that you can send messages immediately. These settings can be changed according to your preferences.

Touch , select  then . Choose **Settings** and **Multimedia message**. You can make changes to:

Retrieval mode - Choose **Home** or **Roaming network**. If you then choose Manual you will receive only notifications of MMS and you can then decide whether to download them in full.

Delivery report - Choose to allow and/or request delivery reports.

Read reply - Choose to allow and/or request reply reports.

Messaging

Priority - Choose the priority level of your MMS.

Validity period - Choose how long your messages are stored at the message centre.

Slide duration - Choose how long your slides appear on screen by default.

Creation mode - Choose mode to create multimedia messages restrictive, warning, free.

Delivery time - Choose how long before messages are delivered.

Multi msg centre - Enter the details of your message centre.

Changing your other settings

Touch , choose **Settings** on the  then:

Voicemail - Touch  to add a new Voicemail service. Contact your network operator for more information on the service they provide.

Service message - Choose to receive or block service messages. You can also set your message security by creating trusted and untrusted lists of senders.

Info service - Choose your reception status, language and other settings.

Camera

Taking a quick photo

- 1 Long press the camera hot key on the right side of the phone.
- 2 the view finder will appear on screen.
- 3 Holding the phone horizontally, point the lens towards the subject of the photo.
- 4 Position the phone so you can see the subject of your photo in the preview screen.
- 5 Press the  on the side of the phone firmly to take the photo.

After you've taken your photo

Your captured photo will appear on screen.

-  Touch to send the photo as a **Message, Email** or **Bluetooth**. See Sending a message and Sending and receiving your files using Bluetooth.

NOTE: Additional cost may occur when MMS are downloaded when roaming.

-  Touch to return to the previous menu.
-  Touch to delete the image.
-  Touch to take another photo immediately.
-  Touch to view a gallery of your saved photos.

Using the advanced settings

From the view finder touch  to open all the advanced settings options.

Colour effect - Choose a colour to apply to the photo you're taking Off, Black & White, Negative, Sepia.

White balance - The white balance ensures that any white in your videos is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions.

Camera

Night mode - You can take better My images at night by selecting On.

Self-timer - The self-timer allows you to set a delay after the capture button is pressed before the camera takes the picture. Choose from **Off**, **3 seconds**, **5 seconds** or **10 seconds**. Great for that group photo you want to be part of.

Quality - Choose between **Super fine**, **Fine** and **Normal**. The finer the quality the sharper a photo will be, but the file size will increase. This means you'll be able to store fewer photos in your memory.

View Mode - Applies artistic effects to the pictures.

Select storage - Choose whether to save your videos to the **Handset memory** or to the **External memory**.

Show captured image - Defines the location where the pictures are stored.

Hide icons - Choose the camera settings icons to be hidden manually or automatically.

Shutter sound - Select one of the three shutter sounds.

Grid screen - Choose from Off, Simple cross or Trisection

Noise reduction - This function could reduce noise and refine a picture after taken.

Reset settings - Reset all the camera settings.

Viewing your saved photos

1 You can access your saved photo's from within the camera mode. Simply touch  and your gallery will appear on screen.

Video camera

Shooting a quick video

- 1 Press and hold the camera key on the right side of the phone.
- 2 Alternatively, drag down  in the viewfinder in camera mode to switch to video mode.
- 3 The video camera's viewfinder will appear on screen.
- 4 Holding the phone horizontally, point the lens towards the subject of the video.
- 5 Press the capture button once to start recording.
- 6 **Rec** will appear at the bottom above video length timer and a timer at the bottom showing the length of your video.
- 7 To pause the video touch  and resume by selecting .
- 8 Touch  on the screen or press the camera key  a second time to stop recording.

After you've shot your video

A still image representing your captured video will appear on screen. The name of the video runs along the bottom of the screen together with six icons down the right side.

-  Touch to play the video.
-  Touch to send the video as a **Message or Email** or by **Bluetooth**.
-  Touch to edit the video.
-  Touch to return to the previous menu.
-  Touch to delete the video you have just made, and confirm by touching **Yes**. The viewfinder will reappear.
-  Touch to shoot another video immediately. Your current video will be saved.
-  Touch to view the saved videos and pictures gallery.

Video camera

Adjusting the Exposure

Exposure defines the difference between light and dark (contrast) in an video.

- 1 Touch .
- 2 Slide the exposure indicator along the bar, left for a lower exposure, hazier video, or right for a higher contrast, sharper video.

Using the advanced settings

From the view finder touch  to open all the advanced settings options.

Colour Effect - Choose a colour tone to apply to the video you're taking.

White balance - The white balance ensures that any white in your videos is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions.

Quality - Choose between **Super fine**, **Fine** and **Normal**.

Select storage - Choose whether to save your videos to the **Handset memory** or to the **External memory**.

Hide Icons - Hide the icons to the side of the viewfinder.

Reset settings - Reset all the video camera settings.

Watching your saved videos

- 1 In the view finder touch .
- 2 Your gallery will appear on screen.
- 3 Touch the video you want to view once to bring it to the front of the gallery.
- 4 Touch  on the video.

Your photos and videos

Viewing your photos and videos

- 1 Touch  on the camera preview screen.
- 2 Your gallery will appear on the screen.
- 3 Touch the video or photo to open it fully.

TIP! Flick left or right to view other photos or videos.

TIP! To delete a photo or video, open it and select . Touch **Yes** to confirm.

Using zoom when viewing a photo

When viewing photos, you can zoom in and out.

Adjusting the volume when viewing a video

To adjust the volume of a video while it is playing, touch the volume bar on the screen. Top after pressing the loudspeaker symbol. Alternatively, use the volume keys on the side of the phone.

Setting a photo as wallpaper

- 1 Touch the photo you want to set as wallpaper to open it.
- 2 Touch the screen to open the options menu.
- 3 Touch on use as wallpaper option.
- 4 You can zoom in and out and move the cropped section of the picture using a thumbnail at the bottom of the screen.

Editing your photos

You can do lots of great things to your photos to change them, add to them or liven them up.

- 1 Open the photo you want to edit and touch  to show the options.

- 2 Touch the icons to alter your photo:

 Crop your photo. Choose a square or circular crop area and move your finger across the screen to select the area.

 Draw something on your photo, freehand. Select the line thickness from the four options, then the colour you want to use.

 Adding writing on a picture. See **Adding text to a photo**.

 Decorate your photo with stamps. Choose from the different stamps and touch your photo where you want to place them.

 Erase the editing you have done to the picture. You can choose the size of eraser you use.

 Touch to return to the gallery.

 Save the changes you made to the photos. Select to save the changes as an **Update existing** or a **New file**. If you select **New file** enter a file name.

 Erase the editing you have done to the photo.

 Touch to open further effect options including **Rotate**. There are also more advanced editing options. See **Adding a colour accent** and **Swapping the colours in a photo**.

 Touch to apply the effect options to a photo.

 This helps to adjust a picture taken using automatic colour, brightness etc.

Multimedia

You can store any multimedia files into your phone's memory so that you have easy access to all of your pictures, sounds, videos and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory. To access the Multimedia menu, touch . Touch  to open a list of folders storing all of your multimedia files.

Pictures

My images contains a list of pictures including default images pre-loaded onto your phone, images downloaded by you and images taken on your phone's camera.

Touch  to change the view from thumbnail view to list view.

Sending a photo

- 1 Touch .
- 2 Touch  then choose **My images**.
- 3 Touch  **Send** and choose from **Message**, **Email** or **Bluetooth**.
- 4 If you choose **Message** or **Email**, your photo will be attached to a message and you can write and send the message as normal. If you choose **Bluetooth**, Bluetooth will be turn on automatically and your phone will search for a device to send the picture.

Printing an image

- 1 Touch .
- 2 Touch  then **My images**.
- 3 Select an image and touch .
- 4 Touch **Print** then choose **Bluetooth**.

TIP! You can print via bluetooth or by connecting to a PictBridge compatible printer.

Moving or copying an image

You can move or copy an image between the phone memory and the memory card. You might want to do this to either free up some space in one of the memory banks or to safeguard your images from being lost.

- 1 Touch .
- 2 Touch  then **My images**.
- 3 Touch  and select **Move** or **Copy**.
- 4 You can mark/unmark the images by tapping it sequentially. Mark the image that you want to move or copy and touch **Copy/Move**.

Sounds

The **My sounds** folder contains the Downloaded sounds, **Default sounds** and **Voice recordings**. From here you can manage, send or set sounds as ringtones.

Videos

The **My videos** folder shows a list of downloaded videos and videos you have recorded on your phone.

Watching a video

- 1 Touch .
- 2 Touch  then **My videos**.
- 3 Select a video to play.

Sending a video clip

- 1 Select a video and touch .
- 2 Touch **Send** and choose from **Message**, **Email** or **Bluetooth**.
- 3 If you choose **Message** or **Email**, your video clip will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, Bluetooth turns on automatically and your phone will search for a device to send the video.

Games and Applications

You can install new games and applications to your phone to keep you amused when you have time to spare.

Multimedia

Installing a game/application via local install

- 1 Touch .
- 2 Touch  and **Others** or My memory card if external memory is inserted.
- 3 Select the file (*.jad or *.jar) to install. An application will be installed.

NOTE: The jad should contain its own jar.

Playing a game

- 1 Touch .
- 2 Touch  then **Games**.
- 3 Select a game to launch.

Documents

From the Documents menu, you can view all of your document files. From here you can view Excel, Powerpoint, Word, Text and PDF files.

Transferring a file to your phone

Bluetooth is probably the easiest way to transfer a file from your computer to your phone. You can also use LG PC Suite via your sync cable.

To transfer using Bluetooth:

- 1 Make sure your phone and computer have Bluetooth switched on and are visible to one another.
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by touching **Yes**.
- 4 The file should appear in your **Documents** or **Others folder**.

Viewing a file

- 1 Touch .
- 2 Touch  then **Documents**.
- 3 Select a document and touch **View**.

Others

The **Others** folder is used to store files which are not pictures, sounds, videos, games or applications. It is used in the same way as the **Documents** folder. You may find that when you transfer files from your computer to your phone that they appear in the **Others** folder rather than the **Documents** folder. If this happens you can move them.

To move a file from **Others** to **Documents**:

- 1 Touch .
- 2 Touch  then **Others**.
- 3 Select a file and touch .
- 4 Touch **Move**, choose the destination folder from the list by touching the arrow icon. The screen will display **Moved** when the transfer is complete.

Music

Your LG GX500 has a built-in music player so you can play all your favourite tracks. To access the music player, touch . Scroll through Entertainment to . From here you can access a number of folders:

Recently played - View all of the songs you have played recently.

All tracks - Contains all of the songs you have on your phone.

Artists - Browse through your music collection by artist.

Albums - Browse through your music collection by album.

Genres - Browse through your music collection by genre.

Playlists - Contains all playlists you have created.

Shuffle tracks - Play your tracks in a random order.

Multimedia

Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or your sync cable.

You can also use LG PC Suite. To transfer using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and are visible to one another.
- 2 Select the music file on the other device and choose to send it via Bluetooth.
- 3 When the file is ready to be sent you should accept it on your phone by touching **Yes**.
- 4 The file should appear in **Music > All tracks**.

Playing a song

- 1 Touch .
- 2 Scroll through Entertainment to , then touch **All tracks**.
- 3 Select the song you want to play.
- 4 Touch  to pause the song.
- 5 Touch  to skip to the next song.
- 6 Touch  to skip to the previous song.
- 7 Touch  to return to the **Music** menu.

Creating a playlist

You can create your own playlists by choosing a selection of songs from the **All tracks** folder.

- 1 Touch .
- 2 Scroll through Entertainment to , then touch **Playlists**.
- 3 Touch **Add new playlist**, enter the playlist name and touch **Save**.

4 The **All tracks** folder will show all the songs in your phone. Touch all of the songs that you would like to include in your playlist; a tick will show next to the track names.

5 Touch **Done**.

Using the radio

Your LG GX500 has an FM radio feature so you can tune into your favourite stations to listen to on the move.

NOTE: You will need to insert your headphones in order to listen to the radio. Insert them into the headphone socket (this is the same socket that you plug your charger into).

Searching for stations

You can tune radio stations into your phone by searching for them either manually or automatically. They will then be saved to specific channel numbers so you don't have to keep re-tuning. You can save up to 48 channels in your phone. You must first attach the headset to the phone as this acts as the antenna.

To auto tune:

- 1 Touch .
- 2 Scroll through Entertainment to **FM radio** then .
- 3 Touch **Auto scan**. Then the stations will be automatically found and allocated to a channel in your phone.

Multimedia

Resetting channels

- 1 Touch .
- 2 Scroll through Entertainment to **FM radio** then .
- 3 Choose **Reset** to reset the current channel or choose **Reset all** to reset all of the channels. Each channel will return to the starting 87.5 MHz frequency.

Utilities

Recording a sound or voice

- 1 Touch , then scroll through Utilities.
- 2 Touch **Voice recorder**.
- 3 Touch  to begin recording.
- 4 Touch  to end recording.
- 5 Touch  to listen to your recording.

Using your calculator

- 1 Touch , then scroll through utilities and touch **Tools**.
- 2 Touch **Calculator**.
- 3 Touch the numeric keys to input numbers.
- 4 For simple calculations, touch the function you require (+, −, ×, ÷), followed by =.
- 5 For more complex calculations, touch  and choose from **sin**, **cos**, **tan**, **log**, **ln**, **exp**, **sqrt**, **deg** or **rad** etc.

Converting a unit

- 1 Touch , then scroll through utilities and touch **Tools**.
- 2 Touch **Unit converter**.
- 3 Choose whether you would like to convert **Currency**, **Area**, **Length**, **Weight**, **Temperature**, **Volume** or **Velocity**.
- 4 You can then select the unit, and enter the value you would like to convert from, followed by the unit you would like to convert to.

Adding a city to your world time

- 1 Touch , then scroll through utilities and touch **Tools**.
- 2 Touch **World clock**.
- 3 Touch the , followed by **New city**. Start typing the name of the city you require and it will show at the top of the screen.

Utilities

Using the stopwatch

- 1 Touch , then scroll through utilities and touch **Tools**.
- 2 Touch **Stopwatch**.
- 3 Touch **Start** to begin the timer.
- 4 Touch **Lap** if you want to record a lap time.
- 5 Touch **Stop** to end the timer.
- 6 Touch **Resume** to restart the stopwatch at the time you stopped it at, or touch **Reset** to begin the time again.

Adding an item to your calendar

- 1 Touch , from the home screen and then touch **Organiser**.
- 2 Touch **Calendar** then touch **Add event**.
- 3 Touch **Category** then choose from **Appointment**, **Anniversary** or **Birthday**. Check the date and enter the time you would like your event to begin.

- 4 For appointments and anniversaries enter the time and date your event finishes in the lower two time and date boxes.
- 5 If you would like to add a subject or a note to your event, touch **Note** and type in your note, followed by **Save**.
- 6 Set **Alarm** and **Repeat**.
- 7 Select **Save** and your event will be saved in the calendar. A square cursor will mark the day that any events have been saved to and a bell will ring at the start time of your event, so that you can stay organised.

Adding an item to your task list

- 1 Touch , from the home screen and then touch **Organiser**.
- 2 Touch **Tasks** then touch **Add task**.
- 3 Set the date for the to do item, add notes and select a priority level: **High**, **Medium** or **Low**.

Date finder

Date finder is a handy tool to help you calculate what the date will be once a certain number of days have passed.

Settings

Calendar settings - You can set the configurations to view the calendar.

Send all organiser data via Bluetooth - You can send all the data in your calendar and/or Tasks from your phone to other phones by using Bluetooth.

Memory info. - You can view the information of available memory regarding Calendar, Tasks, Memo and Secret memo.

Clear all - You can delete all data regarding Calendar, Tasks, Memo and Secret memo.

PC Suite

You can synchronise your PC with your phone. This will ensure all your important details and dates match, and also act as a back up to help put your mind at ease.

TIP! You will need to install the application PC Suite provided on the CD-ROM or available as a download from www.lgmobile.com PRODUCTS > Manual & Software > Go to Manual & S/W Download Section.

Caution! If installation guide message is not displayed in your PC, please check your CD-ROM setting on Windows.

Installing the LG PC Suite on your computer

- 1 From the home screen, touch  and then scroll through Settings then touch **Connectivity**.
- 2 Select **USB connection** and click **PC Suite**.
- 3 Connect handset and PC via USB cable and wait for a while.
- 4 Installation guide message will be displayed on the computer screen.

- 5 Insert the supplied CD-ROM or the click the download button to directly download the LG PC Suite program from the internet.
- 6 Click on the LG PC Suite Installer which will appear on your screen.

Connecting your phone and PC

- 1 Select PC Suite mode in Connectivity menu and then connect the USB cable to your phone and your PC.
- 2 LG PC Suite will be automatically activated on your PC.
- 3 Your phone and PC are now connected.

Backing up and restoring your phone's information

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the **Backup** icon, and select **Backup** or **Restore**.
- 3 Choose whether to back up **Contacts/Calender/ToDo/Memo/photo/video**. Select the location you want to back up the information to, or restore it from. Click **OK** button then Back up or Restore Button respectively then press Finish button.
- 4 Your information will be backed up.

Viewing phone files on your PC

- 1 Connect your phone to your PC as outlined above.
- 2 Click on the Manage Photos, Videos or Music icon.
- 3 Images, audio files and videos you have saved on your phone will be displayed on the screen in the LG Phone folder.

TIP! Viewing the contents of your phone on your PC helps you to manage files you no longer need.

PC Suite

Synchronising your contacts

- 1 Connect the phone to your PC.
- 2 Click on the **Contacts** icon.
- 3 Click **Sync Contacts** button, Welcome to LG Air Sync Service will be displayed > Press Start Button > Select Contacts Sub options (Include outlook contacts or call logs are transferred from the phone during sync > Press Next > Do you want to proceed pop up > next > Select Contacts > Press Sync Now).

Synchronising the messages

- 1 Connect the phone to your PC.
- 2 Click on the Messages icon.
- 3 All your phone messages will be displayed in folders on the screen.

- 4 Use the toolbar at the top of the screen to edit and rearrange messages.

Music Sync

This menu lets you add music to your GX500. Before you start transferring music from your PC to your phone, make sure your computer has the following set-up and accessory is at hand:

- Microsoft Windows XP or Vista
- Windows Media Player 10 or above
- USB data cable
- microSD card (If you wish to use external memory as the music storage.)

 **WARNING:** Do not disconnect your phone during the transfer.

Transferring music using Windows Media Player

- 1 From the home screen select , then scroll through **Connectivity** in the **Settings** tab.
- 2 Select **USB connection mode** and choose **Music sync**.
- 3 Connect your handset and PC using a compatible USB cable.
- 4 When you try to connect the handset to your PC, your handset will read: "Music Sync" followed by Connected.
- 5 The PC will prompt you to launch your preferred music management software.
- 6 Select Window Media Player.
- 7 Go to the Sync Tab, then drag and drop the music you wish to transfer to your handset into the **Sync List** panel.
- 8 Click on the **Start Sync** button. This starts the transfer process.

 **WARNING:** Do not disconnect your phone during the transfer.

DivX Converter

Install the DivX converter, which is supplied on the same CD-ROM as the PC Suite software. DivX will convert media files on your PC to a format that lets you upload them and view them on your phone.

Once installed, select **DivX** from the Program Files on your PC, then **DivX converter** followed by Converter.

Use the arrows in the application to change the conversion format to Mobile. If you right click on the application box and select **Preferences**, you can change the location where the converted files are saved.

Drag and drop the files into the application for initial analysis. Then select **Convert** for the process to begin. When the process is complete a Conversion complete pop up will be displayed.

NOTE: GX500 doesn't support Divx file format.

PC Suite

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play DivX Video-on-Demand (VOD) content. To generate the registration code, locate the DivX VOD section in the device setup menu. Go to vod.divx.com with this code to complete the registration process and learn more about DivX VOD.

Pat. 7,295,673

The web

Browser

Browser gives you a fast, full colour world of games, music, news, sport, entertainment and loads more, straight to your mobile phone. Wherever you are and whatever you're into.

Opera Mini

GX500 supports Opera Mini 5 browser which is a Java application that can be accessed from the Browser menu or from the Games&Apps menu in your phone. Some of the salient features of this browser are Multiple Windows, Security, Touch zooming, Book Marks, History, Saved Pages, Speed Dial.

NOTE: To browse using Opera Mini 5 , Data Connection is required.

Accessing the web

- 1 From the standby screen select , then scroll through UTILITIES Tab and choose .
- 2 To access the browser homepage directly, select **Home**. Alternately select **Enter address** and type in your desired URL, followed by **Connect**.

NOTE: An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

The web

Adding and accessing your bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save web pages.

- 1 From the standby screen select , then scroll through UTILITIES Tab and choose .
- 2 Select **Bookmarks**. A list of your Bookmarks will appear on the screen.
- 3 To add a new bookmark, select  and touch **Add bookmark**. Enter a Title for your bookmark followed by the URL.
- 4 Touch **Save**. Your Bookmark will now appear in the list of bookmarks.
- 5 To access the bookmark simply touch the bookmark and then touch Connect. You will be connected to your bookmark.

Using RSS reader

RSS (Really Simple Syndication) is a family of web feed formats used to publish frequently updated content such as blog entries, news headlines or podcasts. An RSS document, which is called a feed, web feed, or channel, contains either a summary of content from an associated web site or the full text.

RSS makes it possible for people to keep up with their favourite web sites in an automated manner that is easier than checking them manually.

The user subscribes to a feed by entering the feed's link into the reader or by clicking an RSS icon in a browser that initiates the subscription process. The reader checks the user's subscribed feeds regularly for new content, downloading any updates that it finds.

Saving a page

- 1 Access your required webpage as described above.
- 2 Touch  and select **Save this page**.
- 3 Enter a name for the webpage so you can easily recognise it.
- 4 Touch **Save**.

TIP! This menu will also allow you to edit titles of saved pages, protect or unprotect the screen memo, and delete saved pages.

Accessing a saved page

- 1 From the standby screen select , then scroll through UTILITIES Tab and choose .
- 2 Select **Saved pages**.
- 3 Select the required page and it will open.

Viewing your browser history

- 1 From the standby screen select , then scroll through UTILITIES Tab and choose .
- 2 Select **History**. A list of web page titles you have accessed recently will be displayed. To access one of these pages, simply select the required page.

Changing the web browser settings

- 1 From the standby screen select , then scroll through UTILITIES Tab and choose . Select **Settings**.
- 2 You can choose to edit **Profiles, Appearance settings, Cache, Cookies, Security**.

The web

Using your phone as a modem

Your GX500 can be used as a modem for your PC, giving you email and internet access even when you can't connect using wires. You can use either the USB cable or Bluetooth.

Using the USB cable:

- 1 Ensure you have the LG PC Suite installed on your PC.
- 2 Connect your GX500 and your PC using the USB cable and launch the LG PC Suite software.
- 3 Click **Internet Kit** on your PC. Then click **New button** and select **Modem**.
- 4 Choose **LG Mobile USB Modem** and select **OK**. It will now appear on screen.
- 5 Write the Profile that can connect to the Internet and save the values.
- 6 The profile that you create will appear on your PC screen. Select it and click **Connect**. Your PC will connect through your GX500.

Using Bluetooth:

By pairing your GX500 and another device, you can set up a passcode protected connection.

- 1 Check that your Bluetooth is **ON** and **Visible**. You can change your visibility in the Settings menu.
- 2 Touch Search.
- 3 Your GX500 will search for devices. When the search is completed, Refresh will appear on screen.
- 4 Choose the device you want to pair with and select **OK**.
- 5 Your phone will then connect to the other device, on which a new default passcode will be create to this connection.
- 6 Your passcode protected Bluetooth connection is now ready.

Settings

Within this folder you can adapt your settings to make your GX500 personal to you.

Using Dual SIM-card menu

To select or change the SIM-card, press  and then scroll through SETTINGS Tab, then select .

Personalising your profiles

You can quickly change your profile on the standby screen. Simply touch the status summary bar on the top and touch the profile tab.

Using the settings menu you can personalise each profile setting.

- 1 Press  and then scroll through SETTINGS Tab.
- 2 Touch **Profiles** and then choose the profile you want to edit.
- 3 You can then change all of the sounds and alert options available in the list.

Changing your screen settings

- 1 Press  and then scroll through SETTINGS Tab.
- 2 Touch  and then choose from:

Wallpaper - Choose the theme for your standby screen.

Top Menu - Choose the style of the top menu.

Lock screen - Choose the style of the lock screen.

Dialling - Adjust the number size and colour.

Font - Adjust the font size.

NOTE: The longer the backlight is on for, the more battery power is used and you may need to charge your phone more often.

Brightness - Adjust the screen brightness.

Greeting message - Choose on or off and fill in the greeting message.

Start-up/Shut down - Choose the image for your start-up/shut down screen.

Settings

- 3 Touch **Save** to save your settings.

Changing your phone settings

Enjoy the freedom of adapting how your GX500 works to your own style.

TIP! To scroll through a list of options, touch the last item visible and slide your finger up/right the screen. The list will move up/right so more items are visible.

- 1 Press  and then scroll through SETTINGS Tab.
- 2 Touch  then choose from the list below.
 - Date & Time** - Adjust your date and time settings or choose to auto update the time when you travel or for daylight saving.
 - Power save** - Choose to switch the factory set power saving settings **Off, Night only, Always on.**
 - Touch settings** - Change the touchpad value settings.

Languages - Change the language of your GX500's display.

Motion silent - A call is coming in or alarm is going off, user can flip over the phone to make it go into the mute or snooze.

Auto key lock - Lock the keypad automatically in standby screen.

Security - Adjust your security settings, including PIN code request, handset lock, change codes and Anti theft Mobile tracker.

Memory info - You can use memory manager to determine how each memory is used.

Reset settings - Reset all the settings to their factory definitions.

Information - View the technical information for your GX500.

TIP! Anti-theft Mobile tracker (ATMT)

- Touch **Security** and **ATMT**. When the handset is stolen, handset sends the SMS to the numbers configured by real owner. User has to configure the ATMT settings with Owner Name, Alternate no (1), Alternate no (2) etc. Default ATMT code is "000000"
- ATMT SMS will contain information about the stolen phone IMEI, current location & number of the person who is using that handset.

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone from the off. If you want to change any settings, use this menu.

Press  and then scroll through SETTINGS Tab. Select .

Network settings

Select Network - If you set to **Automatic**, GX500 automatically searches for the network and registers the handset to the network. This is recommended for best service and quality. If you set to **Manual** all the currently available networks are shown and you can select one of them for registration. If the registration of the network has failed, the network lists are listed again and you can select any other one for registration.

NOTE: When your handset loses the network in manual mode, the popup message to select the available network will be shown on the Idle screen.

Preferred lists - If the network is searching automatically, you can add a preferred network to be connected to.

Settings

Connectivity Settings

Internet profile - This menu shows the Internet profiles. You can create new profiles, delete or edit them by using the Option Menu. However, you cannot delete or edit default configurations depending on country variant.

Access points - Your network operator has already saved this information. You can add new access points using this menu.

Packet data conn. - Choose when your device should be connected to network for packet data.

USB connection mode - Choose Data service and synchronise your GX500 using the LG PC Suite software to copy files from your phone. If you use Music sync with Windows Media Player, select Music sync in this menu. Music sync is only available for music content.

Java settings - Allows you to set profiles for connections made by Java programs and to view certificates.

Using memory manager

Your GX500 has three memories available: the phone, the SIM Card and an external memory card (you may need to purchase the memory card separately).

You can use memory manager to determine how each memory is used and see how much space is available.

Touch  and then scroll through SETTINGS Tab. Select  then **Memory info.**

Handset common memory - View the memory available on your GX500 for Pictures, Sounds, Video, Flash, MMS, Email, Java applications and others.

Handset reserved memory - View the memory available on your handset for Text msg, Contacts, Calendar, Tasks, Memo, Alarm, Call history, Bookmarks and Miscellaneous items.

SIM (SIM1/SIM2) memory - View the memory available on your SIM Card.

External memory - View the memory available on your external memory card (you may need to purchase the memory card separately).

Primary storage setting - Choose the location you prefer items to be saved to.

Sending and receiving your files using Bluetooth

Bluetooth is a great way to send and receive files as no wires are needed and connection is quick and easy. You can also connect to a Bluetooth headset to make and receive calls.

To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Choose **Send**.
Choose **Bluetooth**.
- 3 If you have already paired the Bluetooth device, your GX500 will not automatically search for other Bluetooth devices. If not, your GX500 will search for other Bluetooth enabled devices within range.

- 4 Choose the device you want to send the file to and touch **Select**.

- 5 Your file will be sent.

TIP! Keep an eye on the progress bar to make sure your file is sent.

To receive a file:

- 1 To receive files your Bluetooth must be both **On** and **Visible**. See Changing your Bluetooth settings on the right for more information.
- 2 A message will prompt you to accept the file from the sender. Touch **Yes** to receive the file.
- 3 You will see where the file has been saved and you can choose to **View** the file or **Use as wallpaper**. Files will usually be saved to the appropriate folder in your Media Album.

Changing your bluetooth settings:

- 1 Touch  and then scroll through SETTINGS Tab.
- 2 Choose  then touch  and choose **Settings**.

Settings

Make your changes to:

My device visibility - Choose to be **Visible** or **Hidden** or **Visible for 1 min**.

My device name - Enter a name for your GX500.

Supported services - Choose how to use Bluetooth in association with different services.

My address - Show your Bluetooth address.

Pairing with another Bluetooth device

By pairing your GX500 and another device, you can set up a passcode protected connection. This means your pairing is more secure.

- 1 Check your Bluetooth is **On** and **Visible**. You can change your visibility in the **Settings** menu.
- 2 Touch **Search**.
- 3 Your GX500 will search for devices. When the search is completed **Refresh** will appear on screen.

- 4 Choose the device you want to pair with and enter the passcode, then touch **OK**.
- 5 Your phone will then connect to the other device, on which you should enter the same passcode.
- 6 Your passcode protected Bluetooth connection is now ready.

Using a Bluetooth headset

- 1 Check your Bluetooth is **On** and **Visible**.
- 2 Follow the instructions that came with your headset to place your headset in pairing mode and pair your devices.
- 3 Touch **Ask before connect** or **Always connect** and touch **Yes** to Connect now. Your GX500 will automatically switch to Headset profile.

Wi-Fi

Wireless Manager allows you to manage Internet connections via Wi-Fi (Wireless LAN) on your device.

It allows the phone to connect to local wireless networks or access the Internet wirelessly. Wi-Fi is faster and has a greater range than Bluetooth wireless technology and can be used for fast emailing and Internet browsing.

NOTE: The GX500 supports WEP and WPA-PSK/2 encryption, but not EAP or WPS encryption. If your Wi-Fi service provider or network administrator sets encryption for network security, fill in the key in the pop-up window.

If encryption is not set, this pop-up window will not be shown. You can obtain the key from your Wi-Fi service provider or network administrator.

Software Upgrade

LG Mobile Phone Software Upgrade Program

For more information on installing and using this program, please visit <http://update.lgmobile.com>

This feature allows you to upgrade your software to the latest version quickly and conveniently on the Internet without needing to visit our service centre. The mobile phone software upgrade program requires the user's full attention for the duration of the upgrade process, so please be sure to check any instructions and notes that appear at each step before proceeding. Please note that removing the USB data communication cable or batteries during the upgrade may seriously damage your mobile phone. The manufacturer takes no responsibility for loss of data during the upgrade process, so you are advised to note down any important information in advance for safekeeping.

Accessories

These accessories are supplied with GX500.


Charger



Data cable and CD




Battery

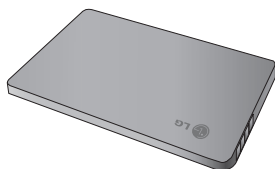

User Guide



Stereo headset

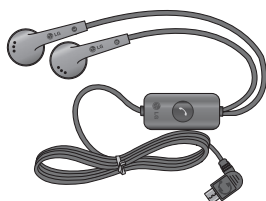

NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

⚠ WARNING: When the protection film is attached on touch window, touch sensitivity might be decreased.

Network service

The wireless phone described in this guide is approved for use on the GSM 850, E-GSM 900, DCS 1800 and PCS 1900 network.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

Technical data

General

Product name: GX500

System: GSM 850 / E-GSM 900
/ DCS 1800 / PCS 1900

Ambient Temperatures

Max: +55°C (discharging),
+45°C (charging)

Min: -10°C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc. LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad band Terminal Equipment

Model Name

GX500

Trade Name

LG

CE 0168 !

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.6.1, EN 301 489-07 V1.3.1, EN 301 489-17 V1.3.2
EN 301 511 V9.0.2
EN 50360:2001 EN62209-1:2006
EN 60950-1:2001
EN300328 V1.7.1

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House-Churchfield Road - Walton-on-Thames Surrey - KT12 2TD , United Kingdom

Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility
that the product mentioned above to which this
declaration relates complies with the above
mentioned standards and Directives

LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands

Name

Issued Date

Seung Hyoun, Ji / Director

12. Feb. 2010

Signature of representative

Trouble Shooting

This chapter lists some problems that you might encounter while using your phone. Some problems require that you call your service provider, but most of problems you encounter are easy to correct yourself.

Message	Possible causes	Possible Corrective measures
SIM error	There is no SIM card in the phone or you may have inserted it incorrectly.	Make sure that the SIM card is correctly inserted.
No connection to the network	Signal weak Outside GSM network	Move higher to a window or open space. Check service provider coverage map.
Codes do not match	When you want to change a security code you have to confirm the new code by entering it again. The two codes that you have entered do not match.	Contact your Service Provider.
Function cannot be set	Not supported by Service Provider or registration required	Contact your Service Provider.
Calls not available	Dialling error New SIM card inserted Charge limit reached	New network not authorised. Check for new restrictions. Contact Service Provider or reset limit with PIN 2.

Trouble Shooting

Message	Possible causes	Possible Corrective measures
Phone cannot be switched on	On/Off key pressed too briefly	Press On/Off key for at least two seconds.
	Battery empty	Charge battery. Check charging indicator in the display.
	Battery contacts dirty	Clean contacts.
Charging error	Battery totally empty	Charge battery.
	Temperature out of range	Make sure the ambient temperature is right, wait for a while, and then charge again.
	Contact problem	Check power supply and connection to the phone. Check the battery contacts, clean them if necessary.
	No mains voltage	Plug in to a different socket or check voltage.
	Charger defective	If the charger does not warm up, replace it.
	Wrong charger	Only use original LG accessories.
	Battery defective	Replace battery.
Phone loses network	Signal too weak	Reconnection to another service provider is automatic.
Number not permitted	The Fixed dial number function is on.	Check settings.



Warranty Card 產品保用證

Mobile Phone
手提電話

Mobile Phone Warranty Policy 手提電話保用條款

- (1) LG Electronics Hong Kong Limited (hereafter LGEHK) provides warranty period from the date of purchase are as follows and only valid for mobile purchase in Hong Kong only (any promotion gift item is not included):
 - (i) Handset : 12 months
 - (ii) Charger : 6months
 - (iii) Battery : 6months
 - (iv) Hand free earphone : 3months
 - (2) Warranty is valid only for authorized product; parallel import and counterfeit product are invalid.
 - (3) Product is under warranty against manufacturing defects by reason of faulty workmanship or internal electronic parts materials. This warranty does not cover defects arising from natural wear of the product (Including casing, key pad, display, antenna, and accessories, etc.)
 - (4) If check-up or repairing are required, customer must present the original invoice and warranty card on which the relevant IMEI number was printed. Upon any failure to present the above documentation, customer must pay for the costs of the services provided.
 - (5) All parts replaced within the warranty period are the property of LGEHK. We have rights to handle those parts as necessary.
 - (6) Data stored in handsets may be lost after the repair and thus should be properly stored by customer beforehand.
 - (7) Warranty will be voided under the following conditions, and LGEHK reserves the right to refuse providing service and/or shall demand charges for any costs of servicing from customer:
 - (i) Product has been tampered with or undergone unauthorized repair by third parties, improper installation, alternation or modification to this product, or damage, tearing, removal of the warranty sticker that is affixed to this product.
 - (ii) Defects arising from misuse, mishandling, abuse, accident, negligence and damage caused directly or indirectly by fire, flood, liquid water, corrosion, convulsion of nature, war, riot or civil commotion.
 - (iii) The IMEI number sticker on this product has been erased or modified.
 - (iv) The content of warranty policy has been modified without authorization.
 - (8) LGEHK is not responsible for any loss of data or system corruption during the process of transportation or repair to and from the Service Centre and due to the forces of nature.
 - (9) LGEHK reserves the right to terminate or modify the terms of this warranty card. For exceptional cases, subject to report of our investigation, we reserve the right to terminate this warranty card or modify terms of warranty policy.
 - (10) Our company will not be liable for any loss directly or indirectly caused by the breakdown of the product.
 - (11) This warranty card is restricted within Hong Kong SAR only.
 - (12) LG and its Authorized Service Centers reserve the right to use refurbished or reconditioned parts or whole products for the same or functionally equivalent model when conducting product repairs and replacement.
-
- (1) 本公司為客戶提供保修期如下，只適用於香港購買之手機，並不包括各促銷活動之贈品(由購買日起計)
 - (i) 機身 : 12個月
 - (ii) 充電器 : 6個月
 - (iii) 電池 : 6個月
 - (iv) 免提耳機 : 3個月
 - (2) 保修服務只適用於原裝行貨；水貨及冒牌貨均屬無效。
 - (3) 此保修只適用於生產上的瑕疵，如電子零件偶然出現毛病，並不包括手機的自然磨損包括外殼、鍵盤、顯示屏、天線、附件等。
 - (4) 用戶要求維修服務時，須同時攜同手機、保用證及印有IMEI號碼之有效發票正本到本公司指定之維修中心進行維修，否則保修服務無效，客戶須繳付維修費用。
 - (5) 在保修期內維修更換後的所有零件、配置及附件，均屬本公司所有，本公司有權作出任何處理。
 - (6) 手機內存資料有可能因維修後遺失，請顧客要自行保存。
 - (7) 在下列情況下本保用證將自動失效，本公司有權拒絕維修該手機或向客人徵收所有的維修費用。
 - (i) 手機曾作未許可之維修、不適當的安裝、更改，或貼於其上的維修貼紙遭受損毀、撕破、除去，保修服務即無效。
 - (ii) 手機曾被錯誤使用，錯誤處理，疏忽使用，直接或間接意外由火、液體、火災、腐蝕、地震、戰爭、暴亂或天災所造成的損壞。
 - (iii) 手機上的IMEI號碼貼紙一經修改或除去，保修服務即無效。
 - (iv) 擅自修改本保用證的內容。
 - (8) 本公司將對任何於使用、維修或運送時引致之系統錯誤及資料流失，或因天然災害，意外事件造成之損失概不負責。
 - (9) 本保用證的發出及終止權均屬本公司所有。就不明的情況或個案，經審查後，本公司有權發出或終止本保用證。
 - (10) 本公司將不負責由於產品損壞而直接或間接引致之任何損失。
 - (11) 此保用證只適用於香港特別行政區範圍內。
 - (12) 本公司及其授權之維修中心在維修或更換產品時，保留使用與產品或功能相同的部分或全部再生零件之權利。

Warranty Card 產品保用證

LG Customer Care Centre
客戶維修服務中心

Welcome to contact for detailed information
歡迎致電查詢詳細資料

Customer Service Hotline 客戶服務熱線 : (852) 3543 7777
E-mail Us 客戶查詢電郵 : cshelpdesk@lge.com
LG Website 瀏覽網站 : www.lg.com

If you want to receive an additional 3 months warranty, please complete warranty registration within 1 month after purchase at
<http://www.lg.com/hk/support/registration/support-sign-in.jsp>
or (852) 3543 7777.

如欲享受額外3個月產品保養，請在購買產品後1個月內登入
<http://www.lg.com/hk/support/registration/support-sign-in.jsp>
或致電(852) 3543 7777登記

Privacy Statement

You are aware that any information supplied by you after purchase of our product will be retained by LG Electronics HK Ltd. and will not be released to third parties. You also authorize LG Electronics HK Ltd. to send you direct promotion materials. Please contact our Customer Service Hotline at (852) 3543 7777 if you wish to modify or erase your provided personal information.

私隱聲明

閣下在購買本公司產品後所提供的任何資料，將會由LG Electronics HK Ltd. 保有，不會透露給予第三方，並授權本公司對閣下發出直接推廣通訊。如希望修改或刪除所提供的個人資料，可聯絡本公司客戶服務熱線(852) 3543 7777作出相關安排。

Thank you for your purchase of LG Electronics product under the terms and conditions listed on this warranty card.

多謝閣下購買及使用本公司之產品，請參閱保用證所列之產品保用條款。

IMPORTANT : Please keep and present this warranty card and purchase invoice when services are rendered. Otherwise, this warranty will be voided.

重要事項 : 顧客請保留此保用證及購貨發票，並需在檢查/維修時出示，否則保用無效。

Service Commitment 服務承諾

LG's mission is to create value for customers. We are committed to improve the life of our customers by putting the customers first, and delivering the best possible pre and after sales services in the way they want.

為顧客創造價值乃LG一貫宗旨。我們致力提供最貼心的售前及售後服務，一切以顧客為先，希望為客戶帶來最優質的生活。







