



繁體中文
簡體中文
ENGLISH



GX200

此手冊中的部份內容可能會因手機程式之改良或不同網絡商提供的服務而令實際情況有所不同,這並不會另行通知。



Bluetooth QD ID B016135

GX200 使用手冊 - 繁體中文

本使用手冊幫助您掌握新型手機的操作。提供有助於您使用手機功能的相關解釋。

此手冊中的部份內容可能會因手機程式之改良或不同網絡商提供的服務而令實際情況有所不同,這並不會另行通知。




安裝智能咭和為電池充電

申請手機網絡後，您將獲得一張智能咭，當中有申請的詳細資料，如 PIN 碼、各種可選服務和其他內容。

重要資訊：由於智能咭及其觸點很容易因刮痕或彎曲而損壞，因此在使用、插入或取出智能咭時要加倍小心。將所有智能咭放置在兒童無法觸及的地方。



插圖

- 1 開啓電池蓋
- 2 插入智能咭
- 3 合上電池蓋
- 4 為電池充電

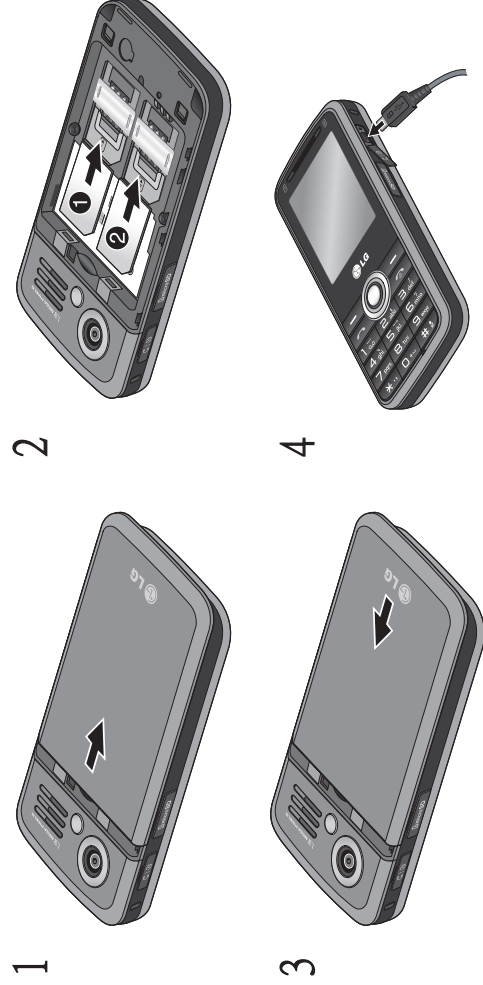

首次使用之前請為電池充滿電量

手機部件

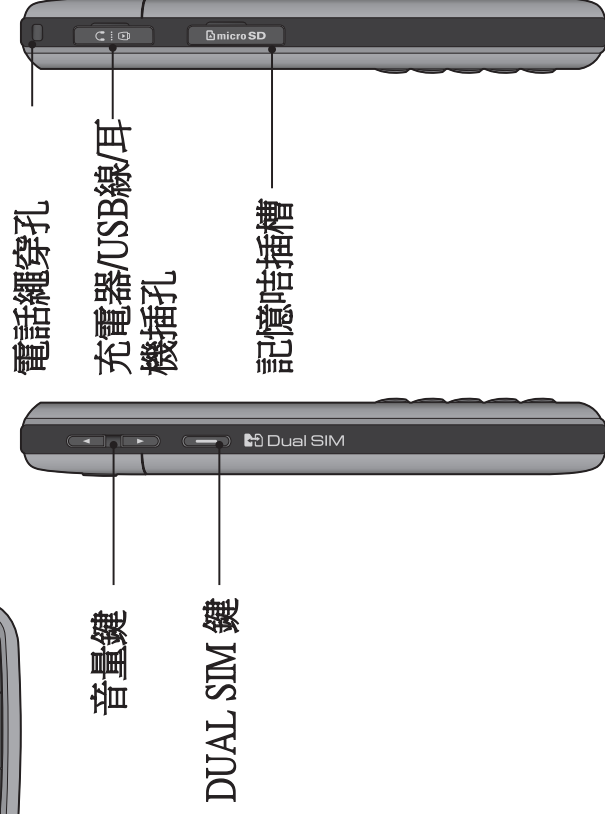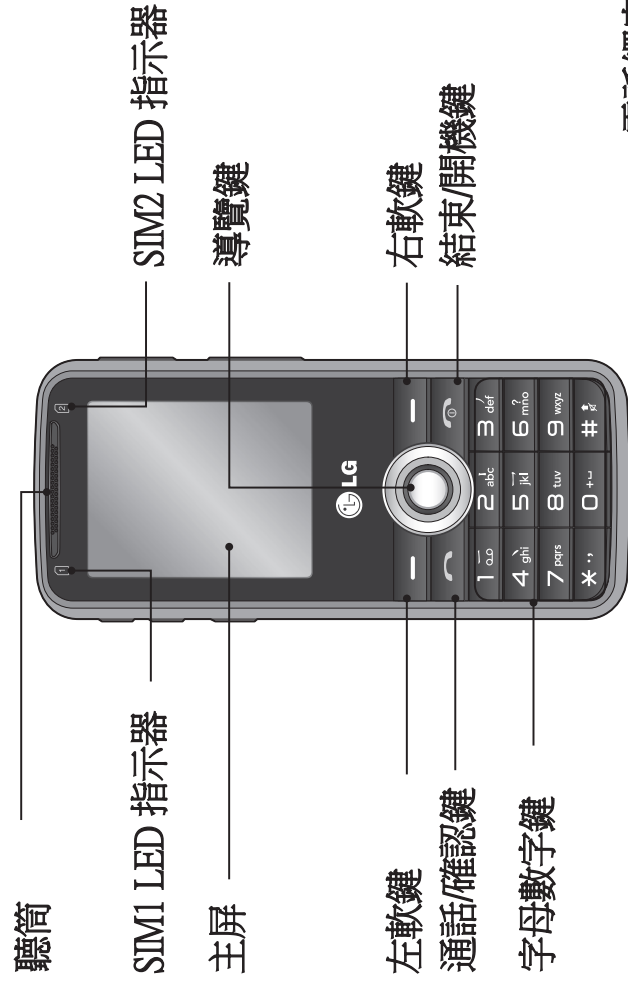

左右軟鍵：左右軟鍵分別按照顯示屏上顯示的文字內容執行相應的功能。

通話/確認鍵：用於撥打號碼與接聽來電。

結束/開機鍵：用於開啓或關閉手機、結束通話或返回備用模式。

導覽鍵：用於快速存取手機各項功能。

字母數字鍵：在備用模式下撥打號碼、在編輯模式下輸入號碼或字元。

屏幕資訊

圖示 說明	
	顯示網絡訊號強度。
	藍芽連接已開啓。
	手機已鎖定。
	鬧鐘已設定。
	已使用漫遊服務
	表示新文字訊息。
	震動
	標準情景模式已啓用。
	靜音情景模式已啓用。
	戶外情景模式已啓用。
	飛航情景模式已啓用。
	已使用耳機。
	表示電池電量。

開啓和關閉手機

- 1 按住  [結束] 鍵，直至開機。
- 2 如要關機，請按住  [結束] 鍵，直至顯示關機畫面。

撥打電話

- 1 在備用模式下，輸入區域代碼及電話號碼。
- 2 按  [通話] 鍵撥打號碼。

接聽來電

- 1 手機響鈴後，按  [通話] 鍵接聽來電。
- 2 若已設定「任何鍵」功能表選項，則除了  [結束] 鍵或右側軟鍵之外，按任意鍵都可以接聽來電。

撥打國際電話

- 1 在備用模式下，長按 0 鍵直至顯示 +（國際冠碼字元）符號。
- 2 輸入國家代碼、區域代碼和電話號碼。
- 3 按  [通話] 鍵進行通話。

啓用並切換智能咕

您的手機支援雙智能咕模式，您可同時使用兩個智能咕，無需調換。如果安裝了兩張智能咕，可啓用其中一張或同時啓用兩張。智能咕切換功能允許用戶選擇預設智能咕，使用其內的通訊錄、通話記錄及訊息匣進行通話或訊息服務。

- 1 從主功能表選擇 [設定]，然後選擇 [雙智能咕]。
- 2 選擇 [智能咕切換] 設定切換模式。
 - 自動：智能咕將自動切換。
 - 用戶設定：使用向上及向下導覽鍵設定預設通話方式及預設訊息方式。
使用左右導覽鍵切換要指定的智能咕，然後按 [選項] 儲存想要的設定。

注意：

如果僅安裝了一個智能咕，將預設啓用此智能咕。

輸入文字

可使用鍵盤輸入字母數字字元。要變更模式，按  鍵。

T9 模式

使用此模式時，每個字母只要按一下按鍵即可輸入單字。鍵盤上每個按鍵都代表一個以上的字母。T9 模式會自動將您按下的按鍵與內建語言字典進行比對，然後決定正確的單字，因此按鍵次數較傳統 ABC 模式少。輸入方法顯示在手機的右上角。

指示符	功能（英文智能模式）	指示符	功能（英文智能模式）
T9ABC	T9 智能 Abc	ABC	多鍵 ABC 輸入法
T9abc	T9 智能 abc	abc	多鍵 abc 輸入法
T9ABC	T9 智能 ABC	ABC	多鍵 ABC 輸入法
123	數字		

FM 收音機（該功能視不同區域而異。）。

- 1 從主功能表選擇 [多媒體]，然後選擇 [FM 收音機]。
- 2 使用導覽鍵搜尋電臺頻道。也可按 [選項] 並選擇 [預設自動搜尋] 自動搜尋可接收到的電臺頻道。
- 3 按 [選項] 更改設定。手機提供以下 FM 收音機選項：
 - 頻道列表：透過輸入頻道名稱和頻率，最多可為 9 個電臺添加書籤。
 - 手動輸入：手動鍵入電臺頻率。
 - 預設自動搜尋：自動搜尋可接收到的頻道並儲存至頻道清單。
 - 設定：變更背景播放、面板、揚聲器、錄製格式為 AMR 或 WAV、音質。
 - 語音備忘錄：錄製最愛的收音機節目。
 - 附加：繼續前一個錄製檔案，在同一檔案內繼續錄製。
 - 檔案列表：管理先前的錄製檔案。

手機遺失追蹤 (LMT)

- 1 LMT 功能為您提供一套追蹤系統，應對遺失或誤置手機的情況。
- 2 一旦未經授權的人員使用了您的手機，手機就會向您預設的電話號碼發出一條文字訊息。
- 3 可透過以下步驟設定 LMT 功能：
 - 從主功能表選擇 [設定]，然後選擇 [安全]。
 - 選擇 [手機遺失追蹤]
 - 設定手機遺失追蹤並選擇開啓。
 - 輸入預設遺失追蹤密碼。

注意：

- 、如果您想以其他智能咭使用手機，請確保將手機遺失追蹤設為關閉。
- 、建議您輸入附國家代碼的遺失追蹤號碼（例如對於印度，請輸入 +91，然後輸入手機號碼）
- 、預設手機遺失追蹤密碼為「0000」。

如何設定情景模式

您的手機提供 4 種不同的情景模式，以適用於不同環境。在每個情景模式中，您可設定所需的音效。

- 1 從主功能表選擇 [情景模式]。
- 2 選擇一種情景模式，按個人化設定。
- 3 按 [確認] 分別為兩張智能咭設定所需鈴聲。手機提供以下選項以用於自定鈴聲和響鈴類型：
 - 通話提示類型：選擇響鈴類型（鈴聲、震動、震動及響鈴、先震動後響鈴、靜音）
 - 鈴聲：選擇喜歡的鈴聲。
 - 鈴聲音量：按向上/向下導覽鍵調節響鈴音量。

如何設定提示音（續）

- 訊息提示類型：選擇一種訊息提示類型（響鈴一次、響鈴週期、震動並響鈴、震動、靜音）。
- 訊息提示音：選擇所需的訊息提示音。
- 訊息音量：按向上/向下導覽鍵調節訊息提示音音量。
- 按鍵音：選擇所需的按鍵音效。
- 按鍵音量：按向上/向下導覽鍵調節按鍵音量。
- 效果音效音量：按向上/向下導覽鍵調節音效音量。
- 開/關機音效：選擇不同的開/關機音效。
- 開/關機音量：按向上/向下導覽鍵調節開/關機提示音音量。

功能表總覽

1. 瀏覽器	4. 多媒體	7. 情景模式
1.1 智能咭1	4.1 音樂播放器	7.1 標準
1.2 智能咭2	4.2 相機	7.2 靜音
• 首頁	4.3 視像攝錄機	7.3 戶外
• Google Search	4.4 FM 收音機	7.4 飛航模式
• 書籤	4.5 FM錄製排程	8. 通訊錄
• 輸入網址	4.6 語音備忘錄	8.1 搜尋
• 歷史記錄	4.7 旋律作曲	8.2 新增通訊錄
• 設定	5. 訊息	8.3 快速撥號
2. 通話記錄	5.1 新訊息	8.4 群組
2.1 所有通話	5.2 收件匣	8.5 複製全部
2.2 未接來電	5.3 草稿	8.6 刪除全部
2.3 已撥通話	5.4 寄件匣	8.7 設定
2.4 已接來電	5.5 已發送項目	8.8 資訊
2.5 通話時間	5.6 聽取語音信箱	9. 設定
2.6 通話費用	5.7 廣播訊息	9.1 雙智能咭
2.7 數據記錄	5.8 常用範本	9.2 日期及時間
3. 工具	5.9 設定	9.3 語言
3.1 鬧鐘	6. 我的檔案	9.4 顯示
3.2 日曆	6.1 圖像	9.5 捷徑
3.3 計算機	6.2 聲音	9.6 虛擬來電
3.4 備忘錄	6.3 影片	9.7 通話
3.5 待辦事項	6.4 其他	9.8 安全
3.6 單位轉換器	6.5 外置記憶體	9.9 連接
3.7 世界時間	6.6 遊戲及應用程式	9.10 電源節省
3.8 智能咭服務(視乎服務商)		9.* 重新設定
3.9 手電筒		9.# 記憶體狀態

快速功能參考

瀏覽器功能表 1

- **首頁：**選擇此選項載入瀏覽器首頁（內容取決於服務供應商）。
- **Google Search：**透過Google Search，您可從任何主要供應商存取 Google Search。
- **書籤：**使用此功能表儲存 URL 地址。
- **輸入網址：**直接鍵入 URL 地址。
- **歷史記錄：**檢視近期瀏覽過的網頁。
- **設定：**設定手機開機時自動註冊 GPRS 網絡。

通話記錄功能表 2

查看未接來電、已接來電以及已撥電話，只要網絡支援在服務區內的主叫線路識別 (CLI)。號碼與姓名（如果有的話）會和電話的日期與時間一起顯示。您也可以查看通話時間。

- **所有通話：**按時間顯示三種通話類型的所有清單（已接來電/已撥電話/未接來電）。
- **未接來電：**允許您檢視未接電話。
- **已撥電話：**允許您檢視撥出電話（已撥出或嘗試撥出）。
- **已接來電：**允許您檢視已接電話。
- **通話時間：**允許您檢視已撥和已接的通話時長。
- **通話費用：**查看最後通話、所有通話或費用設定。
- **數據記錄：**查看透過 GPRS 資訊選項從網絡傳輸的數據總量。

工具功能表 3

- **鬧鐘**：設置五個鬧鐘中的一個。選擇要設定的鬧鐘後，目前的時間會顯示在屏幕右上角。到達鬧鐘時間時，「鬧鐘」圖示會顯示在屏幕上並開始響鬧。
- **日曆**：查看每日或每月日程表的記錄。
- **計算機**：具備標準功能，如加、減、乘、除。
- **備忘錄**：建立工作清單。
- **待辦事項**：查看所有從日曆選項新增的工作。
- **單位轉換器**：將度量單位轉換成所需單位。
- **世界時間**：查看其他時區或國家的目前時間。
- **智能咕咭服務**：顯示由網絡服務供應商提供的功能或應用程式。
- **手電筒**：處於黑暗環境時，手機屏幕可作照明之用。

對媒體功能表 4

- **音樂播放器**：透過手機欣賞 MP3 音樂檔案。
- **相機**：透過內置相機拍照，可調節各種拍照設定。
- **視像攝錄機**：透過內置相機錄製視訊片段，可調節各種攝錄設定。
- **FM 收音機**：收聽 FM 電臺頻道。
- **FM 錄製排程**：預先設定 FM 收音機錄製。
- **語音備忘錄**：錄製語音備忘錄。
- **旋律作曲**：自行創作鈴音或旋律。

訊息功能表 5

- **新訊息**：編寫新文字訊息或多媒體訊息。
- **收件匣**：檢視已儲存的訊息。
- **草稿**：檢視未發送的訊息。
- **寄件匣**：檢視將要發送或未成功發送的訊息。
- **已發送項目**：檢視已發送的訊息，包括時間和內容。
- **聽取語音信箱**：快速存取留言信箱（若網絡提供此服務）。
- **廣播訊息**：資訊服務訊息是指從網絡發送至手機的文字訊息。
- **常用範本**：清單中有預先定義的訊息。您可以查看和編輯範本或建立新訊息。
- **設定**：設定服務供應商的功能。

我的檔案功能表 6

- **圖像：**此資料夾將儲存所有圖像檔案。
- **聲音：**此資料夾將儲存所有音訊檔案。
- **影片：**此資料夾將儲存所有影片片段檔案。
- **其他：**此資料夾主要用於儲存從電腦傳輸到手機的檔案。
- **外置記憶體：**檢視儲存在記憶咭中的圖像、聲音、影片、檔案及其他內容
- **遊戲及應用程式：**顯示手機中預設的遊戲和應用程式。

情景模式功能表 7

- **標準：**預設為標準情景模式。 啟用此情景模式後， 指示器將在備用屏幕上顯示。
- **靜音：**將關閉鈴聲。 啟用此情景模式後， 指示器將在備用屏幕上顯示。
- **戶外：**鈴聲和按鍵音設為最大。 啟用此情景模式後， 指示器將在備用屏幕上顯示。
- **飛航模式：**將停用手機的無線收音機功能，可安全使用其他非無線功能（如多媒體、工具或遊戲等）。 啟用此情景模式後， 指示器將在備用屏幕上顯示。

通訊錄功能表 8

- **搜尋：**搜尋手機通訊錄中的聯絡人。

備註：輸入搜尋對象的姓名首字母即可快速搜尋所需的聯絡人。

- **新增通訊錄：**在手機通訊錄中新增聯絡人。
- **快速撥號：**將聯絡人號碼指定為 2 到 9 的任意一個數字鍵。撥打該聯絡人號碼時，僅需在備用模式下長按指定的數字鍵。
- **群組：**手機設有七個預設群組。透過群組功能，您可同時向所有群組成員發送同一訊息。
- **複製全部：**將智能咭記憶體中的通訊錄複製到手機記憶體，或從手機記憶體複製到智能咭記憶體。
- **刪除全部：**刪除智能咭記憶體或手機記憶體中的通訊錄。
- **設定：**設定檢視選項為僅名稱、名稱及號碼或顯視圖片。

通訊錄功能表 8（續）

- 資訊：
 - › 服務撥號號碼：安全存取由服務供應商指定的服務號碼清單。
 - › 本手機號碼：在智能咭中儲存並查看本機號碼。
 - › 我的名片：建立帶有本人姓名、手機號碼、住宅等資訊的名片。

設定功能表 9

- 雙智能咭：分別設定兩張智能咭的屬性。
- 日期及時間：設定有關日期和時間的功能。
- 語言：變更手機顯示文字的語音。這亦會影響語言輸入模式。
- 顯示：個人化顯示設定，包括牆紙、日期時間等等。
- 捷徑：自定導覽捷徑。
- 虛擬來電：設定在指定時間接聽虛擬來電功能。
- 通話：設定與通話有關的功能。
- 安全：透過設定 PIN 碼、自動鍵盤鎖、手機鎖、手機遺失追蹤等等，使您的手機更安全。
- 連接：使用藍芽連接將您的手機與其他電子裝置連接。
- 電源節省：如果開啓此模式，可在不使用手機的情況下節省電力。
- 重新設定：將整個手機重設為原廠預設值，或刪除所有儲存在手機上的檔案。
- 記憶體狀態：查看剩餘可用空間以及每個記憶體的使用情況。

安全及有效使用準則

請讀取以下簡易的使用規則。忽視這些準則可能會發生危險或觸犯法律。欲知詳細資訊，請參閱本手冊。

警告

出於安全考慮，只可使用原裝電池及充電器。

- 請於任何有特殊限制的地方關閉手機，例如醫院（可能會對醫療設備造成影響）。
- 請根據相關的廢物棄置政策處理廢舊電池。

產品護理及維修

警告！ 請僅使用經認可適用於此特定型號手機的電池、充電器及配件。

使用其他種類的配件可能會導致手機的認可或保養失效，並可能引起危險。

- 請勿拆開此裝置。需要對手機進行維修時，請將其帶到合資格的維修技師處。
- 裝置需遠離發熱來源，如散熱器或烹調器具。
- 請使用潔淨的干布清潔裝置表面。（請勿使用任何溶劑。）
- 請勿將手機置於信用卡或車票附近，這可能會影響磁帶上的資料。

安全及有效使用指南（續）

電子裝置

所有手機都可能因為受到干擾而影響效能。

- 請勿在未得到批准下在醫療儀器附近使用您的手機。避免將手機放置在一起搏點上，例如您的胸口袋。

道路安全

檢查您駕駛時地區使用手機的法例及規則。

- 駕駛時請勿使用手提手機。
- 如有免提耳機套件，請使用免提耳機套件。
- 若有駕駛條例要求，請駛離馬路並停泊好汽車後才撥打或接聽電話。

爆破地區

請勿在進行爆破時使用手機。請嚴格遵守相關限制、規定或條例。

潛在爆炸氣壓

請勿在燃料補給點使用手機。請勿在燃料或化學物質旁使用。

在飛機上

無線裝置可引致飛機干擾。

- 乘坐飛機時請關閉手機。

安全及有效使用指南（續）

兒童

將手機放在兒童接觸不到的安全地方。包括可能引起窒息的小零件。

緊急呼叫

緊急呼叫可能在某些電話網絡不能發出。因此，您不應僅倚賴手機作為緊急電話方式。請向您本地的服務供應商查詢。

電池資料及保護

- 充電前，您無須完全放電。跟其他電池系統不同，沒有記憶影響可緩和電池的效能。
- 只使用 LG 電池及充電器。LG 充電器是為將電池壽命擴至最大而設。
- 請勿拆解電池組或造成電池組短路。
- 當電池不再提供可接受的效能，請更換電池。電池組可重充數百次直至需要更換為止。
- 請勿直接將充電器暴露於日光下或高濕度環境（如浴室）中。
- 如果以錯誤方式放置電池，可能引起爆炸。
- 根據製造商說明棄置廢舊電池。

安全及有效使用指南（續）

射頻能量暴露準則

無線電波暴露及比吸收率 (SAR) 資訊

本手機型號已為遵守無線電波暴露的應用安全要求而設計。此要求根據包括專為確保任何年齡、任何健康狀況的所有人士安全而設的安全極限的科學指引。

- 無線電波暴露指引的量度單位叫作比吸收率或 SAR。SAR 測試使用標準方法進行，用手機以在所有使用的頻帶最高的合格電源水平傳輸。
- 雖然不同型號的 LG 電話的 SAR 水平有所差異，但所有這些電話都為達到無線電波暴露的相關指引而設。
- 國際非離子化輻射保護委員會 (ICNIRP) 建議的 SAR 限制，即平均十 (10) 克組織 2W/kg。
- 此型號手機的最高 SAR 值由 DASY4 測試，使用該裝置在耳旁/身體旁時，該值為 [0.870 / 0.988] 瓦/千克 (10 克)。
- 採用了電氣與電子工程師學會 (IEEE) 建議的 SAR 限制，即平均 1 克組織 1.6 W/kg 的國家/地區居民的 SAR 數據資訊。

疑難排解

合理的解決方案	
手機不能啓動	請取出電池並重新插入。然後按一下結束/開機鍵開啓手機。
電池已耗盡	爲電池充電。檢查顯示上的充電指示符。
電池不能正確充電或手機有時自己關機	使用一塊乾淨的軟布擦拭手機及電池上的充電觸點。
電池的使用時間變短	若電池的使用時間過短，可能是由於用戶環境問題，或用戶進行了大量通話或訊號比較弱。
充電錯誤—溫度超出允許範圍	確保環境溫度合適並稍後再重新充電。
充電錯誤—充電器不兼容	只可使用原廠 LG 配件。
充電錯誤—電池出現瑕疵	更換電池。
充電錯誤—充電時未顯示電池圖示	電池電量已耗盡或長時間未使用。可能要稍等片刻，電池圖示才會顯示在屏幕上。
忘記手機代碼或密碼	預設的手機密碼爲「0000」。
輸入 PUK	已連續三次錯誤輸入 PIN 碼，手機現已鎖定。輸入您的服務供應商提供的 PUK。
無網絡	您可能位處訊號較弱的地區。移動並再試一次。您所嘗試存取的是您並未向服務供應商申請的選項。請聯絡服務供應商以了解更多詳情。
您已輸入號碼但沒有撥出	確保已按下通話/確認鍵。 請確定您已存取正確的網絡服務。 請確定您沒有設定撥出限制通話選項。 請確定您已輸入區域代碼。
對方無法聯絡您。	請確定您已開機。按住通話/確認鍵并保持一秒鐘以上。請確定您正在存取網絡服務。請確定您沒有設定來電限制通話選項。

疑難排解（續）

合理的解決方案	
問題	
對方不能聽到您說話	請確定您已關閉喇叭。請確定手機貼近您的嘴巴。咪高風位於手機底部。
通話語音質量差。	檢查屏幕上的訊號強度指示器。條數顯示訊號強度。如果您在建築物內，嘗試輕輕移動手機或移近窗口。
重新呼叫聯絡人時不用再撥號	使用手機通訊錄搜尋功能確保號碼已正確儲存。如有需要，可重新儲存號碼。
無法使用瀏覽器	您訂閱的服務不包含資料功能。您需要聯絡服務供應商以啓用此服務。
如果以上的指引不能協助您解決問題	記下手機的型號及問題的詳細描述。聯絡手機經銷商或 LG 服務中心尋求幫助。

技術數據

一般資訊

產品名稱：GX200

系統：E-GSM850/GSM900/DCS1800/PCS1900

環境溫度

最高：+55°C（放電中）

+45°C（充電中）

最低：-10°C

GX200 用户手册 - 中文

此指南有助于您了解您的新手机。

它将提供关于手机功能的有用说明。

此手册中的部份内容可能会因话机软件之改良或不同网络商提供的服务而令实际情况有所不同, 这并不会另行通知。



安装 SIM 卡和充电


当您预定了手机网络后，您将得到一个 SIM 卡，该卡上载入了您的预定详细信息，如您的 PIN 码、任何可用的可选服务以及其他服务。

重要！ SIM 卡及其内容很容易因刮擦或弯折而损坏，因此，在处理、插入或移除卡时，请小心谨慎。

请将所有 SIM 卡置于儿童无法接触的地方。


说明

- 1 打开电池盖
- 2 插入 SIM 卡
- 3 关闭电池盖
- 4 充电

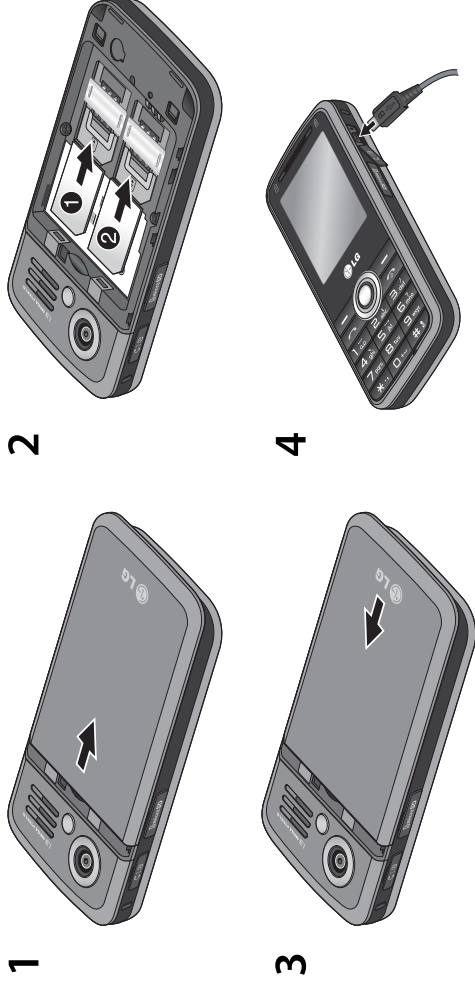

第一次使用前，请完全充电

手机部件

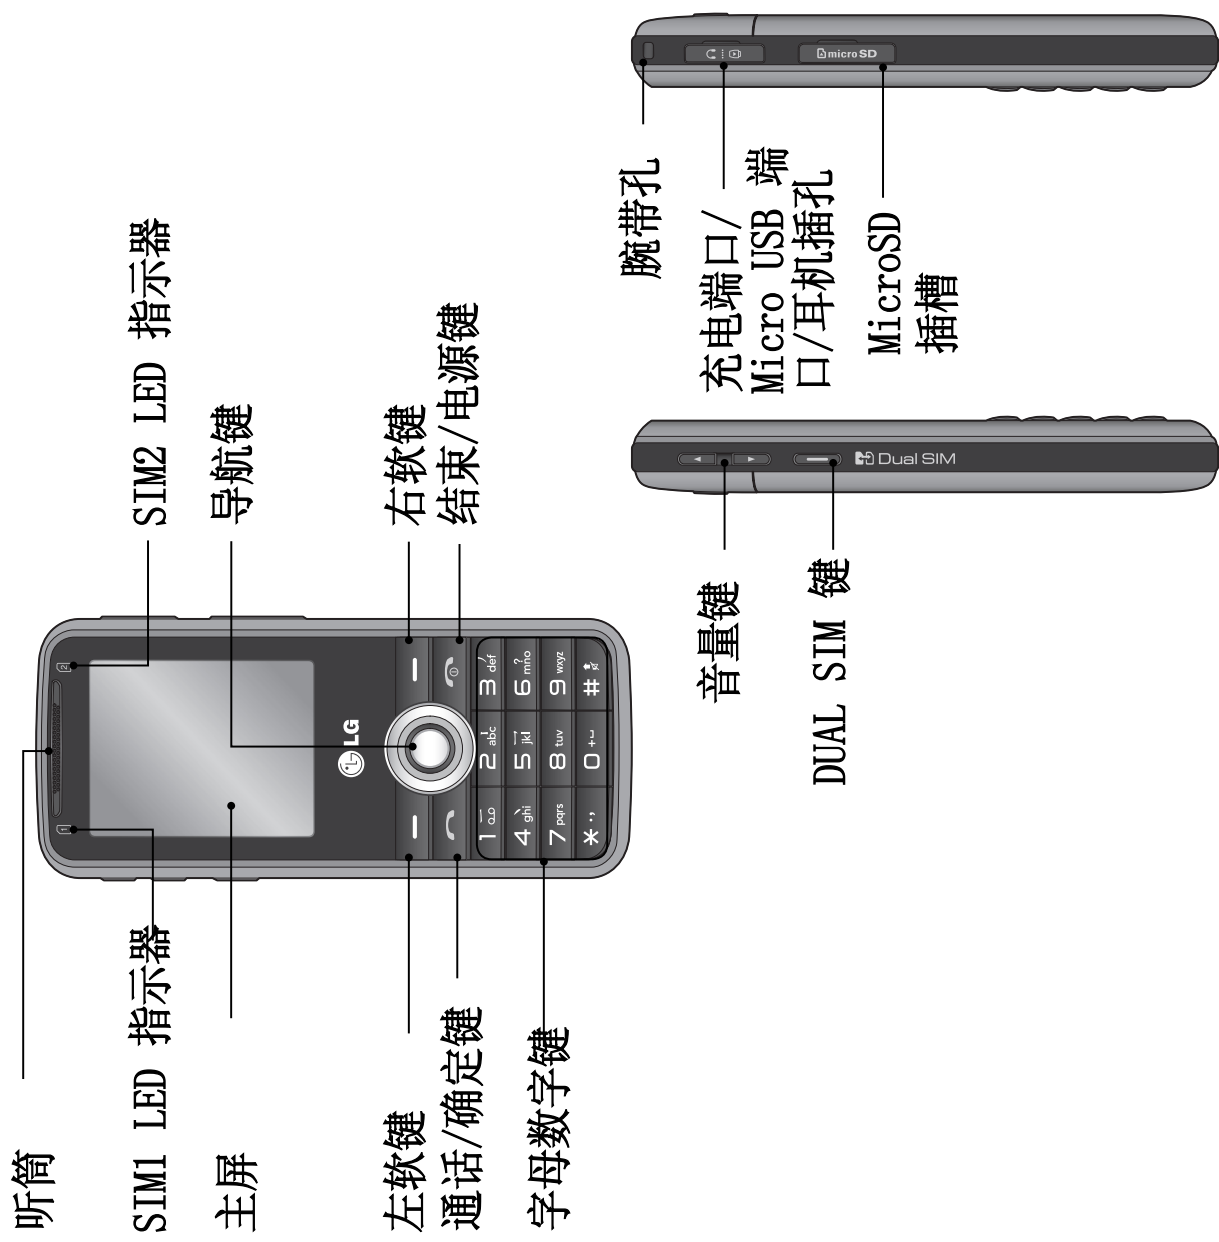

左软键/右软键：这两个按键分别执行它们上方的屏幕文字所指示的功能。

通话/确定键：用于拨打电话号码和接听来电。

开机/结束通话键：用于开机或关机、结束通话，或者返回待机模式。

导航键：用于快速访问手机功能。
字母数字键：用于在待机模式下拨打号码以及在编辑模式下输入数字或字符。

屏幕图标

图标	描述
	指示网络信号强度。
	蓝牙连接已打开。
	您的手机已锁。
	已设置闹钟。
	已使用漫游服务
	指示新文本信息。
	仅振动
	已激活“标准”情景模式。
	已激活“静音”情景模式。
	已激活“户外”情景模式。
	已激活“飞行”情景模式。
	已使用耳机设置。
	指示电池电量水平。

开机和关机

- 1 长按  [结束] 键，直到开机。
- 2 要关机，请长按  [结束] 键，直到显示关机图像。

拨打电话

- 1 在待机模式下，输入区号和电话号码。
- 2 按  [通话] 键呼叫号码。

接听电话

- 1 按  [通话] 键在手机响起时接听来电。
- 2 如果已设置“按任意键”菜单选项，则除了  [结束] 键和右软键以外，按任意键均可接听来电。

拨打国际电话

- 1 在待机模式下，长按 0 键，直到出现 +（国际前缀字符）符号。
- 2 输入国家代码、地区代码和电话号码。
- 3 按  [通话] 键拨打电话。

激活和切换 SIM 卡

本手机支持双段 SIM 卡模式，允许您同时使用两张 SIM 卡，无需更换。如果安装了两张 SIM 卡，您可以激活其中一张或同时激活两张 SIM 卡。SIM 卡切换功能使您可以选择默认 SIM 卡用于联系人、通话记录和信箱中的呼叫或信息。

- 1 从主菜单中选择 [设置]，然后选择 [双段 SIM 卡]。
- 2 选择 [SIM 卡切换] 以设置切换模式。
 - 自动：自动切换 SIM 卡。
 - 用户设置：使用上下导航键设置“默认呼叫卡”和“默认信息卡”。使用左右导航键切换要指定的 SIM 卡，然后按 [选项] 保存所需的设置。

Note:

如果仅安装了一张 SIM 卡，该 SIM 卡将默认激活。

输入文本

您可以使用手机键盘输入字母数字字符。要更改模式，请按



T9 模式

使用此模式，每个字母只需一次击键即可输入单词。键盘上的每个按键对应于多个字母。

T9 模式自动将所击按键与内部语言词典进行比较，然后确定正确的单词，因此所需的击键次数比传统的 ABC 模式要少。输入法显示在手机右上角。

指示灯	功能（智能英文模式）	指示灯	功能（智能英文模式）
T9Abc	T9 智能 Abc	Abc	Abc
T9abc	T9 智能 abc	abc	abc
T9ABC	T9 智能 ABC	ABC	ABC
123	数字		

FM 收音机（在不同地区，此功能可能有所不同。）

- 1 从主菜单中选择 [多媒体]，然后选择 [FM 收音机]。
- 2 使用导航键搜索收音机频道。您也可以按 [选项]，然后选择 [自动搜索并设定] 将自动搜索可用的收音机频道。
- 3 本手机针对 FM 收音机提供以下选项：
 - **频道列表：**通过输入频道名称和频率，最多可添加 9 个频道作为书签。
 - **手动输入：**手动输入收音机频道频率。
 - **自动搜索并设定：**自动搜索可用收音机频道，然后将其保存在频道列表中。

FM 收音机（在不同地区，此功能可能有所不同。）（续）

- **设置：**更改背景灯播放、FM 收音机皮肤、扬声器开关、录音格式为 AMR 或 WAV、音频质量和储存设置。
- **录音：**录下喜欢的电台节目。
- **附加：**恢复之前录制的文件并继续在相同文件中录制。
- **文件列表：**管理以前录制的文件。

手机防盗跟踪（LMT）

- 1 本手机的 LMT 功能为您提供跟踪系统，用于跟踪丢失或放错位置的手机。
- 2 当未经授权的用户使用您的手机时，手机便会生成一条短信并将其发送到预定义手机号码。
- 3 可通过以下步骤设置 LMT 功能：
 - 从主菜单中选择 [设置]，然后选择 [安全性]。
 - 选择 [手机丢失跟踪]
 - 设置 LMT 并选择“开”
 - 输入默认的 LMT 码

备注：

- 如果要在手机中使用其它 SIM 卡，请确保关闭 LMT。
- 建议输入带国家代码的 LMT 码（例如，印度为 +91，后接手机号码）
- 默认 LMT 码为“0000”。

如何设置铃声

您的手机提供 4 种不同的情况模式以适应不同的环境条件。在每种情况模式下，您可以设置所需的铃声和提醒类型。

- 1 从主菜单中，选择 [情景模式]。
- 2 选择所需情景模式，然后按 [选项 - 个性化] 以便设置铃声。
- 3 按 [确定]，然后可以为两张 SIM 卡分别设置所需铃声。您的手机提供以下选项供自定义铃声和提醒类型：
 - **提示类型：**选择铃声的提示类型（响铃、仅振动、振动和响铃、振动后响铃、静音）。
 - **铃声类型：**选择所需的铃声。
 - **铃声音量：**按上下导航键调节铃声的音量。
 - **短信提示类型：**选择短信提示音的提示类型（响铃一次、定期响铃、振动和响铃、仅振动、静音）。
 - **信息提示音：**选择所需的信息提示音。
 - **信息音量：**按上下导航键调节信息提示音的音量。
 - **按键音：**选择所需的按键音。
 - **按键音量：**按上下导航键调节按键音的音量。
 - **确认音量：**按上下导航键调节确认音的音量。
 - **开机/关机铃声：**选择开机/关机的不同类型的铃声。
 - **开机/关机音量：**按上下导航键调节开机/关机铃声的音量。

菜单树

- 1. 浏览器
 - 1.1 SIM1
 - 1.2 SIM2
 - 主页
 - Google Search
 - 书签
 - 输入网址
 - 历史记录
 - 设置
- 2. 通话记录
 - 2.1 所有通话时间
 - 2.2 未接来电
 - 2.3 已拨来电
 - 2.4 已接来电
 - 2.5 通话计时
 - 2.6 通话费用
 - 2.7 数据资料
- 3. 工具
 - 3.1 闹钟
 - 3.2 日历
 - 3.3 计算器
 - 3.4 备忘录
 - 3.5 任务
 - 3.6 单位换算器
 - 3.7 世界时间
 - 3.8 SIM 卡服务
 - 3.9 手电筒
- 4. 多媒体
 - 4.1 MP3 播放机
 - 4.2 相机
 - 4.3 摄像机
 - 4.4 FM 收音机
 - 4.5 FM 定时录音
 - 4.6 录音机
 - 4.7 铃声编辑器
- 5. 信息
 - 5.1 新信息
 - 5.2 收件箱
 - 5.3 草稿箱
 - 5.4 发件箱
 - 5.5 已发送
 - 5.6 收听语音邮件
 - 5.7 小区广播
 - 5.8 常用短语
 - 5.9 设置
- 6. 我的文档
 - 6.1 图像
 - 6.2 声音
 - 6.3 视频
 - 6.4 其它
 - 6.5 外部存储器
 - 6.6 游戏和应用程序
- 7. 情景模式
 - 7.1 标准
 - 7.2 静音
 - 7.3 户外
 - 7.4 飞行模式
- 8. 电话簿
 - 8.1 搜索
 - 8.2 新联系人
 - 8.3 快速拨号
 - 8.4 群组
 - 8.5 全部复制
 - 8.6 全部清除
 - 8.7 设置
 - 8.8 资料
- 9. 设置
 - 9.1 双段 SIM 卡
 - 9.2 日期和时间
 - 9.3 语言
 - 9.4 显示
 - 9.5 快捷键
 - 9.6 虚拟呼叫
 - 9.7 通话
 - 9.8 安全设置
 - 9.9 连接
 - 9.10 省电
 - 9.11 恢复出厂设置
 - 9.12 内存状态

快速功能参考

浏览器菜单 1

- **主页：**选择此项可加载浏览器开始页面（其内容取决于服务提供商）。
- **Google Search：**通过 Google Search可以访问您的 Google Search以及所有主要提供商的电子邮件帐户。
- **书签：**使用此菜单保存 URL 地址。
- **输入网址：**直接键入 URL 地址。
- **历史记录：**查看最近访问过的页面。
- **设置：**您可以将手机设置为开机时自动注册 GPRS 网络。

通话记录 菜单 2

仅当网络支持服务区内的主叫线路识别（CLI）时，您才能检查未接来电、已接来电和已拨电话。

屏幕上显示电话号码和姓名（如果有）以及通话日期和时间。您还可以查看通话时间。

- **所有通话：**按时间显示所有三种类型（已接来电/已拨电话/未接来电）的列表。
- **未接来电：**用于查看最后 50 个未接来电。
- **已拨电话：**用于查看最后 50 个去电（已拨出或尝试拨出）。
- **已接来电：**用于查看最后 50 个已接来电。
- **通话时间：**用于查看来电和去电的通话持续时间。
- **通话费用：**检查最后通话、全部通话的费用，并重设费用。
- **数据信息：**通过 GPRS 信息选项查看在网络上传输的数据总量。

工具 菜单 3

- **闹钟:** 用于设置五种闹钟之一。 当您选择一个闹钟进行设置时, 当前时间显示在屏幕右上角。 当到达闹钟时间时, 屏幕上将显示闹钟图表, 闹钟响起。
- **日历:** 您可以检查追踪天或月日程表。
- **计算器:** 包含加、减、乘、除等标准功能。
- **备忘录:** 您可以创建一个任务列表。
- **任务:** 您可以检查从日历选项添加的所有任务。
- **单位换算:** 此功能用于将任一度量值转换成所需的单位。
- **世界时钟:** 允许您确定另一个时区或者国家的当前时间。
- **SIM 卡服务:** 显示您的网络服务提供商提供的其他功能或应用。
- **手电筒:** 在黑暗中屏幕可以充当手电筒。

多媒体 菜单 4

- **MP3 播放器:** 欣赏手机中的 MP3 音乐文件。
- **相机:** 使用内置相机拍照, 并调节其设置。
- **摄像机:** 用于通过内置相机录制视频剪辑并调节其设置。
- **FM 收音机:** 可以收听 FM 收音机频道。
- **FM 定时录音:** 用于预设定 FM 广播节目的录制。
- **录音机:** 用于录制语音备忘录。
- **铃声编辑器:** 用于编辑铃声信号或铃声。

信息 菜单 5

- **新信息：**用于写新短信或彩信。
- **收件箱：**用于查看已保存的信息。
- **草稿箱：**用于查看尚未发送的信息。
- **发件箱：**用于查看要发送或发送失败的信息。
- **发出的信息：**用于查看已发送的信息，包括时间和内容。
- **收听语音邮件：**提供访问语音邮箱的快速方法（如果服务提供商提供语音邮箱）。
- **小区广播：**小区广播信息是通过网络发送到您的手机的文本信息。
- **常用语：**列表中有预定义的信息。 您可以查看和编辑模板信息或创建新的信息。
- **设置：**用于设置服务提供商的功能。

我的文档 菜单 6

- **图像：**此文件夹保存您的所有图像文件。
- **声音：**此文件夹保存您的所有音频文件。
- **视频：**此文件夹保存您的所有视频剪辑文件。
- **其它：**此文件夹主要用于将文件从电脑传输到您的手机。 外部存储器：允许您查看存储卡中的“图像”、“声音”、“视频”、“文档”和“其它”文件夹
- **游戏和应用程序：**显示手机中可用的默认游戏和应用程序列表。

情景模式 菜单 7

- **标准:** 激活此情景模式后,  指示符将显示在待机屏幕的左上角。
- **静音:** 铃声音量和振动器均设为关。激活此情景模式后,  指示符将显示在待机屏幕的左上角。
- **户外:** 铃声和按键音量设置为最大音量。激活此情景模式后  指示符将显示在待机屏幕的左上角。
- **飞行模式:** 用手机的无线和无线电功能, 这样您就可以安全地使用手机的非无线功能 (例如多媒体、工具或游戏等)。激活此情景模式后,  指示符将显示在待机屏幕的左上角。

电话簿 菜单 8

- **搜索:** 您可以在电话簿中搜索联系人。

注: 可以通过输入要搜索的姓名的第一个字母进行即时搜索。

- **新建联系人:** 您可以添加电话簿条目。
- **快速拨号:** 为联系人号码分配 2 到 9 的一个按键, 在待机模式下长按分配的键即可呼叫该电话号码。
- **群组:** 手机中有七个默认群组。使用群组功能, 您可以同时将一条信息发送给群组中的所有成员。
- **全部复制:** 您可以将 SIM 卡内存中的所有条目复制到手机内存, 也可以从手机内存复制到 SIM 卡内存。
- **全部删除:** 您可以删除 SIM 卡内存或手机内存中的所有条目。
- **设置:** 可以将查看选项设置为“姓名和号码”或“图片电话本”。
- **信息:**
 - › **服务号码:** 安全访问服务提供商指定的服务号码列表。
 - › **本机号码:** 您可以在 SIM 卡中保存和检查您自己的号码。
 - › **我的名片:** 您可以创建自己的名片, 其中包含您的姓名、手机号码、电子邮件地址等。

设置 菜单 9

- **双段 SIM 卡:** 可以分别设置两张 SIM 卡的属性。
- **日期和时间:** 您可以设置与日期和时间相关的功能。
- **语言:** 您可以更改手机中显示文本的语言。此更改还将影响语言输入模式。
- **显示:** 用于个性化显示设置, 包括墙纸、时钟、背景灯计时器等。
- **快捷键:** 用于定制导航键上的快捷方式。
- **虚拟呼叫:** 您可以设置为在指定时间收到虚拟呼叫。
- **呼叫:** 您可以设置与呼叫相关的菜单。
- **安全性:** 可以设置 PIN 码、自动键盘锁、手机锁、手机防盗跟踪等功能, 使您的手机更安全。
- **连接:** 可以用“蓝牙”连接将您的手机连接到其它电子设备。
- **省电:** 如果将此功能设置为“开”, 可以在不使用手机时节省用电。恢复出厂设置: 用于将整部手机恢复到出厂默认值, 或者删除手机上保存的所有文件。
- **内存状态:** 您可以检查各个存储器的可用空间和存储器使用率。

关于安全有效使用手机的准则

请阅读以下简单的准则。忽视这些准则可能造成危险或者触犯法律。本手册中给出了进一步的详细信息。

警告

为了您的安全，请仅使用指定的原装电池和充电器。

- 在任何有特殊条例要求的区域关闭手机，例如，在医院中，因为它可能影响医疗设备。
- 应按照相关条例处置电池。

产品保养和维护

警告！ 仅使用经核准为用于此特定手机型号的电池、充电器和配件。使用任何其它类型可能导致适用于此手机的许可或保修失效，并可能造成危险。

- 不要拆解本机。当需要维修时，请将手机送往合格的服务技术人员处。
- 远离诸如暖气片或燃气灶之类的热源。
- 使用干布清洁手机外壳。（不要使用任何溶剂。）
- 不要将手机放在信用卡或卡车票旁边，它可能会影响磁条上的信息。

关于安全有效使用手机的准则（续）

电子设备

所有手机都可能受到干扰，这种干扰会对性能造成影响。

- 在未经允许的情况下，不得在医疗装置附近使用手机。不要将手机放在心脏起搏点上，如：胸前的口袋内。

行车安全

查阅有关在驾驶时使用手机的本地法律法规。

- 不要在驾驶时使用手持式手机。
- 如果有免提装置，请使用免提装置。
- 如果行驶条件需要，请在拨打或接听电话之前将车辆驶离道路并停车。

爆破区域

不要在正在进行爆破的地区使用手机。

请依照有关限制，并遵守任何规章或规定。

易爆环境

不要在加油站内使用手机。

不要在靠近燃料或化学制品处使用手机。

在飞机上

无线设备可能对飞机造成干扰。

- 登机前，请关机。

关于安全有效使用手机的准则（续）

儿童

将手机放在儿童接触不到的安全地方。

手机中包含细小零件，如果脱落可能导致窒息危险。

紧急电话

并非在所有蜂窝网络中均可使用紧急呼叫。因此，您不应仅依赖于手机的紧急呼叫功能。请向本地的服务提供商核准。

电池信息及保养

- 您无需在再次充电前对电池进行完全放电。与其它电池系统不同，本机电池不有可能影响电池性能的记忆效应。
- 只能使用 LG 电池和充电器。LG 充电器设计为最大程度地延长电池使用寿命。
- 不要拆解电池组或将其短路。
- 当电池不再提供合乎要求的性能时，请更换电池。在需要更换之前，电池组可以反复充电数百次。
- 不要将电池充电器暴露在直射阳光下，也不要放在诸如浴室之类的高湿环境中使用。
- 如果用不当的电池进行替换，可能有爆炸危险。
- 请按制造商的说明处置用过的电池。

关于安全有效使用手机的准则（续）

暴露射频能量之下

无线电波暴露和“特定吸收率”（SAR）信息。

此款手机已设计为遵守有关适用的无线电波暴露安全要求。

此要求基于相关的科学准则，其中包括为确保所有人员（无论年龄和健康状况）安全而设计的安全裕量。

- 无线电波暴露准则采用一种称为“特定吸收率”或 SAR 的测量单位。SAR 测试是在所有用到的频带中以手机的最高认可功率电平进行发射时使用标准化方法执行的。
- 不同的 LG 手机型号可能有不同的 SAR 能级，但它们均符合相关的无线电波暴露准则。
- 国际非电离辐射防护委员会（ICNIRP）建议的 SAR 上限值为：每十（10）克重的人体组织吸收的能量平均值不超过 2W/kg。
- 由 DASY4 对该型号手机进行的测试，人耳能够承受的 SAR 最大值为 [0.870/ 0.988] W/kg (10 克)。
- 电气电子工程师协会（IEEE）建议的 SAR 上限值为：每 1 克重的人体组织吸收的能量平均值不超过 1.6W/kg，此 SAR 数据适用于各个国家/地区的居民。

故障排除

问题	可能的解决方案
手机无法打开	请取出电池，重新插入。然后，按结束/电源键开机。
电池电量空	为电池充电。查看显示屏上的充电指示器。
电池无法正确充电或手机有时会自动关机	使用干净柔软的布擦拭手机和电池充电触点。
电池的使用时间缩短	如果电池使用时间缩短，可能是由于使用环境、通话音量过高或信号微弱等因素造成。
充电错误 - 温度超出范围	确保外部环境温度适当，稍等片刻，然后重新充电。
充电错误 - 充电器错误	请仅使用原装 LG 配件。
充电错误 - 电池故障	替换电池。
充电错误 - 充电时不显示电池图标	电池为空或长时间未使用。 可能需要一段时间，屏幕上才会显示电池图标。
忘记手机密码	默认手机码为“0000”。
输入 PUK 码	PIN 码连续三次输入不正确，话机已锁。请输入服务提供商提供的 PUK 码。
无网络	您所在区域可能信号较弱。请移到其它区域并重试。 您正在尝试访问服务提供商未订阅的选项。有关详情，请与服务提供商联系。
You have entered a number but it was not dialed	请确保您已按通话/确定键。 请确保您访问的是正确的网络服务。 请确保您未设置拨出电话限制选项。 请确保您已输入区号。
您的联系人无法接通您的电话	请确保手机已开机。 按通话/确定键超过一秒钟。 请确保您正在访问网络服务。 请确保您未设置呼叫阻截选项。

故障排除（续）

问题	可能的解决方案
您的联系人无法听到您的声音	请确保您已关闭扬声器。 请确保您将手机放在嘴边较近位置。 麦克风位于手机底部。
通话声音质量较差	检查显示屏上的信号指示符。 栏数表示信号强度。 如果您位于某大楼内，请将手机轻轻移至窗户旁边。
当拨打联系人电话时，未拨出任何号码	使用电话簿搜索功能确保号码储存正确。 如有必要，重新保存号码。
无法使用浏览器	您的订阅未包括数据权限。 您需要联系您的服务提供商才能使用此服务。
如果以上指南无法帮助您解决问题	请记住手机型号，然后对问题进行简单说明。 请联系您的手机经销商或 LG 服务中心以获得帮助。

技术参数

标准

产品名称: GX200

系: E-GSM850/GSM900/DCS1800/PCS1900

外部环境

最高: +55° C (放电) +45° C (充电)

最低温度 : -10° C

GX200 User Guide - English

This guide will help you understand your new mobile phone. It will provide you with useful explanations of features on your phone.

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.




Installing the SIM Card and Charging the Battery

When you subscribe to a cellular network, you are provided with a SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.


Important! › The SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.

Illustrations

- 1 Open the battery cover
- 2 Insert your SIM card
- 3 Close the battery cover
- 4 Charge your battery

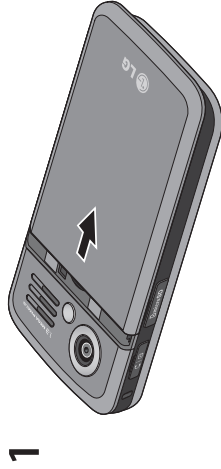

2

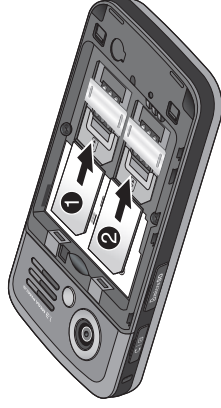

3




4



Fully Charge the battery before using it for the first time

Phone Components

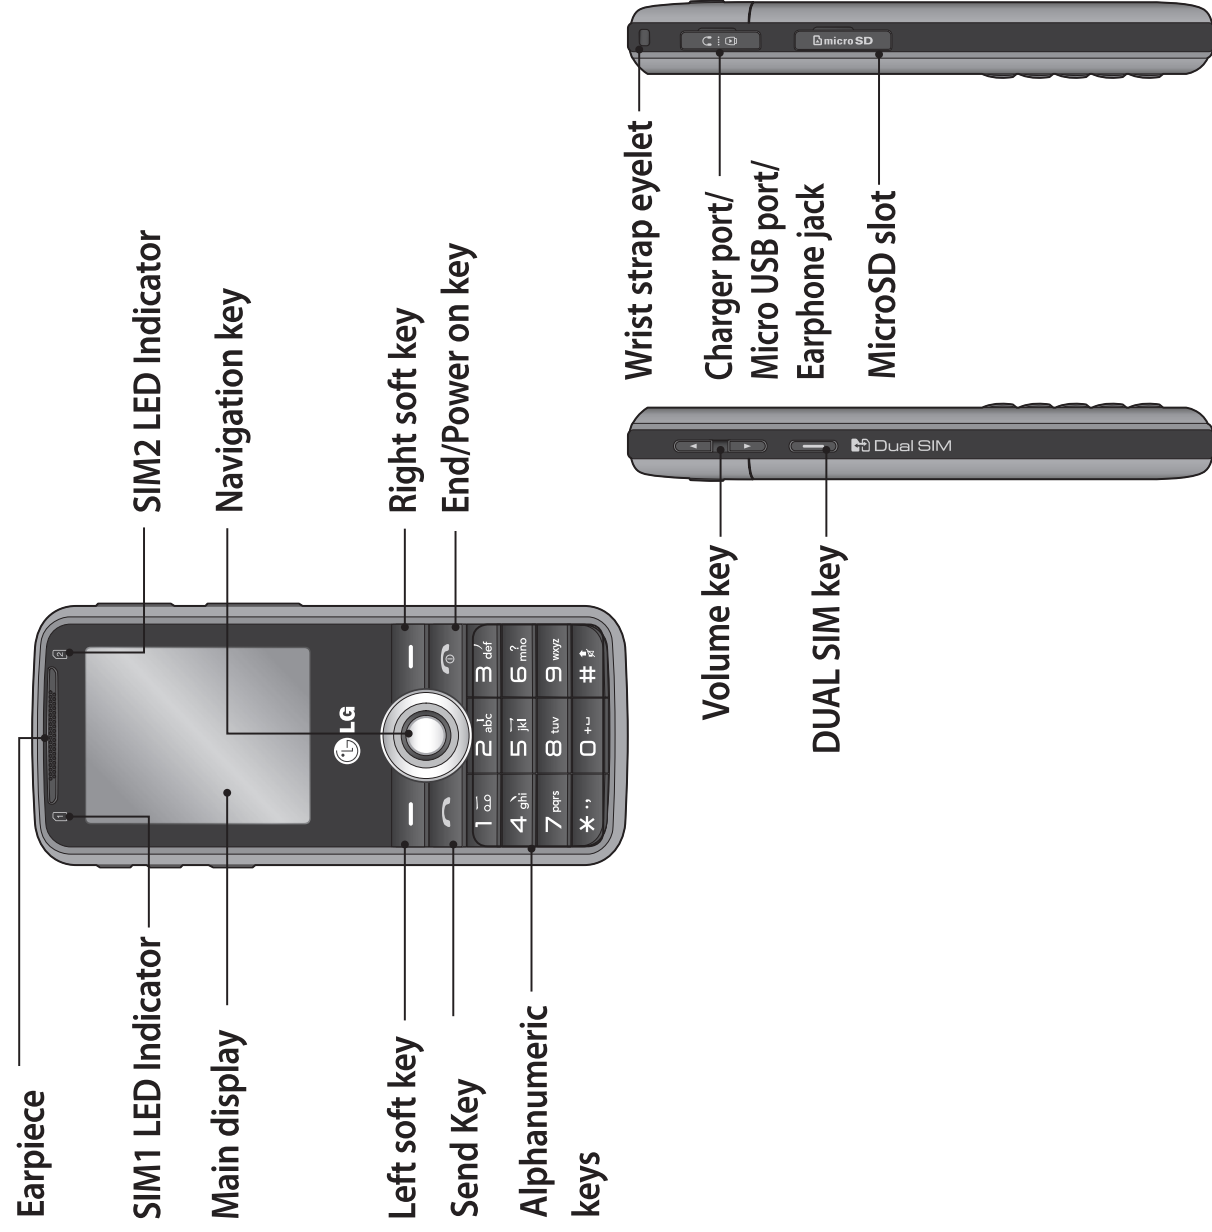

Left soft key and Right soft key:

Each of these keys performs the functions indicated by the text on the display immediately above them.

Send Key: You can dial a phone number and answer incoming calls.

End/ Power on key: Allow you to power the phone on or off, end calls, or return to Standby Mode.

Navigation key: Use for quick access to phone functions.

Alphanumeric keys: Dial a number in standby mode and input numbers or characters in edit mode.

On-Screen Icons

Icon	Description
	Tells you the strength of the network signal.
	Bluetooth connectivity is powered on.
	Your phone is locked.
	The alarm clock is set.
	Roaming service is used
	Indicates new text message(s).
	The normal profile is activated.
	The silent profile is activated.
	The outdoor profile is activated.
	The flight mode profile is activated.
	The headset setting is used.
	Indicates the battery charge level.

Turning Your Phone On and Off

- 1 Hold down the  [End] key until the phone switches on.
- 2 To switch the phone off, hold down the  [End] key until the power-off image displays.

Making a call

- 1 In the standby mode, enter the area code and the phone number.
- 2 Press the  [Send] key to call the number.

Answering a call

- 1 Press the  [Send] key to answer the call when the phone rings.
- 2 If the Any Key menu option has been set, any key press will answer a call except for the  [End] key or the right soft key.

Making an international call

- 1 In the standby mode, long press the 0 key until a + (international prefix character) sign is displayed.
- 2 Enter the country code, the area code, and the phone number.
- 3 Press the  [Send] key to call.

Activating and switching SIM cards

Your phone supports the Dual SIM cards mode, enabling you to use two SIM cards at the same time without changing them. When there are two SIM cards installed, you can activate one of two or both SIM cards. The SIM Switching function allows you to select the default SIM card for call or message in Contact, Call logs and Message box.

- 1 Select [Settings] from the main menu, and then select [Dual SIM].
 - 2 Select [SIM Switching] to set the switching mode.
 - Auto: SIM card is switched automatically.
 - User setting: Use the up and down navigation key to set Default calling by and Default messaging by.
- Use the left and right navigation key to switch the SIM card you want to assign and press [Options] to save your desired setting.

Note:

If there is only one SIM card installed, this SIM card would be activated as default.

Entering Text

You can enter alphanumeric characters by using the keypad. To change modes, press the  key.

T9 Mode

This mode allows you to enter words with only one keystroke per letter. Each key on the keypad has more than one letter. The T9 mode automatically compares your keystrokes with an internal linguistic dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional ABC mode. The input method is display at the upper right corner of your phone.

Indicator	Function (English Smart mode)	Indicator	Function (English Smart mode)
T9 ABC	T9 Smart Abc	ABC	Multitap Abc
T9 abc	T9 Smart abc	abc	Multitap abc
T9 ABC	T9 Smart ABC	ABC	Multitap ABC
123	Numeric		

FM Radio (This function may be different in different regions.)

- 1 Select [Multimedia] from the main menu, and then select [FM radio].
- 2 Use the navigation key to search for radio channels. You can also press [Options] and select [Preset auto search] to automatically search for available radio channels.
- 3 Press [Options] to edit the channel list. Your phone provides the following options for FM radio:
 - Channel list: Bookmark up to 9 radio channels by entering the channel name and frequency.
 - Manual input: Key in the radio channel frequency manually.
 - Preset auto search: Automatically search for available radio channels and store them to the channel list.

FM Radio (This function may be different in different regions.) (Continued)

- Settings: Change the background play, the skin of FM radio, the switch of loud speaker, the record format as AMR,AWB or WAV, the audio quality, and the record storage.
- Record: Record your favorite radio programs.
- Append: Resume the previous recorded file and continue to record at the same file.
- File list: Manage the previous recorded files.

Anti-theft mobile tracker[ATMT]

- 1 The ATMT function provides you with the ability to have a tracking system in place for your phone in case you lose or misplace it.
- 2 When an unauthorized person uses your phone, a SMS is triggered from your phone and the message is sent to your pre-defined phone number.
- 3 You can set the ATMT function by the following steps:
 - Select [Settings] from the main menu, and then select [Security].Anti-theft mobile tracker(ATMT) (Continued)
 - Select [Anti-theft mobile tracker]
 - Set ATMT and select ON
 - Enter default ATMT code

Note:

- › In case you want to use your phone with some other SIM card, make sure to set the ATMT OFF.
- › It is recommended to enter the Number for ATMT with the country code (e.g. for Hongkong +852 followed by phone number)
- › Default ATMT code is "0000".

How to set the tone

Your phone provides 4 different profiles to adapt to different environmental conditions. In each profile, you can set the desired ring tones and alert types.

- 1 Select [Profiles] from the main menu.
- 2 Select a profile and press [Options - Personalise] to set the ring tone.
- 3 Press [OK] and then you can set the desired ring tone respectively for two SIM cards. Your phone provides the following options to customize ring tones and alert types:
 - Call alert type: Select an alert type (Ring, Vibrate, Ring & Vibrate, Ring after vibrate, Silent) for ring tone.
 - Ring tones: Select desired ring tone.
 - Ring Volume: Adjust the volume of ring tone by pressing the up/down navigation keys.
 - Message alert type: Select an alert type (Ring Once, Ring Periodically, Ring & Vibrate, Vibrate, Silent) for message alert tone.
 - Message tones: Select desired message alert tone.
 - Message volume: Adjust the volume of message alert tone by pressing the up/down navigation keys.
 - Keypad tones: Select desired keypad tone.
 - Keypad volume: Adjust the volume of keypad by pressing the up/down navigation keys.
 - Effect sound volume: Adjust the volume of effect sound by pressing the up/down navigation keys.
 - Power on/off tones: Select different types of ring tone for power on/off.
 - Power on/off volume: Adjust the volume of Power on/off tone by pressing the up/down navigation keys.

Menu Tree

- 1. Browser**
 - 1.1 SIM1
 - 1.2 SIM2
 - Home
 - Google Search
 - Bookmarks
 - Enter address
 - History
 - Settings
- 2. Call logs**
 - 2.1 All calls
 - 2.2 Missed calls
 - 2.3 Dialled calls
 - 2.4 Received calls
 - 2.5 Call duration
 - 2.6 Call costs
 - 2.7 Data information
- 3. Tools**
 - 3.1 Alarm clock
 - 3.2 Calendar
 - 3.3 Calculator
 - 3.4 Memo
 - 3.5 To do
 - 3.6 Unit converter
 - 3.7 World clock
 - 3.8 SIM services
 - 3.9 Torch
- 4. Multimedia**
 - 4.1 MP3 player
 - 4.2 Camera
 - 4.3 Video camera
 - 4.4 FM radio
 - 4.5 Schedule FM record
 - 4.6 Voice recorder
 - 4.7 Melody composer
- 5. Messaging**
 - 5.1 New message
 - 5.2 Inbox
 - 5.3 Drafts
 - 5.4 Outbox
 - 5.5 Sent
 - 5.6 Listen to voicemail
 - 5.7 Info message
 - 5.8 Templates
 - 5.9 Settings
- 6. My stuff**
 - 6.1 Images
 - 6.2 Sounds
 - 6.3 Videos
 - 6.4 Others
 - 6.5 External memory
 - 6.6 Games & Apps
- 7. Profiles**
 - 7.1 Normal
 - 7.2 Silent
 - 7.3 Outdoor
 - 7.4 Flight Mode
- 8. Contacts**
 - 8.1 Search
 - 8.2 New contact
 - 8.3 Speed dials
 - 8.4 Groups
 - 8.5 Copy all
 - 8.6 Delete all
 - 8.7 Settings
 - 8.8 Information
- 9. Settings**
 - 9.1 Dual SIM
 - 9.2 Date & Time
 - 9.3 Languages
 - 9.4 Display
 - 9.5 Shortcut
 - 9.6 Fake call
 - 9.7 Call
 - 9.8 Security
 - 9.9 Connectivity
 - 9.10 Power save
 - 9.11 Reset
 - 9.12 Memory status

Quick feature reference

Browser Menu 1

- **Home:** Select this to load browser start page (the content depends on the service provider).
- **Google Search:** Through Google Search you can access your Google Search and email accounts from any major provider.
- **Bookmarks:** Use this menu to save URL addresses.
- **Enter address:** Key in the URL address directly.
- **History:** View the recent pages you have visited.
- **Settings:** Set the phone to automatically register a GPRS network when you switch the phone on.

Call logs Menu 2

You can check the record of missed, received, and dialed calls only if the network supports the Calling Line Identification (CLI) within the service area. The number and name (if available) are displayed together with the date and time at which the call was made. You can also view call durations.

- **All calls:** Display all the lists of three types (Received/Dialled/Missed calls) by time.
- **Missed calls:** Allow you to view the last 50 unanswered calls.
- **Dialled calls:** Allow you to view the last 50 outgoing calls (called or attempted).
- **Received calls:** Allow you to view the last 50 incoming calls.
- **Call duration:** Allow you to view the duration of your incoming and outgoing calls.
- **Call costs:** Check the cost of your last call, all calls, and reset the cost.
- **Data information:** Check the total of data transferred over the web through GPRS information option.

Tools Menu 3

- **Alarm clock:** Allow you to set one of five alarms. The current time is displayed at the upper right corner of the screen when you select an alarm to set. At the alarm time, the Alarm animation will be displayed on the screen and the alarm will sound.
- **Calendar:** You can check track of daily or monthly schedules.
- **Calculator:** This contains the standard functions such as Addition, Subtraction, Multiplication and Division.
- **Memo:** You can create a list of memos.
- **To do:** You can check all of the tasks you've added
- **Unit converter:** This converts any measurement into a unit you want.
- **World clock:** Allow you to determine the current time in another time zone or country.
- **SIM services:** Display additional functions or applications provided by your network service provider.
- **Torch:** You can let the screen be your torch in the dark.

Multimedia Menu 4

- **MP3 player:** Listen to MP3 music files on your phone.
- **Camera:** Take pictures through built-in camera and adjust its setting.
- **Video Camera:** Allows you to record video clip through built-in camera and adjust its setting.
- **FM radio:** Listen to FM radio channel.
- **Schedule FM record:** Allow you to pre-schedule FM radio recording.
- **Voice recorder:** Allow you to record voice memo.
- **Melody composer:** Allow you to compose a ring signal or melody.

Messaging Menu 5

- **New message:** Allow you to write a new SMS or MMS message.
- **Inbox:** Allow you to view the messages that have been saved.
- **Drafts:** Allow you to view the messages that have not been sent.
- **Outbox:** Allow you to view the messages which are about to be sent or have failed to be sent.
- **Sent:** Allow you to view the messages which have already been sent, including the content.
- **Listen voice mail:** Provide you with a quick way of accessing your voice mailbox (if provided by your service provider).
- **Info message:** Info service messages are text messages delivered by the network to your phone.
- **Templates:** There are pre-defined messages in the list. You can view and edit the template messages or create new messages.
- **Settings:** Allow you to set features of your service provider.

My Stuff Menu 6

- **Images:** This folder saves all of your image files.
- **Sounds:** This folder saves all of your audio files.
- **Videos:** This folder saves all of your video clip files.
- **Others:** This folder is mainly used for transporting files from PC to your phone.
- **External memory:** Allows you to view Images, Sounds, Videos, Documents and Others in memory card.
- **Games & Apps:** Display the list of default games and applications available in the phone.

Profiles Menu 7

- **Normal:** After activating this profile, the  indicator will be displayed on the standby screen.
- **Silent:** Ring tone and vibrator is set to be off. After activating this profile, the  indicator will be displayed on the standby screen.
- **Outdoor:** Ring tone and key tone volume is set to maximum. After activating this profile, the  indicator will be displayed on the standby screen.
- **Flight mode:** Wireless network of your phone is disabled, so you can safely use the non-wireless functions of your phone (such as multimedia, tools, or games...ext.). After activating this profile, the  indicator will be displayed on the standby screen.

Contacts Menu 8

- **Search:** You can search for contacts in your phonebook.
- Note:** Instant searching is available by inputting the initial letter of the name you want to search.
- **New contact:** You can add entries into your phonebook.
- **Speed dials:** Assign the contact number to one of the keys between 2 and 8. You can call the phone number by long pressing the assigned key in standby mode.
- **Groups:** There are seven default groups on the phone. With Groups function, you can send a message to all members of a group at the same time.
- **Copy all:** You can copy all entries from SIM card memory to Phone memory and also from Phone memory to SIM card memory.
- **Delete all:** You can delete all entries from SIM card memory or Phone memory.
- **Settings:** You can set the view options in Name only, Name & Number or With Picture.

Contacts Menu 8 (Continued)

- **Information:**
 - › **Service dial number:** Access the list of service numbers assigned by your service provider safely.
 - › **Own number:** You can save and check your own numbers in SIM card.
 - › **My business card:** Allow you to create your own business card featuring your name, mobile phone number, e-mail address and so on.

Settings Menu 9

- **Dual SIM:** You can set the properties respectively for two SIM cards.
- **Date & Time:** You can set the functions relating to the date and time.
- **Languages:** You can change the language for the display texts in your phone. This change will also affect the Language Input mode.
- **Display:** Allow you to personalize display setting, including Wallpaper, Clocks, Backlight Timer and so on.
- **Shortcut:** Allow you to customize your shortcuts on the navigation keys.
- **Fake call:** You can set the functions to receive a fake call at a specified time.
- **Call:** You can set the menu relating to a call.
- **Security:** You can have the phone more safely by setting PIN code, Auto key lock, Handset lock, Anti-theft mobile tracker and so on.
- **Connectivity:** You can use Bluetooth connectivity to connect your phone with other electronics devices.
- **Power Save:** This function allows you to save battery power by reducing backlight brightness level and set backlight timer to minimum.

Note: When select night mode only, power saving will be activated from 9pm to 6am

•Reset:

- 1.**Reset settings:**Allow you to reset the entire phone to its factory
 - 2**Reset handset memory:**delete all the files saved on your phone memory.
 - 3.**Reset all:** Allow you to reset the entire phone to its factory defaults or delete all the files saved on your phone.
- **Memory status:** You can check free space and memory usage of each repository.

Guidelines for safe and efficient use

Please read these simple guidelines. Ignoring them may be dangerous or illegal. Further detailed information is given in this manual.

Warning

For your safety, use ONLY specified ORIGINAL batteries and chargers.

- Switch off the phone in any area where required by special regulations, e.g. in a hospital where it may affect medical equipment.
- Batteries should be disposed off in accordance with relevant legislation.

Product care and maintenance

WARNING! Only use batteries, chargers and accessories approved for use with this particular phone model.

The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- The unit should be kept away from heat sources such as radiators or cookers.
- Use a dry cloth to clean the exterior of the unit. (Do not use any solvents.)
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.

Guidelines for safe and efficient use (Continued)

Electronic devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over a pacemaker, i.e. in your breast pocket.

Road safety

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- Do not use a hand-held phone while driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

Do not use the phone at a refueling point. Do not use near fuel or chemicals.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn off your mobile phone before boarding any aircraft.

Guidelines for safe and efficient use (Continued)

Children

Keep the phone in a safe place out of children's reach. It includes small parts which if detached may cause a choking hazard.

Emergency calls

Emergency calls may not be available under all cellular networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times before it needs to be replaced.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- Risk of explosion if battery is replaced by an incorrect type.
- Dispose off used batteries according to the manufacturer's instructions.

Guidelines for safe and efficient use (Continued)

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information
This mobile phone model has been designed to comply with applicable safety requirement for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to ensure safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardized methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the international Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over ten (10) gram of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear/body is [0.870 / 0.988] W/kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE) is 1.6 W/kg averaged over one (1) gram of tissue.

Troubleshooting

Problem	Possible Solution
Telephone cannot be switched on	Please take out battery and insert again. Then press End/ Power on key to power on the phone.
Battery empty	Charge battery. Check charging indicator on display.
The battery doesn't charge properly or the phone sometimes turns itself off	Wipe the charging contacts, both on the phone and on the battery, with a clear soft cloth.
Usage time of battery becomes shorter	If the battery time is short, it may be due to the user environment, a large volume of calls, or weak signals.
Charging error—Temperature out of range	Make sure the ambient temperature is right, wait for a while, and then charge again.
Charging error—Wrong charger	Only use original LG accessories.
Charging error—Battery defective	Replace battery.
Charging error—No battery icon appears when charging	The battery is empty or has been not used for a long time. It may take a while before the battery icon appears on the screen.
Forgot the phone code or password	The default phone code is "0000".
Enter PUK	The PIN code has been entered incorrectly three times in succession, and the phone is now blocked. Enter the PUK supplied by your service provider.
Loss of Network	You may be in a weak signal area. Move and try again. You are trying to access an option for which you have no subscription with your service provider. Contact the service provider for further details.

Troubleshooting (Continued)

Problem	Possible Solution
You have entered a number but it was not dialed	Be sure that you have pressed Send key. Be sure that you have accessed the right network service. Be sure that you have not set an outgoing call barring option. Be sure that you have entered the area code.
Your correspondent cannot reach you	Be sure that your phone is switched on. Press Send/Call key for more than one second. Be sure that you are accessing the network service. Be sure that you have not set an incoming call barring option.
Your correspondent cannot hear you speaking	Be sure that you have switched off the loud-speaker. Be sure that you are holding the phone close enough to your mouth. The microphone is located at the bottom of the phone.
The voice quality of the call is poor	Check the signal strength indicator on the display. The number of bars indicates the signal strength. Try moving the phone slightly or moving closer to a window if you are in a building.
No number is dialed when you recall a contact	Use the Phonebook Search feature to ensure the number has been stored correctly. Resave the number, if necessary.
Cannot use the Browser	Your subscription does not include data capability. You will need to contact your service provider to enable the service.
If the above guidelines do not help you to solve the problem	Take note of the model number of your mobile phone and a clear description of the problem. Contact your phone dealer or LG Service Center for help.

Technical data

General

Product name : GX200

System : E-GSM850/GSM900/DCS1800/PCS1900

Ambient Temperatures

Max : +55°C (discharging) +45°C (charging)

Min : -10°C



Warranty Card 產品保用證

Mobile Phone 手提電話

服務承諾

- 服務員親切熱情的服務態度
- 多用途互動訊息系統
- 完善售後服務，提供專業的保養服務
- 為客戶介紹及推薦最新產品
- 有效率和快捷的服務
- 不斷創新產品，給客戶無限驚喜

Warranty Card

產品保用證

LG Customer Care Centre

客戶維修服務中心



LG

Life's Good

**Welcome to contact for detailed information
& Customer Care Centre address**

歡迎致電查詢詳細資料及維修服務中心地址

Customer Service Hotline 客戶服務熱線 : (852) 3543 7777

E-mail Us 客戶查詢電郵

: cshelpdesk@lge.com

LG Website 瀏覽網站

: hk.lge.com

**Thank you for your purchase of LG Electronics product under the terms
and conditions listed on this warranty card.**

多謝閣下購買及使用本公司之產品，請參閱保用證所列之產品保用條款。

IMPORTANT : Please keep and present this warranty card and purchase invoice when services are rendered.

Otherwise, this warranty will be voided.

重要事項：顧客請保留此保用證和購貨發票，並需在檢查／維修時出示，否則保用無效。

Mobile Phone Warranty Policy

手提電話保用條款

- (1) LG Electronics Hong Kong Limited (hereafter LGEHK) provides warranty period from the date of purchase as follows and only valid for mobile purchase in Hong Kong only (any promotion gift item is not included) :
 - (i) Handset : 12 months (ii) Charger : 6 months
 - (iii) Battery : 6 months (iv) Hand free earphone : 3 months.
- (2) Warranty is valid only for authorized product; parallel import and counterfeit product are invalid.
- (3) Product is under warranty against manufacturing defects by reason of faulty workmanship or internal electronic parts materials.
This warranty does not cover defects arising from natural wear of the product (including casing, key pad, display, antenna, and accessories. etc.)
- (4) If check-up or repairing are required, customer must present the original invoice and warranty card on which the relevant IMEI number was printed. Upon any failure to present the above documentation, customer must pay for the costs of the services provided.
- (5) All parts replaced within the warranty period are the property of LGEHK. We have rights to handle those parts as necessary.
- (6) Data stored in handsets may be lost after the repair and thus should be properly stored by customer beforehand.
- (7) Warranty will be voided under the following conditions, and LGEHK reserves the right to refuse providing service and/or shall demand charges for any costs of servicing from customer :
 - (i) Product has been tampered with or undergone unauthorized repair by third parties, improper installation, alternation or modification to this product, or damage, tearing, removal of the warranty sticker that is affixed to this product.
 - (ii) Defects arising from misuse, mishandling, abuse, accident, negligence and damage caused directly or indirectly by fire, flood, liquid water, corrosion, convulsion of nature, war, riot or civil commotion.
 - (iii) The IMEI number sticker on this product has been erased or modified.
 - (iv) The content of warranty policy has been modified without authorization.
- (8) LGEHK is not responsible for any loss of data or system corruption during the process of transportation or repair to and from the Service Centre and due to the forces of nature.
- (9) LGEHK reserves the right to terminate or modify the terms of this warranty card. For exceptional cases, subject to report of our investigation, we reserve the right to terminate this warranty card or modify terms of warranty policy.
- (10) Our company will not be liable for any loss directly or indirectly caused by the breakdown of the product.
- (11) This warranty card is restricted within Hong Kong SAR only.

Mobile Phone Warranty Policy

HK Area
香港地區

手提電話保用條款

- (1) 本公司為客戶提供保修期如下，只適用於香港購買之手機，並不包括各促銷活動之贈品(由購買日起計)
- (i) 機身：12個月
 - (ii) 充電器：6個月
 - (iii) 電池：6個月
 - (iv) 免提耳機：3個月
- (2) 保修服務只適用於原裝行貨：水貨及冒牌貨均屬無效。
- (3) 此保修只適用於生產上的瑕疵，如電子零件偶然出現毛病，並不包括手機的自然磨損包括外殼、鍵盤、顯示屏、天線、附件等。
- (4) 用戶要求維修服務時，須同時攜同手機、保用證及印有IMEI號碼之有效發票正本到本公司指定之維修中心進行維修，否則保修服務無效，客戶須繳付維修費用。
- (5) 在保修期內維修更換后的所有零件、配置及附件，均屬本公司所有，本公司有權作出任何處理。
- (6) 手機內存資料有可能因維修后遺失，請顧客要自行保存。
- (7) 在下列情況下本保用證將自動失效，本公司有權拒絕維修該手機或向客人徵收所有的維修費用。
- (i) 手機曾作未許可之維修、不適當的安裝、更改、或貼於其上的維修貼紙遭受損毀、撕破、除去、保修服務即無效。
 - (ii) 手機曾被錯誤使用、錯誤處理、疏忽使用、直接或間接意外由火、液體、火災、腐蝕、地震、戰爭、暴亂或天災所造成的損壞。
 - (iii) 手機上的IMEI號碼貼紙一經修改或除去，保修服務即無效。
 - (iv) 擅自修改本保用證的內容。
- (8) 本公司將對任何於使用、維修或運送時引致之系統錯誤及資料流失、或因天然災害、意外事件造成之損失概不負責。
- (9) 本保用證的發出及終止權均屬本公司所有。就不明的情況或個案，經審查後，本公司有權發出或終止本保用證。
- (10) 本公司將不負責由於產品損壞而直接或間接引致之任何損失。
- (11) 此保用證只適用於香港特別行政區範圍內。



To:

LG Electronics HK Ltd.
North Point Post Office Box No.54509
香港北角郵政信箱54509號

Limited Warranty

限期保用證

To provide our best after-sales service, please complete and return this warranty card to us.

您的寶貴意見能使我們的服務更加完善，請填妥及寄回此保用證以享受閣下尊有的售後服務。

Customer Information

客戶資料

Purchaser's Name:

客戶姓名

Address:

地址

E-mail:

電郵

Mobile:

手提電話

Home:

家居電話

Model No.:

型號

IMEI No.:

機身IMEI編號

Date of Purchase:

購買日期

Invoice/Sales Docket No.:

購買單據編號



Retailer Information

零售名稱

Address:

求意見要



LG

Life's Good

MEMO

A series of 18 horizontal dotted lines for writing.

MEMO

A series of 20 horizontal dotted lines for writing.

MEMO

A series of 18 horizontal dotted lines for writing.

MEMO

A series of 18 horizontal dotted lines for writing.

MEMO

A series of 18 horizontal dotted lines for writing.

MEMO

A series of 20 horizontal dotted lines for writing.