



繁體中文
简体中文
ENGLISH

使用手冊 GX300

使用手冊 GX300

LG Electronics

www.lg.com

P/NO : MMBB0383218(1.0)



CE0168

Bluetooth QD ID B016528

GX300 使用手冊 - 繁體中文

本使用手冊幫助您掌握新型手機的操作。提供有助於您使用手機功能的相關解釋。



此手冊中的部份內容可能會因手機程式之改良或不同網絡商提供的服務而令實際情況有所不同,這並不會另行通知。

內容

了解您的手機.....	4	使用新帳戶發送電郵.....	12
安裝記憶咭.....	5	訊息資料夾.....	12
安裝智能咭和電池.....	6	相機.....	13
為手機充電.....	7	快速拍照.....	13
使用雙智能咭.....	8	視像攝錄機.....	13
通話功能.....	9	拍攝快速影片.....	13
撥打電話.....	9	音樂.....	13
透過通訊錄撥打電話.....	9	FM 收音機.....	14
接聽來電和拒接來電.....	9	搜尋電台.....	14
使用揚聲器.....	9	收聽電台.....	14
快速撥號.....	9	錄製廣播.....	14
發送 SOS 訊息.....	9	語音備忘錄.....	14
檢視通話記錄.....	10	錄製語音備忘錄.....	14
變更通話設定.....	10	媒體匣.....	14
通訊錄.....	10	記事簿.....	15
搜尋通訊錄.....	10	設定鬧鐘.....	15
新增通訊錄.....	10	使用日曆.....	15
新增通訊錄至群組.....	11	新增項目至您的待辦事項列表.....	15
訊息.....	11	新增備註.....	15
發送訊息.....	11	秘密備註.....	15
輸入文字.....	11	使用計算機.....	15
T9 模式.....	12	使用秒錶.....	15
Abc 模式.....	12	日期搜尋器.....	15
123 模式.....	12	轉換單位.....	15
設定電郵.....	12	新增城市至世界時間.....	15

我的最愛.....	16	手機軟體更新.....	20
手電筒.....	16	安全及有效使用準則.....	21
虛擬來電.....	16	配件.....	25
網絡.....	16	技術數據.....	26
存取瀏覽器.....	16	疑難排解.....	27
設定.....	16		
個人化情景模式.....	16		
使用飛航模式.....	16		
變更您的顯示設定.....	16		
變更您的日期和時間.....	16		
變更連接設定.....	17		
變更您的藍芽設定.....	17		
同其他藍芽裝置配對.....	17		
PC Suite.....	18		
在電腦上安裝 LG PC Suite.....	18		
變更其他設定.....	18		
變更手機設定.....	18		
變更安全性設定.....	19		
檢視記憶體狀態.....	19		
重設手機.....	19		

了解您的手機

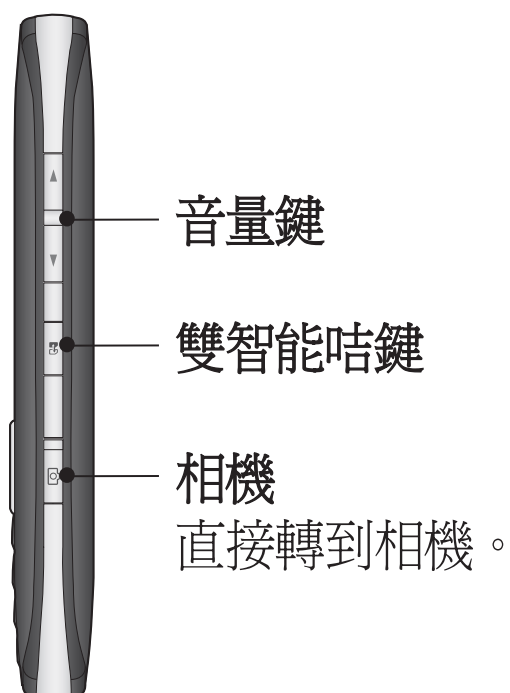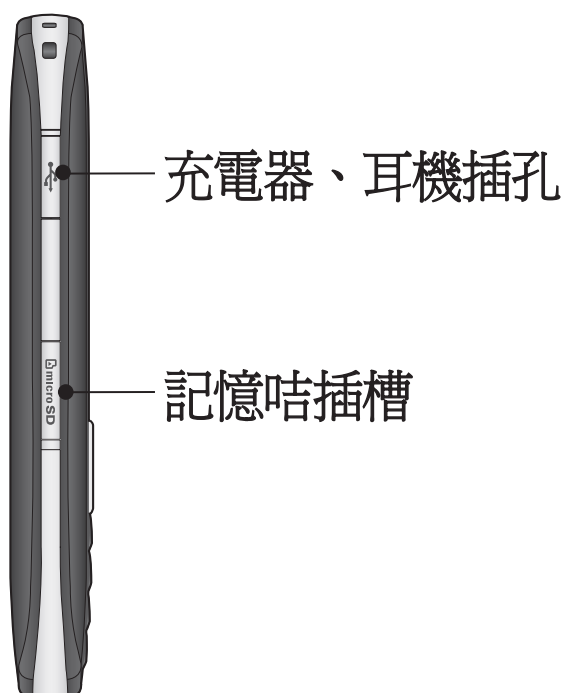

安裝記憶咭

打開記憶咭蓋並插入記憶咭，確保記憶咭金色接觸區面向下，放入記憶咭直至聽到咔嗒聲。關上記憶咭蓋。要取出記憶咭，輕輕推動記憶咭，如圖所示。



注意：記憶咭是選購配件。

格式化記憶咭


按功能表並選擇設定。選擇記憶體資訊，選擇外置記憶咭並按格式化，輸入安全密碼。

警告：格式化記憶咭時，所有的內容將會被清除。如果不想失去記憶咭上的資料，請先進行備份。

安裝智能咭和電池


1 取下電池蓋

滑動電池蓋並取下。

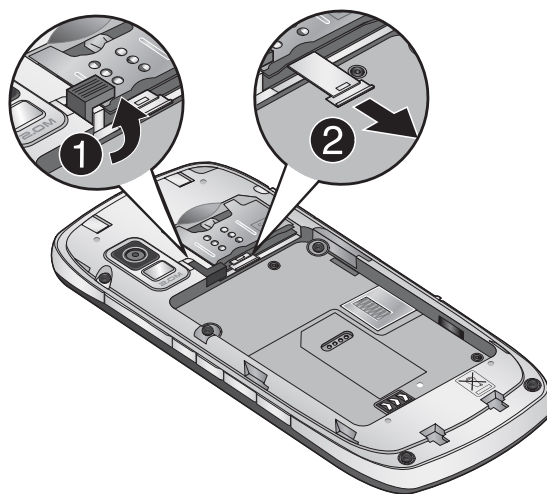


2 安裝智能咭

將智能咭滑入智能咭插槽中，確保智能咭的金屬接觸面朝下。安裝智能咭之前，請確保取出手機電池。若要取出智能咭，請向相反方向輕輕拉出。

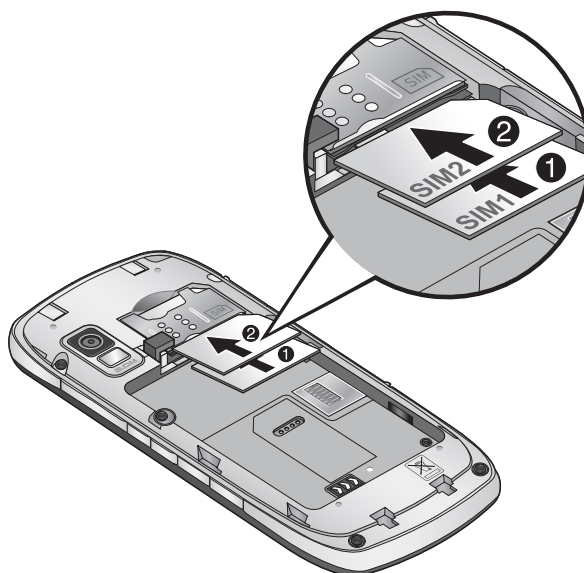

警告

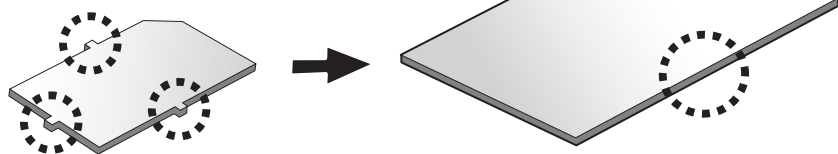


將智能咭插入插槽前，請先確保智能咭切邊平整。

為手機充電

3 安裝電池

首先，請將電池插入電池格下方邊緣。

請確保電池觸點對準手機觸點。按住電池，直到卡緊為止。

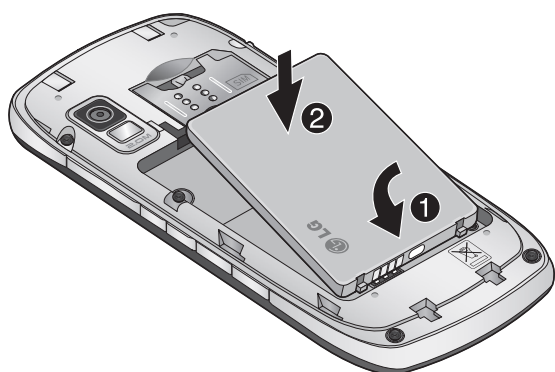

打開 GX300 手機側面的充電器插槽蓋，連接旅行充電器和隨附的 USB 線。將 USB 線連接到手機並插入電源插座中。您的 GX300 手機必須充電至屏幕上顯示「電池電量已滿」訊息。

備註：第一次充電時必須將電池完全充電，以提高電池壽命。忽略第一次充電時顯示的「電池電量已滿」訊息。



使用雙智能咭

當您插入兩張智能咭時，您可於屏幕左上方看到兩個網絡訊號圖示。

要選擇或轉換智能咭，按功能表並選擇設定，然後選擇雙智能咭。

或按 GX300 右側的**雙智能咭鍵**。**雙智能咭鍵**讓您在通話、發送訊息或進行其他操作時，也能隨時輕鬆轉換智能咭。

提示！ 當您轉換網絡訊號時，您會看到被背景色彩強調的網絡訊號。這讓您更容易辨認您所選擇的智能咭訊號強度。

通話功能

撥打電話

- 1 使用鍵盤輸入號碼。要刪除數字，請按清除。
- 2 按  開始通話。
- 3 要結束通話，請按 。

提示！ 若要在撥打國際電話時輸入「+」，請按住 0。

提示！ 要在通話期間調節音量，請按音量鍵。

透過通訊錄撥打電話

- 1 從桌面選擇通訊錄。
- 2 使用鍵盤輸入您要通話的聯絡人的姓名首字母。例如要輸入 office，請連續按三次 6，以輸入字母「o」。
- 3 從選項中選擇撥打電話，或按  開始通話。

接聽來電和拒接來電

手機響鈴後，按  鍵接聽來電。

要使響鈴中的手機靜音，只需選擇靜音即可。如果在開會時忘記

將情景模式變更為靜音，此功能將十分有用。

按  或選擇拒絕以拒接來電。

使用揚聲器

通話期間，您可按  鍵啟動揚聲器。

如果已啟動揚聲器，再次按  鍵恢復正常手機通話模式。

快速撥號

按功能表，選擇通訊錄，然後選擇快速撥號。

您可以為常撥聯絡人指定一個快速撥號號碼。

快速撥號 1 設定為留言中心，無法更改。

發送 SOS 訊息

在緊急情況之下，這功能讓您只要長按鍵盤上的 9 號鍵，即能自動發送 SOS 訊息給您的朋友。

初始長按 9 號鍵會引發您的 SOS 訊息設定。當您設定開啓之後，您可以於下列位置編輯此功能：功能表 > 通訊錄 > 快速撥號。

檢視通話記錄

按**功能表**並選擇**通話記錄**。

如果網絡支援服務區域內的來電線路識別 (CLI)，則您可以查看未來電、已接來電和已撥號碼。

變更通話設定

可設定與通話相關的功能表。按**功能表**，選擇**設定**並選擇**通話**。

來電轉駁 - 選擇是否轉駁您的通話。

通話限制 - 選擇何時限制通話。

固定撥號號碼 - 選擇可從您的手機進行撥打的號碼清單。您需要從您的網絡商處得到一個 PIN2 碼。僅固定撥號清單中包含的號碼可從手機撥出。

來電等候 - 有來電等候時，手機會提示您。（這取決於您的網絡供應商。）

來電拒接 - 選擇**關閉**或**開啓**並選擇拒接所有通話、通訊錄、群組、無名稱記錄、無來電號碼。

發送我的號碼 - 選擇撥出通話時，是否顯示您的號碼。（這取決於您的網絡供應商。）

自動重撥 - 可讓您在撥打電話失敗時設定自動重撥功能。

分鐘提示 - 確定是否在通話過程中根據設定的時長播放分鐘提示音。

儲存新號碼 - 選擇是或否。

通訊錄

搜尋通訊錄

- 1 從桌面選擇**通訊錄**。
- 2 使用鍵盤輸入要通話聯絡人的首個字母。
- 3 要選擇聯絡人及其不同的號碼，請使用導覽鍵。

新增通訊錄

- 1 按**功能表**並選擇**通訊錄**，然後選擇**通訊錄**。按**選項**，然後選擇**新增通訊錄**。
- 2 輸入新聯絡人的名字和姓氏。您不必同時輸入名和姓，但必須輸入其中一個。
- 3 輸入號碼並選擇**選項**，然後選擇**完成**

備註：如果新增多項資訊，請按**選項**並選擇**加入詳細資料**，然後選擇所需選項。

備註：儲存聯絡人電郵地址時，按 ***..** 鍵並選擇符號 @，然後按**確定**。

新增通訊錄至群組

您可將聯絡人儲存至群組中，從而將工作同事和家庭成員分開。手機上存在很多已設定好的群組，包括**家庭、朋友、同事、學校和重要人士**。

訊息

GX300 包含與 SMS（文字訊息服務）、MMS（多媒體訊息服務）、電子郵件及網絡服務訊息相關的功能。

發送訊息

- 1 按**功能表**，選擇**訊息**，並選擇**建立訊息**。
- 2 選擇**訊息**以發送文字訊息或多媒體訊息。
- 3 新的訊息編輯器將會開啓。訊息編輯器將**文字訊息**和**多媒體訊息**結合在一個且易於切換的編輯器中。訊息編輯器的原初設定為文字訊息。

- 4 輸入電話號碼或按選項，選擇發送從通訊錄列表中選擇一名聯絡人。可透過選擇新增收件者新增多名聯絡人。
- 5 輸入訊息。
- 6 選擇**選項**，選擇附加新增**圖像、影片剪輯、聲音檔、日程表、名片、備註、文字欄位、待辦事項或文字範本**。
- 7 按發送。

提示！ 當在訊息欄位中輸入的文字長度超過 1 頁時，您可選擇訊息類型為文字訊息或多媒體訊息。如需更改要發送的訊息類型，按**功能表 > 訊息 > 訊息設定 > 文字訊息**，然後選擇**發送長文字時設為**。

警告：圖像、影片剪輯、聲音檔、日程表、名片、文字欄位或標題將被新增至訊息編輯器，並將自動轉換為多媒體訊息模式，而您亦需為此支付相應費用。

輸入文字

使用手機鍵盤，您可輸入英數字元。手機中提供以下輸入法模式：**T9 模式、ABC 模式和 123 模式**。

備註：部份欄位只可使用一種文字輸入模式（例如通訊錄欄位中僅可輸入電話號碼）。

T9 模式

T9 模式使用內置字典，識別根據按按鍵順序寫入的單字。只需輸入字母關聯的數字按鍵，且只要輸入所有字母，字典便可識別要輸入的單字。

Abc 模式

使用此模式時，按一次、兩次、三次或四次標示有所需字母的按鍵，直到所需字母顯示，即可輸入該字母。

123 模式

只要按一次按鍵即可輸入一個數字。在字母模式下也可新增數字，方法是長按相應的數字鍵。

設定電郵

縱使出門在外，您亦可使用 GX300 上的電子郵件功能與他人保持聯絡。設定 POP3 或 IMAP4 電子郵件帳戶簡單方便。

- 1 按**功能表**，選擇**訊息**並選擇**訊息設定**。

- 2 選擇**電子郵件及電子郵件帳戶**。
- 3 按**新增**並按照快顯指示，然後輸入所需資訊。

使用新帳戶發送電郵

要發送/接收電子郵件，您可設定電子郵件帳戶。

- 1 選擇**功能表**，選擇**訊息**並選擇**建立訊息**。
- 2 選擇**電子郵件**，將開啓一個新電子郵件。
- 3 輸入收件者地址並撰寫標題。
- 4 輸入訊息。
- 5 按**選項**，選擇附加以新增**圖像、影片剪輯、聲音檔、名片、日程表**或**備註**。
- 6 按**發送**，將發送您的電子郵件。

訊息資料夾

按**功能表**，選擇**訊息**。GX300 使用的資料夾結構可一目了然。

建立訊息 - 允許您建立新訊息。

收件匣 - 收到的所有訊息將置於您的**收件匣**中。您可從此處進行回覆、轉寄和更多操作。

我的郵箱 - 您接收的所有電子郵件都置於**我的郵箱**中。

草稿 - 若不夠時間完成編寫訊息，您可以將寫完的部分儲存於此。

寄件匣 - 這裡是發送中的訊息之臨時存放資料夾。

已發送項目 - 所有已發送訊息的備份被儲存於已發送項目中。

已儲存的項目 - 您可以存取您已儲存的訊息、文字範本與多媒體範本。

情感圖示 - 已編寫好的有用的情感圖示，方便快速回覆。您可以新增、編輯和刪除情感圖示。您可在編寫訊息時插入喜愛的情感圖示。

訊息設定 - 訊息設定為預先定義，以便您可立即發送訊息。如果要變更此設定，可使用設定選項來完成。

相機

使用手機內置的相機，可以拍攝相片。此外，你亦可以將照片發送給其他人及選擇將照片設為牆紙。

快速拍照

- 1 按功能表並選擇多媒體。選擇**相機**開啓取景器。
- 2 握穩手機，將鏡頭對準拍照對象。
- 3 按  鍵拍照。

視像攝錄機

拍攝快速影片

- 1 按功能表并並選擇多媒體，然後選擇**影片**。
- 2 將鏡頭對準拍攝對象。
- 3 按  鍵開始錄製。
- 4 REC 將顯示在取景器中，計時器將顯示拍攝影片的長度。
- 5 選擇**停止**停止錄製。

音樂

GX300 具有內置音樂播放機，這樣，您可播放所有喜愛的曲目。

備註：音樂版權受國際公約及國內版權法的保護。需要取得授權或許可才可以複寫或複製音樂。在某些國家/地區，國家法禁止私人複製受版權保護的材料。請檢查適用國家關於使用此類材料的國家法律。

FM 收音機

GX300 配備有 FM 收音機功能，您在外出途中可以調諧至最愛的電台進行收聽。

備註：您需要插入耳機才可收聽收音機。將插頭插入耳機插孔中，即可收聽廣播並保持良好的接收效果。

搜尋電台

- 1 按**功能表**並選擇多媒體，然後選擇 FM 收音機。
- 2 選擇選項並選擇**自動掃描**，然後選擇**是**。亦可使用左右鍵搜尋電臺。

收聽電台

- 1 按**功能表**並選擇多媒體，然後選擇 FM 收音機。
- 2 選擇要收聽電台的頻道編號。

提示！ 可透過內置揚聲器收聽廣播。按**選項**，選擇**透過揚聲器收聽**。

錄製廣播

- 1 收聽廣播時按  鍵。
- 2 錄製時間將顯示在手機上。如要停止錄製，按**停止**。錄製完成後，錄製內容將作為 mp3 檔案儲存在廣播錄製中。

語音備忘錄

使用**語音備忘錄**錄製語音備忘錄或其他聲音。

錄製語音備忘錄

- 1 按**功能表**並選擇多媒體，然後選擇**語音備忘錄**。
- 2 按  鍵開始錄製。
- 3 選擇**停止**以結束錄音。
- 4 按**選項**，然後選擇**播放**以聆聽錄音。

媒體匣

您可將任何媒體檔案儲存在手機記憶體中，以便輕鬆存取所有圖像、聲音、影片、其他內容和遊戲。亦可將檔案儲存至記憶咭中。使用記憶咭的好處在於，您可以釋放手機記憶體的空間。所有多媒體檔案將儲存在媒體匣中。按**功能表**然後選擇**媒體匣**以開啓資料夾清單。

記事簿

設定鬧鐘

(功能表 > 記事簿 > 鬧鐘)

可設定五個鬧鐘在指定時間響鈴。

使用日曆

(功能表 > 記事簿 > 日曆)

進入此功能表時，日曆將會出現。在當前日期上將會標有一個方形游標。可透過導覽鍵移動游標至其他日期。

新增項目至您的待辦事項列表

(功能表 > 記事簿 > 待辦事項列表)

您可檢視、修改和新增要完成的工作。

新增備註

(功能表 > 記事簿 > 備註)

可在此處註冊您自己的備註。

秘密備註

(功能表 > 記事簿 > 秘密備註)

您可編寫秘密備註以保護自己的私隱。您可輸入安全密碼以使用此功能表。

使用計算機

(功能表 > 記事簿 > 計算機)

計算機可提供基本的數學運算功能：加、減、乘、除以及科學應用。

使用秒錶

(功能表 > 記事簿 > 秒錶)

此選項可使您使用碼錶功能。

日期搜尋器

(功能表 > 記事簿 > 日期搜尋器)

日期搜尋器是一款極為方便的工具，可幫助您計算特定天數之後的日期。

轉換單位

(功能表 > 記事簿 > 單位轉換器)

此功能可將多種測量數據轉換至所需的單位。

新增城市至世界時間 (功能表 > 記事簿 > 世界時間)

可新增所需城市至世界時鐘列表。亦可檢查世界主要城市的目前時間。

我的最愛

(功能表 > 記事簿 > 我的最愛)

幫助您轉至您所搜尋的功能表。您可以將項目設定為「我的最愛」。

手電筒

(功能表 > 記事簿 > 手電筒)

此功能助您照明環境。啟動功能後，您可於手機背面找到照明燈。

虛擬來電

(功能表 > 記事簿 > 虛擬來電)

此功能可助您禮貌地避免尷尬場面。

您可於虛擬來電功能表上設定時間，給自己撥打電話。

網絡

存取瀏覽器

您可以啟動瀏覽器，並在設定上存取已啟動設定檔的主頁。您可以手動輸入網址並存取相關的頁面。

- 1 按功能表並選擇Web(瀏覽器)。
- 2 要直接存取瀏覽器主頁，請選擇主頁。或者，選擇轉至網址並輸入所需的網址。

注意：連線至此服務並下載內容時，會產生其他費用。請向網路提供商諮詢資料費用。

設定

個人化情景模式

(功能表 > 設定 > 情景模式)

您可個人化每個情景模式設定。選擇所需的情景模式，然後依次選擇選項和編輯。

使用飛航模式

(功能表 > 設定 > 情景模式 > 飛航模式)

使用此功能可開啓飛航模式。開啓飛航模式後，您將無法撥打電話、連接至互聯網或發送訊息。

變更您的顯示設定

(功能表 > 設定 > 顯示)

您可以更改手機畫面的設定。

變更您的日期和時間

(功能表 > 設定 > 日期及時間)

您可以設定與日期和時間相關的功能。

變更連接設定

網絡商已經設定連接設定，因此您可以立即開啓新手機。如果要更改任何設定，請使用此功能表。您可在此功能表設定網絡設定與資料存取網絡設定。

按**功能表**並選擇**設定**，然後選擇**連接**。您可以從下列選項中進行選擇：

藍芽 - 設定 GX300 手機，以便使用藍芽。您可調整是否向其他裝置顯示您的手機

或搜尋手機已配對的裝置。

USB 連接模式 - 您可在手機上選擇 USB 連接模式以用於不同場合。

- **大容量儲存**：選擇此選項，然後將手機連接至電腦，將檔案拖放至 GX300 可移除裝置資料夾。
- **PC Suite**：選擇此選項，然後將手機設為 PC Sync 模式並連接至電腦。
- **每次詢問**：選擇此選項，每當手機連接至電腦，系統會提供選項，讓您選擇連接模式。

注意：要使用 USB 大容量儲存功能，您需要在手機中插入一個外置記憶咭。

變更您的藍芽設定

1 按**功能表**並選擇**設定**，然後選擇**連接**。

2 選擇**藍芽**並選擇**設定**。

對下列選項作出變更：

顯示我的手機 - 選擇手機是否對他人可見、隱藏或可見為 1 分鐘。

我的手機名稱 - 為 LG GX300 輸入一個名稱。

支援的服務 - 顯示可支援的服務。

我的位址 - 檢視您的藍芽位址。

同其他藍芽裝置配對

- 1 檢查藍牙是否為**開啓**和**可見**。您可在**藍芽設定**功能表中，透過選擇**顯示我的手機**，然後選**可見**來變更裝置的可見性。
- 2 從**藍芽**功能表中選擇**啓動裝置**。
- 3 GX300 將搜尋裝置。完成搜尋後，將在屏幕上顯示**新增和重新整理**。

- 4 選擇您想要配對的裝置，手機會建立一個密碼視窗。
- 5 按是或輸入密碼。
- 6 手機將連接至其他裝置。
- 7 密碼保護藍芽連接已準備就緒。

PC Suite

您可同步您的電腦和手機。以確保所有重要詳細資料和日期相匹配，並可用作備份，讓您安心。

在電腦上安裝 LG PC Suite

- 1 到 www.lgmobile.com 並選擇您所在區域，然後選擇國家。
- 2 點選手冊及軟件。
- 3 下載 LG 手機支援工具。
- 4 按照屏幕上的說明完成 LG 電腦端套件安裝程式精靈。
- 5 安裝完成後，LG PC Suite 圖示將顯示於桌面上。

變更其他設定

網絡 - 使用此功能表選擇網絡模式設定。您還可新增連接至首選列表的首選網絡。

互聯網設定 - 此功能表顯示互聯網設定。透過選項功能表，您可新增網絡設定、刪除或編輯這些設定。但是，您無法刪除或編輯預設設定。

存取點 - 此功能表可顯示存取點列表。透過使用選項功能表，您可新增網絡設定、刪除或編輯這些設定。但是，您無法刪除或編輯預設設定。

分組數據連線 - 若選擇「可使用時」，手機在開機時會自動註冊 GPRS 網絡。若選擇「需要時」，手機會在連接到 WAP 或應用程式時建立 GPRS 連接。

變更手機設定

(功能表 > 設定 > 手機)

按照個人喜好進行調整，體驗 GX300 帶來的自由與舒適。

自動按鍵鎖 - 在備用屏幕下自動鎖定按鍵。

語言 - 您可更改手機中顯示文字的語言。此更改亦會影響語言輸入模式。

電源節省 - 選擇電源節省設定模式為關閉、僅夜間或常開。如設定為常開，可節省電池電力。

手機資訊 - 檢視 GX300 手機的技術資訊。

變更安全性設定

(功能表 > 設定 > 安全)

變更安全性設定，保護 GX300 和手機中的重要資訊。

PIN 碼要求 - 選擇開啓手機時，需要輸入密碼。

手機鎖 - 選擇鎖定您的手機。

若 SIM 變更，鎖定手機 - 如啓動此選項，手機將在您更換智能咭時要求輸入安全密碼。

更改密碼 - 更改您的 PIN 碼、PIN2 碼、安全密碼。

檢視記憶體狀態

(功能表 > 設定 > 記憶體資訊)

您可使用記憶體管理確定已使用了多少記憶體，查看可用的空間：共用、預留、智能咭和外置記憶咭，並插入記憶咭時設定主要儲存裝置設定。

重設手機

(功能表 > 設定 > 恢復出廠設定)

使用恢復出廠設定將所有設定重設為原廠設定。您需要安全密碼，才能啓用此功能。預設的安全密碼為「0000」。

手機軟體更新

從互聯網更新 LG 手機軟體

更多有關此功能的資訊，請瀏覽 <http://update.lgmobile.com> 或 <http://www.lg.com/common/index.jsp> → 選擇國家 → 支援。

有了這項功能，您無需親臨服務中心，就可透過互聯網將手機軟體更新為最新版本，十分方便。

手機軟體更新要求使用者密切注意整個更新過程。請確保繼續進行前，已檢查所有在每一個步驟出現的指引和備註。請注意，更新期間若移除 USB 線或電池，有可能對手機造成嚴重損害。

安全及有效使用準則

請讀取以下簡易的使用規則。違反這些準則可能會發生危險或觸犯法律。

射頻能量暴露準則

無線電波暴露及比吸收率 (SAR) 資訊

本型號手機 GX300 之設計符合適用的無線電波暴露安全要求。此要求包括可確保所有用戶安全的設計準則，範圍涵蓋各年齡階層與所有的健康狀況。

- 無線電波暴露指引的量度單位叫作比吸收率或 SAR。SAR 測試使用標準方法進行，用手機以在所有使用的頻帶最高的合格電源水平傳輸。
- 雖然不同型號的 LG 電話的 SAR 水平有所差異，但所有這些電話都為達到無線電波暴露的相關指引而設。
- 國際非離子化輻射保護委員會 (ICNIRP) 建議的 SAR 限制，即平均 10 克組織 2W/kg。

- 經 DASY4 測試，本手機型號在耳邊使用的最高 SAR 值為 1.43 W/kg (10g)，隨身攜帶時則為 1.54 W/kg (10g)。
- 採用了電氣與電子工程師學會 (IEEE) 建議的 SAR 限制，即平均 1 克組織 1.6 W/kg 的國家/地區居民的 SAR 數據資訊。

產品護理及維修

⚠ 警告

請僅使用經認可適用於此特定型號手機的電池、充電器及配件。使用其他種類的配件可能會導致手機的認可或保養失效，並可能引致危險。

- 請勿拆開此裝置。需要對手機進行維修時，請將其帶到合資格的維修技師處。
- 請遠離如電視、收音機或個人電腦等電器產品而使用手機。
- 裝置需遠離發熱來源，如散熱器或烹調器具。
- 請勿摔落手機。

- 請勿讓此裝置遭機械震動或電擊。
- 請於任何有特殊限制的地方關閉手機。例如，請勿在醫院內使用手機，否則，它可能會對敏感的醫療設備造成影響。
- 請勿以潮濕的雙手對充電中的手機進行操作。這可能會引致觸電和造成手機嚴重損壞。
- 請不要在易燃材料附近為手機充電，因為充電期間手機會發熱並導致火災。
- 使用乾布清潔裝置表面（請勿使用如苯、稀釋劑或酒精等溶劑）。
- 切勿在柔軟家具上為手機充電。
- 手機應在通風良好的環境中充電。
- 請勿讓此裝置接觸過多煙或塵埃。
- 請勿將手機置於信用咭或車票附近，這可能會影響磁帶上的資料。

- 請勿以尖銳物件敲打屏幕，否則可能會對手機造成損毀。
- 請勿將手機暴露於液體或濕氣中。
- 請小心使用配件，如耳機。如非必要，請勿觸及天線。

有效手機操作

電子裝置

- 請勿在未得到批准下在醫療儀器附近使用您的手機。避免將手機放置在起搏點上，亦即您的胸部口袋。
- 手機可能影響到某些助聽器。
- 輕微干擾可影響電視、收音機、個人電腦等。

道路安全

檢查您駕駛時地區使用手機的法例及規則。

- 駕駛時請勿使用手提手機。
- 請專心一致駕駛。
- 如有免提耳機，請使用免提耳機。

- 若有駕駛條例要求，請駛離馬路並停泊好汽車後才撥打或接聽電話。
- RF 能量可能會影響車內某些電子系統，例如車載立體聲音響及安全設備等。
- 如果您的汽車配有氣囊，切勿讓已安裝的無線設備或手提無線設備阻擋氣囊。它有可能因使用不當而失靈或造成嚴重損傷。
- 如果在外出時聆聽音樂，請確保將音量設定至合適水平，以便可以對周圍環境產生警覺。這在馬路旁邊時尤為重要。

避免損害您的聽覺

如果長時間以較大音量收聽，可能會對聽覺造成損害。所以我們建議開啓或關閉手機時，不要將它放於太近耳朵。我們亦建議將音樂及通話音量設定至合適水平。

爆破地區

請勿在進行爆破時使用手機。嚴格遵守相關限制、條例或規定。

潛在爆炸氣壓

- 請勿在燃料補給點使用手機。
- 請勿在燃料或化學物質旁使用。
- 請勿使用放置了手機及配件的汽車傳輸或放置易燃氣體、液體或爆炸物。

在飛機上

無線裝置可引致飛機干擾。

- 登機前，請先關掉手機。
- 未經地勤人員批准，請勿在陸上使用手機。

兒童

請將手機放在兒童接觸不到的安全地方。手機包含微細零件，如果拆開，可能造成哽咽危險。

緊急撥號

緊急電話可能在某些流動網絡中不能發出。因此，您不應僅倚賴手機作為緊急電話方式。請向您本地的服務供應商查詢。


電池資料及保護

- 充電前，您無須完全放電。跟其他電池系統不同，沒有記憶影響可緩和電池的效能。
- 只使用 LG 電池及充電器。LG 充電器是為將電池壽命擴至最大而設。
- 請勿拆解電池組或造成電池組短路。
- 請保持電池組的金屬接點清潔。
- 當電池不再提供可接受的效能，請更換電池。電池組可重充數百次直至需要更換為止。
- 如果電池很久沒有使用來擴展其用量，需重充電池。
- 請勿直接將充電器暴露於日光下或高濕度環境（如浴室）中。
- 請勿將電池置於過熱或過冷處，此類場合可能會損害電池效能。
- 若使用類型不當的電池，則有發生爆炸的危險。
- 根據製造商說明棄置廢舊電池。請盡量回收利用。請勿作為家庭廢棄物處理。
- 如果需要更換電池，請帶同手機前往最近的授權 LG 電子產品服務點或經銷商以尋求協助。
- 請謹記在手機完全充電後從牆壁插座拔出充電器，避免充電器造成不必要的電力損耗。
- 電池的實際壽命將取決於網絡設定、產品設定、使用模式、電池及環境條件。


配件

有不同的配件供您的手機使用。您可以根據您的個人要求選擇這些配件。

充電器

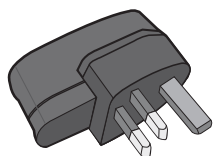


USB線

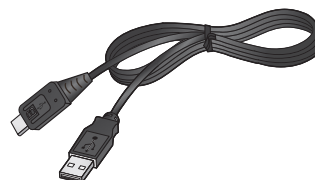

電池



立體聲 耳機

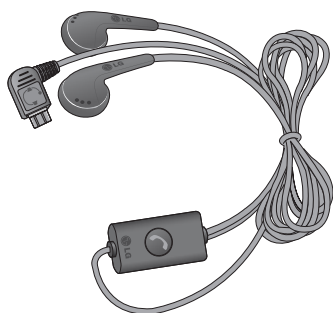

注意：

- 只可用原裝 LG 配件。
- 不使用原裝 LG 配件，保養可能失效。
- 不同地區可能有不同的配件。

技術數據

環境溫度

最多： +55°C（放電中）， +45°C（充電中）

最低： -10°C

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri band Terminal Equipment

Model Name

GX300

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v1.3.2

EN 300 328 v1.7.1

EN 60950-1 : 2001

EN 50360 : 2001 / EN62209-1 : 2006

EN 301 511 v9.0.2

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

Seung Hyoun, Ji / Director

27. Apr. 2010

LG Electronics Inc. – EU Representative
Veluwezoom 15, 1327 AE Almere, The Netherlands

Signature of representative

疑難排解

本章列出了您在使用手機過程中可能會遇到的一些問題。有些問題需要您向服務供應商尋求支援，但多數問題可自己輕鬆解決。

訊息	可能原因	合理的解決方案
智能咭錯誤	手機中無智能咭，或智能咭插入方式不正確。	請確保智能咭正確插入。
無網絡連接	訊號較弱 位於 GSM 網絡覆蓋範圍之外	將手機移至窗戶旁邊或空曠之地。諮詢服務供應商，了解服務區域地圖。
密碼不匹配	要變更安全密碼，需要再次輸入新密碼進行確認。	請聯絡服務供應商。
無法設定功能	服務供應商不支援此功能或功能需要註冊	請聯絡服務供應商。
無法撥打電話	撥號錯誤 已插入新智能咭。通話費用已達上限	未獲得新網絡的使用授權。查看新的限制條款。請聯絡服務供應商或使用 PIN 2 碼重設限制。
無法開機	按下開啓/關閉鍵的時間不夠長 電池已耗盡 電池觸片不潔淨	按開啓/關閉鍵至少兩秒鐘。 保持長時間連接充電器。 對觸片進行清潔。

疑難排解

訊息	可能原因	合理的解決方案
充電錯誤	電池電量完全耗盡	為電池充電。
	不在適當溫度範圍內	確定室溫合適，稍候再充電。
	接觸問題	檢查電源及其與手機的連接。 檢查電池觸片，必要時進行清潔。
	電源無電	插入到其他插座或檢查電壓。
	充電器故障	如果充電器沒有反應，請更換充電器。
	使用不當充電器	只可使用原廠 LG 配件。
手機失去網絡連接	電池故障	更換電池。
	訊號太弱	自動重新連接到其他服務供應商。
號碼不允許	固定撥號功能已開啓。	檢查設定。

GX300 用户手册 - 简体中文

此指南有助于您了解您的新手机。 它将提供关于手机功能的有用说明。



此手册中的部份内容可能会因手机程序之改良或不同网络商提供的服务而令实际情况有所不同, 这并不会另行通知。

目录

开始了解您的手机.....	4	相机.....	13
安装存储卡.....	5	快速拍照.....	13
安装 SIM 卡和电池.....	6	摄像机.....	13
充电.....	7	快速摄像.....	13
使用 SIM 双卡.....	8	音乐.....	14
通话.....	9	FM 收音机.....	14
拨打电话.....	9	搜索电台.....	14
从电话本拨打电话.....	9	收听收音机.....	14
接听和拒接来电.....	9	录制收音机内容.....	14
使用扬声器.....	9	语音备忘录.....	15
快速拨号.....	9	录制语音备忘录.....	15
发送 SOS 信息.....	10	图片库.....	15
查看通话记录.....	10	管理器.....	15
更改呼叫设置.....	10	设置闹钟.....	15
电话本.....	10	使用日历.....	15
正在搜索联系人.....	10	向任务列表添加项目.....	15
添加新联系人.....	11	添加备忘录.....	15
将联系人添加到群组.....	11	私人备忘录.....	15
信息.....	11	使用计算器.....	16
发送信息.....	11	使用秒表.....	16
输入文本.....	12	日期计算器.....	16
T9 模式.....	12	换算单位.....	16
Abc 模式.....	12	为世界时间添加城市.....	16
123 模式.....	12	转到.....	16
设置您的电子邮件.....	12	手电筒.....	16
使用新帐户发送电子邮件.....	12	伪装呼叫.....	16
信息文件夹.....	13		

网络.....	16
访问 WAP 浏览器.....	16
设置.....	17
个性化情景模式.....	17
使用飞行模式.....	17
更改显示设置.....	17
更改日期和时间.....	17
更改连接设置.....	17
更改蓝牙设置.....	18
与其它蓝牙设备配对.....	18
PC 套件.....	18
在电脑上安装 LG PC 套件.....	18
更改其它设置.....	19
更改手机设置.....	19
更改安全设置.....	19
查看内存状态.....	19
重设手机.....	20
手机软件更新.....	20
关于安全有效使用手机的准则...	21
配件.....	25
技术参数.....	26
故障排除.....	27

开始了解您的手机

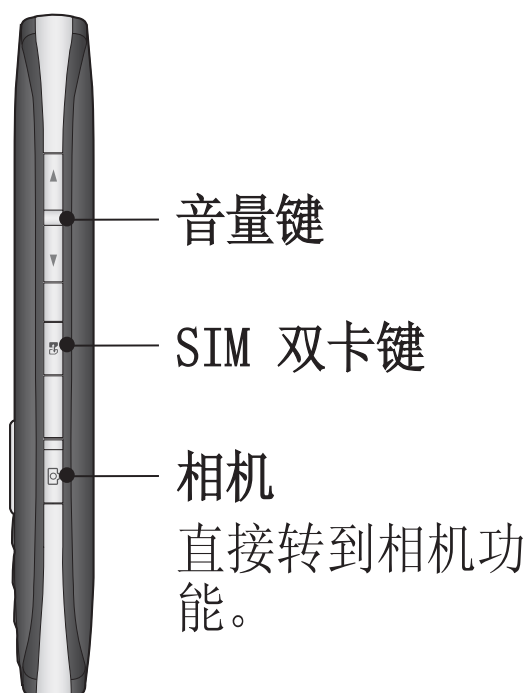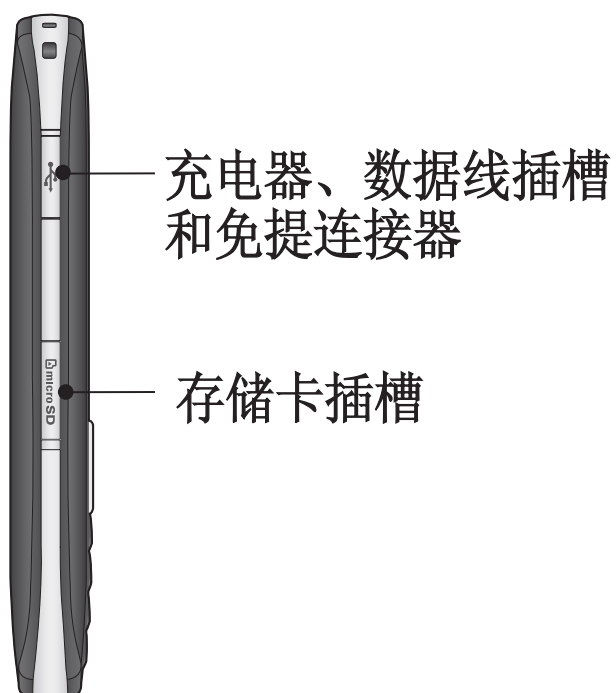

安装存储卡

打开存储卡盖，将金色接触区域朝下插入 micro SD 卡。关闭存储卡盖，使其卡合。



备注：存储卡是可选配件。

格式化存储卡

按**菜单**，然后选择**设置**。


依次选择**内存资料**、**外部存储器**，然后按**格式化**并插入安全码。

警告：格式化卡时，所有内容将被擦除。 如果不想失去存储卡中的数据，请先备份。

安装 SIM 卡和电池



1 卸下电池盖

将电池盖沿手机底部滑动，卸下电池盖。

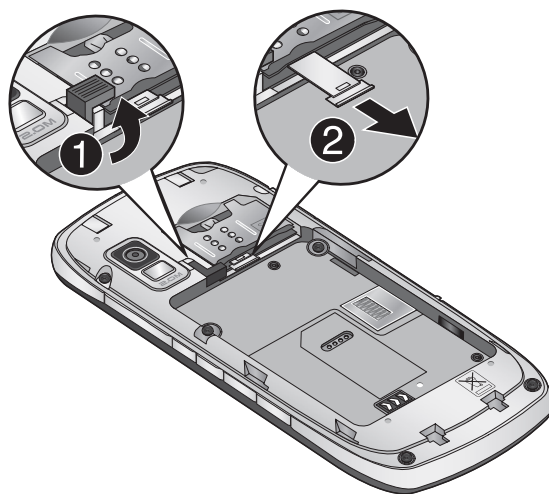

2 安装 SIM 卡

将 SIM 卡滑进 SIM 卡弹夹中。确保卡的金色接触区域面朝下。请确保先从手机中取出电池，然后再安装 SIM 卡。要取出 SIM 卡，沿反方向轻推。

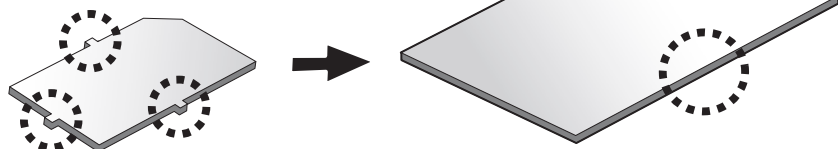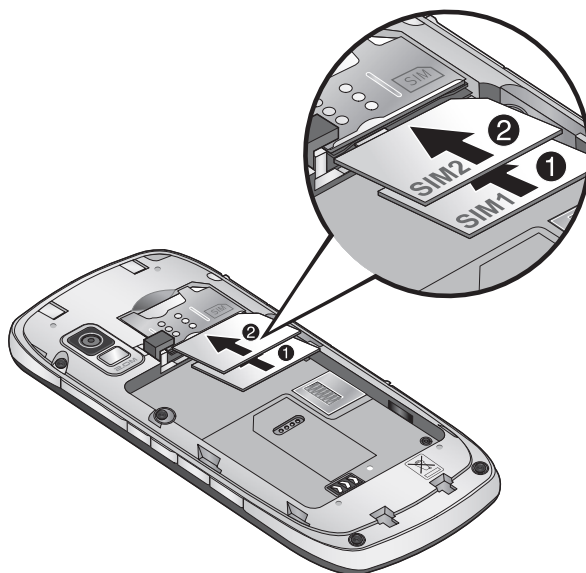


在将 SIM 卡插入到弹夹之前，请确保 SIM 卡的切角边干净整洁。

充电

3 安装电池

先将电池左侧插入电池室顶部。

请确保电池触点与手机端子对齐。向下按电池右侧直到卡入到位。

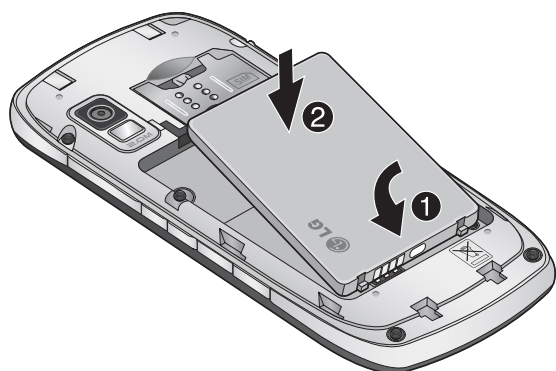

掀开 GX300 侧面的充电器插槽盖。连接旅行适配器（充电器）和随附的 USB 数据线。将 USB 数据线连接到手机，然后将其插入电源插座。只有屏幕上显示“电量已满”信息，GX300 充电才完成。

备注：第一次充电时必须为电池完全充电，这样可以延长电池使用寿命。忽略第一次出现的“电量已满”信息。



使用 SIM 双卡

当插入两张 SIM 卡时，您可以在屏幕左上方看到两个网络信号图标。

要选择或切换 SIM 卡，请按“菜单”，选择“设置”，然后选择“双段SIM 卡”。

或按 GX300 右侧的 **SIM 双卡键**。**SIM 双卡键**使得您能够在拨打电话、发送信息等时轻松切换 SIM 卡。

提示！ 在切换时，您可以看到通过背景色突出显示的网络信号。这使您能够轻松识别所选 SIM 卡的信号强度。

通话

拨打电话

- 1 使用键盘键入号码。要删除一个数字，请按**清除**。
- 2 按  开始通话。
- 3 要结束通话，请按 。

提示！ 要输入 + 以拨打国际电话，请按住 **0**。

提示！ 要在通话时控制音量，请按音量键。

从电话本拨打电话

- 1 从 主屏选择**电话簿**。
- 2 使用键盘输入您要呼叫的联系的第一个字母。例如，要输入 **Office**，请按三次 **6** 选择第一个字符“**O**”。
- 3 从 **选项**中选择**电话方式**，或按  开始通话。

接听和拒接来电

当手机响铃时，请按  接听来电。

要在手机响铃时静音，选择**静音**即可。如果您在开会时忘记将情景模式更改为**静音**，这非常有帮助。

按  或选择**拒绝**以拒绝来电。

使用扬声器

通话期间，您可以通过按  键启动扬声器，并且您可以通过免提方式使用手机。

如果扬声器处于活动状态，再次按  键将恢复标准手机会话模式。

快速拨号

按**菜单**并选择**电话簿**，然后选择**快速拨号**。

您可以为常用联系人指定快速拨号号码。

快速拨号 1 设置为您的语音邮件，不能更改。

发送 SOS 信息

发生紧急情况时，您可以通过长按键盘上的 9 键自动向您的朋友发送 SOS 信息。

最初长按 9 键将显示 SOS 信息设置。一旦设置为“开”，您可以通过选择“菜单”>“电话簿”>“快速拨号”来编辑此功能。

查看通话记录

按**菜单**，然后选择**通话记录**。

仅当网络支持服务区内的主叫线路识别 (CLI) 时，您才能检查未接来电、已接来电和已拨电话。

更改呼叫设置

您可以设置与呼叫相关的菜单。按**菜单**，选择**设置**，然后选择**通话**。

呼叫转接 - 选择是否要转接呼叫。

呼叫限制 - 选择何时限制呼叫。

固定拨号 - 选择可从此手机拨出的号码列表。您需要运营商提供的 PIN2 码。仅可以使用

手机拨打此号码列表中的号码。

呼叫等待 - 有等待呼叫时会收到通知。（这取决于网络提供商。）

拒接来电 - 选择**打开或关闭**，选择拒接所有来电、拒接来自特定组、联系人的来电；或拒接未注册号码（不在联系人列表中）或禁显号码。

发送我的号码 - 选择当您呼叫对方时是否显示您的号码。（这取决于网络提供商。）

自动重拨 - 允许您在呼叫尝试失败时设置自动重拨功能。

分钟提示音 - 确定在开机状态下是否按设定的时间间隔发出提示音。

保存新号码 - 选择是或否。

电话本

正在搜索联系人

- 1 从主屏选择**电话簿**，然后选择姓名。
- 2 使用键盘输入您要呼叫的联系人第一个字母。
- 3 要在联系人及其不同电话号码间滚动，请使用导航键。

添加新联系人

- 1 按**菜单**并选择**电话簿**，然后选择**姓名**。按**选项**，然后选择**新增联系人**。
- 2 输入新联系人的姓氏和名称。您无需同时输入姓氏和名称，但必须输入一个。
- 3 输入号码并选择**选项**，然后选择**完成**。

备注：如果要添加更多信息，请按**选项**，然后选择**添加详情**并选择所需的选项。

备注：存储联系人的电子邮件地址时，请按  键并选择符号 @，然后选择**确定**。

将联系人添加到群组

您可以将联系人保存到群组，例如，将工作同事和家人分开。手机中已设置多个群组，包括：**家人、朋友、同事、学校和重要人士**。

信息

GX300 包含与短信（短信服务）、彩信（多媒体信息服务）、电子邮件，以及网络服务消息相关的功能。

发送信息

- 1 按**菜单**，选择**信息**，然后选择**创建信息**。
- 2 选择**信息**以发送短信或多媒体信息。
- 3 此时将打开新信息编辑器。信息编辑器是一款直观易用的工具，将**短信**和**多媒体信息**组合在一起，可在编辑器中轻松切换。信息编辑器的默认设置为短信模式。
- 4 输入电话号码或按**选项**，然后按**发送**以从电话簿列表添加联系人。您甚至可以通过选择**添加收件人**来添加多个联系人。
- 5 输入您的信息。
- 6 依次选择**选项**、**插入**添加**图像、视频剪辑、声音剪辑、日程表、商务名片、备注、文本字段、任务或文本模板**。
- 7 按**发送**。

提示！当您在信息字段中输入的文本超过 1 页时，您可以选择是将短信还是彩信作为信息类型。如果要更改要发送的信息类型，请按**菜单 > 信息 > 信息设置 > 文本信息**，然后选择**将长文本另发送为**。

警告：如果在信息编辑器中添加了图像、视频剪辑、声效剪辑、日程表、名片、文本字段或主题，系统将自动转换到彩信模式，您将需要支付相应的费用。

输入文本

您可以使用手机键盘输入字母数字字符。手机中可以使用以下文本输入法：T9 模式、Abc 模式和 123 模式。

备注：某些字段可能只允许以一种文本输入模式输入（如在地址簿字段输入电话号码）。

T9 模式

T9 模式使用内置字典，根据您的按键的顺序识别您写入的内容。只需按与您要输入的字母关联的数字键即可，输入所有字母后，字典将识别您输入的内容。

Abc 模式

在此模式中，输入字母时，按标示为所需字母的按键一次、两次、三次或四次，直到显示该字母。

123 模式

以每个数字一次击键的方式输入数字。在字母模式下，通过按住相应按键，也可以输入数字。

设置您的电子邮件

使用 GX300 中的电子邮件，您可以在旅途中随时与他人保持联系。设置 POP3 或 IMAP4 电子邮件帐户非常快捷。

- 1 按**菜单**，选择**信息**，然后选择**信息设置**。
- 2 选择**电子邮件**，然后选择**电子邮件帐户**。
- 3 按**新增**，按照弹出说明输入所需的信息。

使用新帐户发送电子邮件

要发送/接收电子邮件，您应设置电子邮件帐户。

- 1 选择**菜单**，然后依次选择**信息**和**创建信息**。
- 2 选择**电子邮件**，新电子邮件将打开。
- 3 输入收件人的地址，然后写主题。
- 4 输入您的信息。

- 5 按**选项**，选择**插入**以添加**图像、视频剪辑、声效剪辑、名片、日程表或备注**。
- 6 按**发送**，您的电子邮件将被发送。

信息文件夹

按**菜单**并选择**信息**。GX300 上使用的文件夹结构无需进行说明。

创建信息 - 您可以创建新信息。

收件箱 - 您接收到的所有信息将放置在**收件箱**中。在此，您可以进行回复、转发等操作。

我的电子邮箱 - 接收到的所有电子邮件均保存在**我的电子邮箱**中。

草稿箱 - 如果您来不及写完一条信息，您可以将已写信息保存在此。

发件箱 - 这是发送信息时使用的临时储存文件夹。

已发件箱 - 您发送的所有信息的副本将放置在**已发件箱**文件夹中。

保存的项目 - 可以访问保存的信息、文本模板和多媒体模板。

情绪符 - 一个已编写好的有用图释，用于快速回复。您可以添加、编辑和删除图释。您可以在写信息时插入所需图释。

信息设置 - 已预定义信息设置，因此，您可以立即发送信息。如果要更改设置，则可使用设置选项执行此操作。

相机

使用手机内置的相机模式，您可以拍摄人物照片。此外，您可以将照片发送给其他人，或将照片用作墙纸。

快速拍照

- 1 按**菜单**，然后选择**多媒体**。
选择**相机**以打开取景器。
- 2 握住手机，将镜头对准要拍摄的物体。
- 3 按  键拍照。

摄像机

快速摄像

- 1 按**菜单**，选择**多媒体**，然后选择**视频**。
- 2 将相机镜头对准要拍摄的物体。

- 3 按  键可开始录制。
- 4 REC 出现在取景器上，计时器将显示视频长度。
- 5 选择**停止**可以停止录制。

音乐

GX300 拥有内置音乐播放器，因此，您可以播放所有喜爱的曲目。

备注：音乐的版权受国际条约和国家版权法保护。可能需要获得许可或许可证才能复制音乐。在某些国家，国际法禁止私人复制版权所有的材料。请查看有关使用此材料的适用国家的国家立法。

FM 收音机

GX300 拥有 **FM 收音机**功能，因此您在路上也能转到喜爱的电台并收听无线广播。

备注：要收听收音机，您需要插入耳机。将插头接入耳机接口以便收听无线广播并确保良好的无线电接收效果。

搜索电台

- 1 按**菜单**，选择**多媒体**，然后选择 **FM 收音机**。
- 2 选择**选项**，选择**自动扫描**，然后选择**是**。您也可以使用左右导航键搜索电台。

收听收音机

- 1 按**菜单**，选择**媒体**，然后选择 **FM 收音机**。
- 2 选择您要收听的电台的频道编号。

提示！ 您可以通过内置扬声器收听收音机。按**选项**，选择**通过扬声器收听**。

录制收音机内容

- 1 在收听收音机的过程中按  键。
- 2 录制时间将显示在手机上。如果要停止录音，请按  键。如果录音完成，所录制的内容将以 MP3 文件格式保存在**图片库**中。

语音备忘录

使用录音机录制语音备忘录或其它声音。

录制语音备忘录

- 1 按**菜单**，选择**多媒体**，然后选择**录音机**。
- 2 按  键可开始录制。
- 3 选择  键结束录音。
- 4 按**选项**，然后选择**播放**收听录音。

图片库

您可以将任意媒体文件存储到手机内存中，这样，您可以轻松访问所有图片、声音、视频和游戏。您也可以将文件保存到存储卡中。使用存储卡的优点是：您可以释放手机内存的存储空间。所有多媒体文件保存在图片库中。按**菜单**，然后选择**图片库**打开文件夹列表。

管理器

设置闹钟

（菜单 > 管理器 > 闹钟）

您最多可以将 5 个闹钟设置为在指定时间停止响铃。

使用日历

（菜单 > 管理器 > 日程表）

当进入此菜单时，屏幕上出现日历。当前日期上有一方形光标。您可以使用导航键将光标移到另一日期。

向任务列表添加项目（菜单 > 管理器 > 任务列表）

您可以查看、编辑和添加要执行的任务。

添加备忘录

（菜单 > 管理器 > 备注）

您可以在此注册个人备忘录。

私人备忘录（菜单 > 管理器 > 私人备忘录）

您可以撰写私人备忘录以保护自己的隐私。您可以使用此菜单输入安全密码。

使用计算器

(菜单 > 管理器 > 计算器)

计算器提供基本的数学运算功能：加、减、乘、除及科学运算等等。

使用秒表

(菜单 > 管理器 > 秒表)

使用此选项可使用秒表功能。

日期搜索器

(菜单 > 管理器 > 日期计算器)

日期搜索器是一款便捷的工具，有助于您计算特定天数后的日期。

换算单位

(菜单 > 管理器 > 换算器)

此功能用于将任一度量值转换成所需的单位。

为世界时间添加城市 (菜单 > 管理器 > 世界时间)

您可以将所需的城市添加到世界时间列表。您还可以查看世界各地主要城市的当前时间。

转至

(菜单 > 管理器 > 转到)

帮助您转到要搜索的菜单。您可以将项目设为“转至”。

手电筒

(菜单 > 管理器 > 闪光灯)

这允许您使用灯照亮。将其设置为“开”，您可以找到手机后面的灯。

伪装呼叫

(菜单 > 管理器 > 伪装呼叫)

此功能可用于礼貌性地避免尴尬境地。

您可以通过在“伪装呼叫”菜单中设置时间来自行呼叫。

网络

访问 WAP 浏览器

您可以启动网络浏览器并访问在“网络设置”中启动的网络设置的主页。您也可以手动输入 URL 地址并访问相关网页。

- 1 按**菜单**，然后选择**网络**。
- 2 要直接访问 WAP 浏览器主页，请选择**主页**。或者，选择**转到网址**或键入所需 URL。

备注：连接此服务并下载内容时，可能会产生额外费用。查看网络提供商要求的数据付费。

设置

个性化情景模式

(菜单 > 设置 > 网络设置)

您可以个性化每种情景模式。选择您需要的情景模式，选择**选项**，然后选择**编辑**。

使用飞行模式

(菜单 > 设置 > 网络设置 > 飞行模式)

使用此功能，将飞行模式设为打开。飞行模式被设为打开时，您将无法拨打电话、连接互联网或发送信息。

更改显示设置

(菜单 > 设置 > 显示)

您可以更改手机显示的设置。

更改日期和时间

(菜单 > 设置 > 日期和时间)

您可以设置与日期和时间相关的功能。

更改连接设置

网络运营商已为您设置连接设置，因此，您开机即可使用手机。如果要更改设置，请使用此菜单。在此菜单中，您可以配置网络设置和数据访问配置文件。

按**菜单**，选择**设置**，然后选择**连接**。选项包括：

蓝牙 – 设置 GX300 以使用蓝牙。您可以将见性应用于其他设备 或搜索您的手机要与之配对的设备。

USB 连接模式 – 您可以在手机上选择用于多种用途的 USB 连接模式。

- **批量存储：**选择此选项并将手机连接到电脑，将文件拖放到 GX300 可移动设备文件夹。
- **PC 套件：**选择此选项并以 PC Sync 模式将手机连接到电脑。

- **每次询问：**选择此选项，每次手机连接到电脑时会提供一个选项，以供选择模式。

备注：要使用 USB 批量存储功能，您需要在手机中插入外部存储卡。

更改蓝牙设置

1 按**菜单**，选择**设置**，然后选择**连接**。

2 选择**蓝牙**，然后选择**设置**。
进行更改：

显示本机号码 - 选择您的设备对于其他人**可见**、**隐藏**还是**可见 1 分钟**。

我的手机名称 - 为您的 LG GX300 输入一个名称。

支持的服务 - 显示支持哪些服务。

我的地址 - 查看您的蓝牙地址。

与其它蓝牙设备配对

1 查看蓝牙是否为开且可见。
您可以在**蓝牙设置**菜单中更改可见性：选择**显示本机号码**，然后选择**可见**。

2 从**蓝牙菜单**中选择**活动设备**。

3 GX300 将搜索设备。搜索完成时，屏幕上将显示**新增和更新**。

4 选择想要配对的设备，然后手机将创建通行码窗口。

5 按或输入通行码。

6 随后，手机将连接到其它设备。

7 现在，受通行码保护的蓝牙连接已经准备就绪了。

PC 套件

您可以同步 PC 与手机。同步有助于确保所有重要信息和日期匹配，同时做好备份。

在电脑上安装 LG PC 套件

1 转到 www.lgmobile.com，先选择您所在区域，然后选择国家/地区。

2 单击**手册和软件**。

3 下载 LG Mobile 支持工具。

4 根据屏幕说明完成 LG PC 套件安装程序向导。

5 安装完成后，桌面上将显示 LG PC 套件图标。

更改其它设置

网络 - 使用此菜单选择网络模式设置。此外，您还可以向首选列表添加要连接的可选网络。

互联网配置文件 - 此菜单显示互联网配置文件。您可以使用选项菜单新建、删除或编辑配置文件。但是，您不能删除或编辑默认配置。

存取点 - 此菜单显示接入点列表。您可以使用选项菜单新建、删除或编辑配置文件。但是，您不能删除或编辑默认配置。

分组数据连接 - 如果选择“可用时”，手机将在开机时自动注册 GPRS 网络。如果选择“需要时”，GPRS 连接将仅在 WAP 或应用程序连接时建立。

更改手机设置

(菜单 > 设置 > 手机)

您可以根据自己的需要，随心所欲地对 GX300 进行调节。

自动键盘锁 - 在待机屏幕下自动锁定键盘。

语言 - 您可以更改手机中显示文本的语言。此更改还将影响语言输入模式。

省电 - 选择该选项可将省电设置切换为“仅限夜间”操作、始终打开或关闭。如果设为始终开，可以节省电池电量。

手机信息 - 查看 GX300 的技术信息。

更改安全设置

(菜单 > 设置 > 安全性)

更改安全设置以保护 GX300 及重要信息。

PIN 码请求 - 选择开机时要请求的 PIN 码。

手机锁 - 选择以锁定手机。

SIM 卡更换时锁定 - 如果启动此选项，手机将在您更换 SIM 卡时请求安全码。

更改密码 - 更改 PIN 码、PIN2 码或安全码。

查看内存状态

(菜单 > 设置 > 内存资料)

您可以使用内存管理器确定各存储器的使用情况并查看剩余可用空间：公用内存、预留内存、SIM 卡和外置存储器，在插入存储卡时还可以设置主存储器。

重设手机

(菜单 > 设置 > 恢复出厂设置)

使用**恢复出厂设置**将所有设置恢复到出厂时的设定。要启动此功能，您需要安全密码。默认安全密码设为“0000”。

手机软件更新

从互联网的 LG 手机软件更新

有关使用此功能的详细信息，请访问 <http://update.lgmobile.com> 或 <http://www.lg.com/common/index.jsp> 选择国家/地区支持。

此功能帮助您方便地从互联网将手机固件更新为最新版本，而无需访问服务中心。

由于手机固件更新要求用户在更新过程期间保持全部注意力，因此，在继续执行操作之前，请留意每一个步骤中出现的所有说明和提示。请注意，在升级过程中移除 USB 数据线或取出电池将严重损坏您的手机。

关于安全有效使用手机的准则

请阅读以下简单的准则。违反这些准则可能造成危险或者触犯法律。

暴露在射频能量之下

无线电波暴露和“特定吸收率”（SAR）信息。此款 GX300 型手机已设计为遵守有关适用的无线电波暴露安全要求。此要求基于相关的科学准则，其中包括为确保所有人员（无论年龄和健康状况）安全而设计的安全裕量。

- 无线电波暴露准则采用一种称为“特定吸收率”或 SAR 的测量单位。SAR 测试是在所有用到的频带中以手机的最高认可功率电平进行发射时使用标准化方法执行的。
- 不同的 LG 手机型号可能有不同的 SAR 能级，但它们均符合相关的无线电波暴露准则。
- 国际非电离辐射防护委员会（ICNIRP）建议的 SAR 上限值为：每 10g 重的人体组织吸收的能量平均值不超过 2W/kg。

- 由 DAS4 对该型号手机进行的测试，人耳能够承受的 SAR 最大值为 1.43 W/kg（10 克），戴在身体上时，其值为 1.54 W/kg（10 克）。
- 电气电子工程师协会（IEEE）建议的 SAR 上限值为 1.6 W/kg，平均值超过 1 克薄纸，此 SAR 数据适用于各个国家/地区的居民。

产品保养和维护

警告

仅使用经核准为用于此特定手机型号的电池、充电器和配件。使用任何其它类型可能导致适用于此手机的许可或保修失效，并可能造成危险。

- 不要拆解本机。当需要维修时，请将手机送往合格的服务技术人员处。
- 远离诸如电视、收音机或个人计算机之类的电器。
- 远离诸如暖气片或厨灶之类的热源。

- 小心不要让手机摔落。
- 不要让手机受到机械振动或撞击。
- 在任何有特殊条例要求的区域关闭手机。例如，请勿在医院使用手机，因为它可能影响敏感的医疗装置。
- 手机充电时，请勿用湿手操作手机。这可能会导致电击或手机严重受损。
- 请勿在靠近易燃物体的位置充电，因为手机可能因加热而引发火灾。
- 用包装材料或乙烯基包装纸包裹手机可能会损坏手机涂层。
- 如果手机置于柔软物体之上，请不要充电。
- 应将手机放在完全通风的位置充电。
- 不要在烟雾或灰尘过多的环境中使用或存放手机。
- 不要将手机放在信用卡或卡式车票旁边，它可能会影响磁条上的信息。
- 不要用尖锐物体敲击屏幕，这可能会损坏手机。
- 不要将手机暴露在液体或潮气中。
- 谨慎使用诸如耳机之类的配件。在不必要的情况下，不要触摸天线。

有效的手机操作

电子设备

所有手机都可能受到干扰，这种干扰会对性能造成影响。

- 在未经允许的情况下，不得在医疗装置附近使用手机。不要将手机放在心脏起搏点上，即胸前的口袋内。
- 手机可能会对某些助听器造成干扰。
- 微弱的干扰可能会影响电视、收音机、个人计算机等。

行车安全

查阅有关在驾驶时使用手机的本地法律法规。

- 不要在驾驶时使用手持式手机。
- 将注意力完全集中在驾驶上。
- 如果有免提装置，请使用免提装置。
- 如果行驶条件需要，请在拨打或接听电话之前将车辆驶离道路并停车。
- 射频能量可能影响车辆内的电子系统，例如立体声音响、安全设备等。
- 当车辆配备气囊时，不要让安装的便携式的无线设备阻挡气囊。由于不适当的个人行为，可能造成严重伤害。

- 如果您在外出时使用耳机收听音乐，请确保将音量设置为合理的音量级别，以便注意周围的情况。在过马路时，尤其要注意这一点。

防止损伤您的听力

如果您长时间置于高音环境中，那么您的听力可能会遭到伤害。因此，我们建议您在开机或关机时不要将手机置于耳边。同时，我们还建议您将音乐和通话音量设置为合理的音量级别。

玻璃部分

手机部分为玻璃制。如果手机摔落到坚硬表面或受到强烈撞击，玻璃会破碎。如果玻璃破碎，请勿触摸或尝试取出玻璃碎片。停止使用手机，在授权的服务供应商处更换玻璃。

爆破区域

不要在正进行爆破的地区使用手机。请依照有关限制，并遵守任何规章或规定。

易爆环境

- 不要在加油站内使用手机。
- 不要在靠近燃料或化学制品处使用手机。
- 不要在放有手机和配件的车厢内运输或存放可燃气体、液体或爆炸品。

在飞机上

无线设备可能对飞机造成干扰。

- 登机前，请关机。
- 未经机务人员允许，不得在地面上使用手机。

儿童

将手机放在儿童接触不到的安全地方。手机中包含细小零件，如果脱落可能导致窒息危险。

紧急电话

并非在所有手机网络中均可使用紧急电话。因此，您不应仅依赖于手机的紧急呼叫功能。请向本地的服务提供商核准。

电池信息及保养


- 您无需在再次充电前对电池进行完全放电。与其它电池系统不同，本机电池不具有可能影响电池性能的记忆效应。
- 只能使用 LG 电池和充电器。LG 充电器设计为最大程度地延长电池使用寿命。
- 不要拆解电池组或将其短路。
- 保持电池组的金属触点清洁。
- 当电池不再提供合乎要求的性能时，请更换电池。在需要更换之前，电池组可以反复充电数百次。

- 如果电池已经使用很长一段时间，请对电池再次进行充电以保持最佳使用状态。
- 不要将电池充电器暴露在直射阳光下，也不要放在诸如浴室之类的高湿环境中使用。
- 不要将电池存放在过热或过冷的地方，这可能损害电池的性能。
- 如果用不适当的电池进行替换，可能会有爆炸危险。
- 请按制造商的说明处置用过的电池。如果可能，请循环使用电池。不要象处理家用废物一样处理电池。
- 如果要更换电池，请将其携带至 LG Electronics 授权服务点或经销商处以寻求帮助。
- 手机充好电后，请务必将充电器从墙上插座拔下，以避免不必要的耗电。
- 实际的电池寿命将取决于网络配置、产品设置、使用方式、电池和环境条件。


配件

以下配件可与 GX300 一起使用。


充电器

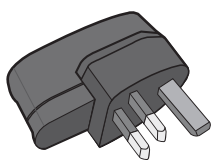

数据线

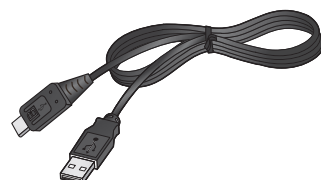

电池

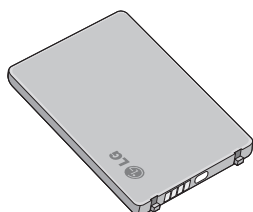

立体声
耳机



备注：

- 务必使用原装 LG 配件。
- 否则可能导致保修失效。
- 在不同地区提供的配件可能不同；如需要进一步查询有关情况，请与我们的地区服务公司或代理联系。

技术参数

外部环境

最高：+55° C（放电）、
+45° C（充电）

最低温度：-10° C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20,Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri band Terminal Equipment

Model Name

GX300

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v1.3.2
EN 300 328 v1.7.1
EN 60950-1 : 2001
EN 50360 : 2001 / EN62209-1 : 2006
EN 301 511 v9.0.2

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Seung Hyoun, Ji / Director

Issued Date

27. Apr. 2010



Signature of representative

LG Electronics Inc. – EU Representative

Veluwezoom 15, 1327 AE Almere, The Netherlands

26

故障排除

本章列出了您在使用手机过程中可能遇到的一些问题。有些问题可能需要您致电服务提供商，但大多数问题您可自行解决。

信息	可能原因	可能的解决方案
SIM 卡错误	手机中没有安装 SIM 卡或 SIM 卡插入不正确。	请确保正确插入 SIM 卡。
无网络连接	信号弱 位于 GSM 网络覆盖区域以外	将手机移到窗边或开放的区域中。检查服务提供商覆盖图。
代码不匹配	要更改安全码，您需要在此输入以确认新代码。	请与服务提供商联系。
无法设置功能	服务提供商不支持或需要注册	请与服务提供商联系。
无法拨打电话	拨号错误 插入的新 SIM 卡达到尝试次数上限	新网络未获得授权。查看新的限制。与服务提供商联系或重新设置 PIN 2 的限制。
手机无法打开	按住/关键的时间不够 电池电量空 电池触点脏	请按住/关键至少两秒钟。 充电器使用时间过长。 清洁触点。

故障排除

信息	可能原因	可能的解决方案
充电错误	电池电量空	为电池充电。
	温度超出范围	确保外部环境温度适当，稍等片刻，然后重新充电。
	触点问题	检查电源，连接到手机。检查电池触点，如果需要，请清洁。
	无电源电压	插入其它插口，或检查电压。
	充电器故障	如果充电器不发热，请替换。
	错误充电器	请仅使用原装 LG 配件。
手机无网络	电池故障	替换电池。
	信号太弱	将自动重新连接到其它服务提供商。
不允许输入号码	已打开固定拨号功能。	检查设置。

GX300 User Guide - English

This guide will help you understand your new mobile phone. It will provide you with useful explanations of features on your phone.



Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

Contents

Getting to know your phone	4	Message folders.....	14
Installing a memory card.....	5	Camera	14
Installing the SIM and battery	6	Taking a quick photo	15
Charging your phone.....	7	Video camera	15
Using Dual SIM-card.....	8	Shooting a quick video	15
Calls	9	Music.....	15
Making a call.....	9	FM radio	15
Making a call from your contacts.....	9	Searching for stations.....	15
Answering and rejecting a call.....	9	Listening to the radio	16
Using the speakerphone.....	9	Recording the Radio	16
Speed dialling	9	Voice recorder.....	16
Sending SOS Message.....	10	Recording your voice memo	16
Viewing your call logs	10	Gallery	16
Changing the call settings.....	10	Organiser	17
Contacts.....	11	Setting your alarm.....	17
Searching for a contact.....	11	Using the calendar	17
Adding a new contact.....	11	Adding an item to your to do list.....	17
Adding a contact to a group.....	11	Adding a note.....	17
Messaging.....	11	Secret notes	17
Sending a message	11	Using your calculator.....	17
Entering text.....	12	Using the stopwatch.....	17
T9 mode	13	Date finder.....	17
Abc mode	13	Converting a unit	18
123 mode.....	13	Adding a city to your world time.....	18
Setting up your e-mail	13	Go to	18
Sending an e-mail using your new account.....	13		

Torch	18	Phone Software update	23
Fake call	18	Guidelines for safe and	
Web	18	efficient use	24
Accessing the wap browser.....	18	Accessories	29
Settings	19	Technical data.....	30
Personalising your profiles	19	Trouble shooting	31
Using flight mode	19		
Changing your display settings ..	19		
Changing your date & time	19		
Changing your connectivity			
settings	19		
Changing your Bluetooth			
settings	20		
Pairing with another Bluetooth			
device	20		
PC Suite	21		
Installing LG PC Suite on your			
computer	21		
Changing your other settings	21		
Changing your phone settings.....	22		
Changing your security settings	22		
Viewing memory status.....	22		
Resetting your phone.....	23		

Getting to know your phone

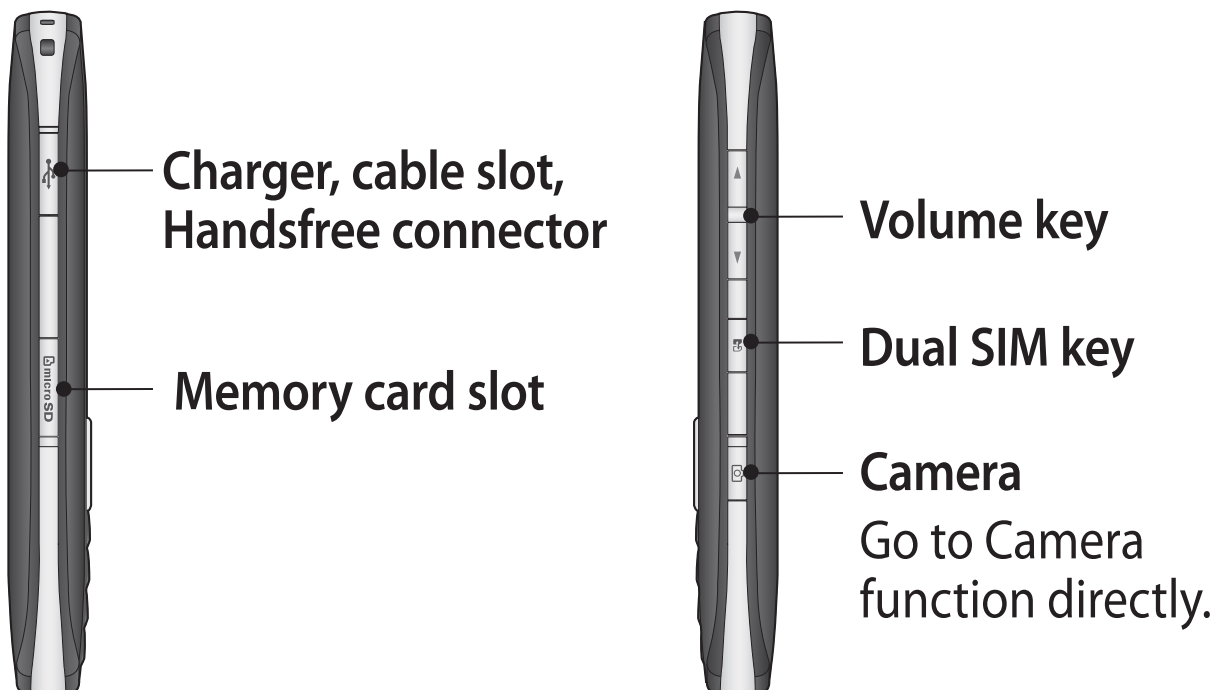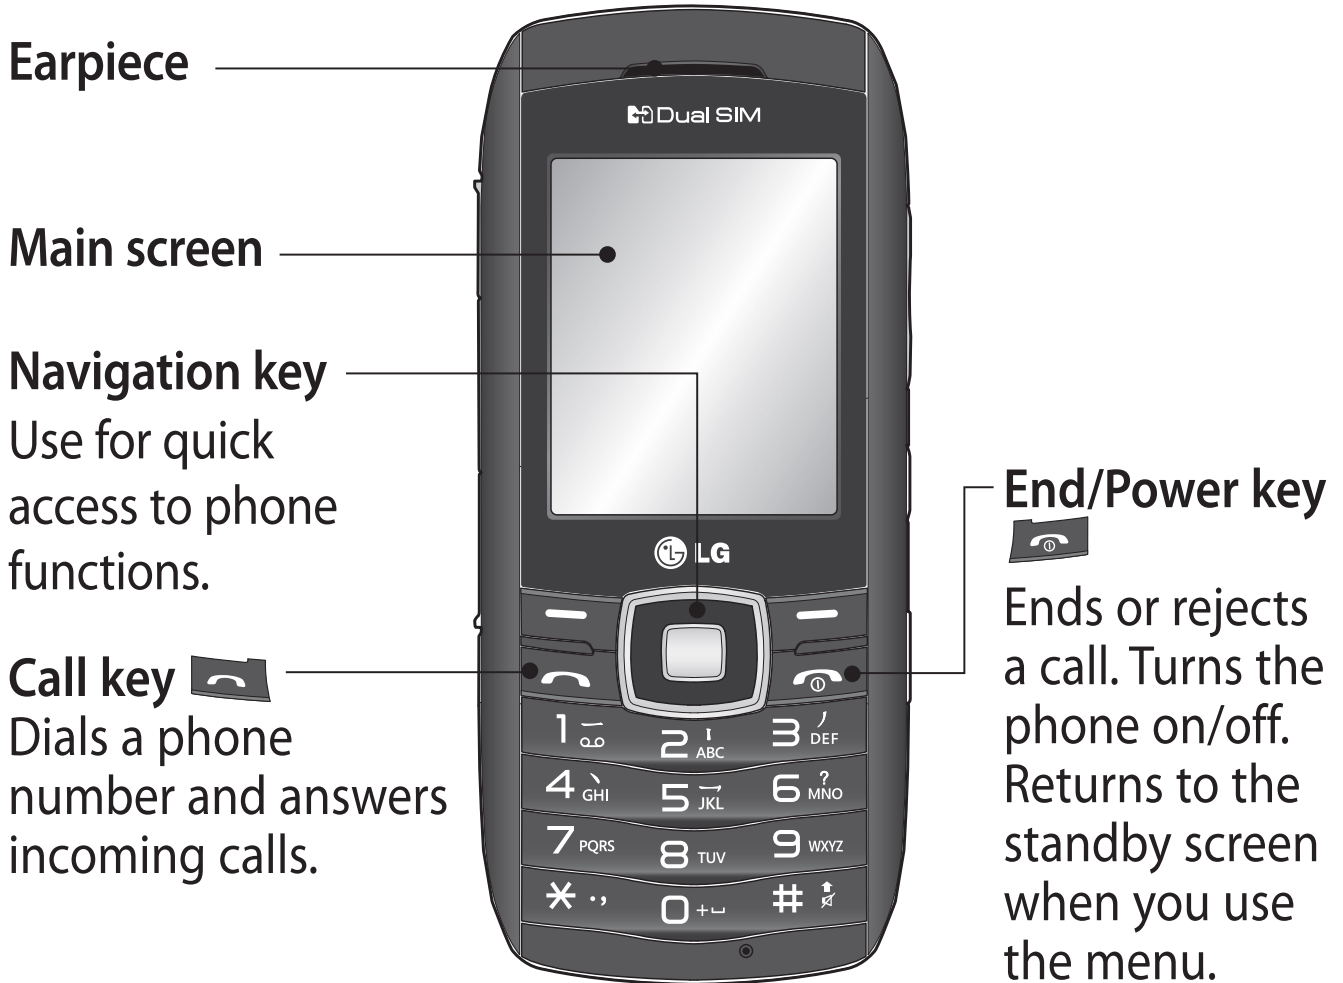

Installing a memory card

Lift the memory card cover and insert a micro SD card with the golden contact area facing downwards. Close the memory card cover so that it clicks shut. To remove the memory card, gently push it.



Note: A memory card is an optional accessory.

Formatting the memory card



Press **Menu** and select **Settings**. Choose **Memory info**, select **External memory** and press **Format**, and insert security code.

WARNING: When you format your memory card, all the content will be wiped. If you do not want to lose the data on your memory card, back it up first.

Installing the SIM and battery


1 Remove the battery cover

Slide the battery cover towards the top of the phone and away from it.

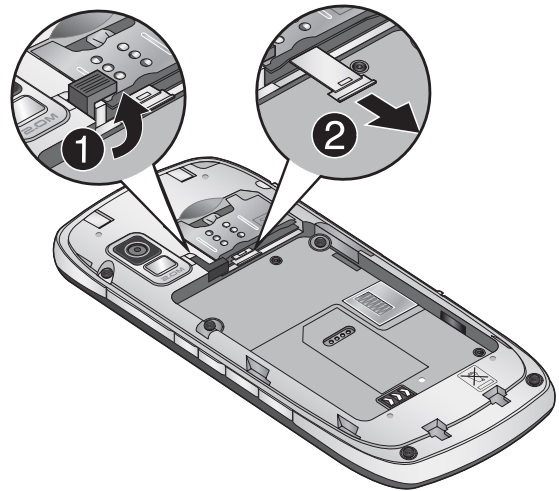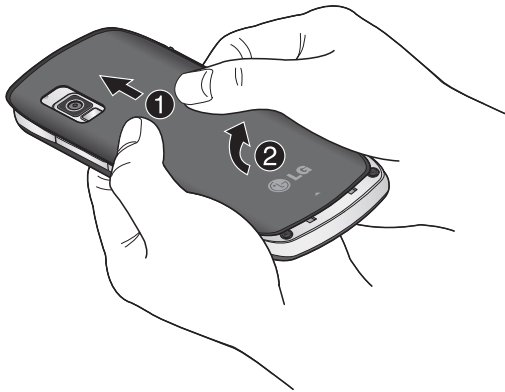


2 Install the SIM card

Slide the SIM card into the SIM card holder making sure that the gold contact area on the card is facing downwards. Please make sure the battery is removed from the phone before installing the SIM card. To remove the SIM card, pull it gently in the opposite direction.

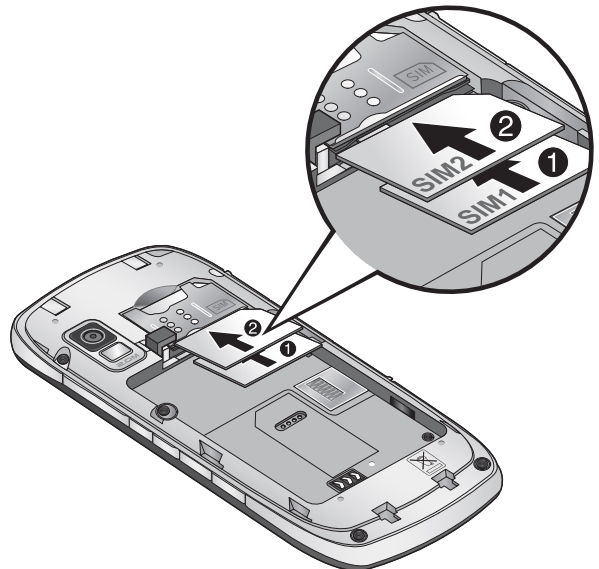

WARNING

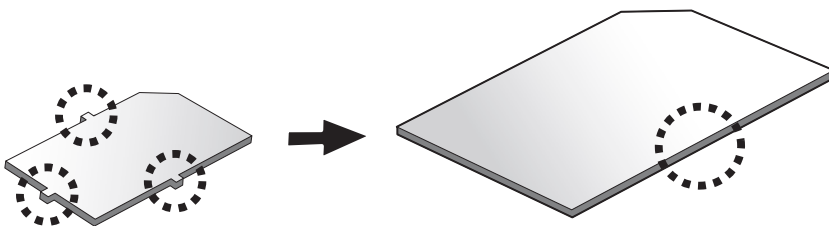


Make sure that your SIM card has a neat and clean cut before you insert it into the holder.

Charging your phone

3 Install the battery

Insert the left side of the battery into the top edge of the battery compartment first. Ensure that the battery contacts align with the phone's terminals. Press the right side of the battery until down it clicks into place.

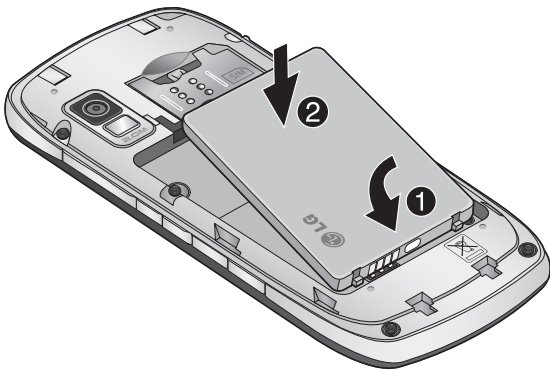

4 Replace the battery cover

Insert the top of the battery cover and push down and slide until it clicks into place.



Remove the charger socket cover on the side of your GX300. Connect the Travel Adapter (Charger) and the included USB cable. Connect the USB cable into the phone and plug it into a power socket. Your GX300 must be charged until the "Battery full" message appears on the screen.

NOTE: The battery must be fully charged initially to improve battery lifetime. Disregard the first "Battery full" message and keep the phone on charge overnight.



Using Dual SIM-card

You can see two Network Signal icons on the left-top of the screen when you insert two SIM-Card.

To select or switch the SIM-card, press Menu and select Settings, then select Dual SIM.

Or press **Dual SIM key** simply on the right side of the GX300. **Dual SIM key** make it easy for you to switch SIM-Card whenever you call, send messages and so on.

TIP! You can see the network signals highlighted by background colour when you switch them. It makes you easily identify the strength of your signal of the selected SIM-Card.

Calls

Making a call

- 1 Key in the number using the keypad. To delete a digit press **CLR**.
- 2 Press  to initiate the call.
- 3 To end the call, press .

TIP! To enter + when making an international call, press and hold **0**.

TIP! To control the volume during a call, press volume key.

Making a call from your contacts

- 1 Select **Contacts** from the home screen.
- 2 Using the keypad, enter the first letter of the contact you want to call. For example, for **Office**, Press 6 three times to select the first character, "O".
- 3 Select **Make call** by from **Options** or press  to initiate the call.

Answering and rejecting a call

When your phone rings, press  to answer the call.

To mute your phone while it is ringing, simply select **Silent**. This is useful if you have forgotten to change your profile to **Silent** for a meeting.

Press  or select **Reject** to reject the incoming call.

Using the speakerphone

During a call, you can activate speakerphone by pressing  key and you can use the handset in hands-free.

If the speakerphone is active, press  key again to resume normal handset conversation mode.

Speed dialling

Press **Menu** and select **Contacts**, then choose **Speed dials**.

You can assign a speed dial number to a contact you call frequently.

Speed dial 1 is set to your voice mail and you can not change it.

Sending SOS Message

This allows you to send SOS message to your friends automatically by long press No. 9 key on your keypad when you are in emergency.

Initial long press of No. 9 key brings up your SOS message settings. Once you set ON, you can edit this function by selecting Menu > Contacts > Speed dials.

Viewing your call logs

Press **Menu** and select **Call log**.

You can check the call record of missed, received, and dialled calls only if the network supports the Calling Line Identification (CLI) within the service area.

Changing the call settings

You can set the menu relevant to a call. Press **Menu**, select **Settings** and choose **Call** and Select **SIM 1** or **SIM 2**.

Call divert - Choose whether to divert your calls.

Call barring - Select when you would like calls to be barred.

Fixed dial numbers - Choose a list of numbers that can be called from your phone. You'll need your PIN2 code from your operator. Only numbers included in the fixed dial list can be called from your phone.

Call waiting - Be alerted when you have a call waiting. (Depends on your network provider.)

Call reject - Select **Off** or **On** and choose to reject all calls, contacts, those from specific groups, unregistered numbers (those not in your list of contacts) or those with no caller ID.

Send my number - Choose whether your number will be displayed when you call someone. (Depends on your network provider.)

Auto redial - Allows you to set the auto redial function when a call attempt has failed.

Minute minder - Determines whether to sound a tone when you are on the phone as per the set time.

Save new number - Choose **Yes** or **No**.

Contacts

Searching for a contact

- 1 Select **Contacts** from the home screen and choose **Names**.
- 2 Using the keypad enter the first letter of the contact you want to call.
- 3 To scroll through the contacts and their different numbers use the navigation keys.

Adding a new contact

- 1 Press **Menu** and select **Contacts** then choose **Names**. Press **Options** and **Add new contact** and choose **Handset** or **SIM 1** or **SIM 2**.
- 2 Enter the first and last name of your new contact. You do not have to enter both, but you must enter one or the other.
- 3 Enter the number and select **Options** then choose **Done**.

Note: If you add more information, press **Options** and choose **Add detail** then select options you want.

Note: When you are storing a contact's e-mail address, press  key and select a symbol @ then **OK**.

Adding a contact to a group

You can save your contacts into groups, for example, keeping your work colleagues and family separate. There are a number of groups including **Family**, **Friends**, **Colleague**, **School** and **VIP** already set up on the phone.

Messaging

Your GX300 includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service), e-mail as well as the network's service messages.

Sending a message

- 1 Press **Menu**, select **Messaging**, and choose **Create message**.

- 2 Choose **Message** to send an SMS or MMS.
- 3 A new message editor will open. The message editor combines **Text message** and **Multimedia messages** into one intuitive and easy to switch between editor. The default setting of the message editor is text message.
- 4 Enter the phone number or press **Options** and select **Send** to add a contact from the list of your contacts. You can even add multiple contacts by selecting **Add recipient**.
- 5 Enter your message.
- 6 Select **Options** and choose **Insert** to add an **Image, Video clip, Sound clip, Schedule, Business card, Note, Text field, To do**, or a **Text template**.
- 7 Press **Send**.

TIP! You can select your message type as SMS or MMS when you enter a text longer than 1 page in the message field. If you want to change the type of message to send, press **Menu > Messaging > Message settings > Text message > SIM 1 or SIM 2**, and choose **Send long text as**.

WARNING: Image, Video clip, Sound clip, Schedule, Business card, Text field or Subject is added to the message editor, it will be automatically converted to MMS mode and you will be charged accordingly.

Entering text

You can enter alphanumeric characters using the phone's keypad. The following text input methods are available in the phone: T9 mode, Abc mode and 123 mode.

Note: Some fields may allow only one text input mode (e.g. telephone number in address book fields).

T9 mode

T9 mode uses a built-in dictionary to recognise words you're writing based on the key sequences you press. Simply press the number key associated with the letter you want to enter, and the dictionary will recognise the word once all the letters are entered.

Abc mode

This mode allows you to enter letters by pressing the key labeled with the required letter once, twice, three or four times until the letter is displayed.

123 mode

Type numbers using one keystroke per number. You can also add numbers while remaining in letter modes by pressing and holding the desired key.

Setting up your e-mail

You can stay in touch on the move using e-mail on your GX300. It's quick and simple to set up a POP3 or IMAP4 e-mail account.

- 1 Press **Menu**, select **Messaging**, and choose **Message Settings**.
- 2 Select **E-mail** then **E-mail accounts**.
- 3 Press **Add** and follow the pop up instruction and enter the information required.

Sending an e-mail using your new account

To send/receive an e-mail, you should set up an e-mail account.

- 1 Select **Menu**, select **Messaging** and choose **Create message**.
- 2 Choose **E-mail** and a new e-mail will open.
- 3 Enter the recipient's address and write a subject.
- 4 Enter your message.
- 5 Press **Options**, select **Insert** to add an **Image**, **Video clip**, **Sound clip**, **Business card**, **Schedule** or a **Note**.
- 6 Press **Send** and your e-mail will be sent.

Message folders

Press **Menu**, select **Messaging**.
The folder structure used on your GX300 is fairly self explanatory.

Create message - Allows you to create new message.

Inbox - All the messages you receive are placed into your **Inbox**. From here you can reply, forward and more.

My mailbox - All your e-mails you receive are placed into **My mailbox**.

Drafts - If you don't have time to finish writing a message, you can save what you have written so far in here.

Outbox - This is a temporary storage folder used while messages are being sent.

Sent items - Copies of all the messages you send are kept into your **Sent items**.

Saved Items - You can access your **Saved messages**, **Text templates** and **Multimedia templates**.

Emoticons - A list of useful emoticons already written for a quick reply. You can add, edit and delete emoticons. You can insert the emoticon which you preferred on writing a message.

Message settings - Your message settings are pre-defined so that you can send messages immediately. If you would like to change the settings, you can do this using the settings options.

Camera

Using the camera module built in your phone, you can take pictures of people. Additionally, you can send photos to other people and select photos as wallpaper.

Taking a quick photo

- 1 Press **Menu** and select **Media**. Select **Camera** to open the viewfinder.
- 2 Holding the phone and, point the lens towards the subject of the photo.
- 3 Press  key to take a photo.

Video camera

Shooting a quick video

- 1 Press **Menu** and select **Media**, then choose **Video**.
- 2 Point the camera lens towards the subject of the video.
- 3 Press  key to start recording.
- 4 REC will appear in the viewfinder and a timer will show the length of your video.
- 5 Select **Stop** to stop recording.

Music

Your GX300 has a built-in music player so you can play all your favourite music.

Note: Music is copyright protected in international treaties and national copyright laws. It may be necessary to obtain permission or licence to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Please check the national legislation of the applicable country concerning the use of such materials.

FM radio

Your GX300 has an **FM radio** feature so you can tune into your favourite stations and listen on the move.

Note: You will need to insert your headset in order to listen to the radio. Insert the plug into the headset connector in order to listen to the radio and keep the good radio reception.

Searching for stations

- 1 Press **Menu** and select **Media**, then choose **FM radio**.

- 2 Select **Option** and choose **Auto scan** then select **Yes**. You can also use the left and right navigation keys to search for stations.

Listening to the radio

- 1 Press **Menu** and select **Media**, then choose **FM radio**.
- 2 Select the channel number of the station you would like to listen to.

TIP! You can listen to the radio via built-in speaker. Press **Options**, select **Listen via speaker**.

Recording the Radio

- 1 Press  key during listening to the radio.
- 2 The recording time is displayed on your phone. If you want to stop the recording, press  key. If recording is done, the recorded contents will be saved in **Gallery** as mp3 file.

Voice recorder

Use your **Voice recorder** to record voice memos or other sounds.

Recording your voice memo

- 1 Press **Menu** and select **Media**, then choose **Voice recorder**.
- 2 Press  key to begin recording.
- 3 Choose **Stop** to end the recording.
- 4 Press **Options** and select **Play** to listen to the recording.

Gallery

You can store any media files into your phone's memory so that you have easy access to all of your images, sounds, videos, others and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory. All your multimedia files will be saved in **Gallery**. Press **Menu** then select **Gallery** to open a list of folders.

Organiser

Setting your alarm (Menu > Organiser > Alarm clock)

You can set up to 5 alarm clocks to go off at a specified time.

Using the calendar (Menu > Organiser > Calendar)

When you enter this menu, a calendar appears. A square cursor is located on the current date. You can move the cursor to another date using the navigation keys. You can add and manage the appointments.

Adding an item to your to do list (Menu > Organiser > To-do list)

You can view, edit and add tasks to do.

Adding a note (Menu > Organiser > Notes)

You can register your own notes here.

Secret notes

(Menu > Organiser > Secret notes)

You can write the private memo to protect your privacy. You enter the security code to use this menu.

Using your calculator (Menu > Organiser > Calculator)

The calculator provides the basic arithmetic functions: addition, subtraction, multiplication, division and Scientific applications also.

Using the stopwatch (Menu > Organiser > Stopwatch)

This option allows you to use the function of a stopwatch.

Date finder (Menu > Organiser > Date finder)

Date finder is a handy tool to help you calculate what the date will be after a certain amount of days has passed.

Converting a unit (Menu > Organiser > Converter)

This converts many measurements into a unit you want.

Adding a city to your world time (Menu > Organiser > World time)

You can add a required city to the list of world clock. You can also check the current time of major cities around the world.

Go to (Menu > Organiser > Go to)

It helps you to go to the menu you search for. You can set the item as Go to.

Torch (Menu > Organiser > Torch)

This allows you to light the place with a lamp. Set it to On and you can find the light from the back side of the phone.

Fake call (Menu > Organiser > Fake call)

This is a useful function for avoiding awkward situation politely.

You can call yourself by setting the time in Fake call menu.

Web

Accessing the wap browser

You can launch the wap browser and access the homepage of the activated profile on Web settings. You can also manually enter an URL address and access the associated wap page.

- 1 Press **Menu** and select **Web**.
- 2 To access the wap browser homepage directly, select **Home**. Alternately, select **Go to address** and type in your desired URL.

Note: An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

Settings

Personalising your profiles (Menu > Settings > Profiles)

You can personalise each profile setting. Choose the profile you want and select **Options** and choose **Edit**.

Using flight mode (Menu > Settings > Profiles > Flight mode)

Use this function to switch the flight mode on. You will not be able to make calls, connect to the Internet, send messages when flight mode is switched on.

Changing your display settings (Menu > Settings > Display)

You can change the settings for the phone display.

Changing your date & time (Menu > Settings > Date and time)

You can set functions relating to the date and time.

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone from switch on. If you want to change any settings, use this menu. You can configure the network setting and data access profiles in this menu.

Press **Menu** and select **Settings** then choose **Connectivity**. Your options are:

Bluetooth - Set up your GX300 for Bluetooth use. You can adapt your visibility to other devices or search through devices your phone is paired with.

USB connection mode - You can select the USB connection mode on your phone for several uses.

- **Mass storage:** Select this and connect the handset to your computer and drag and drop files to the GX300 removable device folder.

- **PC Suite:** Select this and connect the handset to your computer in PC Sync mode.
- **Always Ask:** Selecting this, will give an option, to select the mode, when handset is connected to the computer, every time.

Note: To use the USB mass storage function, you will need to insert an external memory card in your phone.

Changing your Bluetooth settings

- 1 Press **Menu** and select **Settings** then choose **Connectivity**.
- 2 Choose **Bluetooth** and select **Settings**.

Make your changes to:

My phone's visibility - Choose whether to **Visible**, **Hidden** or **Visible for 1 min** your device to others.

My phone's name - Enter a name for your LG GX300.

Supported services - Shows what it supports.

My address - View your Bluetooth address.

Pairing with another Bluetooth device

- 1 Check your Bluetooth is **On** and **Visible**. You can change your visibility in the **Bluetooth Settings** menu, by selecting **My phone's visibility**, then **Visible**.
- 2 Select **Active devices** from the **Bluetooth** menu.
- 3 Your GX300 will search for devices. When the search is completed **Add** and **Refresh** will appear on screen.
- 4 Choose the device you want to pair with, then handset create a passcode window.
- 5 Press or enter passcode.
- 6 Your phone will then connect to the other device.
- 7 Your passcode protected Bluetooth connection is now ready.

PC Suite

You can synchronise your PC with your phone. This will ensure all your important details and dates match, and also act as a back up to help put your mind at ease.

Installing LG PC Suite on your computer

- 1 Go to www.lgmobile.com and choose your region first and then your country.
- 2 Click **Manual & Software**.
- 3 Download **LG Mobile support tool**.
- 4 Follow the instructions on screen to complete the LG PC Suite Installer wizard.
- 5 Once installation is complete, the LG PC Suite icon will appear on your desktop.

Changing your other settings

Network - Choose SIM 1 or SIM 2 , Select network mode settings using this menu. Also you can add a preferable network to be connected to Preferred lists.

Internet profile - Choose SIM 1 or SIM 2 , This menu shows the Internet profiles. You can create new profiles, delete or edit them using the options menu. However, you cannot delete or edit default configurations.

Access points - Choose SIM 1 or SIM 2 , This menu shows the access points list. You can create new profiles, delete or edit them by using the options menu. However, you cannot delete or edit default configurations.

Packet data conn. - Choose SIM 1 or SIM 2 , If you select "When available", your phone is automatically registered to a GPRS network when you switch the phone on. If you select "When needed", the GPRS connection is established for the duration of a WAP or application connection.

Changing your phone settings (Menu > Settings > Phone)

Enjoy the freedom of adapting how your GX300 works for your own style.

Auto key lock - Lock the keypad automatically in standby screen.

Language - You can change the language for the display texts in your phone. This change will also affect the language input mode.

Power save - Choose to switch the power save settings **Off, Night only, Always on**. If you set **Always on**, you can save the battery power.

Handset Information - View the technical information for your GX300.

Changing your security settings (Menu > Settings > Security)

Change your security settings to keep your GX300 and the important information it holds protected.

PIN code request - Choose SIM 1 or SIM 2, Choose a PIN code to be requested when you turn your phone on.

Handset lock - Choose to lock your handset.

Lock if SIM is changed - If you activate this option, your phone will request a security code when you change your SIM card.

Change codes - Change your **PIN code, PIN2 code, Security code**.

Viewing memory status (Menu > Settings > Memory info.)

You can use the memory manager to determine how each memory is used and see how much space is available: common, reserved, SIM 1, SIM 2 and external memory and also set the primary storage when the memory card is inserted.

Resetting your phone (Menu > Settings > Restore factory settings)

Use **Restore factory settings** to reset all the settings to their factory definitions. You need the security code to activate this function. The default security code is set to "0000".

Phone Software update

LG Mobile Phone Software update from internet

For more information on using this function, please visit the <http://update.lgmobile.com> or <http://www.lg.com/common/index.jsp> select country Support

This Feature allows you to update the firmware of your phone to the latest version conveniently from the internet without the need to visit a service center.

As the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure to check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable or battery during the upgrade may seriously damage you mobile phone.

Guidelines for safe and efficient use

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model GX300 has been designed to comply with applicable safety requirements for exposure to radio waves.

These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all users, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.

- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use close to the ear is 1.43 W/kg(10g) and when worn on the body is 1.54 W/kg(10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required. Repairs under warranty, at LG's option, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.

- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

Efficient phone operation

Electronics devices

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, i.e. in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.

- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music while out and about, please ensure that the volume is at a reasonable level so that you are

aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow the rules and regulations.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.

- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the aircraft without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.


Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose off used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.


Accessories

These accessories are supplied with the GX300.

Charger

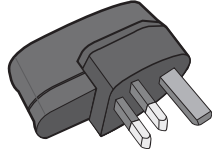


Data cable

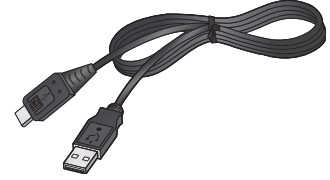

Battery



Stereo headset

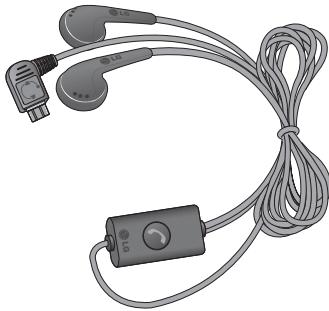

NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

Technical data

Ambient Temperatures

Max.: +55°C (discharging)
+45°C (charging)

Min.: -10°C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri band Terminal Equipment

Model Name

GX300

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v1.3.2

EN 300 328 v1.7.1

EN 60950-1 : 2001

EN 50360 : 2001 / EN62209-1 : 2006

EN 301 511 v9.0.2

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Seung Hyoun, Ji / Director

Issued Date

27. Apr. 2010

LG Electronics Inc. – EU Representative
Veluwezoom 15, 1327 AE Almere, The Netherlands

Signature of representative

Troubleshooting

This chapter lists some problems you might encounter while using your phone. Some problems require you to call your service provider, but most are easy for you to correct yourself.

Message	Possible causes	Possible Solutions
USIM error	There is no USIM card in the phone or it is inserted incorrectly.	Make sure the USIM card is correctly inserted.
No network connection	Signal weak Outside GSM network area	Move towards a window or into an open area. Check the service provider coverage map.
Codes do not match	To change a security code, you will need to confirm the new code by entering it again. The two codes you have entered do not match.	Contact your Service Provider.
Function cannot be set	Not supported by Service Provider, or registration required	Contact your Service Provider.
Calls not available	Dialling error New USIM card inserted Charge limit reached	New network not authorised. Check for new restrictions. Contact Service Provider or reset limit with PIN 2.
Phone cannot be switched on	On/Off key not pressed long enough Battery empty Battery contacts dirty	Press the On/Off key for at least two seconds. Keep charger attached for a longer time. Clean the contacts.

Troubleshooting

Message	Possible causes	Possible Solutions
Charging error	Battery totally empty	Charge battery.
	Temperature out of range	Make sure the ambient temperature is right, wait for a while, and then charge again.
	Contact problem	Check the power supply and connection to the phone. Check the battery contacts and clean them if necessary.
	No mains voltage	Plug in to a different socket or check the voltage.
	Charger defective	If the charger does not warm up, replace it.
	Wrong charger	Only use original LG accessories.
	Battery defective	Replace battery.
Number not permitted	The Fixed dial number function is on.	Check settings.



Warranty Card

產品保用證

Mobile Phone

手提電話

Warranty Card

產品保用證

LG Customer Care Centre
客戶維修服務中心

Welcome to contact for detailed information
歡迎致電查詢詳細資料

Customer Service Hotline 客戶服務熱線 : (852) 3543 7777
E-mail Us 客戶查詢電郵 : cshelpdesk@lge.com
LG Website 瀏覽網站 : www.lg.com

If you want to receive an additional 3 months warranty, please complete warranty registration within 1 month after purchase at
<http://www.lg.com/hk/support/registration/support-sign-in.jsp>
or (852) 3543 7777.

如欲享受額外3個月產品保養，請在購買產品後1個月內登入
<http://www.lg.com/hk/support/registration/support-sign-in.jsp>
或致電(852) 3543 7777登記

Privacy Statement

You are aware that any information supplied by you after purchase of our product will be retained by LG Electronics HK Ltd. and will not be released to third parties. You also authorize LG Electronics HK Ltd. to send you direct promotion materials. Please contact our Customer Service Hotline at (852) 3543 7777 if you wish to modify or erase your provided personal information.

私隱聲明

閣下在購買本公司產品後所提供的任何資料，將會由LG Electronics HK Ltd.保有，不會透露給予第三方，並授權本公司對閣下發出直接推廣通訊。如希望修改或刪除所提供的個人資料，可聯絡本公司客戶服務熱線(852) 3543 7777作出相關安排。

Thank you for your purchase of LG Electronics product under the terms and conditions listed on this warranty card.

多謝閣下購買及使用本公司之產品，請參閱保用證所列之產品保用條款。

IMPORTANT : Please keep and present this warranty card and purchase invoice when services are rendered. Otherwise, this warranty will be voided.

重要事項 : 顧客請保留此保用證及購貨發票，並需在檢查/維修時出示，否則保用無效。

Mobile Phone Warranty Policy 手提電話保用條款

- (1) LG Electronics Hong Kong Limited (hereafter LGEHK) provides warranty period from the date of purchase are as follows and only valid for mobile purchase in Hong Kong only (any promotion gift item is not included):
 - (i) Handset : 12 months
 - (ii) Charger : 6months
 - (iii) Battery : 6months
 - (iv) Hand free earphone : 3months
 - (2) Warranty is valid only for authorized product; parallel import and counterfeit product are invalid.
 - (3) Product is under warranty against manufacturing defects by reason of faulty workmanship or internal electronic parts materials. This warranty does not cover defects arising from natural wear of the product (Including casing, key pad, display, antenna, and accessories, etc.)
 - (4) If check-up or repairing are required, customer must present the original invoice and warranty card on which the relevant IMEI number was printed. Upon any failure to present the above documentation, customer must pay for the costs of the services provided.
 - (5) All parts replaced within the warranty period are the property of LGEHK. We have rights to handle those parts as necessary.
 - (6) Data stored in handsets may be lost after the repair and thus should be properly stored by customer beforehand.
 - (7) Warranty will be voided under the following conditions, and LGEHK reserves the right to refuse providing service and/or shall demand charges for any costs of servicing from customer:
 - (i) Product has been tampered with or undergone unauthorized repair by third parties, improper installation, alternation or modification to this product, or damage, tearing, removal of the warranty sticker that is affixed to this product.
 - (ii) Defects arising from misuse, mishandling, abuse, accident, negligence and damage caused directly or indirectly by fire, flood, liquid water, corrosion, convulsion of nature, war, riot or civil commotion.
 - (iii) The IMEI number sticker on this product has been erased or modified.
 - (iv) The content of warranty policy has been modified without authorization.
 - (8) LGEHK is not responsible for any loss of data or system corruption during the process of transportation or repair to and from the Service Centre and due to the forces of nature.
 - (9) LGEHK reserves the right to terminate or modify the terms of this warranty card. For exceptional cases, subject to report of our investigation, we reserve the right to terminate this warranty card or modify terms of warranty policy.
 - (10) Our company will not be liable for any loss directly or indirectly caused by the breakdown of the product.
 - (11) This warranty card is restricted within Hong Kong SAR only.
 - (12) LG and its Authorized Service Centers reserve the right to use refurbished or reconditioned parts or whole products for the same or functionally equivalent model when conducting product repairs and replacement.
-
- (1) 本公司為客戶提供保修期如下，只適用於香港購買之手機，並不包括各促銷活動之贈品(由購買日起計)
 - (i) 機身 : 12個月
 - (ii) 充電器 : 6個月
 - (iii) 電池 : 6個月
 - (iv) 免提耳機 : 3個月
 - (2) 保修服務只適用於原裝行貨；水貨及冒牌貨均屬無效。
 - (3) 此保修只適用於生產上的瑕疵，如電子零件偶然出現毛病，並不包括手機的自然磨損包括外殼、鍵盤、顯示屏、天線、附件等。
 - (4) 用戶要求維修服務時，須同時攜同手機、保用證及印有IMEI號碼之有效發票正本到本公司指定之維修中心進行維修，否則保修服務無效，客戶須繳付維修費用。
 - (5) 在保修期內維修更換後的所有零件、配置及附件，均屬本公司所有，本公司有權作出任何處理。
 - (6) 手機內存資料有可能因維修後遺失，請顧客要自行保存。
 - (7) 在下列情況下本保用證將自動失效，本公司有權拒絕維修該手機或向客人徵收所有的維修費用。
 - (i) 手機曾作未許可之維修、不適當的安裝、更改，或貼於其上的維修貼紙遭受損毀、撕破、除去，保修服務即無效。
 - (ii) 手機曾被錯誤使用，錯誤處理，疏忽使用，直接或間接意外由火、液體、火災、腐蝕、地震、戰爭、暴亂或天災所造成的損壞。
 - (iii) 手機上的IMEI號碼貼紙一經修改或除去，保修服務即無效。
 - (iv) 擅自修改本保用證的內容。
 - (8) 本公司將對任何於使用、維修或運送時引致之系統錯誤及資料流失，或因天然災害，意外事件造成之損失概不負責。
 - (9) 本保用證的發出及終止權均屬本公司所有。就不明的情況或個案，經審查後，本公司有權發出或終止本保用證。
 - (10) 本公司將不負責由於產品損壞而直接或間接引致之任何損失。
 - (11) 此保用證只適用於香港特別行政區範圍內。
 - (12) 本公司及其授權之維修中心在維修或更換產品時，保留使用與產品或功能相同的部分或全部再生零件之權利。

Service Commitment

服務承諾

LG's mission is to create value for customers. We are committed to improve the life of our customers by putting the customers first, and delivering the best possible pre and after sales services in the way they want.

為顧客創造價值乃LG一貫宗旨。我們致力提供最貼心的售前及售後服務，一切以顧客為先，希望為客戶帶來最優質的生活。

