

KM330 | 用戶手冊 |



繁體中文
简体中文
ENGLISH

KM330 | 用戶手冊

此手冊中的部份內容可能會因手機軟件或服務供應商而有所不同。



LG Electronics Inc.
<http://www.lgmobile.com>

P/N : MMBB0332805 (1.0)

C€0168

Bluetooth QD ID B014743

繁體中文

KM330 用戶手冊

此手冊中的部份內容可能會因手機軟件或服務供應商而有所不同。



目錄

III
目
錄

一般資訊	4	來電等候	19
電池保養	4	進行電話會議	19
保養及維修	4	通話選項提示	19
重要安全資訊	6	遊戲及應用功能	21
存取代碼	6	應用程式	21
射頻能量	6	設定	23
比吸收率 (SAR) 資訊	6	通話記錄	24
電子裝置	7	所有通話	24
心律調校器	7	未接來電	25
助聽器	8	已撥通話	25
飛機	8	已接來電	25
潛在爆炸氣壓	8	刪除通話記錄	25
駕車	8	通話時間	26
妥善處理您的舊電器	9	通話費用	26
您的手機	10	文字訊息數目	26
開始使用	12	GPRS記錄	27
安裝智能咭和電池	12	記事簿	28
充電	12	日曆	28
開關手機	13	待辦事項	29
鍵盤解鎖	13	多媒體	30
備用模式	13	相機	30
使用功能表	14	攝錄機	31
輸入方法	16	音樂播放器	32
通話功能	18	語音備忘錄	33
撥打電話	18	旋律作曲	34
接聽或拒接來電	19	FM 收音機	35
		FM 錄製排程	36

訊息	37
文字訊息 (SMS)	37
多媒體訊息 (MMS)	42
聊天	48
語音郵件伺服器	49
廣播訊息	49
我的檔案	50
影集	50
聲音	51
其他	52
外置記憶體	53
記憶體狀態	53
情景模式	54
標準	54
會議	54
戶外	54
震動	54
耳機	54
靜音	54
藍芽	54
通訊錄	56
搜尋	56
新增通訊錄	57
通話群組	57
快速撥號	58
我的 vCard	58
特別號碼	58
設定	59

工具	60
鬧鐘	60
報時器	60
世界時間	60
計算機	60
單位轉換器	60
貨幣換算器	60
健康	61
STK	62
瀏覽器	63
互聯網	63
數據帳戶	66
連接	67
藍芽	67
網絡	70
設定	71
時間和日期	71
顯示	72
手機	73
通話	73
安全	76
恢復原廠設定	77
疑難排解	78
緊急通話	80
配件	81
技術資料	82

一般資訊

電池保養

本手機由可充電電池供電。

- ▶ 電池可充放電數百次，但最終會報廢。若您發現電池的使用時長（包括通話和備用）明顯比正常時間要短，則應立即購買新電池。
- ▶ 不使用時應拔出旅行充電器，且電池與旅行充電器的連接不可超過一週，因為充電過量會縮短電池的使用壽命。
- ▶ 充電過量會縮短電池的使用壽命。若手機充滿電後閒置未使用，則電池會自行慢慢放電。
- ▶ 切勿在極熱或極冷的環境下存放或為電池充電，因為極致溫度會縮短手機的使用壽命並損壞電池。
- ▶ 請僅使用手機製造商認可或推薦使用的充電器和電池。使用任何不合格的充電器或電池可能會對手機造成損壞。
- ▶ 僅可以電池本身的用途進行使用。

- ▶ 請勿在極致天氣條件下將電池置於車內，因為極致溫度可能會損壞電池。
- ▶ 切勿令電池短路。若終端出現短路可能會損壞電池或連接的物件。
- ▶ 請根據當地法規或製造商的指示處理廢棄電池。切勿將廢棄電池置於火中。
- ▶ 電池的實際壽命將取決於網絡設定、產品設定、使用模式、電池及環境條件。

注意：若使用類型不當的電池，則可能會發生爆炸危險。請根據相關指示處理廢棄電池。

保養及維修

本手機是一款高端電子裝置。使用手機前請細讀此資訊。一旦裝置出現故障，請到最近的授權服務中心尋求幫助。

一般資訊

- 5

重要安全資訊

存取代碼

PIN 碼

個人識別號碼（PIN 碼）可保護智能咭免受未授權的使用。智能咭通常會提供 PIN 碼。您可聯絡服務供應商以獲取此密碼。若連續三次出現 PIN 碼輸入錯誤，則需要鍵入 PUK 碼。

PIN2 碼

PIN2 碼可由智能咭提供。部分功能需要 PIN2 碼支援，如設定收費率。您可聯絡服務供應商以獲取此密碼。

PUK 碼

若要變更鎖定的 PIN 碼，您需要輸入個人解鎖碼（PUK 碼）。變更鎖定的 PIN2 碼時，需要 PUK 碼。您可聯絡服務供應商以獲取此密碼。若連續三次出現 PIN2 碼輸入錯誤，您可能需要鍵入 PUK2 碼。

若連續十次出現 PUK 碼輸入錯誤，則智能咭將不再可用。您可能需要聯絡服務供應商來更換新智能咭。

手機密碼

手機密碼可保護手機免受未授權的使用。購買手機時，系統未啟用此功能。您可將手機密碼（0000）變更為四到八位的個人密碼。

射頻能量

本手機是一個無線電波傳輸器和接收器。開機後，它會接收並傳輸無線電波頻率（RF）能量。手機的工作頻率範圍會因手機類型的不同而有所差異，且會採用常用調製技術。系統會在您使用手機時處理您的通話，還會控制手機傳輸過程中的功率水平。

比吸收率（SAR）資訊

本手機經設計符合無線電波暴露適用的安全要求。這些要求基於科學組織對科學研究的定期及全面評估。這些指引包括可用於確保市民安全的安全極限，範圍涵蓋各年齡階層與所有的健康狀況。

- ▶ 無線電波暴露指引的量度單位叫作比吸收率或 SAR。SAR 測試使用標準方法進行，使手機以最高認可功率水平在所有使用的頻帶中傳輸訊號。
- ▶ 雖然不同型號的 LG 電話的 SAR 水平有所差異，但所有這些電話都為達到無線電波暴露的相關指引而設。
- ▶ 國際非離子化輻射保護委員會 (ICNIRP) 建議的 SAR 限制，即平均 10 克組織 2W/kg。
- ▶ 經 DASY4 測試，本型號手機在耳邊使用的最高 SAR 值為 0.850W/Kg(10g)，攜帶於身上時則為 1.380W/Kg (10g)。

採用了電氣與電子工程師學會 (IEEE) 建議 SAR 限制 (即平均一 (1) 克組織 1.6 W/kg) 的國家/地區居民的 SAR 數據資訊。

電子裝置

大多數時尚電子設備均已屏蔽 RF 能量。但是，某些電子裝置無法屏蔽來

自您的無線手機的 RF 訊號，因此：

- ▶ 請勿在未得到批准下在醫療儀器附近使用您的手機。

心律調校器

手機可能會影響部分移植式心臟心律調校器及其他醫療移植設備的正常工作。心律調校器製造商建議手提無線手機與心律調校器之間的距離至少應為 20 厘米 (6 英寸)，以避免對心律調校器造成潛在干擾。這些建議與無線科技研究協會的獨立研究相吻合。

使用心律調校器的人員：

- ▶ 開機後，手機與其心律調校器之間的距離應始終保持在 20 厘米 (6 英寸) 以上。
- ▶ 不可將手機置於胸部口袋中。
- ▶ 應使用與心律調校器對側的耳朵通話以使潛在干擾降至最低。
- ▶ 如果您有任何理由懷疑出現了干擾，請立即關閉手機。

重要安全資訊

助聽器

手機可能影響到某些助聽器。如果出現此類干擾，您可能需要諮詢服務供應商或致電客戶服務專線尋求解決方法。

飛機

- ▶ 登機前，請先關掉手機。
- ▶ 未經地勤人員批准，請勿在陸上使用手機。

為避免對通訊系統造成干擾，乘坐飛機時切不可使用手機。

潛在爆炸氣壓

在存在潛在爆炸氣壓的任何區域中，請關閉手機，並遵循所有的標誌和指示。縱使發生的幾率很小，但手機或其配件會產生火花。在這種潛在爆炸氣壓區域中出現火花，會導致爆炸或火災，進而造成人身傷害甚至是死亡事故。對於存在潛在爆炸氣壓的區域，經常，但不總是用標記明確標出。這些區域包括加油區域，如汽油

站、船舶甲板下、燃料或化學品傳輸或存放設備以及空氣中包含化學或微粒成分的區域，如晶粒、灰塵或金屬粉末以及通常要求您關閉汽車引擎的任何其他區域。

駕車

檢查您駕車所在區域有關手機使用的法律和法規。若要在駕車時使用手機，請注意以下事項：

- ▶ 請專心一致駕駛。
- ▶ 使用「免提」設定。（很多國家或地區的法律均有此規定）。
- ▶ 若有駕駛條例要求，請駛離馬路並停泊好汽車後才撥打或接聽電話。

RF 能量可能會影響汽車內的某些電子系統，如汽車立體聲系統和安全設備等。此外，部分汽車製造商禁止在車內使用手機，除非在車內安裝免提套件及外置天線。諮詢汽車製造商代表，確保您的手機不會影響汽車內的電子系統。

妥善處理您的舊電器

1. 若產品資料中出現有交叉的推輪垃圾桶符號，即表示該產品受 European Directive 2002/96/EC (歐洲規程 2002/96/EC) 之管制。
2. 所有電器及電子產品應送往政府與有關地區當局所指定的收集地點，並與都市廢物源流分開進行處理。
3. 妥善處理您的舊電器，會有助於防止它們對環境及人體健康所造成的潛在不良影響。

有關舊電器處理方式的詳情，請聯絡您的市政當局、廢物處理服務或購買產品的商店。


您的手機

正面圖

您的手機



左/右側視圖

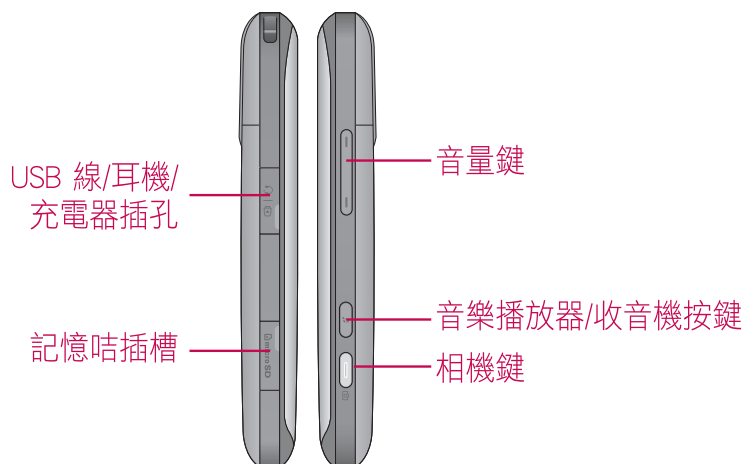

- 側鍵 – 音量 (+ -) 

通話過程中按此鍵可調節手機音量。
- 側鍵 – 相機 

在相機模式下按此鍵可進行拍照。
- 側鍵 – 音樂播放器按鍵 
 - 短按啟動FM 收音機。
 - 長按啟動音樂播放器。
- 軟鍵 – 左 

在備用狀態下按此鍵可顯示功能表。
按下此鍵執行按鍵鎖或返回功能。
- 軟鍵 – 右 

在備用狀態下按此鍵可檢視通訊錄。
按下此鍵執行按鍵鎖或返回功能。
- 發送鍵 

按此鍵撥打電話。
按住此鍵可重撥上一次通話號碼。

- 結束/電源鍵 

按此鍵結束通話。
長按開/關機。
- 導覽鍵 

在備用模式中，快速存取

 -  寫訊息，
 -  情景模式，
 -  捷徑，
 -  通訊錄
- 數字鍵




輸入數字或字元

開始使用


向服務供應商註冊後，您將收到一張智能咭（用戶識別咭）。必須先在手機中插入智能咭才能撥打電話。智能咭是一片電腦晶片，其中包含您的電話號碼、通訊錄資訊以及服務供應商資訊。請小心使用智能咭，不要彎曲或將其暴露於靜電或灰塵中。插入智能咭前請務必先關閉手機。智能咭插槽位於電池底部。請遵循以下步驟安裝智能咭及電池：

安裝智能咭和電池


1. 推動電池蓋。

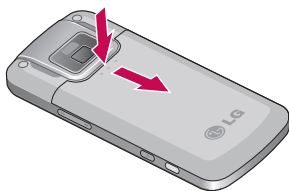


2. 按圖示方法移除電池。

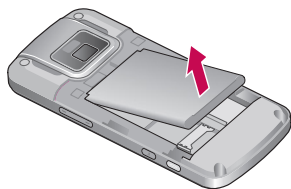

3. 按圖示方法插入智能咭。

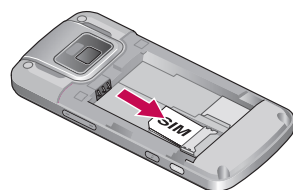

4. 裝上電池，然後蓋上電池蓋。

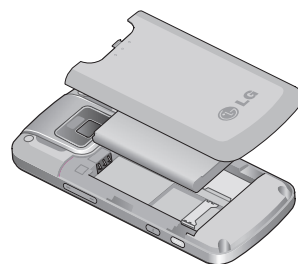

充電

首次使用手機時，必須將電池充滿電。

1. 連接充電器與手機充電器插孔。
2. 將旅行充電器連接到電源插座。



注意事項

- ▶ 連接旅行充電器充電期間您仍可使用手機，但使用時將暫停充電。
- ▶ 電池電量不足時，屏幕上會顯示「」且發出警告聲。顯示此「」圖示後，手機將立即自動關閉。

開關手機

- ▶ 按住  鍵。

注意事項

- ▶ 若正確插入智能咭後手機仍顯示「插入智能咭」，請聯絡網絡商獲取 PIN 碼，鍵入 PIN 碼然後按  左軟鍵予以確認。
- ▶ 您亦可在無智能咭的情況下使用手機。將停用撥號及接聽來電功能，但如多媒體、工具、記事簿等功能仍可正常使用。
- ▶ 當禁止使用手機或會引起干擾或危險時，切勿開機。

鍵盤解鎖

KM330 手機會在一段預設的時間後自動鎖定，避免意外按任何鍵。請參閱「設定」功能表中的「安全」設定，了解如何鎖定鍵盤。

若要解鎖鍵盤，請遵循以下步驟：

1. 手機處於備用狀態下時，**解鎖**選項會出現在屏幕。
2. 請按  左軟鍵，然後按  右軟鍵解鎖鍵盤。然後鍵盤解鎖。

備用模式

手機開機但未使用時，將處於備用狀態。在備用狀態下，屏幕左下角和右下角會分別顯示**功能表**和**通訊錄**。

按**功能表**進入主功能表，或按**通訊錄**進入通訊錄子功能表。指示符亦會顯示在屏幕的上端。

開始使用

備用狀態下會顯示以下指示符：

	垂直列顯示 GSM 網絡訊號的訊號強度。若訊號強度列顯示有七格，則表示目前位置的信號接收效果最佳。
	表示電池電量。
	表示手機已鎖定。
	表示手機使用標準的情景模式設定。
	表示手機使用會議設定。
	表示手機使用戶外設定。
	表示手機使用震動設定。
	表示手機使用靜音設定。
	表示手機使用耳機設定。
	表示鬧鐘已設定。
	表示手機正在漫遊。
	表示未接來電。
	表示新訊息。
	表示所有通話均已轉接至其他號碼。

	表示手機上的藍芽功能已啟用。
	表示您正處於聊天室 1 中。
	表示您正處於聊天室 2 中。
	表示手機上的 WAP 功能已啟用。
	表示手機中插入了外置記憶咭。

使用功能表

在備用狀態下，按  左軟鍵以檢視主功能表。

遵循以下提示，瀏覽功能表及功能表選項：

- ▶ 若要檢視功能表，請在備用狀態下按  左軟鍵或按  中心鍵。
- ▶ 使用導覽鍵瀏覽各種功能表。
- ▶ 屏幕左下角顯示**確定**，以便您進入目前選定的功能表項目，而右下角顯示按鍵鎖。按  左軟鍵選擇功能表項目。按  右軟鍵鎖定按鍵。

- ▶ 每個功能表項目亦會在**功能表選項**標題的左側顯示一個小數字。您亦可在鍵盤上按某個功能表項目對應的數字以選擇此項目。
- ▶ 若要快速結束功能表，請按**結束/電源鍵**。
- ▶ 使用**導覽鍵**選擇子功能表項目及選項。右軟鍵  及右軟鍵  亦可用於選擇子功能表中的各種選項。

例如，若要檢視所有通話，請執行以下操作：

1. 使用**導覽鍵**從主功能表中選擇**通話記錄**。
2. 按  左軟鍵確認選擇。此時會開啟**通話記錄**子功能表。
3. 按  左軟鍵選擇**所有通話**選項。將開啟所有通話清單。

輸入方法

當您向通訊錄中新增名稱或發送文字訊息時，您需要輸入文字。手機包含多種文字輸入方法。您可單獨或透過預測文字輸入方式輸入字母，後者可在您輸入字母時助您完成整個單字。您可輸入大寫、小寫或大小寫字母，或插入符號。(不同語言會影響輸入方法)

基本功能

選擇輸入方法

1. 從主功能表中，使用導覽鍵選擇訊息並按確定。
2. 選擇文字訊息並按確定。
3. 選擇編寫訊息並按確定。然後，您會進入文字模式。
4. 按選項並選擇輸入方法。然後按確定。
5. 選擇所需的輸入方法並按確定。

變更輸入方法的快速方式

處於文字模式時，按  鍵即可變更輸入方法。

插入空格

啟用 T9/ ABC/ Abc/ abc 輸入方法後，按  鍵可插入空格。

傳統英文輸入

處於文字模式時，手機提供多重點按功能。在文字模式下，按  兩次顯示字母 B，按三次顯示字母 C。

使用「T9」輸入文字

「T9」使用內置字典，可識別以各種按鍵次序輸入的最常用字詞。

輸入方法顯示在手機的右上角。按  鍵可切換到 T9 模式。

指示符	功能（英文字典模式）
T9 Abc	T9 Abc
T9 abc	T9 abc
T9 ABC	T9 ABC
123	數字

指示符	功能（英文模式）
Abc	多鍵 ABC 輸入法
abc	多鍵 abc 輸入法
ABC	多鍵 ABC 輸入法
123	數字

通話功能

此部分為您介紹有關本手機支援的通話服務之資訊。

撥打電話

1. 在備用狀態下，輸入區域代碼及電話號碼。
2. 按  鍵。

注意事項

若輸入的號碼有誤，可按清除刪除該號碼。

從通訊錄撥打電話

1. 在備用狀態下，按  右軟鍵進入通訊錄。
2. 按**確定**鍵進入搜尋選項。您可直接選擇並從通訊錄清單中選擇名稱，或在快速搜尋欄位中輸入名稱。然後按  鍵通話。

或者

1. 按「功能表」並選擇**通訊錄**功能表。

2. 使用導覽鍵選擇**搜尋**選項。您可直接從通訊錄清單中選擇名稱，或在快速搜尋欄位中輸入名稱。然後按  鍵通話。

或者

1. 按下導覽鍵進入通訊錄清單。
2. 您可直接選擇並從通訊錄清單中選擇名稱，或在快速搜尋欄位中輸入名稱。然後按  鍵通話。

撥打國際電話

1. 在備用狀態下，長按  鍵直至顯示 +（國際冠碼字元）符號。
2. 輸入國家代碼、區域代碼和電話號碼。
3. 按  鍵通話。

接聽或拒接來電

接聽來電

手機響鈴後按  鍵接聽來電。

拒接來電

手機響鈴後按  鍵拒接來電。

來電等候

在進行通話的同時，您可接聽另一個來電。

進行電話會議

您可透過接聽多通電話進行電話會議。

1. 根據前文所述，給第一位參與者撥打電話。
2. 與第一位參與者通話的同時，撥打第二位參與者。
3. 按  左軟鍵，並選擇**會議**。這可將第一個和第二個通話加入到會議中。
4. 重複步驟 2 和 3 以允許新參與者加入到電話會議中。

5. 按**選項**並選擇**結束全部**結束通話，或按  鍵結束通話。

注意事項

- ▶ 您可與來電者逐個斷開連接。在電話會議期間，您只需要選擇一個來電者，然後按**選項** > **結束單個通話**。
- ▶ 電話會議最多允許 6 個人參加，包括會議發起人。（取決於網絡商支援服務）

通話選項提示

當前通話期間有很多功能可用。撥打新通話時，可使用以下 1-8 個選項。電話會議期間，則可使用其他選項 (9-13)。

1. **交換藍芽語音路徑**：切換到藍芽免提裝置。
2. **通訊錄**：通訊錄功能表捷徑。
3. **保留通話**：保留通話。
4. **新通話**：在進行當前通話期間撥打新通話。
5. **結束**：結束通話。

通話功能

通話功能

6. **訊息**：訊息功能快捷徑。
7. **語音備忘錄**：在當前通話期間錄製通話內容。
8. **啟用/ 禁用 DTMF**：將 DTMF（雙音多頻）提示音撥號系統設定為開啟/關閉。
9. **切換**：在當前通話與保留通話之間切換。
10. **轉接**：轉移通話。
11. **結束單個通話**：結束電話會議中某個參與者的通話。
12. **結束全部**：結束所有通話。
13. **會議**：進行會議通話。

遊戲及應用功能 [功能表 1]

本 KM330 手機提供應用程式。在應用程式中共有三種 Java 應用程式：Chequered Flag、Mini Game World 及 Backgammon。

應用程式

KM330 手機經設計，支援 Java 應用程式。

首次使用應用程式

KM330 手機中預設有三種 Java 遊戲。使用 Java 遊戲前，您必須安裝 MIDlet 才能執行 Java 遊戲。預設情況下手機供應商已將 MIDlet 內置於 KM330 手機中並提供以下兩種安裝方法：從互聯網上安裝 MIDlet 以及本機安裝 MIDlet。（請參閱下文了解詳情）

KM330 手機中存在三種預設的 Java 遊戲

1. 從主功能表中選擇**遊戲及應用程式**並按**確定**。
2. 選擇**遊戲及應用程式**並按**確定**。

3. 選擇**應用程式**並按**確定**。
4. 選擇要進行的 Java 遊戲，然後按**選項**。
5. 選擇**啟動**，以開始遊戲。

用戶亦可從互聯網上下載 Java 遊戲。

1. 轉到互聯網網站並下載 Java 遊戲。
2. 下載應用程式後，從主功能表選擇**遊戲及應用程式**並按**確定**。
3. 選擇**應用程式**並按**確定**。
4. 選擇從互聯網上下載的某個 Java 遊戲，然後按**選項**啟動、設定、檢視相關資訊或刪除應用程式。

用戶可將 Java 遊戲儲存至**我的檔案**功能表中。

1. 使用 USB 線將 Java 遊戲檔案儲存至**我的檔案**。儲存流程與新增音樂曲目至手機中一樣。
2. 選擇**遊戲及應用程式**並按**確定**。
3. 選擇**應用程式**並按**確定**。

遊戲及應用功能

4. 選擇 Java 遊戲，按**選項**啟動應用程式、設定、檢視相關資訊或刪除應用程式。

注意事項

Java MIDlet 僅可讀取副檔名為 .jad 或 .jar 的檔案。

個人化應用程式

當您從主功能表中選擇**遊戲及應用程式** > **應用程式** > 一個應用程式後，手機提供以下選項。

- ▶ **啟動**：啟動選定的 java 遊戲或應用程式。
- ▶ **設定**：定義使用 Java 應用程式時的許可級別。許可級別為「最初提示」、「允許」、「從不查詢」和「始終提示」。可設定以下七種許可設定：
 - **網絡存取**：允許透過網絡建立數據連線。

- **自動啟用**：允許自動啟用 MIDlet，例如，透過 Push 註冊。
- **訊息**：允許發送或接收類似於 SMS 之類的訊息。
- **多媒體**：允許錄製影集、音訊、影片等。
- **讀取使用者資料**：允許讀取用戶資料，例如電話簿或日曆記錄。
- **寫入使用者資料**：允許寫入用戶資料。
- **本地連接**：允許透過本地連接埠（如藍芽）連接。

- ▶ **資訊**：存取有關 Java 遊戲及應用程式之資訊，包括：應用程式名稱、記憶體大小、應用程式版本、廠商名稱和授權來源。

注意事項

無法刪除預設 Java 遊戲。

設定

當您從主功能表中選擇**遊戲及應用功能** > **應用程式** > **設定**後，手機提供以下選項。

- ▶ **GPRS(網絡設定)**：允許您使用 GPRS 功能。(與瀏覽功能相同。)
- ▶ **記憶體狀態**：指明總記憶體、已用和可用記憶體大小。
- ▶ **資訊**：提供有關 Java、CLDC 及 MIDP 版本之資訊。

通話記錄 [功能表 2]

本手機在**通話記錄**功能表中儲存未接來電、已接來電、已撥通話、通話時間及費用相關的通話記錄。您可查看最近的已撥通話、已接來電或未接來電。選擇某個電話號碼後，本手機亦提供以下功能：刪除、儲存、編輯、發送文字訊息及發送多媒體訊息。一旦通話清單超出記憶體上限，手機將刪除最早的記錄。您可按  鍵快速瀏覽未接、已撥或已接來電。

注意事項

- ▶ 更換智能咭後，儲存在手機中的通話記錄將刪除，而儲存在智能咭中的通話記錄不會刪除。

所有通話

功能表 2.1

手機最多可記錄 120 條未接、已撥和已接來電記錄。

在**通話記錄**功能表中，選擇所有通話，然後按**選項**檢視相關記錄（在備用模式下按發送鍵亦會顯示相同的功能表）。本手機提供以下選項：

- ▶ **檢視**：檢視通話記錄資訊。

- ▶ **撥號**：您可撥打選定號碼。
- ▶ **新訊息**：
 1. **文字** — 向選定號碼發送訊息（文字訊息）。
 2. **多媒體** — 向選定號碼發送多媒體訊息。
- ▶ **刪除**：從通話記錄中刪除選定記錄。
- ▶ **編輯號碼**：編輯電話號碼。
- ▶ **多方刪除**：從通話記錄中同時刪除多個號碼。
- ▶ **刪除全部**：從通話記錄中刪除所有號碼。

若電話號碼不是來自儲存的**通訊錄**，則提供其他可用選項。

- ▶ **儲存號碼**：
 1. **儲存**：選擇要儲存的位置（智能咭/手機）後，您可新增至通訊錄清單中。
 2. **更新通訊錄**：可更新通訊錄的記錄。

未接來電

功能表 2.2

在通話記錄功能表中，選擇**未接來電**，然後按**確定**檢視記錄。檢視所有未接來電清單，且手機提供以下選項：

- 檢視號碼（如果有的話）並撥打該號碼，或將其儲存在**通訊錄**中。
- 為該號碼輸入新的名稱並將它們同時儲存至**通訊錄**中。
- 使用此號碼發送訊息。
- 刪除清單中的通話。

已撥通話

功能表 2.3

在通話記錄功能表中，選擇**已撥通話**，然後按**確定**檢視記錄。檢視所有已撥電話清單，且手機提供以下選項：

- 檢視號碼（如果有的話）並撥打該號碼，或將其儲存在**通訊錄**中。
- 為該號碼輸入新的名稱並將它們同時儲存至**通訊錄**中。

- 使用此號碼發送訊息。
- 刪除清單中的通話。

已接來電

功能表 2.4

在通話記錄功能表中，選擇**已接來電**，然後按**確定**檢視通話記錄。檢視所有已接來電清單，且手機提供以下選項：

- 檢視號碼（如果有的話）並撥打該號碼，或將其儲存在**通訊錄**中。
- 為該號碼輸入新的名稱並將它們同時儲存至**通訊錄**中。
- 使用此號碼發送訊息。
- 刪除清單中的通話。

刪除通話記錄

功能表 2.5

本功能可讓您刪除未接來電、已撥通話、已接來電全部通話相關記錄。

通話記錄

通話時間

功能表 2.6

本功能可讓您檢視來電和撥出通話的時間。您也可以重設通話計時器。

可以使用的計時器如下：

- ▶ **上次通話費用：**上次通話費用。
- ▶ **總計費用：**自上次重設之後，所有撥出和接聽通話的總通話時間。
- ▶ **已撥通話：**撥出電話的通話時間。
- ▶ **已接來電：**來電的通話時間。

通話費用

功能表 2.7

您可以查看上次及全部的通話費用與餘額，並可重設費用。

要重設通話費用，需要輸入 PIN2 密碼。

- ▶ **上次通話費用：**上次通話費用。
- ▶ **總計費用：**自上次重設計時器之後，所有撥出和接聽通話的總通話費用。

- ▶ **費用設定：**在本功能表中，您可在輸入 PIN2 碼後變更設定。

1. **設定收費率：**您可設定貨幣類型及單價。請聯絡服務網絡商，獲取付費單價。要在此功能表中選擇貨幣或單位，您需要使用 PIN 碼。
2. **自動顯示：**本網絡服務可讓您自動查看上次通話費用。設定為「開啟」後，通話結束即可查看上一次通話費用。

文字訊息數目

功能表 2.8

本功能可讓您查看訊息數目。您可按重新設定重新啟動計數器。

選擇通話記錄 > 文字訊息數目後手機提供以下選擇。

- ▶ **已發送：**已發送的訊息數目。
- ▶ **已接收：**已接收的訊息數目。

GPRS記錄

功能表 2.9

您可查看透過 GPRS 資訊選項在網絡上傳輸的總數據量。

記事簿 [功能表 3]

記事簿

日曆

功能表 3.1

本功能可讓您檢視日曆中儲存的預定安排及工作。您亦可設定鬧鐘鈴音提示。

首次在日曆中加入附註和提示

1. 從主功能表中，選擇**記事簿**並按**確定**。
2. 選擇**日曆**並按**確定**。
3. 選擇要往其中插入工作的日期，然後按**選項**。
4. 選擇**新增工作**，然後按**確定**。
5. 使用上下導覽鍵選擇**備忘錄**並按**編輯**。
6. 在此模式下輸入您的備忘錄或提示，然後按**選項**。
7. 選擇**儲存**並按**確定**。
8. 按**完成**並使用  中心鍵選擇**是**。

編輯指定日期的備忘錄或提示

進入指定日期並按**選項**後，手機將提供以下選項。

- ▶ **檢視**：檢視儲存在指定日期的工作。
- ▶ **新增**：向指定日期新增工作。
- ▶ **編輯工作**：編輯指定日期上的工作。
- ▶ **刪除工作**：刪除特定工作。
- ▶ **刪除全部**：刪除所有工作。
- ▶ **發送vCalendar**：透過文字訊息、多媒體訊息、藍芽發送或儲存至檔案。

跳至所需日期：

1. 從主功能表中，使用上下導覽鍵選擇**記事簿**並按**確定**。
2. 選擇**日曆**並按**確定**。
3. 按**選項**並選擇**跳至日期**。
4. 按**確定**，鍵入要跳至的年份、月份和日期，然後再次按**確定**。

注意事項

您可按數字 1 和數字3 鍵轉到上一年份和下一年份。您亦可按數字 7 和數字 9 鍵轉到上一月和下一月。按 5 轉到目前日期。

待辦事項

功能表 3.2

本功能列出從日曆選項新增的所有工作。您也可從該功能下的選項中檢視、編輯或刪除工作。

首次使用「待辦事項」

1. 從主功能表中，選擇**記事簿**並按**確定**。
2. 選擇**待辦事項**，然後按**確定**。
3. 按**選項及新增**，輸入日期、時間、備忘錄等編輯您的工作清單。
4. 按**完成及儲存**。

多媒體 [功能表 4]

相機

功能表 4.1

您可使用內置相機拍照，並調節其設定以滿足您的需求。相機鏡頭位於手機背面，且手機顯示可用作取景器。若手機無足夠空間用於相機功能，您需要 a) 刪除舊相片來釋放空間 b) 將相片儲存至記憶咭中。預覽模式下，視像攝錄機設定會顯示在手機屏幕的頂端。

注意事項

若違反本地法律，切勿使用該功能。

影相

1. 從主功能表中，選擇**多媒體**並按**確定**。
2. 選擇**相機**並按**確定**。您現在處於預覽模式中。
3. 按**選項**個人化相機設定。
4. 使用鏡頭對焦拍攝對象，並使用音量鍵進行縮放。

5. 按  相機鍵或  中心鍵拍照。

注意事項

- ▶ 相片採用 JPEG 格式儲存至我的檔案中的影集資料夾中。您亦可在影集模式下瀏覽圖片。
- ▶ 短按  鍵自動對焦拍攝物件，按住  鍵拍照。

設定相機

1. 從主功能表中，選擇**多媒體**，然後按**確定**。
2. 選擇**相機**並按**確定**。
3. 按**選項**。選項列顯示在屏幕底端。
4. 使用上下導覽鍵選擇不同選項，或調節手機屏幕上顯示的選項列設定。

從主功能表選擇**相機** > **選項**後，手機提供以下選項。

以下表格定義相機設定圖示。

	轉到： 可讓您選擇影片模式或影集。
	解像度*： 設定圖像大小：320x240 / 640x480 / 1280x960 / 1600x1200 / 2048x1536
	質素： 設定圖像質素：正常 / 細緻 / 超細緻
	計時器*： 設定計時器。計時器關閉 / 5 秒 / 10 秒 / 15 秒
	儲存至*： 插入外置記憶體後，您可選擇儲存圖像至手機或記憶咭。
	補光燈*： 關閉 / 自動 / 拍照時 預設情況下，補光燈設為自動。
	色彩效果： 效果包括： 正常 / 灰度 / 深褐色 / 復古綠 / 復古藍 / 彩色負片 / 灰色負片 / 黑板 / 白板 / 銅色雕刻 / 藍色雕刻 / 浮雕 / 對比度 / 素描

	白平衡： 白平衡 (WB) 是移除不真實偏色的過程，以便實際顯示為白色的物件在相片中仍能保持白色。 (自動 / 日光 / 鎢絲光 / 日光燈 / 雲 / 白熱光。)
	場景模式： 允許從自動/夜間選擇場景模式
	頻帶頻率： 您可設定的頻帶為 50Hz 或 60Hz。
	快門聲： 您可設定拍照時的快門聲音。 (關閉 / 聲音 1 / 聲音2 / 聲音 3)
	重新設定： 是或否

* 在相機模式下顯示

攝錄機

功能表 4.2

您可透過內置相機錄製影片短片。本功能亦會啟用錄製功能。請參閱以下說明了解更多詳情。

多媒體

多媒體

拍攝影片短片

1. 從主功能表中，選擇**多媒體**並按確定。
2. 選擇**攝錄機**並按確定。
3. 按**選項**個人化相機設定。
4. 按  相機鍵錄製影片短片，或按  中心鍵停止錄製影片短片。
5. 您可從**攝錄機**模式檢視影片。

注意事項

- ▶ 影片短片採用 Mp4 格式儲存至我的檔案中的影片資料夾中。您亦可從媒體匣收聽音訊短片。
- ▶ 您亦可透過相機鍵跳至相機功能。
- ▶ 檢視以下表格，了解**攝錄機**模式下的功能鍵。

錄製模式下的按鍵定義

	左軟鍵 暫停影片錄製。
	右軟鍵 停止錄製影片短片
	中心軟鍵 錄製影片短片時，按中心鍵開始/暫停/繼續。

	相機鍵 錄製/暫停/繼續影片短片。
---	----------------------

音樂播放器

功能表 4.3

KM330 手機具有內置音樂播放器。專用音樂播放器按鍵可讓您快速存取音樂播放器。您可使用耳機或透過內置喇叭享受在手機上盡情聆聽最愛音樂的樂趣。LED 背光燈效果將與您的最愛音樂保持同步，使您的音樂聆聽體驗更有趣。

播放音樂

1. 長按  音樂播放器按鍵。您亦可使用導覽鍵選擇**多媒體**並按確定。然後選擇**音樂播放器**並按確定。
2. 您亦可開啟儲存在手機上的所有音樂曲目清單或從自訂播放列表播放歌曲。

注意事項

- ▶ 聆聽音樂時，您可使用其他手機功能。從音樂播放器屏幕中，按選項 > 最小化。

- ▶ 您可關閉「設定」下的LED 背光燈效果。

自訂播放列表

您可根據個人喜好建立播放列表，方法是從手機或記憶咭新增音樂曲目。

▶ 編輯播放列表：

- 轉到**多媒體**並按**確定**。
- 選擇**我的播放列表**並按**確定**。
- 按**選項**以檢視、新增播放列表或刪除所有檔案。

變更音樂播放器設定

您可自訂音樂播放器模式、均衡器和面板。

- **隨機**：可讓您設定隨機播放所有歌曲。
- **重複**：允許您重複播放所有或選定的某首歌曲。
- **均衡器**：允許您自訂均衡器。系統支援以下均衡器模式：正常、低音、舞曲、古典、高音、參與者、流行音樂和搖滾。

- **面板**：可讓您在兩種不同的播放器面板之間切換。

注意事項

- ▶ 假如播放列表內有無效的檔案，錯誤訊息會彈出，並返回前一畫面。

語音備忘錄

功能表 4.4

語音備忘錄是一款簡單的聲音錄製工具，為您提供管理語音檔案的功能。

開始語音錄製

1. 從主功能表中，選擇**多媒體**並按**確定**。
2. 選擇**語音備忘錄**並按**確定**。
3. 按**選項**並選擇**錄製**。
4. 選擇**錄製**後，手機將立即開始錄製。
5. 完成錄製後，手機將提示您輸入檔案名稱並儲存檔案。

注意事項

- ▶ 錄製期間，透過按右軟鍵或左軟鍵，您可隨時暫停或停止語音錄製。

多媒體

- ▶ 錄製後將以 AMR 和 WAV 格式儲存檔案。

手機提供以下其他選項：

- ▶ 錄製：開始新的語音錄製。
- ▶ 播放：播放選定的聲音錄製檔案。
- ▶ 附加：開始錄製並將錄製檔附加至選定的檔案中。
- ▶ 重新命名：重新命名錄製的檔案。
- ▶ 刪除：刪除錄製的檔案。
- ▶ 刪除全部：刪除所有錄製的檔案。
- ▶ 設定：可讓您變更儲存位置、錄製檔案格式和聲音質素之設定。
- ▶ 轉寄：透過多媒體訊息或藍芽將檔案轉寄至朋友。

旋律作曲

功能表 4.5

本功能可讓您創作鈴聲或旋律。

開始創作

1. 從主功能表中，選擇**多媒體**並按**確定**。
2. 選擇**旋律作曲**並按**確定**。
3. 選擇**選項**，然後選擇**新增**。
4. 按鍵盤開始創作。
5. 按**選項**旋律播放速度。

注意事項

- ▶ 創作的旋律採用 IMY 格式儲存。

創作旋律時，手機會提供以下選項來個人化旋律。

- ▶ **播放**：可讓您聆聽創作的旋律。
- ▶ **播放速度**：可讓您在三種不同的播放速度之間切換。
- ▶ **選擇裝置**：可讓您選擇所需的樂器。
- ▶ **儲存**：儲存旋律。

旋律作曲模式下的按鍵定義

按鍵	功能及說明
	按 1 鍵播放 Do
	按 2 鍵播放 Re
	按 3 鍵播放 Mi
	按 4 鍵播放 Fa
	按 5 鍵播放 So
	按 6 鍵播放 La
	按 7 鍵播放 Si
	按 8 鍵播放震動音
	按 9 鍵播放背光燈/LED 音符
	按 0 鍵播放休止符
	按 # 鍵切換高音、標準音或平音
	按 * 鍵變更目前音樂音符的節拍長度或變更背光燈和 LED 之間的音符
	按向下導覽鍵降低一個八音 (可停用震動、背光燈和 LED)
	按音量鍵變更樂器。

編輯旋律

本手機提供以下選項：

- ▶ **播放**：聆聽創作的旋律。
- ▶ **編輯**：編輯選定的旋律。
- ▶ **新增**：將更多鈴聲新增至選定旋律中。
- ▶ **重新命名**：重新命名檔案。
- ▶ **刪除**：刪除檔案。
- ▶ **刪除所有檔案**：刪除此資料夾中的所有內容。
- ▶ **轉寄**：透過多媒體訊息、EMS 或藍芽將旋律轉寄。

FM 收音機

功能表 4.6

本功能可讓您隨時收聽最愛電台。需要將相容耳機連接到裝置上，才能確保 FM 收音機正常工作。

收聽收音機

1. 將耳機連接到手機。
2. 您可使用導覽鍵選擇**多媒體**並按確定。然後選擇 FM 收音機並按確定。

多媒體

3. 使用導覽鍵盤搜尋電台。您亦可按**選項**搜尋收音機頻率，獲取可用頻道並自動儲存至頻道列表中。
4. 按**選項**編輯頻道列表。您可預設 9 個電台。

手機提供以下收音機選項：

- ▶ **頻道列表**：透過輸入頻道名稱和頻率，最多可儲存 9 個電台。
- ▶ **手動輸入**：手動鍵入電台頻率。
- ▶ **預設自動搜尋**：自動搜尋可用頻道並自動將其儲存至頻道列表中。
- ▶ **設定**：變更背景播放、FM 收音機面板、錄製格式和音質。錄製時可採用 AMR 或 Wav 格式。您可設定喇叭和音質。
- ▶ **錄製**：錄製最愛的收音機節目。
- ▶ **附加**：繼續之前錄製的檔案。
- ▶ **檔案列表**：管理錄製的音訊檔案。

注意事項

您須插上耳機方可使用 FM收音機。

FM 錄製排程

功能表 4.7

本手機可讓您預先排定 FM 收音機錄製。您最多可排定四次錄製。選項包括：開啟/關閉錄製，設定預排定一次或重複（每天/每週/每月）錄製。同時還包括一個允許手動輸入檔案和儲存體設定的選項。

注意事項

預錄收音機頻道時，您必須插入耳機作為天線。

訊息 [功能表 5]

文字訊息 (SMS) 功能表 5.1

本手機包括語音郵件、通知訊息及文字訊息。語音郵件及短訊息服務 (SMS) 均為網絡服務。本手機亦允許您發送和接收包含圖片的文字訊息。包含圖片的訊息由多媒體訊息 組成。因此，發送包含圖片的訊息要比純文字訊息的費用高。

寫訊息

編寫文字訊息

1. 從主功能表中，選擇**訊息**並按**確定**。
2. 選擇**文字訊息**並按**確定**。
3. 選擇**編寫訊息**並按**確定**以編寫訊息。
4. 您亦可透過選擇以下選項，使用多種特殊效果個人化訊息：
 - ▶ **發送給**：發送訊息給一個或多個聯絡人。
 - ▶ **使用常用範本**：插入預設常用範本，以便快速編寫。

- ▶ **插入物件**：在文字訊息中插入圖片、動畫、旋律及聲音。
- ▶ **格式文字**：選擇文字大小樣式、對齊或新段落。
- ▶ **插入通訊錄**：從聯絡人清單插入聯絡人。
- ▶ **插入書籤**：從書籤清單中插入書籤。
- ▶ **輸入方法**：選擇所需的輸入方法。
- ▶ **一般設定**：設定訊息選項，包括發送報告及回覆路徑。

注意事項

- ▶ 若要跳至訊息功能，請在備用狀態下按  向上導覽鍵。
- ▶ 若要鍵入內容，請參閱輸入方法。
- ▶ 您可使用  鍵輸入符號，使用  鍵切換輸入方法。

手動發送訊息

1. 從主功能表中，選擇**訊息**並按**確定**。

訊息

詳細

2. 選擇**文字訊息**並按**確定**。
3. 選擇**編寫訊息**，按**確定**開始寫訊息。(請參閱「編寫文字訊息」。)
4. 完成編寫後，依次選擇**選項**及**發送給**。
5. 輸入要向其發送訊息的電話號碼。
6. 按**選項**，然後選擇**通訊錄**。然後，您可進入通訊錄模式。
7. 選擇要向其發送訊息的聯絡人，然後按**中心鍵**。

注意事項

要使用圖片訊息功能，您需要網絡商或服務供應商的支援。僅提供該功能的手機可接收並顯示圖片訊息。

發送訊息給聯絡人

1. 從主功能表中，選擇**訊息**並按**確定**。
2. 選擇**文字訊息**並按**確定**。
3. 選擇**編寫訊息**，按**確定**開始寫訊息。(請參閱第 37 頁的「編寫文字訊息」。)

4. 完成編寫後，依次選擇**選項**及**發送給**。
5. 輸入要向其發送訊息的電話號碼。
6. 按**選項**，然後選擇**通訊錄**。然後，您可進入通訊錄模式。
7. 選擇要向其發送訊息的聯絡人，然後按**中心鍵**。

選擇 **訊息** > **文字訊息** > **編寫訊息** > **選項** > **發送給** > **選項**後，手機提供以下選項：

- ▶ **通訊錄**：進入通訊錄開啟通訊錄清單。您可以新增多個聯絡人。選擇一個聯絡人，然後點按「發送」。
- ▶ **群組發送**：允許一次性發送多個聯絡人。成功發送的訊息會儲存在收件匣中。
- ▶ **儲存至草稿**：可讓您將編寫的訊息儲存在手機的草稿中。

使用常用範本

1. 從主功能表中，使用上下導覽鍵選擇**訊息**並按**確定**。

2. 選擇文字訊息並按確定。
3. 選擇編寫訊息並按確定。
4. 選擇使用常用範本並按確定。
5. 使用上下導覽鍵選擇所需的常用範本，然後按確定。
6. 按選項，然後選擇發送給。
7. 輸入電話號碼或選擇所需聯絡人以發送訊息。

收件匣

閱讀訊息

收到訊息後，指示符  會出現在顯示屏上。如果收件匣已滿，則會顯示一個快顯視窗，提醒您刪除部份的舊訊息。否則，訊息將儲存在手機中，而非智能咭中。

1. 從主功能表中，使用上下導覽鍵選擇訊息並按確定。
2. 選擇文字訊息並按確定。
3. 選擇收件匣並按確定。訊息清單將顯示在手機屏幕上。

4. 按選項選擇所需訊息，然後選擇檢視讀取內容。

注意事項

- ▶ 接收到的訊息會按預設設定儲存在智能咭中。
- ▶ 若收件匣中顯示  指示符，則表示訊息尚未讀取。若收件匣中顯示  指示符，則表示訊息已讀取。

選擇 訊息 > 文字訊息 > 收件匣 > 選項 後手機提供以下選項。

- ▶ 檢視：讀取已收到的訊息。
- ▶ 回覆：回覆收到的訊息。
- ▶ 刪除：刪除收到的訊息。
- ▶ 轉寄：轉寄收到的訊息。
- ▶ 儲存號碼：將號碼儲存至通訊錄中。
- ▶ 複製至電話/智能咭：將選定文字訊息複製至手機/智能咭。
- ▶ 移動至手機/智能咭：將選定文字訊息移動至手機/智能咭中。

訊息

詳細

- ▶ **標示/取消標記：**允許您標示/取消標記儲存在收件匣中的訊息。標示訊息後，您可刪除、複製或移動已標示的訊息。
- ▶ **聊天：**與寄件者聊天。

已發送項目

傳送出訊息後，該訊息會儲存到寄件匣資料夾中。透過選擇**訊息 > 文字訊息 > 已發送 > 選項**即可讀取寄件匣訊息：

- ▶ **檢視：**讀取訊息。
- ▶ **發送：**發送訊息但不進行編輯。
- ▶ **編輯：**允許在發送訊息前進行編輯。
- ▶ **刪除：**刪除訊息。
- ▶ **複製至手機/智能咭：**將訊息複製至手機。此選項僅當反白顯示訊息儲存在智能咭中時可用。
- ▶ **移動至手機/智能咭：**將訊息移動至手機。僅當反白顯示訊息儲存在智能咭中時可用。

- ▶ **儲存號碼：**將號碼儲存在通訊錄中。
- ▶ **標示/取消標記：**允許您標示/取消標記儲存在收件匣中的訊息。標示訊息後，您可刪除、複製或移動已標示的訊息。

草稿

您可將訊息暫時儲存在**草稿**類別中，稍後再處理。選擇**訊息 > 文字訊息 > 草稿 > 選項**後手機提供以下選項：

- ▶ **檢視：**檢視草稿。
- ▶ **發送：**發送草稿。
- ▶ **編輯：**編輯已儲存的草稿。
- ▶ **刪除：**刪除進行中的草稿。
- ▶ **多方刪除：**您可同時刪除多個檔案。
- ▶ **儲存號碼：**將號碼儲存在通訊錄中。

範本

手機中有多個常用範本，以便快速編寫訊息。您亦可根據個人需要編輯或清除這些常用範本。

編輯常用範本

1. 從主功能表中，使用上下導覽鍵選擇訊息並按確定。
2. 選擇文字訊息並按確定。
3. 選擇常用範本並按確定。
4. 使用上下導覽鍵選擇所需的常用範本，然後按確定。
5. 選擇編輯（若要清除常用範本，請選擇清除。）編輯常用範本並按確定。
6. 按選項並選擇儲存。
7. 按選項。然後，若要儲存您的編輯，請選擇儲存。

訊息設定

本手機允許您設定文字訊息功能的預設設定。

1. 從主功能表中，使用導覽鍵選擇訊息 > 文字訊息 > 訊息設定。
2. 選擇一種設定。
3. 按確定設定訊息設定。

手機提供以下設定：

- ▶ 網絡設定：可編輯網絡設定。
- ▶ 一般設定：您可選擇開啟或停用發送報告並變更服務中心的回覆路徑（如果存在）。
- ▶ 記憶體狀態：查看智能咭和手機中的記憶體狀態。
- ▶ 主要儲存裝置設定：在智能咭與手機儲存體之間切換。
- ▶ 首選連接方式：選擇您的首選連接方式：GSM、只適用 GPRS 和只適用 GSM。

訊息

詳細

多媒體訊息(MMS) 功能表 5.2

本功能可讓您發送包含文字、聲音和圖片的訊息。取決於網絡的不同，您可能會接收到包含互聯網網址的文字訊息，透過此連結您可檢視和下載多媒體訊息。

本手機支援多媒體訊息功能中的以下格式：

- ▶ 圖片：JPG、GIF 和 BMP。
- ▶ 聲音：Scalable Polyphonic MIDI (SP-MIDI) 和 i-Melody。

注意事項

- ▶ 您無法在通話、遊戲期間接收多媒體訊息或透過 GPRS 數據實現任何有效互聯網連線。
- ▶ 多媒體訊息超過上限。若多媒體訊息超過上限，則手機會彈出一則快顯訊息「儲存的多媒體訊息 超過上限」。

編寫多媒體訊息

有關多媒體訊息服務的可用性資訊，請聯絡您的網絡商或服務供應商。

1. 從主功能表中，選擇訊息，然後按確定。
2. 選擇多媒體訊息並按確定。
3. 選擇寫訊息並按確定。
4. 若要鍵入電話號碼/電郵，您可透過上下導覽鍵選擇發給欄位，然後按編輯。

注意事項

- ▶ 選擇新增號碼後，請輸入收件者的電話號碼。
- ▶ 若選擇新增電郵，請輸入收件者的電郵。

5. 新增收件者後，請依次按確定和完成。返回編輯屏幕。

注意事項

若要在抄送/密件抄送中新增收件者，請重複步驟 4 和步驟 5。

6. 向下按，透過按中心鍵或編輯插入標題。
7. 按選項並選擇完成返回至編輯屏幕。

8. 按編輯向下按至編輯內容。
9. 按選項並選擇新增圖像/新增音頻/新增影片/新增附件。然後，您可進入我的檔案模式。
10. 從我的檔案選擇一個檔案，然後按確定。然後按完成。
11. 確認編輯屏幕中的發送資訊，然後按完成。
12. 選擇僅發送發送多媒體訊息。

注意事項

- ▶ 若要鍵入內容，您可參考「輸入方法」。
- ▶ 要使用圖片訊息功能，您需要網絡商或服務供應商的支援。
- ▶ 若要跳至訊息功能，請在備用狀態下按  向上導覽鍵。
- ▶ 若要鍵入內容，請參閱第 16 頁上的輸入方法。
- ▶ 您可使用  鍵輸入符號，使用  鍵切換輸入方法，以及使用導覽鍵移動遊標。

- ▶ 完成：結束編輯頁面，返回編輯內容頁面。
- ▶ 輸入方法：變更輸入方法。
- ▶ 新增圖像：新增圖像檔案至訊息中。
- ▶ 新增音頻：新增音頻檔案至訊息中。
- ▶ 新增影片：新增影片至訊息中。
- ▶ 新增附件：在訊息中附加檔案。
- ▶ 之前插入幻燈片：在原來幻燈片之前插入新幻燈片。
- ▶ 之後插入幻燈片：可讓您在原來幻燈片之後插入新幻燈片。
- ▶ 新增書簽文字：新增書簽至幻燈片中。
- ▶ 新增通訊錄：在訊息中新增通訊錄。
- ▶ 預覽：預覽剛製作的幻燈片。
- ▶ 幻燈片放映時間：設定幻燈片之間的間隔時間。

選擇訊息 > 多媒體訊息 > 編寫訊息 > 編輯內容 > 選項後，本手機提供以下選項。

訊息

詳細

新增文字至內容中時，您將看到更多的可用選項，其中包括：

- ▶ **刪除幻燈片**：刪除目標幻燈片。
- ▶ **前一頁**：顯示前一張幻燈片。
- ▶ **下一頁**：顯示下一張幻燈片。

發送多媒體訊息

發送步驟與編寫多媒體訊息相同。

注意事項

- ▶ 若要鍵入內容，您可參考「輸入方法」。
- ▶ 要使用圖片訊息功能，您需要網絡商或服務供應商的支援。

編寫多媒體訊息並按**完成**時，本手機提供以下選項。

- ▶ **僅發送**：立即發送訊息。
- ▶ **儲存並發送**：儲存訊息並立即發送。
- ▶ **儲存至草稿**：儲存訊息以便稍後發送。

- ▶ **發送選項**：個人化發送選項，包括有效期限、發送報告、讀取報告和重要性。
- ▶ **結束**：結束後，系統將提示您是否儲存編寫的訊息。

收件匣

手機會將收到的多媒體訊息儲存到多媒體訊息功能表的收件匣資料夾中。

閱讀已接收的多媒體訊息

1. 從主功能表中，使用導覽鍵選擇**訊息**並按**確定**。
2. 選擇**多媒體訊息**，然後按**確定**。
3. 選擇**收件匣**，然後按**確定**。
4. 選擇訊息，按**選項**檢視多媒體訊息。

選擇**訊息** > **多媒體訊息** > **收件匣**後手機提供以下選項。

- ▶ **檢視**：立即檢視多媒體訊息。
- ▶ **回覆**：回覆寄件者。

- ▶ **文字訊息回覆：**透過文字訊息回覆寄件者。
- ▶ **全部回覆：**回覆所有成員。
- ▶ **轉寄：**轉寄訊息。
- ▶ **刪除：**刪除選定訊息。
- ▶ **刪除全部：**刪除所有訊息。
- ▶ **內容：**檢視郵件清單。
- ▶ **使用詳細資料：**撥號或儲存電話號碼。

已發送項目

已發送的多媒體訊息會儲存在多媒體訊息功能表的已發送資料夾中。

檢視已發送的多媒體訊息

1. 從主功能表中，選擇訊息並按確定。
2. 選擇多媒體訊息，然後按確定。
3. 選擇寄件匣並按確定。
4. 選擇訊息，然後按確定進行檢視。

選擇訊息 > 多媒體訊息 > 寄件匣後手機提供以下選項。

- ▶ **檢視：**立即檢視多媒體訊息。
- ▶ **刪除：**刪除選定訊息。
- ▶ **刪除全部：**刪除所有訊息。
- ▶ **內容：**檢視多媒體訊息內容。
- ▶ **使用詳細資料：**檢視已撥或已儲存電話號碼。

草稿

手機會儲存那些存放在多媒體訊息功能表草稿資料夾中的多媒體訊息。

閱讀未傳送的多媒體訊息

1. 從主功能表中，使用導覽鍵選擇訊息並按確定。
2. 選擇多媒體訊息，然後按確定。
3. 選擇草稿並按確定。
4. 選擇訊息，然後按確定進行檢視。

選擇訊息 > 多媒體訊息 > 草稿後手機提供以下選項。

訊息

詳細

- ▶ **檢視**：立即檢視多媒體訊息。
- ▶ **發送**：發送訊息。
- ▶ **編輯**：編輯訊息。
- ▶ **刪除**：刪除選定訊息。
- ▶ **刪除全部**：刪除所有訊息。
- ▶ **內容**：檢視郵件清單。
- ▶ **使用詳細資料**：使用多媒體訊息的詳細資料。

範本

本手機可讓您為多媒體訊息新增已儲存的常用範本。

1. 從主功能表中，選擇**訊息**並按**確定**。
2. 選擇**多媒體訊息**，然後按**確定**。
3. 選擇**常用範本**並按**確定**。
4. 選擇**訊息**，然後按**選項**進行檢視。
5. 選擇**編寫訊息編輯**和發送多媒體訊息。

注意事項

您可透過**檢視**選項讀取幻燈片以及內容讀取訊息內容及大小，從而檢常用範本內容。

訊息設定

發送多媒體訊息前，您需要完成**訊息設定**。請遵循以下步驟轉換設定。

1. 從主功能表中，選擇**訊息**並按**確定**。
2. 選擇**多媒體訊息**，然後按**確定**。
3. 選擇**訊息設定**，然後按**確定**。
4. 選擇**設定**，按**確定**啟用設定。
5. 完成後按**返回**。

選擇**訊息** > **多媒體訊息** > **訊息設定**後手機顯示以下選項。

- ▶ **編寫**：
您可根據以下選項設定編寫格式：
 - **建立模式**：可供選擇的選項為：
未用或限制。

- 圖像大小：可供選擇的選項為：
關閉 / 160x120 / 320x240 /
640x480。

- 自動簽名：可供選擇的選項為：
開啟或關閉。

► 發送：

- 有效期限：訊息在訊息中心的
儲存時間。您可設定存留時間為
介於 1 小時 / 6 小時 / 12 小時 /
1 天 / 1 週與最大之間。

- 發送報告：在開啟與關閉之間切
換發送報告。

- 讀取報告：讀取發送報告。

- 重要性：可供選擇的選項：正常
/ 高 / 低。

- 幻燈片放映時間：設定幻燈片之
間的間隔時間。（1 - 60 秒）。

- 發送時間：設定發送時間（立即
/ 一小時內 / 12 小時內或 24 小
時內）。

► 恢復通話：

- 本地網絡：可供選擇的選項為：
立即 / 限制 / 已延遲。

- 漫遊網絡：可供選擇的選項為：
自動 / 已延遲 / 限制。

- 讀取報告：可供選擇的選項為：
應要求 / 發送 / 從不查詢。

- 發送報告：在開啟/關閉發送報
告選項之間切換。

► 過濾器：

- 匿名：在允許 / 拒絕之間選擇。

- 廣告：在允許 / 拒絕之間選擇。

► 伺服器網絡設定：

您可透過特定網絡或服務供應商
接收和發送多媒體訊息。

► 記憶體狀態：

您可查看內置記憶體中的可用空間
仍可儲存的訊息數量。

訊息

詳細

注意事項

要完成訊息設定，請聯絡網絡服務商。

聊天

功能表 5.3

您可透過此功能與朋友聊天。手機中有兩個聊天室。

聊天前，您需要執行以下步驟：

1. 從主功能表中，選擇訊息並按確定。
2. 選擇聊天，然後按確定。
3. 選擇聊天室 1 或聊天室 2，然後按選項。
4. 選擇聊天室資訊，然後按確定。
5. 透過按編輯建立別名，然後按選項。
6. 按完成並選擇遠端號碼。
7. 按搜尋並從通訊錄清單中選擇聯絡人。
8. 然後選擇，最後按是。

開始聊天

1. 設定聊天室後，請使用導覽鍵從主功能表中選擇訊息，然後按確定。
2. 選擇聊天，然後按確定。
3. 選擇選項 > 開始新聊天，然後按確定。
4. 輸入訊息，並按選項。
5. 選擇發送並按確定。
6. 發送訊息後，會啟動聊天室。
7. 現在您可開始聊天。

開始聊天時，手機提供以下選項。

- ▶ 發送：送編寫的訊息。
- ▶ 使用常用範本：在 SMS 常用範本選項中插入常用範本。
- ▶ 插入PHB 號碼：從通訊錄插入電話號碼。
- ▶ 插入PHB 名稱：從通訊錄插入名稱。
- ▶ 輸入方法：變更輸入方法。

聊天時，手機提供以下選項。

- ▶ **回覆**：回覆收到的聊天訊息。
- ▶ **使用號碼**：儲存聊天人或其發送的號碼。
- ▶ **清除聊天內容**：清除聊天通話。
- ▶ **暫時離開**：暫時離開聊天室。
- ▶ **退出**：退出聊天。
- ▶ **聊天室資訊**：顯示聊天室資訊。

注意事項

暫時離開聊天室後，您可繼續或結束聊天。

語音郵件伺服器 功能表 5.4

手機可讓您跳至語音郵箱。（若受服務供應商支援）。您的語音郵件號碼將由服務供應商提供並顯示在手機中。在語音郵件子功能表中，您可選擇線路 1 或線路 2，選項清單包括：

- ▶ **編輯**：編輯語音郵件線路 1 的名稱和號碼。
- ▶ **連接至語音**：連接至您的語音郵箱。

在備用狀態下，按住  直接存取語音郵件伺服器。

注意事項

若要使用此功能，您可能需要輸入服務供應商提供的語音郵件伺服器號碼。

廣播訊息 功能表 5.5

手機允許您接收廣告訊息。您可啟用或停用接收模式，並根據個人喜好設定一些其他選項。

本手機提供以下選項：

- ▶ **接收模式**：您可選擇是否接收網絡發送的廣播訊息。
- ▶ **訊息列表**：您可透過按**確定**讀取訊息，或按**返回**結束。
- ▶ **語言**：您可指定所需的廣播語言。
- ▶ **頻道設定**：您可從頻道清單中選擇頻道，或在清單上新增用以接收訊息的新頻道。選定後，您可編輯或刪除訊息。

我的檔案 [功能表 6]

您可檢視和發送圖片。此外，您可將圖片設為牆紙。

影集

功能表 6.1

顯示圖像及影片檔案清單。

- ▶ **檢視：**開啟其中包含圖像和影片的影集。
- ▶ **刪除：**刪除檔案。
- ▶ **建立資料夾：**您可建立新資料夾。
- ▶ **重新命名：**您可變更檔案名稱。
- ▶ **標示/ 取消標記：**標示圖像為取消選擇全部、刪除所選內容、複製所選內容或移動所選內容。
- ▶ **刪除全部：**刪除清單中的所有檔案。
- ▶ **排序：**按日期、類型或名稱排列圖像/影片。
- ▶ **清單檢視/ 縮圖檢視：**可讓您設定清單檢視或縮圖檢視類型。
- ▶ **預覽樣式：**提供兩種不同的預覽樣式：2x2 及 3x3。

顯示多媒體記憶體中我的圖片清單。

- ▶ **檢視：**按選擇鍵或選擇選項功能表中的檢視功能表後，您可查看 JPG 檔案。
- ▶ **刪除：**刪除檔案。
- ▶ **設為：**
 - **牆紙：**將目前選定的圖像設為牆紙。
 - **圖片來電顯示：**將目前選定的圖像設為圖片來電顯示。
- ▶ **發送方式**
 - **多媒體訊息：**透過多媒體訊息方式將選定檔案發送給其他裝置。
 - **藍芽：**可讓您透過藍芽發送圖像。
- ▶ **檔案**
 - **重新命名：**變更選定檔案的檔案名稱。您不能變更檔案的副檔名。
 - **移動至資料夾：**將選定檔案移動至資料夾。

- 移動至手機/ 外置記憶體：將選定檔案移至手機記憶體/外置記憶體。
- 複製至手機/ 外置記憶體：將選定檔案複製至手機記憶體/外置記憶體。
- 資訊：顯示檔案資訊。
- ▶ 透過藍芽列印：您在相機模式下拍攝以及透過互聯網下載的大多數圖片均可透過藍芽傳送至打印機。
- ▶ 建立資料夾：您可建立新資料夾。
- ▶ 標示/ 取消標記：標示影片為取消選擇全部、刪除所選內容、複製所選內容或移動所選內容。
- ▶ 刪除所有檔案：刪除清單中的所有檔案。
- ▶ 排序：按日期、類型或名稱排列圖像。
- ▶ 列表檢視/ 縮圖檢視：可讓您設定清單檢視或縮圖檢視類型。

聲音

功能表 6.2

- ▶ 播放：您可透過按確定或選擇選項功能表中的播放功能表來播放音樂檔案。
- ▶ 刪除：刪除檔案。
- ▶ 設為鈴聲：可將目前選定的聲音設為鈴聲
- ▶ 發送方式：
 - 多媒體訊息：透過多媒體訊息方式將選定檔案發送給其他裝置。
 - 藍芽：透過藍芽將選定檔案發送到其他裝置。
- ▶ 檔案：
 - 重新命名：變更選定檔案的檔案名稱。
 - 移動至資料夾：將選定檔案移動至資料夾。
 - 移動至手機/ 外置記憶體：將選定檔案移至手機記憶體/外置記憶體。

我的檔案

- 複製至手機/ 外置記憶體：將選定檔案複製至手機記憶體/外置記憶體。

- 資訊：顯示檔案資訊。

▶ 建立資料夾：您可建立新資料夾。

- 標示/ 取消標記：標示聲音為取消選擇全部、刪除所選內容、複製所選內容或移動所選內容。

▶ 刪除所有檔案：刪除清單中的所有檔案。

▶ 排序：按日期、類型或名稱排列聲音。

其他

功能表 6.3

其他資料夾用於存放無法儲存在影集和聲音中的其他檔案。您可能會發現，從電腦將檔案傳送到手機時，這些檔案將顯示在「其他」資料夾中。

任何類型的檔案都可儲存在這裡。這資料夾主要用於將檔案從不同電腦之間進行傳送。

手機可預覽 JPG、GIF 格式。

只要圖像檔案大小不超過 30k，即可將其設為牆紙。對於其他格式，請使用 PC Suite。

▶ 檢視或安裝：按確定鍵後您可檢視或安裝其他檔案。

▶ 刪除：刪除檔案。

▶ 發送方式：

- 多媒體訊息：透過多媒體訊息發送檔案到其他裝置。

- 藍芽：透過藍芽將選定檔案發送到其他裝置。

▶ 檔案：

- 重新命名：變更選定檔案的名稱。

- 移動至資料夾：將選定檔案移動至資料夾。

- 移動至手機/ 外置記憶體：將選定檔案移至手機記憶體/外置記憶體。

- 複製至手機/ 外置記憶體：將選定檔案複製至手機記憶體/外置記憶體。
- 資訊：顯示檔案資訊。

- ▶ 建立資料夾：您可建立新資料夾。
- ▶ 刪除所有檔案：刪除清單中的所有檔案。
- ▶ 排序：按日期、類型或按名稱排列「其他」資料夾中的檔案。
- ▶ 標示/ 取消標記：標示其他資料夾中的檔案為取消選擇全部、刪除所選內容、複製所選內容或移動所選內容。

外置記憶體

功能表 6.4

此功能表可讓您檢視記憶咭中的圖像、聲音、影片及其他。尚未插入外置記憶體前，外置記憶體選項不會顯示在我的檔案中。

記憶體狀態

功能表 6.5

您可以檢查手機及外置記憶體（如已插入）的可用空間和記憶體使用狀況。

情景模式 [功能表 7]

您可設定以下不同的情景模式，以適應不同的環境條件。手機支援七種不同的情景模式。有關這七種情景模式的詳情，請參閱下文。

- ▶ **標準：**
標準情景模式是手機的預設設定。
- ▶ **會議：**
鈴聲音量設為低且按鍵音關閉。
- ▶ **戶外：**
鈴聲及按鍵音效音量設為高音。
- ▶ **震動：**
鈴聲及按鍵音效音量設為關閉，且震動開啟。
- ▶ **耳機：**
耳機的情景模式。
- ▶ **靜音：**
鈴聲音量及震動均設為關閉
- ▶ **藍芽：**
連接藍芽配件時的情景模式。

注意事項

設定情景模式後指示符會顯示在手機屏幕上。

啟用情景模式

遵循以下步驟以啟動情景模式功能表中的情景模式。

1. 從主功能表中，使用上下導覽鍵選擇情景模式並按**確定**。
2. 選擇所需的情景模式，按 **▶** 中心鍵或**選項**啟動要使用的情景模式。

編輯情景模式

您可自訂以下情景模式：**標準 / 會議 / 戶外 / 耳機 / 藍芽** 以滿足個人需求。

1. 從主功能表中，選擇情景模式並按**確定**。
2. 選擇所需的情景模式，然後按**選項**。
3. 選擇**更改**並按**確定**。
4. 選擇所需的選項進行自訂。

選擇情景模式 > **標準 / 會議 / 戶外 / 耳機 / 藍芽** > **選項** > 更改後手機提供以下選項。

- ▶ **提示音設定：**設定所需的鈴聲。

注意事項

當鈴聲音量設為高時，請小心使用以防損壞聽力。

- ▶ **音量：**調節鈴聲及按鍵音的音量。
- ▶ **提示類型：**選擇不同的提示類型（鈴聲、震動、震動及響鈴、先震後響及嗶聲一次）
- ▶ **人聲來電提示：**允許手機在響鈴前報告提示。
- ▶ **鈴聲類型：**在一次、重複及漸進音量切換。
- ▶ **特別音效：**您可將目前播放的音樂檔案設為附加提示音。
- ▶ **接聽模式：**透過按任何鍵在開啟/關閉接聽模式之間切換。

通訊錄 [功能表 8]

您的通訊錄儲存在智能咭記憶體或手機記憶體上。您亦可選擇同時儲存在這兩種記憶體上。

搜尋

功能表 8.1

可讓您搜尋儲存在通訊錄中的名稱和號碼。

搜尋號碼和名稱

1. 從主功能表中，選擇**通訊錄**並按**確定**。
2. 選擇**搜尋**並按**確定**。
3. 鍵入聯絡人名稱的全名或第一個字元。聯絡人清單會自動跳至具有相同對應字元的首個聯絡人。
4. 透過按  鍵選擇要進行撥號的聯絡人。

或者

1. 在備用狀態下，按  右軟鍵進入**通訊錄**功能表。
2. 遵循與以上相同的步驟。

注意事項

在搜尋模式下，您可按  鍵變更輸入方法。

您亦可按**選項**變更輸入方法或編輯選定的電話號碼。

從主功能表中選擇**通訊錄** > **搜尋** > **選項**後，手機提供以下選項。

- ▶ **檢視**：顯示聯絡人資訊。
- ▶ **編輯**：可讓您編輯聯絡人名稱和電話號碼。
- ▶ **新訊息**：可讓您給選定聯絡人發送文字訊息或多媒體訊息。
- ▶ **發送 vCard**：可讓您發送 vCard 至選定聯絡人。
- ▶ **刪除**：刪除選定聯絡人資訊。
- ▶ **新增通訊錄**：新增聯絡人至通訊錄。
- ▶ **複製**：將聯絡人資訊複製至手機或智能咭（具體取決於電話號碼儲存位置）。

- ▶ **移動**：將選定聯絡人資訊移動至手機或智能咭中。
- ▶ **輸入方法**：選擇要使用的語言。
- ▶ **重複位置**：複製相同儲存體媒介上選定的聯絡人資訊。

新增通訊錄 功能表 8.2

可讓您在通訊錄功能表中建立新項目。您最多可在手機中儲存 1000 個電話號碼記錄。

建立新項目

1. 從主功能表中，選擇**通訊錄**並按**確定**。
2. 選擇**新增通訊錄**並按**確定**。
3. 選擇智能咭或手機的**儲存體**位置。
4. 選擇**名稱**並按**編輯**。輸入項目名稱，然後按**選項**。
5. 選擇**完成**並按**確定**。
6. 按向下導覽鍵並按**確定**。手機將顯示「儲存」訊息。

7. 選擇**是**並按  中心鍵。手機屏幕將顯示「完成」。

通話群組 功能表 8.3

手機中存在五種預設群組。您可使用不同的提示音/圖片/影片編輯各群組的名稱以及成員清單。使用通話群組功能，您可同時將一則訊息發送給群組的所有成員。

在通話群組中建立項目

1. 從主功能表中，選擇**通訊錄**並按**確定**。
2. 選擇**通話群組**並按**確定**。
3. 選擇群組並按**確定**。
4. 選擇**成員列表**並按**檢視**。
5. 按**選項** > **新增**並按**確定**。然後您可從**通訊錄**中選擇。

注意事項

本手機提供 5 個來電群組，包括：朋友、家庭、重要人士、同事和其他。

通訊錄

本手機提供以下選項：

- ▶ **群組名稱**：群組包括朋友、家庭、重要人士、同事和其他。
- ▶ **鈴聲**：設定特定通話群組的鈴聲設定檔。
- ▶ **圖片**：設定群組圖片。
- ▶ **影片**：設定群組的影片短片。
- ▶ **成員列表**：向指定群組新增成員。

快速撥號

功能表 8.4

若您為儲存在通訊錄中的某個快速撥號鍵（從  至 ）指定一個號碼，則可透過在備用模式下按住此鍵撥打此電話號碼。

開啟快速撥號

1. 從主功能表中，選擇**通訊錄**並按**確定**。
2. 選擇**快速撥號**並按**確定**。
3. 選擇**啟用快速撥號功能**並按**確定**。
4. 選擇**開啟**並按**確定**開啟快速撥號功能。手機屏幕將顯示「完成」。

設定快速撥號號碼

1. 從主功能表中，選擇**通訊錄**並按**確定**。
2. 選擇**快速撥號**並按**確定**。
3. 選擇**設定號碼**並按**確定**。
4. 選擇一個空號碼，然後按**選項**。
5. 按**編輯**並按**確定**。
6. 選擇要設為快速撥號號碼的項目，然後按**確定**。手機屏幕將顯示「完成」。

我的 vCard

功能表 8.5

您可從此選項編輯 vCard 資訊並與他人共用。從主功能表選擇 **通訊錄** > **搜尋** > **選項** > **發送 vCard** 以發送 vCard。

特別號碼

功能表 8.6

允許您編輯本手機號碼、服務號碼和緊急號碼以滿足個人喜好。

注意事項

服務供應商可能會在智能咭中設定某些特殊電話號碼。若此功能不受支援，則無法修改特別服務號碼。

設定

功能表 8.7

本手機為您提供各種設定選項以個性化手機，包括，

1. **來電圖片**：可使用相片或任何其他圖片作為來電時的圖片來電顯示。
2. **來電鈴聲**：可個人化通訊錄清單中特定聯絡人或來電群組的來電鈴聲。
3. **來電影片**：可將特定影片用於清單中的特定聯絡人。
4. **記憶體狀態**：可查看手機內置記憶體中的可用空間或可檢視智能咭和手機記憶體中儲存的名稱及號碼項目數量。
5. **主要儲存裝置設定**：可選擇您的首選儲存體：全部、智能咭或手機。

6. **欄位**：您可自訂要顯示在屏幕上的聯絡人資訊。

7. **名稱列表過濾器**：只限智能咭、只限手機或雙方。

注意事項

可透過瀏覽 www.lgmobile.com 獲取 PC Suite。PC Suite 工具可讓您管理儲存在手機或智能咭上的聯絡人清單。

工具 [功能表 9]



鬧鐘

功能表 9.1

該功能可讓您設定鬧鐘，以便在指定時刻鬧鈴。即使手機已關閉，鬧鐘功能仍可運作。

1. 從主功能表中，選擇**工具**並按**確定**。
2. 選擇**鬧鐘**並按**確定**。
3. 選擇鬧鐘並按**編輯**。
4. 在編輯屏幕中，使用左右導覽鍵切換數值，並使用上下導覽鍵選擇選項。
5. 選擇所需的鈴聲模式一次/每天/選擇工作天/每小時。
6. 透過按**完成**，然後按**是**。

報時器

功能表 9.2

此功能可告訴您目前時間。選擇**工具** > **報時器**開啟或關閉報時器，然後按**確認**予以確認。啟用此功能後，每小時可聽到時間提示。

注意事項

語音報時器設定為 12 小時時間格式 (AM/PM)。

世界時間

功能表 9.3

透過按左右導覽鍵，即可選擇城市。十字標指向某個城市時，系統將顯示當地日期和時間。您亦可按**選項**開啟/關閉外國城市的夏令時間，以及選擇設定主城市另存為主城市。

計算機

功能表 9.4

計算機可執行簡單的計算機功能，如加減乘除。

單位轉換器

功能表 9.5

本功能可助您轉換重量和長度單位

貨幣換算器

功能表 9.6

本功能可助您轉換外幣。在貨幣換算器內，您可輸入匯率並插入金額，將本幣轉換成外幣。

健康

功能表 9.7

健康選項中有兩種功能：身高體重指數和生理週期。

身高體重指數(BMI)

該功能有助於計算與身高和體重相關的身體肥胖指數。

計算 BMI 值過程：

1. 從主功能表中，選擇工具並按確定。
2. 選擇健康並按確定。
3. 選擇身高體重指數並按確定。
4. 透過按左右導覽鍵選擇性別，按上下導覽鍵選擇相關選項。
5. 使用數字鍵輸入您的身高（厘米）以及體重（公斤），然後按確定。然後系統會計算 BMI 比率並顯示在手機屏幕上。

生理週期

本功能可協助計算女性月經周期，並提供以下選項：

- ▶ 目前日期懷孕的可能性。
- ▶ 可能懷孕的經期。
- ▶ 下一次經期的日期。

查看月經周期

1. 從主功能表中，選擇工具並按確定。
2. 選擇健康並按確定。
3. 選擇生理週期並按確定。
4. 輸入上一次月經日期。
5. 輸入平均週期，然後按確定。
6. 選擇日期，按確定顯示懷孕詳情。

注意事項

該結果與您的身體狀況可能不相符。
僅供參考！

H
H

工具



STK (不同智能咭有不同情況)

功能表 9.8

除手機提供的功能外，您的服務供應商可能還透過智能咭提供其他應用程式，如天氣或股市資訊。

設定 STK 服務

在工具功能表中，選擇 STK，按確定連接服務。

注意事項

- ▶ 您需要向服務供應商註冊服務才能使用。
- ▶ 存取這些服務可能需要額外收費。

瀏覽器 [功能表 *]

下文所介紹的服務受服務供應商支援。如果您無法連接到其中一項服務，請聯絡服務供應商了解詳情。

互聯網

功能表 *.1

本手機支援網絡瀏覽。您可獲取多種服務，如最新新聞、天氣、體育賽事和其他資訊以及電郵和其他互聯網服務。互聯網服務供應商已設計這些服務並進行維護。互聯網服務在其頁面上使用無線傳輸標記語言 (WML)。您無法在手機上檢視標準的互聯網網頁。

注意事項

- ▶ 若要啟動互聯網服務，您可能需要聯絡您的服務供應商。
- ▶ 當禁止使用手機或會引起干擾或危險時，切勿開機。

主頁

若要從備用模式存取瀏覽器，請轉到功能表中的互聯網，然後按「主頁」。連線後即會顯示主頁。主頁內容因服務供應商而異。

結束瀏覽器

在瀏覽器狀態，按  鍵結束瀏覽器狀態。

Google 搜尋

您可使用 Google 搜尋執行搜尋操作。

書籤

您可使用此功能表儲存網址以便快速存取您的最愛網址。

本手機為您提供以下選項。

- ▶ 轉到：可讓您連接到網址。
- ▶ 編輯：可讓您編輯網址。
- ▶ 發送：可讓您透過文字訊息/多媒體訊息發送網址。
- ▶ 刪除：刪除選定書籤。
- ▶ 刪除全部：刪除所有書籤。
- ▶ 新增書籤：新增網址至書籤清單。

最近開啟的網頁

您可檢視最近瀏覽過的網頁。按轉到連接選定網頁。

隨
機
器

瀏覽器

導
航

輸入網址

您可鍵入網址，輸入地址，然後選擇完成。您的手機將會連接到剛鍵入的網址。輸入地址後，下次您可選擇網址並按**確定**連接。

服務收件匣

本手機能接收來自服務供應商的服務訊息。服務訊息是標題或內容的通知，其中可能包含互聯網服務地址。您可以從您的服務供應商取得更新的新聞或新的 WAP 設定。

接收到的互聯網 Push 訊息儲存在服務收件匣中。您可按**選項**以**接受**或**刪除** Push 訊息。

設定

GPRS（通用分組無線電服務）是一種技術，用於在移動網絡上發送和接收數據。使用 GPRS 的應用程式包括 WAP 服務、MMS 和 SMS 訊息及 GPRS 撥號（如互聯網和電郵）。您可設定手機在開機後，自動註冊 GPRS 網絡。

啟動互聯網

- ▶ 若服務供應商已設定互聯網設定，您可立即使用 GPRS 或 GSM 數據。
- ▶ 若服務供應商已指定互聯網設定檔的存取權限，請選擇一個設定檔，然後予以啟動。
- ▶ 您可手動設定互聯網設定。然後，您必須諮詢網絡商或服務供應商以了解合適設定。

手動編輯服務設定

1. 從主功能表中，選擇**瀏覽器**並按**確定**。
2. 選擇**互聯網**並按**確定**。
3. 選擇**設定**並按**確定**。
4. 選擇**編輯網絡設定**並按**確定**。
5. 選擇一個設定檔並按**確定**。
6. 選擇**編輯網絡設定**並按**確定**。
7. 按**編輯**開始設定，然後按**選項**。
8. 選擇**完成**並按**確定**。

編輯設定檔

您可啟動互聯網設定，請在**互聯網設定檔**模式中選擇**啟用設定檔**，然後按**確定**。或者，您可編輯設定檔。選項包括：**重新命名、主頁、數據帳戶、連接、用戶名和密碼**。如果您需要更多相關資訊，請聯絡網絡服務供應商。

注意事項

在大多數情況下，您只須使用其中一個預設設定檔，即可存取互聯網。不同的網絡商有不同的設定。請洽詢您的網絡商或服務供應商，以取得正確設定及小心操作的資料。不恰當的設定會導致連線失敗。

啟動互聯網設定

完成互聯網設定後，請在**互聯網設定檔**模式中選擇**啟用設定檔**，然後按**確定**。

瀏覽器選項

您可設定瀏覽器逾時值。（若在設定的時間內無法連接，手機將停止瀏覽器）。您亦可開啟/關閉圖像以便調節瀏覽速度。

服務訊息設定

您可選擇是否接收服務訊息，該訊息由服務供應商提供並儲存在服務收件匣中。

清除暫存記憶

您存取的資訊或日期均儲存在手機的暫存記憶中。暫存記憶是一種檔案緩衝，用於臨時儲存數據。選擇該選項，您可清除歷史記錄。

清除 Cookies

為了減輕對個人私隱以及安全性的擔憂（萬一手機丟失或被盜），請清除可能包含重要資訊的所有 Cookies。

安全認證

瀏覽時顯示可信網絡憑證，並管理您的「信任清單」。

瀏覽器



數據帳戶

功能表 *.2

提供由主要網絡商在手機製造時提供的預設數據帳戶。

您可透過 GSM 或 GPRS 存取互聯網。

- ▶ 若要獲取類比或 ISDN 號碼資訊，您可能需要聯絡您的網絡商。
- ▶ 若要獲取您的 GPRS 接入點，您可能需要聯絡網絡商。

GSM 數據

1. 從主功能表中，使用導覽鍵選擇瀏覽器並按確定。
2. 選擇數據帳戶並按確定。
3. 選擇 GSM 數據並按確定。
4. 按編輯變更數據帳戶設定：帳戶名稱 / 電話號碼 / 用戶名稱 / 密碼 / 線路類型 / 速度 及 DNS。

GPRS

1. 從主功能表中，選擇瀏覽器並按確定。
2. 選擇數據帳戶並按確定。
3. 選擇 GPRS 並按確定。
4. 按編輯變更數據帳戶的設定：帳戶名稱 / APN / 用戶名稱 / 密碼 / 授權類型。

連接 [功能表 0]

透過連接子功能表中的功能選項，您可在手機與其他裝置之間建立連線。

藍芽

功能表 0.1

本手機經設計與藍芽技術 V1.2 相容。藍芽技術可啟用電子裝置之間的無線連線。藍芽連線可用於聆聽立體聲音樂，發送圖像、影片、文字及 vCards。

開始使用藍芽技術

操作前需要對藍芽連線進行設定。設定完成後，將在狀態列中出現以下藍芽圖示。

- ：藍芽啟用且已連接
- ：不向其他裝置顯示。

與藍芽音訊裝置配對

1. 從主功能表中，選擇**連接**並按**確定**。
2. 選擇**藍芽**並按**確定**。
3. 選擇「**啟動藍芽**」並按**確定**以啟開/關閉手機與要首先連接裝置之間的藍芽連接。

4. 按**搜尋音頻裝置**。手機會進行自動搜尋並配對裝置。
5. 按**連接**配對手機與裝置。
6. 新增裝置至清單中，並透過按是連接到裝置。

注意事項

- ▶ 使用聽筒前，請確保裝置已充滿電。
- ▶ 一旦手機與裝置建立連接，系統會出現一則快顯通知。
- ▶ 一旦新增至信任清單中，聽筒將出現在我的裝置清單中。（一旦新增至我的裝置，建立修復將相當簡單）。
- ▶ 所有使用中裝置可透過使用中裝置進行管理，且可透過按**中斷連接**來斷開連接。

與藍芽裝置配對

1. 從主功能表中，使用導覽鍵選擇**連接**並按**確定**。
2. 選擇**藍芽**並按**確定**。
3. 選擇**我的裝置**並按**選項**。
4. 選擇**查詢新裝置**。（手機開始搜尋藍芽裝置。）

藍芽

連接

備註

與藍芽裝置建立連線

1. 從主功能表中，選擇**連接**並按**確定**。
2. 選擇**藍芽**並按**確定**。
3. 選擇**我的裝置**，然後選擇要連接的藍芽裝置。
4. 按**選項**並選擇**連接**。
5. 連接到藍芽裝置後，手機會詢問您要與其連接的設定檔（具體取決於藍芽裝置支援的設定檔數目）。

編輯裝置清單中的裝置

選擇**我的裝置**中的某個裝置且按**選項**後手機提供以下選擇。

- ▶ **連接**：連接支援藍芽技術的裝置。
- ▶ **重新命名**：重新命名目標裝置。
- ▶ **刪除**：刪除信任清單中選定的項目。
- ▶ **刪除全部**：刪除信任清單中的所有項目。

- ▶ **服務列表**：存取受已新增至信任清單中且受裝置支援的設定檔。
- ▶ **查詢新裝置**：搜尋新裝置。

將流動手機用作數據機

本手機可用作數據機進行網絡撥號。僅支援藍芽技術的電腦可使用該功能。請向服務供應商查詢以了解詳情。

使用藍芽連接傳送資料

1. 啟動藍芽 並選擇要發送的物件。
2. 按**選項**並選擇**發送方式**。
3. 選擇**藍芽**。(手機將搜尋裝置)。
4. 選擇所需的裝置，然後選擇「發送」。

使用藍芽連接接收資料

透過藍芽接收數據後，系統會出現一個快顯通知。若要接受轉接，請按**確定**。

您可從**連接 > 藍芽 > 設定 > FTP 設定 > 共用資料夾**變更目前資料夾的位置以重新定位資料夾，並在**連接 > 藍芽 > 設定 > FTP 設定 > 存取權限**中定義存取權限：完全控制或只限讀取。

從電腦接收資料

本手機可讓您瀏覽及從電腦轉接檔案。電腦必須支援藍芽技術。(請參閱電腦手冊。)

1. 從主功能表中，使用導覽鍵選擇**連接**並按**確定**。
2. 選擇**藍芽**並按**確定**。
3. 在耳機及電腦上同時啟動藍芽。透過按**確定**選擇**查詢裝置**。
4. 若電腦設定正確，則「電腦已連接」會出現在我的裝置中。
5. 按**選項**並選擇 **FTP 設定檔**進行連接。
6. 現在可在兩種裝置上管理數據。

收聽立體聲音樂

1. 從主功能表中，選擇**連接**並按**確定**。
2. 選擇**藍芽**並按**確定**。
3. 選擇**我的裝置**並選擇要連接的裝置。
4. 按**選項**選擇**服務列表**並選擇**設定檔**。
5. 您將看到受支援的設定檔清單。
6. 選擇 **A2DP 設定檔**，然後按左軟鍵進行連接。

注意事項

藍芽耳機必須先進行配對。然後只需要在我的裝置下予以選擇即可。

設定藍芽技術

設定清單包括：

- ▶ **可見狀態**：您可設定手機是否可見於其他裝置的搜尋中。

連接

連接

- ▶ **更改裝置名稱：**變更裝置在其他裝置上的顯示名稱。
- ▶ **驗證：**允許其他裝置連接到您的手機前需要得到您的准許。
- ▶ **音頻路徑：**在手機或藍芽耳機之間切換音頻路徑。
- ▶ **FTP設定：**自訂手機共用資料夾及存取權限。

注意事項

保持手機處於不可見模式下且僅與您信任的裝置連接是避免惡意軟件攻擊的最安全途徑。

關於

您可在此處找到裝置名稱、BD 地址以及受支援的服務資訊。本手機支援以下藍芽設定檔：HSP（免聽筒）、HFP（免提）、SSP（序列埠）、DUN（撥號網絡）、OPP、FTP（檔案轉接設定檔）、A2DP（進階音訊分配設定檔）、AVRCP 及 BPP。

網絡

功能表 0.2

首選網絡

將模式設定為自動時，系統會使用**首選網絡**。在首選網絡清單的位置號碼顯示搜尋的優先順序。將顯示服務供應商網絡。若供應商提供多個網絡選項，您可選擇 GSM/GPRS 網絡。（出國旅遊時，請記住套用國際漫遊服務）

本手機提供以下選項：

- ▶ **自列表新增：**可從全球超過 300 家網絡中選擇。
- ▶ **新增：**透過輸入 MCC/MNC 資訊並調節重要性設定，您可建立新網絡清單。
- ▶ **變更重要性：**變更首選網絡清單中的重要性設定。
- ▶ **刪除：**刪除選定項目。

GPRS 連線

手機可在可使用時/需要時之間切換 GPRS 連線狀態。

設定 [功能表 #]

時間和日期

功能表 #.1

本功能可讓您設定主城市、檢視及變更手機中的時間和日期設定。您亦可選擇自動更新日期和時間。

設定主城市

1. 從主功能表中，選擇**設定**並按**確定**。
2. 選擇**時間和日期**並按**確定**。
3. 選擇**設定主城市**並按**確定**。此時會顯示所有主要城市。
4. 按上下導覽鍵選擇主城市，或按主城市的首個字元進行快速搜尋。
5. 按**確定**。

設定時間及日期

1. 從主功能表中，選擇**設定**並按**確定**。
2. 選擇**時間和日期**並按**確定**。
3. 按**設定時間和日期**並按**確定**。
4. 按數字鍵編輯時間及日期，開啟/關閉日光節能 - 向左/向右。
5. 按**確定**。（屏幕顯示「已儲存」）。

設定時間及日期格式

1. 從主功能表中，選擇**設定**並按**確定**。
2. 選擇**時間和日期**並按**確定**。
3. 按**設定格式**並按**確定**。
4. 透過按上下導覽鍵選擇數值，按左右導覽鍵選擇選項，從而編輯時間格式或日期格式。
5. 按**確定**。（屏幕顯示「已儲存」）。

設定自動更新

啟用此功能後，手機將根據所在時區自動更新時間及日期。

1. 從主功能表中，選擇**設定**並按**確定**。
2. 選擇**時間和日期**並按**確定**。
3. 按**自動更新**並按**確定**。
4. 選擇**開啟**或**關閉**，然後按**確定**。

注意事項

自動更新不會變更鬧鐘或日期備註，但會導致部分鬧鐘過期。

設定

顯示

顯示

功能表 #.2

本功能可讓您透過以下選項個人化您的顯示設定：

- ▶ **牆紙：**變更備用屏幕牆紙
 1. 從主功能表中，選擇**設定**並按**確定**。
 2. 選擇**顯示**並按**確定**。
 3. 選擇**牆紙**並按**確定**。
 4. 選擇**系統**或**用戶定義**並按**確定**。
 5. 選擇所需牆紙，然後按**檢視**。
 6. 按**確定**選為牆紙，或選擇**返回**選擇其他牆紙。
- ▶ **屏幕保護：**停用或選擇屏幕保護
 1. 您可停用或定義屏幕保護開始時間。（5 秒至 1 分鐘）
 2. 若要選擇屏幕保護，請選擇**系統**或**用戶定義**。
- ▶ **開機/關機顯示：**本手機可讓您從系統或手機記憶體設定開機/關機動畫或停用動畫。
- ▶ **主功能表樣式：**可讓您選擇主功能表樣式
- ▶ **主題：**可讓您變更主題
- ▶ **問候語：**可讓您編輯開機時的任何歡迎語訊息
- ▶ **背景燈時計：**調節背景燈亮度及變暗時計。
- ▶ **亮度：**調節屏幕亮度。
- ▶ **背光燈：**KM330 手機具有不同背光燈效果，可用於來電、訊息接收、未接來電、鬧鐘、音樂播放或按下相機快門時的各種場合。
- ▶ **日期和時間顯示：**在備用屏幕上顯示或隱藏時間及日期。
- ▶ **功能導向捷徑顯示：**啟用/停用備用狀態屏幕上的捷徑。
- ▶ **廣播訊息顯示：**在備用屏幕上顯示廣播資訊
- ▶ **通話資訊顯示：**在備用屏幕上顯示通話資訊

- ▶ **本手機號碼顯示：**在備用屏幕上顯示或隱藏您的號碼。
- ▶ **網絡商名稱顯示：**在備用屏幕上顯示或隱藏名稱。

手機

功能表 #.3

自動開機/關機設定

本功能可讓您設定手機的備用時間。

1. 從主功能表中，選擇**設定**並按**確定**。
2. 選擇**手機**並按**確定**。
3. 選擇**自動開機/關機設定**並按**確定**。
4. 選擇顯示預設時間並按**編輯**。
5. 決定是否啟用「狀態」，是否選擇**開啟**或**關閉**以及是否指定時間，然後按**確定**。(屏幕顯示「已儲存」)。

語言

設定語言

本手機接受不同的顯示語言。

1. 從主功能表中，選擇**設定**並按**確定**。

2. 選擇**手機**並按**確定**。
3. 選擇**語言**並按**確定**。
4. 選擇所需語言，然後按**確定**。
(屏幕顯示「完成」)。

飛航模式

此功能可讓您使用無需無線網絡的手機功能，例如當您在飛機上或身處禁止使用無線網絡的地方時。

- ▶ **標準模式：**GSM/GPRS 網絡可用。您可撥打電話。
- ▶ **飛航模式：**GSM/GPRS 已停用。您無法撥打電話。
- ▶ **開機時詢問：**開機時，您必須選擇標準模式或飛航模式。

通話

功能表 #.4

來電號碼顯示

透過選擇按**網絡設定**、**隱藏號碼**或**發送號碼**，您可決定撥打電話時如何顯示您的身份。

設定

設定

通話等待

這是一種網路服務，可讓您在當前通話中得知有其他來電。

1. 從主功能表中，選擇**設定**並按**確定**。
2. 選擇**通話**並按**確定**。
3. 選擇**來電等待**並按**確定**。
4. 選擇**啟動**、**關閉**或**查詢狀態**並按**確定**。
5. 選擇**查詢狀態**可讓您查看服務是啟動或是關閉。

來電轉接

您可設定將通話轉接到其他號碼的通話條件。

設定來電轉駁

1. 從主功能表中，選擇**設定**並按**確定**。
2. 選擇**通話**並按**確定**。
3. 選擇**來電轉駁**，然後按**確定**。
4. 選擇一個項目，然後按**確定**。

5. 選擇**啟動**、**關閉**或**查詢狀態**並按**確定**。
6. 選擇**至新號碼**或**至語音郵件**，然後按**確定**。
7. 輸入要將通話轉接至的號碼，然後按**確定**。

手機提供以下轉駁選項：

- ▶ **轉駁所有語音通話**：所有語音通話均轉駁。
- ▶ **無法接通時轉駁**：當您不在供應商的服務範圍時轉駁通話。
- ▶ **無人接聽時轉駁**：無人接聽時轉駁通話。
- ▶ **線路忙時轉駁**：手機在接聽其他來電時轉駁通話。
- ▶ **轉駁所有數據通話**：所有數據通話均轉駁。
- ▶ **取消所有轉駁**：取消以上設定。

限制通話

這是一種網絡服務，可讓您限制手機上的來電及撥出電話。此功能需要使用密碼。

- ▶ **撥出通話：**限制所有通話。
- ▶ **來電：**漫遊時限制所有通話。
- ▶ **取消所有：**取消限制設定（需要密碼）
- ▶ **更改限制密碼：**您可在此處編輯限制密碼。請聯絡供應商獲取預設密碼。此功能表可讓您變更您的限制通話密碼。

注意事項

無論您選擇哪條線路，兩條線路均可應答來電，但是如果您沒有訂閱此類服務且將手機設為線路 2，則無法撥打電話。

線路切換（視乎網絡供應）

此功能可讓您透過選擇線路 1 或線路 2 在兩條線路之間切換。

通話時間提示

該功能允許您設定通話中的時間提示。

1. 從主功能表中，選擇**設定**並按**確定**。
2. 選擇**通話**並按**確定**。
3. 選擇**通話提示**並按**確定**。
4. 按**確定**。選擇項目。
5. 按**確定**予以確認。（屏幕顯示「完成」）。

手機提供以下時間提示選擇選項：

- 關閉
- 一次
- 定期

注意事項

定期時間至少為 30 秒。

通話時間顯示

此功能可讓您開啟/關閉通話時間顯示。

設定

設定

自動重撥

此功能可讓您設定自動重撥功能。選擇開啟後，手機在無法接通的情況下最多可嘗試 10 次連接。

關閉用戶群組

該功能可讓您設定受限的通話群組。僅可撥打特定群組中的成員號碼以及接聽其來電。

安全

功能表 #.5

智能咭鎖

此功能可讓您使用特定 PIN 碼鎖定智能咭。此功能可在手機丟失時防止他人使用您的智能咭。

透過輸入 PIN 碼，您可開啟/關閉智能咭鎖。

手機鎖

開啟/關閉手機鎖。啟用手機鎖需要密碼。（預設密碼為 0000）。

自動按鍵鎖

本功能可讓您自動鎖定手機按鍵，避免意外按鍵。

若要設定此功能，請遵循以下步驟。

- ▶ 從主功能表中，選擇**設定**並按**確定**。
- ▶ 選擇**安全**並按**確定**。
- ▶ 選擇**自動按鍵鎖**並按**確定**。
- ▶ 使用導覽鍵選擇所需選項，然後按**確定**。

固定撥號

若智能咭支援此功能，您可切換受限通話設定。

限制撥號

您可開啟及關閉此模式以便撥打受限通話。但是，您需要查看智能咭是否支援此功能。

手機遺失追蹤

手機遺失追蹤 (ATMT) 可追蹤丟失的手機。若某人在未經許可的情況下使用您的手機，系統將啟用此追蹤服務。系統會在未授權使用者不知情的情況下，向您預設的電話號碼發送一則文字訊息提醒您。您可始終啟動 ATMT 並設定您的個人設定。

啟動此功能：

1. 從主功能表中，選擇設定 > 安全 > 手機遺失追蹤並按確定。
2. 選擇手機追蹤設定並按確定。
3. 選擇開啟或關閉，然後按確定。
4. 輸入追蹤碼以啟用或停用此功能。

注意事項

預設追蹤碼為「0000」。設定手機追蹤設定前您需要輸入追蹤碼。

變更追蹤號碼：

1. 從主功能表中，選擇設定 > 安全 > 手機遺失追蹤並按確定。
2. 選擇更改追蹤號碼並按確定。

3. 輸入舊追蹤碼並按確定。
4. 輸入新追蹤碼並按確定。
5. 再次輸入新追蹤碼並按確定。

設定手機追蹤設定：

1. 從主功能表中，選擇設定 > 安全 > 手機遺失追蹤並按確定。
2. 選擇 機遺失追蹤號碼並按確定。
3. 按新增。
4. 輸入追蹤碼並按確定。
5. 按確定，然後按是儲存您的設定。

變更密碼

- ▶ PIN碼：可變更 PIN 碼。
- ▶ PIN2碼：可變更 PIN2 碼。
- ▶ 手機鎖：可讓您變更密碼。

恢復原廠設定

功能表 #.6

此功能可讓您將整個手機重新設定為出廠預設值。(受密碼保護。)

疑難排解

疑難排解

問題	合理的解決方案
手機不能啟動	請取出電池並重新插入。然後按  開機。
電池已耗盡	為電池充電。檢查顯示上的充電指示符。
電池不能正確充電或手機有時自己關機	使用一塊乾淨的軟布擦拭手機及電池上的充電觸點。
電池的使用時間變短	若電池的使用時間過短，可能是由於用戶環境問題，或用戶進行了大量通話或訊號比較弱。
充電錯誤—溫度超出允許範圍	確保環境溫度合適並稍後再重新充電。
充電錯誤—充電器不兼容	只可使用原廠 LG 配件。
充電錯誤—電池出現瑕疵	更換電池。
充電錯誤—充電時未顯示電池圖示	電池電量已耗盡或長時間未使用。可能需稍候片刻，電池圖示才會顯示在屏幕上。
忘記手機代碼或密碼	預設的手機密碼為「0000」。
輸入 PUK	已連續三次錯誤輸入 PIN 碼，手機現已鎖定。輸入您的服務供應商提供的 PUK。
無網絡	您可能位處訊號較弱的地區。移動並再試一次。您所嘗試存取的是您並未向服務供應商申請的選項。請聯絡服務供應商以了解更多詳情。
您已輸入號碼但沒有撥出	確保您已按  。 請確定您已存取正確的網絡服務。請確定您沒有設定撥出限制通話選項。請確定您已輸入區域代碼。

問題	合理的解決方案
對方無法聯絡您。	請確定您已開機。按  一秒以上。請確定您正在存取網絡服務。請確定您沒有設定來電限制通話選項。
對方不能聽到您說話	請確定您已關閉喇叭。請確定手機貼近您的嘴巴。咪高風位於手機底部。
通話語音質量差。	查看顯示上的訊號強度指示符  。條數顯示訊號強度。如果您在建築物內，嘗試輕輕移動手機或移近窗口。
再調用通訊錄項目時，未撥打任何號碼。	使用「通訊錄 > 搜尋」功能來確保號碼已正確儲存。如有需要，可重新儲存號碼。
無法使用「互聯網/WAP」	您訂閱的服務不包含資料功能。您需要聯絡服務供應商以啟用此服務。
無法使用手機上的 MMS/圖片訊息	您訂閱的服務不包含資料功能。您需要聯絡服務供應商以啟用此服務。
如果以上的指引不能協助您解決問題	記下手機的型號及問題的詳細描述。 聯絡手機經銷商或 LG 服務中心尋求幫助。

緊急呼叫

重要訊息：

煙
彈
手
機

類似於所有無線電話，該手機使用無線電訊號、無線和陸上網絡及用戶設定功能來操作。基於此，無法保證所有條件下均能連線。因此，您不能僅依賴無線手機進行重要通訊（如醫療緊急事故）

在某些無線手機網絡中，或正在使用特定網絡服務和／或手機功能時，可能無法撥通緊急電話。請諮詢本地服務供應商。

配件


手機配有多種配件。您可依據個人需要選擇所需配件。

標準電池



USB線

您可使用數據傳輸組件連接電腦。

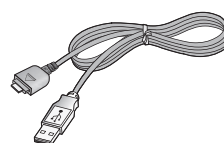

立體聲耳機




注意事項

- ▶ 請務必使用原裝LG配件。不使用原裝配件可能會導致保養失效。
- ▶ 以上配件可因區域不同而有所差異，詳情可諮詢我們的地區服務商或代理商。

旅行充電器

您可在離家或辦公室時使用充電器充電。

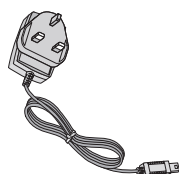

技術資料

一般資料

產品名稱 : KM330

系統 : GSM 900 / DCS 1800 / PCS 1900

適用溫度

最高: +55°C (放電中)

+45°C (充電中)

最低: -10°C

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20,Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri Band Terminal Equipment

Model Name

KM330

Trade Name

LG

C E 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v1.2.1
EN 60950-1 : 2001
EN 50360/EN 50361 : 2001
EN 301 511 V9.0.2
EN 300 328 V1.7.1

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, Fax : +31 - 36 - 547 - 8794
e-mail : jacob @ lge.com

Name

Issued Date

Seung Hyoun, Ji / Director

17. November. 2008

Signature of representative

[illegible]

[illegible]

[illegible]

简体中文

KM330 用户手册

视话机软件或服务提供商而定，本手册中的部分内容可能与您的手机有所不同。



目录

目
录

一般信息	4	呼叫等待	19
电池保养	4	进行多方通话	19
保养和维护	4	呼叫选项小窍门	19
重要安全信息	6	游戏与应用程序	21
访问密码	6	应用程序	21
射频能量	6	设置	23
特定吸收率 (SAR) 信息	6	通话记录	24
电子设备	7	所有通话	24
起搏器	7	未接来电	25
助听器	8	已拨电话	25
飞机	8	已接来电	25
易爆环境	8	删除通话记录	25
驾驶	8	通话时间	25
处理旧的设备	9	通话费用	26
手机	10	文本信息计数器	26
使用入门	12	GPRS 计数器	26
安装 SIM卡和电池	12	记事簿	27
为电池充电	12	日历	27
开机和关机	13	任务	28
解锁键盘	13	多媒体	29
待机模式	13	照相机	29
使用菜单	14	录像机	30
输入法	16	音乐播放机	31
通话功能	18	录音机	32
拨打电话	18	铃声创作器	33
接听或拒接来电	18	FM 收音机	34
		设定 FM 录音时间	35

信息	36
文本信息 (短信)	36
多媒体信息 (彩信)	40
聊天	46
语音邮件服务器	48
广播信息	48
我的文档	49
相册	49
声音	50
其它	51
外部储存器	52
储存器状态	52
情景模式	53
普通	53
会议	53
户外	53
仅振动	53
耳机	53
静音	53
蓝牙	53
电话簿	55
搜索	55
新联系人	56
来电者群组	56
快速拨号	57
我的名片	57
其它号码	57
设置	58

工具	59
闹钟	59
时间通知器	59
世界时钟	59
计算器	59
单位对换器	59
汇率对换器	59
健康管理	59
STK	60
浏览器	62
WAP	62
数据帐户	65
连接	66
蓝牙	66
网络	69
设置	70
时间和日期	70
显示	71
手机	72
呼叫	73
保安设置	75
恢复工厂设置	77
故障排除	78
紧急呼叫	80
配件	81
技术数据	82

本手机为高精密电子设备。使用手机前，请阅读此信息。如果手机工作不正常，请将其带至最近的授权维修中心。

产品保养

- ▶ 请将手机及其部件放在儿童接触不到的地方。
- ▶ 保持手机干燥。雨水、湿气及所有类型的液体或潮气都含有腐蚀电子电路的矿物质。
- ▶ 请勿将手机放置在过热或过冷的环境。
- ▶ 请勿将手机放在点燃的香烟、明火或任何热源附近。
- ▶ 不要尝试拆解手机。只有合格人员方可安装或维修您的手机。
- ▶ 不要摔跌、敲击或晃动手机。剧烈操作会损坏内部电路板。
- ▶ 不要涂画手机。涂料可能会堵塞耳机、麦克风或任何其它可移动部件，应避免不当操作。
- ▶ 小心对待手机，将其放在干净整洁的地方。
- ▶ 如果天线损坏，请勿使用手机。如果损坏的天线接触皮肤，可能会导致皮肤轻度灼伤。要替换损坏的天线，请联系最近的授权维修中心。
- ▶ 请在室内使用充电器。
- ▶ 本手机配备内置和外置天线。使用任何无线电传输设备，在天线传输或接收信号过程中，如非必要请不要触摸天线区域。接触天线会影响通信质量，可能导致手机比正常使用时耗用更多电能，从而缩短电池使用寿命。

重要安全信息

访问密码

PIN 码

个人身份号码 (PIN 码) 可防止他人未经允许使用您的 SIM 卡。PIN 码通常随 SIM 卡提供。可从您的服务提供商处获取密码。如果连续输入不正确的 PIN 码达三次, 则您需要输入 PUK 码。

PIN2 码

SIM 卡可能会提供 PIN2 码。某些功能需要 PIN2 码支持, 如设置费率。可从您的服务提供商处获取密码。

PUK 码

更改被锁定的 PIN 码时需要个人解锁密码 (PUK 码)。更改被锁定的 PIN2 码时需要 PUK 码。可从您的服务提供商处获取密码。如果连续三次输入不正确的 PIN2 码, 您可能需要输入 PUK2 码。

如果连续十次输入不正确的 PUK 码, SIM 卡将不可再使用。您需要

联系您的服务提供商以获取新卡。

手机密码

手机密码可防止他人未经允许使用您的手机。购买手机时未启用手机密码。您可以将手机密码 (0000) 更改为任何 4 位数个人密码。

射频能量

本手机是一种无线电发射器和接收器。开机时, 它会接收和发射射频 (RF) 能量。射频范围取决于选用的手机型号, 采用常用调制技术。处理通话的系统决定手机的发射能量级别。

特定吸收率 (SAR) 信息

本手机已设计为遵守有关适用的无线电波暴露安全要求。这些要求以科学组织通过定期充分地评估科学研究而制定的标准为基础。这些准则包括为确保所有人员 (无论年龄和健康状况) 安全而设计的安全裕量。

- ▶ 无线电波暴露准则采用一种称为“特定吸收率”或 SAR 的测量单位。SAR 测试是在所有用到的频带中以手机的最高认可功率电平进行发射时使用标准化方法执行的。
- ▶ 不同的LG 手机型号可能有不同的 SAR 能级，但它们均符合相关的无线电波暴露准则。
- ▶ 国际非游离辐射防护委员会 (ICNIRP) 建议的 SAR 上限值为 2W/kg，平均值超过十 (10) 克薄纸。
- ▶ 由DASY4 对该型号手机进行的测试，人耳能够承受的 SAR 最大值为 0.850 W/kg (10克)，戴在身体上时，其值为 1.380 W/kg (10 克)。

电气电子工程师协会 (IEEE) 建议的 SAR 上限值为 1.6 W/kg，平均值超过一 (1) 克薄纸，此 SAR 数据适用于各个国家/地区的居民。

电子设备

大多数现代电子设备会受到射频能量的屏蔽。然而，某些电子设备可

能不会受到您手机产生的射频信号的屏蔽。因此：

- ▶ 在未经允许的情况下，不得在医疗设备附近使用手机。

起搏器

手机可能会影响某些植入式心脏起搏器以及其它医疗植入式设备。起搏器制造商建议手持式手机与起搏器之间至少要保持 20 厘米（6 英寸）的距离，以避免对起搏器的可能干扰。

这些建议符合无线技术研究会 (Wireless Technology Research Association) 的独立研究。

配有心脏起搏器的人员：

- ▶ 在开机时，电话与心脏起搏器之间至少要保持 20 厘米（6 英寸）的距离。
- ▶ 不要将手机放在胸部口袋中。
- ▶ 应该使用心脏起搏器另一侧的耳朵接听电话，以最大限度地减小干扰。

重要安全信息

- ▶ 如果怀疑可能产生干扰，请立即关机。

助听器

手机可能会对某些助听器造成干扰。如果产生了此类干扰，您可能需要咨询您的服务提供商，或拨打客户服务电话进行讨论。

飞机

- ▶ 登机前，请关机。
- ▶ 未经机务人员允许，不得在地面上使用手机。

为了避免对通讯系统产生干扰，飞行过程中请勿使用手机。

易爆环境

在任何可能具有爆炸性气体的区域，请关闭手机并请遵守所有标志和指示。尽管少见，但手机或其配件可能产生火花。这些区域内的火花会引起爆炸或火灾，从而导致人身伤害甚至死亡。可能具有爆炸性气体的区域通常有明确标志，但有

时没有。这些区域包括燃料区，例如加油站；船甲板下面的区域；燃料或化学品运输或存贮设施；空气中含有化学品或尘埃或金属粉末等微粒的区域；以及通知您关闭车辆引擎的任何其它区域。

驾驶

查阅有关在驾驶时使用手机的本地法律法规。如果您要在驾驶过程中使用手机，请：

- ▶ 将注意力完全集中在驾驶上。
- ▶ 使用“免提”设置。（在许多国家/地区需要法律许可）。
- ▶ 如果行驶条件需要，请在拨打或接听电话之前将车辆驶离道路并停车。

射频能量可能影响车辆内的电子系统，例如车载立体声音响、安全设备等。此外，某些机动车辆制造商不允许在车辆内使用手机，除非车辆内安装了使用外部天线的免提套件。请咨询机动车辆制造商以确保手机不会对车辆电子系统产生影响。

处理旧的设备

1. 如果某产品附有此带十字叉的带轮垃圾桶符号，则表明该产品适用于欧洲指令 2002/96/EC (European Directive 2002/96/EC)。
2. 所有电器和电子产品应与市政垃圾分开处理，由政府或当局指定专门的垃圾收集设施。
3. 对旧的设备的正确处理将有助于防止对环境和人类健康带来负面影响。

有关旧的设备处理的详细信息，请与您所在城市的相关部门、废物处理服务处或购买产品处联系。


手机

正面图

手机



左/右侧视图

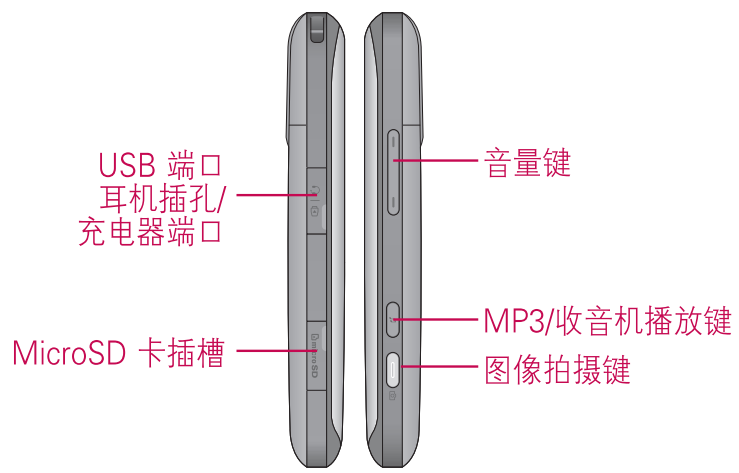

- 侧键 – 音量 (+ -)

按此键调节手机在通话过程中的音量。

- 侧键 – 相机

按此键在相机模式下拍照。

- 侧键 – 音乐播放机

- 短按可以启动 FM 收音机。
- 长按可以启动音乐播放机。

- 软键 – 左

在待机状态下按此键显示菜单。
按此键执行屏幕左下角当前显示的功能。

- 软键 – 右

在待机状态下按此键查看电话簿。
按此键执行屏幕右下角当前显示的功能。

- 发送键

按此键拨打电话。
长按此键重拨最近拨出号码。

- 结束/电源键

按此键结束通话。
长按可以开/关机。

- 导航键

在待机模式下，快速访问

-  写短信、
-  快捷方式、
-  收藏夹、
-  电话簿列表

- 数字键




输入号码或字符

使用入门


当您注册服务提供商时，您会收到 SIM 卡 (用户识别模块卡)。要拨打电话，必须在手机中装上 SIM 卡。SIM 卡是计算机芯片，其中包括您的手机号码、电话本信息已经服务提供商信息。请小心处理 SIM 卡，不要弯曲或将其暴露在静电或灰尘之下。插入 SIM 卡之前，请确保关机。SIM 卡插槽安装在电池下面。执行以下安装 SIM 卡和电池的步骤：

安装 SIM 卡和电池


1. 推动电池盖以释放后盖。

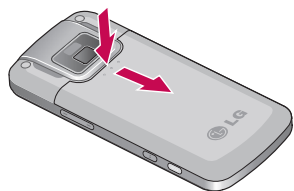


2. 如图所示，取出电池。

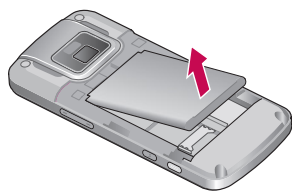

3. 如图所示，插入 SIM 卡。

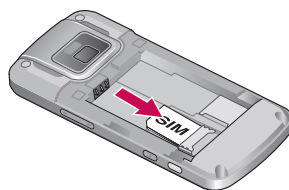

4. 插入电池，然后盖上后盖。

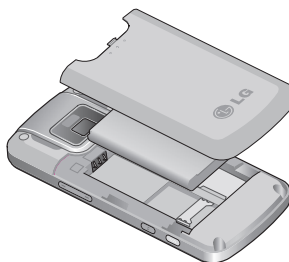

为电池充电

第一次使用手机前，必须为电池完全充电。

1. 将 USB 数据线连接到手机左侧的迷你 USB 端口。
2. 将旅行充电器连接到 AC 墙上插孔。



备注

- ▶ 当手机充电时，您可以使用手机，但是使用时充电将暂停。
- ▶ 电池电量低时会出现“

开机和关机

- ▶ 按住 

备注

- ▶ 如果在正确插入 SIM 卡后手机仍显示“插入 SIM 卡”，请联系您的网络运营商获取 PIN 码，键入 PIN 码，然后按 

解锁键盘

KM330 在特定时间段之后将自动锁定，以避免意外按键。请参阅“设置”菜单中的“保密设置”

以了解有关如何锁定键盘的信息。

要解锁键盘，请执行以下步骤：

1. 手机处于待机状态时，**解锁**选项显示在屏幕的左下角。
2. 要解锁键盘，请按 

待机模式

当手机开机却未被使用时，将处于待机状态。在待机状态下，屏幕左下角将显示**菜单**选项，右下角显示**电话簿**。

按**菜单**进入主菜单或按**电话簿**进入联系人子菜单。屏幕上方将显示指示符。

待机状态下的指示符显示如下：

 13

使用入门

	指示手机使用“会议”设置。
	指示手机使用“大声”设置。
	指示手机使用“振动”设置。
	指示手机使用“静音”设置。
	指示手机使用“耳机”设置。
	指示已设置闹钟。
	指示手机正处于漫游状态。
	指示有未接来电。
	指示有新信息。
	指示所有来电将转接到其它号码。
	指示手机已启用蓝牙功能。
	指示您处在聊天室 1 中。
	指示您处在聊天室 2 中。
	指示手机已启用 WAP 功能。
	指示手机中已插入外部储存卡。

使用菜单

在待机状态下，按  左软键查看主菜单。

遵循以下在菜单和菜单选项间浏览的提示：

- ▶ 要查看菜单，请按待机状态下的  左软键或  中键。
- ▶ 使用导航键在不同菜单间移动。
- ▶ 屏幕左下角显示**确定**，您可以按此键进入当前选定的菜单项，右下角则显示“返回”。按  左软键（位于**确定**下面）选定菜单项。按  右软键（位于“键盘锁”下面）以解锁案件。
- ▶ 在**菜单选项**标题左侧，每个菜单项旁都会显示一个小数字。您也可以键盘上按与菜单项相应的数字以选定该项。
- ▶ 要快速退出菜单，请按**结束/电源**键。

- ▶ 使用导航键选择子菜单项和选项。右软键  和  左软键还可以用于选择子菜单中的不同选项。

例如，要查看所有通话，请执行以下操作：

1. 使用导航键从主菜单中选择**通话记录**。
2. 按  左软键确定选择。此时将打开**通话记录**子菜单。
3. 按  左软键选择**所有通话**选项。此时将打开所有通话列表。

输入法

向电话本添加姓名或发送文本信息时，需要输入文本。手机提供多种文本输入方法。您可以单独输入字母或使用预测文本输入法，该方法可随输入的字母提供单词以供您选择。您可以输入大写字母、小写字母或同时输入二者，或插入符号。

基本功能

选择输入法

1. 从主菜单中，使用导航键选择**信息**，然后按**确定**。
2. 选择**文本信息**，然后按**确定**。
3. 选择**写信息**，然后按**确定**。此时您将处于文本模式。
4. 按选项，选择输入方法。然后，按**确定**。
5. 选择所需的输入法，然后按**确定**。

快速更改输入法的方法

处于文本模式时，按  键更改输入法。

插入空格

当输入法为 T9/ ABC/ Abc/ abc 时，按  键插入空格。

传统英文输入

处于文本模式时，手机提供了多键功能。在文本模式中，按  键两次显示字母 B，按三次显示字母 C。

使用“T9”文本输入

“T9”使用内置词典，根据按键顺序识别最常用的词。

输入法显示在手机右上角。按  键可切换 T9 输入法。

指示灯	功能（智能英文模式）
T9 Abc	T9 智能 Abc
T9 abc	T9 智能 abc
T9 ABC	T9 智能 ABC
123	数字

指示灯	功能（英文模式）
Abc	Abc
abc	abc
ABC	ABC
123	数字

通话功能

本节介绍有关手机支持的通话服务的信息。

拨打电话

1. 在待机状态下，输入区号和电话号码。
2. 按  键。

备注

如果输入号码有误，请按清除删除号码。

通过电话簿拨打电话

1. 在待机状态下，按  右软键进入电话簿。
2. 按**确定**键进入搜索选项。直接从联系人列表中选择姓名，或在快速搜索字段中输入姓名。然后，按  键拨打电话。

或者

1. 按“菜单”，然后选择**电话簿**菜单。

2. 使用导航键在**搜索**选项中选择。直接从联系人列表中选择姓名，或在快速搜索字段中输入姓名。然后，按  键拨打电话。

或者

1. 按向下导航键进入联系人列表。
2. 直接从联系人列表中选择姓名，或在快速搜索字段中输入姓名。然后，按  键拨打电话。

拨打国际电话

1. 在待机状态下，长按  键，直到出现 + (国际前缀字符) 符号。
2. 输入国家代码、地区代码和电话号码。
3. 按  键拨打电话。

接听或拒接来电

接听来电

按  键在手机响起时接听来电。

拒接来电

按  键在手机响起时拒绝来电。

呼叫等待

您在接听电话过程中可以接听另一个来电。

进行多方通话

如果您同时有多个来电时，可进行多方通话。

1. 如前所述，向第一位参与者拨打电话。
2. 在与第一位参与者的通话过程中呼叫第二位参与者。
3. 按  左软键，然后选择**多方通话**。此时将第一位和第二位参与者连接到多方通话中。
4. 重复步骤 2 和 3 可将新的参与者连接到“多方通话”中。
5. 按**选项**，然后选择**全部结束**以终止通话，按  键结束所有通话。

备注

- ▶ 可单独断开与某通话者的连接。在多方通话过程中选择一位通话者，按**选项 > 结束单个通话**。
- ▶ 多方通话最多允许 6 位参与者，包括发起方。（具体取决于运营商支持）

呼叫选项小窍门

在通话过程中可使用多个功能。拨打新号码时，可使用选项 1–8 (如下所示)。在进行多方通话时，还可使用其它选项 (9–13)。

1. **使用手机/蓝牙**: 打开蓝牙免提装置。
2. **电话簿**: 转至“电话簿”菜单的快捷键。
3. **暂停**: 保持通话。
4. **新通话**: 在当前通话进行期间拨打其它电话。”
5. **结束通话**: 结束通话。
6. **信息**: 转至“信息”菜单的快捷键。

通话功能

- 7. **录音**: 在通话过程中录制对话。
- 8. **启用/停用双音多频**: 打开/关闭DTMF（双音多频）音呼叫系统。
- 9. **对换**: 在保留的通话和当前通话间切换。
- 10. **转移**: 转移呼叫。
- 11. **结束单个通话**: 结束多方通话中的某一方通话。
- 12. **全部结束**: 结束多方通话。
- 13. **分离**: 暂停多方通话。

游戏与应用程序 [菜单 1]

KM330 提供了“应用程序”功能。在“应用程序”中，有 3 个 Java 应用程序；Chequered Flag、Mini Game World 和 Backgammon。

应用程序

KM330 支持 Java 应用程序。

首次使用应用程序

KM330 包括三款预设的 Java 游戏。使用 Java 游戏之前，您必须安装 MIDlet 以执行 Java 游戏。手机提供商在 KM330 中预先集成了 MIDlet，并提供了两种安装方法：从 WAP 安装 MIDlet 和本地安装 MIDlet。（有关详细信息，请参阅以下内容）

KM330 包括 3 款预设的 Java 游戏

1. 从主菜单中，选择**游戏和应用程序**，然后按**确定**。
2. 选择**游戏和应用程序**，然后按**确定**。
3. 选择**应用程序**，然后按**确定**。

4. 选择要玩的 Java 游戏，然后按**选项**。
5. 选择**启动**，然后按**确定**开始玩游戏。

用户可以通过 WAP 下载 Java 应用程序。

1. 转到 WAP 站点，然后从 WAP 站点下载 Java 游戏。
2. 下载应用程序后，从主菜单选择**游戏和应用程序**，然后按**确定**。
3. 选择**应用程序**，然后按**确定**。
4. 选择从 WAP 下载的 Java 游戏之一，然后按**选项**启动、更新应用程序、调节设置、查看信息或删除该应用程序。

用户可以将 Java 游戏保存到**我的文档**菜单。

1. 通过 USB 数据线将 Java 游戏文件保存到**我的文档**。保存过程与向手机添加音乐曲目相同。
2. 选择**游戏和应用程序**，然后按**确定**。

游戏和应用程序

3. 选择**应用程序**，然后按**确定**。
4. 选择 Java 游戏之一，然后按**选项**启动、更新应用程序、调节设置、查看信息或删除该应用程序。

备注

Java MIDlet 仅可识别扩展名为 .jad 或 .jar 的文件。

个性化应用程序

当您从主菜单选择**游戏和应用程序** > **应用程序** > 某应用程序时，本手机提供以下选项。

- ▶ **启动**: 启动所选的 Java 游戏或应用程序。
- ▶ **设置**: 定义使用 Java 应用程序的权限级别。权限级别包括“第一次询问”、“允许”、“从不”和“每次询问”。可配置以下 7 个权限设置:
 - **网络接入**: 可以通过网络建立数据连接。

- **自动启动**: 可以自动启动 MIDlet，例如，通过 Push 注册。
- **信息**: 可发送或接收信息，如短信。
- **多媒体**: 可录制图像、音频、视频等。
- **阅读用户资料**: 可读取用户数据，如电话本和日历条目。
- **编写用户资料**: 可编写用户资料。
- **本地连接**: 可通过本地端口连接，如蓝牙。
- ▶ **信息**: 访问有关 Java 游戏和应用程序的信息，包括: 应用程序名称、储存器大小、应用程序版本、供应商名称和授权方。

备注

无法删除预设 Java 游戏。

设置

当您从主菜单选择**游戏和应用程序**
> **设置**时，本手机提供以下选项。

- ▶ **GPRS (网络设置):** 可使用 GPRS 功能。(与“浏览”功能相同。)
- ▶ **记忆体状态:** 指示总内存、已用内存和可用内存。
- ▶ **资料:** 资料: 提供 Java、CLDC 和 MIDP 版本的信息。

通话记录 [菜单 2]

本手机的**通话记录**菜单中将保存以下通话记录: 未接来电、已接来电、拨电、时间和通话费用。您可以查看最近拨出电话、已接和未接来电。如果选择特定电话号码, 手机还将提供以下功能: 删除、保存、编辑、发送文本信息和发送多媒体信息。一旦通话列表超出储存器限制, 将自动删除最早的记录。您可以按  键快速查看未接来电、已发送呼叫和已接来电。

备注

- ▶ 更换 SIM 卡时, 手机中储存的通话记录将被删除, 而 SIM 卡中储存的通话记录不会被删除。

所有通话

菜单 2.1

手机最多可记录 120 个未接来电、拨电和已接来电条目。

在**通话记录**菜单中, 选择“所有通话”, 然后按**确定**查看记录 (在待机模式下按“发送”键将显示同一菜单)。本手机提供以下选项:

- ▶ **查看:** 查看有关通话记录的信息。

- ▶ **拨号:** 您可以拨打选定号码。

- ▶ **新信息:**

1. **文本** – 向指定号码发送信息 (文本/多媒体/电子邮件)。
2. **多媒体** – 向指定号码发送多媒体信息。

- ▶ **删除:** 从通话记录中删除指定条目。

- ▶ **编辑号码:** 编辑手机号码。

- ▶ **多方删除:** 同时删除通话记录中的多个号码

- ▶ **删除全部:** 删除通话记录中的所有号码。

如果电话号码未储存在**电话簿**中, 将提供其它选项。

- ▶ **储存号码:**

1. **新电话簿:** 选定保存位置 (SIM 卡/手机) 后, 您可以将其添加到电话簿列表。
2. **更新联系人:** 您可以更新或复制 SIM 卡或手机储存器中的条目。

未接来电

菜单 2.2

在**通话记录**菜单中，选择**未接来电**，然后按**确定**查看记录。查看您没接到的所有电话的列表，本手机会提供以下选项：

- 查看电话号码 (如果有) 并呼叫，或将该号码保存到**电话簿**中。
- 为该号码输入新的姓名，并保存到**电话簿**中。
- 向该号码发送信息。
- 从列表中删除该呼叫。

已拨电话

菜单 2.3

在**通话记录**菜单中，选择**拨电**，然后按**确定**查看记录。查看所有已拨打的电话的列表，本手机会提供以下选项：

- 查看电话号码 (如果有) 并呼叫，或将该号码保存到**电话簿**中。
- 为该号码输入新的姓名，并保存到**电话簿**中。
- 向该号码发送信息。
- 从列表中删除该呼叫。

已接来电

菜单 2.4

在**通话记录**菜单中，选择**已接来电**，然后按**确定**查看记录。查看所有已接的电话的列表，本手机会提供以下选项：

- 查看电话号码 (如果有) 并呼叫，或将该号码保存到**电话簿**中。
- 为该号码输入新的姓名，并保存到**电话簿**中。
- 向该号码发送信息。
- 从列表中删除该呼叫。

删除通话记录

菜单 2.5

此功能允许您删除未接来电、拨电、已接来电或所有通话记录。

通话时间

菜单 2.6

此功能允许您查看来电和去电的通话持续时间长度。您也可以重置通话时间。

可以使用以下计时方式：

- ▶ **上次通话**: 上次通话的时间。
- ▶ **所有通话**: 自上次重置计时器

通话记录

后，所有来电和去电的总时间长度。

- ▶ **拨电:** 拨电的时间长度。
- ▶ **已接来电:** 来电的时间长度。

通话费用

菜单 2.7

可检查最后通话、全部通话的费用，剩余和重设费用。

要重设费用，您需要 PIN2 码。

- ▶ **上次通话:** 上次通话的时间。
- ▶ **所有通话:** 自上次重置计时器后，所有来电和去电的总时间长度。
- ▶ **费用设置:** 在此菜单中，您可以在输入 PIN2 码后更改设置。
 1. **设定价格:** 您可以设置货币类型和单价。与您的服务提供商联系以了解收费单价。要在此菜单中选择货币或单价，您必须输入 PIN2 码。

2. **自动显示:** 此网络服务允许您自动查看最后一次通话的费用。如果设置为“开”，您可以在通话被释放时查看最后一次通话费用。

文本信息计数器

菜单 2.8

此功能允许您查看信息数。您可以按**重新设置**重新启动计数器。

当您选择**通话记录 > 文本信息计数器**时，本手机提供以下选项。

- ▶ **信息发送成功:** 已发送的信息数。
- ▶ **已接收:** 已接收的信息数。

GPRS 计数器

菜单 2.9

您可以通过 GPRS 信息选项查看在 Web 上传输的数据总计。

记事簿 [菜单 3]

日历

菜单 3.1

此功能允许您跟踪日历中保存的日程表和任务。您还可以设置闹钟提示音。

第一次在“日历”中添加备注和提醒

1. 从主菜单中，选择**记事簿**，然后按**确定**。
2. 选择**日历**，然后按**确定**。
3. 选择您要插入备注或提示的日期，然后按**选项**。
4. 选择**添加任务**，然后按**确定**。
5. 使用向上/向下导航键选择**备注**，然后按**编辑**。
6. 在此模式下输入备注或提醒，然后按**选项**。
7. 选择**保存**，然后按**确定**。
8. 按**完成**，使用  中键选择**是**。

编辑特定日期的备注或提醒

当您输入特定日期并按**选项**时，本手机提供以下选项。

- ▶ **查看**: 查看特定日期储存的任务。
- ▶ **添加**: 为特定日期添加新任务。
- ▶ **修改任务**: 编辑指定日的任务。
- ▶ **删除任务**: 删除指定任务。
- ▶ **删除全部**: 删除所有任务。
- ▶ **发送日程表**: 通过文本信息、多媒体信息、蓝牙发送任务或仅保存文件。

跳转到所需日期:

1. 从主菜单中，使用向上/向下导航键选择**记事簿**，然后按**确定**。
2. 选择**日历**，然后按**确定**。
3. 按“选项”，然后选择**转至日期**。
4. 按**确定**键入要跳转至的年、月、日，然后再次按**确定**。

备注

您可以按数字 1 和数字 3 键转到上一年都下一年。您可以按数字键 7 和数字键 9 转到上一个月和下一个月。您可以按 5 转到当前日期。

记事簿



任务

菜单 3.2

此功能列出从日历选项添加的所有任务。使用此功能中的选项，您也可以查看、编辑或删除任务。

第一次使用“任务”

1. 从主菜单中，选择**记事簿**，然后按**确定**。
2. 选择**任务**，然后按**确定**。
3. 按**选项**和**添加**编辑任务列表，输入日期、时间、备注等。
4. 按**完成**和**保存**。

多媒体 [菜单 4]

照相机

菜单 4.1

您可以使用内置相机拍照并根据需要调整设置。相机镜头在手机背面，手机屏幕可用作取景器。如果相机储存空间不足，您需要 a) 删除一些旧照片以释放空间 b) 将照片保存到储存卡上。在预览模式下，摄像机设置显示在手机顶部。

备注

如果违反当地法律，请不要使用此功能。

拍照

1. 从主菜单中，选择**多媒体**，然后按**确定**。
2. 选择**照相机**，然后按**确定**。您目前处于预览模式中。
3. 按**选项**个性化您的照相机设置。
4. 使用镜头对焦物体，使用音量键缩放。

5. 按  相机键或  中键拍照。

备注

- ▶ 照片以 JPEG 格式保存在我的文档的照片文件夹中。您可以在**相册**模式下浏览图片。
- ▶ 短按  键自动对焦物体；长按  键拍照。

设置相机

1. 从主菜单中，选择**多媒体**，然后按**确定**。
2. 选择**照相机**，然后按**确定**。
3. 按**选项**。选项栏显示在屏幕底部。
4. 使用向上/向下导航键选择不同选项，或调整手机屏幕上显示的选项栏的设置。

当您从主菜单选择**照相机 > 选项**时，本手机提供以下选项。

多媒体

多媒体

下表定义了相机设置图标。

	转到: 允许您选择视频模式或专辑
	图像大小*: 设置图像大小: 320x240/ 640x480/1280x960/ 1600x1200/2048x1536
	质量设置: 设置图像质量 标准/精细/ 超精细
	计时器*: 设置计时器。 计时器关/5 秒/10 秒/15 秒
	保存至*: 插入外部储存卡时，您可以选 择将图像保存在手机或储存卡 中
	闪光灯*: 关/自动/拍摄时 闪光灯默认设置为“自动”
	色彩效果: 效果包括: 效果关/灰度/怀旧/怀 旧绿/怀旧蓝/反色/灰度转化/黑 板/白板/铜版雕刻/青铜雕/浮饰/ 对比度/素描

	白平衡: 白平衡 (WB) 是去除失真色偏 的过程，也就是说，在人们眼 中呈现白色的物体在您的照片 中也将呈现白色。 (自动白平衡/日光/钨丝灯/荧光 灯/阴天/白炽灯)
	夜间模式: 允许您设置场景模式: 自动/夜间
	频段: 您可以设置 50Hz 或 60Hz 的 频段。
	快门声音: 您可以设置拍照时的快门声音 (关/音效一/音效二/音效三)
	重新设置: 恢复工厂设置

* 在相机模式下显示

录像机

菜单 4.2

您可以使用内置相机录制视频剪
辑。此功能还允许录音。有关详细
信息，请参阅以下说明。

拍摄视频剪辑

1. 从主菜单中，选择**多媒体**，然后按**确定**。
2. 选择**录像机**，然后按**确定**。
3. 按**选项**个性化您的照相机设置。
4. 按  相机键录制视频剪辑或按  中键停止录制视频剪辑。
5. 您可以以**视频播放机**模式观看视频剪辑。

备注

- ▶ 视频剪辑以 mp4 格式保存在**我的文档**的视频文件夹中。您也可以在**专辑**或**视频播放机**模式下收听音频剪辑。
- ▶ 使用相机键，您还可以跳转到相机功能。
- ▶ 查看下表，了解**录像机**模式下的功能键。

录制模式下的按键定义

	左软键 暂停视频录制。
	右软键 停止录制视频剪辑

	中软键 按中软键开始/暂停/恢复录制视频剪辑。
	相机键 录制/暂停/恢复视频剪辑。

音乐播放机

菜单 4.3

KM330 拥有一个集成的音乐播放机。专用音乐播放机键用于快速进入音乐播放机。通过使用兼容耳机或通过内置听筒，您可以欣赏手机中的 MP3 音乐文件。LED 灯光效果将于您喜爱的音乐同步，为您带来更舒适的音乐体验。

播放音乐

1. 长按  音乐播放机键。您也可以使用导航键选择**多媒体**，然后按**确定**。选择**音乐播放机**，然后按**确定**。
2. 您可以打开储存在手机上的所有音乐曲目列表，也可以从自定义播放列表播放歌曲。

多媒体

备注

- ▶ 聆听音乐时，您可以使用其它手机功能。从 **音乐播放机** 屏幕，按 **选项** > **最小化**。
- ▶ 您可以通过“设置”关闭LED 灯光效果。

自定义播放列表

您可以根据个人喜好创建播放列表，只需将手机或外部储存卡中的音乐曲目添加进列表即可。

▶ 编辑播放列表：

- 转到**多媒体**，然后按**确定**。
- 选择**我的播放列表**，然后按**确定**。
- 按**选项**可以执行以下操作：**查看**、**新建播放列表**或**全部删除**。

更改音乐播放机设置

您可以个性化音乐播放器模式、均衡器和背景色。

- **随机**：可以随机播放所有歌曲或逐个播放。

- **重复**：可以重复播放所有歌曲或选定单曲。
- **均衡器**：可以自定义均衡器。支持以下均衡器模式：标准、贝斯、舞曲、古典、高音、聚会、流行和摇滚。
- **外观**：可以在不同的播放机外观之间切换。

备注

- ▶ 如果播放列表中含有任何无效的文件，手机将弹出一则错误消息并返回到上一屏幕。

录音机

菜单 4.4

录音机是一项简单的录音工具，为您提供管理语音文件的功能。

开始录音

1. 从主菜单中，选择**多媒体**，然后按**确定**。
2. 选择**录音机**，然后按**确定**。
3. 按**选项**，然后选择**录音**。
4. 选择**录音**后，手机将立即开始录音。

5. 录音完成后，手机将提示您输入文件名并保存文件。

备注

- ▶ 在录音过程中，您可以通过按向右或向左软键随时暂停或停止录音。
- ▶ 录音完成后，文件将保存为 AMR 和 WAV 格式。

本手机提供以下不同的选项：

- ▶ **录音**：开始新录音。
- ▶ **播放**：播放选定的已录制的声音文件。
- ▶ **附加**：开始录音并将其附加至选定的音频文件。
- ▶ **重命名**：重命名录制的音频文件。
- ▶ **删除**：删除录制的音频文件。
- ▶ **删除全部**：删除所有录制的音频文件。
- ▶ **设置**：允许您更改储存位置、录音文件格式及声音质量。
- ▶ **下一页**：转发文件以使用配置模式或通过彩信或蓝牙转发给朋友。

铃声创作器

菜单 4.5

此功能允许您编辑铃声信号或铃声。

开始创作

1. 从主菜单中，选择**多媒体**，然后按**确定**。
2. 选择**铃声创作器**，然后按**确定**。
3. 选择**选项**，然后选择**添加**。
4. 按键盘开始编辑。
5. 按**选项**保存铃声。

备注

- ▶ 您编辑的铃声以 IMY 格式保存。

编辑铃声时，本手机提供以下选项以便个性化铃声。

- ▶ **播放**：允许您收听所编辑的铃声。
- ▶ **播放速度**：允许您调节三种不同的播放速度。
- ▶ **选择乐器**：允许您选择所需乐器。
- ▶ **保存**：保存铃声。

多媒体

多媒体

铃声编辑器模式下的按键定义

按键	功能和说明
	按 1 键输入 Do
	按 2 键输入 Re
	按 3 键输入 Mi
	按 4 键输入 Fa
	按 5 键输入 So
	按 6 键输入 La
	按 7 键输入 Si
	按 8 键输入振动音符
	按 9 键输入背景灯/LED 音符
	按 0 键重置
	按 # 键在升半音、标准或降半音间切换。
	按 * 键更改当前音符的节拍，或更改背景灯和 LED 的音符。
	按向下导航键低一个八度（可禁用振动、背景灯和 LED）
	按音量键更改乐器。

编辑铃声

本手机提供以下选项：

- ▶ **播放**：聆听自己编辑的铃声。
- ▶ **编辑**：编辑选定的铃声。
- ▶ **添加**：将更多铃声添加到选定铃声。
- ▶ **重命名**：重命名文件。
- ▶ **删除**：删除文件。
- ▶ **全部删除**：删除此文件夹中的所有内容。
- ▶ **转发**：通过短信、彩信或蓝牙将铃声转发至其它用户情景模式。

FM 收音机 菜单 4.6

此功能允许您随时收听喜欢的电台。要使 FM 收音机功能正常，需要为手机附加兼容的耳机。

收听收音机

1. 将耳机连接到手机。
2. 使用导航键选择**多媒体**，然后按**确定**。然后，选择**FM 收音机**，按**确定**。

3. 使用导航键盘搜索收音机电台。您也可以按**选项**搜索收音机频率以获取可用频道，搜索到的频道将自动保存到频道列表中。
4. 按**选项**编辑频道列表。您可以预设 9 个电台。

本手机针对收音机提供以下选项：

- ▶ **频道列表**：通过输入频道名称和频率，最多可添加 9 个电台作为书签。
- ▶ **手动输入**：手动键入收音机电台频率。
- ▶ **自动搜索并设置**：自动搜索可用频道，然后自动将其保存在频道列表中。
- ▶ **设置**：更改背景灯播放、FM 收音机皮肤、文件格式和储存设置。您可以以 AMR 或 Wav 格式播放录音。您可以设置扬声器和声音品质。

- ▶ **录音**：录下喜欢的电台节目。
- ▶ **附加**：恢复之前录制的文件。
- ▶ **文件列表**：管理录制的音频文件。

备注

要使用 FM 收音机，您需要插入耳机。

设定 FM 录音时间 菜单 4.7

本手机允许您预设 FM 收音机节目。您一次可最多设定 4 个录音。选项包括：打开/关闭录音、设置预设一次或重复（每天/每周/每月）录制。还包括手动输入文件和储存设置的选项。

备注

预设收音机频道时，您可以将手机用作天线。

信息 [菜单 5]

详细

文本信息 (短信) 菜单 5.1

本手机包括语音邮件通知信息和文本信息。语音邮件和短信服务属于网络服务。本手机还允许您发送和接收包括图片或铃声的文本信息。带图片的信息由多条文本信息组成。因此，发送带图片的信息比仅发送文本信息费用要高。

编写信息

编写文本信息

1. 从主菜单中，选择**信息**，然后按**确定**。
2. 选择**文本信息**，然后按**确定**。
3. 选择**写短信**，然后按**确定**。
4. 通过选择以下选项，您可以使用不同的特殊效果来个性化信息：
 - ▶ **发送至**: 将信息发送给一个或多个联系人。
 - ▶ **使用模板**: 插入默认模板，以加快编写信息的速度。

- ▶ **插入对象**: 在文本信息中插入图片、动画、铃声和声音。
- ▶ **将文本格式化**: 选择文本大小、样式、对其方式或开始新段落。
- ▶ **插入联系人**: 插入联系人列表中的联系人。
- ▶ **插入书签**: 插入书签列表中的书签。
- ▶ **输入方法**: 选择所需的输入方法。
- ▶ **一般设置**: 设置信息选项，包括发送报告和回复路径。

备注

- ▶ 要跳转到“信息”功能，您可以在待机状态下按  导航键。
- ▶ 要输入内容，请参阅**输入方法**。
- ▶ 您可以使用  键输入符号，使用  键切换输入方法，使用导航键移动光标。

手动发送信息

1. 从主菜单中，选择**信息**，然后按**确定**。

2. 选择**文本信息**，然后按**确定**。
3. 选择**写短信**，然后按**确定**开始写信息。(请参阅“编写文本信息”。)
4. 写完信息后，选择**选项**，然后选择**发送至**。
5. 输入您要发送至的手机号码。
6. 按**选项**，然后选择**发送至**发送信息。

备注

要使用图片信息功能，您的网络运营商或服务提供商必须提供支持。只有包含此功能的手机才可以接收并显示图片信息。

将信息发送给联系人列表中的某人

1. 从主菜单中，选择**信息**，然后按**确定**。
2. 选择**文本信息**，然后按**确定**。
3. 选择**写短信**，然后按**确定**开始编写信息。(请参阅第 36 页的“编写文本信息”。)

4. 写完信息后，选择**选项**，然后选择**发送至**。
5. 输入您要发送至的手机号码。
6. 按**选项**，然后选择**电话簿**。随后，您将进入联系人列表模式。
7. 选择要向其发送信息的联系人，然后按**确定**。

当您选择**信息 > 文本信息 > 编写信息 > 选项 > 发送至 > 选项**时，本手机提供以下选项

- ▶ **电话簿**: 输入电话号码，或选择“电话簿”打开联系人列表。您可以添加多个联系人。选择一个联系人，然后点触“发送”。
- ▶ **按群组发送**: 您可以一次将信息发送给多个联系人。发送成功的信息将保存在发件箱中。
- ▶ **保存至草稿**: 您可以将写的信息保存在手机的草稿箱中。

使用模板

1. 从主菜单中，使用向上/向下导航键选择**信息**，然后按**确定**。
2. 选择**文本信息**，然后按**确定**。

信息

详细

3. 选择**编写信息**，然后按**确定**。
4. 选择**使用模板**，然后按**确定**。
5. 使用向上/向下导航键选择所需模板，然后按**确定**。
6. 按**选项**，然后选择**发送至**。
7. 输入电话号码或选择要向其发送信息的所需联系人。

收件箱

读取信息

收到信息后，屏幕上将显示指示符。如果您的收件箱已满，将会出现一个弹出窗口，提醒您删除部分旧的信息。否则，您的信息将会保存到手机而不是 SIM 卡中。

1. 从主菜单中，使用向上/向下导航键选择**信息**，然后按**确定**。
2. 选择**文本信息**，然后按**确定**。
3. 选择**收件箱**，然后按**确定**。手机屏幕上将显示信息列表。
4. 按**选项**选择所需信息，然后选择**查看**以阅读内容。

备注

- ▶ 根据默认设置，您收到的信息将保存在 SIM 卡中。
- ▶ 在收件箱中看到指示符时，表明信息未读。在收件箱中看到指示符时，表明信息已读。

当您选择**信息 > 文本信息 > 收件箱 > 选项**时，本手机提供以下选项。

- ▶ **查看**: 读取收到的信息。
- ▶ **回复**: 回复收到的信息。
- ▶ **删除**: 删除收到的信息。
- ▶ **转发**: 转发收到的信息。
- ▶ **储存号码**: 将号码保存到电话簿中。
- ▶ **复制至手机/SIM 卡**: 将选定文本信息复制至手机/SIM 卡。
- ▶ **移动至手机/SIM卡**: 将选定文本信息移动至手机/SIM卡。
- ▶ **标记/取消标记**: 您可以标记/取消标记收件箱中保存的信息。标记信息后，您可以删除、复制或移动标记的信息。

- ▶ **聊天:** 与发件人聊天。

已发送

信息发出后，将保存在发件箱文件夹中。选择**信息 > 文本信息 > 已发送 > 选项**以阅读发件箱信息：

- ▶ **查看:** 查看信息。
- ▶ **发送:** 发送信息而不编辑。
- ▶ **编辑:** 发送信息前可进行编辑。
- ▶ **删除:** 删除信息。
- ▶ **复制至手机/SIM卡:** 可以将信息复制到手机。仅在突出显示储存在 SIM 卡中的信息时此选项可用。
- ▶ **移动至手机/SIM卡:** 可以将信息移动至手机。仅在突出显示储存在 SIM 卡中的信息时可用。
- ▶ **储存号码:** 将号码保存到电话簿中。
- ▶ **标记/取消标记:** 您可以标记/取消标记收件箱中保存的信息。标记信息后，您可以删除、复制或移动标记的信息。

草稿箱

您可以将信息储存在**草稿箱**中，以便稍后进行处理。当您选择**信息 > 文本信息 > 草稿箱 > 选项**时，本手机提供以下选项：

- ▶ **查看:** 查看草稿。
- ▶ **发送:** 发送草稿。
- ▶ **编辑:** 编辑已保存的草稿。
- ▶ **删除:** 删除草稿。
- ▶ **多项删除:** 可以同时删除多个文件。
- ▶ **保存号码:** 将号码保存到电话簿中。

模板

手机中包含多个默认模板，有助于快速撰写信息。您还可以根据需要自定义或删除这些模板。

编辑模板

1. 从主菜单中，使用向上/向下导航键选择**信息**，然后按**确定**。

信息

详细

2. 选择**文本信息**，然后按**确定**。
3. 选择**模板**，然后按**确定**。
4. 使用向上/向下导航键选择所需模板，然后按**选项**。
5. 选择**编辑**（要清除模板，请选择**清除**。）以编辑模板，然后按**确定**。
6. 按**选项**，然后选择**保存**。
7. 按**确定**。随后，如要保存编辑，请选择“是”，要放弃编辑，请选择**否**。

信息设置

本手机允许您设置有关短信功能的默认设置。

1. 从主菜单中，使用导航键选择**信息 > 文本信息 > 信息设置**。
2. 按**确定**选择设置。
3. 按**确定**设置信息设置。

本手机提供以下设置：

- ▶ **设置文件设置**：如果您的 SIM 卡允许使用多个信息配置文件，那么您可以分别对这些配置文件进行编辑。
- ▶ **公用设置**：您可以选择是启用还是禁用状态报告并更改服务中心的回复路径（如果有）。
- ▶ **储存器状态**：检查 SIM 卡和手机中的储存器状态。
- ▶ **首选储存位置**：在 SIM 卡或手机储存选项间切换。
- ▶ **首选载体**：选择您的首选载体：“GSM”、“仅限 GPRS”和“仅限 GSM”

多媒体信息（彩信）菜单 5.2

此功能允许您发送包含文本、声音和图片的信息。根据不同网络，您可能会收到包括 Internet 地址的文本信息，您可通过该地址查看并下载多媒体信息。

在彩信功能中，本手机支持以下格式：

- ▶ **图片：**JPG、GIF 和 BMP。
- ▶ **声音：**可扩展的合成音 MIDI (SP-MIDI)、i-Melody。

备注

- ▶ 在通话、玩游戏或通过任何 WAP 连接接收 GPRS 数据时，不能接收多媒体信息。
- ▶ 多媒体信息上限为 100。如果您的多媒体信息超过 100 条，手机将弹出一则信息“已达最大多媒体信息储存数量”。

写彩信

有关多媒体信息服务的可用性，请联系网络运营商或服务提供商。

1. 从主菜单中，选择**信息**，然后按**确定**。
2. 选择**多媒体信息**，然后按**确定**。
3. 选择**编写信息**，然后按**确定**。

4. 要键入手机号码/电子邮件，请使用向上/下导航键选择**收件人**字段，然后按**编辑**。

备注

- ▶ 如果选择**添加号码**，请输入收件人的手机号码。
- ▶ 如果选择**添加电子邮件**，请输入收件人的电子邮件。

5. 添加收件人和内容后，按**确定**，然后按**完成**。此时将返回编辑屏幕。

备注

如果要在**抄送/密件抄送**中添加收件人，请重复步骤 4 和步骤 5。

6. 向下滚动并按中键插入主题，或按**编辑**。
7. 按**选项**，选择**完成**返回编辑屏幕。
8. 按**编辑**，向下滚动至**编辑内容**。

信息

详细

9. 按**选项**，选择**添加图像/添加音频/添加视频/添加附件**。随后，您将进入**我的文档**模式。
10. 从**我的文档**中选择文件，按**确定**。然后按**完成**。
11. 在编辑屏幕中确认发送信息，然后按**完成**。
12. 选择**仅限发送**以发送多媒体信息。

备注

- ▶ 要输入内容，您可以参考“输入方法”。
- ▶ 要使用图片信息功能，您的网络运营商或服务提供商必须提供支持。
- ▶ 跳转到“信息”功能，您可以在待机状态下按  向上导航键。
- ▶ 要键入内容，请参考第16页的“输入方法”。
- ▶ 您可以使用  键输入符号，使用  键切换输入方法，使用导航键移动光标。

当您选择**信息 > 多媒体信息 > 编写信息 > 编辑内容 > 选项**时，本手机提供以下选项。

- ▶ **完成**: 退出正在编辑页面，返回“编辑内容”页面。
- ▶ **输入方法**: 更改输入方法。
- ▶ **添加图像**: 向信息添加图像文件。
- ▶ **添加音频**: 向信息添加音频文件。
- ▶ **添加视频**: 向信息添加视频文件。
- ▶ **添加附件**: 向信息附加文件。
- ▶ **前一页添加**: 在旧的幻灯片前添加一个新幻灯片。
- ▶ **后一页添加**: 在旧的幻灯片后添加一个新幻灯片。
- ▶ **添加书签文本**: 向幻灯片添加书签。
- ▶ **添加新联系人**: 向信息添加联系人。
- ▶ **预览**: 预览您写的幻灯片。
- ▶ **幻灯片计时**: 设置幻灯片之间的时间。

在内容中添加文本后，您会看到更多选项，包括：

- ▶ **删除幻灯片**: 删除目标幻灯片。

- ▶ **上一张幻灯片:** 显示上一张幻灯片。
- ▶ **下一张幻灯片:** 显示下一张幻灯片。

发送彩信

发送彩信时，需要提供详细信息，如添加电子邮件或从电话簿列表中添加号码。

备注

- ▶ 要输入内容，请参阅“输入方法”。
- ▶ 要使用图片信息功能，您的网络运营商或服务提供商必须提供支持。

写完彩信按**完成**时，本手机提供以下选项。

- ▶ **只限发送:** 立即发送信息。
- ▶ **保存并发送:** 保存信息并立即发送。
- ▶ **保存至草稿:** 保存信息以便稍后发送。
- ▶ **发送选项:** 个性化发送选项，包括: 有效期、发送报告、读取和优先级。

- ▶ **退出:** 退出时，将提示您是否保存所写的信息。

收件箱

您的手机将保存“多媒体信息”菜单的“收件箱”文件夹中所收到的多媒体信息。

读取接收的多媒体信息

1. 从主菜单中，使用导航键选择信息，然后按**确定**。
2. 选择**多媒体信息**，然后按**确定**。
3. 选择**收件箱**，然后按**确定**。
4. 选择信息，按**选项**以查看多媒体信息。

当您选择**信息 > 多媒体信息 > 收件箱**时，本手机提供以下选项。

- ▶ **查看:** 立即查看多媒体信息。
- ▶ **回复:** 回复发件人。
- ▶ **以短信回复:** 通过短信回复发件人。
- ▶ **全部回复:** 回复所有号码。
- ▶ **转发:** 转发信息。

信息

详细

- ▶ **删除:** 删除选定的信息。
- ▶ **全部删除:** 删除所有信息。
- ▶ **属性:** 查看邮件列表。
- ▶ **使用详细信息:** 拨号或保存电话号码。

已发送

没有被发送的多媒体信息将被保存到“多媒体信息”菜单的“已发送”文件夹。

查看“已发送”的多媒体信息

1. 从主菜单中，选择**信息**，然后按**确定**。
2. 选择**多媒体信息**，然后按**确定**。
3. 选择**已发送**，然后按**确定**。
4. 选择**信息**，然后按**确定**查看。

当您选择**信息 > 多媒体信息 > 已发送**时，本手机提供以下选项。

- ▶ **查看:** 立即查看多媒体信息。
- ▶ **删除:** 删除选定的信息。
- ▶ **全部删除:** 删除所有信息。

- ▶ **属性:** 查看彩信属性。
- ▶ **使用详细信息:** 拨号或保存电话号码。

草稿箱

手机将多媒体信息保存在“多媒体信息”菜单下的“草稿箱”文件夹中。

读取未发出的多媒体信息

1. 从主菜单中，使用导航键选择**信息**，然后按**确定**。
2. 选择**多媒体信息**，然后按**确定**。
3. 选择**草稿箱**，然后选择**确定**。
4. 选择**信息**，然后按**确定**查看。

当您选择**信息 > 多媒体信息 > 草稿箱**时，本手机提供以下选项。

- ▶ **查看:** 立即查看多媒体信息。
- ▶ **发送:** 发送信息。
- ▶ **修改:** 编辑信息。
- ▶ **删除:** 删除选定的信息。
- ▶ **全部删除:** 删除所有信息。

- ▶ **属性:** 查看邮件列表。
- ▶ **使用详细信息:** 使用多媒体信息的详细信息。

模板

本手机允许您向多媒体信息添加保存的模板。

1. 从主菜单中，选择**信息**，然后按**确定**。
2. 选择**多媒体信息**，然后按**确定**。
3. 选择**模板**，然后按**确定**。
4. 选择**信息**，然后按**选项查看**。
5. 选择**编写信息**以编辑并发送多媒体信息。

备注

您可以查看模板内容，选择**查看选项**查看幻灯片；选择**属性**查看信息内容和大小。

信息设置

发送彩信之前，您需要完成**信息设置**。执行以下步骤以切换设置。

1. 从主菜单中，选择**信息**，然后按**确定**。
2. 选择**多媒体信息**，然后按**确定**。
3. 选择**信息设置**，然后按**确定**。
4. 选择**设置**，按**确定**开始设置。
5. 完成后，请按**返回**。

当您选择**信息 > 多媒体信息 > 信息设置**时，本手机提供以下选项。

▶ 创作:

您可以使用以下选项设置撰写格式:

- **创建模式:** 您可以选择以下选项: “可使用”或“受限制”。
- **调整图像大小:** 允许您选择以下选项: 关/160x120/320x240/640x480。
- **自动签名:** 允许您选择选项: “开”或“关”。

▶ 发送:

- **有效期:** 这是您的信息可在信息中心中保存的期限。您可以设置时间: 1 小时/6 小时/12 小时/1 天/1 周/最长时间。

信息

详细

- **发送报告:** 可以打开或关闭发送报告。
- **回报信息已被读取:** 阅读发送报告。
- **优先级:** 允许您选择以下选项: 普通/高/低。
- **幻灯片计时:** 设置幻灯片之间的时间。(1 – 60 秒)。
- **发送时间:** 设置发送时间 (立即/1 小时后/12 小时后/24 小时后)。
- ▶ **恢复:**
 - **主国网络:** 在以下选项中选择: 立即/受限制/已延时。
 - **漫游:** 在以下选项中选择: 为主国/已延时/受限制。
 - **回报信息已被读取:** 在以下选项中选择: 在要求下/发送/从不发送。
 - **允许发送报告:** 在开/关发送报告之间选择。
- ▶ **过滤器:**
 - **匿名:** 在以下选项中选择: 允许/拒绝。
 - **广告:** 在以下选项中选择: 允许/拒绝。
- ▶ **服务器设置文件:**

您可以通过特定网络或服务提供商接收和发送多媒体信息。
- ▶ **记忆体状态:**

您可以查看未被占用的手机存储器百分比, 以及 SIM 卡或手机存储器中尚可保存的信息数。

备注

要完成**信息**设置, 请与您的网络服务运营商联系。

聊天

菜单 5.3

您可以使用此功能与朋友聊天。
手机中有 2 个聊天室。
开始聊天之前, 您需要执行以下步骤:

1. 从主菜单中，选择**信息**，然后按**确定**。
2. 选择**聊天**，然后按**确定**。
3. 选择**聊天室 1**或**聊天室 2**，然后按**选项**。
4. 选择**聊天室信息**，然后按**确定**。
5. 按**编辑**，然后按“选项”创建昵称。
6. 按**完成**，然后选择**远程号码**。
7. 按**搜索**，从联系人列表选择一个联系人。
8. 然**确定**，然后按**是**。

开始聊天

1. 设置聊天室后 (请参阅第 46 页的**聊天**)，使用导航键从主菜单中选择**信息**，然后按**确定**。
2. 选择**聊天**，然后按**确定**。
3. 选择**选项 > 开始新聊天**，然后按**确定**。
4. 输入信息，然后按**选项**。
5. 选择**发送**，然后按**确定**。

6. 发送信息后，将激活聊天室。

7. 现在，您可以开始聊天了。

开始新聊天时，本手机提供以下选项。

- ▶ **发送**: 发送所写信息。
- ▶ **使用模板**: 在短信模板选项中插入模板。
- ▶ **插入联系人号码**: 插入电话簿中的联系人电话号码。
- ▶ **插入联系人姓名**: 插入电话簿中的联系人姓名。
- ▶ **输入方法**: 更改输入方法。

聊天过程中，本手机提供以下选项:

- ▶ **回复**: 回复收到的聊天信息。
- ▶ **使用号码**: 保存聊天对象的号码或其发送的号码。
- ▶ **清除聊天记录**: 清除聊天对话记录。
- ▶ **暂时离开**: 暂时离开聊天室。
- ▶ **退出**: 退出聊天室。
- ▶ **聊天室信息**: 显示聊天室信息。

信息

详细

备注

暂时离开聊天后，您可以“恢复”或“结束”聊天。

语音邮件服务器 菜单 5.4

本手机允许您跳转到语音信箱。(如果您的服务提供商支持)。语音邮件号码由您的服务提供商提供，并显示在手机中。在“语音邮件”子菜单中，您可以选择线路1或线路2，选项列表包括：

- ▶ **修改：**编辑语音信箱线路1的名称和号码。
- ▶ **连接至语音邮箱：**连接至语音邮箱。

在待机状态下，按住  直接进入语音信箱服务器。

备注

要使用此功能，您需要输入从服务提供商处获得的语音服务器号码。

广播信息

菜单 5.5

本手机允许您接收商业信息。您可以启用或禁用接收模式，并根据个人需要设定其它选项。

本手机提供以下选项：

- ▶ **接收模式：**您可以选择接收或不接收网络发送的广告信息。
- ▶ **信息列表：**您可以通过按**确定**读取信息或按**返回**退出。
- ▶ **语言：**您可以指定所需广播的语言。
- ▶ **频道设置：**您可以从频道列表中选择频道，或将希望接收其信息的频道添加到列表中。选择后，您可以编辑或删除信息。

我的文档 [菜单 6]

您可以查看和发送图片。此外，您还可以将此图片设为墙纸。

相册

菜单 6.1

显示图像和视频文件列表。

- ▶ **打开:** 打开保存图像和视频的相册/专辑。
 - ▶ **删除:** 删除文件。
 - ▶ **建立文件夹:** 您可以创建新的文件夹。
 - ▶ **重命名:** 您可以更改文件名。
 - ▶ **标记/取消标记:** 标记图像以取消所有选择、删除所选的、复制所选的或移动所选的。
 - ▶ **删除全部:** 删除列表中的所有文件。
 - ▶ **排序:** 按日期、类型或名称排列声音。
 - ▶ **列表视图/缩略图视图:** 允许您设置列表视图或缩略图视图类型。
 - ▶ **预览样式:** 提供两种不同的预览样式，2x2 和 3x3。
- 显示多媒体储存器中“我的媒体”/“照片”下的列表。
- ▶ **查看:** 您可以通过按**确定**键或选择**选项**菜单的**查看**菜单来查看 JPG 文件。
 - ▶ **播放:** 选择此功能时，将播放选定的视频文件。
 - ▶ **删除:** 删除文件。
 - ▶ **设定为:**
 - **墙纸:** 可将当前选定的图像水平设置为墙纸。
 - **图像编号:** 可将当前选定的图像设定为图片编号。
 - ▶ **发送方式**
 - **多媒体信息:** 通过多媒体信息将选定文件发送到其它设备。
 - **蓝牙:** 允许您通过蓝牙发送图像。
 - ▶ **文件**
 - **重命名:** 更改选定文件的文件名。您不能更改文件的扩展名。

我的文档

- **移动至文件夹**: 将选定文件移动至文件夹。
- **移动至手机/外部储存器**: 您可以将选定的文件移动至手机/外部储存器。
- **复制至手机/外部储存器**: 您可以将选定的文件复制至手机/外部储存器。
- **信息**: 显示文件信息。
- ▶ **通过蓝牙打印**: 大多数您以相机模式拍摄的照片以及通过 WAP 下载的图片都可以通过蓝牙传送到打印机。
- ▶ **建立文件夹**: 您可以创建新的文件夹。
- ▶ **标记/取消标记**: : 标记视频以取消所有选择、删除所选的、复制所选的 或 移动所选的。
- ▶ **删除全部**: 删除列表中的所有文件。
- ▶ **排序**: 按日期、类型或名称排列图像。
- ▶ **列表视图/缩略图视图**: 允许您设置列表视图或缩略图视图类型。

声音

菜单 6.2

- ▶ **打开**: 打开手机中保存的声音文件。
- ▶ **删除**: 删除文件。
- ▶ **建立文件夹**: 您可以创建新的文件夹。
- ▶ **重命名**: 您可以更改文件名。
- ▶ **标记/取消标记**: : 标记声音以取消所有选择、删除所选的、复制所选的 或 移动所选的。
- ▶ **删除全部**: 删除列表中的所有文件。
- ▶ **排序**: 按日期、类型或名称排列声音。
- ▶ **播放**: 您可以通过按 **确定** 键或选择 **选项** 菜单的 **播放** 菜单来播放 MP3 文件。
- ▶ **删除**: 删除文件。
- ▶ **设定为铃声**: 可将当前选定的声音设定为铃声。
- ▶ **发送方式**:
 - **多媒体信息**: 通过多媒体信息将选定文件发送到其它设备。

- **蓝牙**: 通过蓝牙将选定的文件发送到其它设备。

► **文件**:

- **重命名**: 更改选定文件的文件名。
- **移动至文件夹**: 将选定文件移动至文件夹。
- **移动至手机/外部储存器**: 您可以将选定的文件移动至手机/外部储存器。
- **复制至手机/外部储存器**: 您可以将选定的文件复制至手机/外部储存器。
- **信息**: 显示文件信息。

► **建立文件夹**: 您可以创建新的文件夹。

► **删除全部**: 删除列表中的所有文件。

► **排序**: 按日期、类型或名称排列声音。

其它

菜单 6.3

其它 文件夹用于保存无法储存在相册 和 声音 文件夹中的文件。

当您将文件从计算机传输到手机时，您可能发现文件保存在其它文件夹中。

任何其它类型的文件可以储存在此。此文件夹主要用于将文件从一台电脑传输到另一台电脑。

手机可以预览 JPG、GIF。

您可以将图像文件设置为墙纸，前提是该文件的大小不超过 30k。对于其它格式，请使用 PC Suite。

► **打开**: 打开手机中所有的其它文件。

► **删除**: 删除文件。

► **建立文件夹**: 您可以创建新的文件夹。

► **重命名**: 您可以更改文件名。

► **标记/取消标记**: 标记 其它 文件夹中的文件以 取消所有选择、删除所选的、复制所选的 或移动所选的。

► **删除全部**: 删除列表中的所有文件。

► **排序**: 按日期、类型或名称排列“其它”文件夹中的文件。

我的文档

- ▶ **查看或安装:** 按下**确定**键后，您可以查看或安装其它文件。
- ▶ **删除:** 删除文件。
- ▶ **发送方式:**
 - **多媒体信息:** 按下 **确定** 键后，您可以查看或安装其它文件。
 - **蓝牙:** 通过蓝牙将选定的文件发送到其它设备。
- ▶ **文件:**
 - **重命名:** 更改选定文件的文件名。
 - **移动至文件夹:** 将选定文件移动至文件夹。
 - **移动至手机/外部储存器:** 您可以将选定的文件移动至手机/外部储存器。
 - **复制至手机/外部储存器:** 您可以将选定的文件复制至手机/外部储存器。
 - **信息:** 显示文件信息。
- ▶ **建立文件夹:** 您可以创建新的文件夹。
- ▶ **标记/取消标记:** 标记 其它 文件夹中的文件以 **取消所有选择**、**删除所选的**、**复制所选的** 或 **移动所选的**。
- ▶ **删除全部:** 删除列表中的所有文件。
- ▶ **排序:** 按日期、类型或名称排列 其它 文件夹中的文件。

外部储存器

菜单 6.4

此菜单允许您查看储存卡中的**图像**、**声音**、**视频** 和 **其它** 文件夹。如果未插入外部储存器，**我的文档** 中将不显示 **外部储存器** 选项。

储存器状态

菜单 6.5

您可以检查手机、SIM 卡和外部储存卡 (如已插入) 的可用空间及储存器使用情况。

情景模式 [菜单 7]

您可以设置以下不同的情况模式以适应不同的环境条件。本手机提供 7 种情景模式。以下介绍有关 7 种情景模式的详细信息。

- ▶ **普通:**
标准情景模式是手机的默认设置。
- ▶ **会议:**
铃声音量设置为低，按键音关。
- ▶ **户外:**
铃声和按键音音量设置为大声。
- ▶ **仅振动:**
铃声和按键音音量设置为关，振动开。
- ▶ **耳机:**
适用于插入耳机的情景模式。
- ▶ **静音:**
铃声音量和振动器均设为关
- ▶ **蓝牙模式:**
连接蓝牙后的情景模式。

备注

设置情景模式后，手机屏幕上将显示指示符。

启动情景模式

按照以下步骤，激活情景模式菜单中的情景模式。

1. 从主菜单中，使用向上/向下导航键选择情景模式，然后按确定。
2. 选择所需的情景模式，按  中键或选项激活要使用的情景模式。

编辑情景模式

您可以根据需要自定义情景模式：普通/会议/户外/仅振动/耳机/静音/蓝牙。

1. 从主菜单中，选择情景模式，然后按确定。
2. 选择所需情景模式，然后按选项。
3. 选择自定义，然后按确定。
4. 选择进行自定义所需的选项。

当您选择情景模式 > 普通/户外/耳机/蓝牙 > 选项 > 自定义时，本手机提供以下选项。

情景模式

- ▶ **提示音设置:** 设置所需铃声。

备注

将铃声音量设为高时，请小心不要损伤听力。

- ▶ **音量:** 调节铃声和按键音的音量。
- ▶ **提示类型:** 选择不同的提示类型（响铃、仅振动、振动和响铃、振动后响铃、只哔一次）
- ▶ **智能来电:** 允许手机报出电话号码后再响铃。
- ▶ **铃声类型:** 在“一次”、“重复”和“渐强”间切换。
- ▶ **额外提示音:** 您可以将当前播放的 MP3 文件音乐设为铃声。
- ▶ **接听模式:** 按任意键以打开/关闭接听模式。

电话簿 [菜单 8]

您的电话簿保存在 SIM 卡或手机存储器中。您也可以选择同时保存在两个储存器中。

搜索

菜单 8.1

您可以搜索电话簿中保存的姓名和号码。

搜索号码和姓名

1. 从主菜单中，选择**电话簿**，然后按**确定**。
2. 选择**搜索**，然后按**确定**。
3. 键入联系人姓名的全名或第一个字符。联系人列表将自动跳到相应字符的第一个联系人。
4. 按  键选择要呼叫的联系人以进行呼叫。

或

1. 在待机状态下，按  右软键进入**电话簿**菜单。
2. 遵循以下步骤，与上面描述的步骤相同。

备注

在搜索模式下，按  键可更改输入方法。

您也可以按**选项**更改输入法或编辑选定的电话号码。

当您从主菜单选择**电话簿 > 搜索 > 选项**时，本手机提供以下选项。

- ▶ **查看**: 显示联系人信息。
- ▶ **修改**: 允许您编辑联系人的姓名和电话号码。
- ▶ **新信息**: 您可以将短信或彩信发送给选定联系人。
- ▶ **发送名片**: 允许您将名片发送给选定联系人。
- ▶ **删除**: 删除选定联系人的信息。
- ▶ **新联系人**: 向电话本添加新的联系人。
- ▶ **复制**: 将联系人信息复制到手机或 SIM 卡 (具体取决于电话号码的保存位置)。
- ▶ **移动**: 将选定联系人信息移动到手机或 SIM 卡。

电话簿

电话簿

- ▶ **输入方法:** 选择要使用的语言。
- ▶ **复制:** 将选定联系人的信息复制到相同储存介质上。

新联系人 菜单 8.2

您可以在**电话簿**菜单中创建新条目。本手机允许您保存 1000 个电话号码条目。

创建新条目

1. 从主菜单中，选择 **电话簿**，然后按**确定**。
2. 选择**新电话簿**，然后按**确定**。
3. 选择**储存位置**是 SIM 卡还是手机。
4. 选择**姓名**，然后按**编辑**。输入联系人姓名，然后按**选项**。
5. 选择**完成**，然后按**确定**。
6. 向下按导航键，然后按**确定**。随后，手机将显示 **正在保存** 信息。
7. 选择**是**，然后按 **□■** 中键。随后，手机屏幕上将显示 **完成**。

来电者群组 菜单 8.3

手机中有五个默认群组。您可以编辑每个群组名称，以及不同的提示音/图片/视频以及成员列表。使用来电者群组功能，您可以同时将一条信息发送给群组中的所有成员。

在来电者群组中创建条目

1. 从主菜单中，选择**电话簿**，然后按**确定**。
2. 选择**来电者群组**，然后按**确定**。
3. 选择一个群组，然后按**确定**。
4. 选择**成员列表**，然后按**确定**。
5. 按**选项 > 添加**，然后按**确定**。随后，您可以从**电话簿**中选择。

备注

本手机提供了 5 个来电者群组，包括：朋友、家人、重要人士、业务和其它。

本手机提供以下选项：

- ▶ **群组名:** 群组包括：朋友、家人、重要人士、业务和其它。

- ▶ **铃声**: 允许您为此特定群组设置铃声配置文件。
- ▶ **图片**: 允许您为该组设置图片。
- ▶ **视频**: 允许您为该组设置视频剪辑。
- ▶ **成员列表**: 允许您为指定群组添加成员。

快速拨号

菜单 8.4

如果您为保存在“电话簿”中的号码分配了快速拨号键（ 到 ），那么在待机模式下长按该键即可呼叫该电话号码。

打开快速拨号

1. 从主菜单中，选择**电话簿**，然后按**确定**。
2. 选择**快速拨号**，然后按**确定**。
3. 选择**启用快速拨号**，然后按**确定**。
4. 选择**开**，然后按**确定**打开快速拨号功能。随后，手机屏幕上将显示**完成**。

设置快速拨号号码

1. 从主菜单中，选择**电话簿**，然后按**确定**。
2. 选择**快速拨号**，然后按**确定**。
3. 选择**设置号码**，然后按**确定**。
4. 选择空号码，然后按**选项**。
5. 按**编辑**，然后按**确定**。
6. 选择您要将其设为快速拨号号码的条目，然后按**确定**。随后，手机屏幕上将显示**完成**。

我的名片

菜单 8.5

您可以编辑您的名片信息，并通过此选项与他人分享。从主菜单中选择**电话簿 > 搜索 > 选项 > 发送名片**来发送名片。

其它号码

菜单 8.6

您可以根据需要编辑**本机号码**、**服务拨号**和**紧急号码**。

备注

您的服务提供商可能在您的 SIM 卡中编入了一些特殊的电话号码。如果不支持，您无法对**服务号码**进行修改。

电话簿

目录

设置

菜单 8.7

本手机为您提供了多个设置选项，供您对手机进行个性化设置，包括：

1. **来电者图片**：您可以使用朋友的照片或其它图片作为其来电显示图片。
2. **来电者铃声**：您可以对电话簿列表中的特定人或来电者群组的来电铃声进行个性化设置。
3. **来电者视频**：您可以针对列表中的特定联系人使用特定视频剪辑。
4. **记忆体状态**：您可以查看未被占用的手机储存器百分比，以及 SIM 卡和手机储存器中尚可保存的姓名和号码条目数。
5. **首选储存位置**：您可以选择首选储存位置：手机、SIM 卡或手机和 SIM 卡。
6. **字段**：您可以自定义要显示在显示屏上的联系信息。

7. **电话列表过滤器**：您可以编辑您的名片信息，并通过此选项与他人共享。

备注

通过 www.lgmobile.com，您您可以获取电脑套件工具。使用电脑套件工具，您可以管理手机或 SIM 卡中储存的联系人列表。

工具 [菜单 9]

闹钟

菜单 9.1

此功能允许您对指定时间设置闹钟。即使关机，闹钟设置仍然有效。

1. 从主菜单中，选择**工具**，然后按**确定**。
2. 选择**闹钟**，然后按**确定**。
3. 选择闹钟，然后按**修改**。
4. 使用向左/向右导航键切换值，使用向上/向下导航键选择编辑屏幕中的选项。
5. 通过按  中键，按**完成**并选择**是**。
6. 选择所需铃声模式为一次/每天/天/每小时，然后按**确定**。

时间通知器

菜单 9.2

此功能将通知您当前时间。选择**工具** > **时间通知器**以启用或禁用时间通知器，然后按**确定**确认选择。启用此功能时，每小时都会给您报时间。

备注

语音时间通知器设置为 12 小时时间格式 (AM/PM)。

世界时钟

菜单 9.3

通过按向左/向右导航键，您即可选择城市。当十字架指示符指定某个城市时，将显示当地日期和时间。您也可以按**选项**，打开/关闭**其它城市启动夏令时**，然后选择**设定主城市**以将其保存为您的主城市。

计算器

菜单 9.4

计算器提供简单的计算器功能，如加、减、乘、除。

单位对换器

菜单 9.5

此功能帮助您换算重量和长度单位。

汇率对换器

菜单 9.6

此功能帮助您换算外币。在汇率对换器中，您可以通过输入汇率并输入数量将本地货币转换为外币。

健康管理

菜单 9.7

在**健康管理**选项下有两个功能：身体质量指数 (BMI) 和女性生理周期。

工具



身体质量指数 (BMI)

此功能根据您的身高和体重计算您的体形。

计算 BMI 值过程:

1. 从主菜单中，选择**工具**，然后按**确定**。
2. 选择**健康管理**，然后按**确定**。
3. 选择**身体质量指数**，然后按**确定**。
4. 按向左/向右导航键选择性别，按向上/向下导航键选择选项。
5. 使用数字键输入您的身高 (以厘米为单位) 和体重 (以公斤为单位)，然后按**确定**。随后，将计算并在手机屏幕上显示您的 BMI 值。

女性生理周期

此功能帮助您计算女性生理周期并提供以下信息:

- ▶ 前日期怀孕的可能性。
- ▶ 段时间可能是怀孕期。
- ▶ 下一次生理周期时间。

查看女性生理周期

1. 从主菜单中，选择**工具**，然后按**确定**。
2. 选择**健康管理**，然后按**确定**。
3. 选择**女性生理周期**，然后按**确定**。
4. 输入上一次生理期的起始日期。
5. 输入女性生理周期的平均长度，然后按**确定**。
6. 选择突出显示的日期，按**确定**显示怀孕期详情。

备注

此结果可能不适用于您的生理情况。仅供参考!

STK(视 SIM 卡情况而定)

菜单 9.8

除了手机中内置的功能外，您的服务提供商可能会通过 SIM 卡提供其它应用程序，如天气或股票信息。

设置 STK 服务

在工具菜单中，选择 STK，然后按确定链接服务。

备注

- ▶ 要使用 STK 服务，请先向您的服务提供商注册该服务。
- ▶ 访问这些服务可能需要发送短信，因此会产生相关费用。

工具

浏览器 [菜单 *]

连接

您的服务提供商支持以下所述的服务。如果您不能连接到任何这些服务，请联系您的服务提供商获得更多信息。

WAP

菜单 *.1

本手机支持 Web 浏览。使用电子邮件和其它互联网服务，您可以获得多项服务，如最新新闻、天气、体育及其它信息。这些服务由 WAP 服务提供商提供并维护。WAP 服务使用其 WAP 页面上的无线标记语言 (WML)。您无法在手机上查看标准互联网网页。

备注

- ▶ 要激活 WAP 服务，您需要联系您的服务提供商。
- ▶ 在禁用手机或使用手机可能引起干扰或危险的情况下，请不要开机。

主页

要通过待机模式访问浏览器，请转到 **菜单** 中的 WAP，然后按 **主页**。一旦建立连接，屏幕上即显示主页。主页内容视服务提供商而定。

退出浏览器

在浏览状态下，按  键退出浏览状态。

Google Search

您可以使用 Google Search 进行搜索。

书签

您可以使用此菜单保存 URL 地址以便快速访问喜爱的网站。

本手机还提供了以下选项。

- ▶ **转到:** 可以连接网站。
- ▶ **编辑:** 可以编辑 URL 地址。
- ▶ **发送:** 可以通过短信/彩信发送 URL 地址。
- ▶ **删除:** 删除选定书签。
- ▶ **全部删除:** 删除所有书签。
- ▶ **添加书签:** 将 URL 地址添加到书签列表。

近期浏览的页面

您可以查看最近访问过的页面。按 **转到** 可连接至选定页面。

输入地址

您可以输入 URL 地址，然后选择**完成**输入该地址。手机会连接您输入的 URL。输入地址后，下次您可以选择该 URL 并按**确定**以连接。

服务收件箱

本手机可以接收您的服务提供商发送的服务信息。服务信息对标题或内容进行通知，可能包含某 WAP 服务的地址。您可以通过服务提供商获得最新新闻或新的 WAP 设置。

收到的 WAP push 信息保存在服务收件箱中。您可以按**选项接受**或删除 Push 信息。

设置

GPRS (通用分组无线业务) 是一种通过手机发送和接收数据的技术。使用 GPRS 的应用程序包括 WAP 服务、彩信、短信和 GPRS 拨号 (如 Internet 和电子邮件)。您可以将手机设置为开机时自动注册 GPRS 网络。

启动 WAP

- ▶ 如果服务提供商已设定 WAP 设置，您可以立即使用 GPRS 或 GSM 数据。
- ▶ 如果您的服务提供商已指定 WAP 设置文件的访问方式，请选择一个设置文件，然后激活。
- ▶ 您可以手动设定 WAP 设置。随后，您需要联系您的网络运营商或服务提供商以获取正确的设置信息。

手动编辑服务设置

1. 从主菜单中，选择**浏览器**，然后按**确定**。
2. 选择**WAP**，然后按**确定**。
3. 选择**设置**，然后按**确定**。
4. 选择**修改设置文件**，然后按**确定**。
5. 选择一个设置文件，然后按**确定**。
6. 选择**编辑设置文件**，然后按**确定**。

浏览器

连接

7. 按**编辑**开始设置，然后按**选项**。
8. 选择**完成**，然后按**确定**。

编辑设置文件

您可以启动 WAP 设置: 在 WAP 设置文件模式下，选择启动设置文件，然后按**确定**。或者，您可以编辑设置文件。选项包括: 重命名、主页、数据帐户、连接、用户名和密码。如果需要更多信息，请联系您的网络服务提供商。

备注

在大多数情况下，您只需使用其中一个默认设置文件即可访问互联网。这些设置随运营商的不同而有所不同。请咨询您的运营商或服务提供商以获得正确设置，请谨慎操作。不正确的设置将会导致连接失败。

启动 WAP 设置

您可以启动 WAP 设置: 在 WAP 设置文件模式下，选择**启动设置文件**，然后按**确定**。

浏览器选项

您可以设置浏览器的超时值。(如果在设置的时间内无法连接，手机将停止浏览器)。您也可以启用/禁用图片，这将影响浏览速度。

服务信息设置

您可以选择接收或不接收您的服务提供商发送的服务信息，这些信息将保存在服务收件箱中。

清除缓存

您访问过的信息或数据将保存在手机的缓存中。缓存是一种文件缓冲存储器，用于暂时保存数据。通过选择此选项，您可以清除历史记录。

清除 Cookie

出于隐私和保密设置考虑 (在手机丢失或被盗情况下)，请清除可能包含敏感信息的所有 cookie。

受信任的证书

在浏览并管理“可信任列表”时，显示受信任的网络证书。

数据帐户

菜单 *.2

默认数据帐户基于生产此手机时主要运营商所提供的帐户。

您可以通过 **GSM** 或 **GPRS** 访问 WAP。

- ▶ 要获取模拟或ISDN 号码，您需要联系您的运营商。
- ▶ 要获取GPRS 接入点，您需要联系您的运营商。

GSM 数据

1. 从主菜单中，使用导航键选择**浏览器**，然后按**确定**。
2. 选择**数据帐户**，然后按**确定**。
3. 选择 **GSM 数据**，然后按**确定**。
4. 按**编辑**更改数据帐户设置: 帐户名称/帐号/用户名/密码/线路类型/速度和DNS。

GPRS

1. 从主菜单中，选择**浏览器**，然后按**确定**。
2. 选择**数据帐户**，然后按**确定**。
3. 选择 **GPRS**，然后按**确定**。
4. 按**编辑**更改数据帐户设置: 帐户名称/APN/用户名/密码/授权类型。

连接

连接 [菜单 0]

连接

连接 子菜单中的功能允许您建立手机与其它设备之间的连接。

蓝牙

菜单 0.1

本手机设计与蓝牙技术 V1.2 兼容。蓝牙技术允许电子设备之间的无线连接。蓝牙连接可用于收听立体声音乐、发送图像、视频、文本和电子名片。

开始使用蓝牙技术

在操作前需要先配置蓝牙连接。设置完成后，状态栏中将显示以下蓝牙图标。

- : 已启动且连接蓝牙。
- : 对其它设备不可见。

配对蓝牙音频装置

1. 从主菜单中，选择**连接**，然后按**确定**。
2. 选择**蓝牙**，然后按**确定**。

3. 选择“电源”，按**确定**先将手机和您要连接的装置的蓝牙连接设为开或关。
4. 按**搜寻音频装置**。手机将自动搜索并配对装置。
5. 按**配对**将您的手机与耳机配对。
6. 将耳机添加到受信任的列表，然后按**是**连接耳机。

备注

- ▶ 使用耳机之前，请确保您的设备已完全充电。
- ▶ 手机连接设备时，将显示一则弹出通知。
- ▶ 一旦添加到受信任的列表，耳机将显示在**我的装置**列表中。(一旦添加到**我的装置**，即可轻松返回初始状态)。
- ▶ 可在**使用中的装置**中管理所有使用中的装置，可通过按**切断连接**来断开连接。

配对蓝牙装置

1. 从主菜单中，使用导航键选择**连接**，然后按**确定**。
2. 选择**蓝牙**，然后按**确定**。

3. 选择**我的装置**，然后按**选项**。
4. 选择**搜寻新装置**。(手机开始搜索蓝牙装置。)

连接蓝牙装置

1. 从主菜单中，选择**连接**，然后按**确定**。
2. 选择**蓝牙**，然后按**确定**。
3. 选择**我的装置**，然后选择要连接的蓝牙装置。
4. 按**选项**，然后选择**连接**。
5. 连接蓝牙装置后，手机将询问您要连接哪个网络设定 (具体取决于蓝牙装置支持的网络设定数)。

编辑装置列表中的装置

当您突出显示**我的装置**中的某个装置并按**选项**时，本手机提供以下选项。

- ▶ **连接**: 连接装置支持的蓝牙技术。

- ▶ **重命名**: 重命名目标装置。

- ▶ **删除**: 从受信任的列表中删除选定项目。

- ▶ **全部删除**: 从受信任的列表中删除所有项目。

- ▶ **服务列表**: 访问您已添加到受信任列表中的装置支持的网络设定。

将手机用作调制解调器

本手机可用作调制解调器以拨号网络。此功能仅适用于支持蓝牙技术的电脑。请向您的服务提供商请求详细信息。

使用蓝牙连接发送数据

1. 启动蓝牙，然后选择要发送的对象。
2. 按**选项**，然后选择**发送方式**。
3. 选择**至蓝牙**。(手机将搜索装置)。
4. 选择所需装置，然后发送。

蓝牙

连接

连接

使用蓝牙连接接收数据

通过蓝牙接收到数据时，会出现一则弹出通知。如果要接受传输，请按**确定**。

您可以通过**连接 > 蓝牙 > 设置 > FTP 设置 > 共享文件夹**更改当前文件夹的位置，重新分配文件夹，以及在**连接 > 蓝牙 > 设置 > FTP 设置 > 访问权限**中定义该文件夹的访问权限，可选择**完全控制**或**只读**。

从电脑接收数据

本手机允许您浏览以及从电脑传输文件。您的电脑必须支持蓝牙技术。（请查看电脑手册）。

1. 从主菜单中，使用导航键选择**连接**，然后按**确定**。
2. 选择**蓝牙**，然后按**确定**。
3. 同时启动手机和电脑上的蓝牙。通过按**确定**选择**搜寻装置**。
4. 如果电脑配置正确，**我的装置**中将显示“已连接电脑”。
5. 按**选项**，然后选择**文件传输服务**以进行连接。

6. 现在，可在双方装置上管理数据。

收听立体声音乐

1. 从主菜单中，选择**连接**，然后按**确定**。
2. 选择**蓝牙**，然后按**确定**。
3. 选择**我的装置**，然后突出显示要连接的装置。
4. 按**选项**选择**服务列表**，然后选择**耳机服务**。
5. 您将看到耳机支持的情景模式列表。
6. 选择**先进音频播放服务**，然后按左软键连接。

备注

必须首先配对蓝牙耳机。然后在**我的装置**中选择蓝牙耳机即可。

设置蓝牙技术

设置列表包括：

- **可搜寻性**：在其它装置进行搜索时，您可以将您的手机设为可见或不可见。

- ▶ **更改装置名称:** 更改您的装置显示在其它装置上的名称。
- ▶ **认证:** 允许其它装置连接您的手机前，需要认证。
- ▶ **音频路径:** 将音频路径切换为手机或耳机。
- ▶ **文件传输服务设置:** 自定义手机的共享文件夹及访问权限。

备注

使手机保持不可见模式，仅连接您信任的设备，这是避免遭受恶意软件攻击的最安全方式。

关于

您可以在此处找到自己的设备名称、BD 地址和支持的设备信息。本手机支持以下蓝牙服务: HSP (免提)、HFP (免提)、SPP (串行窗口)、DUN (拨号网络)、OPP、FTP (文件传输服务)、A2DP (先进音频播放服务) 及 AVRCP。

网络

菜单 0.2

网络

首选网络

如果将模式设为 **自动** 将使用**首选网络**。首选网络列表中的位置序号显示了搜索的优先级。此时将显示服务提供商的网络。如果提供商提供了多个网络以供选择，您可以选择 GSM/GPRS 网络。(出国时，请记住要遵守国际漫游协议)

本手机提供以下选项:

- ▶ **从列表添加:** 可从全球 300 多个网络中选择。
- ▶ **新建:** 通过输入 MCC/MNC 信息并调整优先级设置以创建新的网络列表。
- ▶ **更改优先级:** 更改首选网络列表中的优先级设置。
- ▶ **删除:** 删除所选项。

GPRS 连接

手机可将 GPRS 连接状态设为**始终/需要时**。

设置 [菜单 #]



时间和日期

菜单 #.1

此功能允许您设置本地城市、查看并更改手机的时间和日期设置。您也可以选择自动更新日期和时间。

设定主城市

1. 从主菜单中，选择**设置**，然后按**确定**。
2. 选择**时间和日期**，然后按**确定**。
3. 选择**设定主城市**，然后按**确定**。此时将显示所有主要城市。
4. 按向上/向下导航键选择主城市，或按主城市的第一个字符以快速搜索。
5. 按**确定**。

设置时间和日期

1. 从主菜单中，选择**设置**，然后按**确定**。
2. 选择**时间和日期**，然后按**确定**。
3. 按**时间设置**，然后按**确定**。

4. 按数字键编辑时间和日期，使用导航键打开/关闭夏令时 – 左/右。
5. 按**确定**。(此时屏幕上显示**完成**)。

设定时间和日期

1. 从主菜单中，选择**设置**，然后按**确定**。
2. 选择**时间和日期**，然后按**确定**。
3. 按**设定格式**，然后按**确定**。
4. 编辑**时间格式**或**日期格式**: 按向上/向下导航键选择值，按向左/向右导航键选择选项。
5. 按**确定**。(此时屏幕上显示**完成**)。

设定自动更新

如果启用，手机将根据时区自动更新时间和日期。

1. 从主菜单中，选择**设置**，然后按**确定**。

2. 选择**时间和日期**，然后按**确定**。
3. 按**自动更新**，然后按**确定**。
4. 选择**开或关**，然后按**确定**。

备注

自动更新不会更改闹钟或日历备注，可能导致某些闹钟过期。

显示

菜单 #.2

此功能允许您通过以下选项，个性化显示设置：

▶ 墙纸：更改待机屏幕墙纸

1. 从主菜单中，选择**设置**，然后按**确定**。
2. 选择**显示**，然后按**确定**。
3. 选择**墙纸**，然后按**确定**。
4. 选择**系统或用户定义**，然后按**确定**。
5. 选择所需墙纸，然后按**查看**。
6. 按**确定**选择用作墙纸，选择**返回**选择其它墙纸。

▶ 屏保：禁用或选择屏保

1. 您可以禁用屏保，也可以定义屏保开始时间。（5 秒至 1 分钟）
2. 要选择屏保，请选择**系统或用户定义**。

▶ 开/关机显示：本手机允许您通过系统、**我的文档** 设置开机/关机动画，或禁用动画。

▶ 主菜单样式：可以选择主菜单样式。

▶ 背景色：可以更改背景色。

▶ 问候语：可以编辑开机时手机显示的欢迎辞。

▶ 背景灯计时器：调节 LCD 亮度及熄灭计时器。

▶ 亮度：调节 LCD 亮度。

▶ 灯光：启用/禁用顶部 LED 灯光效果。KM330 可针对来电、收到信息、未接来电、闹钟、播放音乐或按相机快门时设置不同灯光效果。

显示

设置

设置

- ▶ **显示日期和时间:** 在待机屏幕上显示或隐藏时间和日期。
- ▶ **显示主屏幕快捷键:** 启用/禁用待机屏幕上的 **跳转** 快捷键。
- ▶ **显示广播信息:** 在待机屏幕上显示广播信息
- ▶ **显示通话信息:** 在待机屏幕上显示通话信息
- ▶ **显示本机号码:** 在待机屏幕上显示或隐藏您的号码。
- ▶ **显示运营商名称:** 在待机屏幕上显示或隐藏您的名称。

手机

菜单 #.3

定时开机/关机

此功能允许您为手机设定待机时间。

1. 从主菜单中，选择**设置**，然后按**确定**。
2. 选择**手机**，然后按**确定**。
3. 选择 **定时开机/关机**，然后按**确定**。
4. 突出显示默认时间，然后按**编辑**。

5. 确定是否启用状态、选择**开或关**及指定时间，然后按**确定**。(此时屏幕上显示 **完成**)。

语言

设置语言

本手机支持多种语言。

1. 从主菜单中，选择 **设置**，然后按**确定**。
2. 选择**手机**，然后按**确定**。
3. 选择**语言**，然后按**确定**。
4. 选择所需语言，然后按**确定**。(此时屏幕上显示 **完成**)。

航行模式

如果您在飞机上或在阻止了无线网络的处所，此功能允许您使用不需使用无线网络的电话功能。

- ▶ **普通模式:** GSM/GPRS 网络可用。您可以拨打电话。
- ▶ **航行模式:** GSM/GPRS 禁用。您不可以拨打电话。

- ▶ **开机时询问:** 开机时，您必须选择标准模式或航行模式。

呼叫

菜单 #.4

来电者显示

拨打电话时，通过选择**由网络设定**、**隐藏 ID**或**发送 ID**，您可以决定您的身份显示方式。

呼叫等待

在当前通话状态下，允许通知其它呼叫方的一种网络服务。

1. 从主菜单中，选择**设置**，然后按**确定**。
2. 选择**呼叫**，然后按**确定**。
3. 选择**呼叫等待**，然后按**确定**。
4. 选择**启动**、**停用**或**查询状**，然后按**确定**。
5. 选择**查询状态**，您可以查看目前该服务为启动还是停用状态。

呼叫转移

您可以对通话条件进行设置，以决定哪些来电需要转移到其它号码。

设置呼叫转移

1. 从主菜单中，选择**设置**，然后按**确定**。
2. 选择**呼叫**，然后按**确定**。
3. 选择**呼叫转移**，然后按**确定**。
4. 选择一个项目，然后按**确定**。
5. 选择**启动**、**停用**或**查询状**，然后按**确定**。
6. 选择**至新号码**或**至语音邮件**，然后按**确定**。（此时屏幕上显示“完成”）。
7. 输入您要转移至的号码，然后按**确定**。

本手机提供以下转移选项:

- ▶ **转移所有语音来电:** 转接所有语音来电。
- ▶ **无网络或关机时转移:** 当您不在提供商服务范围内时转接来电。

83

设置

设置

- ▶ **无人接听时转移**: 无人接听电话时转接来电。
- ▶ **无法接听时转移**: 正在接听其它电话时转接来电。
- ▶ **转移所有数据来电**: 转接所有数据来电。
- ▶ **取消所有转移**: 取消上述设置。

呼叫阻截

允许您限制手机上的来电和拨出电话的一项网络服务。此功能需要密码。

- ▶ **拨电**: 阻截所有电话。
- ▶ **来电**: 漫游时阻截所有电话。
- ▶ **全部取消**: 取消阻截设置（需要密码）
- ▶ **更改阻截密码**: 可以在此编辑阻截密码。联系您的提供商以获取默认密码。此菜单允许您更改呼叫阻截密码。

备注

无论选择哪条线路，两条线路均可用于接听来电，如果您没有订阅此类服务并将手机设为“线路 2”，则无法拨打电话。

转换线路

此功能允许您选择**线路1** 或 **线路2** 来切换线路。

呼叫提醒

使用此功能，您可以设置呼叫时间提醒。

1. 从主菜单中，选择**设置**，然后按**确定**。
2. 选择**呼叫**，然后按**确定**。
3. 选择**呼叫提醒**，然后按**确定**。
4. 按**确定**。选择一个项目。
5. 按**确定**确认。（此时屏幕上显示“完成”）。

本手机提供以下时间提示选项:

- 关
- 一次
- 周期

备注

最短周期为 30 秒。

通话时间显示

此功能允许您启用/禁用通话时间显示。

自动重拨

此功能允许您设置自动重拨。选择**开**，那么您的手机将会在呼叫尝试失败后重新尝试连接 (最多 10次)。

封闭用户群组

此功能允许您设置受限通话群组。仅允许拨打及接听来自特定群组中联系人的电话。

保安设置

菜单 #.5



SIM 卡锁

此功能允许您使用特定 PIN 码锁定 SIM 卡。此功能设计用来在您的手机丢失时，他人无法使用您的 SIM 卡。

输入 PIN 码，您可以打开/关闭 SIM 卡锁。

手机锁

打开/关闭手机锁。启用手机锁需要密码。(默认为 0000)。

自动键盘锁

此功能允许您自动锁定手机键盘，以避免意外按键。

遵循以下步骤设置此功能。

- ▶ 从主菜单中，选择**设置**，然后按**确定**。
- ▶ 选择**保安设置**，然后按**确定**。
- ▶ 选择**自动键盘锁**，然后按**确定**。

设置

设置

- ▶ 使用导航键选择所需选项，然后按**确定**。

固定拨号

如果 SIM 卡支持此功能，您可以切换受限通话设置。

受阻截拨号

要限制通话，您可以打开或关闭此模式。但是，您首先需要查看 SIM 卡是否支持此功能。

防盗手机追踪器

手机防盗跟踪器 (ATMT) 允许您跟踪丢失的手机。如果有人未经您的许可使用您的手机，跟踪服务就会启动。在未授权使用手机的人不知道的情况下，手机会向您设置的默认电话号码发送文本信息以通知您。您可以始终激活 ATMT，并配置个人设置。

激活此功能:

1. 从主菜单中，选择**设置 > 保安**

设置 > 手机追踪器，然后按**确定**。

2. 选择**手机追踪设置**，然后按**确定**。
3. 选择**开或关**，然后按**确定**。
4. 输入 ATMT 码启用或禁用此功能。

备注

默认 ATMT 码为“0000”。配置 ATMT 设置之前，您需要输入密码。

更改 ATMT 码:

1. 从主菜单中，选择**设置 > 保安**
设置 > 手机追踪器，然后按**确定**。
2. 选择**更改追踪码**，然后按**确定**。
3. 输入旧的 ATMT 码，然后按**确定**。
4. 输入新的 ATMT 码，然后按**确定**。
5. 再次输入新的 ATMT 码，然后按**确定**。

配置 ATMT 设置:

1. 从主菜单中, 选择**设置 > 保安设置 > 手机追踪器**, 然后按**确定**。
2. 选择 **追踪使用的号码**, 然后按**确定**。
3. 按**编辑**。
4. 输入 ATMT 码, 然后按**确定**。
5. 按**确定**, 然后按**是**保存设置。

更改密码

- ▶ **PIN:** 此功能允许您更改 PIN码。
- ▶ **PIN2:** 此功能允许您更改 PIN2码。
- ▶ **手机锁:** 此功能允许您更改手机锁密码。

恢复工厂设置

菜单 #.6

此功能允许您将整个手机恢复为其出厂设置。(受密码保护。)

85
四

故障排除

故障排除

问题	可能的解决方案
手机无法打开	请取出电池，重新插入。然后，按  开机。
电池电量空	为电池充电。查看显示屏上的充电指示器。
电池无法正确充电或手机有时会自动关机	使用干净柔软的布擦拭手机和电池充电触点。
电池的使用时间缩短	如果电池使用时间缩短，可能是由于使用环境、通话音量过高或信号微弱等因素造成。
充电错误 – 温度超出范围	确保外部环境温度适当，稍等片刻，然后重新充电。
充电错误 – 充电器错误	请仅使用正品 LG 配件。
充电错误 – 电池故障	替换电池。
充电错误 – 充电时不显示电池图标	电池为空或长时间未使用。可能需要一段时间，屏幕上才会显示电池图标。
忘记手机密码	默认手机码为“0000”。
输入 PUK 码	PIN 码连续三次输入不正确，话机已锁。请输入服务提供商提供的 PUK 码。
无网络	您所在区域可能信号较弱。请移到其它区域并重试。您正在尝试访问服务提供商未订阅的选项。有关详情，请与服务提供商联系。
您已输入号码却没有拨号	请确保您已按  。 请确保您访问的是正确的网络服务。请确保您未设置已拨电话限制选项。请确保您已输入区号。
您的联系人无法接通您的电话	请确保手机已开机。按  超过一秒钟。请确保您正在访问网络服务。请确保您未设置呼叫阻截选项。
您的联系人无法听到您的声音	请确保您已关闭扬声器。请确保您将手机放在嘴边较近位置。麦克风位于手机底部。
通话声音质量较差	查看显示屏上的信号指示符  。栏数表示信号强度。如果您位于某大楼内，请将手机轻轻移至窗户旁边。

问题	可能的解决方案
当使用电话簿条目拨打电话时，未拨出任何号码。	使用电话簿/搜索功能确保号码储存正确。如有必要，重新保存号码。
无法使用 Internet/WAP	您的订阅未包括数据权限。您需要联系您的服务提供商才能使用此服务。
无法使用手机中的彩信/图片信息	您的订阅未包括数据权限。您需要联系您的服务提供商才能使用此服务。
如果以上指南无法帮助您解决问题	请记住手机型号，然后对问题进行简单说明。 请联系您的手机经销商或 LG 服务中心以获得帮助。

紧急呼叫

源
头
目
录

重要:

本手机和其它无线手机一样，使用无线电信号、无线和有线网络操作，同时采用了用户编程功能。因此，不保证在任何条件下均可连接。请勿仅仅依靠任何无线手机进行必要通信（如，医疗紧急情况）。


紧急呼叫功能并不适用于所有无线电话网络，或者，在使用某些特定网络服务和（或）手机功能时不可用。请向当地服务提供商核准。

配件

有多种配件适用于您的手机。您可以根据个人的通信要求选择这些配件。


配件

标准电池

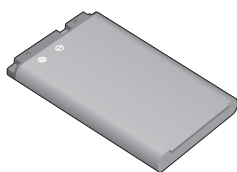

数据线

可使用其连接手机与 PC，以进行两者间的数据交换。

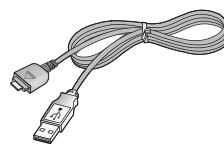

耳机

用于免提操作。




备注

- ▶ 务必使用正品LG 配件。否则可能导致保修失效。
- ▶ 在不同地区提供的配件可能不同;如需要进一步查询有关情况, 请与我们的地区服务公司或代理联系。

旅行充电器

此充电器可用于为手机电池充电。

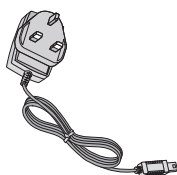

技术数据

技术数据

标准

产品名称 : KM330

系统 : GSM 900 / DCS 1800 / PCS 1900

外部环境

最高温度 : +55℃ (放电中)
+45℃ (充电中)

最低温度 : -10℃

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri Band Terminal Equipment

Model Name

KM330

Trade Name

LG

C E 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v1.2.1
EN 60950-1 : 2001
EN 50360/EN 50361 : 2001
EN 301 511 V9.0.2
EN 300 328 V1.7.1

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, Fax : +31 - 36 - 547 - 8794
e-mail : jacob @ lge.com

Name

Issued Date

Seung Hyoun, Ji / Director

17. November. 2008

Signature of representative

备忘录

备忘录

备忘录

English

KM330 User Manual

Some of contents in this manual may differ from your phone depending on the software of the phone or your service provider.



Table of contents

General information	4	Call waiting	19
Battery care	4	Making a conference call	19
Care and maintenance	5	Tips for call options	19
Important safety information	6	Games & Apps	21
Access codes	6	Applications	21
Radio frequency energy	6	Settings	23
Specific Absorption Rate (SAR) information	7	Call History	24
Electronic devices	7	All calls	24
Pacemaker	8	Missed Calls	25
Hearing aids	8	Dialled calls	25
Aircraft	8	Received Calls	25
Potentially explosive atmospheres	8	Delete call log	25
Driving	9	Call Duration	26
Disposal of your old appliance	9	Call Cost	26
Your phone	10	Text Message Counter	26
Getting Started	12	Data information	27
Installing the SIM card and the battery	12	Organizer	28
Charging the battery	13	Calendar	28
Switching the phone on and off	13	To do	29
Unlocking the keypad	13	Multimedia	30
Standby Mode	14	Camera	30
Using the Menu	15	Video Recorder	32
Input method	16	MP3 player	32
Call functions	18	Voice Recorder	34
Making a call	18	Melody composer	35
Answering or rejecting an incoming call	19	FM radio	36
		Schedule FM record	37

Messaging	38	Tools	64
Text Message (SMS)	38	Alarm	64
Multimedia Message (MMS)	43	Time Teller	64
Chat	50	World clock	64
Voice Mail Server	51	Calculator	64
Broadcast Message	52	Unit Converter	64
My Stuff	53	Currency converter	64
Album	53	Health	65
Sounds	54	STK (SIM dependent)	66
Others	55	Browser	67
External memory	57	WAP	67
Memory status	57	Data account	70
Profiles	58	Connectivity	71
General	58	Bluetooth	71
Meeting	58	Network	75
Outdoor	58	Settings	76
Vibrate only	58	Time & Date	76
Headset	58	Display	77
Silent	58	Phone	78
Bluetooth	58	Call	79
Contacts	60	Security	81
Search	60	Restore factory settings	83
New contact	61	Troubleshooting	84
Caller group	61	Emergency calls	86
Speed dial	62	Accessories	87
My vCard	62	Technical data	88
Extra Number	63		
Settings	63		

General information

Battery care

Your phone is powered by a rechargeable battery.

- ▶ The battery can be charged and discharged hundreds of times but it will eventually wear out. When the operating time (talk and standby) is noticeably shorter than normal, you should buy a new battery at the time.
- ▶ Unplug the travel charger when not in use, and don't leave the battery connected to a travel charger for longer than a week, since overcharging may shorten its lifetime.
- ▶ Overcharging may shorten its lifetime. If left unused a fully charged battery will discharge itself over time.
- ▶ Never store or charge battery in extreme hot or cold temperature, since extreme temperature can shorten the life of your mobile phone and damage battery.
- ▶ Use only the charger and batteries that are approved for use or recommended by the manufacturer. Use any unqualified charger or batteries may cause damages to your mobile phone.
- ▶ Use the battery only for its intended purpose.
- ▶ Do not leave the battery inside of your car at an extreme weather conditions, since extreme temperature might cause damage to your battery.
- ▶ Do not short-circuit the battery. Short-circuiting the terminals may damage the battery or the connecting object.
- ▶ Dispose the used batteries according to local regulations or Manufactures instructions. Do not dispose of batteries in a fire.
- ▶ Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

Care and maintenance

Your mobile phone is a highly sophisticated electronic device. Please read this information before using your mobile phone. If any device is not working properly, take it to the nearest authorized service center.

Product Care

- ▶ Keep your mobile phone and all its parts out of young children's reach.
- ▶ Keep your mobile phone dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits.
- ▶ Avoid exposing your mobile phone to extreme hot or cold temperatures.
- ▶ Avoid placing your mobile phone close to lit cigarettes, naked flames or any heat source.
- ▶ Do not attempt to disassemble it. Only qualified personnel may install or repair your mobile phone.
- ▶ Do not drop, knock or shake your mobile phone. Rough handling can break internal circuit boards.
- ▶ Do not paint your mobile phone. Paint could obstruct the earphone, microphone or any moveable parts and prevent proper operation.
- ▶ Treat your mobile phone with care and keep it in a clean and dust free place.
- ▶ Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a light burn. Please contact the nearest authorized service center to replace the damaged antenna.
- ▶ Use chargers indoors.
- ▶ Your mobile may have internal and external antennas. As with any radio transmitting device, avoid touching the antenna area unnecessarily while the antenna is transmitting or receiving. Contact with such an antenna affects the communication quality and may cause your mobile to operate at a higher power level than proper operation needed and may reduce the battery life.

Important safety information

Access codes

PIN code

The Personal Identification Number (PIN code) protects your SIM card against unauthorized use. Your SIM card usually supplies the PIN code. The password can be obtained from your service provider. If the incorrect PIN code occurred three times in succession, you may need to key in PUK code.

PIN2 code

The PIN2 code may be supplied with the SIM card. Some functions will require PIN2 support, such as Set tariff. The password can be obtained from your service provider.

PUK code

The Personal Unlocking Key (PUK code) is required to change a blocked PIN code. The PUK code is required to change a blocked PIN2 code. The password can be obtained from your service provider. If you key in an incorrect PIN2 code three times in succession, you may need to key in the PUK2 code.

If incorrect PUK code occurred for ten times in succession, then SIM card cannot be used anymore. You might need to contact your service provider for a new card.

Phone code

Phone code protects the phone against unauthorized use. It is not enabled when you buy the phone. You can change the phone code (0000) to any four to eight-digit personal codes.

Radio frequency energy

Your mobile phone is a radio transmitter and receiver. When the phone is turned on, it receives and transmits radio frequency (RF) energy. Depending on the type of mobile phone you possess, it operates on different frequency ranges and employs commonly used modulation techniques. The system handles your call when you are using your phone and it also controls the power level at which your phone transmits.

Specific Absorption Rate (SAR) information

Your phone has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific organizations through periodic and thorough evaluation of scientific studies. These guidelines include safety margins designed to assure the safety of all persons, regardless of age and health.

- ▶ The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted by using standardized method with the phone transmitting at its highest certified power level in all used frequency bands.
- ▶ While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

- ▶ The SAR limit recommended by the international Commission on Non-Ionizing Radiation Protection (ICNIRP), which is 2W/kg averaged over ten (10) grams of tissue.
- ▶ The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.850 W/kg (10g) and when worn on the body is 1.380 W/kg (10g).

SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over one (1) gram of tissue.

Electronic devices

Most modern electronic equipment is shielded from RF energy. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone, therefore:

- ▶ Do not use your mobile phone near medical equipment without requesting permission.

Important safety information

Pacemaker

Mobile phones may affect the operation of some implanted cardiac pacemakers and other medically implanted equipments. Pacemaker manufacturers recommend that a minimum separation of 20 cm (6 inches) should be maintained between a hand-held wireless phone and a pacemaker to avoid potential interference with the pacemaker.

These recommendations are consistent with independent research by the Wireless Technology Research Association.

Persons with pacemakers:

- ▶ Should always keep the phone more than 20 cm (6 inches) from their pacemakers when the phone is switched on.
- ▶ Should not carry the phone in a breast pocket.
- ▶ Should use the ear opposite to the pacemaker to minimize the potential for interference.
- ▶ If you have any reason to suspect that interference is taking place, switch off your phone immediately.

Hearing aids

Some hearing aids might be disturbed by mobile phones. In the event of such disturbance, you may want to consult your service provider, or call the customer service line to discuss alternatives.

Aircraft

- ▶ Turn off your mobile phone before boarding any aircraft.
- ▶ Do not use it on the ground without crew permission.

To prevent interference with communication systems, you must not use your mobile phone while the plane is in the air.

Potentially explosive atmospheres

Switch off your phone when in any area with a potentially explosive atmosphere and obey all signs and instructions. It is rare, but your phone or its accessories could generate sparks. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Areas with a potentially explosive atmosphere are often,

but not always, clearly marked. They include fuelling areas, such as petrol station, below deck on boats, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Driving

Check the laws and regulations on the use of mobile phones in the areas where you drive. If you are going to use your phone while driving, please:

- ▶ Give full attention to driving.
- ▶ Use the “handsfree” setting. (Required by law in many countries).
- ▶ Pull off the road and park before making or answering a call if driving conditions so require.

RF energy may affect some electronic systems in motor vehicles such as the car stereo, safety equipment etc. In addition, some vehicle manufacturers do not allow use of mobile phones, unless the installation is supported

by a handsfree kit with an external antenna in their vehicles. Check with your vehicle manufacturer’s representative to be sure that your mobile phone will not affect the electronic systems in your vehicle.

Disposal of your old appliance


1. When this crossed-out wheeled bin symbol is attached to a product; it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.

For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.


Your phone

Your phone

Front View

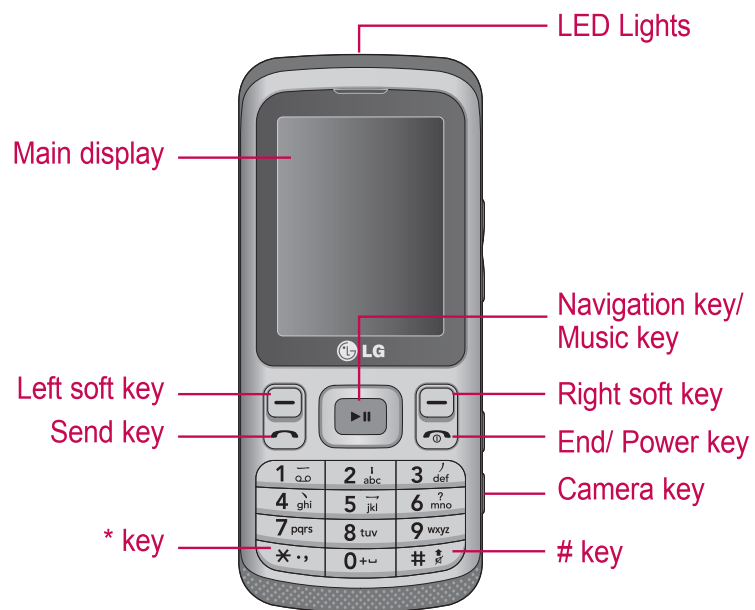

Left/Right Side View

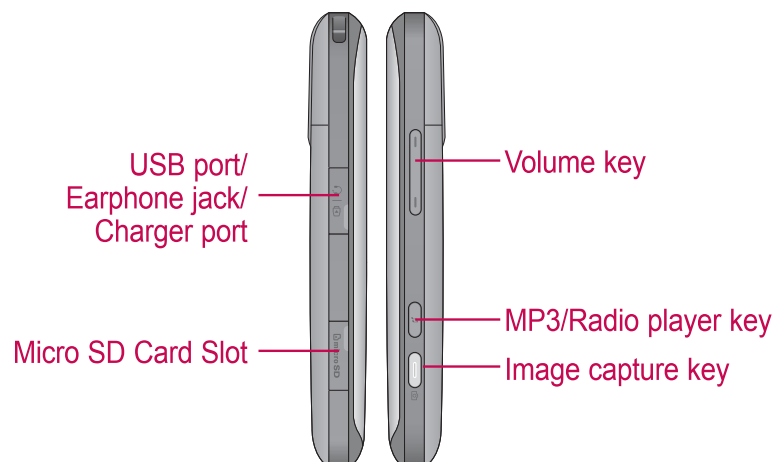

- **Side key – Volume (+ –)** 
Press to adjust the volume of your phone during a call.

- **Side key – Camera** 
Press the key to take a shot while in the camera mode.

- **Side key – MP3 player key** 
- Short press to launch FM radio.
- Long press to launch MP3 player.

- **Soft key – Left** 
Press to display the menu while in the idle status.
Press to perform the function currently displayed in the lower left corner of the screen.

- **Soft key – Right** 
Press to view the contacts while in the idle status.
Press to perform the function currently displayed in the lower right corner of the screen.

- **Send Key** 

Press to make a call.
Hold to redial the last number called.

- **End/Power key** 

Press to end a call.
Long press to power on/off the phone.

- **Navigation key** 

In standby mode, quick access to

-  Write Message,
-  Profile,
-  Favorites,
-  Contact List

- **Number key**




Input number or characters

Getting Started


When you register with a service provider, you receive a SIM card (Subscriber Identity Module card). Your phone must have a SIM card to make calls. The SIM card is a computer chip that contains your phone number, phone book information, and service provider information. Handle it with care and do not bend it or expose it to static electricity or dirt. Be sure to power off your phone before you insert the SIM card. The SIM card slot is situated underneath the battery. Follow the below steps to install your SIM card and the battery:

Installing the SIM card and the battery


1. Push the knob to release the back cover.

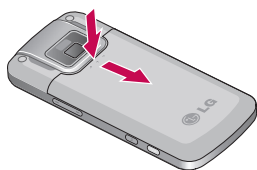


2. Remove the battery as shown.

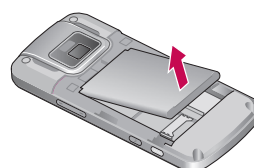

3. Insert the SIM card as shown.

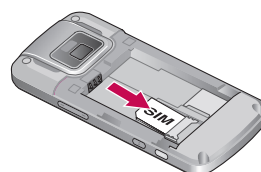

4. Insert the battery and then replace the back cover.

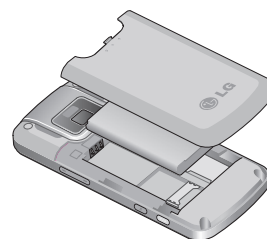

Charging the battery

You must fully charge the battery before using your phone for the first time.

1. Connect USB cable to the mini USB port on the left of your phone.
2. Connect the travel charger to an AC wall outlet.



Note

- ▶ You can use the phone while the travel charger is connected but charging is suspended during that time.
- ▶ When the battery runs low this "⬇" will display and a warning will sound. The phone will switch off automatically shortly after displaying this "⬇" icon.

Switching the phone on and off

- ▶ Press and hold the  key.

Note

- ▶ If the phone shows "Insert SIM" when an SIM card is properly inserted, contact your network operator for a PIN code, key in the PIN code, and press the  left soft key to confirm.
- ▶ You can also use the phone without the SIM card. Dialing and receiving calls are disabled but functions like Multimedia, tools,organiser etc still operate.
- ▶ Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

Unlocking the keypad

The KM330 can be locked automatically after a period of time to prevent an accidental press of any buttons. Refer to the Security setup in the Settings menu to learn how to lock the keypad.

Getting Started

To unlock the keypad, follow the below steps:

1. When the phone is in the idle status, the **Unlock** option appears in the lower right corner of the screen.
2. Press the  left soft key followed by the  right soft key to unlock the keypad. The keypad is then unlocked.

Standby Mode

When your phone is turned on but not in use, it is in the idle status. In the idle status, the screen displays **Menu** at the lower left corner of the screen and **Contacts** at the lower right corner of the screen.

Press **Menu** to enter the main menu or press **Contacts** to enter contacts sub menu. Indicators also appear on the upper part of the screen.

The indicators in the idle status are as follows:

	Vertical bars indicate the signal strength of the GSM network signal. Seven bars indicate that your current position has the best reception.
---	--

	Indicates the battery charge level.
	Indicates your phone is locked.
	Indicates your phone uses the general profile settings.
	Indicates your phone uses the meeting settings.
	Indicates your phone uses the outdoor settings.
	Indicates your phone uses the vibration settings.
	Indicates your phone uses the silent settings.
	Indicates your phone uses the headset settings.
	Indicates the alarm clock is set.
	Indicates the phone is roaming.
	Indicates a missed call.
	Indicates new messages.
	Indicates all calls are diverted to another number.
	Indicates the Bluetooth function is enabled on the phone.

	Indicates you are in Chat Room 1.
	Indicates you are in Chat Room 2.
	Indicates the WAP function is enabled on the phone.
	Indicates external memory card is inserted in your phone.

Using the Menu

In the idle status, press the  left soft key to view the main menu.

Follow below tips to navigate through the menu and menu options:

- ▶ To view the menu, press the  left soft key or the  center key in the idle status.
- ▶ Use the navigation keys to move through the various menus.
- ▶ The lower left corner of the screen displays **OK** for you to enter the menu item currently selected while the lower right corner displays the Key lock. Press the  left soft key (situated under **OK**) to select the menu item. Press the  right soft key (situated under Key lock) to lock the key.

- ▶ Each menu item also displays a small number to the left of the **Menu Options** title. You can also press the number corresponding to a menu item, on the keypad to select the item.
- ▶ To quickly exit from the menu, press the **End/ Power** key.
- ▶ Use the navigation keys to select the submenu items and options. The right  and  left soft keys can also be used for selecting various options in submenus.

For example, to view All calls, do the following:

1. Use the navigation keys to select the **Call History** from the main menu.
2. Press the  left soft key to confirm the selection. The **Call History** submenu opens.
3. Press the  left soft key to select the **All Calls** option. A list of all calls opens.

Input method

When you add names to your phone book or send a text message, you need to enter text. Your mobile phone has several text entry methods. You can enter letters individually or with predictive text entry, which helps you complete words as you enter them. You can enter letters in upper case, lower case, or both, or insert symbols.

Basics

To select input method

1. From the main menu, use the navigation keys to select **Messaging** and press **OK**.
2. Select **Text message** and press **OK**.
3. Select **Write message** and press **OK**. Then you are in the text mode.
4. Press **Options** and select **Input Method**. Then press **OK**.
5. Select a desired input method and press **OK**.

Quick way to change input method

Press the  key to change the input method when you are in the text mode.

To insert a space

You may press the  key to insert spaces when the input methods are **T9/ ABC/ Abc/ abc**.

Traditional English input

Your phone provides the Multi-tap function when you are in the text mode. In the text mode, you may press the  key twice to display the letter B, and press three times to display the letter C.

Text entry with “T9”

“T9” uses a built-in dictionary to recognize the most commonly used word for every sequence of key presses.

The input method is displayed at the upper right corner of your phone. You can switch to T9 input method by pressing  key.

Indicator	Function (English Smart mode)
T9 Abc	T9 Smart Abc
T9 abc	T9 Smart abc
T9 ABC	T9 Smart ABC
123	Numeric

Indicator	Function (English mode)
Abc	Multitap Abc
abc	Multitap abc
ABC	Multitap ABC
123	Numeric

Call functions

This section gives you information about the calling service your phone supports.

Making a call

1. In the idle status, enter the area code and the phone number.
2. Press the  key.

Note

If you enter the wrong number, press **Clear** to delete the number.

To Make a call from the Contacts

1. In the idle status, press the  right soft key to enter **Contacts**.
2. Press **OK** key to enter search option. You can directly scroll and select a name from the contact list or enter the name in the quick search field. Then press the  key to call.

OR

1. Press Menu and choose **Contacts** menu.

2. Use navigation keys to select **Search** option. You can directly select a name from the contact list or enter the name in the quick search field. Then press the  key to call.

OR

1. Press down navigation key to enter contact list.
2. You can directly scroll and select a name from the contact list or enter the name in the quick search field. Then press the  key to call.

To Make an international call

1. In the idle status, long press the  key until a + (international prefix character) sign is displayed.
2. Enter the country code, the area code and the phone number.
3. Press the  key to call.

Answering or rejecting an incoming call

To answer the incoming call

Press the  key to answer the call when the phone rings.

To reject the incoming call

Press the  key to reject the call when the phone rings.

Call waiting

You can answer another incoming call while you have a call in progress.

Making a conference call

You can make conference call while you have multiple calls in progress.

1. Make a call to the first participant as described previously.
2. Call the second participant during a call along with the first participant.
3. Press the  left soft key and select **Conference**. This joins the first and second calls to the conference.

4. Repeat step 2 and 3 to allow new participants to be connected to the conference call.
5. Press **Options** and select **End all** to end the calls or press the  key to end all calls.

Note

- ▶ Callers can be individually disconnected. You just select a caller press **Options > End Single** during a conference call.
- ▶ Number of parties allowed in a conference is up to 6, including the conference initiator. (Depends on operator support)

Tips for call options

Many functions are available during active calls. Options 1-8 (below) are available when a new call is made. Additional options (9-13) are available during a conference call.

1. **Use Phone/ Bluetooth:** Switch to Bluetooth hands-free device.
2. **Contacts:** Shortcut to Contacts menu.
3. **Hold call:** Put a call on hold.

Call functions

4. **New call:** Make a new call during an active call.
5. **End call:** End a call.
6. **Messaging:** Shortcut to Messaging menu.
7. **Record:** Record your conversation during an active call.
8. **Enable / Disable DTMF:** Set On/Off for DTMF (Dual Tone Multi-Frequency) tone dialing system.
9. **Swap:** Switch between calls on hold and active.
10. **Transfer:** Transfer a call.
11. **End Single:** End one of the participants in a conference call.
12. **End all:** End a multi-party call.
13. **Split:** Split the multi-party call.

Games & Apps [Menu 1]

The KM330 offers Applications. In Applications, there are 3 Java applications; Chequered Flag, Mini Game World, and Backgammon.

Applications

The KM330 is designed to support Java applications.

To use application the first time

There are three default Java games in the KM330. Before using the Java games, you must install the MIDlet to execute the Java games. Your handset provider has integrated the MIDlet by default in the KM330 and provides two methods of installation: installation of the MIDlet from the WAP and installation of the MIDlet locally. (See below for details)

There are 3 default Java games in the KM330

1. From the main menu, select the **Games & Apps** and press **OK**.
2. Select **Games & Apps** and press **OK**.
3. Select **Applications** and press **OK**.

4. Select a Java game you want to play and press **Options**.

5. Select **Launch** and press **OK** to start playing the game.

Users can also download Java games from WAP.

1. Go to the WAP site and download the Java games from the WAP site.
2. After downloading the applications, select **Games & Apps** and press **OK** from the main menu.
3. Select **Applications** and press **OK**.
4. Select one of the Java games downloaded from WAP and press **Options** to launch, update the application, adjust the settings, view the information, or delete the application.

Games & Apps

Users can save Java games to **My stuff** menu.

1. Save the Java game files to **My stuff** by the USB cable. The saving progress is same as the adding the music tracks to your phone.
2. Select **Games & Apps** and press **OK**.
3. Select **Applications** and press **OK**.
4. Select a Java games and press **Options** to launch, update the application, adjust the setting, view the information, or delete the application.

Note

Java MIDlet only read files with .jad or .jar extensions.

To personalize an application

Your phone provides the following options when you select **Games & Apps > Applications > an application** from the main menu.

- ▶ **Launch**: Launches the java game or application you have selected.
- ▶ **Setting**: Defines the permission level when using Java applications. Permission levels are "Prompt at first", "Allow", "Never", and "Prompt always". The following seven permission settings can be configured:
 - **Network Access**: Allows to making a data connection via networks.
 - **Auto Invocation**: Allows to automatically starting a MIDlet, for example, by push registration.
 - **Messaging**: Allows to sending or receive messages like SMS.
 - **Multimedia**: Allows to recording Album, audio, video, and so on.
 - **Read user data**: Allows to reading user data like phone book or calendar entries.
 - **Write user data**: Allows to writing user data.

- **Local connectivity:** Allows you to connect via local ports like Bluetooth or Serial port.

- ▶ **Information:** Accesses information about java games and applications including: name of application, memory size, application version, name of vender and authorized source.

Note

Default java games cannot be deleted.

- ▶ **Information:** Provides information on Java, CLDC and MIDP versions.

Settings

Your phone provides the following options when you select **Games & Apps > Settings** from the main menu.

- ▶ **GPRS (Network Profiles):** Allows you to use GPRS function. (This is same as the Browse function.)
- ▶ **Memory status:** Indicates the total memory, used and free memory.

Call History [Menu 2]

Your phone saves the call records of missed calls, received calls, dialed calls, length and cost of calls in the **Call History** menu. You can check the most recent calls dialed, received, or missed. Your phone also offers the functions: delete, save, edit, send text message and send multimedia message when you select a certain phone number. Once the call list exceeds the memory limitation, the oldest records will be deleted. You can press the  key to have a quick review of missed, dialed or received calls.

Note

- ▶ When the SIM card is changed, the call records stored in phone are deleted but the call records stored in the SIM card are not deleted.

All calls

Menu 2.1

Your phone records up to 120 entries of missed, dialed and received calls.

In **Call History** menu, choose All calls, and press **OK** to view the

records (Same menu is displayed when you press the Send key in standby mode). Your phone provides the following options:

- ▶ **View:** View information of call record.
- ▶ **Make call:** You can make a phone call to the selected number.
- ▶ **New message:**
 1. **Text** – Send a message (Text/ Multimedia/ Email) to the selected number.
 2. **Multimedia** – Send a Multimedia message to the selected number.
- ▶ **Delete:** Deletes the selected entry from the call record.
- ▶ **Edit number:** Edit the phone number.
- ▶ **Multi delete:** Delete multiple numbers from the call records at the same time.
- ▶ **Delete all:** Deletes all numbers from the call records.

If phone number are not from stored **Contacts**, additional options are available.

► **Save number:**

1. **New contact:** After selecting the place (SIM/Phone) you want to save, you can add to the phonebook list.
2. **Update contact:** You can update or copy the entry from SIM card or phone memory.

- View the number if available and call it or save it in the **Contacts**.
- Enter a new name for the number and save both in the **Contacts**.
- Send a message by this number.
- Delete the call from the list.

Missed Calls Menu 2.2

In **Call History** menu, choose **Missed calls**, and press **OK** to view the records. View the list of any calls you have missed, your phone provides following options:

- View the number if available and call it, or save it in the **Contacts**.
- Enter a new name for the number and save both in the **Contacts**.
- Send a message by this number.
- Delete the call from the list.

Received Calls Menu 2.4

In **Call History** menu, choose **Received Calls** and press **OK** to view the records. View the list of all the numbers that have called you, your phone provides following options:

- View the number if available and call it, or save it in the **Contacts**.
- Enter a new name for the number and save both in the **Contacts**.
- Send a message by this number.
- Delete the call from the list.

Dialled calls Menu 2.3

In **Call History** menu, choose **Dialled calls** and press **OK** to view the records. View the list of all the numbers you have called, your phone provides following options:

Delete call log. Menu 2.5

This function allows you to delete the records of Missed calls, Dialled calls, Received calls or All calls.

Call History

Call Duration

Menu 2.6

This function allows you to view the duration of your incoming and outgoing calls. You can also reset the call times.

The following timers are available:

- ▶ **Last call:** Length of the last call.
- ▶ **All calls:** Total length of all calls made and incoming calls since the timer was last reset.
- ▶ **Dialed calls:** Length of the outgoing calls.
- ▶ **Received calls:** Length of the incoming calls.

- ▶ **Cost settings:** In this menu, you can change the settings after entering the PIN2 code.

1. **Set Tariff:** You can set the currency type and the unit price. Contact your service providers to obtain charging unit prices. To select the currency or unit in this menu, you need the PIN2 code.
2. **Auto Display:** This network service allows you to see automatically the cost of your last calls. If set to On, you can see the last cost when the call is released.

Call Cost

Menu 2.7

Allows you to check the cost of your last call, all calls, remaining and reset the cost.

To reset the cost, you need to PIN2 code.

- ▶ **Last call:** Length of the last call.
- ▶ **All calls:** Total length of all calls made and incoming calls since the timer was last reset.

Text Message Counter

Menu 2.8

This function allows you to check the number of messages. You may press **Reset** to restart the counter.

Your phone provides the following selections when you select **Call History > Text message counter**.

- ▶ **Sent:** number of message(s) you've send.

- ▶ **Received:** number of message(s) you've received.

Data information [Menu 2.9](#)

You can check the total data transferred over the web through the GPRS information option.

Organizer [Menu 3]

Calendar

Menu 3.1

This feature allows you to keep track of your schedule and tasks saved in the calendar. You can also set alarm tone reminders.

To make a note and reminder in Calendar first time

1. From the main menu, select **Organizer** and press **OK**.
2. Select **Calendar** and press **OK**.
3. Select a date you want to insert a note or reminder and press **Options**.
4. Select **Add Task** and press **OK**.
5. Use the navigation keys up/ down to select **Note** and press **Edit**.
6. Enter your note or reminder in this mode and press **Options**.
7. Select **Save** and press **OK**.
8. Press **Done** and use the  to select **Yes**.

To edit a note or reminder in a specified date

Your phone provides the following options when you enter a specified date and press **Options**.

- ▶ **View**: Views tasks stored on a specified day.
- ▶ **Add**: Adds a new task to a specified day.
- ▶ **Edit task**: Edits a task on a specified day.
- ▶ **Delete task**: Deletes a specific task.
- ▶ **Delete all**: Deletes all tasks.
- ▶ **Send vCalendar**: Sends the task via a text message, a multimedia message, Bluetooth, or just saves to file.

To jump to a desired date:

1. From the main menu, use the navigation keys up/down to select **Organizer** and press **OK**.
2. Select **Calendar** and press **OK**.
3. Press **Options** and select **Jump** to date.

4. Press **OK** and key in the year, month and day you wish to jump to follow by pressing **OK** again.

Note

You can press number 1 and number 3 keys to go to previous and next year. You can also press number 7 and number 9 keys to go to previous and next month. You can press 5 to go to current date.

To do

Menu 3.2

This feature lists all of the tasks added from the calendar option. You can also view, edit or delete the tasks from the options under this feature.

First time to using “To do”

1. From the main menu, select **Organizer** and press **OK**.
2. Select **To do** and press **OK**.
3. Press **Options** and **Add** to edit your Task List by entering a date, time, note, etc.
4. Press **Done** and **Save**.

Multimedia [Menu 4]

Camera

Menu 4.1

You can take photos with the built in camera and adjust its settings to suit your needs. The camera lens is on the back of the phone, and the phone's display works as a viewfinder. If there's not enough memory for the camera function, you need to a) Delete old photos to free up space b) Save photos to a memory card. Your video camera settings are displayed on the top of the phone screen in preview mode.

Note

Do not use this feature when it violates local laws.

To take a picture

1. From the main menu, select **Multimedia** and press **OK**.
2. Select **Camera** and press **OK**.
You are now in Preview mode.
3. Press **Options** to personalize your camera settings.

4. Use your lens to focus on an object and volume keys to zoom in and out.
5. Press the  camera key or the  center key to take a picture.

Note

- ▶ The photo is saved in JPEG format and saved in the **Album** folder of **My stuff**. You can also browse pictures in **Album** mode.
- ▶ Short press the  key to auto focus the object; hold the  key to capture take a picture.

To setup the Camera

1. From the main menu, select **Multimedia** and then press **OK**.
2. Select **Camera** and press **OK**.
3. Press **Options**. The option bar is displayed on the bottom of screen.
4. Use the navigation key up/down to select the different options or to adjust the settings of the option bar displayed on the phone screen.

Your phone provides the following options when you select **Camera** > **Options** from the main menu. The table below defines the camera setting icons.

	Go to: Allows you to select Video mode or Album.
	Resolution*: Set image size 320x240 / 640x480 / 1280x960 / 1600x1200 / 2048x1536
	Quality : Set image quality Normal / Fine / Super fine
	Self Timer*: Set Timer. Timer off / 5 secs / 10 secs / 15 secs
	Save to*: When external memory is inserted, you can choose to save images to the phone or to the memory card.
	Flash*: Off / Auto / When taking The light is set to Auto by default.

	Colour Effect: Effects includes: Effect off / Grayscale / Sepia / Sepia green / Sepia blue / Color invert / Gray invert / Blackboard / Whiteboard / Engraving / Blue carving / Embossment / Contrast / Sketch
	White Balance: White balance (WB) is the process of removing unrealistic color casts, so that objects which appear white in person are rendered white in your photo. (Auto WB / Daylight / Tungsten / Fluorescent / Cloud / Incand.)
	Scene Mode: Allows you to select the scene mode from Auto / Night
	Banding: You can set a frequency band of 50Hz or 60Hz.
	Shutter Tone: You can set shutter sound when taking a picture. (Off / Tone 1 / Tone 2 / Tone 3)
	Reset: Restores factory defaults

* Display at the Camera mode

Multimedia

Video Recorder Menu 4.2

You can record a video clip through the built-in camera. This function also enables audio recordings. See the further details in the following descriptions.

To shoot a video clip

1. From the main menu, select **Multimedia** and press **OK**.
2. Select **Video Recorder** and press **OK**.
3. Press **Options** to personalize your camera settings.
4. Press the  camera key to record a video clip or press the  center key to stop recording the video clip.
5. You may review your video clips from the **Video Player** mode.

Note

- ▶ The video clip is saved in mp4 format and saved in the **Video** folder of **My stuff**. You can also listen to the audio clips from the **Album** or **Video Player** mode.

- ▶ You can also jump to the camera function via the camera key.
- ▶ View table below for function keys in **Video record** mode.

Keys Definition in recording mode

	Left soft key Pause a video record.
	Right soft key Stop recording a video clip
	Center Soft Key Press CSK to Start/Pause/Resume when recording a video clip.
	Camera key Record/Pause/Resume a video clip.

MP3 player Menu 4.3

The KM330 has an integrated MP3 player. The dedicated music player key gives quick access to your MP3 player. You can enjoy listening to your favorite music on your phone using a compatible headset or via the internal loudspeaker. LED lighting effects will sync with your favorite music and make your listening experience even more entertaining.

To play the music

1. Long press the  music player key. You can also use the navigation keys to select **Multimedia** and press **OK**. Then select **MP3 player** and press **OK**.
2. You can either open a list of all music tracks stored in your phone or play songs from a customized playlists.

Note

- ▶ You can use other phone function while listening to music. From the MP3 player screen, press options > Minimize.
- ▶ You can turn off LED lighting effect under Settings.

To customize play list

You can create play list according to your personal preference by adding music tracks from your phone or memory card.

- ▶ **To edit Playlist:**
 - Go to **Multimedia** and press **OK**.

- Select **My Playlist** and press **OK**.
- Press **Options** to **View**, **New playlist**, or **Delete all**.

To change MP3 player settings

You can customize the MP3 player mode, equalizer, and theme.

- **Shuffle:** Allows you to set all songs play shuffled or one by one.
- **Repeat:** Allows you to repeat all songs or one selected song.
- **Equalizer:** Allows you to customize equalizer. The following equalizer modes are supported: Normal, Bass, Dance, Classical, Treble, Party, Pop, Rock.
- **Player Skin:** Allows you to switch between two different player skins.

Note

- ▶ In the case an invalid file is included in the playlist, an error message will pop up and go back to the prior screen.

Multimedia

Voice Recorder Menu 4.4

Voice recorder is a simple sound recording tool provided functionalities for you to manage voice files.

To start voice recording

1. From the main menu, select **Multimedia** and press **OK**.
2. Select **Voice Recorder** and press **OK**.
3. Press **Options** and select **Record**.
4. When select **Record** phone will start recording right away.
5. After recording, your mobile will prompt you to enter file name and save the file.

Note

- ▶ During a recording, you may pause or stop the voice recording anytime by pressing right or left soft keys.
- ▶ After recording, the file is saved in AMR and WAV formats.

Your phone provides the following additional options:

- ▶ **Record**: Starts a new voice recording.
- ▶ **Play**: Plays the selected recorded sound file.
- ▶ **Append**: Starts a recording and append it to the selected audio file.
- ▶ **Rename**: Renames the recorded audio file.
- ▶ **Delete**: Deletes the recorded audio file.
- ▶ **Delete all**: Deletes all recorded audio files.
- ▶ **Settings**: Allows you to change the settings of storage location recording file format and Quality of sound.
- ▶ **Forward**: Forwards a file to user profile or to friends via MMS or Bluetooth.

Melody composer Menu 4.5

This function allows you to compose a ring tone or melody.

To start composing

1. From the main menu, select **Multimedia** and press **OK**.
2. Select **Melody composer** and press **OK**.
3. Select **Options** and then **Add**.
4. Press the keypad to start composing.
5. Press **Options** to save your melody.

Note

- ▶ The melody you composed is saved in IMY format.

While composing a melody, your phone provides the following options to personalize the melody.

- ▶ **Play**: Allows you to listen to the melody you have made.
- ▶ **Play Speed**: Allows you to adjust the three different play speeds.

- ▶ **Select Instrument**: Allows you to select your desired instrument.

- ▶ **Save**: Saves the melody.

Key definition in melody composer mode

Keys	Functions and Descriptions
	Press the 1 key to play Do.
	Press the 2 key to play Re
	Press the 3 key to play Mi
	Press the 4 key to play Fa
	Press the 5 key to play So
	Press the 6 key to play La
	Press the 7 key to play Si
	Press the 8 key to play Vibration note
	Press the 9 key to play Backlight/LED note
	Press the 0 key to play Rest
	Press the # key to toggle sharp, normal or flat notes

Multimedia

Multimedia

	Press the * key to change the beat length of current musical note or to change a note between backlight and LED
	Press the navigation keys down to lower one octave (Can disable vibration, backlight and LED)
	Press the volume keys to change the instrument.

To edit your melodies

Your phone provides the following options:

- ▶ **Play:** Listens to the melody you have made.
- ▶ **Edit:** Edits the selected melody.
- ▶ **Add:** Adds more ring tones to selected melody.
- ▶ **Rename:** Renames a file.
- ▶ **Delete:** Deletes a file.
- ▶ **Delete All:** Deletes all content in this folder.
- ▶ **Forward:** Forwards melody to a user profile or via EMS, MMS, or Bluetooth.

FM radio

Menu 4.6

This feature allows you to listen to your favorite radio station anytime. A compatible headset needs to be attached to the device for the FM radio to function properly.

To listen to the radio

1. Connect the earphone to your phone.
2. You use the navigation keys to select **Multimedia** and press **Ok**. Then Select **FM Radio** and press **OK**.
3. Use navigation keypad to search radio station. You can also press **Options** to search radio frequency for available channels and automatically store to the channel list.
4. Press **Options** to edit the channel list. There are 9 stations you may pre-set.

Your phone provides the following options for radio:

- ▶ **Channel List:** Bookmark up to 9 radio stations by entering the channel name and frequency.

- ▶ **Manual Input:** Keys in the radio station frequency manually.
- ▶ **Preset Auto Search:** Auto search available channels and automatically store them to the channel list.
- ▶ **Settings:** Changes the background play, the skin of the FM radio, the record format and storage settings. You can record in AMR or Wav formats. You can set loudspeaker and audio quality.
- ▶ **Record:** Records your favorite radio programs.
- ▶ **Append:** Resumes a previously recorded file.
- ▶ **File list:** Manages recorded audio files.

Note

You have to plug-in the earphone in order to use the FM radio.

Schedule FM record Menu 4.7

This phone allows you to pre-schedule FM radio recordings. You can schedule up to four recordings at a time. The options include: turn on/off recording, setup pre-scheduled one-time or repeat (Daily/Weekly/Monthly) recordings. Also includes an option to manually input file and storage settings.

Note

You must insert headset as the antenna when pre-scheduling a radio channel.

Messaging [Menu 5]

Text Message (SMS)

Menu 5.1

Your phone includes voice mail, notification messages and text messages. Voice mail and short message service (SMS) are network services. Your phone also allows you to send and receive text messages contain pictures or melodies. A message with pictures is made up of several text messages. Therefore, sending a message with pictures will cost more than a single text only message.

Write Message

To write a text message

1. From the main menu, select **Messaging** and press **OK**.
2. Select **Text message** and press **OK**.
3. Choose **Write message** and press **OK** to write message.
4. You can also personalize your message with various special effects by selecting following options:

- ▶ **Send to:** Send messages to one or more contacts.
- ▶ **Use Template:** Insert default template for quick writing.
- ▶ **Insert Object:** Insert picture, animation, melody and sound in your text message.
- ▶ **Format Text:** Choose text size, style, alignment or start with new paragraph.
- ▶ **Insert Contact:** Insert a contact from your contact list.
- ▶ **Insert Bookmark:** Insert a bookmark from your bookmark list.
- ▶ **Input Method:** Choose desired input method.
- ▶ **Common setting:** Set the messages options, including delivery report and reply path.

Note

- ▶ To jump to Message function, you can press the  navigation keys up in the idle status.
- ▶ To key in the content, please refer to **Input method**.

► You can use the  key to enter symbols and use the  key to switch the input methods and use the navigation keys to shift the cursor.

To send a message manually

1. From the main menu, select **Messaging** and press **OK**.
2. Select **Text message** and press **OK**.
3. Choose **Write message**, and press **OK** to start writing message. (Please see “To write a text message”.)
4. After finishing the writing, select the **Options** and select **Send to**.
5. Enter the phone number you want to send.
6. Press **Options** and select **Send to** send message.

Note

To use picture message function, your network operator or service provider support is necessary. Only phones that contain this function can receive and display picture messages.

To send a message to someone on your contact list

1. From the main menu, select **Messaging** and press **OK**.
2. Select **Text message** and press **OK**.
3. Choose **Write message**, and press **OK** to start writing message. (Please see “To write a text message” on page 38.)
4. After finishing the writing, select the **Options** and select **Send to**.
5. Enter the phone number you want to send.
6. Press **Options** and select **Contacts**. Then you enter the contact list mode.
7. Select a desired contact to send the message and press **OK**.

Your phone provides the following options when you select **Messaging > Text message > Write message > Options > Send to > Options**:

- **Contacts**: Enter the phone number or Contacts to open your contacts list. You can add multiple contacts. Select a contact and touch Send.

Messaging

- ▶ **Send By Group:** Allow you to send many contacts at once. Successful sent messages are stored in outbox.
- ▶ **Save To Drafts:** Allow you to save the message you wrote to the drafts in the phone.

To use a template

1. From the main menu, use the navigation keys up/down to select **Messaging** and press **OK**.
2. Select **Text message** and press **OK**.
3. Select **Write message** and press **OK**.
4. Select **Use Template** and press **OK**.
5. Use the navigation keys up/down to select a desired template and press **OK**.
6. Press **Options** and select **Send to**.
7. Enter the phone number or select a desired contact to send the message.

Inbox

To read messages

When you have received a message, the indicator  appears on the display. If your inbox is full, there will be a pop-up window to remind you to delete some of your old messages. Otherwise, your message will be saved in the phone instead of the SIM card.

1. From the main menu, use the navigation keys up/down to select **Messaging** and press **OK**.
2. Select **Text message** and press **OK**.
3. Select **Inbox** and press **OK**. The message list will display on the phone screen.
4. Choose a desired message by pressing **Options** and select **View** to read the content.

Note

- ▶ The message you have received will be saved in the SIM card as default setting.

- ▶ When you see the  indicator in your inbox, the indicator means the message has not been read. When you see the  indicator in your inbox the indicator means the message has been read.

Your phone provides the following options when you select **Messaging > Text message > Inbox > Options**.

- ▶ **View**: Reads the message you received.
- ▶ **Reply**: Replies to the message you received.
- ▶ **Delete**: Deletes the message you received.
- ▶ **Forward**: Forwards the message you received.
- ▶ **Save Number**: Saves the number in your contacts.
- ▶ **Copy to Phone/SIM**: Copies the selected text message to your phone/SIM.
- ▶ **Move to Phone/SIM**: Moves the selected text message to your phone/SIM.

- ▶ **Mark/Unmark**: Allows you to mark/unmark message saved in Inbox. After marking the messages, you can delete, copy, or move the marked message.
- ▶ **Chat**: Chats with the sender.

Sent

After sending out the message, the message is saved in the outbox folder. You can read outbox messages by selecting **Messaging > Text message > Sent > Options**:

- ▶ **View**: Reads the message.
- ▶ **Send**: Sends the message without editing.
- ▶ **Edit**: Allows for editing before sending a message.
- ▶ **Delete**: Deletes the message.
- ▶ **Copy to Phone/SIM**: Allows you to copy the message to phone. This option is available only when the highlighted message is stored in the SIM card.
- ▶ **Move to Phone/SIM**: Moves messages to the phone. Only available when the highlighted message is stored in the SIM card.

Messaging

- ▶ **Save number:** Saves the number in your contacts.
- ▶ **Mark/Unmark:** Allows you to mark/unmark message saved in Inbox. After marking the messages, you can delete, copy, or move the marked message.

Drafts

You can store your message in your **Drafts** category and work on it later. Your phone provides the following options when you select **Messaging > Text message > Drafts > Options:**

- ▶ **View:** Views the draft.
- ▶ **Send:** Sends the draft.
- ▶ **Edit:** Edits a saved draft.
- ▶ **Delete:** Deletes the draft in progress.
- ▶ **Multi delete:** You can delete multiple files at the same time.
- ▶ **Save number:** Saves the number in your contacts.

Templates

There are several default templates in your phone for quick message writing. You can also customize or delete these templates to suite your needs.

To edit your template

1. From the main menu, use the navigation keys up/down to select **Messaging** and press **OK**.
2. Select **Text message** and press **OK**.
3. Choose **Templates** and press **OK**.
4. Use the navigation keys up/down to select a desired template and press **Options**.
5. Select **Edit** (If you want to erase the template, select **Erase**.) to edit the template and press **OK**.
6. Press **Options** and select **Save**.
7. Press **OK**. Then select Yes if you want to save your editing or select **No** if you want to abort your edit.

Message Settings

Your phone allows you to set up default setting on the SMS feature.

1. From the main menu, use your navigation keys to select **Messaging > Text message > message Settings**.
2. Press **OK** and choose a setting.
3. Press **OK** to set your message settings.

Your phone provides the following settings:

- ▶ **Profile setting:** If more than one message profile is allowed by your SIM card, you may edit the profile separately.
- ▶ **Common setting:** You may select whether to enable or disable the delivery report and change the reply path of your service center if any.
- ▶ **Memory status:** Checks your memory status in the SIM card and phone.
- ▶ **Preferred storage:** Toggles between SIM and phone storage options.

- ▶ **Prefer bearer:** Chooses your preferred bearer-GSM, GPRS only and GSM only

Multimedia Message (MMS)

Menu 5.2

The feature allows you to send the message that contains text, sound and a picture. Depending on the network, you may receive a text message that includes an Internet address where you can view and download the multimedia message.

Your phone supports the following formats in MMS function.

- ▶ **Picture:** JPG, GIF and BMP.
- ▶ **Sound:** Scalable Polyphonic MIDI (SP-MIDI), i-Melody.

Note

- ▶ You are not able to receive multimedia messages during a call, a game, or any active WAP connection over GPRS data.
- ▶ The maximum amount of multimedia messages is 100. If your multimedia messages exceed 100, your phone pops up a message "Max no. of stored Multimedia message reached".

Messaging

To write a MMS

For availability to the multimedia messaging service, please contact your network operator or service provider.

1. From the main menu, select **Messaging** and then press **OK**.
2. Select **Multimedia message** and press **OK**.
3. Select **Write message** and press **OK**.
4. To key in Phone numbers/Email, select **To** field by using up/down navigation key, and then press **Edit**.

Note

- ▶ If you select **Add Number**, please enter the recipient's phone number.
- ▶ If you select **Add email**, please enter the recipient's e-mail.

5. After adding the recipients, press **OK** and press **Done**. Return to editing screen.

Note

If you want to add recipients in **Cc/Bcc**, please repeat steps 4 and 5.

6. Scroll down and to insert subject by pressing center key or **Edit**.
7. Press **Options** and select **Done** to return to the editing screen.
8. Scroll down to **Edit content** by pressing **Edit**.
9. Press **Options** and select **Add image/Add audio/Add video/Add attachment**. Then you enter the **My stuff** mode.
10. Select a file from **My stuff** and press **OK**. Then press **Done**.
11. Confirm the sending information in editing screen and then press **Done**.
12. Select **Send only** to send the multimedia message.

Note

- ▶ To key in the content, you can refer to "Input method".
- ▶ To use picture message function, your network operator or service provider support is necessary.

- ▶ Jump to Message function, you can press the  navigation keys up in the idle status.
- ▶ To key in the content, please refer to Input method on page 16.
- ▶ You can use the  key to enter symbols and use the  key to switch the input methods and use the navigation keys to shift the cursor.

Your phone provides the following options when you select **Messaging > Multimedia message > Write message > Edit content > Options**.

- ▶ **Done**: Exits the editing page and goes back to Edit content page.
- ▶ **Input method**: Changes the input method.
- ▶ **Add image**: Adds an image file to your message.
- ▶ **Add audio**: Adds an audio file to your message.
- ▶ **Add video**: Adds a video file to your message.
- ▶ **Add attachment**: Attaches a file to your message.

- ▶ **Add slide before**: Adds a new slide before the old one.
- ▶ **Add slide after**: Allows you to add a new slide after the old one.
- ▶ **Add bookmark text**: Adds a bookmark to the slide.
- ▶ **Add contact**: Add a contact to your message.
- ▶ **Preview**: Previews the slide(s) you just wrote.
- ▶ **Slide timing**: Sets the time between slides.

After adding text into the content, you will see more options available including:

- ▶ **Delete Slide**: Deletes target slide.
- ▶ **Previous Slide**: Displays previous slide.
- ▶ **Next Slide**: Displays next slide.

To send a MMS

The sending steps are the same as writing a SMS.

Note

- ▶ To key in the content, you can refer to “Input method”.

Messaging

- ▶ To use picture message function, your network operator or service provider support is necessary.

Your phone provides the following options when press **Done** after writing a MMS.

- ▶ **Send only:** Sends a message immediately.
- ▶ **Save and send:** Saves a message and sends it immediately.
- ▶ **Save to drafts:** Saves a message to be sent later.
- ▶ **Send options:** Personalizes the sending options including Validity period, Delivery report, Read, and Priority.
- ▶ **Exit:** Upon exit, you will be prompted to save or not save messages written.

Inbox

Your phone saves the multimedia messages that have been received in the Inbox folder of the Multimedia messages menu.

To read received multimedia messages

1. From the main menu, use the navigation keys to select **Messaging** and press **OK**.
2. Select **Multimedia message** and then press **OK**.
3. Select **Inbox** followed by pressing **OK**.
4. Choose a message and press **Options** to view the multimedia messages.

Your phone provides the following options when you select **Messaging > Multimedia message > Inbox**.

- ▶ **View:** Views a multimedia message immediately.
- ▶ **Reply:** Replies to sender.
- ▶ **Reply by SMS:** Replies to sender via SMS.
- ▶ **Reply to all:** Replies to all members.
- ▶ **Forward:** Forwards message.
- ▶ **Delete:** Deletes selected message.

- ▶ **Delete all:** Deletes all messages.
- ▶ **Properties:** Views mailing list.
- ▶ **Use Detail:** Either dials or saves the phone number.

Sent

Multimedia messages that have not been sent are saved in Sent folder of the Multimedia messages menu.

To view sent multimedia messages

1. From the main menu, select **Messaging** and press **OK**.
2. Select **Multimedia message** and then press **OK**.
3. Choose **Sent** and press **OK**.
4. Select a message and press **OK** to view.

Your phone provides the following options when you select **Messaging > Multimedia message > Sent**.

- ▶ **View:** Views a multimedia message immediately.
- ▶ **Delete:** Deletes selected message.

- ▶ **Delete all:** Deletes all messages.
- ▶ **Properties:** Views the MMS properties.
- ▶ **Use Details:** View either dial or saved phone number.

Draft

Your phone saves multimedia messages that are stored in drafts folder of the Multimedia messages menu.

To read unsent multimedia messages

1. From the main menu, use the navigation keys to select **Messaging** and press **OK**.
2. Select **Multimedia message** and then press **OK**.
3. Choose **Drafts** and press **OK**.
4. Select a message and press **OK** to view.

Your phone provides the following options when you select **Messaging > Multimedia message > Drafts**.

Messaging

- ▶ **View:** Views a multimedia message immediately.
- ▶ **Send:** Sends the message.
- ▶ **Edit:** Edits message.
- ▶ **Delete:** Deletes selected message.
- ▶ **Delete all:** Deletes all messages.
- ▶ **Use Details:** Uses details of a multimedia message.

Templates

This phone allows you to add saved templates for your multimedia message.

1. From the main menu, select **Messaging** and press **OK**.
2. Select **Multimedia message** and then press **OK**.
3. Choose **Templates** and press **OK**.
4. Select a message and press **Option** to view.
5. Select **Write message** to edit and send your multimedia message.

Note

You can view the content of a template via **View** options to read the slide and **Properties** to read the message content and size.

Message Settings

Before you send an MMS message, you need to complete the **Message Settings**. Follow the below steps to switch your settings.

1. From the main menu, select **Messaging** and press **OK**.
2. Select **Multimedia message** and then press **OK**.
3. Choose **Message Settings** and press **OK**.
4. Select a setting and press **OK** to start setting.
5. Press **Back** once finished.

Your phone displays the following when you select **Messaging > Multimedia message > Message Settings**.

► **Compose:**

You can set your composition format from the following options:

- **Creation:** Allows you to choose the options: Free or Restricted.
- **Image Resizing:** Allows you to choose the options: Off / 160x120 / 320x240 / 640x480.
- **Auto Signature:** Allows you to choose the options: On or Off.

► **Send:**

- **Valid Period:** This is the duration that your message is stored at the Message Center. You can set the duration between 1 hour / 6 hours / 12 hours / 1 day / 1 week and Max.
- **Delivery Report:** Can toggle delivery reports between on and off.
- **Read Report:** Reads a delivery report.
- **Priority:** Allows you to choose the options: Normal / High / Low.
- **Slide timing:** Sets time between slides. (1 - 60 seconds).

- **Delivery time:** Sets delivery times (Immediate / in one hour / in 12 hours or in 24 hours).

► **Retrieve:**

- **Home network:** Chooses between: Immediate / Restricted / Delayed.
- **Roaming:** Chooses between: As Home / Delayed / Restricted.
- **Read Report:** Allows you to choose the options: On Request / Send / Never Send.
- **Delivery report:** Toggles between On / Off delivery report options.

► **Filter:**

- **Anonymous:** Chooses between: Allow / Reject.
- **Commercial:** Chooses between: Allow / Reject.

► **Server profile:**

You may receive and send multimedia messages through certain network or service providers.

Messaging

► **Memory status:**

You can check what percentage of the phone's internal memory is unoccupied and how messages can still be stored in the SIM card or Phone's memory.

Note

To complete the **Message Settings**, contact your network service operator.

Chat

Menu 5.3

You can chat with friends with this feature. There are 2 chat rooms in your phone.

Before chatting, you need to do the following steps:

1. From the main menu, select **Messaging** and press **OK**.
2. Select **Chat** and then press **OK**.
3. Select **Chat Room 1** or **Chat Room 2** and press **Options**.
4. Select **Chat Room Info** and press **OK**.
5. Create a nickname by pressing **Edit** and press **Options**.

6. Press **Done** and select **Remote No**.
7. Press **Search** and select a contact from the contact list.
8. Then press **OK** and press **Yes**.

To start chatting

1. After chat room is set (See **Chat** on page 50), use the navigation keys to select **Messaging** and press **OK** from the main menu.
2. Select **Chat** and then press **OK**.
3. Select **Options > Start New**, and press **OK**.
4. Enter a message and press **Options**.
5. Select **Send** and press **OK**.
6. After sending the message, the Chat room is activated.
7. Your chat can now begin.

Your phone provides the following options when you start to chat.

- **Send:** Sends message you have written.
- **Use template:** Inserts a template in your SMS template option.

- ▶ **Insert PHB number:** Inserts phone numbers from your contacts.
- ▶ **Insert PHB name:** Inserts names from your contacts.
- ▶ **Input method:** Changes your input method.

Your phone provides the following options while chatting,

- ▶ **Reply:** Replies to a received chat message.
- ▶ **Use number:** Saves the number of a chatter or a number sent by a chatter.
- ▶ **Clear chat:** Clears chat conversation.
- ▶ **Temp leave:** Temporarily leaves the chat room.
- ▶ **Quit:** Quits chat.
- ▶ **Chat Room Info:** Displays chat room information.

Note

Upon temporarily leaving a chat you can either Resume or End the chat.

Voice Mail Server Menu 5.4

Your phone allows you to jump to your voice mailbox. (If supported by your service provider). Your voice mail number will be provided by your service provider and displayed in the phone. In the Voice Mail submenu, you can choose line 1 or 2 the options list includes:

- ▶ **Edit:** Edits the name & number of voice mail line 1.
- ▶ **Connect to voice mail:** Connects to your voice mail box.

In the idle status, hold  to access your voice mail server directly.

Note

To use this function, you may need to enter the voice mail server number obtained from your service provider.

Messaging

Broadcast Message Menu 5.5

Your phone allows you to receive commercial messages. You can either enable or disable the receiving mode and set some other options based on your personal preference.

Your phone provides the following options:

- ▶ **Receive mode:** You can choose to receive or not to receive broadcast message sent by network.
- ▶ **Message List:** You can read messages by pressing **OK** or exit the by pressing **Back**.
- ▶ **Languages:** You can specify the desired broadcast language.
- ▶ **Channel setting:** You can select a channel from the channel list or add new channel where you want the messages to be received on the list. Once selected, you can edit or delete the message.

My Stuff [Menu 6]

You can view and send a picture. In addition, you can set the picture as wallpaper.

Album

Menu 6.1

Displays the list of images and video files.

- ▶ **Open:** Opens the album in which images and videos are present.
- ▶ **Delete:** Deletes a file.
- ▶ **New folder:** You can create a new folder.
- ▶ **Rename:** You can change a file name.
- ▶ **Mark / Unmark:** Marks image to Unselect All, Delete Selected, Copy Selected or Move Selected.
- ▶ **Delete all:** Deletes all files in the list.
- ▶ **Sort by:** Arranges your images/videos by Date, Type or Name.
- ▶ **List view / Thumbnail view:** Allows you to set the list view or thumbnail view type.
- ▶ **Preview style:** Offers two different preview styles, 2x2 and 3x3.

Show the list at My media/Photos in Multimedia memory.

- ▶ **View:** You can see the JPG file when pressing the OK key or selecting View menu of Option menus.
- ▶ **Play:** When you select this function, the selected video file is played.
- ▶ **Delete:** Deletes a file.
- ▶ **Set as:**
 - **Wallpaper:** Currently selected image can be set and displayed horizontally as a wallpaper.
 - **Picture ID:** Currently selected image can be set as a Picture ID.
- ▶ **Send via**
 - **Multimedia message:** Sends the selected file to another device via Multimedia message.
 - **Bluetooth:** Allows you to send a image through Bluetooth.
- ▶ **File**
 - **Rename:** Changes the file name of selected file. You can not change the extension of file.

My Stuff

- **Move to folder:** Moves the selected file to the folder.
- **Move to phone / external memory:** Moves the selected file to the phone memory/ external memory.
- **Copy to Phone / external memory:** Copies the selected file to the phone memory/ external memory.
- **Information:** Shows file information.
- ▶ **Print via Bluetooth:** Most pictures that you've taken in the camera mode and downloaded through WAP can be transmitted via Bluetooth to a printer.
- ▶ **New folder:** You can create a new folder.
- ▶ **Mark / Unmark:** Marks videos to Unselect All, Delete Selected, Copy Selected or Move Selected.
- ▶ **Delete all:** Deletes all files in the list.
- ▶ **Sort by:** Arranges your images by Date, Type or Name.

- ▶ **List view/Thumbnail view:** Allows you to set the list view or thumbnail view type.

Sounds

Menu 6.2

- ▶ **Open:** Opens the sounds files which are present in phone.
- ▶ **Delete:** Deletes a file.
- ▶ **New folder:** You can create a new folder.
- ▶ **Rename:** You can change a file name.
- ▶ **Mark / Unmark:** Marks sounds to Unselect All, Delete Selected, Copy Selected or Move Selected.
- ▶ **Delete all:** Deletes all the files in the list.
- ▶ **Sort by:** Arranges your video by Date, Type or Name.
- ▶ **Play:** You can play the MP3 file when pressing OK key or selecting Play menu of **Option** menu.
- ▶ **Delete:** Deletes a file.

- ▶ **Set as ringtone:** Currently selected sound can be set as a Ringtone
- ▶ **Send via:**
 - **Multimedia message:** Sends the selected file to another device via Multimedia message.
 - **Bluetooth:** Sends the selected file to another device via Bluetooth.
- ▶ **File:**
 - **Rename:** Changes the file name of a selected file.
 - **Move to folder:** Moves the selected file to the folder.
 - **Move to phone / external memory:** Moves the selected file to the phone memory/ external memory.
 - **Copy to Phone / external memory:** Copies the selected file to the phone memory/ external memory.
 - **Information:** Shows file information.

- ▶ **New folder:** You can create a new folder.
- ▶ **Delete all:** Deletes all the files in the list.
- ▶ **Sort by:** Arranges your sound by Date, Type or Name.

Others

Menu 6.3

The Others folder is used to store files which cannot be stored in album and sounds. You may find that when you transfer files from your computer to your phone, they appear in the Others folder.

Any type of file can be stored here. This folder is mainly used for transporting files from one PC to another.

The handset can preview JPG, GIF.

You can set an image file as wallpaper as long as it does not exceed 30k in size. For other formats please use the PC Suite.

- ▶ **Open:** Opens all of the others files you have on your phone.
- ▶ **Delete:** Deletes a file.

My Stuff

My Stuff

- ▶ **New folder:** You can create a new folder.
- ▶ **Rename:** You can change a file name.
- ▶ **Mark / Unmark:** Marks files in others folder to Unselect All, Delete Selected, Copy Selected or Move Selected.
- ▶ **Delete all:** Deletes all the files in the list.
- ▶ **Sort by:** Arranges your files in others folder by Date, Type or Name.
- ▶ **View or install:** You can view or install the others file when pressing **OK** key.
- ▶ **Delete:** Deletes a file.
- ▶ **Send via:**
 - **Multimedia message:** You can view or install the others file when pressing **OK** key.
 - **Bluetooth:** Sends the selected file to another device via Bluetooth.
- ▶ **File:**
 - **Rename:** Changes the name of a selected file.
 - **Move to folder:** Moves the selected file to the folder.
 - **Move to phone / external memory:** Moves the selected file to the phone memory/ external memory.
 - **Copy to Phone / external memory:** Copies the selected file to the phone memory/ external memory.
 - **Information:** Shows file information.
- ▶ **New folder:** You can create a new folder.
- ▶ **Mark / Unmark:** Marks files in others folder to Unselect All, Delete Selected, Copy Selected or Move Selected.
- ▶ **Delete all:** Deletes all the files in the list.
- ▶ **Sort by:** Arranges your files in others folder by Date, Type or Name.

External memory Menu 6.4

This menu allows you to view Images, Sounds, Videos, and Others in memory card. If external memory is not inserted, External memory option is not displayed in My stuff.

Memory status Menu 6.5

You can check free space and memory usage of phone, SIM card and external memory (if inserted).

Profiles [Menu 7]

You may set up the following different profiles to adapt to different environmental conditions. Your phone provides 7 different profiles. More details of the 7 profiles are introduced as below.

- ▶ **General:**
Standard profile is the phone's default setting.
- ▶ **Meeting:**
Ring volume is set to be low and key tone is switched off.
- ▶ **Outdoor:**
Ring and key tone volume is set to loud.
- ▶ **Vibrate only:**
Ring and key tone volume is set to off and vibrator is switched on.
- ▶ **Headset:**
Profile for headset plug-in.
- ▶ **Silent:**
Ring volume and vibrator is set to be off
- ▶ **Bluetooth:**
Profile when Bluetooth accessories is connected.

Note

The indicator displays on the phone screen after setting the profile mode.

To activate the Profiles

Follow the below steps to activate the profiles in the **Profiles** menu.

1. From the main menu, use your navigation keys up/down to select **Profiles** and press **OK**.
2. Select a desired profile and press the  center key or **Options** to activate the profile you want to use.

To edit the Profiles

You can customize the profiles of **General / Meeting / Outdoor / Vibrate only / Headset / Silent / Bluetooth** to meet your needs.

1. From the main menu, select **Profiles** and press **OK**.
2. Select a desired profile and press **Options**.
3. Select **Customize** and press **OK**.
4. Select a desired option to customize.

Your phone provides the following options when you select **Profiles** > **General** / **Outdoor** / **Headset** / **Bluetooth** > **Options** > **Customize**.

- ▶ **Tone Setup:** Sets desired ring tone.

Note

Please be careful not to injure your ears when ring volume is set high.

- ▶ **Volume:** Adjusts the volume of ring tone and key tone.
- ▶ **Alert Type:** Selects different alert types (Ring, Vibrate only, Vibrate & Ring, Ring after Vibrate, and Beep Once)
- ▶ **Intelligent call:** Allows your phone to have a phone number pronounced before ringing.
- ▶ **Ring Type:** Toggles between single, repeat, ascending.
- ▶ **Extra Tone:** You can set the current music on playing MP3 file as a extra tone.
- ▶ **Answer Mode:** Toggles between on/off answer modes by pressing any key.

Contacts [Menu 8]

Your contacts is saved either on the SIM card's memory or Phone's memory. You can also choose to save on both.

Search

Menu 8.1

Allows you to search names and numbers saved in the contacts.

To search a number and a name

1. From the main menu, select **Contacts** and press **OK**.
2. Select **Search** and press **OK**.
3. Key in full name or first character of contact person's name. The contact list automatically jumps to the first contact with the same corresponding character.
4. Select the one you wish to call by pressing the  key to make a call.

Or

1. In the idle status, press the  right soft key to enter **Contacts** menu.
2. Follow same steps as above.

Note

In the search mode, you might press  key to change the input method.

You can also press **Options** to change the input method or edit the selected phone number.

Your phone provides the following options when you select **Contacts > Search > Options** from the main menu.

- ▶ **View:** Displays contact information.
- ▶ **Edit:** Allows you to edit name & phone number of the contact.
- ▶ **New Message:** Allows you to send either SMS or MMS to the selected contact.
- ▶ **Send vCard:** Allows you to send a vCard to the selected contact person.
- ▶ **Delete:** Deletes the selected contact's information.
- ▶ **New contact:** Adds a new contact to the phonebook.
- ▶ **Copy:** Copies the contact's information to the phone or the SIM card (depending on where you have saved the phone number).

- ▶ **Move:** Moves selected contact information to phone or SIM.
- ▶ **Input method:** Choose the language to use.
- ▶ **Duplicate:** Duplicates the selected contact's information on the same storage medium.

New contact Menu 8.2

Allows you create a new entry into the **Contacts** menu. Your phone allows you to save 1000 entries of phone numbers.

To create a new entry

1. From the main menu, select **Contacts** and press **OK**.
2. Select **New contact** and press **OK**.
3. Select **Storage** location to the SIM card or to the Phone.
4. Select **Name** and press **Edit**. Then enter the name of the entry and press **Options**.
5. Select **Done** and press **OK**.
6. Press the navigation keys down and press **OK**. The phone then displays a "saving" message.

7. Select **Yes** and press the  center key. Then the phone screen displays "Done".

Caller group Menu 8.3

There are five default groups on the phone. You can edit each group's name with different tone/picture/video and member list. With the caller group function, you can send a message to all members of a group at the same time.

To create an entry into a caller group

1. From the main menu, select **Contacts** and press **OK**.
2. Select **Caller group** and press **OK**.
3. Choose a group and press **OK**.
4. Choose **Member List** and press **OK**.
5. Press **Options > Add** and press **OK**. Then you may choose from **Contacts**.

Note

Your phone provides 5 caller groups including: Friends, Family, VIP, Business & Others.

Contacts

Your phone provides the following options:

- ▶ **Group name:** Group includes Friends, Family, VIP, Business and Others.
- ▶ **Ring tone:** Allows you to set the profile of ring tone for a particular call group.
- ▶ **Pictures:** Allows you to set a picture for a group.
- ▶ **Video:** Allows you to set a video clip for the group.
- ▶ **Member list:** Allows you to add a member in the specified group.

Speed dial

Menu 8.4

If you assign a number to one of the speed dialing keys (from  to ) saved in the Contacts, you can call the phone number by holding the key in standby mode.

To turn on the speed dial

1. From the main menu, select **Contacts** and press **OK**.
2. Select **Speed dial** and press **OK**.
3. Select **Enable speed dial** and press **OK**.

4. Select **On** and press **OK** turn on the speed dial function. Then the phone screen displays “Done”.

To set a speed dial number

1. From the main menu, select **Contacts** and press **OK**.
2. Select **Speed dial** and press **OK**.
3. Select **Set number** and press **OK**.
4. Select an empty number and press **Options**.
5. Press **Edit** and press **OK**.
6. Select an entry you want to set as a speed dial number and press **OK**. Then the phone screen displays “Done”.

My vCard

Menu 8.5

You can edit your vCard information and share it with others from this option. Select **Contacts > Search > Options > Send vCard** to send your vCard from the main menu.

Extra Number Menu 8.6

Allows to you edit **owner number**, **Service dial number** and **SOS number** for your personal preference.

Note

Your service provider may program some special phone numbers into your SIM card. It is not possible to modify the **Service dial numbers** if not supported.

Settings Menu 8.7

Your phone provides you various setting options to personalize your phone, including,

1. **Caller picture:** Allows you to use your friend's photo or any other picture as his/her picture ID when calling.
2. **Caller ring Tone:** Allows you to personalize the incoming ring tone for specific contacts or caller groups in your contact list.
3. **Caller video:** Allows you to use certain video clips for specific contacts in your list.

4. **Memory status:** You can check what percentage of the phone's internal memory is unoccupied and how many name and number entries can still be stored in the SIM card and Phone's memory.
5. **Preferred storage:** You can choose your preferred storage on the phone, the SIM or both.
6. **Fields:** You can customize the contact information you want to show on your display.
7. **Name list filter:** You can edit your vCard information and share to others from this option.

Note

You can get PC suite tool via www.lgmobile.com. PC suite tool allows you to manage your contact lists stored on your phone or the SIM card.

Tools [Menu 9]

Alarm

Menu 9.1

This function allows you to set the alarm to ring at the time specified. The alarm clock works even when the phone is switched off.

1. From the main menu, select **Tools** and press **OK**.
2. Select **Alarm** and press **OK**.
3. Select an alarm and press **Edit**.
4. Use the navigation keys left/ right to switch values and up/ down to select options in editing screen.
5. Press **Done** and press **Yes** by pressing the  center key.
6. Choose Once/Everyday/Days/ hourly for your desired ringing mode followed by pressing **OK**.

Time Teller

Menu 9.2

This function tells you the current time. Select **Tools > Time teller** to enable or disable the time teller, and then press **OK** to confirm. When you enable this function, you can listen to the time hourly.

Note

The voice time teller is set to 12-hour time format (AM/PM).

World clock

Menu 9.3

You can select the city simply by pressing the navigation keys left/right. When the cross points out a certain city, it will show the local date and time. You can also press **Options** to turn on/off **Daylight Saving Time for foreign City** and to select **Set Home City** to save as your home city.

Calculator

Menu 9.4

The calculator applies simple calculator functions such as addition, subtraction, multiplication and division.

Unit Converter

Menu 9.5

This feature helps you to convert Weight and Length from one unit to another

Currency converter

Menu 9.6

This feature helps you to convert foreign currencies. Within Currency converter, you can input the exchange rate and insert the amount to convert Local to Foreign currencies.

Health

Menu 9.7

There are two features, BMI and Menstrual, in the healthy option.

BMI (Body Mass Index)

This function helps to calculate your body fat in relation to your height and weight.

To calculate the BMI value process:

1. From the main menu, select **Tools** and press **OK**.
2. Select **Health** and press **OK**.
3. Select **BMI** and press **OK**.
4. Select your gender by pressing navigation key left/ right and select the options by pressing navigation keys up/ down.
5. Enter your height in centimeters and weight in kilos by using the numeric keys and press **OK**. Then your BMI ratio is calculated and displayed on the phone screen.

Menstrual

This feature helps to calculate a women's menstrual cycle and provide the following:

- ▶ Probability of becoming pregnant on the current date.
- ▶ Period during which it is possible to become pregnant.
- ▶ Date of next period.

To check the menstrual cycle

1. From the main menu, select **Tools** and press **OK**.
2. Select **Health** and press **OK**.
3. Select **Menstrual** and press **OK**.
4. Enter the starting date of the last period.
5. Enter the average length of the menstrual cycle followed by pressing **OK**.
6. Select the date you highlighted and press **OK** to display pregnancy in detail.

Note

The result may not fit to your physical condition. This is only a reference!

Tools

Tools

STK (SIM dependent) Menu 9.8

In addition to the functions available in the phone, your service provider may offer additional applications such as weather or stock market information via the SIM card.

To set the STK service

In **Tools** menu, choose **STK**, press **OK** to connect the service.

Note

- ▶ For availability, you need to register the service with your service provider.
- ▶ Accessing these services may involve sending an SMS for which you may be charged.

Browser [Menu *]

Services described in the following are supported by your service provider. If you cannot connect to either one of those services, contact your service provider for further information.

WAP

Menu *.1

Your phone supports Web Browsing. You can obtain various services such as up-to date news, weather, sports, and other information as well as e-mail and other Internet services. These services are designed and maintained by your WAP service provider. The WAP service uses Wireless Markup Language (WML) on their WAP pages. You cannot view standard Internet web pages on your phone.

Note

- ▶ To activate your WAP service, you may need to contact your service provider.
- ▶ Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

Homepage

To access the browser from the standby mode, go to WAP in Menu and press Homepage. Once connected, the homepage is displayed. The content depends on the service provider.

To exit the browser

In browsing status, press the  key to exit the browsing status.

Google Search

You can do a search by using the Google Search.

Bookmarks

You can use this menu to save URL addresses to quickly access your favorite websites.

Your phone also provides you for the following options.

- ▶ **Go to:** Allows you to connect to a website.
- ▶ **Edit:** Allows you to edit URL addresses.
- ▶ **Send:** Allows you to send URL addresses via SMS/MMS.

Browser

- ▶ **Delete:** Deletes selected bookmarks.
- ▶ **Delete all:** Deletes ALL bookmarks.
- ▶ **Add Bookmark:** Adds URL addresses to bookmark list.

Recent Pages

You can view the recent pages you have visited. Press **Go to** to connect to the selected page.

Enter Address

You can key in the URL address and enter the address followed by selecting **Done**. Your phone will connect the URL you just keyed in. After the address is entered, you may select the URL and press **OK** to connect next time.

Service Inbox

Your phone is able to receive service message from your service provider. Service messages are notifications of headlines or content, and they may contain the address of a WAP service. You can get updated news or new WAP settings from your service provider.

The received WAP push messages are stored in the service inbox. You can press **Option** to either **Accept** or **Delete** the push messages.

Settings

GPRS (General Packet Radio Service) is a technology used for sending and receiving data over the mobile network. The applications that use GPRS are WAP services, MMS and SMS messaging and GPRS dial-up (such as Internet and e-mail). You can set the phone to automatically register to a GPRS network when you switch the phone on.

To activate WAP

- ▶ If the WAP settings have been set by the service provider, you can use the GPRS or GSM Data immediately.
- ▶ If access to the WAP profiles have already been assigned by your service provider, select a profile and activate it.
- ▶ You can set the WAP settings manually. Then you have to contact your network operator or service provider for appropriate settings.

To edit the service settings manually

1. From the main menu, select **Browser** and press **OK**.
2. Select **WAP** and press **OK**.
3. Select **Settings** and press **OK**.
4. Select the **Edit profile** and press **OK**.
5. Choose a profile and press **OK**.
6. Select **Edit profile** and press **OK**.
7. Press **Edit** to start setting and press **Options**.
8. Select **Done** and press **OK**.

To edit profile

You can activate the WAP settings, please choose **Activate Profile**, and then press **OK** in **WAP Profile** mode. Or you may edit the profile. The options include: **Rename**, **Homepage**, **Data Account**, **Connection**, **Username**, and **Password**. If you need to get more information, please contact your network service provider.

Note

In most cases, you only need to use one of the default profiles to access the Internet. The settings are different from operator to operator. Please consult your operator or service provider for the correct settings and proceed with care. Improper settings will cause the connection to fail.

To activate the WAP settings

After finishing the WAP settings, please choose **Activate Profile**, and then press **OK** in **WAP Profile** mode.

Browser options

You can set the timeout value for the browser. (The phone will stop the browser if not connected within the set time). You can also enable/disable images to affect browsing speed.

Service message settings

You can choose either receive or not receive the service message which is saved in the service inbox sent by your service provider.

Browser

Browser

Clear cache

The information or data you have accessed is all stored in the cache of the phone. A cache is a file buffer used to temporarily store data. You can clear the history by selecting this option.

Clear cookies

To alleviate privacy and security concerns, (In case of lost or stolen phone) clear all cookies that may contain sensitive information.

Trusted certificates

Displays trusted web certificates while browsing and manages your "trust list".

Data account Menu *.2

Default data accounts based on major operators at the time this phone was manufactured are provided.

You can access WAP via **GSM** or **GPRS**.

- ▶ To get the analogue or ISDN number information, you may need to contact your operator.

- ▶ To get the access point of GPRS, you may need to contact your operator.

GSM data

1. From the main menu, use the navigation keys to select **Browser** and press **OK**.
2. Select **Data account** and press **OK**.
3. Select **GSM data** and press **OK**.
4. Press **Edit** to change the settings of data account: **Account name/ Number/ User name/ Password/ Line Type/ Speed** and **DNS**.

GPRS

1. From the main menu, select **Browser** and press **OK**.
2. Select **Data account** and press **OK**.
3. Select **GPRS** and press **OK**.
4. Press **Edit** to change the settings of your data account: **Account name/ APN/ User name/ Password/ Auth. type**.

Connectivity [Menu 0]

Functions in the submenu of Connectivity allow you to have connection between a phone and other devices.

Bluetooth

Menu 0.1

Your phone is designed to be compliant with Bluetooth technology V1.2. Bluetooth technology enables wireless connections between electronic devices. The Bluetooth connection can be used to listen to stereo music, send images, video, texts and vCards.

To start using Bluetooth technology

Your Bluetooth connection needs to be configured prior to operation. Once setup is complete, the following Bluetooth icons will appear in the status bar.

-  : Bluetooth is active and connected
-  : Does not broadcast to other Devices.

To pair with Bluetooth Audio Device

1. From the main menu, select **Connectivity** and press **OK**.
2. Select **Bluetooth** and press **OK**.
3. Select Power and press **OK** to switch On/ Off the Bluetooth connectivity of your phone and the device you wish to connect first.
4. Press **Inquiry Audio Device**. Your phone will automatically search and pair the device.
5. Press **Bond** to pair your phone with the headset.
6. Add the headset to the trust list and connect to the headset by pressing **Yes**.

Note

- ▶ Before using the headset, please make sure your device has been fully charged.
- ▶ Whenever your phone is connected with the device, a pop-up notification will appear.

Connectivity

Note

- ▶ Once added to the Trust List, the headset will appear in **My Device** list. (Once added to **My device**, reconditions can be established with ease).
- ▶ All active devices are managed in **Active device** and can be disconnected by pressing **Disc**.

To pair with Bluetooth Devices

1. From the main menu, use the navigation keys to select **Connectivity** and press **OK**.
2. Select **Bluetooth** and press **OK**.
3. Select **My device** and press **Options**.
4. Select **Inquire new device**.
(Your phone begins searching for Bluetooth devices.)

To connect with Bluetooth Devices

1. From the main menu, select **Connectivity** and press **OK**.
2. Select **Bluetooth** and press **OK**.

3. Select **My device** and choose the Bluetooth device you wish to connect.
4. Press **Options** and select **Connect**.
5. After connecting the Bluetooth device, your phone asks which profile you wish to connect (it depends on how many profiles your Bluetooth device supports).

To edit a device in your device list

Your phone provides the following selections when you highlight a device in **My device** and press **Options**.

- ▶ **Connect**: Connect devices supporting Bluetooth technology.
- ▶ **Add new**: Searches for new devices.
- ▶ **Rename**: Rename target device.
- ▶ **Delete**: Delete selected items in your trust list.
- ▶ **Delete all**: Delete all items in your trust list.
- ▶ **Service list**: Access profiles supported by devices you have added into your trust list.

To use your mobile phone as modem

Your phone can be used as modem for dialing up a network. This function can only be used by PC supported Bluetooth technology. Check with your service provider details.

To send data using Bluetooth connectivity

1. Activate Bluetooth. and select the object you wish to send.
2. Press **Option** and select **Send via**.
3. Choose To **Bluetooth**. (Phone will search for devices).
4. Select the desired device and Send..

To receive data using Bluetooth connectivity

When data via Bluetooth is received, a pop-up notification will appear. If you wish to accept the transfer, press **OK**.

You can change the location of the current folder from **Connectivity >**

Bluetooth > Setting > FTP Setting > Shared Folder to relocate your folder and define the access right of the folder as **Fully Control** or **Read only** in **Connectivity > Bluetooth > Setting > FTP Setting > Access Right**.

To receive data from PC

Your phone allows you to browse and transfer files from a PC. Your PC must support Bluetooth Technology. (Consult your PC manual).

1. From the main menu, use the navigation keys to select **Connectivity** and press **OK**.
2. Select **Bluetooth** and press **OK**.
3. Activate Bluetooth on both the handset and PC. Select **Inquiry device** by pressing **OK**.
4. If the PC is configured properly "Connected PC" appears in **My Device**.
5. Press **Options** and select **FTP profile** to connect.
6. Data can now be managed across both devices.

Connectivity

To listen to stereo music

1. From the main menu, select **Connectivity** and press **OK**.
2. Select **Bluetooth** and press **OK**.
3. Select **My device** and highlight a device you wish to connect.
4. Press **Options** to select **Service list** and choose **Headset profile**.
5. You will see a list of profiles supported by your headset.
6. Select **A2DP profile** and then press left soft key to connect.

Note

Your Bluetooth headset must be paired first. Then simply select it under **My device**.

To setup your Bluetooth technology

Your setting list includes:

- ▶ **Visibility:** You can make your phone both visible or invisible to searches by other devices.
- ▶ **Change device name:** Change your device name, as it appears on other devices.

- ▶ **Authentication:** Requires your approval before allowing another device to connect to your phone.
- ▶ **Audio path:** Toggles the audio path between phone or headset.
- ▶ **FTP settings:** Customize your phone's shared folders and access privileges.

Note

Keeping your phone on invisible mode and connecting only to devices you trust, is the safest way to avoid malicious software attacks.

About

You can find out your device name, BD address, and supported service information here. Your phone supports the following Bluetooth profiles: HSP (headset-free), HFP (hands-free), SPP (serial port), DUN (dial-up networking), OPP, FTP (file transfer profile), A2DP (advanced audio distribution profile), AVRCP & BPP.

Network

Menu 0.2

Preferred Networks

Preferred networks is used when the mode has been set to Automatic. The location numbers in the preferred network list show the search priority. Your service provider's network will be displayed. You can select your GSM/GPRS network if your provider offers multiple network choices. (Remember to apply the international roaming service while traveling abroad)

Your phone provides the following options:

- ▶ **Add From List:** Can select from over 300 networks worldwide.
- ▶ **Create New:** Creates a new network list by entering MCC/MNC information and adjusting the priority setting.
- ▶ **Change Priority:** Changes the priority settings in your preferred network list.
- ▶ **Delete:** Deletes selected item.

GPRS Connection

The handset can toggle the GPRS connection status between **Always/When Needed**.

Settings [Menu #]

Time & Date

Menu #.1

This function allows you to set your home city, view and change the time and date settings in your phone. You can also choose to auto update the date and time.

To set home city

1. From the main menu, select **Settings** and press **OK**.
2. Select **Time & Date** and press **OK**.
3. Select **Set Home City** and press **OK**. All major cities are displayed.
4. Press the navigation keys up/ down to select a home city or press the first Character of home city for quick search.
5. Press **OK**.

To set time & date

1. From the main menu, select **Settings** and press **OK**.
2. Select **Time & Date** and press **OK**.
3. Press **Set time & date** and press **OK**.

4. Edit the time & date by pressing numeric keys and turn on/off the daylight saving navigation keys – left/ right.
5. Press **OK**. (screen displays “Done”).

To set time & date format

1. From the main menu, select **Settings** and press **OK**.
2. Select **Time & Date** and press **OK**.
3. Press **Set Format** and press **OK**.
4. Edit the **Time Format** or **Date Format** by pressing the navigation keys up/ down to select values and left/ right to select options.
5. Press **OK**. (screen displays “Done”).

To setup auto update

If enabled, the phone will automatically update the time and date according to time zone.

1. From the main menu, select **Settings** and press **OK**.

2. Select **Time and Date** and press **OK**.
3. Press **Auto update** and press **OK**.
4. Select **On** or **Off** and press **OK**.

Note

Auto update does not change alarms or calendar notes and may cause some alarms to expire.

Display

Menu #.2

This feature allows you to personalize your display setting with the following:

- ▶ **Wallpaper:** Changes the idle screen wallpaper
 1. From the main menu, select **Settings** and press **OK**.
 2. Select **Display** and press **OK**.
 3. Select **Wallpaper** and press **OK**.
 4. Select **System** or **User define** and press **OK**.
 5. Select a desired wallpaper and press **View**.
 6. Press **OK** to select as wallpaper and select **Back** to choose other wallpapers.
- ▶ **Screen saver:** Disable or Choose screensaver
 1. You can disable or define the screen saver start time. (5 sec to 1 min)
 2. To choose your screen saver select **System** or **User Define**.
- ▶ **Power on/off display:** This phone allows you to set the power-on/off animation from system, phone/card memory or disable animation.
- ▶ **Main Menu Style:** Enable you to select Main Menu style
- ▶ **Theme:** Enables you to change the theme
- ▶ **Greeting Text:** Enable you to edit any message for your welcome note when power on
- ▶ **Backlight Timer:** Adjusts LCD brightness and dim timer.
- ▶ **Brightness:** Adjust LCD brightness.

Settings

- ▶ **Lighting:** Enables/ disables the top LED lighting effect. KM330 has different lighting effects for incoming calls, incoming message(s), missing call(s), alarm, whenever you play music or press camera shutter.
- ▶ **Show date & time:** Displays or hide time & date on idle screen.
- ▶ **Show home shortcut:** Enables/ disables “jump to” shortcuts on the idle status screen.
- ▶ **Show Broadcast Message:** Display broadcast info on idle screen
- ▶ **Show Call Information:** Display call info on idle screen
- ▶ **Show Owner number:** Displays or hides your number on the idle screen.
- ▶ **Show Operator name:** Displays or hides your name on the idle screen.

Phone

Menu #.3

Schedule Power On/Off

This function allows you to schedule an idle time for the phone.

1. From the main menu, select **Settings** and press **OK**.
2. Select **Phone** and press **OK**.
3. Select **Schedule Power On/Off** and press **OK**.
4. Highlight a default time and press **Edit**.
5. Decide whether to enable the Status, to select **On** or **Off** and to specify a time, then press **OK**. (screen displays “Done”).

Language

To set the Language

This phone allows for different display languages.

1. From the main menu, select **Settings** and press **OK**.
2. Select **Phone** and press **OK**.
3. Select **Language** and press **OK**.
4. Choose a desired language and press **OK**. (screen displays “Done”).

Flight Mode

This allows you to use only those phone features that do not require the use of the wireless network,

for example when you are in an airplane or in places where the wireless network is prevented.

- ▶ **Normal Mode:** GSM/GPRS network is available. You may make a call.
- ▶ **Flight Mode:** GSM/GPRS is disabled. You cannot make a call.
- ▶ **Query When Power On:** You must select either Normal Mode or Flight Mode while the phone is on.

Call

Menu #.4

Caller ID

You can decide how to present your identity by selecting **Set via network**, **Hide ID**, or **Send ID** when you make a call.

Call Waiting

A network service that allows notification to another caller, during an existing call.

1. From the main menu, select **Settings** and press **OK**.

2. Select **Call** and press **OK**.
3. Select **Call waiting** and press **OK**.
4. Select **Activate**, **Deactivate** or **Query status** and press **OK**.
5. Selecting **Query status** will enable you to see if the service is activated or deactivated.

Call Divert

You can set the call condition by which calls are diverted to another number.

To set call divert

1. From the main menu, select **Settings** and press **OK**.
2. Select **Call** and press **OK**.
3. Select **Call Divert**, then press **OK**.
4. Select an item and press **OK**.
5. Select **Activate**, **Deactivate** or **Query Status** and press **OK**.
6. Select **To new number** or **To Voice Mail** and press **OK**. (screen displays "Done").
7. Enter the number you want calls to be diverted to and press **OK**.

Settings

Your phone provides the following divert options:

- ▶ **Divert All Voice Calls:** All voice calls are diverted.
- ▶ **Divert If Unreachable:** Calls are diverted when you are out of range of your provider.
- ▶ **Divert If No Answer:** Calls are diverted when the call is not answered.
- ▶ **Divert If Busy:** Calls are diverted when your phone is engaged on other calls.
- ▶ **Divert All Data Calls:** All data calls are diverted.
- ▶ **Cancel All Diverts:** Cancel the above settings.

Call Barring

A network service allows you to restrict incoming and outgoing calls on your phone. A password is required for this function.

- ▶ **Outgoing Calls:** Bars all calls.
- ▶ **Incoming Calls:** Bars all calls when roaming.
- ▶ **Cancel All:** Cancels barring settings (Requires Password)

- ▶ **Change Barring Password:** You can edit barring password here. Contact your provider for default password. This menu enables you to change your barring call password.

Note

Both lines can be answered regardless of which is selected, however If you don't subscribe to such a service and set your phone to Line 2, you will not be able to make calls.

Line Switching

This function allows you to make line switches by selecting **Line 1** or **Line 2**.

Call reminder

This function allows you to set a time reminder during a call.

1. From the main menu, select **Settings** and press **OK**.
2. Select **Call** and press **OK**.
3. Select **Call reminder** and press **OK**.
4. Press **OK**. Select an item.

5. Press **OK** to confirm. (screen displays “Done”).

Your phone provides the following time alert selections options:

- Off
- Single
- Periodic

Note

The minimum Periodic time is 30 seconds.

Call Time Display

This function allows you to enable/disable displaying the call time.

Auto Redial

This function allows you to set auto redial function. Select **On** and your phone will make a maximum of ten attempts to connect the call after an unsuccessful call attempt.

Closed User Group

This function allows you to set the limited call group. Only the person in the specific group is allowed to make call to and receive call from.

Security

Menu #.5

SIM Lock

This function allows you to lock the SIM card with a specific PIN number. The feature is designed to prevent the use of your SIM card if your phone becomes lost.

You can switch SIM lock on/off by inputting the PIN code.

Phone Lock

Switches the phone lock on/off. Enabling phone lock requires a password. (default is 0000).

Auto Keypad Lock

This allows you to automatically lock your phone's keypad to prevent accidental pressing of any keys.

Follow the below steps to set up this function.

- ▶ From the main menu, select **Settings** and press **OK**.
- ▶ Select **Security** and press **OK**.
- ▶ Select the **Auto Keypad Lock** and press **OK**.
- ▶ Use the navigation keys to select a desired option and press **OK**.

Settings

Settings

Fixed Dial

If your SIM supports this feature, you can toggle the restricted call settings.

Barred Dial

You can switch mode on and off to have a restricted call. However, you need to check your SIM card supports this function or not.

Anti Theft Mobile Tracker

Anti Theft Mobile Tracker (ATMT) allows you to track your lost phone. When someone uses your phone without your permission, the tracking service will be active. You are reminded by a text message sent to the default phone number you have set, without the unauthorized user's knowledge. You can always activate the ATMT and configure your personal settings.

To activate this function:

1. From the main menu, select **Settings > Security > Anti Theft Mobile Tracker** and press **OK**.
2. Select **Set ATMT** and press **OK**.

3. Switch **On** or **Off** and press **OK**.
4. Input the ATMT code to enable or disable this function.

Note

The default ATMT code is "0000". You have to enter the code before configuring the ATMT settings.

To change the ATMT code:

1. From the main menu, select **Settings > Security > Anti Theft Mobile Tracker** and press **OK**.
2. Select **Change ATMT code** and press **OK**.
3. Input the old ATMT code and press **OK**.
4. Input the new ATMT code and press **OK**.
5. Enter again the new ATMT code and press **OK**.

To configure the ATMT settings:

1. From the main menu, select **Settings > Security > Anti Theft Mobile Tracker** and press **OK**.
2. Select **Number for ATMT** and press **OK**.
3. Press **Edit**.

4. Input the ATMT code and press **OK**.
5. Press **OK** and then **Yes** to save your settings.

Change Password

- ▶ **PIN:** This allows you to change the PIN number.
- ▶ **PIN2:** This allows you to change the PIN2 number.
- ▶ **Phone lock:** This allows you to change the password.

Restore factory settings

Menu #.6

This function allows you to reset the entire phone to its factory defaults. (Password protected.)

Troubleshooting

Troubleshooting

Problem	Possible Solution
Telephone cannot be switched on	Please take out battery and insert again. Then press  to power on the phone.
Battery empty	Charge battery. Check charging indicator on display.
The battery doesn't charge properly or the phone sometimes turns itself off	Wipe the charging contacts, both on the phone and on the battery, with a clear soft cloth.
Usage time of battery becomes shorter	If the battery time is short, it may be due to the user environment, a large volume of calls, or weak signals.
Charging error – Temperature out of range	Make sure the ambient temperature is right, wait for a while, and then charge again.
Charging error – Wrong charger	Only use original LG accessories.
Charging error – Battery defective	Replace battery.
Charging error – No battery icon appears when charging	The battery is empty or has been not used for a long time. It may take a while before the battery icon appears on the screen.
Forgot the phone code or password	The default phone code is “0000”.
Enter PUK	The PIN code has been entered incorrectly three times in succession, and the phone is now blocked. Enter the PUK supplied by your service provider.
Loss of Network	You may be in a weak signal area. Move and try again. You are trying to access an option for which you have no subscription with your service provider. Contact the service provider for further details.
You have entered a number but it was not dialed	Be sure that you have pressed  . Be sure that you have accessed the right network service. Be sure that you have not set an outgoing call barring option. Be sure that you have entered the area code.

Problem	Possible Solution
Your correspondent cannot reach you	Be sure that your phone is switched on. Press  for more than one second. Be sure that you are accessing the network service. Be sure that you have not set an incoming call barring option.
Your correspondent cannot hear you speaking	Be sure that you have switched off the loudspeaker. Be sure that you are holding the phone close enough to your mouth. The microphone is located at the bottom of the phone.
The voice quality of the call is poor	Check the signal strength indicator on the display  . The number of bars indicates the signal strength. Try moving the phone slightly or moving closer to a window if you are in a building.
No number is dialed when you recall a Contacts entry	Use the Contacts/Search feature to ensure the number has been stored correctly. Resave the number, if necessary.
Cannot use the Internet/WAP	Your subscription does not include data capability. You will need to contact your service provider to enable the service.
Cannot user MMS/picture messages on your phone	Your subscription does not include data capability. You will need to contact your service provider to enable the service.
If the above guidelines do not help you to solve the problem	Take note of the model number of your mobile phone and a clear description of the problem. Contact your phone dealer or LG Service Center for help.

Emergency calls

Emergency calls

Important:


This phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user programmed functions. Because of this, connections in all conditions cannot be guaranteed. Therefore, you should never rely solely upon any wireless phone for essential communications (e.g. medical emergencies).

Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service provider.

Accessories


There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.

Standard Battery

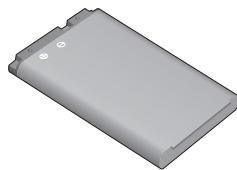

USB cable

You can connect your phone to PC to exchange the data between them.

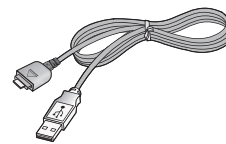

Stereo headset

Allows hands free operation.




Note

- ▶ Always use genuine LG accessories. Failure to do this may invalidate your warranty.
- ▶ Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

Travel Adapter

This charger allows you to charge the phone's battery.

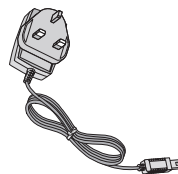

Technical data

Technical data

General

Product name : KM330

System : GSM 900 / DCS 1800 / PCS 1900

Ambient Temperatures

Max : +55°C (discharging)
+45°C (charging)

Min : -10°C

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri Band Terminal Equipment

Model Name

KM330

Trade Name

LG

C E 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v1.2.1
EN 60950-1 : 2001
EN 50360/EN 50361 : 2001
EN 301 511 V9.0.2
EN 300 328 V1.7.1

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, Fax : +31 - 36 - 547 - 8794
e-mail : jacob @ lge.com

Name

Issued Date

Seung Hyoun, Ji / Director

17. November. 2008

Signature of representative

MEMO





Warranty Card
產品保用證

Mobile Phone
手提電話

The lower half of the page is a form area. On the left side, there are several sets of wavy, horizontal lines that resemble stylized waves or a topographical map. To the right of these waves, the page is filled with horizontal ruling lines, providing space for text entry. The entire form area is set against a light gray background.

Warranty Card

產品保用證

LG Customer Care Centre

客戶維修服務中心



**Welcome to contact for detailed information
& Customer Care Centre address**

歡迎致電查詢詳細資料及維修服務中心地址

Customer Service Hotline 客戶服務熱線 : (852) 3543 7777

E-mail Us 客戶查詢電郵 : cshelpdesk@lge.com

LG Website 瀏覽網站 : hk.lge.com

**Thank you for your purchase of LG Electronics product under the terms and
conditions listed on this warranty card.**

多謝閣下購買及使用本公司之產品，請參閱保用證所列之產品保用條款。

**IMPORTANT : Please keep and present this warranty card and purchase invoice when services are rendered.
Otherwise, this warranty will be voided.**

重要事項：顧客請保留此保用證和購貨發票，並需在檢查／維修時出示，否則保用無效。

Mobile Phone Warranty Policy

HK Area
香港地區

手提電話保用條款

- (1) LG Electronics Hong Kong Limited (hereafter LGEHK) provides warranty period from the date of purchase are as follows and only valid for mobile purchase in Hong Kong only (any promotion gift item is not included) :
 - (i) Handset :12 months
 - (ii) Charger :6 months
 - (iii) Battery :6 months
 - (iv) Hand free earphone :3 months.
- (2) Warranty is valid only for authorized product; parallel import and counterfeit product are invalid.
- (3) Product is under warranty against manufacturing defects by reason of faulty workmanship or internal electronic parts materials. This warranty does not cover defects arising from natural wear of the product (including casing, key pad, display, antenna, and accessories. etc.)
- (4) If check-up or repairing are required, customer must present the original invoice and warranty card on which the relevant IMEI number was printed. Upon any failure to present the above documentation, customer must pay for the costs of the services provided.
- (5) All parts replaced within the warranty period are the property of LGEHK. We have rights to handle those parts as necessary.
- (6) Data stored in handsets may be lost after the repair and thus should be properly stored by customer beforehand.
- (7) Warranty will be voided under the following conditions, and LGEHK reserves the right to refuse providing service and/or shall demand charges for any costs of servicing from customer :
 - (i) Product has been tampered with or undergone unauthorized repair by third parties, improper installation, alternation or modification to this product, or damage, tearing, removal of the warranty sticker that is affixed to this product.
 - (ii) Defects arising from misuse, mishandling, abuse, accident, negligence and damage caused directly or indirectly by fire, flood, liquid water, corrosion, convulsion of nature, war, riot or civil commotion.
 - (iii) The IMEI number sticker on this product has been erased or modified.
 - (iv) The content of warranty policy has been modified without authorization.
- (8) LGEHK is not responsible for any loss of data or system corruption during the process of transportation or repair to and from the Service Centre and due to the forces of nature.
- (9) LGEHK reserves the right to terminate or modify the terms of this warranty card. For exceptional cases, subject to report of our investigation, we reserve the right to terminate this warranty card or modify terms of warranty policy.
- (10) Our company will not be liable for any loss directly or indirectly caused by the breakdown of the product.
- (11) This warranty card is restricted within Hong Kong SAR only.

- (1) 本公司為客戶提供保修期如下，只適用於香港購買之手機，並不包括各促銷活動之贈品(由購買日起計)
 - (i) 機身: 12個月
 - (ii) 充電器: 6個月
 - (iii) 電池: 6個月
 - (iv) 免提耳機: 3個月
- (2) 保修服務只適用於原裝行貨；水貨及冒牌貨均屬無效。
- (3) 此保修只適用於生產上的瑕疵，如電子零件偶然出現毛病，並不包括手機的自然磨損包括外殼、鍵盤、顯示屏、天線、附件等。
- (4) 用戶要求維修服務時，須同時攜同手機、保用證及印有IMEI號碼之有效發票正本到本公司指定之維修中心進行維修，否則保修服務無效，客戶須繳付維修費用。
- (5) 在保修期內維修更換后的所有零件、配置及附件，均屬本公司所有，本公司有權作出任何處理。
- (6) 手機內存資料有可能因維修后遺失，請顧客要自行保存。
- (7) 在下列情況下本保用證將自動失效，本公司有權拒絕維修該手機或向客人徵收所有的維修費用。
 - (i) 手機曾作未許可之維修、不適當的安裝、更改、或貼於其上的維修貼紙遭受損毀、撕破、除去、保修服務即無效。
 - (ii) 手機曾被錯誤使用、錯誤處理、疏忽使用、直接或間接意外由火、液體、火災、腐蝕、地震、戰爭、暴亂或天災所造成的損壞。
 - (iii) 手機上的IMEI號碼貼紙一經修改或除去，保修服務即無效。
 - (iv) 擅自修改本保用證的內容。
- (8) 本公司將對任何於使用、維修或運送時引致之系統錯誤及資料流失、或因天然災害、意外事件造成之損失概不負責。
- (9) 本保用證的發出及終止權均屬本公司所有。就不明的情況或個案，經審查後，本公司有權發出或終止本保用證。
- (10) 本公司將不負責由於產品損壞而直接或間接引致之任何損失。
- (11) 此保用證只適用於香港特別行政區範圍內。



服務承諾

- 服務員親切熱情的服務態度
- 多用途互動訊息系統
- 完善售後服務，提供專業的保養服務
- 為客戶介紹及推薦最新產品
- 有效率和快捷的服務
- 不斷創新產品，給客戶無限驚喜



Stamp

To:

LG Electronics HK Ltd.
North Point Post Office Box No.54509
香港北角郵政信箱54509號

限期保用證

Customer Information

客戶資料

客戶姓名

[illegible]

地址

[illegible]

電郵

[illegible]

手提電話

| | | | | | | | | |

家居電話

型號

[illegible]

機身IMEI編號

| |

購買日期

[illegible]

購買單據編號

| | | | |



Retailer Information

零售商資料



[illegible]

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.