



ENGLISH
हिन्दी



User Guide
LG-A200



CE0168

P/N : MFL67211609 (1.0)

www.lg.com

Bluetooth QD ID B017737

English

LG-A200 User Guide

This guide will help you understand your new mobile phone. It will provide you with useful explanations of features on your phone.

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

Product Registration Program

Dear LG Mobile customer,

You are entitled for one year warranty on this model.

For automatic registration, One SMS containing the IMEI no. of your phone will be automatically sent to LG servers @ Rs.0.06p only.

In return you will get one year warranty from the date of purchase at any authorized LG Mobile Service center.

We assure you the information will be kept confidential and used for internal purpose only.


LG Electronics India Pvt. Ltd. does not have any revenue sharing with any cellphone operators for proceeds from SMS of automatic registration.

Contents

Getting to know your phone ..	4
Installing the SIM Card and	
Charging the Battery.....	6
Installing the SIM Card	6
Menu Tree.....	7
Calls.....	8
Making a call.....	8
Making a call from your	
contacts	8
Answering and rejecting a call...	8
Using the speakerphone.....	9
Speed dialling.....	9
Viewing your call logs	9
Changing the call settings....	9
Contacts	10
Searching for a contact.....	10
Adding a new contact	10
Adding a contact to a group...	10
Messaging.....	11
Sending a message	11
Entering text	12
T9 mode	12
Using the T9 Mode	12
Abc mode.....	13
123 mode	13
Changing the language	13
Message folders	13
E-mail.....	14
Setting up your e-mail.....	14
Sending an e-mail using your	
new account.....	14
Camera	14
Taking a quick photo	14
Video camera	15
Shooting a quick video	15
Music.....	15
Playing a song.....	15
FM radio	16
Searching for stations	16
Listening to the radio	16
Recording your radio.....	16
Voice recorder.....	17
Recording your voice memo..	17
Gallery	17
Applications.....	18
SNS (Social Network).....	18
Facebook.....	18
Twitter	18
Organiser.....	19
Setting your alarm	19
Using the calendar	19
Adding an item to your to do	
list	19
Adding a note	19
Secret notes	19

Adding a city to your world time	19	Phone Software update	25
Using your calculator	19	PC Sync	25
Date finder	20	Guidelines for Safe and Efficient Use	26
Converting a unit	20	Accessories	32
Using the stopwatch	20	Technical Data.....	33
Go to.....	20	Troubleshooting.....	34
SIM services.....	20		
Internet.....	20		
Accessing the internet browser	20		
Settings	21		
Personalising your profiles ..	21		
Using flight mode	21		
Changing your display settings	21		
Changing your date & time ..	21		
Changing your connectivity settings	21		
Changing your Bluetooth settings	22		
Pairing with another Bluetooth device	22		
Changing your phone settings	23		
Changing your security settings	23		
SOS mode.....	24		
Viewing memory status.....	24		
Resetting your phone	25		

Getting to know your phone

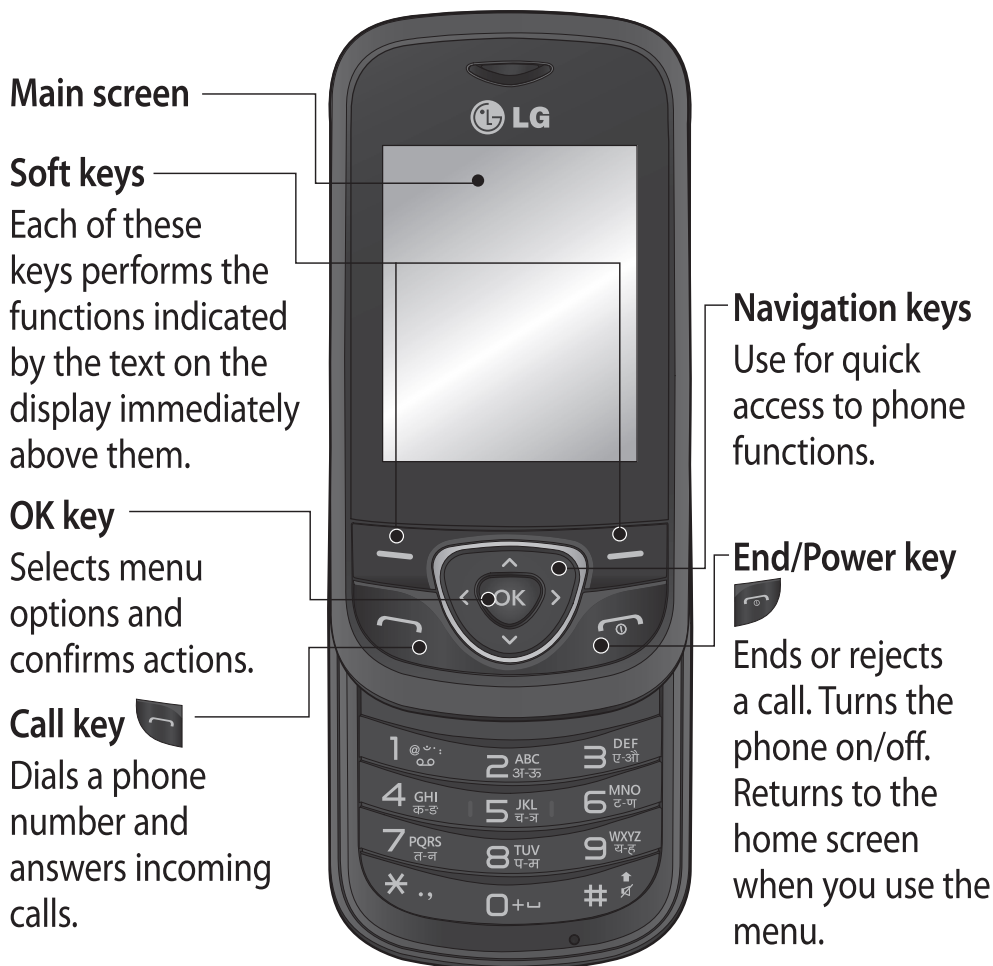

TIP!

A variety of widget applications is already set to your home screen. On the home screen, press the up navigation key and select the widget you want using the left and right navigation keys.

If you access the SNS application by selecting the widget on your home screen, you will be required to sign in with your SNS account.



Headset /
Charger /
USB Cable
connector



Memory card slot

Installing a memory card

Lift the memory card cover and insert a micro SD card with the golden contact area facing downwards as shown in the diagram. Close the memory card cover so that it clicks shut. To remove the memory card, gently push it.



Note: A memory card is an optional accessory.

Formatting the memory card

From your home screen, press **Menu** and select **Settings**. Choose **Memory info**, select **External memory** and press **Format**, and insert security code.

WARNING: When you format your memory card, all the content will be wiped. If you do not want to lose the data on your memory card, back it up first.

Installing the SIM Card and Charging the Battery

Installing the SIM Card

When you subscribe to a cellular network, you are provided with a SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

Important!

› The SIM card can be easily damaged by scratches or bending, so be careful when handling, inserting or

removing the card. Keep all SIM cards out of the reach of small children.

› only 2G/2.5G SIM supported

Illustrations

- 1 Open battery cover
- 2 Remove the battery
- 3 Insert your SIM
- 4 Insert your battery
- 5 Close the battery cover
- 6 Charge your battery



WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

Menu Tree

1. MESSAGING

- Create Message
- Inbox
- Drafts
- Outbox
- Sent items
- Saved items
- Messenger
- Emoticons
- Message settings

2. CONTACTS

- Names
- Settings
- Groups
- Speed dials
- Service dial numbers
- Own number
- My business card

3. E-MAIL

- Get an account
- Others

4. SETTINGS

- Profiles
- Display
- Date & Time
- Connectivity
- Bluetooth
- Call
- Phone
- Security
- SOS mode
- Memory info
- Restore factory settings

5. GALLERY

- My memory card
- My images
- My sounds
- My videos
- Others
- Secret box

6. MEDIA

- Camera
- Video camera
- Music
- FM radio
- Voice recorder

7. ORGANISER

- Alarm clock
- Calendar
- To-do list
- Notes
- Secret notes
- World time
- Calculator
- Date finder
- Converter
- Stopwatch
- Go to
- Settings

8. APPLICATIONS

- My games & apps
- Settings

9. INTERNET

Turning Your Phone On and Off

You can power the phone on and off by pressing and holding the power key.

Lock/Unlock Your Keypad

Slide down the phone to lock the keypad and Slide up the phone or in Slide closed state press LSK(Unlock) then press RSK(OK) to Unlock the keypad.

Calls

Making a call

- 1 Key in the number using the keypad. To delete a digit press **Clear**.
- 2 Press  to initiate the call.
- 3 To end the call, press .

TIP! To enter + when making an international call, press and hold **0**.

TIP! To control the volume during a call, press the up and down navigation keys.

TIP! You can record a voice memo during a call. Press **Options** and select **Record**.

Making a call from your contacts

- 1 Select **Names** from the home screen.
- 2 Using the keypad, enter the first letter of the contact you want to call.
- 3 Press  to initiate the call.

TIP! To scroll through your contacts, use the up and down navigation keys.

Answering and rejecting a call

When your phone rings, press  to answer the call.

While your phone is ringing, select **Silent** to mute the ringing.

This is useful if you have forgotten to change your profile to **Silent** for a meeting.

Press  or select **Reject** to reject the incoming call.

TIP! You can change the settings on your phone to answer your calls in different ways. Press **Menu**, select **Settings** and choose **Call**. Select **Answer mode** and choose from **Press send key**, **Slide up** or **Press any key**.

Using the speakerphone

During a call, you can activate speakerphone by pressing  key and you can use the handset in hands-free.

If the speakerphone is active, press  key again to resume normal handset conversation mode.

Speed dialling

Press **Menu** and select **Contacts**, then choose **Speed dials**. Assign contacts to any keys between 2 and 8.

Speed dial 1 is set to your voice mail and 9 is set to SOS mode so you can not change the both.

Once you have assigned a speed dial, you can initiate a call by pressing and holding the speed dial number.

Viewing your call logs

Press  to view your call logs. You can also check the call record of missed, received, and dialled calls by using the left and right navigation keys.

Changing the call settings

You can set the menu relevant to a call. Press **Menu**, select **Settings** and choose **Call**.

Call rejection list - This menu shows you the phone numbers of person you have chosen to reject. you can add the new number using add button. The incoming calls received from the Call rejection list numbers will be automatically rejected. In call log, rejected icon would be shown for such calls.

Timed Call - Outgoing calls will be automatically disconnected after the set duration. The user can initiate a timed call from the options menu (contacts, call log, dialing screen) if timed call is enabled in Settings>Call>Timed call.

Self call - Self call imitates a real incoming call. Press ‘##’ on the home screen to make a self call. This doesn’t charge any fee.

Contacts

Searching for a contact

- 1 Select **Names** from the home screen.
- 2 Using the keypad enter the first letter of the contact you want to call.
- 3 To scroll through the contacts.

Tip! LG Customer Care number is available by default in Contact list (18001809999).

Adding a new contact

- 1 Select **Names** from the home screen. Press **Options** and **Add new contact**.
- 2 Enter the first and last name of your new contact. You do not have to enter both.
- 3 Enter the number and select **Options** then choose **Done**.

Note: If you want to add more information, press **Options** and choose **Add detail** then select options you want.

Adding a contact to a group

You can save your contacts into groups, for example, keeping your work colleagues and family separate. There are a number of groups including **Colleagues, Family, Friends, School** and **VIP** already set up on the phone.

Messaging

Sending a message

- 1 Press **Menu**, select **Messaging**, and choose **create message** to send an SMS or MMS.
- 2 A new message editor will open. The message editor combines text message and multimedia messages into one intuitive and easy to switch between editor. The default setting of the message editor is text message.
- 3 Enter your message using either the T9 predictive mode or Abc manual mode or 123 mode. You can switch text input modes by pressing the # key.
- 4 Enter the phone number or press **Options** and select **Send** to add a contact from the list of your contacts. You can even add multiple contacts by marking the contacts.

Note: Message can be sent to a group also. Edit the message then press send and select contact groups and select the group you want.

- 5 Enter your message.
- 6 Select **Options** and choose **Insert**. Use the left and right navigation keys and add an **Image, Video clip, Sound clip, Schedule, Business card, Note, Text field, To-do**, or a **Text template**.
- 7 Press **Send** to send the message.

Your message is displayed and responses appear in the same window, creating a message thread with that contact.

TIP! You can select your message type as SMS or MMS when you enter a text longer than 1 page in the message field. If you want to change the type of message to send, press **Menu > Messaging > Options > Settings > Text message**, and choose **Send long text as**.

WARNING: Image, Video clip, Sound clip, Schedule, Business card, Text field or Subject is added to the message editor, it will be automatically converted to MMS mode and you will be charged accordingly.

Entering text

You can enter alphanumeric characters using the phone's keypad. The following text input methods are available in the phone: T9 mode, Abc mode and 123 mode.

To change modes, press the # key.

Note: Some fields may allow only one text input mode (e.g. telephone number in address book fields).

T9 mode

T9 mode uses a built-in dictionary to recognise words you're writing based on the key sequences you press. Simply press the number key associated with the letter

you want to enter, and the dictionary will recognise the word once all the letters are entered.

Using the T9 Mode

- 1 When you are in the T9 predictive text input mode, start entering a word by pressing keys  to . Press one key per letter.
 - If the word is still incorrect after typing completely, press the  key once or more to cycle through the other word options.
 - If the desired word is missing from the word choices list, add it by using the Abc mode.
- 2 Enter the whole word before editing or deleting any keystrokes.
 - To delete letters, press **Clear**.
 - Complete each word with a space by pressing the  key.

Abc mode

This mode allows you to enter letters by pressing the key labeled with the required letter once, twice, three or four times until the letter is displayed.

123 mode

Type numbers using one keystroke per number. You can also add numbers while remaining in letter modes by pressing and holding the desired key.

Inserting symbols

If you want to insert symbols, press the * key, then you can choose a symbol. Or you can press **Options** and then choose **Insert symbol**.

Changing the language

LG-A200 supports various languages.

There are two ways to change the writing language from the writing screen. You can press **Options**, go to **Writing language**

and then set the language you want. Or, you can simply press and hold the * key. The writing options may differ depending on the language you choose.

Message folders

Press **Menu**, select **Messaging**. Choose **Options** and select the folder you want.

Drafts - If you don't have time to finish writing a message, you can save what you have written so far in here.

Outbox - This is a temporary storage folder used while messages are being sent.

Saved Items - You can access your **Saved messages**, **Text templates** and **Multimedia templates**.

Emoticons - A list of useful emoticons already written for a quick reply. You can add, edit and delete emoticons. You can insert the emoticon which you preferred on writing a message.

Settings - Your message settings are pre-defined so that you can send messages immediately. If you would like to change the settings, you can do this using the settings options.

E-mail

Setting up your e-mail

You can stay in touch on the move using e-mail on your LG-A200. It's quick and simple to set up a POP3 or IMAP4 e-mail account.

- 1 Press **Menu** and choose **E-mail**.
- 2 The first time you open the **E-mail**, you need to setup an email account. A setup wizard opens to help you add an e-mail account.
- 3 Follow the pop up instruction and enter the information required.

Sending an e-mail using your new account

To send/receive an e-mail, you should set up an e-mail account.

- 1 Select **Menu**, select **E-mail** and choose **Options**.
- 2 Choose **Write e-mail** and a new e-mail will open.
- 3 Enter the recipient's address and write a subject.
- 4 Enter your message.
- 5 Press **Options**, select **Attach** to add an **Image, Video, Sound, Name & number** or **More**.
- 6 Press **Send** and your e-mail will be sent.

Camera

Taking a quick photo

- 1 Press **Menu** and select **Media**. Select **Camera** to open the viewfinder.
- 2 Holding the phone and, point the lens towards the subject of the photo.

- 3 Press  key to take a photo.

Video camera

Shooting a quick video

- 1 Press **Menu** and select **Media**, then choose **Video camera**.
- 2 Point the camera lens towards the subject of the video.
- 3 Press  key to start recording.
- 4 Rec will appear in the viewfinder and a timer will show the length of your video.
- 5 Select **Stop** to stop recording.

Music

Your LG-A200 has a built-in music player so you can play all your favourite music.

Playing a song

- 1 Press **Menu** and select **Media**, then choose **Music**.
- 2 Choose **All songs** then select the song you want to play.
- 3 Select  to pause the song.
- 4 Select  to skip to the next song.
- 5 Select  to skip to the previous song.
- 6 Select **Back** to stop the music and return to the music player menu.

Note: Music is copyright protected in international treaties and national copyright laws. It may be necessary to obtain permission or licence to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Please check the national legislation of the applicable country concerning the use of such materials.

FM radio

Your LG-A200 has an FM radio feature so you can tune into your favourite stations and listen on the move.

During listening to the FM radio, you can also record a short clip and save it.

Note: You will need to insert your headset in order to listen to the radio. Insert the plug into the headset connector in order to listen to the radio and keep the good radio reception.

Searching for stations

- 1 Press **Menu** and select **Media**, then choose **FM radio**.
- 2 Select **Option** and choose **Auto scan** then select **Set**. You can also use the left and right navigation keys to search for stations.

Listening to the radio

- 1 Press **Menu** and select **Media**, then choose **FM radio**.

- 2 Select the channel number of the station you would like to listen to.

TIP! You can listen to the radio via built-in speaker. Press **Options**, select **Listen via speaker**.

Recording your radio

- 1 Press  key during listening to the radio.
- 2 The recording time is displayed on your phone. If you want to stop the recording, press stop. If recording is done, the recorded contents will be saved in **Gallery** as mp3 file.

Note: After recording your radio, you can listen to all of the radio recordings you have saved by selecting **Options** and **Go to Radio recordings**.

TIP! To configure your recording settings such as the saved memory, record type or Pre-recording, press **Options** and select **Recording settings**.

TIP! Pre-recording

lets you record from some seconds before you press the record button.

If you set the record type as music only recording, music will be extracted automatically without DJ's comment while you record.

Voice recorder

Use your Voice recorder to record voice memos or other sounds.

Recording your voice memo

- 1 Press **Menu** and select **Media**, then choose **Voice recorder**.
- 2 Press  key to begin recording.
- 3 Choose **Stop** to end the recording.
- 4 Press **Options** and select **Play last recorded** to listen to the recording.

Gallery

You can store any media files into your phone's memory so that you have easy access to all of your images, sounds, videos, others and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory. All your multimedia files will be saved in **Gallery**. Press **Menu** then select **Gallery** to open a list of folders.

Note: Secret box

You can Move the multimedia files to Secret box to avoid unauthorized use. You will need a security code to access the data. The default security code is 0000 .

Applications

Your LG-A200 comes with preloaded games to keep you amused when you have time to spare. If you choose to download any additional games or applications they will be saved into this folder. Press **Menu** and select **Applications**. Choose **My games & apps**.

News Hunt - News Hunt is a unique mobile application designed to enable viewing and reading newspapers in the regional languages on the go.

Opera Mini 5 - It is a Java browser application.

Messenger - It provides MSN chat applications. You can login with your MSN accounts.

SNS (Social Network)

Facebook

Home: Log in and you will see your friend's updated status. Input your comment about new status or check others.

Profile: You can select the Wall > Status updates and write the current status. See your info detail and upload the photo by selecting Album > Upload Photo.

Twitter

Twitter is a social networking service which enables its users to send and read other users' messages called tweets.

Note: SNS feature is a data intensive application. An additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.

Note: Please ensure Auto Update is On before using the above Applications.

Note: An additional cost is incurred when connecting to this service. Check your data charges with your network provider.

Organiser

Setting your alarm (Menu > Organiser > Alarm clock)

You can set up to 5 alarm clocks to go off at a specified time.

Using the calendar (Menu > Organiser > Calendar)

When you enter this menu, a calendar appears. A square cursor is located on the current date. You can move the cursor to another date using the navigation keys.

TIP! User can schedule an SMS, so that it can be sent to the pre define Contact number on Set date and Set time from Left soft key option list > New scheduled SMS.

Adding an item to your to do list (Menu > Organiser > To-do list)

You can view, edit and add tasks to do.

Adding a note (Menu > Organiser > Notes)

You can register your own notes here.

Secret notes (Menu > Organiser > Secret notes)

You can write the private memo to protect your privacy. You enter the security code to use this menu.

Adding a city to your world time (Menu > Organiser > World time)

You can add a required city to the list of world clock. You can also check the current time of major cities around the world.

Using your calculator (Menu > Organiser > Calculator)

The calculator provides the basic arithmetic functions: addition, subtraction, multiplication, division and Scientific applications also.

Date finder

(Menu > Organiser > Date finder)

Date finder is a handy tool to help you calculate what the date will be after a certain amount of days has passed.

Converting a unit

(Menu > Organiser > Converter)

This converts many measurements into a unit you want.

Using the stopwatch

(Menu > Organiser > Stopwatch)

This option allows you to use the function of a stopwatch.

Go to (Menu > Organiser > Go to)

It helps you to go to the menu you search for. You can set the item as Go to.

SIM services

(Menu > Organiser > SIM services)

This feature depends on SIM and the network services.

In case the SIM card supports SAT (i.e. SIM Application Toolkit) services, this menu will be the operator specific service name stored on the SIM card.

Internet

Accessing the internet browser

You can launch the wap browser and access the homepage of the activated profile on Internet Profiles. You can also manually enter an URL address and access the associated wap page. Press **Menu** and select **Internet**.

Note: An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

Settings

Personalising your profiles (Menu > Settings > Profiles)

You can personalise each profile setting. Choose the profile you want and select **Options** and choose **Edit**.

NOTE:Timed Profile (Menu > Settings > Profiles>Options>Timed)

User can set a required profile automatically for the pre define Time.

For Ex: If user wants handset profile to be silent from 2:00 PM~3:00 PM, then set the time and select profile as silent for the time frame.

Using flight mode (Menu > Settings > Profiles > Flight mode)

Use this function to switch the flight mode on. You will not be able to make calls, connect to

the Internet, send messages when flight mode is switched on.

Changing your display settings (Menu > Settings > Display)

You can change the settings for the phone display.

Changing your date & time (Menu > Settings > Date & Time)

You can set functions relating to the date and time.

Changing your connectivity settings (Menu > Settings > Connectivity)

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone from switch on. If you want to change any settings, use this menu. You can configure the

network setting and data access profiles in this menu.

Changing your Bluetooth settings

- 1 Press **Menu** and select **Settings** then choose **Bluetooth**.
- 2 Select **Settings** Make your changes to:
 - **My device visibility** - Choose whether to **Visible**, **Hidden** or **Visible for 1 min** your device to others.
 - **My device name** - Enter a name for your LG-A200.
 - **Supported services** - Shows what it supports.
 - **My address** - View your Bluetooth address.

Pairing with another Bluetooth device

- 1 Check your Bluetooth is **On** and **Visible**. You can change your visibility in the **Bluetooth Settings** menu, by selecting **My device visibility**, then **Visible**.
- 2 Select **Search new device** from the Bluetooth menu.
- 3 Your LG-A200 will search for devices. When the search is completed **Add** and **Refresh** will appear on screen.
- 4 Choose the device you want to pair with, then handset create passcode by default everytime you connect.
- 5 Your phone will then connect to the other device.
- 6 Your passcode protected Bluetooth connection is now ready.

TIP!

- 1 When you use a Bluetooth headset, A2DP and AVRCP profiles are not supported while you play video. It means you will not listen video sound if you use Bluetooth headset.
- 2 Bluetooth file transferring function will be blocked under some applications running. (Voice call, Camera/Camcorder, MusicPlayer, UMS/PCSync)

Changing your phone settings

(Menu > Settings > Phone)

Enjoy the freedom of adapting how your LG-A200 works for your own style.

Auto key lock - Lock the keypad automatically in standby screen.

My navi key - You can change the shortcuts of 4 navigation keys.

Language - You can change the language for the display texts in your phone. This change will also affect the language input mode.

Battery status - Choose to switch the power save settings **Auto**, **Always on** or **Off**. If you set **Always on**, you can save the battery power.

Handset information - View the technical information for your LG-A200.

Changing your security settings

(Menu > Settings > Security)

Change your security settings to keep your LG-A200 and the important information safe.

- **PIN code request** - Choose a PIN code to be requested when you turn your phone on.
- **Handset lock** - Choose to lock your handset.

- **Application lock** - To prevent unauthorized use of phone applications, you can enable application lock which requires user to enter a password when accessing applications. Password is the same as the security code (Default password is 0000).
- **Lock if SIM is changed** - If you activate this option, your phone will request a security code when you change your SIM card.
- **Anti-theft mobile tracker** - When the handset is stolen, handset sends the SMS to the numbers configured by real owner. To activate the ATMT(Antitheft mobile tracker) feature, enter the security code. And you will need to set ATMT on, and configure the ATMT settings with Sender name, numbers. Default security code is "0000." ATMT SMS will contain information about the stolen

phone IMEI & number of the person who is using that handset.

- **Change codes** - Change your PIN code, PIN2 code or **Security code**.

SOS mode

In an emergency situation, press and hold '9' to send SOS message when SOS mode is On. This will send to the assigned receivers. If they call you back, your phone will be automatically accepted. At that time, all notification sound will be muted. And other menus will be unavailable. To exit the SOS mode, press the End key in home screen.

Viewing memory status (Menu > Settings > Memory info.)

You can use the memory manager to determine how each memory is used and see how much space is available:

common, reserved, SIM and external memory and also set the primary storage when the memory card is inserted.

Resetting your phone (Menu > Settings > Restore factory settings)

Use **Restore factory settings** to reset all the settings to their factory definitions. You need the security code to activate this function. The default security code is set to "0000".

Phone Software update

LG Mobile Phone Software update from internet

For more information on using this function, please visit the <http://update.lgmobile.com> or <http://www.lg.com/common/index.jsp> ----> select country.

This Feature allows you to update the firmware of your phone to the latest version conveniently from the internet without the need to visit a service centre.

As the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure to check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable or battery during the upgrade may seriously damage your mobile phone.

PC Sync

You can synchronise your PC with your phone to make sure all your important details and dates match. You can also backup your files to put your mind at ease.

For this User have to connect Mobile with PC through USB cable and Select the option "PC suite".

Note: Install PC Suite using CD provided and follow the Installation Guide.

Guidelines for Safe and Efficient Use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information. This mobile phone model LG-A200 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest

certified power level in all used frequency bands.

- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.950 W/kg (10 g) and when worn on the body is 0.989 W/kg(10 g).

- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Repairs under warranty, at LG's discretion, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required to by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.

Guidelines for Safe and Efficient Use (Continued)

- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.

- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

Efficient phone operation

Electronic devices

All mobile phones may receive interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions require you to do so.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- If your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is of particular importance when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sounds for long periods of time. We therefore recommend that you do not turn the handset on or off close to your ear. We also recommend that music and call volumes are set to a reasonable level.

NOTE: Excessive sound pressure from earphones can cause hearing loss.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorised service provider.

Guidelines for Safe and Efficient Use (Continued)

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use your phone at a refuelling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid or explosives in the same compartment of your vehicle as your mobile phone or accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available on all mobile networks. Therefore you should never depend solely on your phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise battery life.

- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times before it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, as this may deteriorate battery performance.
- There is risk of explosion if the battery is replaced with an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions.


Please recycle when possible. Do not dispose as household waste.

- If you need to replace the battery, take it to your nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.


Accessories

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.

**Travel
Adapter**

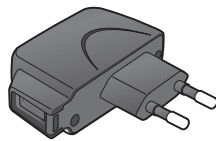

**Data
cable &
CD**

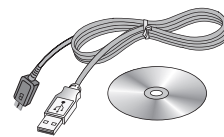


**Standard
Battery**



**User
Guide
LG-A200**



Headset

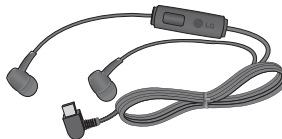

NOTE

- Always use genuine LG accessories. Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further enquires.

Technical Data

Ambient Temperatures

Max.: +55°C (discharging)

+45°C (charging)

Min.: -10°C

Declaration of Conformity LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20,Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band Terminal Equipment

Model Name

LG-A200

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.8.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v2.1.1
EN 300 328 v1.7.1
EN 60950-1:2006+A11:2009
EN 50360:2001 / AC:2006
EN 62209-1:2006/EN 62209-2:2010
EN 301 511 v9.0.2

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom

Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards, regulation and directives

Name

Issued Date

Doo Haeng Lee / Director

21, Apr, 2011

LG Electronics Inc. – EU Representative
Veluwezoom 15, 1327 AE Almere, The Netherlands


Signature of representative

Troubleshooting

Problem	Possible Solution
Telephone cannot be switched on	Please take out battery and insert again. Then press Power on key to power on the phone.
Battery empty	Charge battery. Check charging indicator on display.
The battery doesn't charge properly or the phone sometimes turns itself off	Wipe the charging contacts, both on the phone and on the battery, with a clear soft cloth.
Usage time of battery becomes shorter	If the battery time is short, it may be due to the user environment, a large volume of calls, or weak signals.
Charging error—Temperature out of range	Make sure the ambient temperature is right, wait for a while, and then charge again.
Charging error—Wrong charger	Only use original LG accessories.
Charging error—Battery defective	Replace battery.
Charging error—No battery icon appears when charging	The battery is empty or has been not used for a long time. It may take a while before the battery icon appears on the screen.

Problem	Possible Solution
Forgot the phone code or password	The default phone code is "0000".
Enter PUK	The PIN code has been entered incorrectly three times in succession, and the phone is now blocked. Enter the PUK supplied by your service provider.
Loss of Network	You may be in a weak signal area. Move and try again. You are trying to access an option for which you have no subscription with your service provider. Contact the service provider for further details.
You have entered a number but it was not dialed	Be sure that you have pressed Send key . Be sure that you have accessed the right network service. Be sure that you have not set an outgoing call barring option. Be sure that you have entered the area code.
Your correspondent cannot reach you	Be sure that your phone is switched on. Press Send key for more than one second. Be sure that you are accessing the network service. Be sure that you have not set an incoming call barring option.

Troubleshooting

Problem	Possible Solution
Your correspondent cannot hear you speaking	Be sure that you have switched off the loudspeaker. Be sure that you are holding the phone close enough to your mouth. The microphone is located at the bottom of the phone.
The voice quality of the call is poor	Check the signal strength indicator on the display. The number of bars indicates the signal strength. Try moving the phone slightly or moving closer to a window if you are in a building.
No number is dialed when you recall a contact	Use the Phonebook Search feature to ensure the number has been stored correctly. Resave the number, if necessary.
Cannot use the Browser	Your subscription does not include data capability. You will need to contact your service provider to enable the service.
If the above guidelines do not help you to solve the problem	Take note of the model number of your mobile phone and a clear description of the problem. Contact your phone dealer or LG Service Center for help.

हिन्दी

LG-A200 उपयोगकर्ता मार्गदर्शिका

यह मार्गदर्शिका आपके नए मोबाइल फोन को समझने में आपकी मदद करेगी.

यह आपको, आपके फोन में दी गई सुविधाओं के बारे में उपयोगी स्पष्टीकरण प्रदान करेगी.

इस मैनुअल की कुछ सामग्री, फोन के सॉफ्टवेयर या आपके सेवा प्रदाता के आधार पर, आपके फोन से अलग हो सकती है.

उत्पाद पंजीकरण प्रोग्राम

प्रिय एलजी मोबाइल ग्राहक,

आप इस मॉडेल पर एक वर्ष की वारंटी के पात्र हैं ।

स्वतः पंजीकरण के लिए , एक एसएमएस @रू.0.06p IMEI सहित आप के फोन से एलजी सर्वर पर भेजा जाएगा । इसके बदले में आप को किसी भी अधिकृत एलजी मोबाइल सेवा केंद्र पर खरीद की तारीख से एक साल की वारंटी मिलेगी ।

हम आपको विश्वास दिलाते हैं , की यह जानकारी गोपनीय रखी जाएगी और केवल आंतरिक उद्देश्य के लिए ही इस्तेमाल कि जायेगी ।

एलजी इलेक्ट्रॉनिक्स इंडिया प्राइवेट लिमिटेड का स्वतः पंजीकरण के एसएमएस से आय के लिए किसी भी सेल फोन ऑपरेटरों के साथ किसी भी प्रकार का राजस्व साझा नहीं है ।

सामग्री

अपने फ़ोन को जानना.....	4	प्रतीक सम्मिलित करना.....	14
सिम कार्ड स्थापित करना और बैटरी चार्ज करना.....	6	भाषा परिवर्तित करना.....	15
सिम कार्ड स्थापित करना.....	6	ई-मेल.....	15
उदाहरण.....	6	आपका ई-मेल सेट करना.....	15
अक्षर व अंक प्रविष्ट करने की तालिका.....	7	आपके नए खाते का उपयोग कर ई-मेल भेजना.....	16
हिन्दी शब्द लिखने के उदाहरण.....	8	कैमरा.....	16
मेनू ट्री.....	9	तुरंत फ़ोटो लेना.....	16
कॉल्स.....	10	वीडियो कैमरा.....	16
कॉल करना.....	10	तुरंत वीडियो शूट करना.....	16
अपने संपर्कों से कॉल करें.....	10	संगीत.....	16
कॉल का उत्तर देना और कॉल रद्द करना.....	10	कोई गीत चलाना.....	16
स्पीकरफ़ोन का उपयोग करना.....	11	FM रेडियो.....	17
शीघ्र डायलिंग.....	11	स्टेशन खोजना.....	17
आपके कॉल लॉग्स देखना.....	11	रेडियो सुनना.....	17
कॉल सेटिंग्स बदलना.....	11	आपके रेडियो को रिकॉर्ड करना.....	18
संपर्क.....	12	वॉइस रिकॉर्डर.....	18
संपर्क खोजना.....	12	आपके वॉइस मेमो को रिकॉर्ड करना.....	18
नया संपर्क जोड़ना.....	12	गैलरी.....	18
किसी समूह में संपर्क जोड़ना.....	12	सुविधायें.....	19
संदेश भेजना.....	12	Messenger.....	19
संदेश भेजना.....	12	SNS.....	19
पाठ दर्ज करना.....	13	Facebook.....	19
T9 मोड.....	14	Twitter.....	19
T9 मोड का उपयोग करना.....	14		
Abc मोड.....	14		
123 मोड.....	14		

आयोजक 20

- आपका अलार्म सेट करना.....20
- कैलेंडर का उपयोग करना.....20
- आपकी करने के लिए सूची में
आइटम जोड़ना.....20
- नोट जोड़ना.....20
- गुप्त नोट्स 20
- अपनी विश्व घड़ी में एक शहर
जोड़ना.....20
- अपना कैलकुलेटर उपयोग करना..21
- दिनांक ढूँढने वाला.....21
- इकाई कनवर्ट करना 21
- स्टॉपवॉच का उपयोग करना 21
- के पास जाओ 21
- सिम सेवाएं.....21

इंटरनेट 21

- इंटरनेट ब्राउज़र एक्सेस कर रहा है...21

सेटिंग्स.....22

- अपनी प्रोफाइल्स व्यक्तिगत बनाना..22
- फ्लाइंग मोड का उपयोग करना 22
- अपनी डिस्प्ले सेटिंग्स बदलना.....22
- अपना दिनांक और समय बदलना..22
- अपनी कनेक्टिविटी सेटिंग्स बदलना..22
- अपनी ब्लूटूथ सेटिंग्स बदलना 22
- किसी अन्य ब्लूटूथ डिवाइस से
युग्मित करना 23
- अपने फ़ोन की सेटिंग्स बदलना.....23
- अपनी सुरक्षा सेटिंग्स बदलना.....24
- एसओएस मोड.....25
- मेमोरी स्थिति देखना.....25

अपने फ़ोन को रीसेट करना 25

सॉफ़्टवेयर नवीनीकरण 25

- LG मोबाइल फ़ोन सॉफ़्टवेयर
इंटरनेट से अपडेट होता है.....25

PC सुइट 26

सुरक्षित और प्रभावी उपयोग के दिशानिर्देश 27

सहायक उपकरण.....33

तकनीकी डेटा 34

समस्या निवारण 35

अपने फ़ोन को जानना



युक्ति!

विजेट अनुप्रयोग की विभिन्नता पहले से ही आपके होम स्क्रीन पर सेट है। होम स्क्रीन पर, उपर नेविगेशन कुंजी दबाएँ और बाएँ और दाएँ नेविगेशन कुंजी के उपयोग से इच्छित विजेट का चयन करें। यदि आप अपनी होम स्क्रीन पर विजेट चुन कर **SNS** अनुप्रयोग एक्सेस करते हैं तो आपको अपने **SNS** खाते के साथ साइन इन करना होगा।



हैडसेट / चार्जर
/ USB केबल
कनेक्टर



मेमोरी कार्ड स्लॉट

मेमोरी कार्ड स्थापित करना

मेमोरी कार्ड कवर उठाएँ और माइक्रो SD कार्ड का गोल्डन संपर्क क्षेत्र नीचे की ओर रखते हुए कार्ड डालें।

मेमोरी कार्ड कवर इस तरह बंद करें कि वह क्लिक की आवाज़ करे मेमोरी कार्ड निकालने के लिए, उसे धीरे से धकेलें ।



नोट: मेमोरी कार्ड एक वैकल्पिक सहायक उपकरण है।

मेमोरी कार्ड स्वरूपित करना

मुख पृष्ठ स्क्रीन से मेनू दबाएँ और सेटिंग्स का चयन करें।

स्मृति की जानकारी चुनें, बाह्य स्मृति का चयन करें और प्रारूप दबाएँ, और सुरक्षा कोड डालें।

चेतावनी: जब आप अपने मेमोरी कार्ड को स्वरूपित करते हैं, तो सभी सामग्री मिटा दी जाएगी। यदि आप अपने मेमोरी कार्ड का डेटा खोना नहीं चाहते हैं तो पहले उसका बैकअप लें।

सिम कार्ड स्थापित करना और बैटरी चार्ज करना

सिम कार्ड स्थापित करना

जब आप किसी सैल्यूलर नेटवर्क को सबस्क्राइब करते हैं, तो आपको आपके सबस्क्रिप्शन विवरणों, जैसे कि आपका पिन, कोई अन्य उपलब्ध वैकल्पिक सेवा और बहुत सी अन्य सेवाओं के साथ लोड एक सिम कार्ड प्रदान किया जाएगा.

महत्वपूर्ण!

› खरोंचों या मोड़ने से **SIM** कार्ड आसानी से खराब हो सकता है, इसलिए कार्ड को रखते, डालते या निकालते समय

सावधान रहें. सभी सिम कार्ड छोटे बच्चों की पहुँच से दूर रखें.

› केवल **2G/2.5G** सिम समर्थित है

उदाहरण

- 1 बैटरी कवर खोलें
- 2 बैटरी निकालें
- 3 अपना सिम डालें
- 4 अपनी बैटरी डालें
- 5 बैटरी कवर बंद करें
- 6 अपनी बैटरी चार्ज करें



चेतावनी: जब फ़ोन चालू हो तो बैटरी न निकालें, क्योंकि यह फ़ोन को क्षति पहुंचा सकता है.

अक्षर व अंक प्रविट करने की तालिका

1	ँ	ं	ः	्	्र	1	१	.	,	?	!						
2	ा	ि	ी	ु	ू	ृ	अ	आ	इ	ई	उ	ऊ	ऋ	२	२		
3	े	ै	ँ	ो	ौ	ॉ	ए	ऐ	ऐँ	ओ	औ	ऑ	३	३			
4	क	ख	ग	घ	ङ	4	४	क	ख	ग							
5	च	छ	ज	झ	ञ	5	५	ज									
6	ट	ठ	ड	ढ	ण	6	६	ड	ढ								
7	त	थ	द	ध	न	7	७	न									
8	प	फ	ब	भ	म	8	८	फ									
9	य	र	ल	व	श	ष	स	ह	9	९	ळ	र	ळ	य			
0	sp ac e	0	०														

हिन्दी शब्द लिखने के उदाहरण

1) किताब

- क :- कुंजी 4 को 1 बार दबाएं ।
ि :- कुंजी 2 को 2 बार दबाएं ।
त :- कुंजी 7 को 1 बार दबाएं ।
। :- कुंजी 2 को 1 बार दबाएं ।
व :- कुंजी 8 को 3 बार दबाएं ।

2) क्षत्रिय

- क :- कुंजी 4 को 1 बार दबाएं ।
् :- कुंजी 1 को 4 बार दबाएं ।
ष :- कुंजी 9 को 6 बार दबाएं ।
त :- कुंजी 7 को 1 बार दबाएं ।
् :- कुंजी 1 को 4 बार दबाएं ।
र :- कुंजी 9 को 2 बार दबाएं ।
ि :- कुंजी 2 को 2 बार दबाएं ।
य :- कुंजी 9 को 1 बार दबाएं ।

3) ज्ञानी

- ज :- कुंजी 5 को 3 बार दबाएं ।
् :- कुंजी 1 को 4 बार दबाएं ।
अ :- कुंजी 5 को 5 बार दबाएं ।
। :- कुंजी 2 को 1 बार दबाएं ।
न :- कुंजी 7 को 5 बार दबाएं ।
ी :- कुंजी 2 को 3 बार दबाएं ।

मेनू ट्री

1. संदेश

संदेश लिखें
इनबॉक्स
प्रारूप
आउटबॉक्स
प्रेषण आइटम्स
सहेजे गए आइटम्स
संदेश वाहक
भावनाएं
संदेश अनुकूलन

2. संपर्क

नाम
सेटिंग्स
समूह
शीघ्र डायल्स
सेवा डायल नंबर्स
स्वयं का नंबर
मेरा व्यवसाय कार्ड

3. ई-मेल

कोई खाता प्राप्त करें
अन्य

4. सेटिंग्स

प्रोफाइल्स
प्रदर्शन
दिनांक और समय
संयोजकता
ब्लूटूथ
कॉल
फोन
सुरक्षा
एसओएस मोड
स्मृति की जानकारी
फैक्ट्री सेटिंग्स पुनर्स्थापित करें

5. गैलरी

मेरा मेमोरी कार्ड
मेरे छवियाँ
मेरी ध्वनि
मेरे वीडियो
अन्य
गुप्त बाक्स

6. मीडिया

कैमरा
वीडियो कैमरा
संगीत
FM रेडियो
वॉइस रिकॉर्डर

7. आयोजक

अलार्म घड़ी
कैलेंडर
टू, डू सूची
नोट्स
गुप्त नोट्स
विश्व समय
कैलकुलेटर
तिथि खोजक
परिवर्तक
स्टॉपवॉच
के पास जाओ
सेटिंग्स

8. सुविधायें

मेरे खेल एवं अनुप्रयोग
सेटिंग्स

9. इंटरनेट

अपने फ़ोन को ऑन या ऑफ़ करना

आप पॉवर कुंजी दबाकर और दबाए रखकर फ़ोन की पॉवर को ऑन और बंद कर सकते हैं।

अपने फ़ोन कीपाड को लॉक या अनलॉक करें

अपने फ़ोन को स्लाइड डाउन करने से फ़ोन कीपाड लॉक हो जायेगा । फ़ोन को स्लाइड अप और फ़ोन स्लाइड वंद स्थिती में अनलॉक प्रेस करके हाँ दवाने से फ़ोन कीपाड अनलॉक हो जायेगा ।

कॉल्स

कॉल करना

- 1 कीपैड का उपयोग करके संख्या लिखें. कोई अंक हटाने के लिए साफ़ करें दबाएँ.
- 2 कॉल प्रारंभ करने के लिए  दबाएं.
- 3 कॉल समाप्त करने के लिए, दबाएँ .

युक्ति! अंतर्राष्ट्रीय कॉल करते समय + दर्ज करने के लिए, 0 दबाकर रखें.

युक्ति! कॉल के दौरान वॉल्यूम पर नियंत्रण रखने के लिए, ऊपर या नीचे नेविगेशन कुंजियाँ दबाएँ.

युक्ति! आप कॉल के दौरान एक वॉइस मेमो रिकॉर्ड कर सकते हैं. विकल्प दबाएँ और रिकॉर्ड करें चुनें.

अपने संपर्कों से कॉल करें

- 1 मुख्य पृष्ठ स्क्रीन से नामों का चयन करें.
 - 2 कीपैड का उपयोग करते हुए उस संपर्क का पहला अक्षर लिखें, जिसे आप कॉल करना चाहते हैं.
 - 3 कॉल प्रारंभ करने के लिए  दबाएं.
- युक्ति!** अपने संपर्कों से स्कॉल करने के लिए, ऊपरी और नीचे की नेविगेशन कुंजियों का उपयोग करें.

कॉल का उत्तर देना और कॉल रद्द करना.

जब आपका फ़ोन रिंग होता है, तो कॉल का उत्तर देने के लिए,  दबाएँ.

जब आपका फ़ोन बज रहा हो, तो बजना बंद करने के लिए मौन का चयन करें.

यह तब उपयोगी है यदि आप एक मीटिंग के लिए अपनी प्रोफाइल को मौन पर करना भूल गए हैं.

इनकमिंग कॉल को अस्वीकार करने के लिए  दबाएँ या अस्वीकारें करें का चयन करें.

युक्ति! अपने कॉल्स का विभिन्न तरीकों से उत्तर देने के लिए आप अपने फ़ोन की सेटिंग्स बदल सकते हैं।

मेनू दबाएँ, सेटिंग्स का चयन करें और कॉल चुनें। उत्तर मोड चयनित करें और भेजें कुंजी दबाएँ, ऊपर स्लाइड करें या कोई भी कुंजी दबाएँ का चयन करें।

स्पीकरफ़ोन का उपयोग करना

कॉल के दौरान, आप  कुंजी दबाकर स्पीकरफ़ोन सक्रिय कर सकते हैं और हैंड्स-फ्री में हैंडसेट का उपयोग कर सकते हैं।

यदि स्पीकरफ़ोन सक्रिय हो, तो सामान्य हैंडसेट वार्तालाप मोड जारी रखने के लिए फिर से  दबाएँ।

शीघ्र डायलिंग

मेनू दबाएँ और संपर्क का चयन करें फिर शीघ्र डायल्स चुनें।

2 और 8 के बीच कुंजियों में से किसी पर संपर्क को असाइन करें।

शीघ्र डायल 1 आपके वॉइस मेल के लिए सेट किया जाता है और **9 SOS** मोड के लिए सेट किया जाता है ताकि आप दोनों को बदल नहीं सकते हैं।

शीघ्र डायल को एक बार असाइन कर लेने के बाद, शीघ्र डायल असाइन नंबर को दबाए रखकर आप कॉल आरंभ कर

सकते हैं।

आपके कॉल लॉग्स देखना

अपने कॉल लॉग्स देखने के लिए  दबाएँ।

बाईं और दाईं नेविगेशन कुंजियों का उपयोग करके आप छूटे, प्राप्त, और डायल किए गए कॉल्स के कॉल रिकॉर्ड भी जाँच सकते हैं।

कॉल सेटिंग्स बदलना

आप किसी कॉल के संगत मेनू सेट कर सकते हैं। मेनू दबाएँ, सेटिंग्स का चयन करें और कॉल चुनें।

कॉल निरस्त सूची: यह मेनू अस्वीकृत करने के लिए आपके द्वारा चुना गया, व्यक्ति का नंबर दिखाता है। आप जोड़ें बटन का उपयोग करके नए नंबर जोड़ सकते हैं। कॉल अस्वीकार सूची नंबर से प्राप्त आवक कॉल्स अपने आप अस्वीकृत किया जाएगा। कॉल लॉग में, ऐसे कॉल्स के लिए अस्वीकार आइकन दिखाया जाएगा।

टाइमड कॉल: आउटगोइंग कॉल्स अवधि की सीमा के बाद अपने आप डिस्कनेक्ट किए जाएंगे। यदि सेटिंग्स > कॉल > टाइमड कॉल में टाइमड कॉल सक्षम है, तो विकल्प मेनू (संपर्क, कॉल लॉग, डायल स्क्रीन) में से उपयोगकर्ता एक टाइमड कॉल प्रारंभ कर सकते हैं।

सेल्फ कॉल – सेल्फ कॉल एक असली आवक कॉल का नकल करते हैं। सेल्फ कॉल करने के लिए होम स्क्रीन पर '# * #' दबाएँ। यह कोई शुल्क चार्ज नहीं करता है ।

संपर्क

संपर्क खोजना

- 1 मुख्य पृष्ठ स्क्रीन से नाम का चयन करें।
- 2 कीपैड का उपयोग करते हुए उस संपर्क का पहला अक्षर दर्ज करें, जिसे आप कॉल करना चाहते हैं।
- 3 संपर्कों को स्कॉल करने के लिए ऊपरी और नीचे की नेविगेशन कुंजियों का उपयोग करें।

युक्ति! LG ग्राहक सेवा नंबर संपर्क सूची (18001809999) में डिफॉल्ट रूप से उपलब्ध है ।

नया संपर्क जोड़ना

- 1 मुख्य पृष्ठ स्क्रीन से नामों का चयन करें। विकल्प से नया संपर्क जोड़ें दबाएँ।
- 2 अपने नए संपर्क का प्रथम और अंतिम नाम दर्ज करें। आपको दोनों दर्ज नहीं करने हैं।

- 3 नंबर दर्ज करें और विकल्प का चयन करें फिर पूर्ण चुनें।

नोट: यदि आप अधिक जानकारी जोड़ते हैं, तो विकल्प दबाएँ और विवरण जोड़ें चुनें फिर अपने इच्छित विकल्पों का चयन करें।

किसी समूह में संपर्क जोड़ना

आप अपने संपर्कों को समूहों में सहेज सकते हैं, उदाहरण के लिए, अपने सहकर्मियों और परिजनों को अलग-अलग समूह में रखते हुए।

फ़ोन में सहकर्मी, परिवार, मित्र, VIP और स्कूल सहित कई समूह पहले से सेट हैं।

संदेश भेजना

संदेश भेजना

- 1 मेनू दबाएँ, संदेश भेजना का चयन करें और SMS या MMS भेजने के लिए संदेश बनाएँ चुनें।
- 2 नया संदेश संपादक खुल जाएगा। संदेश संपादक पाठ संदेश और मल्टीमीडिया संदेशों को एक सहज और संपादक के बीच आसानी से स्विच करने के लिए संयुक्त करता है। संदेश संपादक की डिफॉल्ट सेटिंग पाठ संदेश है।

- 3 T9 प्रीडिक्टिव मोड या **Abc** मैनुअल मोड या **123** मोड दर्ज कर अपना संदेश दर्ज करें. आप # कुंजी दबाकर पाठ इनपुट मोड को स्विच कर सकते हैं.
 - 4 फ़ोन नंबर दर्ज करें या विकल्प दबाएँ और अपने संपर्कों की सूची से एक संपर्क जोड़ने के लिए भेजें का चयन करें. संपर्कों को मार्क करने के बाद आप एकाधिक संपर्क भी जोड़ सकते हैं.
- नोट:** संदेश किसी समूह को भी भेजा जा सकता है. संदेश संपादित करें फिर भेजें दबाएँ और संपर्क समूह और फिर इच्छित समूह का चयन करें.
- 5 अपना संदेश दर्ज करें.
 - 6 विकल्प का चयन करें और सम्मिलित करें चुनें: बाई और दाई नेविगेशन कुंजियों का उपयोग करें और कोई छवि, वीडियो क्लिप, ध्वनि क्लिप, शेड्यूल, व्यावसायिक कार्ड, नोट, पाठ फ़ील्ड, करने के लिए, या एक पाठ टेम्पलेट जोड़ें.
 - 7 अपना संदेश भेजने के लिए भेजें दबाएँ. संपर्क के साथ एक संदेश थ्रेड बनाकर, अपना संदेश प्रदर्शित होता है और प्रतिक्रिया समान विंडो में दिखाई देता है.

युक्ति! संदेश फ़ील्ड में 1 पृष्ठ से अधिक लंबा पाठ दर्ज करने पर, आप अपना संदेश का प्रकार **SMS** या **MMS** के रूप में चयन कर सकते हैं.

यदि आप भेजे जाने वाले संदेश का प्रकार बदलना चाहते हैं, तो मेनू > संदेश भेजें > विकल्प > सेटिंग > पाठ संदेश दबाएँ, और लंबे पाठ ऐसे भेजें का चयन करें.

चेतावनी: चित्र, वीडियो क्लिप, ध्वनि क्लिप, सूची, व्यावसायिक कार्ड, पाठ फ़ील्ड या विषय को संदेश संपादक में जोड़ दिया गया है, यह स्वचालित रूप से **MMS** मोड में कनवर्ट कर दिया जाएगा और आपसे उसके अनुसार ही शुल्क लिया जाएगा.

पाठ दर्ज करना

आप फ़ोन के कीपैड का उपयोग करते हुए अल्फ़ान्यूमेरिक वर्ण दर्ज कर सकते हैं. फ़ोन में निम्न पाठ इनपुट मोड उपलब्ध हैं: **T9** मोड, **Abc** मोड और **123** मोड. मोड बदलने के लिए, # कुंजी दबाएँ.

नोट: कुछ फ़ील्ड में केवल एक पाठ इनपुट पद्धति की ही अनुमति होती है (जैसे कि पता पुस्तिका फ़ील्ड में टेलीफ़ोन नंबर).

T9 मोड

T9 मोड आपके द्वारा लिखे जा रहे शब्दों को पहचानने के लिए आपके द्वारा दबाई जा रही कुंजियों के क्रम के आधार पर अंतर्निहित शब्दकोश का उपयोग करता है। सामान्य रूप से, आप जिस अक्षर को दर्ज करना चाहते हैं, उससे संबंधित कुंजी दबाएं, और एकबार सभी अक्षर दर्ज किए जाने पर, शब्दकोश शब्द पहचानेगा।

T9 मोड का उपयोग करना

- जब आप प्रीडिक्टिव पाठ इनपुट मोड में होते हैं,  से  कुंजियां दबाकर शब्द को दर्ज करना प्रारंभ करें। एक की वाले अक्षर दबाएँ।
 - पूरी तरह से टाइप करने के बाद अगर शब्द अब भी गलत है, तो अन्य शब्द विकल्प तक पहुँचने के लिए  कुंजी को एक बार या अधिक दबाएँ।
 - यदि शब्द विकल्प सूची से इच्छित शब्द अनुपलब्ध है, तो **Abc** मोड का प्रयोग कर इसे जोड़ें।
- कोई भी कीस्ट्रोक संपादित करने या मिटाने के लिए पूर्ण शब्द दर्ज करें।
 - अक्षर मिटाने के लिए, साफ़ करें दबाएँ।

- प्रत्येक शब्द को कुंजी दबा कर रिक्ति के साथ  पूर्ण करें।

Abc मोड

जब तक अक्षर प्रदर्शित नहीं होता, यह मोड आपको आवश्यकता वाली अक्षर लेबल की कुंजी दबाकर, अक्षरों को एक बार, दो बार, तीन बार या चार बार दर्ज करने की अनुमति देता है।

123 मोड

प्रति संख्या एक कुंजीस्ट्रोक के उपयोग से संख्याएं टाइप करें।

आप अक्षर मोड में रहते हुए भी इच्छित कुंजी को दबाए रखकर अंक डाल सकते हैं।

प्रतीक सम्मिलित करना

यदि आप प्रतीक सम्मिलित करते हैं तो, * कुंजी दबाएँ, तब आप कोई प्रतीक चुन सकते हैं। या आप विकल्प दबाएँ और तब चिन्ह डालिए चुनें।

भाषा परिवर्तित करना

LG-A200 कई भाषाओं का समर्थन करता है. लेखन स्क्रीन से लेखन भाषा का चयन करने के लिए दो तरीकें हैं. आप विकल्प, लेखन भाषा पर जाएँ और इच्छित भाषा सेट करें. या, आप केवल * कुंजी दबा कर रखें. आपके चुनने की भाषा के आधार पर लेखन विकल्प भिन्न हो सकते हैं.

संदेश फ़ोल्डर्स

मेनू दबाएँ, संदेश चयन करें. और इच्छित फ़ोल्डर का चयन करें. **प्रारूप** - यदि किसी संदेश को पूर्ण लिखने के लिए आपके पास प्रयाप्त समय नहीं है, तो आप अभी तक लिखे गए संदेश को यहाँ सहेज सकते हैं.

आउटबॉक्स - जब संदेश भेजे जा रहे हों, तो यह एक अस्थायी संग्रहण फ़ोल्डर होता है.

सहेजे गए आइटम - आप अपने सहेजे गए संदेशों, पाठ टेम्पलेट्स और मल्टीमीडिया टेम्पलेट्स तक पहुँच बना सकते हैं.

भावनाएं - त्वरित प्रत्युत्तर के लिए पहले से लिखे गए, उपयोगी भावनाएं की एक सूची. आप भावनाएं को जोड़, संपादित और हटा सकते हैं. आप संदेश लिखते समय, अपनी

प्राथमिकता के अनुसार भावनाएं सम्मिलित कर सकते हैं.

संदेश अनुकूलन - आपके संदेश सेटिंग्स पूर्वनिर्धारित हैं, ताकि आप तुरंत संदेश भेज सकें. यदि आप सेटिंग्स को बदलना चाहें, तो आप सेटिंग्स विकल्प का उपयोग करते हुए यह कर सकते हैं.

ई-मेल

आपका ई-मेल सेट करना

आप अपने **LG-A200** पर ई-मेल का उपयोग करके कहीं से भी संपर्क में रह सकते हैं.

POP3 या **IMAP4** ई-मेल खाता सेटअप करना अब त्वरित और आसान है.

- 1 मेनू दबाएँ और ई-मेल चुनें.
- 2 पहली बार जब आप ई-मेल, खोलते हैं तो, आपको ईमेल खाता सेट करने की आवश्यकता होती है. आपको ई-मेल खाता जोड़ने में मदद के लिए एक सेटअप विज़ार्ड खुलता है.
- 3 पॉप अप निर्देश का पालन करें और आवश्यक जानकारी दर्ज करें.

आपके नए खाते का उपयोग कर ई-मेल भेजना

ई-मेल भेजने/प्राप्त करने के लिए, आपको ई-मेल खाता सेट करना चाहिए।

- 1 मेनू का चयन करें, ई-मेल का चयन करें और विकल्प चुनें।
- 2 ई-मेल लिखें चुनें और एक नया ई-मेल खुल जाएगा।
- 3 प्राप्तकर्ता का पता दर्ज करें और विषय लिखें।
- 4 अपना संदेश दर्ज करें।
- 5 विकल्प, संलग्न दबाएँ चित्र, वीडियो, ध्वनि, नाम व नंबर अनुलग्नित करें का चयन करें।
- 6 भेजें दबाएँ और आपका ई-मेल भेज दिया जाएगा।

कैमरा

तुरंत फोटो लेना

- 1 मेनू दबाएँ और मीडिया का चयन करें। व्यूफाइंडर खोलने के लिए कैमरा का चयन करें।
- 2 फोन को पकड़ कर और लेंस को फोटो के सब्जेक्ट पर पॉइंट करें।
- 3 फोटो लेने के लिए  कुंजी दबाएँ।

वीडियो कैमरा

तुरंत वीडियो शूट करना

- 1 मेनू दबाएँ और मीडिया का चयन करें, फिर वीडियो कैमरा चुनें।
- 2 कैमरा लेंस को वीडियो के सब्जेक्ट पर पॉइंट करें।
- 3 रिकॉर्डिंग प्रारंभ करने के लिए  कुंजी दबाएँ।
- 4 रिकॉर्ड व्यूफाइंडर में प्रकट होगा और टाइमर आपके वीडियो की लंबाई दिखाएगा।
- 5 रिकॉर्डिंग रोकने के लिए रोकें का चयन करें।

संगीत

आपके LG-A200 में एक अंतर्निहित संगीत प्लेयर है, ताकि आप अपने सभी पसंदीदा संगीत चला सकें।

कोई गीत चलाना

- 1 मेनू दबाएँ और मीडिया का चयन करें, फिर संगीत चुनें।
- 2 सभी गीतों का चयन करें और फिर इच्छित गाना चुनें।
- 3 गीत रोकने के लिए  चुनें।

4 अगले गीत को छोड़ने के लिए ►►
चुनें.

5 पिछले गीत को छोड़ने के लिए ◀◀
चुनें.

6 संगीत प्लेयर मेनू में वापस जाने के
लिए वापस चुनें.

नोट: संगीत अंतर्राष्ट्रीय संधियों और
राष्ट्रीय कॉपीराइट कानून में कॉपीराइट
द्वारा सुरक्षित हैं । **संगीत को पुनः** बनाने
या प्रतिलिपि बनाने के लिए अनुमति या
एक लाइसेंस प्राप्त करना आवश्यक हो
सकता है. कुछ देशों में राष्ट्रीय कानून
कॉपीराइट की गई सामग्रियों की निजी
प्रतिलिपि बनाने से प्रतिबंधित करता है.
कृपया इस प्रकार की सामग्री के उपयोग
से संबंधित उचित देश के राष्ट्रीय कानून
को जाँच लें.

FM रेडियो

आपके LG-A200 में एक FM रेडियो
सुविधा है ताकि आप कभी भी अपने
मनपसंद रेडियो स्टेशन को ट्यून करके
सुन सकें.

FM रेडियो सुनते समय, आप एक छोटी
क्लिप भी रिकॉर्ड और इसे रक्षित कर
सकते हैं.

नोट: रेडियो सुनने के लिए आपको अपना
हैडसेट जोड़ने की आवश्यकता होगी.

रेडियो सुनने और रेडियो को अच्छा
ग्रहण करने वाला बनाने के लिए, प्लग को
हैडसेट कनेक्टर में सम्मिलित करें.

स्टेशन खोजना

- 1 मेनू दबाएँ और मीडिया का चयन करें,
फिर FM रेडियो चुनें.
- 2 विकल्प चुनें और स्वतः स्केन चुनें
फिर सेट करें का चयन करें. स्टेशन
खोजने के लिए, आप बाएँ और दाएँ
नेविगेशन कुंजियों का भी उपयोग कर
सकते हैं.

रेडियो सुनना

- 1 मेनू दबाएँ और मीडिया का चयन करें,
फिर FM रेडियो चुनें.
- 2 उस स्टेशन के चैनल नंबर का चयन
करें, जिसे आप सुनना चाहते हैं.

युक्ति! आप अंतर्निहित स्पीकर द्वारा रेडियो
सुन सकते हैं. विकल्प दबाएँ, स्पीकर द्वारा
सुनें का चयन करें.

आपके रेडियो को रिकॉर्ड करना

- 1 रेडियो सुनते समय  कुँजी दबाएँ.
- 2 रिकॉर्डिंग समय आपके फ़ोन पर प्रदर्शित होता है. यदि आप रिकॉर्डिंग रोकना चाहते हैं, तो रोकें दबाएँ.
रिकॉर्डिंग पूरी होने पर, रिकॉर्ड की गई सामग्री गैलरी में mp3 फ़ाइल के रूप में सहेजी जाएगी.

नोट: आपके रेडियो रिकॉर्ड करने के बाद, विकल्प का चयन करके और रेडियो रिकॉर्डिंग का चयन करके आप अपनी रक्षित सभी रेडियो रिकॉर्डिंग सुन सकते हैं.

नोट: अपनी रिकॉर्डिंग सेटिंग्स कॉन्फ़िगर करने के लिए जैसे रक्षित स्मृति, रिकॉर्ड प्रकार या प्री-रिकॉर्डिंग, विकल्प दबाएँ और रिकॉर्डिंग सेटिंग्स का चयन करें.

नोट: आपके रिकॉर्ड बटन दबाने से पहले प्री-रिकॉर्डिंग आपको कुछ सेकंड्स रिकॉर्ड करने देता है. यदि आप रिकॉर्ड प्रकार संगीत केवल रिकॉर्डिंग सेट करते हैं तो, जब आप रिकॉर्ड करें तब संगीत बिना वश्र की टिप्पणी के बाहर निकाला जाएगा.

वॉइस रिकॉर्डर

वॉइस मेमो या अन्य ध्वनियां रिकॉर्ड करने के लिए अपने वॉइस रिकॉर्डर का उपयोग करें.

आपके वॉइस मेमो को रिकॉर्ड करना

- 1 मेनू दबाएँ और मीडिया का चयन करें, फिर वॉइस रिकॉर्डर चुनें.
- 2 रिकॉर्डिंग प्रारंभ करने के लिए  कुँजी दबाएँ.
- 3 रिकॉर्डिंग बंद करने के लिए रोकें चुनें.
- 4 विकल्प दबाएँ और सुनने के लिए पिछला रिकॉर्ड किया गया चलाएँ का चयन करें.

गैलरी

आप अपने फ़ोन की मेमोरी में किसी भी मीडिया फ़ाइल का संग्रह कर सकते हैं, ताकि आपको आपकी सभी छवियों, ध्वनियों, वीडियोज़, अन्य और गेम्स के लिए आसानी से पहुँच हो.

आप अपनी फ़ाइलों को मेमोरी कार्ड में भी सहेज सकते हैं.

मेमोरी कार्ड उपयोग करने का लाभ यह है कि आप अपने फ़ोन की मेमोरी का स्थान खाली कर सकते हैं.

आपकी सभी मल्टीमीडिया फ़ाइलें गैलरी में सहेजी जाएँगी.

फ़ोल्डर्स की सूची खोलने के लिए मेनू दबाएं तब गैलरी का चयन करें.

नोट: गुप्त बॉक्स: अनाधिकृत इस्तेमाल से बचाने के लिए आप मल्टीमीडिया फाइल को गुप्त बॉक्स में डाल सकते हैं। डाटा को इस्तेमाल करने के लिए आपको गुप्त कोड चाहिए होगा। डिफॉल्ट गुप्त कोड 0000 हैं।

सुविधायें

आपके खाली समय में मनोरंजन के लिए, आपके LG-A200 में पहले से लोड किए गए गेम्स हैं।

यदि आप कोई भी अतिरिक्त गेम या सुविधायें डाउनलोड करना चुनते हैं, तो वे इस फोल्डर में सहेजे जाएँगे। मेनू दबाएँ और सुविधायें का चयन करें। मेरे खेल एवं अनुप्रयोग चुनें।

NewsHunt : राह में होने पर भी क्षेत्रीय में न्यूज़पेपर्स देखने और पढ़ने हेतु सक्षम किए जाने के लिए डिज़ाइन किया गया एक मोबाइल अनुप्रयोग है।

Opera Mini 5 : ये एक जावा ब्राउज़र अनुप्रयोग है।

Messenger

यह MSN चैट

अनुप्रयोग प्रदान करते हैं। आप अपने MSN खाते के साथ लॉग इन कर सकते हैं।

SNS

Facebook

होम: लॉग इन करें और आप अपने मित्र की अपडेट की गई स्थिति देखेंगे। नई स्थिति के बारे में अपनी टिप्पणी इनपुट करें या अन्य की जांच करें।

प्रोफाइल: आप वॉल > स्थिति अपडेट्स का चयन कर सकते हैं। और वर्तमान स्थिति लिख सकते हैं। अपना जानकारी विवरण देखें।

Twitter

एक समाजिक नेटवर्किंग सेवा है जो उपयोगकर्ताओं को अन्य उपयोगकर्ताओं के संदेश भेजने और पढ़ने के लिए उपयोग होता है। इसे **tweets** कहते हैं।

नोट: उपर दिए गये अनुप्रयोग उपयोग करने से पहले कृपाया सुनिश्चित करें कि स्वतः अधतम चालु हैं।

नोट: इस सेवा से कनेक्ट होने पर अतिरिक्त शुल्क लगाया जाता है। अपने नेटवर्क प्रदाता से अपना डेटा शुल्क जाँचें।

आयोजक

आपका अलार्म सेट करना(मेनू > आयोजक > अलार्म घड़ी)

किसी निर्दिष्ट समय को याद रखने के लिए आप 5 अलार्म घड़ियाँ तक सेट कर सकते हैं।

कैलेंडर का उपयोग करना(मेनू > आयोजक > कैलेंडर)

जब आप इस मेनू में आते हैं, तो एक कैलेंडर दिखाई देता है।

वर्तमान दिनांक पर वर्गाकार कर्सर स्थित होता है। आप नेविगेशन कुंजियों का उपयोग करके कर्सर को किसी अन्य तिथि पर ले जा सकते हैं।

नोट: उपयोगकर्ता कोई SMS शेड्यूल कर सकते हैं, ताकि विकल्प सूची से यह सेट की गई दिनांक और सेट किए गए समय पर पहले से निर्धारित नंबर/संपर्क को भेजा जा सके ।

आपकी करने के लिए सूची में आइटम जोड़ना(मेनू > आयोजक > टू-डू सूची)

आप करने के लिए कार्यों को देख, संपादित और जोड़ सकते हैं।

नोट जोड़ना(मेनू > आयोजक > नोट्स)

आप अपने स्वयं के नोट्स यहाँ पंजीकृत कर सकते हैं।

गुप्त नोट्स(मेनू > आयोजक > गुप्त नोट्स)

आप अपनी गोपनीयता की सुरक्षा के लिए व्यक्तिगत मेमो लिख सकते हैं।

आप इस मेनू का उपयोग करने के लिए, सुरक्षा कोड दर्ज करें।

अपनी विश्व घड़ी में एक शहर जोड़ना(मेनू > आयोजक > विश्व समय)

आप विश्व समय की सूची में वह शहर जोड़ सकते हैं, जिसकी आपको आवश्यकता है।

आप पूरे विश्व के मुख्य शहरों का वर्तमान समय भी जाँच सकते हैं।

अपना कैलकुलेटर उपयोग करना(मेनू > आयोजक > कैलकुलेटर)

कैलकुलेटर मूल अंकगणितीय फंक्शंस प्रदान करता है। जोड़ना, घटाना, गुणा, विभाजन और वैज्ञानिक अनुप्रयोग भी।

दिनांक ढूँढने वाला(मेनू > आयोजक > तिथि खोजक)

तिथि खोजक एक हैंडी उपकरण है जो दिनों की एक निश्चित संख्या के बीतने के बाद कौन सा दिनांक होगा, यह परिकलित करने में आपकी मदद करता है।

इकाई कनवर्ट करना(मेनू > आयोजक > परिवर्तक)

यह कई मापों को आपकी इच्छित इकाई में कनवर्ट करता है।

स्टॉपवॉच का उपयोग करना(मेनू > आयोजक > स्टॉपवॉच)

यह विकल्प आपको स्टॉपवॉच फंक्शन के उपयोग की अनुमति देता है।

के पास जाओ(मेनू > आयोजक > के पास जाओ)

आप जिस मेनू को खोज रहे हैं, वहां तक जाने में यह आपकी मदद करता है।

आप आइटम को यहां जाएँ के रूप में सेट कर सकते हैं।

सिम सेवाएं(मेनू > आयोजक > सिम सेवाएं)

यह सुविधा सिम और नेटवर्क सेवाओं पर निर्भर है। यदि सिम कार्ड, SAT (अर्थात सिम ऐप्लिकेशन टूलकिट) सेवाओं का समर्थन करता है, तो यह मेनू सिम कार्ड पर संग्रहीत ऑपरेटर विशिष्ट सेवा का नाम होगा।

इंटरनेट

इंटरनेट ब्राउज़र एक्सेस कर रहा है

आप वैप ब्राउज़र लॉन्च कर सकते हैं और इंटरनेट प्रोफ़ाइल्स पर सक्रिय प्रोफ़ाइल के होमपेज पर पहुँच सकते हैं। आप मैन्युअल रूप से भी URL पता दर्ज कर सकते हैं और संबद्ध वैप पृष्ठ तक पहुँच सकते हैं। मेनू दबाएँ और इंटरनेट का चयन करें।

नोट: इस सेवा से कनेक्ट करते हुए या सामग्री डाउनलोड करते हुए अतिरिक्त खर्च होता है। अपने नेटवर्क प्रदाता से अपना डेटा शुल्क जाँचें।

सेटिंग्स

अपनी प्रोफाइल्स व्यक्तिगत बनाना (मेनू > सेटिंग्स > प्रोफाइल्स)

आप प्रत्येक प्रोफाइल सेटिंग को व्यक्तिगत बना सकते हैं। अपना इच्छित प्रोफाइल चुनें और विकल्प का चयन करें और संपादित करें चुनें।

नोट: टाइमड प्रोफाइल: (मेनू > सेटिंग्स > प्रोफाइल्स > विकल्प > टाइमड) उपयोगकर्ता आवश्यक प्रोफाइल को पूर्वनिर्धारित समय पर स्वचालित रूप से सेट कर सकते हैं।

उदाहरण स्वरूप: यदि उपभोक्ताकर्ता हैंडसेट प्रोफाइल को 2:00~3:00 बजे तक मौन चाहते हैं तो समय और उस समय सीमा के लिए प्रोफाइल को मौन के रूप में चुनें।

फ्लाइट मोड का उपयोग करना (मेनू > सेटिंग्स > प्रोफाइल्स > फ्लाइट मोड)

फ्लाइट मोड चालू करने के लिए इस फंक्शन का उपयोग करें।

फ्लाइट मोड चालू होने पर, आप कॉल नहीं कर सकेंगे, इंटरनेट से कनेक्ट नहीं हो सकेंगे, संदेश नहीं भेज सकेंगे।

अपनी डिसप्ले सेटिंग्स बदलना (मेनू > सेटिंग्स > प्रदर्शन)

आप फोन डिसप्ले की सेटिंग्स बदल सकते हैं।

अपना दिनांक और समय बदलना (मेनू > सेटिंग्स > दिनांक और समय)

आप दिनांक और समय से संबंधित फंक्शन सेट कर सकते हैं।

अपनी कनेक्टिविटी सेटिंग्स बदलना (मेनू > सेटिंग्स > संयोजकता)

आपकी कनेक्टिविटी सेटिंग्स आपके नेटवर्क ऑपरेटर द्वारा पहले ही सेट कर दी गई है, इसलिए आप सीधे ही अपने नए फोन का उपयोग शुरू कर सकते हैं।

यदि आप कोई सेटिंग्स बदलना चाहते हैं, तो इस मेनू का उपयोग करें।

इस मेनू में आप नेटवर्क सेटिंग और डाटा पहुँच प्रोफाइल्स कॉन्फिगर कर सकते हैं।

अपनी ब्लूटूथ सेटिंग्स बदलना

- 1 मेनू दबाएँ और सेटिंग्स का चयन करें, फिर ब्लूटूथ चुनें।
- 2 सेटिंग्स आपके परिवर्तन इसमें करें का चयन करें:

- **मेरे डिवाइस दृश्यता** – चुनें कि आपकी डिवाइस अन्यो के लिए दृश्यमान रहे, छुपी रहे या 1 मिनट के लिए दृश्यमान हो.
- **मेरा हैंडसेट नाम** – अपने LG-A200 के लिए एक नाम दर्ज करें.
- **समर्थित सेवाएँ** – यह किसका समर्थन करता है, दिखाता है.
- **मेरा पता** – अपने ब्लूटूथ का पता दिखाएँ.

किसी अन्य ब्लूटूथ डिवाइस से युग्मित करना

- 1 जाँचे कि आपका ब्लूटूथ चालू और दृश्यमान है. आप मेरे डिवाइस की दृश्यता, फिर दृश्यमान चयनित करके, ब्लूटूथ सेटिंग्स मेनू में अपनी दृश्यता परिवर्तित कर सकते हैं.
- 2 ब्लूटूथ मेनूज़ से नए डिवाइस खोजें का चयन करें.
- 3 आपका LG-A200 डिवाइसेज़ के लिए खोज करेगा. खोज पूर्ण होने पर स्क्रीन पर जोड़ें और ताज़ा करें प्रकट होंगे.
- 4 आप जुड़ने के लिए अपना इच्छित डिवाइस चुनें, फिर हैंडसेट आपके द्वारा हर बार कनेक्ट होने पर डिफ़ॉल्ट रूप से पासकोड बनाता है.

- 5 फिर आपका फ़ोन अन्य डिवाइस से कनेक्ट होगा.
- 6 अब आपका पासकोड रक्षित ब्लूटूथ कनेक्शन तैयार है.

युक्ति!

- 1 जब आप ब्लूटूथ हेडसेट का उपयोग करते हैं, तो जब आप वीडियो चलाते हैं तो **A2DP** और **AVRCP** प्रोफ़ाइल समर्थित नहीं होते हैं. यदि आप ब्लूटूथ हेडसेट का उपयोग करते हैं तो इसका अर्थ है कि आप वीडियो साउंड नहीं सुनेंगे.
- 2 ब्लूटूथ फ़ाइल हस्तांतरण कुछ चलते हुए अनुप्रयोग के अंतर्गत ब्लॉक कर दिया जाएगा. (वॉइस कॉल, कैमरा/केमकॉडर, म्यूज़िक प्लेयर, UMS / पीसी सूट)

अपने फ़ोन की सेटिंग्स बदलना(मेनू > सेटिंग्स > फ़ोन)

अपने LG-A200 को अपनी स्वयं की शैली के अनुसार कार्य करने हेतु अनुकूलित करने का आनंद उठाएँ.

स्वतः की लॉक – कीपैड को स्टैंडबाय स्क्रीन में स्वचालित रूप से लॉक करता है.

मेरा नेवी. कुँजी – आप 4 नेविगेशन कुँजियों के शार्टकट्स परिवर्तित कर सकते हैं.

भाषा – आप अपने फ़ोन के प्रदर्शन पाठों के लिए भाषा बदल सकते हैं. इस बदलाव से भाषा इनपुट मोड भी प्रभावित होगा.

बैटरी स्थिति – ऊर्जा बचत सेटिंग्स स्विच करने के लिए ऑटो, हमेशा चालू या बंद चुनें. यदि आप हमेशा चालू सेट करते हैं, तो आप बैटरी की ऊर्जा की बचत कर सकते हैं.

हैंडसेट जानकारी – अपने LG-A200 के लिए तकनीकी जानकारी देखें.

अपनी सुरक्षा सेटिंग्स बदलना (मेनू > सेटिंग्स > सुरक्षा)

अपना LG-A200 और अन्य महत्वपूर्ण जानकारी सुरक्षित रखने के लिए अपनी सुरक्षा सेटिंग्स परिवर्तित करें.

- **PIN कोड अनुरोध** – जब आप अपना फ़ोन चालू करें तो अनुरोध किए जाने पर एक पिन कोड चुनें.
- **हैंडसेट अवरोधित** – अपने हैंडसेट को लॉक करने के लिए चुनें.

अनुप्रयोग लॉक : फ़ोन के अनुप्रयोग का अनअधिकृत इस्तमाल रोकने के लिए, अनुप्रयोग लॉक सक्रिय कर सकते हैं । एक बार अनुप्रयोग लॉक सक्रिय होने पर सिर्फ़ पासवर्ड से ही अनुप्रयोग में प्रवेश कर सकते हैं । डिफॉल्ट पासवर्ड 0000 हैं.

- **यदि SIM परिवर्तित किया गया है, तो लॉक करें** – यदि आप इस विकल्प को सक्रिय करते हैं, तो सिम कार्ड बदलते समय, आपका फ़ोन एक सुरक्षा कोड का अनुरोध करेगा.
- **एंटी-थेफ़्ट – मोबाइल ट्रैकर** – हैंडसेट चोरी हो जाने पर, हैंडसेट वास्तविक स्वामी द्वारा कॉन्फिगर किए गए नंबर पर SMS भेजता है. ATMT(एंटी-थेफ़्ट मोबाइल ट्रैकर) सुविधा को सक्रिय करने के लिए, सुरक्षा कोड दर्ज करें. और आपको ATMT को चालू पर सेट करने, और ATMT सेटिंग्स को नाम, नंबर के साथ सेट करने की आवश्यकता होगी. डिफॉल्ट सुरक्षा कोड "0000" है. ATMT SMS में चोरी हुए फ़ोन IMEI के बारे में जानकारी और उस हैंडसेट का उपयोग कर रहे व्यक्ति का नंबर होगा.
- **कोड बदलें** – अपने PIN कोड, PIN2 कोड या लॉक कोड को परिवर्तित करें.

एसओएस मोड

आपातकालिन स्थितियों में, जब एसओएस मोड चालू हो तब एसओएस संदेश भेजने के लिए '9' दबा कर रखें। यह लागू प्राप्तकर्ताओं को भेजा जाएगा। यदि ये आपको वापस कॉल करते हैं तो, आपका फोन स्वतः ही स्वीकार कर लेगा। उस समय, सभी अधिसूचना साउंड म्यूट कर दिया जाएगा। और अन्य मेनूज़, अनुपलब्ध होंगे। एसओएस मोड से बाहर निकलने के लिए, होमस्क्रीन में समाप्ति कुंजी दबाएँ।

मेमोरी स्थिति देखना (मेनू > सेटिंग > स्मृति की जानकारी)

प्रत्येक मेमोरी के उपयोग के तरीके निर्धारित करने और उपलब्ध स्थान देखने के लिए, आप मेमोरी प्रबंधक का उपयोग कर सकते हैं। सामान्य, आरक्षित, SIM और बाह्य मेमोरी और मेमोरी कार्ड डाले जाने पर प्राथमिक संग्रहण भी सेट करें।

अपने फोन को रीसेट करना(मेनू > सेटिंग्स > फ़ैक्ट्री सेटिंग्स पुनर्स्थापित करें)

सभी सेटिंग्स को उनकी फ़ैक्टरी परिभाषाओं के अनुसार रीसेट करने के लिए फ़ैक्टरी सेटिंग्स पुनरुद्बहाल करें का उपयोग करें।

यह फ़ंक्शन सक्रिय करने के लिए आपको सुरक्षा कोड की आवश्यकता होगी।

डिफ़ॉल्ट सुरक्षा कोड "0000" पर सेट किया गया है।

सॉफ़्टवेयर नवीनीकरण

LG मोबाइल फ़ोन सॉफ़्टवेयर इंटरनेट से अपडेट होता है

इस फ़ंक्शन उपयोग करने के बारे में अधिक जानकारी के लिए, कृपया इस पर जाएँ <http://update.lgmobile.com> या <http://www.lg.com/common/index-jsp> → देश और भाषा का चयन करें।

यह सुविधा आपको सर्विस सेंटर जाए बिना ही आसानी से इंटरनेट द्वारा अपने फ़ोन के फ़र्मवेयर को नवीनतम संस्करण से अपडेट करने की अनुमति देता है।

जैसा कि मोबाइल फ़ोन फ़र्मवेयर अपडेट को अपडेट प्रक्रिया के लिए उपयोगकर्ता के संपूर्ण ध्यान की आवश्यकता होती है, कृपया आगे बढ़ने से पहले प्रत्येक चरण पर प्रकट होने वाले निर्देशों और नोट्स की जाँच करना सुनिश्चित करें.

कृपया ध्यान दें कि नवीनीकरण के दौरान USB डेटा केबल या बैटरी निकालना आपके मोबाइल फ़ोन को गंभीर रूप से क्षतिग्रस्त कर सकता है.

PC सुइट

आप अपने PC को अपने फोन के साथ सिंक्रनाइज कर सकते हैं. यह आपके सभी महत्वपूर्ण विवरण और दिनांक का मिलान सुनिश्चित करेगा और एक बैकअप के रूप में भी कार्य करेगा ताकि आप निश्चित रह सकें.

इसके लिए उपयोगकर्ता युएसबी केबल के माध्यम से पीसी को फोन के साथ कनेक्ट करें और डेटा सेवा का चयन करें ।

नोट: प्रदान किए गए CD उपयोग करके PC सुइट इंस्टाल करें एवं इंस्टालेशन गाइड का पालन करें.

सुरक्षित और प्रभावी उपयोग के दिशानिर्देश

कृपया, इन सरल दिशानिर्देशों को पढ़ें। इन दिशानिर्देशों का पालन न करना खतरनाक या गैरकानूनी हो सकता है।

रेडियो फ्रीक्वेंसी ऊर्जा के संपर्क में आना

रेडियो तरंग से संपर्क और विशिष्ट अवशोषण दर (SAR) की जानकारी।

यह मोबाइल फोन मॉडल **LG-A200** रेडियो तरंगों के एक्सपोजर के लिए लागू सुरक्षा आवश्यकताओं के अनुपालन हेतु डिज़ाइन किया गया है।

ये उपाय वैज्ञानिक दिशानिर्देशों पर आधारित होते हैं जिनमें हर उम्र के व्यक्तियों की सुरक्षा सुनिश्चित करने के लिए डिज़ाइन किए गए सुरक्षात्मक तरीके शामिल होते हैं।

- रेडियो तरंग एक्सपोजर दिशानिर्देश, विशिष्ट अवशोषण दर या SAR कहलाने वाली एक मापन इकाई का उपयोग करते हैं। फोन पर SAR के परीक्षण मानक विधियों के उपयोग से किए जाते हैं, इसके लिए उपयोग होने वाले सभी फ्रीक्वेंसी बैंड्स में फोन के उच्चतम प्रमाणित पावर स्तर पर संप्रेषण किया जाता है।

- वैसे तो विभिन्न LG फोन मॉडल के SAR स्तर में भिन्नता हो सकती है, किंतु उन सभी को रेडियो तरंगों के प्रति एक्सपोजर के लिए संबंधित दिशानिर्देशों को पूरा करने के लिए बनाया गया है।
- नॉन-आयोनाइजिंग रेडिएशन प्रोटेक्शन (ICNIRP) के लिए अंतरराष्ट्रीय आयोग द्वारा अनुशंसित SAR सीमा 10 ग्रा टिशू पर औसतन 2वॉट/किग्रा होती है।
- इस मॉडल फोन के लिए कान में उपयोग के लिए DASY4 द्वारा जांचा गया उच्चतम SAR मान 0.950 वॉट/किग्रा (10 ग्रा) है और शरीर पर धारण किए जाने पर 0.989 वॉट/किग्रा (10 ग्रा) है।
- जिन देशों/क्षेत्रों ने इंस्टीट्यूट ऑफ इलेक्ट्रिकल एंड इलेक्ट्रॉनिक्स इंजीनियर्स (IEEE) द्वारा अनुशंसित SAR सीमा को स्वीकार किया है, वहाँ के निवासियों के लिए SAR डेटा जानकारी 1ग्रा टिशू पर औसतन 1.6 वॉट/किग्रा है।

सुरक्षित और प्रभावी उपयोग के लिए दिशानिर्देश(जारी)

उत्पाद की देखभाल और रखरखाव



चेतावनी

इस विशेष फोन मॉडल के साथ केवल बताई गई बैटरियां, चार्जर्स और सहायक उपकरणों का ही उपयोग करें.

किसी भी दूसरे प्रकार का उपयोग करने पर फोन पर लागू होने वाले अनफ़र्मोदन या वॉरंटी अमान्य हो सकते हैं और यह खतरनाक हो सकता है.

- इस यूनिट को डिसअसेंबल न करें. सुधारने की आवश्यकता होने पर इसे योग्य सेवा तकनीशियन के पास ले जाएँ.
- LG के स्वयं के विवेक पर वॉरंटी के अंतर्गत किए जाने वाले सुधारों में, नए या सुधार किए गए पुर्जों या बोर्ड्स का प्रतिस्थापन शामिल है, बशर्ते उनकी क्रियात्मकता प्रतिस्थापित किए जाने वाले पुर्जों के बराबर हो.
- बिजली के उपकरणों जैसे टीवी, रेडियो और पर्सनल कंप्यूटर से दूर रखें.
- यूनिट को गर्मी के स्रोतों जैसे रेडिएटर्स या कुकर से दूर रखना चाहिए.
- इसे गिराएँ नहीं.
- यूनिट को मैकेनिकल कंपन या झटकों से बचाएँ.
- जिस किसी भी क्षेत्र में विशेष नियम के तहत आवश्यक हो, वहाँ फोन बंद कर दें. उदाहरण के लिए, अपने फोन का उपयोग अस्पतालों में न करें, क्योंकि यह संवेदनशील मेडिकल उपकरणों को प्रभावित कर सकता है.
- चार्ज होते समय फोन को गीले हाथों से न पकड़ें. इससे बिजली का झटका लग सकता है और आपके फोन को गंभीर रूप से क्षति हो सकती है.
- हैंडसेट को ज्वलनशील पदार्थों के नजदीक चार्ज न करें, क्योंकि हैंडसेट गर्म हो सकता है और आग के खतरे का कारण बन सकता है.
- यूनिट को बाहर से साफ करने के लिए सूखे कपड़े का उपयोग करें (बेंजीन, थिनर, या एल्कोहल जैसे विलायकों का उपयोग न करें).
- फोन को हल्के साज-सामान पर रख कर चार्ज न करें.
- फोन अच्छे हवादार क्षेत्र में चार्ज किया जाना चाहिए.
- इस यूनिट को अत्यधिक धुएं या धूल में न रखें.

- फोन को क्रेडिट कार्ड्स या ट्रांसपोर्ट टिकटों के पास न रखें यह चुंबकीय पट्टियों पर अंकित जानकारी को प्रभावित कर सकता है.
- स्क्रीन को नुकीली वस्तु से न ठकठकाएँ, क्योंकि इससे फोन को नुकसान हो सकता है.
- फोन को तरल पदार्थ या नमी में न रखें.
- सहायक उपकरण जैसे ईयरफोन का सावधानीपूर्वक उपयोग करें. एंटीना को अनावश्यक रूप से न छुएँ.

कार्यकुशल फोन कार्रवाई

इलेक्ट्रॉनिक डिवाइसेज़

सभी मोबाइल फोनों में व्यवधान आ सकता है, जो कार्यक्षमता को प्रभावित कर सकता है.

- बिना अनुमति लिए अपने मोबाइल फोन का उपयोग मेडिकल उपकरण के पास न करें. फोन को पेसमेकर के ऊपर रखने से बचें, जैसे कि, ऊपरी जेब में.
- मोबाइल फोन द्वारा कुछ श्रवण सुविधाएँ बाधित हो सकती हैं.
- छोटा-सा व्यवधान भी टीवी, रेडियो, पीसी इत्यादि को प्रभावित कर सकता है.

सड़क सुरक्षा

जिन क्षेत्रों में आप वाहन चलाते हैं, वहाँ मोबाइल फोन के उपयोग से संबंधित कानूनों और विनियमों की जानकारी ले लें.

- वाहन चलाते समय हैंड-हेल्ड फोन का उपयोग न करें.
- वाहन चलाने पर पूरा ध्यान दें.
- यदि उपलब्ध हो, तो हैंड्स-फ्री किट का उपयोग करें.
- यदि वाहन चलाते समय आवश्यक हो, तो कॉल करने या उत्तर देने से पहले वाहन को सड़क के किनारे लगाएँ.
- RF ऊर्जा आपके वाहन के कुछ इलेक्ट्रॉनिक सिस्टम्स जैसे कार स्टीरियो और सुरक्षा उपकरण को प्रभावित कर सकती है.
- जब आपके वाहन में एयर बैग की सुविधा हो, तो लगे हुए या पोर्टेबल वायरलेस उपकरण से व्यवधान न डालें. इससे एयर बैग विफल हो सकता है या अनुपयुक्त कार्य के चलते गंभीर चोट पहुँचा सकता है.

सुरक्षित और प्रभावी उपयोग के लिए दिशानिर्देश(जारी)

- यदि आप यात्रा के समय संगीत सुन रहे हैं, तो कृपया सुनिश्चित करें कि वॉल्यूम उचित स्तर पर रहे, जिससे आप अपने चारों ओर के वातावरण के प्रति सचेत रहें. सड़क के किनारे यह विशेष महत्व का है.

अपने सुनने की क्षति से बचें

यदि आप लंबे समय तक तेज़ ध्वनि सुनते हैं तो आपकी सुनने की क्षमता को क्षति पहुंच सकती है.

इसलिए हम सलाह देते हैं कि आप कान के पास हैंडसेट को चालू या बंद न करें. हम इसकी भी सलाह देते हैं कि संगीत और कॉल वॉल्यूम उचित स्तर पर सेट हों.

नोट: इअरफोन से अत्यधिक ध्वनि और दबाव के कारण सुनने की क्षमता खो सकती है.

कांच के हिस्से

आपके मोबाइल डिवाइस के कुछ भाग कांच के बने हैं.

यदि आपका मोबाइल डिवाइस किसी सख्त सतह पर गिर जाता है या उसे कोई शक्तिशाली धक्का लगता है, तो यह कांच टूट सकता है.

यदि कांच टूटता है तो स्पर्श नहीं करें या निकालने का प्रयास न करें.

अपने मोबाइल डिवाइस का उपयोग तब तक रोकें जब तक कांच अधिकृत सेवा प्रदाता द्वारा बदल नहीं दिया जाता.

विस्फोटन क्षेत्र

फोन का उपयोग ऐसे स्थान पर न करें, जहाँ विस्फोट हो रहे हों.

प्रतिबंधों पर ध्यान दें और विनियमों या नियमों का पालन करें.

संभावित रूप से विस्फोट वाले वातावरण

- ईंधन भरने के स्थान पर अपने फोन का उपयोग न करें.
- ईंधन या रसायनों के पास उपयोग न करें.
- मोबाइल फोन या सहायक उपकरणों को ज्वलनशील गैस, तरल या विस्फोटकों के साथ अपने वाहन में न ले जाएँ या न ही रखें.

विमान में

वायरलेस डिवाइसेज़ से एयरक्रॉफ़्ट में व्यवधान उत्पन्न हो सकता है।

- किसी भी एयरक्रॉफ़्ट में चढ़ते समय अपना मोबाइल फ़ोन बंद कर दें।
- क्रू की अनुमति के बिना विमानतल पर इसका उपयोग न करें।

बच्चे

फ़ोन को छोटे बच्चों की पहुँच से दूर किसी सुरक्षित स्थान पर रखें।

इसमें छोटे-छोटे भाग होते हैं जो यदि अलग हो जाएँ तो गले में फँस सकते हैं।

आपातकालीन कॉल्स

आपातकालीन कॉल्स सभी मोबाइल नेटवर्क्स पर उपलब्ध नहीं भी हो सकते हैं। इसलिए, आपको आपातकालीन कॉल्स के लिए केवल अपने फ़ोन पर ही निर्भर नहीं रहना चाहिए। अपने स्थानीय सेवा प्रदाता से इसकी जानकारी लें।

बैटरी जानकारी और देखभाल

- बैटरी रिचार्ज करने के पहले आपको उसे पूरी तरह डिस्चार्ज करने की आवश्यकता नहीं है।
- अन्य बैटरी सिस्टम्स के विपरीत, ऐसा कोई मेमोरी प्रभाव नहीं है जिससे बैटरी के प्रदर्शन पर असर पड़ता है।

- केवल LG बैटरियों और चार्जर्स का उपयोग करें। LG चार्जर्स, बैटरी की आयु अधिकतम सीमा तक बढ़ाने के लिए डिज़ाइन किए गए हैं।
- बैटरी पैक को डिसअसेंबल न करें या उसे शॉर्ट-सर्किट से बचाएँ।
- बैटरी पैक के धातु वाले हिस्सों को साफ़ रखें।
- बैटरी का प्रदर्शन अपेक्षानुसार न रहने पर उसे बदल दें। बैटरी पैक को सैकड़ों बार रीचार्ज किया जा सकता है, जब तक कि उसे बदलने की आवश्यकता न हो।
- यदि बैटरी को लंबे समय से प्रयोग नहीं किया गया है, तो इसकी उपयोगिता को अधिकतम बढ़ाने के लिए इसे रीचार्ज करें।
- बैटरी चार्जर को सीधे धूप में न रखें या बाथरूम जैसी अधिक नमी वाली जगहों पर इसका उपयोग न करें।
- बैटरी को गर्म या ठंडे स्थानों पर न रखें, इससे बैटरी के प्रदर्शन पर बुरा असर हो सकता है।
- यदि बैटरी को किसी गलत प्रकार की बैटरी से बदला जाता है तो विस्फोट का खतरा होता है।


सुरक्षित और प्रभावी उपयोग के लिए दिशानिर्देश(जारी)

- उपयोग की गई बैटरीज का निपटान निर्माता के निर्देशों के अनुसार ही करें। जब भी संभव हो इसे रीसायकल करें। इसे घरेलू कचरे की तरह न फेंकें।
- यदि आपको बैटरी बदलने की आवश्यकता हो, तो सहायता के लिए इसे निकटतम अधिकृत **LG Electronics** सर्विस पॉइंट या डीलर के पास ले जाएं।
- फ़ोन पूरी तरह चार्ज हो जाने पर चार्जर को वॉल सॉकेट से निकाल दें ताकि चार्जर की अनावश्यक पॉवर खपत को बचाया जा सके।
- वास्तविक बैटरी जीवन, नेटवर्क कॉन्फ़िगरेशन, उत्पाद सेटिंग्स, उपयोग पद्धति, बैटरी और वातावरण की परिस्थितियों पर निर्भर करेगा।


सहायक उपकरण

आपके मोबाइल फ़ोन के लिए विभिन्न सहायक उपकरण हैं। आप अपनी व्यक्तिगत संचार आवश्यकताओं के अनुसार इन विकल्पों का चयन कर सकते हैं।

ट्रैवल
अडैप्टर

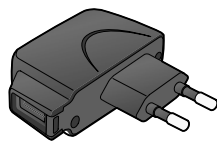

डेटा केबल
और CD

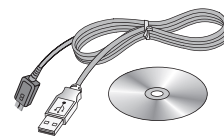

मानक
बैटरी



उपयोगकर्ता
मार्गदर्शिका
LG-A200



हेडसेट



नोट

- हमेशा प्रामाणिक **LG** सहायक उपकरणों का उपयोग करें। ऐसा नहीं करने पर आपकी वॉरंटी अमान्य हो सकती है।
- सहायक उपकरण भिन्न क्षेत्रों में भिन्न हो सकते हैं कृपया अधिक पूछताछ के लिए हमारे क्षेत्रीय सेवा कंपनी एजेंट से संपर्क करें।

तकनीकी डेटा

परिवेश के तापमान

अधिकतम: +55°C (डिसचार्जिंग)

+45°C (चार्जिंग)

न्यूनतम: -10°C

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band Terminal Equipment

Model Name

LG-A200

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.8.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v2.1.1
EN 300 328 v1.7.1
EN 60950-1:2006+A11:2009
EN 50360:2001 /AC:2006
EN 62209-1:2006/EN 62209-2:2010
EN 301 511 v9.0.2

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom

Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards, regulation and directives

LG Electronics Inc. – EU Representative
Veluwezoom 15, 1327 AE Almere, The Netherlands

Name

Issued Date

Doo Haeng Lee / Director

21, Apr, 2011

Signature of representative

समस्या निवारण

समस्या	संभावित हल
टेलीफोन चालू नहीं किया जा सकता	कृपया बैटरी निकालकर फिर से लगाएँ. उसके बाद फ़ोन की पावर चालू करने के लिए पावर चालू कुंजी दबाएं.
बैटरी खाली	बैटरी चार्ज करें. प्रदर्शन पर चार्जिंग संकेतक जाँचें.
बैटरी ठीक से चार्ज नहीं होती है या कभी-कभी फ़ोन स्वयं बंद हो जाता है	फ़ोन और बैटरी पर चार्जिंग की सतहों को साफ़ नर्म कपड़े से पोछें.
बैटरी का उपयोग समय कम हो जाता है	यदि बैटरी का समय कम है, तो ऐसा उपयोगकर्ता वातावरण, अधिक कॉल्स या कमजोर सिग्नल्स के कारण हो सकता है.
चार्जिंग त्रुटि—कृतापमान सीमा से अधिक है	सुनिश्चित करें कि परिवेशी तापमान ठीक है, कुछ देर प्रतीक्षा करें, और तब पुनः चार्ज करें.
चार्जिंग त्रुटि—गलत चार्जर	केवल मूल LG सहायक सामग्री का उपयोग करें.
चार्जिंग त्रुटि—बैटरी खराब है	बैटरी बदलें.
चार्जिंग त्रुटि—चार्जिंग के समय कोई बैटरी चिह्न नहीं दिखाई देता	बैटरी खाली है या बहुत समय से उपयोग नहीं की गई है. स्क्रीन पर बैटरी चिह्न दिखाई देने में कुछ समय लग सकता है.
फ़ोन कोड या पासवर्ड भूल गए हैं	डिफ़ॉल्ट फ़ोन कोड "0000" है.

समस्या	संभावित हल
PUK दर्ज करें	पिन कोड लगातार तीन बार गलत दर्ज किया गया है, और फोन अब अवरोधित हो गया है। आपके सेवा प्रदाता द्वारा दिया गया PUK दर्ज करें।
नेटवर्क गुम	हो सकता है कि आप कमजोर सिग्नल क्षेत्र में हों। वहाँ से हटें और फिर से प्रयास करें। आप ऐसे विकल्प का उपयोग करने का प्रयास कर रहे हैं जिसके लिए आपने अपने सेवा प्रदाता से सदस्यता नहीं ली है। आगे की जानकारी के लिए अपने सेवा प्रदाता से संपर्क करें।
आपने एक नंबर दर्ज किया है किंतु उसे डायल नहीं किया गया था	सुनिश्चित करें कि आपने टॉक/हाँ कुंजी दबाई है। सुनिश्चित करें कि आप सही नेटवर्क सेवा तक पहुँचे हैं। सुनिश्चित करें कि आपने कोई जावक कॉल रोधन विकल्प नहीं सेट किया है। सुनिश्चित करें कि आपने क्षेत्र कोड दर्ज कर दिया है।
आपका संवाददाता आप तक नहीं पहुँच सकता	सुनिश्चित करें कि आपका फोन चालू है। टॉक/हाँ कुंजी को एक सेकेंड से अधिक देर तक दबाएँ। सुनिश्चित करें कि आप नेटवर्क सेवा का उपयोग कर रहे हैं। सुनिश्चित करें कि आपने कोई आवक कॉल रोधन विकल्प नहीं सेट किया है।
आपका संवाददाता आपकी आवाज नहीं सुन सकता	सुनिश्चित करें कि आपने लाउडस्पीकर बंद कर दिया है। सुनिश्चित करें कि आपने अपना फोन मुँह के पास रखा है। माइक्रोफोन, फोन के नीचे स्थित है।

समस्या	संभावित हल
कॉल की वॉइस क्वालिटी बहुत खराब है	डिसप्ले पर सिग्नल शक्ति संकेतक को जाँचें। पट्टियों की संख्या सिग्नल क्षमता दर्शाती है। यदि आप किसी बिल्डिंग में हैं तो फ़ोन को थोड़ा घुमाकर या खिड़की के पास ले जाकर प्रयास करें।
जब आप किसी संपर्क को रीकॉल करते हैं, तो कोई नंबर डायल नहीं किया जाता	नंबर सही तरह से संग्रहीत किया गया है, यह सुनिश्चित करने के लिए फ़ोनबुक खोज सुविधा का उपयोग करें। यदि आवश्यकता हो, तो नंबर फिर से सहेजें।
ब्राउज़र का उपयोग नहीं कर सकता	आपकी सदस्यता में डेटा क्षमता शामिल नहीं है। आपको सेवा सक्षम करने के लिए अपने सेवा प्रदाता से संपर्क करना होगा।
यदि उपरोक्त दिशानिर्देशों से आपकी समस्या हल करने में मदद नहीं मिलती है	आपके मोबाइल फ़ोन का मॉडल नंबर और समस्या का स्पष्ट वर्णन नोट कर लें। मदद के लिए अपने फ़ोन डीलर या LG सेवा केंद्र से संपर्क करें।



CHOLAMANDALAM MS GENERAL INSURANCE CO. LTD.
Delhi Regional Office Plot no. 6, First Floor,Opp.
HP Petrol Pump, Near Metro Pillar No. 81
Pusa Road, Delhi - 110005

TO

CHOLAMANDALAM MS GENERAL
INSURANCE CO. LTD.
Delhi Regional Office Plot no. 6,
First Floor,Opp. HP Petrol Pump,
Near Metro Pillar No. 81 Pusa Road,
Delhi - 110005

DATE...../...../.....

Dear Sir,

RE: Loss of mobile phone no.:

MAKE MODEL

This is to inform that my mobile phone has been lost due to theft on
.....at.....FIR/DD entry has been lodged
with Police Station. I am enclosing the Claim
Form cum Bill along with required documents for settlement of the claims.

Thanking you

Yours Sincerely,

Signature of the Insured

Name



CLAIM FORM CUM CLAIM BILL

To be filled in by the ultimate consumer

Name

Present Address

Tel. No.

Make & Model of the Handset

Invoice No. Date of Purchase

Dealer Name

Address

Tel. No.

IMEI No.

Date of Theft Time

Place of Theft

Details of Theft

FIR No./DD No. Date

Police Station

Amount Claimed

Block the SIM Card within 3 days YES ☐ NO ☐

DATE

PLACE

SIGNATURE OF CUSTOMER

TERMS AND CONDITIONS:

POLICY COVERAGE

1. Theft coverage of LG GSM HANDSET for one year from the date of purchase/invoice only. No other loss covered.
2. Offer applicable on all purchases made from April 7, 2011 to April 6, 2012. under Policy No. **PBG-00030389-000-00**. Dated 07/04/11
3. Only theft registered under section 379 IPC or theft reported under Daily Dairy with Police FIR is covered.
4. Reimbursement will be subject to following depreciation/ deduction on the invoice value from date of purchase:

Handset upto 3 months old	-10%
More than 3 months upto 6 months	-15%
More than 6 months upto 9 months	-25%
More than 9 months upto 12 months	-35%

CLAIM PROCESSING DOCUMENTS

In the event of handset loss, the buyer should follow the understated procedure:

- a) (i) Lodge FIR under Section 379 IPC or theft to be entered in Daily Dairy with the Police Station in whose jurisdiction the theft occurred within 24 hours of occurrence of the same.
- (ii) Block the SIM Card with your service provider within 3 days.
- (iii) Send information to the insurance company within 7 days of the loss.

b) Documents required:

- (i) Original Invoice & Cash Memo.
- (ii) Original certified copy of DD/FIR u/s 379 by the police authority.
- (iii) Translation of vernacular documents in English/Hindi.
- (iv) Complete claim Form cum Bill and Discharge Voucher.

These documents should be sent to the Policy Issuing Office within 7 days of the loss by regd. post/courier. All document to be submitted in English/Hindi language. The company reserves the right to call for any other necessary document in addition to the documents listed above. Subject to all the conditions being fulfilled, claim will be settled within 15 days of our receipt of the above documents.

Deduction of Rs. 350/- will be applicable towards accessories.



Note: In case the handset cost is more than Rs. 20,000/-, a survey is required. Contact nearest office of Cholamandalam MS General Insurance Co. Ltd. for survey.

For any future queries assistance related to the policy exclusion and claim settlement you may write to Cholamandalam MS General Insurance Co. Ltd. Delhi Regional Office Plot no. 6, First Floor, Opp. HP Petrol Pump, Near Metro Pillar No. 81 Pusa Road, Delhi - 110005

Tel: +91-11-39813100, Fax: +91-11-39813110

e-mail id : customercare@cholams.murugappa.com



DISCHARGE VOUCHER

Received from Cholamandalam MS General Insurance Co. Ltd. under Policy No..... in full and final discharge of our claim, the sum of (in words) Rs.

Signature of Insured /Customer
across revenue stamp

Affix Re.1 revenue stamp

Date:

Place:

Customer Information Center

For any query related to the after sales service and customer support please contact us at below details

 **LG** **24 x 7** CALL CENTER

 **1800-180-9999**
(Toll Free)

 **5757554**
(Send SMS)

 www.lg.com
serviceindia@lge.com

