



繁體中文
中文
English

使用手冊 GS155



CE0168

P/NO : MMBB0376403(1.0)

www.lg.com

GS155 使用手冊 - 繁體中文

本使用手冊幫助您掌握新型手機的操作。提供有助於您使用手機功能的相關解釋。
此手冊中的部份內容可能會因手機程式之改良或不同網絡商提供的服務而令實際情況有所不同,這並不會另行通知。



了解您的手機



安裝記憶咭

取下電池蓋，打開記憶咭保護蓋。將記憶咭放入記憶咭插槽內。請確保金屬接觸區面向下。若要取出記憶咭，請輕輕取出。



安裝智能咭和為電池充電

安裝智能咭


申請手機網絡後，您將獲得一張智能咭，當中有申請的詳細資料，如 PIN 碼、各種可選服務和其他內容。

重要資訊：由於智能咭及其觸點很容易因刮痕或彎曲而損壞，因此在使用、插入或取出智能咭時要加倍小心。將所有智能咭放置在兒童無法觸及的地方。

插圖

- 1 取下電池蓋
- 2 取下電池
- 3 插入智能咭
- 4 裝回電池蓋
- 5 為電池充電

警告：手機開機時，不要取下電池，因為這樣會損壞手機。

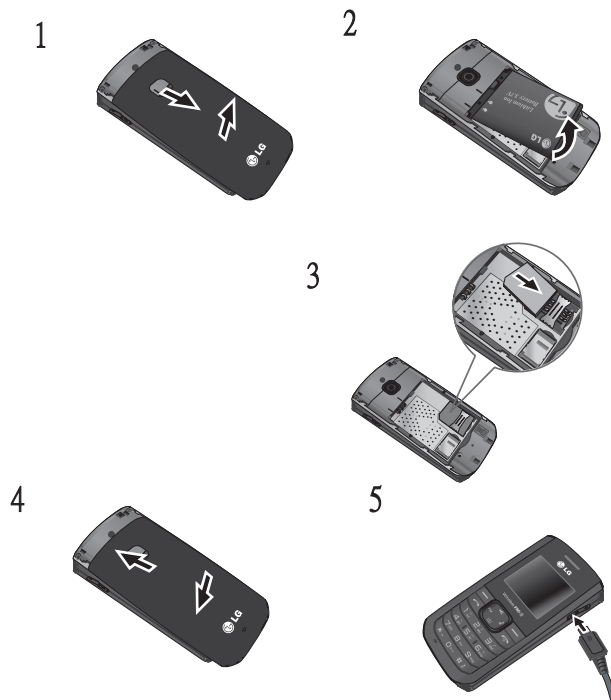

功能表總覽

1 訊息

- 1 新增訊息
- 2 收件匣
- 3 草稿
- 4 聊天室
- 5 寄件匣
- 6 已發送
- 7 留言訊息
- 8 資訊廣播
- 9 常用範本
- 0 設定

2 通訊錄

- 1 搜尋
- 2 新增通訊錄
- 3 快速撥號
- 4 複製全部
- 5 刪除全部
- 6 記憶體狀態
- 7 資訊

3 通話記錄

- 1 所有通話
- 2 未接來電
- 3 已撥通話
- 4 已接來電
- 5 通話時間

4 遊戲

- 1 太空球

5 我的檔案

- 1 我的圖像
- 2 我的聲音
- 3 其他

6 媒體

- 1 相機
- 2 MP3 播放機
- 3 FM 收音機

7 工具

- 1 手電筒
- 2 虛擬來電
- 3 計算機
- 4 秒錶
- 5 單位轉換器
- 6 世界時間
- 7 智能咭服務
(視乎網絡商)

8 記事簿

- 1 鬧鐘
- 2 日曆
- 3 備忘錄

9 設定

- 1 情景模式
- 2 日期和時間
- 3 語言
- 4 顯示
- 5 通話
- 6 自動鍵盤鎖
- 7 安全
- 8 省電模式
- 9 USB 連接模式
- 0 網絡選擇
- * 重設設定
- # 記憶體狀態

開啟和關閉手機

- 1 按住結束鍵，直到開機。
- 2 按住結束鍵，直到關機。

撥打電話

- 1 使用鍵盤輸入號碼。要刪除數字，請按清除鍵。
- 2 按  開始通話。
- 3 要結束通話，請按 。

提示！ 若要在撥打國際電話時輸入「+」，請按住 0。

透過通訊錄撥打電話

- 1 按通訊錄以搜尋通訊錄。
- 2 使用鍵盤輸入您要通話的聯絡人的姓名首字母。例如，對於 Office，按 6 三次即可。
- 3 用左右導航鍵選擇聯絡人及其不同的電話號碼。
- 4 按  開始通話。

提示！ 您可變更手機上的設定，從而採用不同的方式接聽來電。按功能表，選擇設定，然後選擇通話。選擇**接聽模式**，然後選擇**按任何鍵**或**按發送鍵**。

接聽來電和拒接來電

手機響鈴後，按接聽或接聽或  接聽來電。手機響鈴時，按靜音以停止響鈴。如果在開會時忘記將情景模式變更為靜音，此方法十分有效。

按  或拒接以拒接來電。

提示！ 您可變更手機上的設定，從而採用不同的方式接聽來電。按功能表，選擇設定並選擇通話。選擇接聽模式，然後選擇按任何鍵或按發送鍵。

變更通話設定

可設定與通話相關的功能表。按功能表，選擇設定並選擇安全。

- **通話限制** – 選擇您想要何時限制通話。
- **固定撥號** – 選擇可從此手機撥出的號碼列表。您需要從您的網絡商處得到一個 PIN2 碼。僅固定撥號清單中包含的號碼可從手機撥出。

輸入文字

使用手機鍵盤，您可輸入英數字元。例如，在通訊錄中儲存名稱、編寫訊息和在日曆中建立日程表，都需要輸入文字。手機中提供以下可用的文字輸入方式：T9模式、ABC模式和 123 模式。

備註：部份欄位只可使用一種文字輸入模式（例如通訊錄欄位中僅可輸入電話號碼）。

T9 模式

T9 模式使用內置字典，識別根據點按按鍵順序寫入的單字。只需點按與要輸入字母關聯的數字按鍵，且只要輸入所有字母，字典便可識別要輸入的單字。

ABC 模式

使用此模式時，按一次、兩次、三次或四次標示有所需字母的按鍵，直到所需字母顯示，即可輸入該字母。

123 模式

只要按一次按鍵即可輸入一個數字。在字母模式下也可新增數字，方法是長按相應的數字鍵。

訊息 功能表 1

GS155 包含與文字訊息有關的功能。

發送訊息

- 1 按**功能表**，選擇**訊息**並選擇**新增訊息**。
- 2 選擇訊息以發送文字訊息。
- 3 新訊息編輯器將開啟。訊息編輯器將與文字訊息有關的各項功能整合至一個易用的界面。訊息編輯器的預設設定為文字訊息。
- 4 使用 T9模式或 Abc模式輸入您的訊息。透過按  可切換文字輸入模式。

- 5 按**選項**，然後選擇插入以加入符號、範本、通訊錄及名片。
- 6 按**發送給**。
- 7 輸入電話號碼或按**選項**並選擇**通訊錄**或**最近訊息列表**。可打開聯絡人清單。您可以新增多個聯絡人。
- 8 按**發送**。

通訊錄 功能表 2

搜尋通訊錄

您可在通訊錄搜尋聯絡人。

- 1 按**通訊錄**，選擇**搜尋**，從**功能表**上選取通訊錄。
- 2 使用鍵盤輸入要通話聯絡人的首個字母。例如，對於 Office，按 **6** 三次即可。
- 3 要捲動聯絡人及其不同的號碼，請使用  和 。

通話記錄 功能表 3

- **所有通話**：您可檢視所有撥出電話或來電的列表。
- **未接來電**：您可檢視沒接聽的電話。
- **已撥通話**：您可檢視撥出的電話（已撥出或嘗試撥出）。
- **已接來電**：您可檢視已接聽的電話。
- **通話時間**：讓您檢視已接和已撥電話的通話時間。

遊戲 功能表 4

GS155 手機提供了預載遊戲，可讓您在休閒時娛樂。

我的檔案 功能表 5

您可將多媒體檔案儲存在手機記憶體。亦可將檔案儲存至記憶咭中。使用記憶咭的好處在於，您可以釋放手機記憶體的空間。所有的多媒體檔案將儲存在**我的檔案**中。按**功能表**，然後選擇**我的檔案**以開啟資料夾清單。

GS155 支援 JPEG 圖像、MP3 及 MIDI 聲音檔案。

媒體 功能表 6

相機

快速拍照

使用手機內置的相機，可以拍攝相片。您還可以選擇相片並設置成牆紙。

- 1 按**功能表**，選擇**媒體**，然後再選擇**相機**，或按向下導覽鍵直接進入相機。
- 2 垂直握住手機，將鏡頭對準拍攝對象。
- 3 按右軟鍵拍照。

MP3 播放機

LG GS155 具有內置的 MP3 播放器，這樣，您可播放所有喜愛的音樂。

播放歌曲

- 1 按功能表並選擇媒體，然後選擇MP3 播放機。
- 2 選擇所有歌曲，然後選擇你想播放的歌曲，再進入選項，然後按播放。
- 3 音樂正在播放時，進入選項，按暫停以停止播放歌曲。
- 4 按右導覽鍵以跳至下一首歌曲。
- 5 按左導覽鍵以返回前一首歌曲。
- 6 音樂正在播放時，按「返回」鍵以停止播放音樂及返回MP3播放器的功能表。

您可在功能表檢視並播放最近播放的歌曲、所有歌曲和播放列表的歌曲。

音樂正在播放時，

- 1 長按右導覽鍵以快速向前
- 2 長按左導覽鍵以快速退前
- 3 若歌曲已播放超過三秒而按左導覽鍵，同一首歌將會重新播放，否則會播放列表中前一首歌曲。

FM 收音機

若找不到 FM 頻道或頻道訊號不清晰，請使用耳機。

LG GS155 具有 FM 收音機功能，您可在外出旅途中調諧至最愛電台，收聽節目。

注意：您需要插入耳機才可更清晰地收聽 FM 收音機。將耳機插入手機插孔中（即為插入充電器的相同插孔）。

收聽收音機

1 按功能表並選擇媒體，然後選擇 **FM 收音機**。

2 選擇要收聽電台的頻道編號。

注意：您可以透過內置揚聲器收聽電台節目。按**選項**，選擇透過揚聲器收聽。

GS155 支援無線 FM。用戶在正常情況下無需插入耳機亦可收聽 FM。在 FM 電台訊號較弱的地區，用無線及天線模式會降低其接收訊息的敏銳度。因此建議連接耳機以便獲得更好的 FM 收音品質。

工具 / 記事簿 功能表 7,8

使用日曆（功能表 > 記事簿 > 日曆）

進入此功能表時，日曆將會出現。在當前日期上將會標有一個方形游標。可透過導覽鍵移動游標至其他日期。

加入備忘錄（功能表 > 記事簿 > 備忘錄）

可在此處註冊您自己的備註。

設置鬧鐘（功能表 > 記事簿 > 鬧鐘）

可設定三個鬧鐘在指定時間響鈴。

使用計算機（功能表 > 工具 > 計算機）

計算機提供基本的計算功能，包括：加法、減法、乘法及除法。

使用秒錶（功能表 > 工具 > 秒錶）

此選項可使您使用秒錶功能。

轉換單位（功能表 > 工具 > 單位轉換器）

此功能可將多種測量數據轉換至所需的單位。

世界時間（功能表 > 工具 > 世界時間）

您可檢查現時格林威治標準時間 (GMT) 及世界主要城市的時間。

智能咭服務（功能表 > 工具 > 智能 咭服務）

此功能取決於智能咭和網絡服務。如果智能咭支援 SAT（即智能咭應用程式工具集）服務，本功能表將出現智能咭上儲存之網絡商服務名稱。

設定 功能表 9

變更情景模式（功能表 > 設定 > 情境模式）

您可變更情景模式，包括 **標準**、**靜音**、**震動**、**戶外及聽筒**。

變更日期及時間（功能表 > 設定 > 日期和時間）

您可設定與日期和時間相關的功能。

變更語言（功能表＞設定＞語言）

您可變更顯示手機中文字的語言。此更改亦會影響語言輸入模式。

變更顯示設定（功能表＞設定＞顯示）

可更改手機畫面的設定。

變更安全設定（功能表＞設定＞安全）

變更安全性設定，保護 GS155 和手機中的重要資訊。

- **要求PIN 碼** - 選擇開啟手機時，需要輸入密碼。
- **手機鎖** - 在以下狀態下選擇安全密碼鎖定您的手機：在開機時、智能咭更換或立即。
- **手機遺失追蹤** - 如果手機被盜，手機會向真正所有者配置的號碼發送文字訊息。使用者必須在 ATMT 設定中指定名稱、主要電話號碼以及次要電話號碼。用戶必須將 ATMT 設為「啟用」才可使用 ATMT 功能。預設 ATMT 代碼是「0000」。ATMT 文字訊息將包含被盜手機的IMEI、目前所在位置及使用此手機的人數。
- **更改密碼** - 變更您的 手機密碼、PIN碼或 PIN2碼，請輸入就密碼，然後輸入新密碼。

使用飛航模式

1 按功能表 > 設定 > 情景模式 > 飛航模式

2 使用此功能，開啟或關閉飛航模式。開啟飛航模式後，將不能撥出電話及發送訊息。

省電模式（功能表 > 設定 > 省電模式）

若將省電模式設定為永遠開啟，可在不使用手機的情況下節省電力。選擇可切換省電模式永遠開啟、僅晚間或關閉。

重設手機（功能表 > 設定 > 重設設定）

使用重設設定，將所有設定重設為原廠定義。您需要安全密碼，才能啟用此功能。預設號碼是「0000」。

變更 USB 連接。

1 按功能表 > 設定 > USB連接模式。

2 可變更為「大容量儲存」、「PC suite」或「每次詢問」。（將會選擇預設選項「每次詢問」）

安全及有效使用準則

請讀取以下簡易的使用規則。違反這些準則可能會發生危險或觸犯法律。欲知詳細資訊，請參閱本手冊。

警告

- 在飛機上必須始終關閉手機。
- 駕車時請勿手持手機。
- 請勿在加油站、燃料庫、化工廠或爆破工程附近使用您的手機。
- 出於安全考慮，只可使用原裝電池及充電器。
- 請勿以潮濕的雙手對充電中的手機進行操作。這可能會引致觸電或造成手機嚴重損壞。
- 請將手機放在兒童接觸不到的安全地方。手機包含微細零件，如果拆開，可能造成哽咽危險。
- 切勿在柔軟家具上為手機充電。
- 手機應在通風良好的環境中充電。

注意

- 請於任何有特殊限制的地方關閉手機。例如，請勿在醫院內使用手機，否則，它可能會對敏感的醫療設備造成影響。
- 緊急電話可能在某些流動網絡中不能發出。因此，您不應僅倚賴手機作為緊急電話方式。
- 僅請使用原裝配件，以免損壞手機。
- 所有無線電收發器均有可能干擾附近的電子裝置。輕微干擾可影響電視、收音機、個人電腦等。
- 請根據相關法例來處理棄置的電池。
- 請勿拆開手機或電池。

射頻能量暴露準則

無線電波暴露及比吸收率 (SAR) 資訊

本手機型號 GS155 之設計符合適用的無線電波暴露安全要求。此要求根據包括專為保障任何年齡、任何健康狀況人士安全而設的安全極限的科學指引。

- 無線電波暴露指引的量度單位叫作比吸收率或 SAR。SAR 測試使用標準方法進行，用手機以在所有使用的頻帶最高的合格電源水平傳輸。
- 雖然不同型號的 LG 電話的 SAR 水平有所差異，但所有這些電話都為達到無線電波暴露的相關指引而設。
- 國際非離子化輻射保護委員會 (ICNIRP) 建議的 SAR 限制，即平均值為 2W/kg (10g)。
- 經 DASY4 測試，本手機型號在耳邊使用的最高 SAR 值為 1.03 W/kg (10g)，隨身攜帶時則為 0.440 W/kg (10g)。
- 為採用了電氣與電子工程師學會 (IEEE) 建議的 SAR 限制，即平均值為 1.6 W/kg (1g) 的國家/地區居民提供 SAR 數據資訊。

產品護理及維修

警告

請僅使用經認可適用於此特定型號手機的電池、充電器及配件。使用其他種類的配件可能會導致手機的認可或保固失效，並可能引致危險。

- 請勿拆開此裝置。需要對手機進行維修時，請將其帶到合資格的維修技師處。
- 請遠離如電視、收音機或個人電腦等電器產品而使用手機。
- 裝置需遠離發熱來源，如散熱器或烹調器具。
- 請勿摔落手機。
- 請勿讓此裝置遭機械震動或電擊。
- 如果手機被覆蓋物或乙烯基包裹布所覆蓋，手機的外層可能會被損毀。
- 使用乾布清潔裝置表面。（請勿使用如苯、稀釋劑或酒精等溶劑。）
- 請勿讓此裝置接觸過多煙或塵埃。
- 請勿將手機置於信用卡或車票附近，這可能會影響磁帶上的資料。
- 請勿以尖銳物件敲擊屏幕，否則可能會對手機造成損毀。
- 請勿將手機暴露於液體或濕氣中。
- 請小心使用配件，如耳機。如非必要，請勿按壓天線。

有效手機操作

電子裝置

所有手機都可能會因為受到干擾而影響效能。

- 請勿在未得到批准下在醫療儀器附近使用您的手機。避免將手機放置在起搏點上，亦即您的胸部口袋。
- 手機可能影響到某些助聽器。
- 輕微干擾可影響電視、收音機、個人電腦等。

道路安全

檢查您駕駛時地區使用手機的法例及規則。

- 駕駛時請勿使用手提手機。
- 請專心一致駕駛。
- 如有免提耳機，請使用免提耳機。
- 若有駕駛條例要求，請駛離馬路並停泊好汽車後才撥打或接聽電話。
- RF 能量可能會影響車內某些電子系統，例如車載立體聲音響及安全設備等。
- 如果您的汽車配有氣囊，切勿讓已安裝的無線設備或手提無線設備阻擋氣囊。它有可能因使用不當而失靈或造成嚴重損傷。

如果在外出時聆聽音樂，請確保將音量設定至合適水平，以便可以對周圍環境產生警覺。這在馬路旁邊時尤為必要。

避免損害您的聽覺

如果長時間以較大音量收聽，可能會對聽覺造成損害。所以我們建議開啟或關閉手機時，不要將它放於太近耳朵。我們亦建議將音樂及通話音量設定至合適水平。

爆破地區

請勿在進行爆破時使用手機。請嚴格遵守相關限制、規定或條例。

潛在爆炸氣壓

- 請勿在燃料補給點使用手機。請勿在燃料或化學物質旁使用。
- 請勿傳輸或放置易燃氣體、液體或爆炸物在您放置了手機及配件的汽車。

在飛機上

無線裝置可引致飛機干擾。

- 乘坐飛機時請關閉手機。
- 未經地勤人員批准，請勿在陸上使用手機。

兒童

請將手機放在兒童接觸不到的安全地方。包括可能引起窒息的小零件。

緊急呼叫

緊急電話可能在某些流動網絡中不能發出。因此，您不應僅倚賴手機作為緊急電話方式。請向您本地的服務供應商查詢。

電池資料及保護

- 充電前，您無須完全放電。跟其他電池系統不同，沒有記憶影響可緩和電池的效能。
- 只使用 LG 電池及充電器。LG 充電器是為將電池壽命擴至最大而設。
- 請勿拆解電池組或造成電池組短路。
- 請保持電池組的金屬接點清潔。
- 當電池不再提供可接受的效能，請更換電池。電池組可重充數百次直至需要更換為止。
- 如果電池很久沒有使用來擴展其用量，需重充電池。
- 請勿直接將充電器暴露於日光下或高濕度環境（如浴室）中。
- 請勿將電池置於過熱或過冷處，此類場合可能會損害電池效能。
- 若使用類型不當的電池，則有發生爆炸的危險。
- 請根據製造商的指示來處理廢棄電池。請盡量回收利用。請勿作為家庭廢棄物處理。
- 如果需要更換電池，請帶同手機前往最近的授權 LG 電子產品服務點或經銷商以尋求協助。
- 請謹記在手機完全充電後從牆壁插座拔出充電器，避免充電器造成不必要的電力損耗。

技術數據

一般資訊

產品名稱：GS155

系統：GSM 900 / DCS 1800

環境溫度

最高：+55°C（放電）

+45°C（充電）

最低：-10°C

Declaration of Conformity LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc. LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 900 / DCS 1800 Dual band Terminal Equipment

Model Name

GS155

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.8.1, EN 301 489-07 V1.3.1

EN 301 511 V9.0.2

EN 50360:2001, EN62209-1:2006

EN 60950-1:2001

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House-Churchfield Road - Walton-on-Thames Surrey - KT12 2TD, United Kingdom

Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

Seung Hyoun, Ji / Director

05.Feb. 2010

LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 88940, e-mail : jacob @ lge.com

Signature of representative

GS155 用户手册 - 中文

此指南有助于您了解您的新手机。它将提供关于手机功能的有用说明。
视话机软件或服务提供商而定，本手册中的部分内容可能与您的手机有所不同。



开始了解您的手机



安装存储卡

卸下电池盖，推存储卡插槽，然后掀起插槽。将 microSD 卡放入卡托盘 确保金色接触区域面朝下。要取出 microSD 卡，沿反方向轻推。



安装 SIM 卡和充电

安装 SIM 卡


当您预定了手机网络后，您将得到一个插入式 SIM 卡，该卡上载入了您的预定详细信息，如您的 PIN 码、任何可用的可选服务以及其他服务。

重要！ 插入式 SIM 卡及其内容很容易因刮擦或弯折而损坏，因此，在处理、插入或移除卡时，请小心谨慎。 请将所有 SIM 卡置于儿童无法接触的地方。

说明

- 1 打开电池盖
- 2 取出电池
- 3 插入 SIM 卡
- 4 关闭电池盖
- 5 充电

警告： 手机开机时，不要取出电池，这可能会损坏手机。

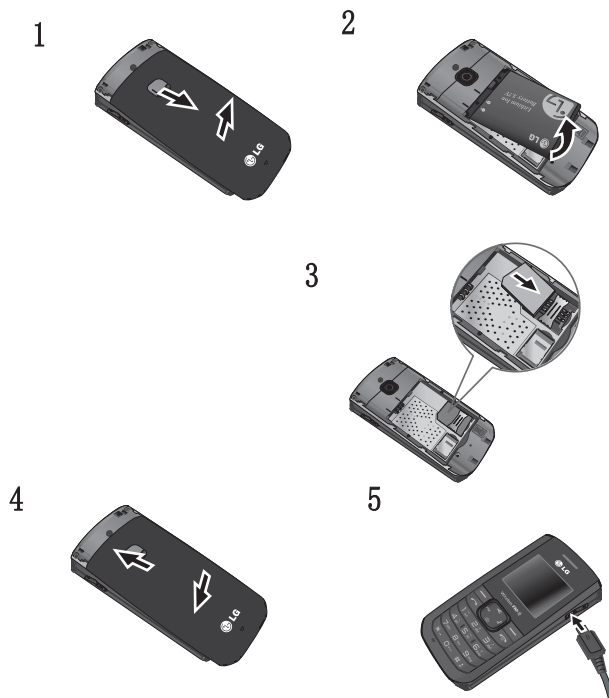

菜单地图

1 信息

- 1 新建信息
- 2 收件箱
- 3 草稿箱
- 4 聊天框
- 5 发件箱
- 6 已发送
- 7 收听语音邮件
- 8 小区广播
- 9 模板
- 0 设置

2 电话本

- 1 搜索
- 2 新联系人
- 3 快速拨号
- 4 全部复制
- 5 全部删除
- 6 内存状态
- 7 信息

3 通话记录

- 1 所有通话
- 2 未接来电
- 3 已拨电话
- 4 已接来电
- 5 通话时间

4 游戏

- 1 火星滚球

5 我的文档

- 1 我的图像
- 2 我的声音
- 3 其它

6 媒体

- 1 相机
- 2 MP3 播放器
- 3 FM 收音机

7 工具

- 1 闪光灯
- 2 伪装呼叫
- 3 计算器
- 4 秒表
- 5 单位换算器
- 6 世界时钟
- 7 SIM 卡服务
- 8 应用程序

8 管理器

- 1 闹钟
- 2 日历
- 3 备忘录

9 设置

- 1 网络设定
- 2 日期和时间
- 3 语言
- 4 显示
- 5 通话
- 6 自动键盘锁
- 7 安全性
- 8 省电
- 9 USB 连接
- 0 网络选择
- * 恢复初始设定
- # 内存状态

开机和关机

- 1 按住结束键，直到开机。
- 2 按住结束键，直到关机。

拨打电话

- 1 使用键盘键入号码。要删除一个数字，请按清除键。
- 2 按  开始通话。
- 3 要结束通话，请按 。

提示！ 要输入 + 以拨打国际电话，请按住 0。

从电话本拨打电话

- 1 按“搜索联系人”打开地址簿。
- 2 使用键盘输入您要呼叫的联系人的第一个字母。例如，要呼叫 Office，请按 6 三次。
- 3 要在联系人及其不同电话号码间滚动，请使用“左右导航键”。
- 4 按  开始通话。

提示！ 您可以更改手机上的设置以不同方式接听来电。按菜单，选择设置，然后选择通话。选择**接听模式**，从**任意键**或**仅发送键**中选择。

接听和拒接来电

电话响后，按**接听**或  应答来电。电话响后，选择**静音**可静音。如果您在开会时忘记将情景模式更改为**静音**，这非常有帮助。

按  或**拒绝**拒接来电。

提示！ 您可以更改手机上的设置以不同方式接听来电。按**菜单**，选择**设置**，然后选择**通话**。选择**接听模式**，从**任意键**或**仅发送键**中选择。

更改呼叫设置

您可以设置与呼叫相关的菜单。按**菜单**，选择**设置**，然后选择**安全性**。

- **呼叫限制** – 选择何时限制呼叫。
- **固定拨号号码** – 选择可从此手机拨出的号码列表。您需要运营商提供的 PIN2 码。仅可以使用手机拨打此号码列表中的号码。

输入文本

您可以使用手机键盘输入字母数字字符。例如，在电话本中存储姓名、写短信、在日程表中安排事件等，都需要输入文本。手机中可以使用以下文本输入法：T9 预测模式、ABC 手动模式和 123 模式。

备注：某些字段可能只允许以一种文本输入模式输入（如在地址簿字段输入电话号码）。

T9 预测模式

T9 预测模式使用内置字典，根据您按键的顺序识别您写入的内容。只需按与您要输入的字母关联的数字键即可，输入所有字母后，字典将识别您输入的内容。

ABC 手动模式

在此模式中，输入字母时，按标示为所需字母的按键一次、两次、三次或四次，直到显示该字母。

123 模式

以每个数字一次击键的方式输入数字。在字母模式下，通过按住相应按键，也可以输入数字。

信息 菜单 1

GS155 包括与 SMS（短信服务）相关的功能。

发送信息

- 1 按**菜单**，选择**信息**，然后选择**新信息**。
- 2 选择**信息**以发送短信。
- 3 此时将打开新信息编辑器。信息编辑器将短信组合到一个直观的菜单中。信息编辑器的默认设置为短信模式。
- 4 使用 T9 预测模式或 Abc 手动模式输入信息。您可以通过按  切换文本输入模式。
- 5 按**选项**，然后选择**插入添加符号、文本模板、姓名和号码**。
- 6 按**发送至**。
- 7 输入手机号码或按**选项**，然后选择**电话本**或**最近列表**以打开联系人列表。您可以添加多个联系人。
- 8 按**发送**。

电话本 菜单 2

正在搜索联系人

您可以搜索电话本中的联系人。

- 1 按**电话本**并选择**搜索**，然后从**菜单**屏幕中选择**电话本**。
- 2 使用键盘输入您要呼叫的联系人的第一个字母。例如，要呼叫 Office，请按 **6** 三次。
- 3 要在联系人及其不同电话号码间滚动，请使用  和 。

通话记录 菜单 3

- **所有通话**：您可以查看所有拨电和来电列表。
- **未接来电**：您可以查看未接来电。
- **已拨电话**：您可以查看拨出电话（已拨出的或尝试拨出的）。
- **已接来电**：您可以查看已接来电。
- **通话时间**：用于查看来电和去电的通话持续时间。您也可以重置通话计时器。

游戏 菜单 4

GS155 中预安装了多款游戏，供您在闲暇时娱乐。

我的文档 菜单 5

您可以将多媒体文件存储到手机内存中。您也可以将文件保存到存储卡中。使用存储卡的优点是：您可以释放手机内存的存储空间。所有多媒体文件保存在**我的文档**中。按**菜单**，然后选择**我的文档**打开文件夹列表。

GS155 支持 JPEG 图像、MP3 和 MIDI 声音文件。

媒体 菜单 6

相机

快速拍照

使用手机内置的相机模式，您可以拍摄人物照片。此外，您可以选择将照片用作墙纸。

- 1 按**菜单**并选择**媒体**，然后选择**相机**或者按向下导航键通过快捷键直接转到相机。
- 2 水平握住手机，将镜头对准要拍摄的物体。
- 3 按拍摄键拍照。

MP3 播放机

LG GS155 拥有内置的 MP3 播放机，因此，您可以播放所有喜爱的音乐。

播放歌曲

- 1 按“菜单”，选择“媒体”，然后选择“MP3 播放器”。
 - 2 选择所有歌曲，然后选择要播放的歌曲，转到“选项”，并按“播放”。
 - 3 音乐播放过程中，请转到“选项”->“暂停”以暂停歌曲。
 - 4 按向右导航键以跳到下一首歌曲。
 - 5 按向左导航键以跳到上一首歌曲。
 - 6 音乐播放过程中，按“返回”键停止音乐并返回到 MP3 播放器菜单。
- 在菜单中，您可以按最近播放的歌曲、所有歌曲、播放列表的歌曲。

播放歌曲过程中，

- 1 长按向右导航键至 FF
- 2 长按向左导航键至 REV。
- 3 如果歌曲播放的时间已超过 3 秒钟，而您按向左导航键，则将从头开始播放同一首歌曲，然后将播放上一首歌曲。

FM 收音机

找不到 FM 频道或频道不够清晰时，请使用耳麦。

LG GS155 拥有 FM 收音机功能，以便您转到喜爱的电台并收听无线广播。

备注：要更清晰地收听收音机，您需要插入耳机。将插头插入耳机插槽（与插入充电器的插槽相同）。

收听收音机

- 1 按**菜单**，选择**媒体**，然后选择 **FM 收音机**。
- 2 选择您要收听的电台的频道编号。

备注：您可以通过内置扬声器收听收音机。按**选项**，选择**收听方式**，然后选择**扬声器**。

GS155 支持无线 FM。正常情况下，用户无需插入耳麦即可收听 FM。在 FM 收音机信号较弱地区，无线模式下的灵敏度会有所降低。因此，要想获得更好的收音效果，请插入耳麦。

工具/管理器 菜单 7 和 8

使用日历（菜单 > 管理器 > 日历）

当进入此菜单时，屏幕上出现日历。当前日期上有一方形光标。您可以使用导航键将光标移到另一日期。

添加备忘录（菜单 > 管理器 > 备忘录）

您可以在此注册个人备忘录。

设置闹钟（菜单 > 管理器 > 闹钟）

您最多可以将 3 个闹钟设置为在指定时间停止响铃。

使用计算器（菜单 > 工具 > 计算器）

计算器提供基本的数学运算功能：加、减、乘、除。

使用秒表（菜单 > 工具 > 秒表）

使用此选项可使用秒表功能。

换算单位（菜单 > 工具 > 单位换算器）

此功能用于将任一度量值转换成所需的单位。

世界时钟（菜单 > 工具 > 世界时钟）

可以查看格林威治标准时间（GMT）和世界各地主要城市的时间。

SIM 卡服务（菜单 > 工具 > SIM 卡服务）

此功能视 SIM 卡和网络服务而定。如果 SIM 卡支持 SAT（即，SIM 卡应用程序套件）服务，则此菜单将是 SIM 卡上储存的运营商特定服务的名称。

设置 菜单 9

更改情景模式（菜单 > 设置 > 情景模式）

您可以更改情景模式**普通、静音、仅振动、户外和耳机**。

更改日期和时间（菜单 > 设置 > 日期和时间）

您可以设置与日期和时间相关的功能。

更改语言（菜单 > 设置 > 语言）

您可以更改手机中显示文本的语言。此更改还将影响语言输入模式。

更改显示设置（菜单 > 设置 > 显示）

您可以更改手机显示的设置。

更改安全设置（菜单 > 设置 > 安全性）

更改安全设置以保护 GS155 及重要信息。

- **PIN 码请求** - 选择开机时要请求的 PIN 码。
- **手机锁** - 为以下选项选择安全码以锁定手机：**开机时**、**更换 SIM 卡时**或**立即**。
- **手机防盗跟踪器** - 一旦被盗，手机将发送一条短信至真正的手机主人所配置的号码。用户需要配置 ATMT 设置，包括名称、主电话号码、次电话号码。要激活 ATMT 功能，用户需要将 ATMT 设为开。默认 ATMT 码为“0000”。ATMT 短信将包含有关被盗手机的相关信息：IMEI 号、目前使用该手机的人所在的位置和所用的号码。
- **更改密码** - 更改**安全码、PIN2 码**或**PIN 码**，输入旧密码，然后输入新密码。

使用飞行模式

1 按“菜单”>“设置”>“情景模式”>“飞行模式”

2 使用此功能，将飞行模式设为打开或关闭。飞行模式为打开时，您将无法拨打电话或发送信息。

省电（菜单 > 设置 > 省电）

如果设置为**始终打开**，可以在不使用手机时节省用电。选择省电设置：**始终打开**、**仅夜间**或**关**。

重设手机（菜单 > 设置 > 恢复初始设定）

使用**重设**将所有设置重置到其出厂设置。要启动此功能，您需要安全密码。默认号码为“0000”。

更改 USB 连接

1 按“菜单”>“设置”>“USB 连接”。

2 更改“大容量存储”、“PC 套件”或“始终询问”。（默认情况下选中“始终询问”）

关于安全有效使用手机的准则

请阅读以下简单的准则。违反这些准则可能造成危险或者触犯法律。本手册中给出了进一步的详细信息。

警告

- 在飞机上请务必关闭手机。
- 驾驶时请勿持握手机。
- 请勿在汽油站、加油点、化工厂或爆破区附近使用手机。
- 为了您的安全，请仅使用指定的原装电池和充电器。
- 手机充电时，请勿用湿手操作手机。这可能会导致电击或手机严重受损。
- 将手机放在儿童接触不到的安全地方。手机中包含细小零件，如果脱落可能导致窒息危险。
- 如果手机置于柔软物体之上，请不要充电。
- 应将手机放在完全通风的位置充电。

警告

- 在任何有特殊条例要求的区域关闭手机。例如，请勿在医院使用手机，因为它可能影响敏感的医疗设备。
- 并非在所有手机网络中均可使用紧急电话。因此，您不应仅依赖于手机的紧急呼叫功能。
- 仅使用原装配件，以免损坏您的手机。
- 所有的无线电发射器都有对近距离内的电子干扰的危险。微弱的干扰可能会影响电视、收音机、个人计算机等。
- 应按照相关条例处置电池。
- 请勿拆卸手机或电池。

暴露在射频能量之下

无线电波暴露和“特定吸收率”(SAR) 信息。

此款 GS155 型手机已设计为遵守有关适用的无线电波暴露安全要求。此要求以相关的科学准则为基础，包括为确保所有人员（无论年龄和健康状况）安全而设计的安全裕量。

- 无线电波暴露准则采用一种称为“特定吸收率”或 SAR 的测量单位。SAR 测试是在所有用到的频带中以手机的最高认可功率电平进行发射时使用标准化方法执行的。
- 不同的 LG 手机型号可能有不同的 SAR 能级，但它们均符合相关的无线电波暴露准则。
- 国际非电离辐射防护委员会 (ICNIRP) 建议的 SAR 上限值为 2W/kg，平均值超过十 (10) 克薄纸。
- 由 DASY4 对该型号手机进行的测试，人耳能够承受的 SAR 最大值为 1.03 W/kg (10 克)，戴在身体上时，其值为 0.440 W/kg (10 克)。
- 电气电子工程师协会 (IEEE) 建议的 SAR 上限值为 1.6 W/kg，平均值超过一 (1) 克薄纸，此 SAR 数据适用于各个国家/地区的居民。

产品保养和维护

警告

仅使用经核准为用于此特定手机型号的电池、充电器和配件。使用任何其它类型可能导致适用于此手机的许可或保修失效，并可能造成危险。

- 不要拆解本机。当需要维修时，请将手机送往合格的服务技术人员处。
- 远离诸如电视、收音机或个人计算机之类的电器。
- 远离诸如暖气片或厨灶之类的热源。

- 小心不要让手机摔落。
- 不要让手机受到机械振动或撞击。
- 用包装材料或乙烯基包装纸包裹手机可能会损坏手机涂层。
- 使用干布清洁手机外壳。（不要使用如苯、稀释剂或酒精之类的溶剂）。
- 不要在烟雾或灰尘过多的环境中使用或存放手机。
- 不要将手机放在信用卡或卡式车票旁边，它可能会影响磁条上的信息。
- 不要用尖锐物体敲击屏幕，这可能会损坏手机。
- 不要将手机暴露在液体或潮气中。
- 谨慎使用如耳机之类的配件。在不必要的情况下，不要触按天线。

有效的手机操作

电子设备

所有手机都可能受到干扰，这种干扰会对性能造成影响。

- 在未经允许的情况下，不得在医疗装置附近使用手机。不要将手机放在心脏起搏点上，即胸前的口袋内。
- 手机可能会对某些助听器造成干扰。
- 微弱的干扰可能会影响电视、收音机、个人计算机等。

行车安全

查阅有关在驾驶时使用手机的本地法律法规。

- 不要在驾驶时使用手持式手机。
- 将注意力完全集中在驾驶上。
- 如果有免提装置，请使用免提装置。
- 如果行驶条件需要，请在拨打或接听电话之前将车辆驶离道路并停车。

- 射频能量可能影响车辆内的电子系统，例如立体声音响、安全设备等。
- 当车辆配备气囊时，不要让安装的便携式的无线设备阻挡气囊。 由于不适当的个人行为，可能造成严重伤害。

如果您在外出时使用耳机收听音乐，请确保将音量设置为合理的音量级别，以便注意周围的情况。 在过马路时，尤其要注意这一点。

防止损伤您的听力

如果您长时间置于高音环境中，那么您的听力可能会遭到伤害。 因此，我们建议您在开机或关机时不要将手机置于耳边。 同时，我们还建议您将音乐和通话音量设置为合理的音量级别。

爆破区域

不要在正进行爆破的地区使用手机。 请依照有关限制，并遵守任何规章或规定。

易爆环境

- 不要在加油站内使用手机。 不要在靠近燃料或化学制品处使用手机。
- 不要在放有手机和配件的车厢内运输或存放可燃气体、液体或爆炸品。

在飞机上

无线设备可能对飞机造成干扰。

- 登机前，请关机。
- 未经机务人员允许，不得在地面上使用手机。

儿童

将手机放在儿童接触不到的安全地方。 手机中包含细小零件，如果脱落可能导致窒息危险。

紧急电话

并非在所有手机网络中均可使用紧急电话。因此，您不应仅依赖于手机的紧急呼叫功能。请向本地的服务提供商核准。

电池信息及保养

- 您无需在再次充电前对电池进行完全放电。与其它电池系统不同，本机电池不具有可能影响电池性能的记忆效应。
- 只能使用 LG 电池和充电器。LG 充电器设计为最大程度地延长电池使用寿命。
- 不要拆解电池组或将其短路。
- 保持电池组的金属触点清洁。
- 当电池不再提供合乎要求的性能时，请更换电池。在需要更换之前，电池组可以反复充电数百次。
- 如果电池已经使用很长一段时间，请对电池再次进行充电以保持最佳使用状态。
- 不要将电池充电器暴露在直射阳光下，也不要再诸如浴室之类的高湿环境中使用。
- 不要将电池存放在过热或过冷的地方，这可能损害电池的性能。
- 如果用不适当的电池进行替换，可能会有爆炸危险。
- 请按制造商的说明处置用过的电池。如果可能，请循环使用电池。不要象处理家用废物一样处理电池。
- 如果要更换电池，请将其携带至 LG Electronics 授权服务点或经销商处以寻求帮助。
- 手机充好电后，请务必将充电器从墙上插座拔下，以避免不必要的耗电。

技术参数

标准

产品名称: GS155

系统: GSM 900 / DCS 1800

外部环境

最高: +55° C (放电)

+45° C (充电)

最低温度: -10° C

Declaration of Conformity LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc. LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 900 / DCS 1800 Dual band Terminal Equipment

Model Name

GS155

Trade Name

LG

C E 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.8.1, EN 301 489-07 V1.3.1

EN 301 511 V9.0.2

EN 50360:2001, EN62209-1:2006

EN 60950-1:2001

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House-Churchfield Road - Walton-on-Thames Surrey - KT12 2TD , United Kingdom

Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

Seung Hyoun, Ji / Director

05.Feb. 2010

LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 88940, e-mail : jacob @ lge.com


Signature of representative


GS155 User Guide - English

This guide will help you understand your new mobile phone. It will provide you with useful explanations of features on your phone.

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.



Getting to know your phone

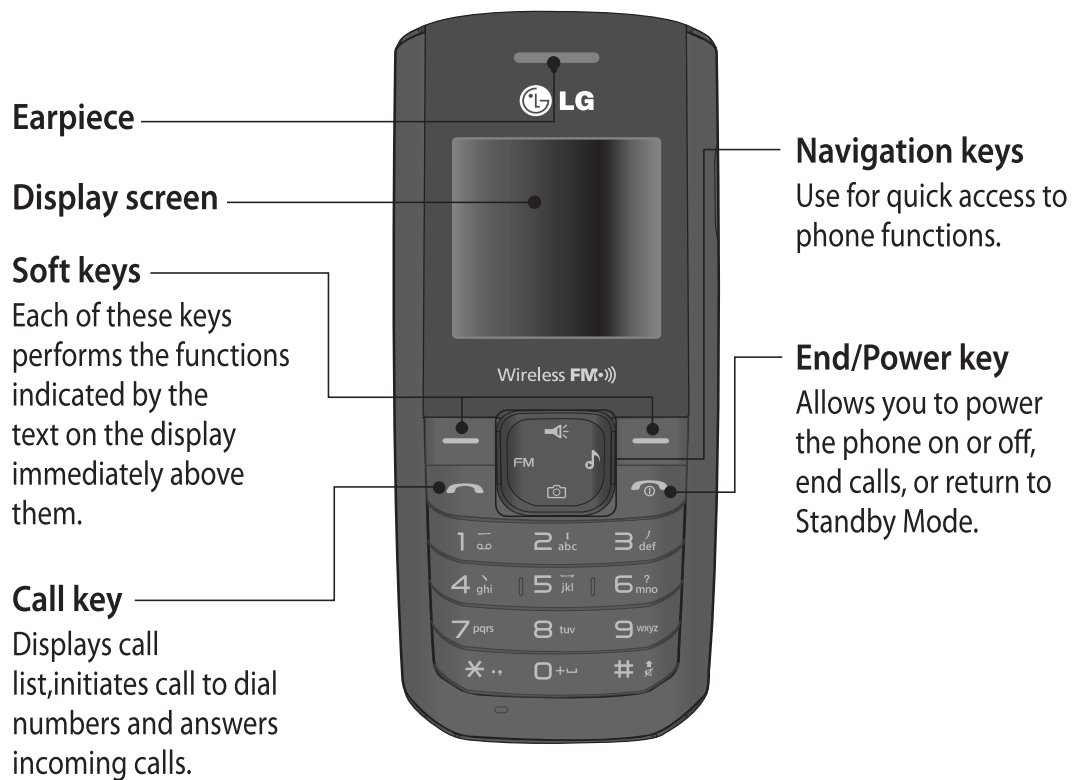

Installing a memory card

Remove the battery cover and push the memory card slot and flip up the slot. Put the microSD card on the card tray. Make sure that the gold contact area is facing downwards. To remove the microSD card, pull it gently in the opposite direction.



Installing the SIM Card and Charging the Battery

Installing the SIM Card


When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

Important! The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.

Illustrations

- 1 Open battery cover
- 2 Remove the battery
- 3 Insert your SIM
- 4 Insert the battery
- 5 Close the battery cover
- 6 Charge your battery

WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

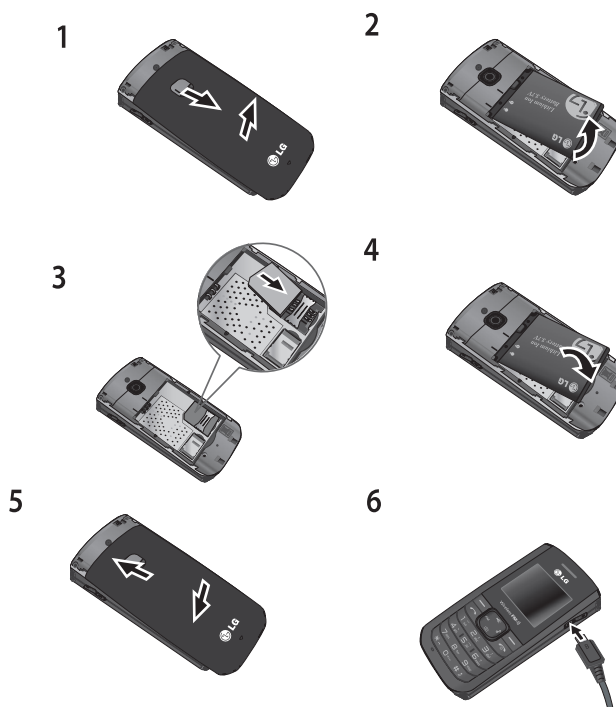

Menu map

1 Messaging

- 1 New message
- 2 Inbox
- 3 Drafts
- 4 Chat box
- 5 Outbox
- 6 Sent
- 7 Listen to voice mail
- 8 Info messages
- 9 Templates
- 0 Settings

2 Contacts

- 1 Search
- 2 New contact
- 3 Speed dials
- 4 Copy all
- 5 Delete all
- 6 Memory status
- 7 Information

3 Call history

- 1 All calls
- 2 Missed calls
- 3 Dialed calls
- 4 Received calls
- 5 Call duration

4 Games

- 1 Space ball

5 My stuff

- 1 My images
- 2 My sounds
- 3 Others

6 Media

- 1 Camera
- 2 MP3 player
- 3 FM radio

7 Tools

- 1 Torch
- 2 Fake call
- 3 Calculator
- 4 Stopwatch
- 5 Unit converter
- 6 World clock
- 7 SIM services

8 Organiser

- 1 Alarm
- 2 Calendar
- 3 Memo

9 Settings

- 1 Profiles
- 2 Date & Time
- 3 Languages
- 4 Display
- 5 Call
- 6 Auto keylock
- 7 Security
- 8 Power save
- 9 USB connection
- 0 Network selection
- * Reset settings
- # Memory status

Turning Your Phone On and Off

- 1 Press and hold the End key until the power comes on.
- 2 Press and hold the End key until the power goes off.

Making a call

- 1 Key in the number using the keypad. To delete a digit press Clear key.
- 2 Press  to initiate the call.
- 3 To end the call, press .

TIP! To enter + when making an international call, press and hold 0.

Making a call from your contacts

- 1 Press  contacts from idle screen and select "Search" to open the address book.
- 2 Using the keypad, enter the first letter of the contact you want to call. For example, for Office, press 6 three times.
- 3 To scroll through the contacts use up and down navigation keys and to scroll through their different numbers use "Left and Right Navigation key".
- 4 Press  to initiate the call.

TIP! You can change the settings on your phone to answer your calls in different ways. Press Menu, select Settings, choose Call. Select **Answer mode** and choose from **Any key** or **Send key only**.

Answering and rejecting a call

When your phone rings, press **Accept** or press  to answer the call. While your phone is ringing, select **Silent** to mute the ringing. This is great if you have forgotten to change your profile to **Silent** for a meeting.

Press  or **Reject** to reject the incoming call.

TIP! You can change the settings on your phone to answer your calls in different ways. Press **Menu**, select **Settings** and choose **Call**. Select **Answer mode** and choose from **Any key** or **Send key only**.

Changing the call settings

You can set the menu relevant to a call. Press **Menu**, select **Settings** and choose **Security**.

- **Call barring** – Select when you would like calls to be barred.
- **Fixed dial number** – Choose a list of numbers that can be called from your phone. You'll need your PIN2 code from your operator. Only numbers included in the fixed dial list can be called from your phone.

Entering text

You can enter alphanumeric characters using the phone's keypad. For example, storing names in Contacts, writing a message and creating schedule events in the calendar all require entering text. The following text input methods are available in the phone: T9 predictive mode, ABC manual mode and 123 mod.

Note: Some fields may allow only one text input mode (e.g. telephone number in address book fields).

T9 predictive mode

T9 predictive mode uses a built-in dictionary to recognise words you're writing based on the key sequences you press. Simply press the number key associated with the letter you want to enter, and the dictionary will recognise the word once all the letters are entered. You can use the  key to cycle through possible words matching the keys you pressed.

ABC manual mode

This mode allows you to enter letters by pressing the key labeled with the required letter once, twice, three or four times until the letter is displayed.

123 mode

Type numbers using one keystroke per number. You can also add numbers while remain in letter modes by pressing and holding the desired key.

Messaging Menu 1

Your GS155 includes functions related to SMS (Short Message Service).

Sending a message

- 1 Press **Menu**, select **Messaging** and choose **New message**.
- 2 A new message editor will open. Message editor combines SMS into one intuitive. The default setting of the message editor is SMS mode.
- 3 Enter your message using either the T9 predictive mode or Abc manual mode. You can switch text input mode by pressing .
- 4 Press Options and choose Insert to add an **Symbol, template, contact** and **buisness card**.
- 5 Press options and select **Send to**.
- 6 Enter the phone number or press **Options** and select **Contacts** or **Recent list** to open your contacts list. You can add multiple contacts.
- 7 Press options and select **Send**.

Contacts Menu 2

Searching for a contact

You can search for a contact in your contacts.

- 1 Press **Contacts** and choose **Search**, select **Contacts** from the **Menu** screen.
- 2 Using the keypad enter the first letter of the contact you want to call. For example, for Office, press **6** three times.
- 3 To scroll through the contacts use up and down navigation keys and to scroll through their different numbers use "Left and Right Navigation key".

Call history Menu 3

- **All calls:** You can view all lists of outgoing or incoming calls.
- **Missed calls:** You can view the unanswered calls.
- **Dialled calls:** You can view the outgoing calls (called or attempted).
- **Received calls:** You can view the Received calls.
- **Call duration:** Allows you to view the duration of your incoming and outgoing calls.

Games Menu 4

Your GS155 comes with preloaded games to keep you amused when you have time to spare.

My stuff Menu 5

You can store multimedia files into your phone's memory. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory. All your multimedia files will be saved in **My stuff**. Press **Menu** then select **My stuff** to open a list of folders.

Your GS155 supports JPEG images, MP3 & MIDI sound files.

Media Menu 6

Camera

Taking a quick photo

Using the camera module built in your phone, you can take pictures of people. Additionally, you can select photos as wallpaper.

- 1 Press **Menu** and select **Media**, select **Camera** or go directly to camera through short cut key by pressing down navigation key.
- 2 Holding the phone vertically, point the lens towards the subject of the photo.
- 3 Press the Capture key to take a photo.

MP3 Player

Your LG GS155 has a built-in MP3 player so you can play all your favourite music.

Playing a song

- 1 Press menu and select Media and then choose MP3 Player.
- 2 Choose all songs then select the song you want to play, Go To Options and then Press Play.
- 3 While music is playing, go to Options->Pause to pause the song.
- 4 Press right navigation key to skip to next song.
- 5 Press left navigation key to skip to previous song.
- 6 While music is playing, press "Back" key to stop the music and return to the MP3 player menu.

You can view and play songs, add songs to Play list, remove, set any song as ringtone from  options.

When you're playing a song,

- 1 Long press right navigation key to FF
- 2 Long press left navigation key to REV.
- 3 If song is played for more than 3 seconds and if we press left navigation key then it will play the same song from the beginning else it will play the previous song.

FM radio

When phone can't find FM channel or low channel clarity is happening, use ear-mic .

Your LG GS155 has an FM radio feature so you can tune into your favourite stations to listen on the move.

Note: You will need to insert your headset in order to listen FM Radio more clear. Insert the plug into the headset socket (this is the same socket that you plug your charger into).

Listening to the radio

- 1 Press **Menu** and select **Media**, then choose **FM radio**.
- 2 Select the channel number of the station you would like to listen to.

Note: You can listen to the radio via built-in speaker. Press **Options**, select **Listen via Speaker**.

GS155 supports wireless FM. User does not require to insert ear-mic to listen FM in normal condition. In weak FM radio signal area the sensitivity can degrade with wireless and antenna mode. So it is advisable to insert the ear-mic for better and enhanced FM quality.

Tools / Organiser Menu 7,8

Using the calendar (Menu > Organiser > Calendar)

When you enter this menu, a calendar appears. A square cursor is located on the current date. You can move the cursor to another date using the navigation keys.

Adding a memo (Menu > Organiser > Memo)

You can register your own memos here.

Setting your alarm (Menu > Organiser > Alarm)

You can set up to 3 alarm clocks to go off at a specified time.

Using your calculator (Menu > Tools > Calculator)

The calculator provides the basic arithmetic functions: addition, subtraction, multiplication and division.

Using the stopwatch (Menu > Tools > Stopwatch)

This option allows you to use the function of a stopwatch.

Converting a unit (Menu > Tools > Unit converter)

This converts many measurements into a unit you want.

World clock (Menu > Tools > World clock)

You can check the current time of Greenwich Mean Time (GMT) and major cities around the world.

SIM services (Menu > Tools > SIM services)

This feature depends on SIM and the network services. In case the SIM card supports SAT (i.e. SIM Application Toolkit) services, this menu will be the operator specific service name stored on the SIM card.

Settings Menu 9

Changing your profiles (Menu > Settings > Profiles)

You can change your profile **General, Silent, Vibrate only, Outdoor, Flight Mode** and **Headset**.

Using Flight mode

- 1 Press Menu > Settings > Profiles > Flight mode
- 2 Use this function to switch the flight mode On or Off. You will not be able to make calls, send message when the Flight mode is On.

Changing your date & time (Menu > Settings > Date & Time)

You can set functions relating to the date and time.

Changing the language (Menu > Settings > Language)

You can change the language for the display texts in your phone. This change will also affect the language input mode.

Changing your display settings (Menu > Settings > Display)

You can change the settings for the phone display.

Call (Menu > Settings > Call) - You can set the menu relevant to a call.

Auto keylock - You can make the key pad locked automatically after some time.

Changing your security settings (Menu > Settings > Security)

Change your security settings to keep your GS155 and the important information it holds protected.

- **PIN code request** - Choose a PIN code to be requested when you turn your phone on.
- **Phone lock** - Choose a security code to lock your phone, **When power on, When SIM changed** or **Immediately**.

- **Call barring**
- **Fixed dial number**
- **Anti Theft Mobile Tracker** - When the handset is stolen, handset sends the SMS to the numbers configured by real owner. User has to configure the ATMT settings with name, primary phone number, secondary number. User has to Set ATMT ON to activate the ATMT feature. Default ATMT code is "0000". ATMT SMS will contain information about the stolen phone IMEI, current location & number of the person who is using that handset.
- **Change codes** - Changing your **security code** or **PIN1 code** or PIN2 code, ATMT code, enter the old code followed by the new code.

Power save (Menu > Settings > Power save)

If you set **Always on**, you can save the battery power when you don't use the phone. Choose to switch the power save settings **Always on**, **Night only** or **Off**.

Changing your USB connection

- 1 Press Menu > Settings > USB connection.
- 2 Make your change to Mass storage, PC suite or Always ask. (Default Always ask will be selected)

Network selection - You can also select a network manually and set a network.

Resetting your phone (Menu > Settings > Reset settings)

Use Reset settings to reset all the settings to their factory definitions. You need the security code to activate this function. The default number is "0000".

Memory status - You can check free space and memory usage of phone, SIM card and external memory (if inserted).

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal. Further detailed information is given in this manual.



WARNING

- Mobile Phones must be switched off at all times in an aircraft.
- Do not hold the phone in your hand while driving.
- Do not use your phone near petrol stations, fuel depots, chemical plants or blasting operations.
- For your safety, use ONLY specified ORIGINAL batteries and chargers.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or serious damage to your phone.
- Keep the phone in a safe place out of small children's reach. It includes small parts which if detached may cause a choking hazard.
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.

CAUTION

- Switch off the phone in any area where required by special regulations. For example, do not use your phone in hospitals or it may affect sensitive medical equipment.
- Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls.
- Only use ORIGINAL accessories to avoid damage to your phone.

- All radio transmitters carry risks of interference with electronics in close proximity. Minor interference may affect TVs, radios, PCs, etc.
- Batteries should be disposed of in accordance with relevant legislation.
- Do not dismantle the phone or battery.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model GS155 has been designed to comply with applicable safety requirement for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardized method with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP), which is 2 W/Kg averaged over ten (10) gram of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 1.03 W/Kg (10g) and when worn on the body is 0.440 W/Kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/Kg averaged over one (1) gram of tissue.

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- The coating of the phone may be damaged if covered with wrap or vinyl wrapper.
- Use dry cloth to clean the exterior of the unit. (Do not use solvent such as benzene, thinner or alcohol.)
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object; otherwise, it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like an earphone cautiously. Do not press the antenna unnecessarily.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, i.e. in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point. Don't use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the compartment of your vehicle which contains your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn off your mobile phone before boarding any aircraft.
- Do not use it on the aircraft without crew permission.

Children

Keep the phone in a safe place out of small children's reach. It includes small parts which if detached may cause a choking hazard.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.

Technical data

General

Product name : GS155

System : GSM 900 / DCS 1800

Ambient Temperatures

Max : +55°C (discharging)

+45°C (charging)

Min : -10°C

Declaration of Conformity LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc. LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 900 / DCS 1800 Dual band Terminal Equipment

Model Name

GS155

Trade Name

LG

C E 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.8.1, EN 301 489-07 V1.3.1
EN 301 511 V9.0.2
EN 50360:2001, EN62209-1:2006
EN 60950-1:2001

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House-Churchfield Road - Walton-on-Thames Surrey - KT12 2TD , United Kingdom

Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Issued Date

Seung Hyoun, Ji / Director

05.Feb. 2010

LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 88940, e-mail : jacob @ lge.com


Signature of representative



Warranty Card
產品保用證

Mobile Phone
手提電話

A decorative graphic consisting of several parallel, wavy lines that flow from left to right, creating a sense of movement and rhythm. The lines are light gray and vary in amplitude, giving it a fluid, organic appearance.

Warranty Card

產品保用證

LG Customer Care Centre

客戶維修服務中心



**Welcome to contact for detailed information
& Customer Care Centre address**

歡迎致電查詢詳細資料及維修服務中心地址

Customer Service Hotline 客戶服務熱線 : (852) 3543 7777

E-mail Us 客戶查詢電郵 : cshelpdesk@lge.com

LG Website 瀏覽網站 : hk.lge.com

**Thank you for your purchase of LG Electronics product under the terms and
conditions listed on this warranty card.**

多謝閣下購買及使用本公司之產品，請參閱保用證所列之產品保用條款。

**IMPORTANT : Please keep and present this warranty card and purchase invoice when services are rendered.
Otherwise, this warranty will be voided.**

重要事項：顧客請保留此保用證和購貨發票，並需在檢查／維修時出示，否則保用無效。

Mobile Phone Warranty Policy

HK Area
香港地區

手提電話保用條款

- (1) LG Electronics Hong Kong Limited (hereafter LGEHK) provides warranty period from the date of purchase are as follows and only valid for mobile purchase in Hong Kong only (any promotion gift item is not included) :
 - (i) Handset :12 months (ii) Charger :6 months
 - (iii) Battery :6 months (iv) Hand free earphone :3 months.
 - (2) Warranty is valid only for authorized product; parallel import and counterfeit product are invalid.
 - (3) Product is under warranty against manufacturing defects by reason of faulty workmanship or internal electronic parts materials. This warranty does not cover defects arising from natural wear of the product (including casing, key pad, display, antenna, and accessories, etc.)
 - (4) If check-up or repairing are required, customer must present the original invoice and warranty card on which the relevant IMEI number was printed. Upon any failure to present the above documentation, customer must pay for the costs of the services provided.
 - (5) All parts replaced within the warranty period are the property of LGEHK. We have rights to handle those parts as necessary.
 - (6) Data stored in handsets may be lost after the repair and thus should be properly stored by customer beforehand.
 - (7) Warranty will be voided under the following conditions, and LGEHK reserves the right to refuse providing service and/or shall demand charges for any costs of servicing from customer :
 - (i) Product has been tampered with or undergone unauthorized repair by third parties, improper installation, alternation or modification to this product, or damage, tearing, removal of the warranty sticker that is affixed to this product.
 - (ii) Defects arising from misuse, mishandling, abuse, accident, negligence and damage caused directly or indirectly by fire, flood, liquid water, corrosion, convulsion of nature, war, riot or civil commotion.
 - (iii) The IMEI number sticker on this product has been erased or modified.
 - (iv) The content of warranty policy has been modified without authorization.
 - (8) LGEHK is not responsible for any loss of data or system corruption during the process of transportation or repair to and from the Service Centre and due to the forces of nature.
 - (9) LGEHK reserves the right to terminate or modify the terms of this warranty card. For exceptional cases, subject to report of our investigation, we reserve the right to terminate this warranty card or modify terms of warranty policy.
 - (10) Our company will not be liable for any loss directly or indirectly caused by the breakdown of the product.
 - (11) This warranty card is restricted within Hong Kong SAR only.
-
- (1) 本公司為客戶提供保修期如下，只適用於香港購買之手機，並不包括各促銷活動之贈品(由購買日起計)
 - (i) 機身：12個月 (ii) 充 電 器：6個月
 - (iii) 電池：6個月 (iv) 免提耳機：6個月
 - (2) 保修服務只適用於原裝行貨，水貨及冒牌貨均屬無效。
 - (3) 此保修只適用於生產上的瑕疵，如電子零件偶然出現毛病，並不包括手機的自然磨損包括外殼、鍵盤、顯示屏、天線、附件等。
 - (4) 用戶要求維修服務時，須同時攜同手機、保用證及印有IMEI號碼之有效發票正本到本公司指定之維修中心進行維修，否則保修服務無效，客戶須繳付維修費用。
 - (5) 在保修期內維修更換后的所有零件、配置及附件，均屬本公司所有，本公司有權作出任何處理。
 - (6) 手機內存資料有可能因維修后遺失，請顧客要自行保存。
 - (7) 在下列情況下本保用證將自動失效，本公司有權拒絕維修該手機或向客人徵收所有的維修費用。
 - (i) 手機曾作未許可之維修、不適當的安裝、更改、或貼於其上的維修貼紙遭受損毀、撕破、除去、保修服務即無效。
 - (ii) 手機曾被錯誤使用、錯誤處理、疏忽使用、直接或間接意外由火、液體、火災、腐蝕、地震、戰爭、暴亂或天災所造成的損壞。
 - (iii) 手機上的IMEI號碼貼紙一經修改或除去，保修服務即無效。
 - (iv) 擅自修改本保用證的內容。
 - (8) 本公司將對任何於使用、維修或運送時引致之系統錯誤及資料流失、或因天然災害、意外事件造成之損失概不負責。
 - (9) 本保用證的發出及終止權均屬本公司所有。就不明的情況或個案，經審查後，本公司有權發出或終止本保用證。
 - (10) 本公司將不負責由於產品損壞而直接或間接引致之任何損失。
 - (11) 此保用證只適用於香港特別行政區範圍內。



服務承諾

- 服務員親切熱情的服務態度
- 多用途互動訊息系統
- 完善售後服務，提供專業的保養服務
- 為客戶介紹及推薦最新產品
- 有效率和快捷的服務
- 不斷創新產品，給客戶無限驚喜



To:

LG Electronics HK Ltd.
North Point Post Office Box No.54509
香港北角郵政信箱54509號



Limited Warranty

限期保用證

To provide our best after-sales service, please complete and return this warranty card to us.
您的寶貴意見能使我們的服務更加完善，請填妥及寄回此保用證以享受閣下尊有的售後服務。

Customer Information

客戶資料

Purchaser's Name:

客戶姓名

Address:

地址

E-mail:

電郵

Mobile:

手提電話

Home:

家居電話

Model No.:

型號

IMEI No.:

機身IMEI編號

Date of Purchase:

購買日期

Invoice/Sales Docket No.:

購買單據編號



Retailer Information

零售店資料

Retailer's Name:

Retailer's Name: _____
零售店名稱

Address:

Address: _____
地址: _____

[illegible][illegible]

Comments

意見要求





MEMO

MEMO

MEMO

MEMO

MEMO

MEMO
