

KF305 使用手冊



CE0168

www.lgmobile.com

MMBB0222292 (1.0)

LG Electronics Inc.

KF305 使用手冊

繁體中文
簡體中文
ENGLISH



此手冊中的部份內容可能會因
手機程式之改良或不同網絡商
提供的服務而令實際情況有所
不同,這並不會另行通知。



KF305 使用手冊 - 繁體中文

目錄

簡介.....	6	通話記錄.....	38
保護您的安全.....	7	所有通話.....	38
安全及有效使用的指引.....	8	未接來電.....	38
KF305 功能.....	13	已撥通話.....	38
手機部份.....	13	已接來電.....	38
開始使用.....	19	通話時間.....	38
插入智能咭並安裝手機電池..	19	通話費用.....	39
電池充電.....	20	數據資訊.....	39
拔下充電器.....	21	記事簿.....	40
如何使用記憶咭.....	22	日曆.....	40
標準功能.....	26	備忘錄.....	40
撥打與接聽電話.....	26	待辦事項.....	41
輸入文字.....	27	多媒體.....	42
選擇功能和選項.....	30	MP3 播放器.....	42
通話中功能表.....	31	所有歌曲.....	43
功能表總覽.....	34	我的播放列表.....	43
遊戲及應用功能.....	36	設定.....	43
遊戲.....	36	相機.....	43
應用程式.....	37	視像攝錄機.....	45
網絡設定.....	37	FM 收音機.....	45
		語音備忘錄.....	46

訊息.....	47
新訊息	47
收件匣	48
電郵信箱	49
草稿.....	49
寄件匣	49
已發送	49
收聽留言訊息	50
資訊廣播	50
讀取	50
主題	51
常用範本	51
文字範本.....	51
多媒體訊息範本	51
設定.....	52
文字訊息.....	52
多媒體訊息	52
電郵	53
留言信箱號碼.....	54
服務信息.....	54
資訊廣播.....	54

我的檔案.....	55
圖像.....	55
聲音.....	56
影片	56
文件.....	57
其他.....	57
情景模式.....	58
啟動	58
更改	58
通訊錄	59
搜尋.....	59
新增通訊錄.....	60
快速撥號	60
群組.....	60
複製全部	61
刪除全部	61
設定.....	61
檢視選項.....	61
通訊錄備份	61
恢復通訊錄	62

目錄

資訊.....	62	Cookies.....	67
服務撥號號碼.....	62	安全認證.....	68
本手機號碼	62	顯示圖像.....	68
我的名片	62	Java指令	68
工具.....	63	記憶體用於	68
鬧鐘.....	63	資訊.....	68
計算機	63	連接.....	69
秒錶.....	64	藍芽.....	69
單位轉換器.....	64	網絡.....	71
世界時間.....	64	網絡選擇.....	71
智能咭服務.....	64	GPRS 連接.....	71
瀏覽器	65	存取點.....	72
主頁.....	66	USB 連線模式.....	73
書簽.....	66	設定.....	74
輸入網址.....	66	日期和時間.....	74
記錄.....	66	設定日期.....	74
已儲存網頁.....	67	日期格式.....	74
設定.....	67	設定時間.....	74
網絡設定.....	67	時間格式.....	74
屏幕設定模式.....	67	自動更新.....	74
暫存記憶.....	67	語言	74

屏幕.....	74
牆紙	74
時鐘	74
背景燈時計	74
亮度	75
功能導向捷徑.....	75
字體大小.....	75
主題	75
功能表風格	75
撥號	75
備用歡迎辭	75
網絡名稱.....	75
捷徑.....	75
通話.....	75
來電轉接.....	76
通話限制.....	77
固定撥號號碼.....	77
接聽模式.....	78
發送我的號碼.....	78
來電等候.....	78
道歉訊息.....	78

分鐘提示.....	78
自動重撥.....	78
選擇線路.....	79
發送 DTMF	79
安全.....	79
PIN 碼要求	79
手機鎖.....	79
手機遺失追蹤.....	79
更改密碼.....	80
飛航模式.....	80
省電模式.....	80
重設.....	80
記憶體狀態.....	80
配件.....	81
技術數據.....	82

簡介

恭喜您購買了先進輕巧的 KF305 手機，本手機專為利用最新的數碼流動通訊科技而設計。

本用戶指南包括使用及操作本手機的重要資訊。請仔細閱讀所有資訊，以便發揮手機的最佳性能，並避免手機損害或使用不當。任何用戶指南不明確允許的變更或修改可能會使此設備的保養證書無效。



保護您的安全

警告！

- 在飛機上必須始終關閉手機。
- 駕車時請勿手持手機。
- 請勿在加油站、燃料庫、化工廠或爆破工程附近使用您的手機。
- 僅請使用原裝的電池與充電器，以策安全。
- 請勿以潮濕的雙手對充電中的手機進行操作。這可能會引致觸電或造成手機嚴重損壞。
- 請將手機放在兒童接觸不到的安全地方。手機包含微細零件，如果拆開，可能造成哽咽危險。
- 不要在易燃材料附近為手機充電，因為充電期間手機會發熱並導致火災。
- 切勿在柔軟家具上為手機充電。手機應在通風良好的環境中充電。

注意！

- 請於任何有特殊限制的地方關閉手機。例如，請勿在醫院內使用手機，否則，它可能會對敏感的醫療設備造成影響。
- 緊急電話可能在某些流動網絡中不能發出。因此，您不應僅倚賴手機作為緊急電話方式。
- 僅請使用原裝配件，以免損壞手機。
- 所有無線電收發器均有可能干擾附近的電子裝置。輕微干擾可影響電視、收音機、個人電腦等。
- 請根據相關法例來處理棄置的電池。
- 請勿拆開手機或電池。
- 若使用類型不當的電池，則有發生爆炸的危險。

安全及有效使用的指引

請閱讀以下簡易的使用準則。
違反這些準則可能會發生危險
或觸犯法律。詳細資訊刊於本
用戶手冊的正文部份。

無線電波暴露準則

無線電波暴露及比吸收率 (SAR)資訊

本手機型號 KF305 已為遵守無線電波暴露的應用安全要求而設計。此要求根據包括專為確保任何年齡、任何健康狀況的所有人士安全而設的安全極限的科學指引。

- ▶ 無線電波暴露指引的量度單位叫作比吸收率或 SAR。SAR 測試使用標準方法進行，用手機以在所有使用的頻帶最高的合格電源水平傳輸。
- ▶ 雖然不同型號的 LG 電話的 SAR 水平有所差異，但所有這些電話都為達到無線電波暴露的相關指引而設。

- ▶ 國際非離子化輻射保護委員會(ICNIRP) 建議的 SAR 限制，即平均十 (10) 克組織 2 W/Kg。
- ▶ 經 DASY4 測試，本型號手機在耳邊使用的最高 SAR 值為 1.24 W/Kg(10g)，攜帶於身上時則為 0.417W/Kg (10g)。
- ▶ 採用了電氣與電子工程師學會(IEEE)建議 SAR 限制（即平均一(1) 克組織 1.6 W/Kg）的國家/地區居民的 SAR 數據資訊（如美國、加拿大、澳洲及臺灣）。

產品護理及維修

警告！

僅請使用經認可可用於此特定手機型號的電池、充電器及配件。使用其他種類可能使手機的認可或保養失效，並可能引致危險。

- ▶ 請請勿拆開此裝置。需要對手機進行維修時，請將其帶到合資格的維修技師處。

- ▶ 遠離電子裝置，如電視、無線電或個人電腦。
- ▶ 裝置需遠離發熱來源，如散熱器或烹調器具。
- ▶ 切勿將手機放入微波爐中，這會導致電池爆炸。
- ▶ 請勿摔落手機。
- ▶ 請勿讓此裝置遭機械震動或電擊。
- ▶ 如在特別環境的要求下，請關閉手機。如：請勿在未得到批准下在醫療儀器附近使用您的手機。
- ▶ 請勿以潮濕的雙手對充電中的手機進行操作。
- ▶ 這可能會引致觸電或造成手機嚴重損壞。
- ▶ 請勿使用刺鼻的化學物品（如酒精、苯、稀釋劑等等）或清潔劑來清潔手機。這可能有失火的危險。
- ▶ 切勿在柔軟家具上為手機充電。
- ▶ 手機應在通風良好的環境中充電。
- ▶ 請勿讓此裝置接觸過多煙或塵埃。
- ▶ 請勿將手機置於信用卡或車票附近，這可能會影響磁帶上的資料。
- ▶ 請勿以尖銳物件敲打屏幕，否則可能會對手機造成損毀。
- ▶ 請勿將手機暴露於液體或濕氣中。
- ▶ 小心使用如耳機與聽筒一類的配件。確保纜線安全捲起，如無必要，切勿觸及天線。
- ▶ 開機前，請拔除數據線。

電子裝置

所有手機都可能會因為受到干擾而影響效能。

- ▶ 請勿在未得到批准下在醫療儀器附近使用您的手機。避免將手機放置在起搏點上（即您的胸口袋）。
- ▶ 手機可能影響到某些助聽器。
- ▶ 輕微干擾可影響電視、收音機、個人電腦等。

安全及有效使用的指引

馬路安全

檢查您駕駛時地區使用手機的法例及規則。

- ▶ 駕駛時請勿使用手提手機。
- ▶ 請專心一致駕駛。
- ▶ 如有免提耳機，請使用免提耳機。
- ▶ 若有駕駛條例限制，請駛離馬路並停泊好汽車後再撥打或接聽電話。
- ▶ RF 能量可能影響您的汽車內某些電子系統，如汽車立體音響裝置、安全設備。
- ▶ 如果您的汽車配有氣囊，切勿讓已安裝的無線設備或手提無線設備阻擋氣囊。有可能因使用不當而造成嚴重損傷。如果在外出時聆聽音樂，請確保將音量設定至合適水平，以便可以對周圍環境產生警覺。這在過馬路時尤為必要。

避免損害聽力

如果長時間以較大音量收聽，可能會對聽覺造成損害。因此我們建議您不要在耳邊開啟或關閉手機。我們亦建議將音樂及通話音量設定至合適水平。

玻璃零件

您的 KF305 手機有部分零件為玻璃質料。當手機掉落地面或是受到相當程度的撞擊時，玻璃質料的鏡面可能會破裂。千萬不要以手接觸或嘗試移除玻璃碎片，應立即停止使用手機，並盡快到 LG 授權的維修中心更換該破碎的玻璃鏡面。

爆破地區

請勿在進行爆破時使用手機。請嚴格遵守相關限制、規定或條例。

潛在爆炸氣壓

- ▶ 請勿在燃料補給點使用手機。請勿在燃料或化學物質旁使用。

- ▶ 請勿在車內擺放手機和配件的位置，運送或儲藏易燃氣體、液體或爆炸物。

在飛機

無線裝置可引致飛機干擾。

- ▶ 登機前，請先關掉手機。
- ▶ 未經地勤人員批准，請勿在陸上使用手機。

兒童

請將手機放在兒童接觸不到的安全地方。手機包含微細零件，如果拆開，可能造成哽咽危險。

緊急呼叫

緊急電話可能在某些流動網絡中不能發出。因此，您不應僅倚賴手機作為緊急電話方式。請向您本地的服務供應商查詢。

電池資料及保護

- ▶ 充電前，您無須完全放電。跟其他電池系統不同，沒有記憶影響可緩和電池的效能。

- ▶ 只使用 LG 電池及充電器。LG 充電器是為將電池壽命擴至最大而設。
- ▶ 請勿拆解電池組或造成電池組短路。
- ▶ 請保持電池組的金屬接點清潔。
- ▶ 當電池不再提供可接受的效能，請更換電池。電池組可重充數百次直至需要更換為止。
- ▶ 如果電池很久沒有使用來擴展其用量，需重充電池。
- ▶ 請勿直接將充電器暴露於日光下或高濕度環境（如浴室）中。
- ▶ 請勿把電池放置在熱或冷的地方，這可損害電池效能。
- ▶ 若使用類型不當的電池，則有發生爆炸的危險。
- ▶ 請根據製造商的指示來處理廢棄電池。
- ▶ 如果需要更換電池，請帶同手機前往最近的授權 LG 電子產品服務點或經銷商以尋求協助。

安全及有效使用的指引

- ▶ 請謹記在手機完全充電後從牆壁插座拔出充電器，避免充電器造成不必要的電力損耗。
- ▶ 電池的實際壽命將取決於網絡設定、產品設定、使用模式、電池及環境條件。

KF305 功能

手機部份

1 聽筒

2 主屏幕

3 發送鍵

- ▶ 撥打電話號碼和接聽電話。
- ▶ 在備用模式下：顯示通話記錄。

4 字母數字鍵

- ▶ 在備用模式下：
輸入撥號號碼
按住



- 國際電話



- 啟動留言訊息中心



至  - 快速撥號

- ▶ 在編輯模式下：
輸入號碼和字元

5 清除鍵

- ▶ 每按一下就清除一個字元。
按住此鍵可清除所有輸入的資料。


6 結束鍵

- ▶ 開/關機（長按）
- ▶ 結束或拒接來電。

7 咪高風



KF305 功能

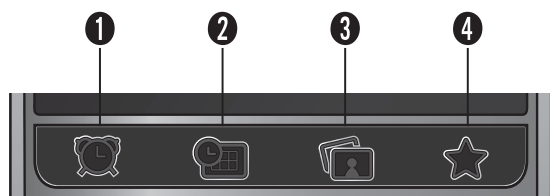

1 鬧鐘快捷鍵

- ▶ 轉到鬧鐘功能表

2 日曆快捷鍵


- ▶ 轉到日曆功能表

3 圖像

- ▶ 轉到「圖象」功能表

4 最愛目錄

- ▶ 轉到「最愛」功能表

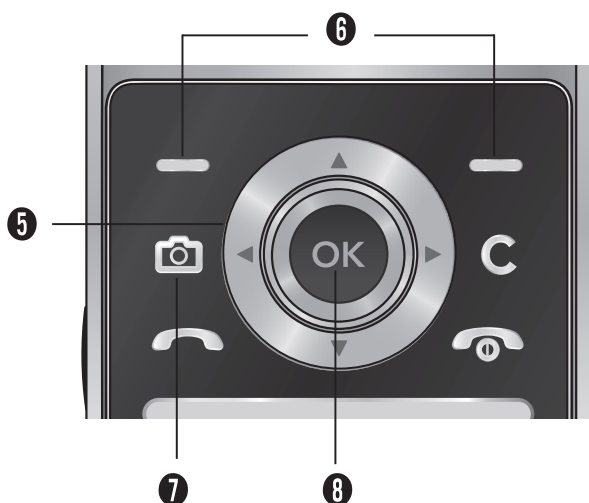

5 導航鍵

- ▶ 在備用模式下：



短按：訊息



短按：轉到聯絡人清單



短按：進入情景模式功能表



短按：進入 MP3 播放器功能表

- ▶ 在功能表中：上下按

6 軟鍵（左軟鍵 / 右軟鍵）


- ▶ 這些鍵執行顯示在屏幕底部的功能。

7 相機快捷鍵

- ▶ 轉到相機取景器。

8 確認鍵 / 選擇鍵

- ▶ 選擇功能表選項並確認操作。

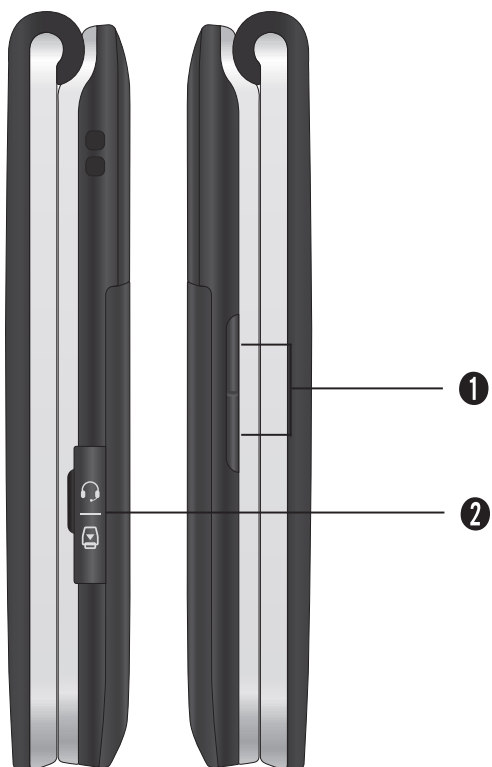


1 側鍵

- ▶ 在備用模式下（打開揭蓋）：鈴聲音量調節(視乎情景模式)
- ▶ 在備用模式下（關閉揭蓋）：
 - 選擇顯示日期和時間
- ▶ 通話中：通話音量調節
- ▶ 播放 MP3 音樂期間：音頻音量調節

2 耳機/充電器/USB 線插孔


備注

請確保在連接 USB 線前，手機是開啟的並處於備用模式。

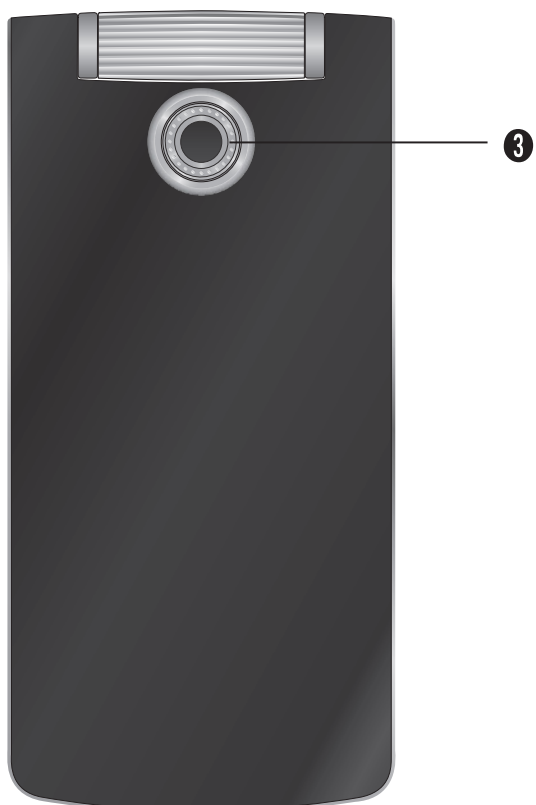


3 相機鏡頭

KF305 功能

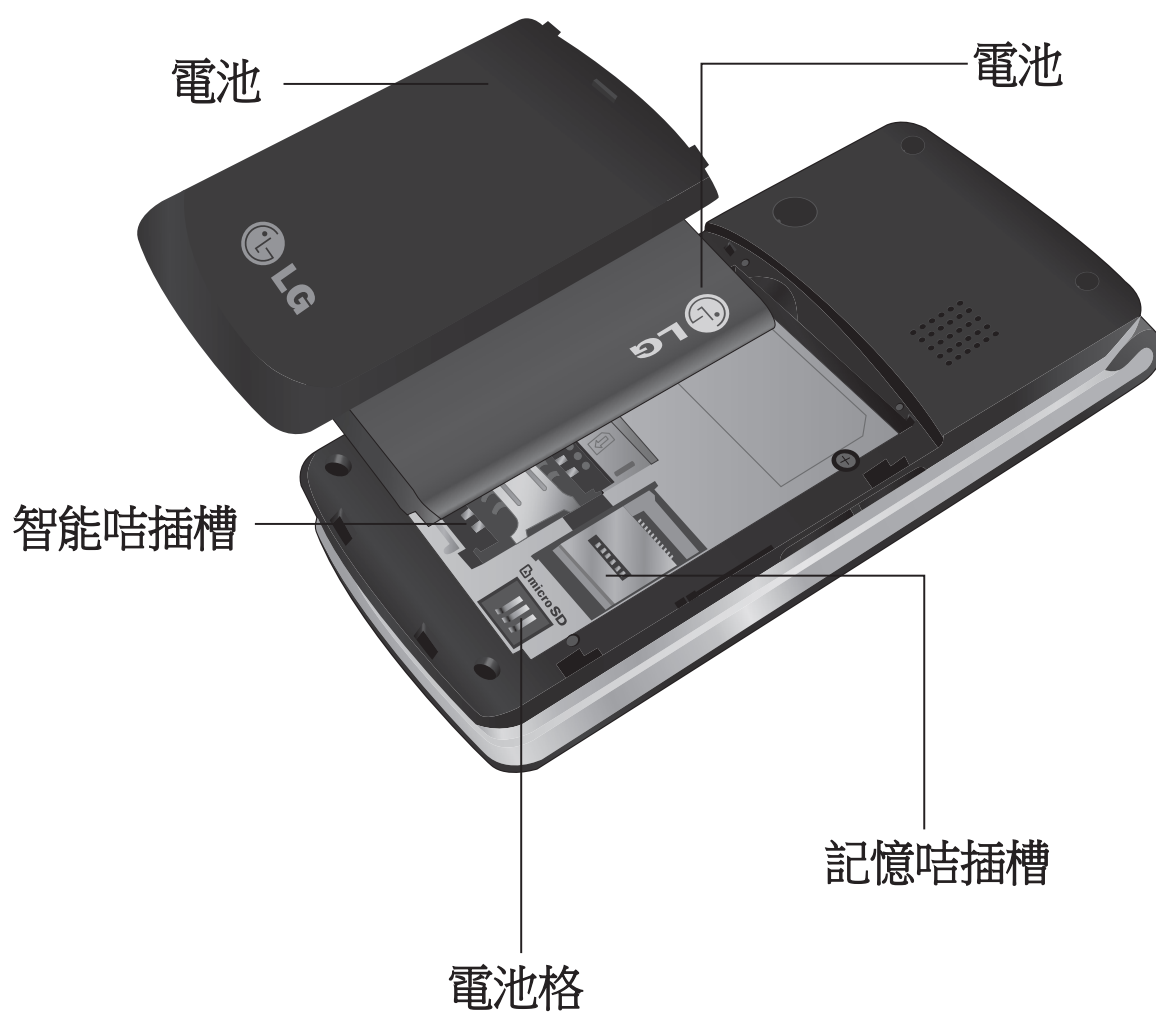

屏幕資訊

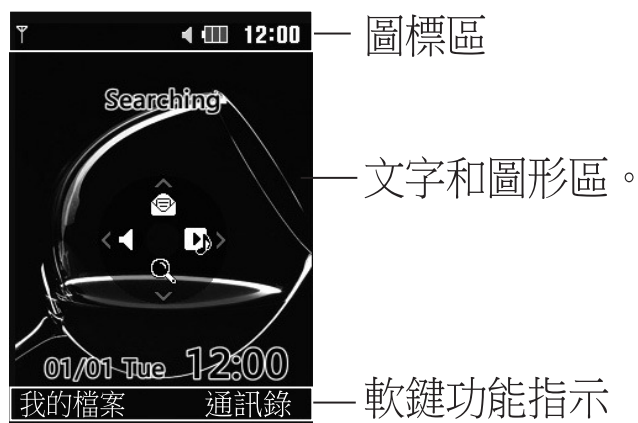

區域	說明
第一行	顯示多個不同的圖示。
中間行	顯示您輸入的訊息、指示和任何資訊，如撥號號碼。
最後一行	顯示目前指定給兩個軟鍵的功能。

屏幕圖示


屏幕顯示多個圖示。如下文所示。

圖示	說明
	指明網絡訊號強度。*

備注

* 通話質量可能取決於網絡覆蓋範圍。如果訊號強度低於 2 格，則可能聽不到聲音、斷線並且話音質量較差。請在通話時將網絡訊號格數作為訊號指示符。如果沒有訊號格數，即意味著不存在網絡覆蓋：此時，您無法存取任何服務網絡（如通話、訊息等）。

KF305 功能

圖示	說明
	表示 GPRS 服務可用。
	表示飛航模式已啟動。
	表示通話正在進行中。
	所有通話已轉接。
	表示手機正在存取瀏覽器。
	表示您正在使用 GPRS。
	顯示您正在使用漫遊服務。
	鬧鐘已設定且處於開啟狀態。
	表示您有日程安排。

圖示	說明
	表示外置記憶體已安裝。
	您收到一則訊息。
	您收到一則留言訊息。
	情景模式中的標準功能表。
	情景模式中的靜音功能表。
	情景模式中的震動功能表。
	情景模式中的戶外功能表。
	情景模式中的耳機功能表。
	顯示電池狀態。
	表示外置記憶體尚未格式化，或不受手機支援。


開始使用

插入智能咭並安裝手機電池

取出電池前，請先確定電源已經關閉。

1 取下電池蓋。

推動電池蓋，並取下電池蓋。

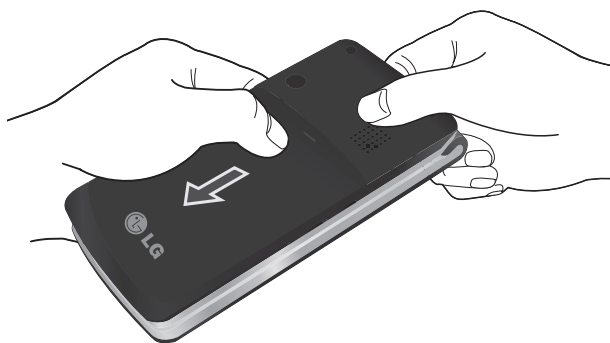

備注

在電源開啟時取出手機電池可能會導致手機發生故障。

2 移除電池。

握住電池上方邊緣，將電池拿出電池格外。



3 插入智能咭。

將智能咭插入智能咭插槽。請確定智能咭已正確插入，且咭上的金色接點區朝向下。要取出智能咭，請在輕壓後向反方向抽出。



插入智能咭

取下智能咭

開始使用

注意！

智能咭金屬接點容易因刮傷而損壞。拿取智能咭時請特別注意。請依照智能咭所附說明書進行使用。

4 插入電池。

先將電池底部放入電池格下方邊緣。將電池上半部壓入定位。



5 裝回電池蓋。

將電池蓋裝回手機，並將其滑入直至電池蓋發出咕嗒聲。



電池充電

要連接電源充電器與手機，您必須先安裝好電池。



- 1 安裝好電池後，將旅行充電器的引線接到手機右側的插孔中。檢查充電器的箭頭是否朝向手機的正面。
- 2 將電源充電器的另一端接到電源插座。請使用隨附的包裝充電器。

- 3 充電完畢後，電池圖標的指示列將會停止動作。

注意！

- 請不要強行拉扯連接頭，因為這樣會損壞手機和/或旅行充電器。
- 請將電池充電器垂直插入牆上的電源插座。
- 若您是在其他國家/地區使用電池充電器，請使用符合當地規格的轉接頭配件。
- 充電時，不要取下電池或智能咭。

警告！

- 如遇上雷暴，請拔除電源線與充電器以防觸電或失火。
- 請勿讓動物牙齒、指甲等尖銳物與電池發生接觸。這可能會有失火的危險。
- 手機正在充電時，請勿撥打或接聽來電，這可能會造成手機短路或失火。

拔下充電器

- 1 充電完畢後，電池圖標的指示列將會停止閃動，且屏幕上顯示「電池已充滿」訊息。
- 2 從電源插座取下充電器。從手機拔下充電器，並將充電器拉出。



備注

- ▶ 在第一次使用手機前，請確保電池充足電。
- ▶ 充電時，請不要取下電池或智能咭。
- ▶ 如果電池充電不正確，請使用電源鍵關閉手機，並重新開啟，然後重新為電池充電。拆除電池並重新裝上後，請重新為電池充電。

開始使用

如何使用記憶咭



<MicroSD 記憶咭>

<如何安裝記憶咭>

- 1 關閉手機。
- 2 開啟插槽保護功能。



- 3 將記憶咭安裝至插槽中。金色接點必須保持向下。如果記憶咭無法順利滑入插槽，則可能因為插入方式不正確或插槽中有異物



- 4 關閉插槽保護功能。
- 5 要取出記憶咭，請先關機。開啟插槽保護功能，並小心取出記憶咭。

備注

- ▶ 電池電量過低時，請避免使用記憶咭。
- ▶ 在咭上寫入資料時，請等操作完成後再取出記憶咭。
- ▶ 該咭設計為僅可以單向插入插槽中。

備注

- ▶ 請勿彎曲記憶咭或強行插入插槽。
- ▶ 請勿插入除 microSD 外的其他任何記憶咭。
- ▶ 將記憶咭插入手機後，請查看屏幕上的圖示區域。
- ▶ 如果顯示記憶體錯誤的圖示，則表示記憶咭尚未格式化或不受手機支援 .
- ▶ 此時，您應該嘗試格式化記憶咭。
- ▶ 如果記憶體錯誤圖示仍顯示在圖示區域，請聯絡服務中心。

有關 microSD 的更多資訊，請參閱記憶咭的使用手冊。

記憶咭格式化

開始使用記憶咭前，需要對其格式化。插入記憶咭後，選擇功能表 - 設定 - 記憶體狀態 - 外置記憶體，然後按格式化。

本項操作只需在第一次使用記憶咭時進行。格式化過程中，系統會為不同的資料類型建立多個資料夾。

開啟手機

確保智能咭已插入手機且電池已充電。按住結束鍵，直到開機。如果 PIN 碼要求設定為「開啟」，則請輸入隨智能咭提供的智能咭 PIN 碼。您將會在幾秒鐘後在網上註冊。

開始使用

關閉手機

按住結束鍵，直到關機。手機電量較低時，可能有幾秒鐘的延遲。此時，切勿再次開機。

存取密碼

您可使用本部分描述的存取密碼，避免他人未經授權可使用手機。使用「安全」功能表的更改密碼功能，您可變更 PIN 和 PIN2 等密碼。

PIN 碼（4 到 8 個數字）

PIN（個人識別號碼）碼可保護您的智能咭，以防未經授權的使用。PIN 碼隨智能咭一起提供。如果 PIN 碼要求設定為「啟動」，則每次開機時，您的手機將要求提供 PIN 碼。如果 PIN 碼要求設定為「關閉」，則您的手機可直接連接到互聯網且無需 PIN 碼。

PIN2 碼（4 到 8 個數字）

PIN2 碼隨附在某些智能咭中，在存取如通話費用通知和固定撥號號碼等功能時需要使用。這些功能只有在受智能咭支援時才可用。請向網絡服務商了解更多資訊。

PUK 碼（4 到 8 個數字）

變更鎖定的 PIN 碼時，需要提供 PUK（PIN 解鎖鍵）碼。PUK 隨智能咭一起提供。否則，請聯絡網絡服務商獲取此密碼。如果您遺失密碼，亦請聯絡您的網絡服務商。

PUK2 碼

（4 到 8 個數字）

某些智能咭中隨附有 PUK2 碼，在變更已鎖定的 PIN2 碼時需要輸入。如果您遺失密碼，亦請聯絡您的網絡服務商。

安全密碼

（4 到 8 個數字）

安全密碼可防範手機未被授權使用。預設安全密碼為「0000」，刪除所有手機記錄及啟動「重設」設定功能表時需要輸入安全密碼。

同時，啟動或關閉手機鎖定功能以防未被授權的使用時亦需要輸入安全密碼。可從「安全」功能表修改安全密碼預設設定。

標準功能

撥打與接聽電話

撥打電話

- 1 確保手機已經開啟。
- 2 輸入電話號碼，包括區碼。
 - ▶ 按住 c 鍵可清除整個號碼。
- 3 按發送鍵撥打電話。
- 4 要結束通話，請按結束鍵。

從通話紀錄清單撥號

- 1 在備用模式下，按發送鍵將顯示所有通話，包括已接來電、已撥通話和未接來電號碼。
- 2 使用上/下導航鍵，選擇所需號碼。
- 3 按發送鍵。

撥打國際電話

- 1 按住 0 鍵可以「+」字元代表國際地區號碼。
- 2 輸入國家代碼、區域代碼和電話號碼。
- 3 按發送鍵。

結束通話

完成通話後，按結束鍵。

透過通訊錄撥打電話

您可以將經常撥打的姓名與電話號碼儲存在智能咭和手機記憶體中，即「通訊錄」。在通訊錄中找到所需的名稱，即可撥號。

接聽來電

接到來電時，手機會發出鈴聲且手機圖標會在屏幕上閃爍。若手機可識別出來電者，則會顯示來電者的電話號碼（或儲存在「通訊錄」中的姓名）。

- 1 要接聽來電，如果揭蓋開啟設定為接聽模式，則打開手機即可。您可使用接聽模式功能隨時更改接聽模式。

備注

如果接聽模式設定為按任何鍵，則除按結束鍵或右軟鍵外的任何鍵均可接聽來電。

- ▶ 要在靜音模式下拒接來電，請長按手機左側的下鍵，而無需打開手機。

但是，在其他情景模式下，如果要不打開手機拒接來電，則需要執行以下步驟。

來電後，長按下鍵，目前的情景模式將變更為靜音模式。

再長按下鍵，來電將被拒絕。

- ▶ 您可在使用「通訊錄」或其他功能表的功能時接聽來電。

- 2 要結束通話，合上手機或按結束鍵。

訊號強度

查看手機屏幕上的訊號指示符，便可得知訊號強度。 

訊號強度會有所變化，尤其是在建築物內。靠近窗口，可以改善接收效果。

輸入文字

使用手機按鍵，您可輸入英數字元。例如，在通訊錄中儲存名稱、編寫訊息、建立個人問候語。本手機提供以下文字輸入法。

T9 (T9 Abc) 模式

使用此模式時，每個字母只要按一下按鍵即可輸入單字。鍵盤上每個按鍵都代表一個以上的字母。T9 模式會自動將您按下的按鍵與內建字典進行比對，然後決定正確的單字，因此按鍵次數較傳統 ABC 模式少。有時候，這稱為預測文字。

ABC 模式

使用此模式時，按一次、兩次、三次或四次標示有所需字母的按鍵，直到所需字母顯示，即可輸入該字母。

123 模式（數字模式）

只要按一次按鍵即可輸入一個數字。要將文字輸入欄的輸入模式變更為 123 模式，請按 # 鍵，直到 123 模式顯示。

標準功能

變更文字輸入模式

- 1 進入允許輸入字元的欄位後，在屏幕右上角可看到文字輸入模式指示符。
- 2 按 # 鍵，變更文字輸入模式。您可在屏幕的右上角查看目前的文字輸入模式。

使用 T9 模式

T9 輸入模式讓您可以透過最少的按鍵次數輕鬆輸入單字。當您按每個按鍵時，手機會開始根據內建字典顯示手機認為您要鍵入的字元。當沒有所需單字，您可拼寫以新增 T9 文字。新增單字後，單字會隨之變更以顯示字典中最相近的候選字。

- 1 在 T9 模式中，按下按鍵 2 至 9 開始輸入單字。每一個字母只需按一次鍵。
 - ▶ 單字會隨著鍵入的字母變化。在完成鍵入前，請勿理會屏幕顯示的文字。
 - ▶ 如果鍵入完成後單字還是不對，請再按鍵一次或多次，以循環顯示其他單字選項。

範例

按 4663 鍵入「Good」

- ▶ 如果單字選擇清單中沒有所需的單字，請使用 ABC 模式新增單字。
 - ▶ 透過選擇關閉 T9，您亦可關閉 T9 模式。手機預設設定為 T9 啟動模式。
- 2 在編輯或刪除任何按鍵輸入之前，輸入整個單字。
 - 3 按 0 或右導航鍵(視乎編寫語言)在每個單字後加入空格。要刪除字母，請按 c。按住 c 可連續清除字母。

使用 ABC 模式

使用 2 至 9 鍵輸入文字。

- 1 按標有所需字母的按鍵：
 - ▶ 按一次選擇第一個字母
 - ▶ 按兩次選擇第二個字母
 - ▶ 如此類推
- 2 要插入空格，請按右導航鍵一次。要刪除字母，請按 c 鍵。按住 c 鍵清除整個文字。

使用 123（數字）模式

您可以使用 123 模式在文字訊息中輸入數字（例如，電話號碼）。在手動切換回到適當的文字輸入模式之前，按下對應於所需數字的按鍵。

使用符號模式

您可以使用符號模式輸入各種符號或特殊字元。要輸入符號，請選擇選項- 附加-符號。使用導航鍵和數字鍵選取所需的符號，然後按 [確認] 鍵。

選擇功能和選項

本手機提供一組讓您可以自訂手機的功能。這些功能配置在功能表與子功能表中，利用兩個標示的軟鍵來存取。您可以利用每個功能表與子功能表查看及變更特定功能的設定。

軟鍵作用將隨當前的上下文而有所不同；屏幕下方位於每個軟鍵正上方的一行標籤會顯示軟鍵目前的功用。



按左軟鍵來存取
我的檔案。

按右軟鍵可存取
「通訊錄」。

通話中功能表

本手機提供一些通話時可以使用的控制功能。要在通話時存取這些功能，請按左軟鍵 [選項]。

通話中

通話時手機畫面上顯示的功能表，與備用畫面中顯示的預設主功能表不同，其選項如下。

撥打其他電話

（取決於網絡）

您可從通訊錄搜尋和撥打電話來撥打第二個電話。

在兩通電話之間切換

要在兩通電話之間切換，請按發送鍵或左軟鍵，然後選擇切換通話。

接聽來電

要在手機響鈴時接聽來電，只需按發送鍵。通話過程中，手機也可以提示您其他的來電。聽筒中會響起提示音，而且畫面上也會顯示有新來電在等候接聽。此功能，即所謂的來電等候，僅當受網絡支援時可用。有關如何啟動或關閉此功能的詳情，請參閱來電等候功能。

若已開啟來電等候功能，按左軟鍵或發送鍵可保留第一個通話並接聽第二個通話。

拒接來電

直接按結束鍵即可不用接聽而拒接來電。

通話中按結束鍵可拒接新來電。

通話中功能表

使咪高風靜音

通話過程中，按右軟鍵 [靜音] 可將咪高風靜音。按右軟鍵 [關閉靜音]，可使手機關閉靜音。手機靜音後，來電者聽不到您的聲音，但您仍可聽到通話內容。

通話中的 DTMF 提示音

要在通話中啟用 DTMF 提示音（例如：透過自動交換機使用手機），請先按左軟鍵 [選項]，然後選取「啟動DTMF」。選擇「關閉DTMF」可關閉DTMF提示音。DTMF提示音正常為開啟。

電話會議

會議服務可讓您同時與多個來電者對話（如果服務網絡商支援此功能）。

僅當您正在接聽一個電話，且保留有一個通話，這兩個電話都在連線時，才能設定電話會議。

如果您設定了電話會議，則可新增、斷開或隔離（即，從電話會議中移除但仍同您保留通話）多個通話。通話中功能表的這些選項都可用。電話會議中的最多來電者可達到五人。開始之後，您完全控制電話會議，且只有您才能往電話會議中新增通話。

撥打其他電話

您可在目前通話中時撥打第二個電話。輸入第二個電話號碼，按發送鍵即可。

接通第二個通話之後，第一個電話自動保留。按發送鍵可在兩個電話之間切換。

設定電話會議

要建立電話會議，將一通電話保留且接聽目前電話時，按左軟鍵後選取「會議通話」的「加入」功能表。

啟動保留中的電話會議

要啟動保留中的電話會議，請按 **s** 鍵。或者，按左軟鍵 [選項]，然後選取「加入全部/保留全部通話」。其他通話狀態為保留的用戶仍會保持連線。要回到電話會議模式，請在按左軟鍵 [選項] 後選取「會議通話」。

往電話會議中新增電話

要新增通話到現有的電話會議，請按左軟鍵然後選取「會議通話」的「加入」功能表。

電話會議中的私人通話

要與電話會議中的某個來電者進行私人通話，請先使其號碼顯示在屏幕上，然後按左軟鍵。選取「會議通話」的「私人」功能表來保留所有其他來電。

結束會議電話

透過按結束鍵，可斷開電話會議中目前顯示的來電者。

功能表總覽

此手機中的功能表可以兩種方式顯示：此手機中的功能表可以格子檢視或列表檢視顯示。

請注意，每種檢視中的功能表編號選項會有所不同。

手機上的預設設定為以格子檢視顯示功能表，因此，手冊中的所有功能表編號選擇將根據此設定顯示。

您可使用功能表、導航鍵和選擇鍵移至所需的機能表。同時您亦可使用捷徑，按確定鍵 [功能表] 後按對應目標功能表的編號鍵即可。

1. 遊戲及應用 功能	2. 通話記錄	3. 記事簿
1.1 遊戲	2.1 所有通話	3.1 日曆
1.2 應用程式	2.2 未接來電	3.2 備忘錄
1.3 網絡設定	2.3 已撥通話	3.3 待辦事項
	2.4 已接來電	
	2.5 通話時間	
	2.6 通話費用	4. 多媒體
	2.7 數據資訊	4.1 MP3 播放器
		4.2 相機
		4.3 視像攝錄機
		4.4 FM 收音機
		4.5 語音備忘錄

5. 訊息
5.1 建立新訊息
5.2 收件匣
5.3 電郵信箱
5.4 草稿
5.5 寄件匣
5.6 已發送
5.7 收聽留言訊息
5.8 資訊廣播
5.9 常用範本
5.0 設定
6. 我的檔案
6.1 圖像
6.2 聲音
6.3 影片
6.4 文件
6.5 其他
7. 情景模式
7.1 標準
7.2 靜音
7.3 震動
7.4 戶外
7.5 耳機

8. 通訊錄
8.1 搜尋
8.2 新增通訊錄
8.3 快速撥號
8.4 群組
8.5 複製全部
8.6 刪除全部
8.7 設定
8.8 資訊
9. 工具
9.1 鬧鐘
9.2 計算機
9.3 秒錶
9.4 單位轉換器
9.5 世界時間
9.6 智能咭服務 (視乎網絡服務)

*. 瀏覽器
*.1 主頁
*.2 書籤
*.3 輸入網址
*.4 記錄
*.5 已儲存網頁
*.6 設定
*.7 資訊
0. 連接
0.1 藍芽
0.2 網絡
0.3 USB 連線模式
#. 設定
#.1 日期和時間
#.2 語言
#.3 屏幕
#.4 捷徑
#.5 通話
#.6 安全
#.7 飛航模式
#.8 省電模式
#.9 重設
#.0 記憶體狀態

遊戲及應用功能

遊戲

功能表 1.1

您可存取手機上的多種遊戲。

備注

Java™ 是由 Sun Microsystems 開發的一種技術。要安裝 Java Applet，您可採用以下兩種方法。

第一種方法類似於使用標準 MS Internet Explorer 瀏覽器下載 Java Applet，您可使用 WAP 手機下載 Java MIDlet。取決於網路服務商，所有基於 Java 的程式（如 Java 遊戲）均可下載並於手機上執行。下載之後，您可在「遊戲」或「應用功能」功能表中檢視 Java 程式，您還可在其中進行選擇、執行或刪除操作。Java 程式檔案以 .JAD 或 .JAR 格式儲存在手機中。

備注

JAR 檔案是 Java 程式的壓縮格式，且 JAD 檔案是一個說明檔，其中包含所有詳細資訊。下載之前，您可透過網絡，從 JAD 檔案檢視所有詳細的檔案說明。

另外一種方法，您可使用存儲在外置記憶體中的 Java Applet。

移至「我的檔案」->「外置記憶體」->「其他」，然後選擇要安裝於手機上的 Java Applet .jad 或 .jar 檔案。

注意

僅基於 J2ME (Java 2 Micro Edition) 的程式才能執行於手機環境中。而基於 J2SE (Java 2 Standard Edition) 的程式將只能執行於電腦環境中。

網絡設定

功能表 1.3

網絡設定功能表可讓您查看用於連接互聯網的網絡資訊。您可啟動或新增網絡設定。

應用程式

功能表 1.2

選定「應用程式」功能表後，Java 載入屏幕會顯示。您可選擇和輕鬆存取此功能表中的其他應用功能。更多詳情，請聯絡您的服務網絡商。

通話記錄

如果網絡支援服務區域內的來電線路識別 (CLI)，則您可以查看未接來電、已撥通話和已接來電。

號碼與姓名（如果有的話）會和電話的日期與時間一起顯示。您亦可檢視已呼叫的次數。

所有通話 功能表 2.1

您可檢視所有撥出電話或來電的列表。

未接來電 功能表 2.2

可讓您檢視未接電話記錄、撥打電話、發送訊息，以及將號碼儲存到通訊錄中。

已撥通話 功能表 2.3

可讓您檢視已撥電話記錄、撥打電話、發送訊息，以及將號碼儲存到通訊錄中。

已接來電 功能表 2.4

可讓您檢視已接電話記錄、撥打電話、發送訊息，以及將號碼儲存到通訊錄中。

通話時間 功能表 2.5

您可以查看來電與撥出電話的通話時間。

您亦可以重設通話計時。

可以使用的計時器如下：

- ▶ **最後通話**：最後通話的通話時間。
- ▶ **所有通話**：從上次重設計時器算起，所有撥打和接聽來電的總通話時間。
- ▶ **已撥通話**：撥出電話的通話時間。
- ▶ **已接來電**：來電的通話時間。

通話費用

功能表 2.6

可讓您查看最後通話和所有通話的費用。

數據資訊

功能表 2.7

您可查看透過 GPRS 資訊選項，在網絡上傳輸的數據用量。此外，您還可檢視數據傳輸時間。

記事簿

日曆

功能表 3.1

您可按月查看日程表。游標位於目前日期上，而指定的日期亦會標記出來。

每按一下		往前跳一年。
		向後跳一年。
		移至今日。
		往前跳一個月。
		往後跳一個月。

透過按「選項」鍵，您可檢視選定日期的日程表列表。

- ▶ **檢視：**您可檢視選定日期的日程表事項。
- ▶ **新增日程表：**選擇此選項，輸入新日程表。
- ▶ **日程表提示音：**您可設定日程表提示音。
- ▶ **所有日程表：**您可顯示所有日程表。

- ▶ **轉到日期：**您可直接轉到選定日期。
- ▶ **刪除過期記錄：**選擇此選項刪除已提示您的過期日程表事項。
- ▶ **刪除全部：**選擇此選項刪除所有的日程表。

備忘錄

功能表 3.2

您可新增備忘錄，檢視和管理已儲存的備忘錄。

- 1 如果記錄為空，按左軟鍵 [新增] 並輸入備忘錄內容。按左軟鍵 [選項]，然後選擇 [儲存]，您可將備忘錄儲存到列表中。
- 2 如果您已儲存了備忘錄，則使用左軟鍵 [選項] 可存取以下選項：檢視、刪除、新備忘錄、發送方式、修改、多項刪除、刪除全部。

備注

如果您要變更文字輸入模式，請按 # 鍵。

待辦事項

功能表 3.3

您可檢視、修改和新增要完成的工作。工作將按時間順序顯示。可透過不同的方式顯示已完成或未完成的工作。

- 1 如果記錄為空，請按左軟鍵 [新增]。
- 2 輸入到期日、備註、重要性和狀態。
- 3 完成數據輸入後，按左軟鍵 [儲存]。
- 4 按左軟鍵 [選項]，您可管理已儲存的待辦事項備注。

多媒體

MP3 播放器 功能表 4.1

KF305 備有內置整合 MP3 播放器。透過兼容的耳機或內置喇叭，您即可聆聽手機上的 MP3 音樂檔案。

備注

因為喇叭尺寸小，在某些情況下，聲音可能會扭曲，特別在音量調到最高及有很多低音時。因此，我們建議您使用立體聲耳機，享受高質素的音樂。

音樂播放器支援：

- **MPEG-2 Layer III、MPEG-2.5 Layer III**：取樣頻率由 8KHz 至 48KHz。位元率高至 320Kbps、立體聲。
- **AAC**：ADIF、ADTS 格式（取樣頻率由 8KHz 至 48KHz）
- **AAC+**：V1：（位元率 16~128Kbps）
V2：（位元率 16~48Kbps）
（取樣頻率由 8KHz 至 48KHz）

備注

KF305 不支援所有提及檔案類型的可變位元率。因此，您不可能將檔案由 MP3 格式變更為 AAC。

使用大容量儲存，您可以從相容的電腦傳送 MP3 檔案到手機記憶體。

使用 USB 線將手機連接到電腦後，您可透過 Windows Explorer 顯示可移除磁碟。在可移除磁碟中複製歌曲後，您應執行從系統上移除的安全操作。

備注

- ▶ 您須將 MP3 複製到「MP3」資料夾中。如果複製到其他資料夾，將看不到 MP3 檔案。
- ▶ 電腦應使用 Windows 98 SE、Windows ME、Windows 2000、Windows XP 作業系統。

所有歌曲 (功能表 4.1.1)

您可查看所有音樂檔案。

我的播放列表 (功能表 4.1.2)

您可設定您喜歡的音樂檔案。

設定 (功能表 4.1.3)

- ▶ **隨機**：選定開啟後，您可隨機聆聽音樂。
- ▶ **重複**：您可透過此功能表設定**播放模式**：關閉、一首、全部。
- ▶ **調諧器**：此功能表可幫助您調校聽音樂時的各種環境。
- ▶ **播放面板**：此功能表可變更播放 MP3 檔案時主屏幕的背景。

備注

音樂版權受國際公約及國內版權法的保護。需要取得授權或許可才可以複寫或複製音樂。在部份國家，國家法禁止私人複製受版權保護的材料。請檢查適用國家關於使用此類材料的國家法律。

相機

功能表 4.2

使用手機內置的相機，可以拍攝相片。此外，你亦可以將照片發送給其他人及選擇將照片設為牆紙。

備注

使用相機時，耗電量會增加。如果電池電量過低，您可能無法使用相機功能，請在使用前為電池充電。

• 影相

- 為拍出清晰的相片，握緊相機不搖晃的同時，按下相機鍵。
- 適當調較與相片拍攝對象的距離（不低於 50 厘米）。
- 由於相機不能受震盪，需小心處理，使用軟布來清潔相機鏡頭。
- 請勿拆開或改裝相機，因為這樣做有可能會引致火警或故障。

- 1 在備用模式下，按相機鍵。
- 2 對準要拍攝的物體，然後按相機鍵或「確認」鍵。

多媒體

- 3 拍攝的相片會自動儲存在我的檔案的圖像資料夾中。拍照後，按左軟鍵 [選項]，您可選擇子功能表。

拍照前，按左軟鍵 [選項]，您可設定以下選項：

- ▶ **解像度**：可讓您設定圖像大小。(320*240/640*480/1280*1024/1600*1200)
- ▶ **質量**：可讓您設定圖像質量：正常、細緻和特細緻。
- ▶ **自拍時計**：您可以選擇延遲時間（關閉/3 秒/5 秒/10 秒）。手機會在指定時間後進行拍照。
- ▶ **檢視選項**：您可設定檢視模式。（完整圖像/全螢幕）
- ▶ **儲存至**：您可為圖片設定儲存選項。（手機/外置記憶體）
- ▶ **連環拍照**：可讓您連續拍攝多張相片。
- ▶ **效果**：4 種設定可用。（關閉/深褐色/黑白/底片）

- ▶ **白平衡**：可讓您根據環境變更設定。（自動/日光/白熱光/陰天/日光燈/夜間模式）
- ▶ **快門提示音**：您可設定拍照時的聲音。
- ▶ **重設設定**：可讓您重設設定。

備注

- ▶ 您可使用左右導航鍵來調節亮度。
- ▶ 縮放功能視相機設定的解像度而定。例如，如果相機的解像度設定為1280x1024或1600x1200，則無法進行縮放。

- 3 拍攝的相片會自動儲存在我的檔案的圖像資料夾中。拍照後，按左軟鍵 [選項]，您可選擇子功能表。

- ▶ **新增相片**：您可拍攝新相片。
- ▶ **設為**：您可將拍攝的相片設為牆紙/來電圖片。

- ▶ **發送方式**：您可透過多媒體訊息/藍芽發送相片。
- ▶ **媒體匣**：您可存取我的檔案的圖像資料夾。

視像攝錄機 功能表 4.3

您可錄製並儲存視像短片。

- 1 開始錄製前，按下「確認」鍵。錄像一開始，計時器即會顯示。

錄製視像短片前，按左軟鍵 [選項]，您可設定以下選項：

- ▶ **視像模式**：可讓您透過標準或多媒體訊息發送影片檔案。
- ▶ **解像度**：可讓您設定影片大小。(176x144/320x240)
- ▶ **質量**：可讓您設定圖像質量：正常、細緻和特細緻。
- ▶ **儲存至**：您可為視像短片設定儲存選項。(手機/外置記憶體)
- ▶ **效果**：4 種設定可用。(關閉/深褐色/黑白/底片)

- ▶ **白平衡**：可讓您根據環境變更設定。(自動/日光/白熱光/陰天/日光燈)
- ▶ **重設設定**：可讓您重設設定。

- 2 按左軟鍵 [停止]/確認鍵/相機鍵結束錄製。
- 3 您錄製的視像短片會自動儲存至我的檔案的影片資料夾中。錄製影片後，按左軟鍵 [選項]，您可選擇子功能表。

- ▶ **新增影片**：您可錄製新影片。
- ▶ **播放**：您可播放錄製的視像短片。
- ▶ **發送方式**：您可透過多媒體訊息/藍芽發送相片。
- ▶ **媒體匣**：您可存取我的檔案的影片資料夾。

FM 收音機 功能表 4.4

- 1 將耳機連接到手機。
- 2 預設電台頻道後，您可按相應的數字鍵 (快按)，收聽其他頻道。

多媒體

- 3 您可以透過按左軟鍵 [選項] 存取以下選項功能表。
 - ▶ **編輯頻道**：您可以在所選的頻道調較頻率及更改收音機電台。您可使用左/右導航鍵和數字鍵更改頻率。
 - ▶ **自動選取頻道**：如果將「立即自動掃描？」回答「是」，系統會自動設定收音機頻道。且當「儲存此電台？」的訊息彈出時，如果選擇「是」，所選頻道將被儲存。
 - ▶ **重設頻道**：您可重設
 - ▶ **聆聽通過**：選擇此項可透過 [選項] 中的揚聲器/有線耳機/藍芽收聽收音機。
- 2 如果要完成錄製，請按右軟鍵 [停止]。錄製好的檔案會自動儲存至我的檔案的聲音資料夾中。
- 3 如果按左軟鍵 [選項]，您可選擇以下子功能表：
 - ▶ **新增語音錄製**：您可開始新語音錄製。
 - ▶ **播放**：您可播放錄製的語音備忘錄。
 - ▶ **發送方式**：您可透過多媒體訊息/藍芽發送。
 - ▶ **媒體匣**：您可存取我的檔案的聲音資料夾。

語音備忘錄 功能表 4.5

您可錄製語音備忘錄。

- 1 按「確認」鍵開始錄製。開始錄製後，系統會顯示訊息「REC」及錄製時間，開始對著咪高風說話。

訊息

新訊息

功能表 5.1

本功能表中包含與 SMS（文字訊息）、MMS（多媒體訊息）及服務訊息等相關功能。

選項

► **發送給**：發送文字訊息。

- 1 輸入收件人號碼。
- 2 按向下導航鍵，新增多個收件人。
- 3 您可新增通訊錄中的電話號碼。
- 4 輸入號碼後，按左軟鍵 [選項]，然後選擇發送。訊息將自動儲存在已發送資料夾中。如果該訊息尚未發送，則仍位於寄件匣中，且顯示發送失敗狀態。

附加

- **圖像**：您可插入可用於短訊息的圖像。
- **聲音**：您可插入可用於短訊息的聲音。

- **影片**：您可插入可用於短訊息的影片。
- **符號**：您可新增特殊字元。
- **文字範本**：您可使用已於手機中設定的文字範本。
- **表情符號**：您可插入表情符號。
- **名稱及號碼**：您可在訊息中新增通訊錄的電話號碼。
- **新增投影片**：您可插入投影片。
- **標題**：您可加標題。
- **更多**：您可插入通訊錄、我的名片、日程表、備忘錄。
- **儲存至草稿**：將訊息儲存於草稿中。
- **T9設定**：選擇開啟/關閉即可啟動/關閉 T9 輸入模式。(視乎編寫語言)
- **編寫語言**：為輸入模式選擇語言。
- **新增 T9 文字**：選擇新增 T9 文字，往字典中輸入新文字。(視乎編寫語言)

訊息

- ▶ **清除文字**：可在編寫文字訊息時清除文字。
- ▶ **退出**：如果在編寫訊息時選擇退出，您可結束編寫訊息並返回至「訊息」功能表。您編寫好的訊息將不會儲存。

備注

如您在編寫多媒體信息時選取圖片 (200K)，載入時將至少耗時 3 秒。此外，在載入期間，您不可按下任何鍵。之後便可以開始編寫多媒體信息。

收件匣

功能表 5.2

收到訊息後，系統將提示您。收到的訊息將儲存在「收件匣」中。

如果手機顯示「智能咭無空間接收訊息」，您必須且只能從「收件匣」中刪除部份智能咭訊息。

智能咭訊息

智能咭訊息表示特別儲存在智能咭中的訊息。

對於多媒體訊息，您必須等候訊息的下載和處理。

要讀取訊息，只需按下左軟鍵 [選項] 選擇其中一個訊息。

可使用以下選項。

- ▶ **檢視**：您可檢視已接收到的訊息。
- ▶ **刪除**：您可刪除目前的訊息。
- ▶ **轉寄**：您可將選取訊息轉寄給他人。
- ▶ **回覆通話**：您可回覆電話給寄件人。
- ▶ **儲存號碼**：您可將寄件人的電話號碼儲存在通訊錄中。
- ▶ **資訊**：您可檢視有關收到訊息的資訊。
- ▶ **多項刪除**：在選取想移除的訊息後，按完成即可刪除所選訊息。
- ▶ **刪除全部已閱讀訊息**：可刪除所有已讀訊息。
- ▶ **刪除全部**：您可刪除所有訊息。

電郵信箱

功能表 5.3

存取此功能表，您可以連接至遠端郵箱以擷取您的新電郵訊息，也可以直接檢視之前擷取的電郵訊息而無須登入電郵伺服器。

草稿

功能表 5.4

使用此功能表，您可以預設最常使用的多媒體訊息。此功能表會顯示預設的多媒體訊息列表。

可使用以下選項。

- ▶ **檢視**：您可以查看多媒體訊息。
- ▶ **修改**：修改選定訊息。
- ▶ **刪除**：刪除選定訊息。
- ▶ **資訊**：您可檢視選取訊息的相關資訊。
- ▶ **多項刪除**：選定要刪除的訊息後，按完成即可刪除選定訊息。
- ▶ **刪除全部**：刪除資料夾中的全部信息。

寄件匣

功能表 5.5

您可檢視此功能表中重發/等候發送/發送失敗的列表和內容，亦可驗證傳輸是否成功。

成功發送訊息後，訊息會移到已發送資料夾中。

可使用以下選項。

- ▶ **檢視**：您可檢視信息。
- ▶ **刪除**：您可刪除訊息。
- ▶ **重發**：您可以重發選定訊息。
- ▶ **修改**：可修改選定訊息
- ▶ **資訊**：可檢查各訊息的相關資訊。
- ▶ **多項刪除**：選擇並刪除選定訊息。
- ▶ **刪除全部**：您可刪除資料夾中的所有訊息。

已發送

功能表 5.6

此功能表可檢視已發送的訊息。您可以查看訊息的時間與內容。

訊息

收聽留言訊息 功能表 5.7

該功能表可讓您快速存取留言信箱（若網絡提供此服務）。使用此功能前，您必須輸入網絡服務商提供的語音伺服器號碼。選定此功能表後，只需要按下發送鍵即可收聽留言訊息。您可在備用模式下按 1 鍵收聽留言。

備注

收到留言時手機會顯示圖標，而且您會聽到提示音。請向您的網絡商洽詢服務內容的詳細資料，並據此正確設定手機。

資訊廣播 功能表 5.8 (取決於網絡和訂閱)

資訊服務訊息為網絡發送給 GSM 的文字訊息。這些訊息提供一般資訊，如天氣報告、交通消息及股市行情。

每種資訊廣播都有一個號碼。因此，只要您輸入特定號碼即可聯絡服務供應商取得相關資訊。當您接收到資訊服務訊息時，您可以看到快顯訊息顯示您已收到一個訊息或直接顯示該資訊服務訊息。

要再次或不在備份模式下檢視訊息，請依從以下顯示的次序；

讀取 (功能表 5.8.1)

- 1 收到資訊服務訊息時，選擇讀取可檢視訊息，該訊息將會顯示於屏幕之上。按左或右導航鍵，您可讀取另一則訊息。
- 2 選擇另一則訊息才會停止顯示。

主題 (功能表 5.8.2)

(取決於網絡和訂閱)

您可檢視新增的資訊服務訊息號碼。按左軟鍵 [選項] 後，您可修改和刪除新增的資訊訊息類別。

您可以在啟動列表選擇資訊服務訊息號碼。如果啟動了某個資訊服務訊息號碼，您便可收到由該號碼發送的訊息。

常用範本

功能表 5.9

文字範本 (功能表 5.8.1)

您具有以下 6 種文字範本；

- 請回覆電話.
- 我遲到了，我會立刻到達。
- 您在哪裏？
- 我在路途中.
- 緊急！請聯絡我
- 我愛你！

可使用以下選項。

- ▶ **檢視**：您可查看選定的常用範本。
- ▶ **修改**：使用此功能可編寫新訊息或修改文字範本列表中的選定範本訊息。
- ▶ **發送方式**
 - **訊息**：使用此功能可以文字訊息方式發送所選範本訊息。
- ▶ **刪除**：刪除範本。
- ▶ **新增範本**：使用此選項建立新範本。
- ▶ **刪除全部**：可讓您刪除所有範本訊息。

多媒體訊息範本

(功能表 5.9.2)

您可儲存新多媒體範本。

儲存新範本後，您可使用以下選項。

- ▶ **檢視**：您可以查看多媒體範本。
- ▶ **修改**：使用此功能可修改多媒體範本列表中的選定多媒體範本。

訊息

- ▶ **發送**：使用此功能，以多媒體訊息方式發送多媒體範本訊息。
- ▶ **刪除**：刪除多媒體範本。
- ▶ **新增範本**：使用此選項建立新範本。
- ▶ **刪除全部**：可讓您刪除所有多媒體訊息。

設定

功能表 5.0

文字訊息（功能表 5.0.1）

- ▶ **訊息類型**：文字、語音、傳真、傳呼、X.400、電郵、ERMES 通常，訊息類型會設為「文字」。您可將文字轉換為備用格式。請聯絡服務網絡商，看其是否提供這項功能。
- ▶ **有效期**：此網絡服務可設定訊息在訊息中心儲存多久。
- ▶ **發送報告**：如果設定為「開啟」，您可檢查訊息是否發送成功。

- ▶ **回覆計費**：訊息發送後，系統允許收件人回覆並將回覆成本納入您的電話帳單中。
- ▶ **訊息中心號碼**：您應輸入訊息中心號碼。通常情況下，從智能咭讀取訊息中心號碼。

多媒體訊息（功能表 5.0.2）

- ▶ **投影片播放時間**：寫入訊息時，顯示每頁的播放時間。
- ▶ **發送時間**：在指定時間發送訊息。
- ▶ **重要性**：可以設定所選訊息的重要性。
- ▶ **有效期**：此網絡服務可設定訊息在訊息中心儲存多久。
- ▶ **發送報告**：您可在這些功能表中將其設為開啟/關閉。
 - **要求報告**：查看訊息是否成功發送給收件人的要求報告。
 - **允許報告**：當寄件人要求發送報告時，您可決定是否發送報告。

- ▶ **讀取報告：**您可在這些功能表中將其設為開啟/關閉。
 - **要求報告：**查看您的訊息是否成功發送給收件人的要求報告
 - **允許報告：**當寄件人要求讀取報告時，您可決定是否發送報告。
- ▶ **自動下載：**在此功能表中選定「自動」後，您可自動從本地網絡/漫遊網絡接收多媒體訊息。但當您選擇「手動」後，您只能接收到收件匣中的通知訊息，然後透過「通知」選項功能表，決定是否接收多媒體訊息。
- ▶ **網絡設定：**如果選擇多媒體訊息伺服器，可以設定多媒體訊息伺服器的 URL。
- ▶ **允許訊息類型**
 - **個人：**個人訊息。
 - **廣告：**商業訊息。
 - **資訊：**必要資訊。

電郵 (功能表 5.0.3)

您可以設定接收和傳輸電子郵件的設定。

電郵帳戶 (功能表 5.0.3.1)

可建立或設定包含電子郵件伺服器和使用 ID 的電子郵件帳戶。

存取點 (功能表 5.0.3.2)

此功能表可顯示存取點列表。透過「新增」功能表，您可新增存取點。但是，視乎國家的不同，您可能無法刪除或編輯預設設定。

擷取間隔 (功能表 5.0.3.3)

可設定從內送郵件伺服器自動擷取電子郵件的擷取間隔。請注意，使用擷取間隔功能可能要另行收費。

名片 (功能表 5.0.3.4)

可設定加插到電子郵件結尾處的文字簽名。設定好的簽名文字會在電子郵件發送時自動或手動加插到結尾處。

訊息

留言信箱號碼 (功能表 5.0.4)

如果您的服務網絡商支援此功能，您即可接收留言訊息。收到新留言時，相應符號會在屏幕上顯示。請與您的服務網絡商聯絡，取得服務的詳細資料并據此正確設定手機。

服務信息 (功能表 5.0.5)

您可以設定選項，選擇是否接收訊息。

資訊廣播 (功能表 5.0.6)

► 接收

- **開啟**：選擇此功能表後，手機會收到資訊服務訊息。
- **關閉**：選擇此功能表後，手機將不會接收資訊服務訊息。

► 提示

- **開啟**：收到資訊服務訊息號碼後，手機會發出提示。
- **關閉**：即使收到資訊服務訊息，您的手機也不會發出提示。

► 語言

透過按「選擇」鍵，即可選擇所需的語言。然後，資訊服務訊息將以您選定的語言顯示。

我的檔案

圖像

功能表 6.1

「圖像」資料夾由用於透過互聯網下載圖片的內建連結和預設圖像組成。使用導覽鍵選擇圖像。

選定一個檔案後，透過按左軟鍵 [選項] 可顯示以下選項。(不適用於預設圖像)。

- ▶ **檢視**：您可查看選定的檔案。
- ▶ **刪除**：刪除選定檔案。
- ▶ **設為**
 - **牆紙**：將目前選定的圖像設為牆紙。
 - **來電圖片**：將目前選定的圖像設為圖片來電顯示。
- ▶ **發送方式**：透過多媒體訊息、藍芽將選定的檔案發送到其他裝置。
- ▶ **檔案**
 - **編輯圖片**：您可以編輯選定的圖像。
 - **重新命名**：更改選定檔案的檔案名稱。您不能更改檔案的副檔名。

- **移動至資料夾**：將選定檔案移動至資料夾。
- **移至外置記憶體 / 移動至手機記憶體**：將所選檔案移至手機中的外置記憶體（若插入）或手機中。
- **複製至外置記憶體/ 複製至手機記憶體**：將所選檔案複製至手機中的外置記憶體或手機中。
- **資訊**：顯示檔案資料。
- ▶ **透過藍芽列印**：多數以相機模式拍攝都可以透過藍芽傳輸至打印機。
- ▶ **投影片播放**：您可以投影片方式檢視已儲存的檔案。
- ▶ **新增資料夾**：您可建立新資料夾。
- ▶ **多項刪除**：您可刪除選定的多個檔案。
- ▶ **刪除全部**：刪除列表中的所有檔案。
- ▶ **排序方式**：您可按日期、類型和姓名安排檔案。
- ▶ **縮圖檢視/列表檢視**：可讓您設定檢視類型。

我的檔案

聲音

功能表 6.2

選定一個檔案後，透過按左軟鍵 [選項]，可顯示以下選項。(不適用於預設圖像)

- ▶ **播放**：您可播放選定的檔案。
- ▶ **刪除**：刪除選定的檔案。
- ▶ **設為**：目前選定的聲音可設為鈴聲/ 個人來電鈴聲/ 訊息提示音。
- ▶ **發送方式**：透過多媒體訊息、藍芽將選定檔案發送到其他裝置。
- ▶ **檔案**
 - **重新命名**：更改選定檔案的檔案名稱。
 - **移動至資料夾**：將選定的檔案移動至資料夾。
 - **移動至外置記憶體 / 移動至手機記憶體**：將所選檔案移至手機中的外置記憶體（若插入）或手機中。

- **複製至外置記憶體 / 複製至手機記憶體**：將所選檔案複製至手機中的外置記憶體（若插入）或手機記憶體。

- **資訊**：顯示選定檔案資料。

- ▶ **新增資料夾**：您可建立新資料夾。
- ▶ **多項刪除**：您可移除選定的多個檔案。
- ▶ **刪除全部**：刪除列表中的所有檔案。
- ▶ **排序方式**：您可按日期、類型和姓名安排檔案。

影片

功能表 6.3

您可在我的檔案的影片中顯示中顯示 3GP、3G2 檔案列表。僅支援以 MPEG4 和 h.263 視頻編碼及 AMR 音頻編碼進行編碼的 .3pg 檔案。

您可在此管理或發送已儲存的視像短片。選定一個檔案後，透過按左軟鍵 [選項]，可顯示以下選項。

- ▶ **開啟**：您可開啟選定的檔案。
- ▶ **刪除**：刪除選定的檔案。
- ▶ **發送方式**：透過多媒體訊息、藍芽將選定檔案發送到其他裝置。
- ▶ **檔案**
 - **重新命名**：變更選定檔案的檔案名稱。字元長度上限為 59。

警告！

您無法使用以下字元：\ / : * ? < > |

- **移動至資料夾**：將選定的檔案移動至資料夾。
- **移動至外置記憶體 / 移動至手機記憶體**：將所選檔案移至手機中的外置記憶體（若插入）或手機中。
- **複製至外置記憶體 / 複製至手機記憶體**：將所選檔案複製至手機中的外置記憶體（若插入）或手機中。
- **資訊**：顯示檔案資料。

- ▶ **新增資料夾**：您可建立新資料夾。
- ▶ **多項刪除**：您可移除選定的多個檔案。
- ▶ **刪除全部**：刪除列表中的所有檔案。
- ▶ **排序方式**：您可按日期、類型和姓名安排檔案。

文件

功能表 6.4

從文件功能表，您可檢視所有文件檔案。

其他

功能表 6.5

除圖像、聲音和影片外的其他檔案儲存在此資料夾中。

情景模式

在情景模式中，您可以調整和自訂不同鈴聲、提示音和音量。存在五種預設的情景模式：標準、靜音、震動、戶外和耳機。不是每種情景模式都可以更改或啟動。按確定鍵 [功能表]，然後使用上/下導航鍵選取情景模式。

啟動 (功能表 7.X.1)

- 1 顯示情景模式列表。
- 2 在情景模式列表中，選擇想要啟動的情景模式，然後按左軟鍵 [確定] 或「確認」鍵。
- 3 然後，選擇啟動。

更改 (功能表 7.X.2)

在情景模式列表中，選擇所需的情景模式。按左軟鍵或「確認」鍵後，選擇更改。

情景模式設定選項將會開啟。視需要設定選項。

- ▶ **來電提示類型**：設定來電的提示類型。

- ▶ **鈴聲**：從列表中選取所需的鈴聲。
- ▶ **鈴聲音量**：設定鈴聲音量。
- ▶ **訊息提示類型**：設定訊息提示類型。
- ▶ **訊息提示音**：選擇訊息提示音。
- ▶ **訊息音量**：設定訊息提示音的音量。
- ▶ **按鍵音效**：選擇所需的按鍵音效。
- ▶ **按鍵音量**：設定按鍵音的音量。
- ▶ **揭蓋音效**：可根據不同環境設定揭蓋提示音。
- ▶ **確認音音量**：設定確認音的音量。
- ▶ **開機/關機音量**：設定開/關機時的響鈴音量。

通訊錄

搜尋

功能表 8.1

- 1 選擇搜尋並輸入要搜尋的名稱。

備注

- ▶ 您可透過在備用模式下按右軟鍵 [通訊錄] 直接存取「通訊錄」。
- ▶ 輸入搜尋姓名的前幾個字母即可進行即時搜尋。

- 2 找到所需的聯絡人後，您可以透過按發送鍵給此聯絡人撥打電話。
- 3 如果您要修改、刪除和複製某個記錄，請選擇左軟鍵 [選項]。

將顯示以下功能表。

- ▶ **檢視**：您可檢視每個記錄的詳細資料。
- ▶ **修改**：您可修改選定的聯絡人。

- ▶ **新訊息**：找到所需號碼後，您即可向選定號碼發送訊息。
- ▶ **發送方式**：您可透過訊息或藍芽發送通訊錄資料。
- ▶ **刪除**：您可刪除記錄。
- ▶ **新增通訊錄**：選定要儲存的位置（智能咭/手機）後，您可新增到通訊錄。
- ▶ **新增到快速撥號**：可讓您設定選定的號碼以新增快速撥號列表。
- ▶ **多項刪除**：可讓您移除多個選定檔案。
- ▶ **複製至智能咭 / 複製至手機**：您可在手機和智能咭之間複製記錄。
- ▶ **主要號碼**：如果某個聯絡人儲存有多個號碼，則選擇您常用的那個號碼。此主要號碼將首先顯示。(只限存於手機的通訊錄)

通訊錄

新增通訊錄

功能表 8.2

您可新增或儲存新通訊錄。您可為新通訊錄輸入名稱、不同電話號碼和電郵地址。您亦可將通訊錄指定給群組，包括圖片，指定特定鈴聲和為通訊錄輸入週年紀念日。您可根據記憶體使用狀況，輸入和管理通訊錄地址。

備注

- ▶ 當您新增或儲存某個聯絡人至智能咭的智能咭地址中時，此通訊錄項目欄位會有所不同。
- ▶ 可儲存的名稱與號碼長度上限取決於智能咭類型。

快速撥號

功能表 8.3

您可使用此功能表來管理快速撥號。

您可為姓名列表記錄指定 2 至 9 的任何一鍵。之後透過按此鍵直接撥打電話。

- 1 透過在備用模式下按右軟鍵 [通訊錄]，您可首先開啟通訊錄。
- 2 選擇至快速撥號，然後按左軟鍵 [確定]。
- 3 如果您要新增快速撥號，可透過按左軟鍵 [配置] 來選擇 <空白>。然後，您可搜尋通訊錄中的名稱。
- 4 指定某個號碼為快速撥號後，您可修改和刪除記錄。您也可使用此號碼來撥打電話或發送訊息。

群組

功能表 8.4

您可在每個群組中列出最多成員。在手機記憶體中，存在 7 種預設群組：家庭、朋友、同事、貴賓、群組 1、群組 2 和群組 3。

透過按左軟鍵 [選項] 選擇要管理的群組名稱。將顯示以下子功能表。

- ▶ **檢視成員**：顯示已選取的群組成員。

- ▶ **群組鈴聲**：可為群組成員電話指定鈴聲。
- ▶ **群組圖示**：可讓您選擇與群組相關的圖示。
- ▶ **新增成員**：您可新增群組成員。
- ▶ **刪除成員**：您可從群組成員列表中刪除成員。但該成員的名稱和號碼仍保留在通訊錄中。
- ▶ **重新命名**：您可變更群組名稱。
- ▶ **重設全部**：可讓您重設所有聯絡人。

複製全部

功能表 8.5

您可以將智能咭的通訊錄複製至手機記憶體，相反亦然。

- ▶ **智能咭至手機**：可以將智能咭的項目複製至電話記憶體中。
- ▶ **手機至智能咭**：可以將電話記憶體中的項目複製至智能咭中。

刪除全部

功能表 8.6

您可刪除智能咭或手機記憶體中的所有通訊錄。此功能需要使用安全密碼。

設定

功能表 8.7

檢視選項（功能表 8.7.1）

您可設定通訊錄顯示選項。

- ▶ **只顯示名稱**：設定通訊錄資訊只顯示名稱。
- ▶ **名稱及號碼**：設定通訊錄資訊同時顯示名稱和號碼。
- ▶ **附有圖片**：設定通訊錄資訊帶有圖片。

通訊錄備份（功能表 8.7.2）

（不同外置記憶體有不同情況）

您可將通訊錄數據儲存在外置記憶體的其他資料夾中。

通訊錄

恢復通訊錄（功能表 8.7.3）

（不同外置記憶體有不同情況）

您可將我的檔案 -> 外置記憶體
-> 其他中的 Vcard 格式 (*.vcf) 儲存至通訊錄中。

資訊

功能表 8.8

服務撥號號碼（功能表 8.8.1）

您可檢視由服務網絡商指定的「服務撥號號碼」（SDN）列表（如果受智能咭支援）。

本手機號碼（功能表 8.8.2）

（不同智能咭有不同情況）

您可儲存和檢查智能咭中的本手機號碼。

我的名片（功能表 8.8.3）

此選項可讓您建立自己的名片，其中包含名稱、任何號碼和電郵等相關資訊。要建立新名片，請按左軟鍵 [新增] 並在欄位中輸入相關資訊。如果要修改、刪除或發送名片，請選擇左軟鍵 [選項]。

工具

鬧鐘

功能表 9.1

您可設定鬧鐘在指定時間響鈴。

- 1 如果沒有設定鬧鐘，請按左軟鍵 [新增] 新增鬧鐘。
- 2 您可透過使用指定鬧鐘是否開啟這一選項或透過選擇鬧鐘時間來設定或取消鬧鐘。
- 3 選擇鬧鐘重複時段：一次、每天、星期一~星期五、星期一~星期六、星期六至星期日。
- 4 選擇鬧鐘鈴聲。使用選項 - 聲音，按上/下導航鍵，選擇所需的聲音，然後按左軟鍵 [確定]。
- 5 修改標題並按左軟鍵 [儲存]。

計算機

功能表 9.2

計算機可讓您執行如加減乘除此類基本的計算功能以及部分科學功能。

- 1 您可使用數字鍵輸入數字，然後使用導航鍵輸入符號。

備注

- ▶ 要刪除任何錯誤或清除顯示內容，請使用 c 鍵。
- ▶ 要包含小數點，請按 * 鍵。
- ▶ 要包括括號，請按 # 鍵。

- 2 按「確認」鍵即可計算結果。
- 3 完成計算後，按右軟鍵返回到原始狀態。

工具

秒錶

功能表 9.3

此功能表可讓您記錄某個事件已進行的時間。

- 1 按左軟鍵 [開始] 開始計時，按右軟鍵 [以圈計] 錄製圈速。
- 2 按左軟鍵 [停止] 確定圈速記錄。
- 3 按右軟鍵 [重設] 至預設條件。

單位轉換器

功能表 9.4

此功能可將任何測量數據轉換至所需的單位。存在 7 種可轉換至單位的類型：貨幣、面積、長度、重量、溫度、體積和速度。

世界時間

功能表 9.5

世界時間功能提供全球主要城市的時間資訊。

按左軟鍵 [選項] 即可選擇以下選項：

- ▶ **更改時間區域**：透過選擇城市即可更改時區。
- ▶ **新增城市**：您可新增所需的城市。
- ▶ **夏令時間**：您可套用於夏令時間。

智能咭服務 (視乎網絡服務)

功能表 9.6

使用智能咭服務功能表，您的手機將不會過時，且將支援服務網絡商提供的其他服務。更多資訊，請聯絡您的服務網絡商。

瀏覽器

您可以存取各種 WAP（無線應用協定）服務，例如銀行業務、新聞、天氣報導與飛航班次等資訊。這些服務是專為流動電話設計的，並由 WAP 服務供應商維護。

請向提供服務的網絡商或服務供應商查詢您可以使用的 WAP 服務、價格與收費表。服務供應商也會提供如何使用服務的說明。

連線後即會顯示主頁。主頁內容因服務供應商而異。任何時候要結束瀏覽器，請按 c 鍵。手機將返回備用功能表。

使用 WAP 瀏覽器瀏覽

使用手機按鍵或 WAP 瀏覽器功能表即可上網。

使用手機按鍵

上網時，手機按鍵的功能和手機模式時不同。

圖示	說明
	選擇各行內容區域
	回到上一頁
	選擇選項，確認操作

使用 WAP 瀏覽器功能表

流動上網時可以使用各種功能表選項。

備注

WAP 瀏覽器功能表將視瀏覽器版本而異。

瀏覽器

主頁

功能表 *.1

連接至主頁。主頁將為於啟動網絡設定中定義的站點。如果您尚未在啟動網絡設定中定義，則它將由服務供應商定義。

書籤

功能表 *.2

此功能表可讓您儲存最愛網頁的 URL，以便稍後輕鬆存取。

建立書籤

- 1 按下左軟鍵 [選項]。
- 2 選擇新增書籤並按「選擇」鍵。
- 3 輸入所需的名稱和網址後，按「確定」鍵。

選定所需的書籤後，便可以使用下列選項。(不適用於預設書籤)

- ▶ **連接**：連接到選定書籤。
- ▶ **檢視**：您可查看選定書籤。
- ▶ **修改**：您可修改選定書籤。
- ▶ **刪除**：您可刪除選定書籤。
- ▶ **新增書籤**：選此建立新書籤。

- ▶ **新增資料夾**：選此建立新資料夾。
- ▶ **移動**：您可將選定書籤移至子資料夾。
- ▶ **複製**：您可複製選定書籤。
- ▶ **網址發送方式**：透過訊息發送。
- ▶ **多項刪除**：可讓您選定和刪除已儲存的書籤。
- ▶ **刪除全部**：刪除所有書籤。

輸入網址

功能表 *.3

您可直接連接至所需的站點。輸入特定 URL 後，按左軟鍵 [選項] 並選擇連接。

記錄

功能表 *.4

此功能表顯示最近瀏覽過的頁面。

已儲存網頁

功能表 *.5

本手機可將屏幕上的網頁儲存為離線檔案。

設定

功能表 *.6

您可設定與互聯網服務相關的網絡設定和安全性。

網絡設定 (功能表 *.6.1)

設定檔是用於連接至互聯網的網絡資訊。

一些網絡商在電話記憶體內已儲存預設的設定檔。無法對預設情景模式進行重新命名。

每個情景模式的功能表如下：

- ▶ **啟動**：啟動所選網絡設定。
- ▶ **檢視**：您可看到所選的網絡設定。
- ▶ **新增網絡設定**：您可以新增網絡設定。

屏幕設定模式

(功能表 *.6.2)

如果頁面超過手機屏幕，您可調整網頁的大小。

暫存記憶 (功能表 *.6.3)

您已存取的資訊或服務會儲存在手機的快取記憶體中。

備注

暫存記憶是一種緩衝記憶體，可用來暫時儲存資料。

Cookies (功能表 *.6.4)

啟動 Cookies 讓您可以儲存伺服器發送的 Cookies。停用此功能會防止 Cookies 儲存到您的手機中。

瀏覽器

安全認證（功能表 *.6.5）

您可以查看手機儲存的個人認證。

顯示圖像（功能表 *.6.6）

您可選擇是否在 WAP 瀏覽期間顯示圖像。

Java指令（功能表 *.6.7）

選擇開啟或關閉 Java 指令。

記憶體用於（功能表 *.7.8）

可選擇手機或外置記憶體。

資訊 功能表 *.7

可以檢視 WAP 瀏覽器版本的資訊。

連接

藍芽

功能表 0.1

藍芽功能讓附近相容的流動裝置、週邊設備與電腦無須接上線路，即可通訊。

本手機支援內建的藍芽連線功能，可連線至相容的藍芽耳機、電腦應用程式等等。

備注

- ▶ 如果使用 LG 的經藍芽與電腦同步功能，您只可以交換通訊錄內的數據。
- ▶ 當您從另一部藍芽裝置接收數據時，手機會要求確認。確認轉送後，檔案會複製到手機。
- ▶ 根據檔案類型，檔案會儲存在以下的資料夾：
 - 影片 (.3gp, mp4)：影片資料夾
 - 圖像 (.bmp, gif, jpg, png)：圖像資料夾
 - 聲音 (.amr, wav, aac)：聲音資料夾
 - MP3 (.mp3)：聲音/MP3 資料夾
 - 其他檔案 (.txt, html)：其他資料夾

▶ 藍芽開啟/關閉

您可以啟動或取消藍芽功能。

連接

► 裝置列表

您可以檢視所有已與 KF305 配對的裝置。進入配對的裝置後，您可以存取以下選項

- **連接 / 中斷連接：**與手機或立體聲耳機配對後，您應該連接到這些裝置。然後，您即可使用這些裝置。
- **新增：**可讓您搜尋新藍芽裝置，並將其新增至手機的已配對裝置列表中。選擇「新增」時，手機會開始搜尋範圍之內的藍芽裝置。當所需配對裝置出現在列表中時，請按右軟鍵 [停止]。選擇至所需裝置，按左軟鍵 [配對]。然後您需要輸入通行碼。

通行碼可以是您想使用的任何密碼（兩個裝置必須使用相同的通行碼）或是所需配對裝置的製造商所預定的通行碼。請查看所需配對裝置的用戶手冊，看看是否有預定的通行碼。

- **設定授權/設為未經授權：**可讓您在各藍芽裝置之間設定未經授權連接。例如，如果經常使用手機藍芽耳機，那麼將連接設定為未經授權即是指手機每次開機時，耳機都會自動連接至手機。
- **全部服務：**可讓您檢視受藍芽裝置支援的所有服務。
- **刪除：**讓您刪除某個已配對的藍芽裝置。
- **重新命名：**讓您變更配對藍芽裝置的名稱，以及在手機上的顯示方式。
- **刪除全部：**可讓您刪除所有已配對的藍芽裝置。

► 設定

- **顯示我的手機**：表示您的手機是否會顯示到其他藍芽裝置中。
- **我的手機名稱**：您可設定藍芽裝置的名稱。預設名稱為 LG KF305。
- **我的藍芽位址**：您可檢視您的藍芽裝置的位址。
- **主記憶體**：可選擇手機或記憶咭。

網絡

功能表 0.2

您可選擇自動或手動註冊的網絡。

網絡選擇（功能表 0.2.1）

通常，網絡選擇設為「自動」。

- **自動**：選擇自動模式後，手機將自動進行搜索，並為您選擇網絡。選擇自動後，手機將設為自動，即使是手機關閉後再開啟。

- **手動**：手機將為您尋找可用網絡列表，並向您顯示。然後，您可在與本地網絡的網絡商具有漫遊協議的網絡中選擇要使用的網絡。若手機無法存取選定的網絡，則它會讓您選擇其他網絡。

- **首選網絡**：您可設定首選網絡列表，這樣，手機會首先嘗試註冊第一個網絡，若不行，才嘗試註冊其他任何網絡。此列表是根據手機已知網絡的預定義列表進行設定的。

GPRS 連接（功能表 0.2.2）

您可以根據各種不同狀況設定 GPRS 服務。

► 開機

若選擇了此功能表，在開機的情況息，手機會自動註冊 GPRS 網絡。您可啟用建立手機和網絡及數據傳輸之間連接的 WAP 或 PC 撥號應用程式。結束應用程式後，GPRS 連接亦會終止，但 GPRS 網絡註冊仍會保留。

連接

▶ 需要時

如果選擇此功能表，手機會在連接到 WAP 或應用程式服務時才建立 GPRS 連接，並在結束 WAP 或應用程式連接時中斷。

存取點（功能表 0.2.3）

- ▶ **檢視：**您可看到所選的網絡設定。
- ▶ **修改：**您可修改所選的網絡設定。（不可用於預設存取點）
- ▶ **新增存取點**
 - **名稱：**您可輸入網絡名稱。
 - **連接方式：**您可設定連接方式數據服務。數據/GPRS。

<數據設定>

只會在您將數據設定選為連接方式/服務時顯示。

- **撥打號碼：**輸入APN以存取您的互聯網網閘。
- **用戶名稱：**撥號伺服器（而不是互聯網網閘）的使用者身份。

- **密碼：**撥號伺服器（而不是互聯網網閘）用以識別您身份所要求輸入的密碼。
- **通話類型：**選擇數據電話的類型：類比或數字 (ISDN)。
- **持續時間：**您需要輸入逾時時間。

輸入後，若您沒有輸入或傳輸任何數據，WAP 瀏覽服務將無法使用。

- **主伺服器：**輸入您要存取的主 DNS 伺服器 IP 位址。
- **次伺服器：**輸入您要存取的次 DNS 伺服器 IP 位址。

此服務設定只會在 GPRS 選為連接方式服務時可用。

- **APN：**輸入 GPRS 的 APN。
- **用戶名稱：**APN 伺服器的用戶身份。
- **密碼：**APN 伺服器所要求輸入的密碼。
- **主伺服器：**輸入您要存取的主 DNS 伺服器 IP 位址。
- **次伺服器：**輸入您要存取的次 DNS 伺服器 IP 位址。

USB 連線模式 功能表 0.3

您可選擇「大容量儲存」及「PC Suite」模式之一。

► 大容量儲存

您可以使用連接線以三種方式，將您的手機作為 USB 大量儲存裝置連接到電腦。

- 1 顯示備用畫面時，將手機連接到電腦。
- 2 在手機執行操作或功能表功能時連接手機，然後移動至備用屏幕。
- 3 在手機執行操作或功能表功能時連接手機，然後選擇 大容量儲存功能表。

使用 microSD 記憶體後，請按「退出」並採取以下步驟。

注意！

拔除連接線前，您必需先按「退出」。否則，不保證已傳輸數據的完整性。

- 1 在通知區域按一下。[安全地移除硬體]
- 2 選擇USB 大量儲存裝置，然後按停止。以下訊息顯示：USB 大量儲存裝置現在可安全從系統中移除。
- 3 然後拔出USB 線。

► 數據服務

選擇數據服務功能表以使用 LG Mobile Sync 程式。

設定

日期和時間

功能表 #.1

您可設定與日期和時間相關的功能。

設定日期 (功能表 #.1.1)

您可輸入目前日期。

日期格式 (功能表 #.1.2)

您可設定日期格式，如年 / 月 / 日、日 / 月 / 年、月 / 日 / 年。

設定時間 (功能表 #.1.3)

您可輸入目前時間。

時間格式 (功能表 #.1.4)

您可將時間格式設定為 24 小時或 12 小時。

自動更新 (功能表 #.1.5)

選擇開啟，手機會自動更新日期和時間。

語言

功能表 #.2

您可變更顯示手機中文字的語言。這亦會影響語言輸入模式。

屏幕

功能表 #.3

牆紙 (功能表 #.3.1)

您可選擇背景圖片。

時鐘 (功能表 #.3.2)

您可選擇時鐘類型，以便在內顯/外顯手機屏幕上顯示時鐘。

背景燈時計 (功能表 #.3.3)

您可以設定顯示背光的持續時間。

亮度 (功能表 #.3.4)

您可設定屏幕亮度。

功能導向捷徑 (功能表 #.3.5)

如果您選擇「開啟」，可以顯示捷徑在備用模式。

字體大小 (功能表 #.3.6)

您可變更手機顯示文字的字體大小。

主題 (功能表 #.3.7)

您可設定顯示在主屏幕上的主題。

功能表風格 (功能表 #.3.8)

手機為您提供格子檢視和列表檢視功能表主題。請透過選擇並按左軟鍵 [確定]，設定功能表風格。

撥號 (功能表 #.3.9)

您可設定撥打電話時顯示在主屏幕上號碼的字體式樣/字體大小。

備用歡迎辭 (功能表 #.3.0)

如果您選擇開啟，可以修改顯示在備用模式的文字。

網絡名稱 (功能表 #.3.*)

啟動此功能後，網絡名稱將會顯示在屏幕上。

捷徑

功能表 #.4

您可設定 4 個導航鍵的功能，以便在備用模式下使用捷徑。

通話

功能表 #.5

透過按設定功能表中的左軟鍵 [確定]，您可設定與通話相關的功能表。

設定

來電轉接 (功能表 #5.1)

來電轉接服務可讓您將內送語音通話、傳真通話和數據通話轉接給其他號碼。有關詳情，請聯絡服務供應商。

- ▶ **所有語音通話**：無條件轉接所有語音通話。
- ▶ **線路繁忙時**：轉接手機正在使用時的語音通話。
- ▶ **無人接聽時**：轉接無人接聽的語音通話。
- ▶ **無網絡或關機時**：轉接手機關閉或不在服務區的語音通話。
- ▶ **所有數據通話**：透過電腦連接無條件轉接至某個號碼。
- ▶ **所有傳真通話**：透過傳真連接無條件轉接至某個號碼。
- ▶ **取消全部**：取消所有來電轉接服務。

子功能表

來電轉接功能表顯示以下子功能表。

- **啟動**：啟動對應的服務。

到語音信箱：轉寄至訊息中心。此功能不在所有數據通話和所有傳真通話功能表中顯示。

其他號碼：輸入轉接號碼。

常用號碼：您可選擇轉到常用的號碼。

- **取消**：關閉對應的服務。

- **檢視狀態**：檢視對應服務的狀態。

通話限制（功能表 #.5.2）

通話限制服務可讓您避免撥打或接聽某種類型的通話。此功能需要通話限制密碼。您可以檢視下列子功能表。

- ▶ **所有撥出通話**
所有撥出通話的限制服務。
- ▶ **國際撥號**
所有撥出國際通話的限制服務。
- ▶ **本地以外的國際撥號**
漫遊時所有撥出的國際電話之限制服務
- ▶ **所有來電**
全部來電的限制服務。
- ▶ **國際漫遊時來電**
漫遊時所有來電的限制服務。
- ▶ **取消全部限制通話**
您可取消所有限制服務。
- ▶ **更改密碼**
您可更改通話限制服務的密碼。

子功能表：

- **啟動**
可要求網絡將通話限制設為開啟。
- **取消**
將選定的通話限制功能設為關閉。
- **檢視狀態**
檢視通話是否被限制的狀態。

固定撥號號碼（功能表 #.5.3）

（不同智能咭有不同情況）

- ▶ 可以將撥出電話限制為所選電話號碼。這些號碼受您的PIN2 碼保護。
- ▶ **開啟**
可以將撥出電話限制為所選電話號碼。
- ▶ **關閉**
您可取消固定撥號功能。
- ▶ **號碼列表**
您可檢視儲存為固定撥號的號碼列表。

設定

接聽模式 (功能表 #.5.4)

- ▶ **揭蓋開啟：**如果選擇了此功能表，只須打開揭蓋即可接聽來電。
- ▶ **按任何鍵：**選定此功能表後，透過按除「結束」鍵和右軟鍵外的任何鍵，您可接聽來電。
- ▶ **按發送鍵：**選定此功能表後，僅按發送鍵即可接聽來電。

發送我的號碼 (功能表 #.5.5)

(取決於網絡和訂閱)

- ▶ **按網絡設定：**選擇此選項後，您可按網絡設定。
- ▶ **開啟：**可將您的電話號碼發送給他人。您的電話號碼將顯示在收件人的手機上。
- ▶ **關閉：**您的電話號碼將不會顯示。

來電等候 (功能表 #.5.6)

(取決於網絡)

- ▶ **啟動：**選定啟動後，您可接受等候（接聽）來電。
- ▶ **取消：**如果選擇取消，則無法識別等候（接聽）來電。
- ▶ **檢視狀態：**顯示來電等候狀態。

道歉訊息 (功能表 #.5.7)

您可以在來電時並拒絕時用“道歉訊息”發送解釋為什麼在未有接入來電。

分鐘提示 (功能表 #.5.8)

如果選擇「開啟」，通話時每分鐘發出嗶聲以提示通話時間。

自動重撥 (功能表 #.5.9)

- ▶ **開啟：**啟動此功能後，如果手機無法接通電話，則會自動嘗試重撥。
- ▶ **關閉：**當原始通話尚未接通後，手機將不會重撥。

選擇線路（功能表 #.5.0）

（需網絡商及相關服務支援）

取決於智能咭上的 2 線路服務是否受支援，您可選擇所需的線路。

發送 DTMF（功能表 #.5.*）

您可以在通話中傳送接觸音頻，控制您的語音信箱或其他自動化電話服務。

安全

功能表 #.6

PIN 碼要求（功能表 #.6.1）

在此功能表中，您可將手機設定為開機時要求輸入智能咭的 PIN 碼。

若此功能已啟動，則手機將要求您輸入 PIN 碼。

- 1 在安全設定功能表中選擇 PIN 碼要求，然後按左軟鍵 [確定]。
- 2 設定為開啟/關閉。
- 3 如果要變更此設定，則要在開機後輸入 PIN 碼。

- 4 若輸入三次錯誤的 PIN 碼，則手機將會鎖定。若 PIN 碼被鎖定，則您將需要輸入 PUK 碼。
- 5 您最多可輸入 PUK 碼 10 次。若輸入超過 10 次錯誤的 PUK 碼，則將無法解鎖手機。您將需要聯絡服務供應商。

手機鎖（功能表 #.6.2）

您可使用安全密碼來避免他人未經許可使用手機。如果您將手機鎖設定為開機後啟用，則每次開機後手機要求您輸入安全密碼。

如果您將手機鎖定設為智能咭更換時，手機只會在更換智能咭時要求您輸入安全密碼。

手機遺失追蹤（功能表 #.6.3）

本手機的 ATMT 功能為您提供一套追蹤系統，應對遺失或誤置手機的情況。一旦未經授權的用戶使用了您的手機，手機就會向您預設的電話號碼發出一條文字訊息。這條文字訊息會自行發送到預設號碼而不讓未經授權的用戶知道。

設定

更改密碼 (功能表 #.6.4)

PIN 碼是個人識別號碼的簡寫，用以防止未經授權的使用。

您可更改密碼：安全密碼、PIN2 碼和手機追蹤密碼。

- 1 若要變更密碼，請輸入原始密碼，然後按左軟鍵 [確定]。
- 2 輸入新密碼並予以確定。

飛航模式 功能表 #.7

當您在飛機上或身處一個禁止使用無線網絡的地方時，此功能可讓您只是使用無需用到無線網絡的手機功能。

如果您開啟了飛航模式，該圖示將取代網絡訊號強度圖示顯示在屏幕之上。

- ▶ **開啟：**您不得撥打（或接聽）任何電話（包括緊急呼叫），或使用其他需要用到網絡的功能。

- ▶ **關閉：**您可透過關閉飛航模式並重新開機來存取網絡。

省電模式 功能表 #.8

選擇切換原廠設定省電設定開啟或關閉。

重設 功能表 #.9

您可初始化原廠預設值。要啟動此功能，您需要使用安全密碼。

記憶體狀態 功能表 #.0

您可以檢查手機、智能咭以及外置記憶體（如已插入）的可用空間和記憶體使用狀況。

配件

有不同的配件供您的手機使用。您可以根據您的個人通訊要求選擇這些選項。

標準電池



免提耳機



旅行充電器

該充電器讓您在遠離住所或辦公室時亦可為電池充電。



備注

- ▶ 只可用原裝 LG 配件。
- ▶ 不使用原裝 LG 配件，保養可能失效。
- ▶ 不同的地區可能有不同的配件，請向我們的地區服務公司或代理商查詢更多詳情。

技術數據

標準

產品名稱：KF305

系統：E-GSM 900 / DCS 1800 / PCS 1900

環境溫度

最高：+55°C（放電中）
+45°C（充電中）

最低：-10°C

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri Band Terminal Equipment

Model Name

KF305

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1

EN 300 328 V 1.7.1

EN 60950-1: 2001

EN 50360:2001/EN62209-1:2006

EN 301 511 V9.0.2

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom

Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, Fax : +31 - 36 - 547 - 8794
e-mail : jacob@lge.com

Name

Issued Date

Seung Hyoun, Ji / Director

10. Nov. 2009

Signature of representative

Memo

[illegible]



此手册中的部份内容可能会因
话机软件之改良或不同网络商
提供的服务而令实际情况有所
不同,这并不会另行通知。

KF305 用户手册 - 简体中文

目录

目录.....	2	游戏与应用程序.....	36
简介.....	6	游戏.....	36
为了您的安全.....	7	应用程序.....	37
关于安全有效使用手机的准 则.....	8	网络设置文件.....	37
KF305 功能.....	13	通话记录.....	38
手机部件.....	13	所有通话.....	38
使用入门.....	19	未接来电.....	38
插入 SIM 卡和手机电池.....	19	拨电.....	38
为电池充电.....	20	已接来电.....	38
断开适配器连接.....	21	通话持续时间.....	38
如何使用 microSD 存储卡..	22	通话费用.....	39
常规功能.....	26	数据资料.....	39
拨打电话和应答电话.....	26	公文包.....	40
输入文本.....	28	日历.....	40
更改文本输入模式.....	28	备忘录.....	40
使用 T9 模式.....	28	任务.....	41
选择功能和选项.....	30	多媒体.....	42
呼叫中功能表.....	31	MP3 播放机.....	42
功能表树.....	34	所有歌曲.....	43
		我的播放列表.....	43
		设置.....	43

照相机	44	服务信息.....	55
录像机	45	小区广播信息.....	55
FM 收音机	46	我的文档	56
语音录音机.....	47	图像.....	56
信息	48	声音.....	57
新信息	48	视频.....	58
收件箱	49	文件.....	59
电邮信箱 菜单	50	其它.....	59
草稿箱	50	情景模式	60
发件箱	50	启动	60
已发送	50	个人化	60
收听语音邮件	51	电话本	62
小区广播	51	搜索.....	62
阅读	51	新联系人.....	63
题目	52	快速拨号	63
模板.....	52	群组.....	64
文本模板.....	52	全部复制	64
多媒体模板	52	全部删除	64
设置.....	53	设置.....	65
文本信息.....	53	查看选项.....	65
多媒体信息	53	备份电话簿	65
电邮	54	恢复电话簿	65
语音邮件中心.....	55		

目录

资料.....	65	保安证书.....	71
服务拨号号码.....	65	显示图像.....	71
本机号码.....	65	Java 脚本.....	71
我的名片.....	65	已用内存.....	71
工具.....	66	资料.....	71
闹钟.....	66	连接性.....	72
计算器.....	66	蓝牙.....	72
计时表.....	67	网络.....	74
单位对换器.....	67	网络选择.....	74
世界时钟.....	67	GPRS 连接.....	74
SIM 卡服务.....	67	接入点.....	75
浏览器.....	68	USB 连接模式.....	76
主页.....	69	设置.....	77
书签.....	69	日期和时间.....	77
输入地址.....	69	设定日期.....	77
浏览记录.....	70	日期格式.....	77
已保存的页面.....	70	设定时间.....	77
设置.....	70	时间格式.....	77
网络设置文件.....	70	自动更新.....	77
提供模式.....	70	语言.....	77
缓存.....	70		
Cookies.....	70		

显示.....	77	分钟提示.....	81
墙纸	77	自动重拨.....	81
时钟	77	线路选择.....	81
背景灯计时器.....	77	发送双音多频	81
亮度	77	保安.....	81
主屏快捷键	78	PIN 码要求	81
字体大小.....	78	手机锁.....	82
主题	78	防盗手机追踪器	82
菜单样式.....	78	更改密码.....	82
正在拨号.....	78	航行模式	83
待机文本.....	78	省电模式	83
网络名称.....	78	重新设置.....	83
快捷键	78	储存器状态.....	83
呼叫.....	78	配件.....	84
呼叫转移.....	78	技术参数.....	85
呼叫阻截.....	79		
固定拨号号码.....	80		
接听模式.....	80		
发送本机号码.....	80		
呼叫等待.....	81		
查看状态.....	81		

简介

恭喜您购买此款功能先进、外观小巧的 KF305 手机，它采用了最新的数字移动通信技术，专注于为您提供便利的操作。

本用户手册包含有关手机使用和操作的重要信息。请仔细阅读所有信息以获得手机的最佳性能，并防止因误用而造成的任何损坏。如果作出未在本用户手册中明确认可的更改或修改，可能导致手机的保修失效。



为了您的安全

警告！

- 在飞机上请务必关闭手机。
- 驾驶时请勿持握手机。
- 请勿在加油站、加油点、化工厂或爆破区附近使用手机。
- 为了您的安全，请仅使用指定的原装电池和充电器。
- 手机充电时，请勿用湿手操作手机。这可能会导致电击或手机严重受损。
- 将手机放在儿童接触不到的安全地方。手机中包含细小零件，如果脱落可能导致窒息危险。
- 请勿在靠近易燃物体的位置充电，因为手机可能因加热而引发火灾。
- 如果手机置于柔软物体之上，请不要充电。应在通风条件好的位置对手机进行充电。

警告！

- 在任何有特殊条例要求的区域关闭手机。例如，请勿在医院使用手机，因为它可能影响敏感的医疗设备。
- 并非在所有手机网络中均可使用紧急电话。因此，您不应仅依赖于手机的紧急电话功能。
- 仅使用原装配件，以免损坏您的手机。
- 所有的无线电发射器都有对近距离内的电子干扰的危险。微弱的干扰可能会影响电视、收音机、个人计算机等。
- 应按照相关条例处置电池。
- 请勿拆卸手机或电池。
- 如果用不适当的电池进行替换，可能会有爆炸危险。

关于安全有效使用手机的准则

请阅读以下简单的准则。违反这些准则可能造成危险或者触犯法律。本手册中给出了进一步的详细信息。

暴露在射频能量之下

无线电波暴露和“特定吸收率”(SAR)信息

此款 KF305 型手机已设计为遵守有

关适用的无线电波暴露安全求。此

要求以相关的科学准则为基础，包括为确保所有人员（无论年龄和健康状况）安全而设计的安全裕量。

▶ 无线电波暴露准则采用一种称为“特定吸收率”或 SAR 的测量单位。SAR 测试是在所有用到的频带中以手机的最高认可功率电平进行发射时使用标准化方法执行的。

- ▶ 不同的 LG 手机型号可能有不同的 SAR 能级，但它们均符合相关的无线电波暴露准则。
- ▶ 国际非游离辐射防护委员会 (ICNIRP) 建议的 SAR 上限值为 2W/kg ，平均值超过十 (10) 克薄纸。
- ▶ 由 DASY4 对该型号手机进行的测试，人耳能够承受的 SAR 最大值为 1.24W/kg （10 克），戴在身体上时，其值为 0.417W/kg （10 克）。
- ▶ 电气电子工程师协会 (IEEE) 建议的 SAR 上限值为 1.6W/kg ，平均值超过一 (1) 克薄纸，此 SAR 数据适用于各个国家/地区的居民。

产品保养和维护

警告！

仅使用经核准为用于此特定手机型号的电池、充电器和配件。使用任何其它类型可能导致适用于此手机的许可或保修失效，并可能造成危险。

- ▶ 不要拆解本机。当需要维修时，请将手机送往合格的服务技术人员处。
- ▶ 远离诸如电视、收音机或个人计算机之类的电器。
- ▶ 远离诸如暖气片或厨灶之类的热源。
- ▶ 小心不要让手机摔落。
- ▶ 不要让手机受到机械振动或撞击。
- ▶ 在任何有特殊条例要求的区域关闭手机。例如，请勿在医院使用手机，因为它可能影响敏感的医疗装置。
- ▶ 手机充电时，请勿用湿手操作手机。这可能会导致电击或手机严重受损。
- ▶ 请勿在靠近易燃物体的位置充电，因为手机可能因加热而引发火灾。
- ▶ 用包装材料或乙烯基包装纸包裹手机可能会损坏手机涂层。
- ▶ 如果手机置于柔软物体之上，请不要充电。
- ▶ 应在通风条件好的位置对手机进行充电。
- ▶ 使用干布清洁手机外壳。（不要使用如苯、稀释剂或酒精之类的溶剂）。
- ▶ 不要在烟雾或灰尘过多的环境中使用或存放手机。
- ▶ 不要将手机放在信用卡或卡式车票旁边，它可能会影响磁条上的信息。
- ▶ 不要用尖锐物体敲击屏幕，这可能会损坏手机。
- ▶ 不要将手机暴露在液体或潮气中。
- ▶ 谨慎使用如耳机之类的配件。在不必要的情况下，不要触摸天线。

关于安全有效使用手机的准则

有效的手机操作

电子设备

所有手机都可能受到干扰，这种干扰会对性能造成影响。

- ▶ 在未经允许的情况下，不得在医疗装置附近使用手机。不要将手机放在心脏起搏点上，即胸前的口袋内。
- ▶ 手机可能会对某些助听器造成干扰。
- ▶ 微弱的干扰可能会影响电视、收音机、个人计算机等。行车安全 查阅有关在驾驶时使用手机的本地法律法规。
- ▶ 不要在驾驶时使用手持式手机。
- ▶ 将注意力完全集中在驾驶上。
- ▶ 如果有免提装置，请使用免提装置。

- ▶ 如果行驶条件需要，请在拨打或接听电话之前将车辆驶离道路并停车。
- ▶ 射频能量可能影响车辆内的电子系统，例如立体声音响、安全设备等。
- ▶ 当车辆配备气囊时，不要让安装的便携式的无线设备阻挡气囊。由于不适当的个人行为，可能造成严重伤害。

如果您在外出时使用耳机收听音乐，请确保将音量设置为合理的音量级别，以便注意周围的情况。在过马路时，尤其要注意这一点。

防止损伤您的听力

如果您长时间置于高音环境中，那么您的听力可能会遭到伤害。因此，我们建议您在开机或关机时不要将手机置于耳边。同时，我们还建议您将音乐和通话音量设置为合理的音量级别。

玻璃零件

手机的部分零件由玻璃制成。当手机掉在坚硬的表层或受到重大的撞击时，玻璃可能破裂。若玻璃破裂，请勿碰触或尝试取出。立即停止使用手机，直到授权服务供应商更换玻璃。

爆破区域

不要在正进行爆破的地区使用手机。请依照有关限制，并遵守任何规章或规定。

易爆环境

- ▶ 不要在加油站内使用手机。不要在靠近燃料或化学制品处使用手机。
- ▶ 不要在放有手机和配件的车厢内运输或存放可燃气体、液体或爆炸品。

在飞机上

无线装置可能对飞机造成干扰。

- ▶ 登机前，请关机。
- ▶ 未经机务人员允许，不得地面上使用手机。

儿童

将手机放在儿童接触不到的安全地

方。手机中包含细小零件，如果脱落可能导致窒息危险。

紧急电话

并非在所有手机网络中均可使用紧急电话。因此，您不应仅依赖于手机的紧急呼叫功能。请向当地的服务提供商核准。

关于安全有效使用手机的准则

电池信息及保养

- ▶ 您无需在再次充电前对电池进行完全放电。与其它电池系统不同，本机电池不具有可能影响电池性能的记忆效应。
- ▶ 只能使用 LG 电池和充电器。LG 充电器设计为最大程度地延长电池使用寿命。
- ▶ 不要拆解电池组或将其短路。
- ▶ 保持电池组的金属触点清洁。
- ▶ 当电池不再提供合乎要求的性能时，请更换电池。在需要更换之前，电池组可以反复充电数百次。
- ▶ 如果电池已经使用很长一段时间，请对电池再次进行充电以保持最佳用状态。
- ▶ 不要将电池充电器暴露在直射阳光下，也不要再在诸如浴室之类的高湿环境中使用。
- ▶ 不要将电池存放在过热或过冷的地方，这可能损害电池的性能。
- ▶ 如果用不适当的电池进行替换，可能会有爆炸危险。
- ▶ 请按制造商的说明处置用过的电池。如果可能，请循环使用电池。不要象处理家用废物一样处理电池。
- ▶ 请按制造商的说明处置用过的电池。
- ▶ 如果要更换电池，请将其携带至 LG Electronics 授权服务点或经销商处以寻求帮助。
- ▶ 手机充好电后，请务必将充电器从墙上插座拔下，以避免不必要的耗电。
- ▶ 实际的电池寿命将取决于网络配置、产品设置、使用方式、电池和环境条件。

KF305 功能

手机部件

1 听筒

2 主屏幕

3 发送键

- ▶ 拨打电话号码或接听来电。
- ▶ 在待机模式下：显示通话记录。

4 字母数字键

- ▶ 在待机模式下：
输入号码以便拨号。
长按
 -  - 国际电话
 -  - 启动语音邮件中心
- 功能表
 -  至  - 快速拨号
- ▶ 在编辑模式下：
输入号码和字符

5 清除键

- ▶ 每按一下清除一个字符。
按住此键清除所有输入内容。


6 结束键

- ▶ 开机/关机（长按）
- ▶ 结束通话或拒接来电。

7 麦克风



KF305 功能

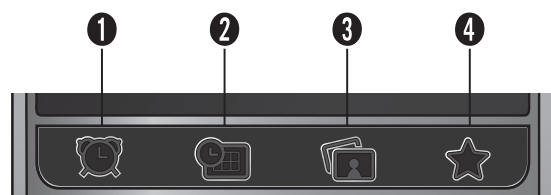

1 闹钟热键

- ▶ 转到“闹钟”功能表

2 日程表热键


- ▶ 转到“日程表”功能表

3 图像热键

- ▶ 转到图像

4 最爱目录

- ▶ 转到“收藏夹”菜单

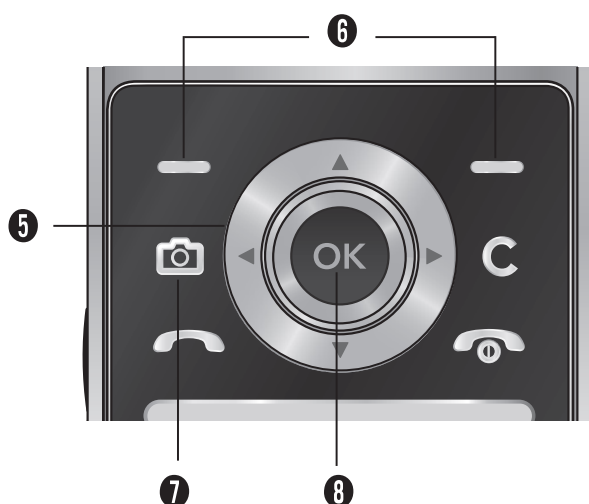

5 导航键

- ▶ 在待机模式下：

- ▶ 短按：讯息
- ▶ 短按：转到通讯簿
- ▶ 短按：转到“情景模式”功能表
- ▶ 短按：转到“MP3播放器”功能表

- ▶ 在功能表中：向上和向下滚动

6 软键（左软键/右软键）


- ▶ 这些按键执行显示屏底部所示的功能。

7 相机热键

- ▶ 转到相机预览。

8 确定键/选择键

- ▶ 选择功能表选项并确认操作。

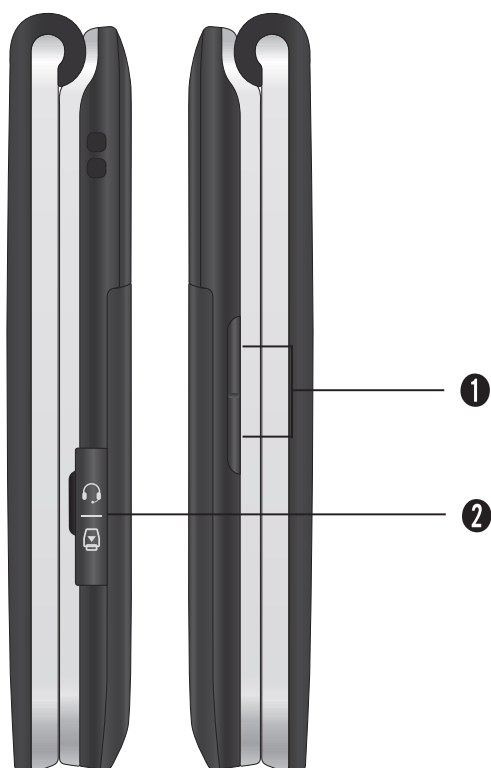


1 侧键

- ▶ 在待机模式下（开盖）：按键音量调节
- ▶ 在待机模式下（关闭）：
按顺序显示日期和时间。
- ▶ 在通话过程中：耳机音量调节
- ▶ 播放 MP3 音乐过程中：
音频音量调节

2 耳机/充电器/USB 数据线接口

备注


连接 USB 数据线前，请确保手机开机并处于待机模式。

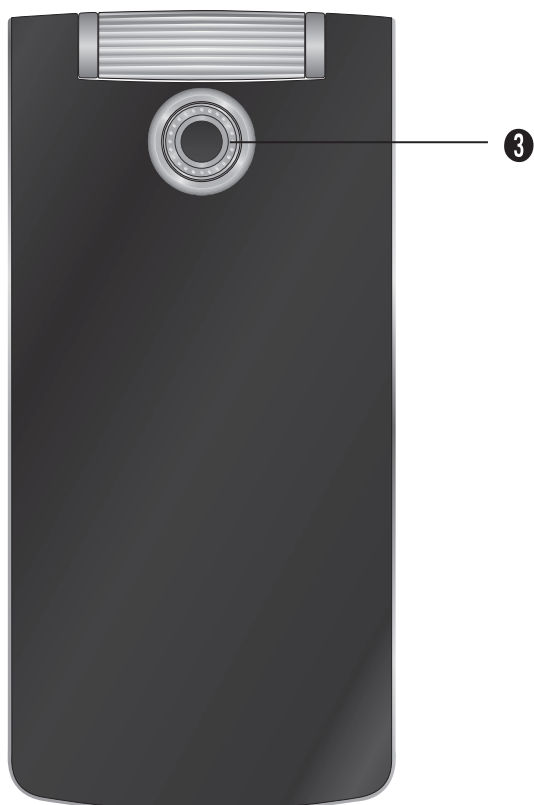


3 相机镜头

4 副屏幕

KF305 功能

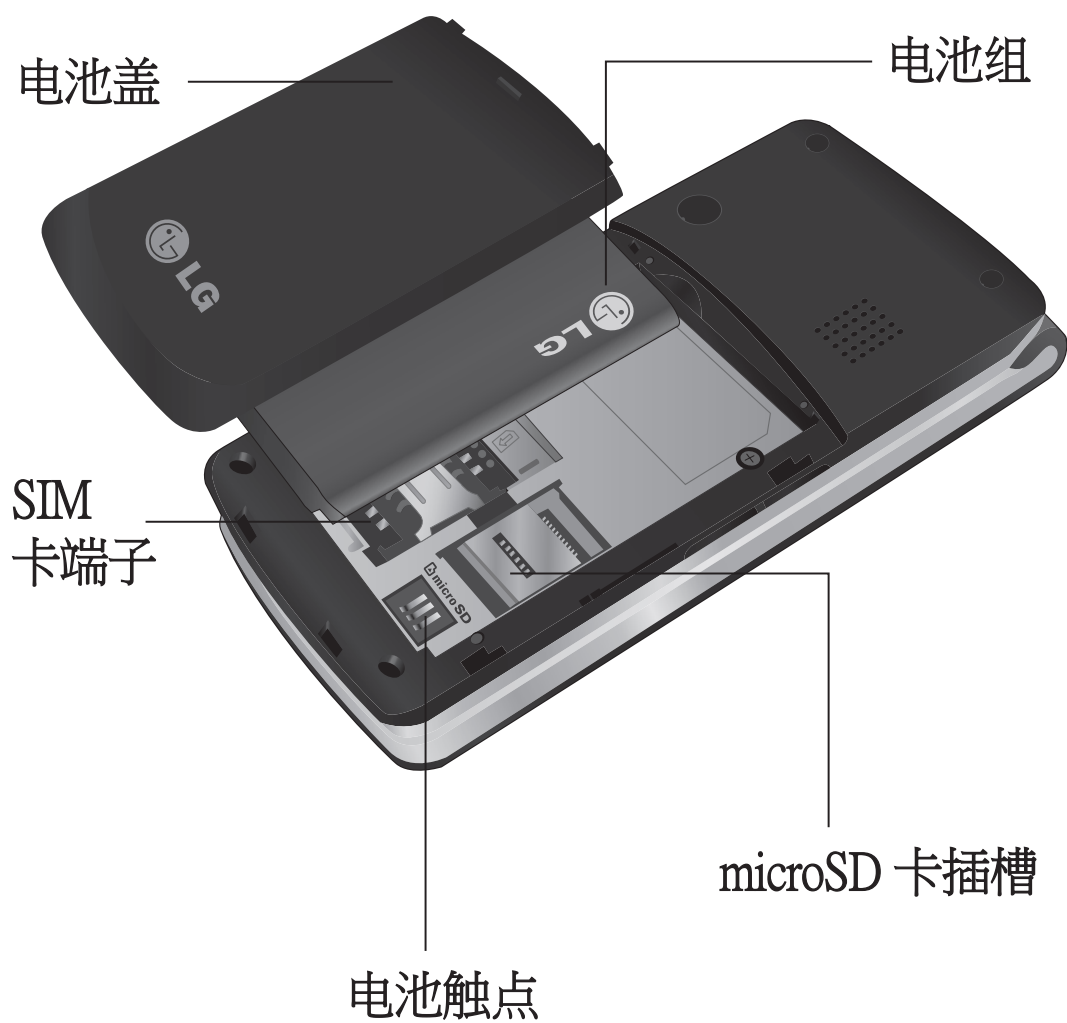

显示信息

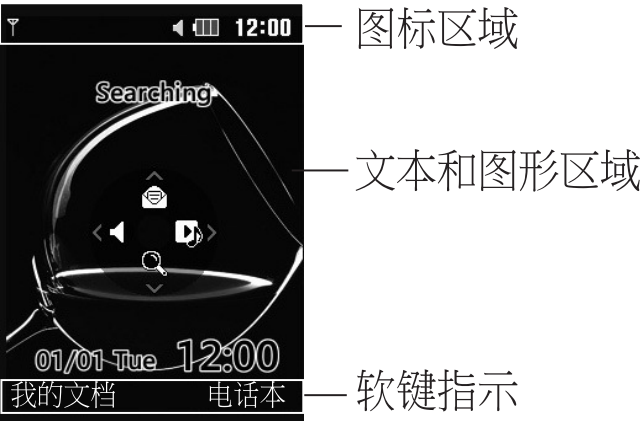

区域	说明
第一行	显示不同图标。
中间各行	显示信息、说明以及输入的任何信息，如要拨打的号码等。
最后一行	显示当前给两个软键指定的功能。

屏幕图标

屏幕可能会显示多个图标。如下所述。

图标	说明
	指示网络信号的强度。*

备注

* 通话质量视网络信号强度而定。信号强度低于 2 格时，您可能会遇到没有声音、通话掉线或音质极差等情况。请根据网络信号强度指示条的情况，决定您是否进行通话。当没有指示条时，表示不在网络服务区内：在此情况下，您不能访问网络以使用任何服务（电话、消息等）。

KF305 功能

图标	说明
	指示 GPRS 服务可用。
	指示已启动飞行模式。
	指示呼叫正在进行中。
	手机将转接所有来电。
	指示手机目前正在访问浏览器。
	指示您目前正在使用 GPRS。
	显示您目前正在使用漫游服务。
	已设定并开启闹钟。
	指示您有一个日程表。

图标	说明
	指示已安装外部存储器。
	您收到了一条信息。
	您收到了一封语音邮件。
	情景模式中的“普通”功能表。
	情景模式中的“静音”功能表。
	情景模式中的“振动”功能表。
	情景模式中的“户外”功能表。
	情景模式中的“耳机”功能表。
	指示电池状态。
	指示外部存储器未格式化或手机不支持。



使用入门

插入 SIM 卡和手机 电池

在卸下电池前确保电源已关闭。

1 卸下电池盖。

按电池释放闩，将电池盖沿着手机底部滑动。卸下电池盖。

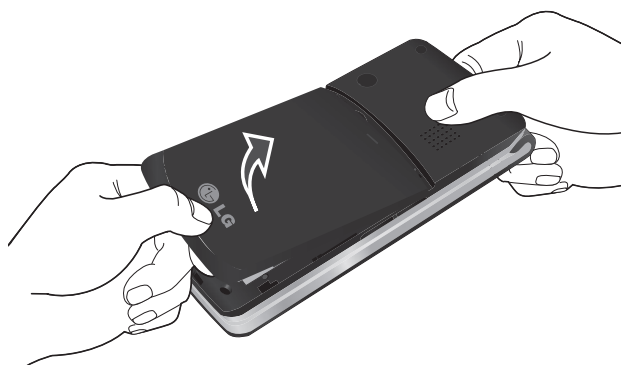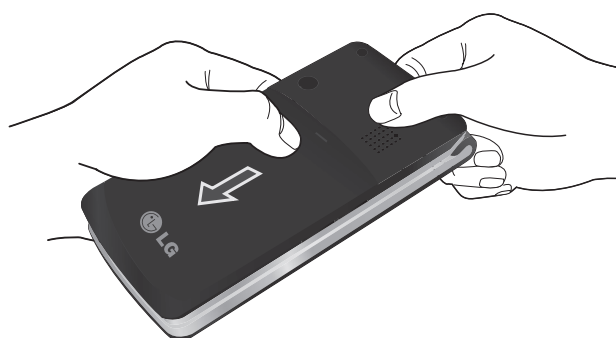

备注

如果在电源打开时从手机上卸下电池，可能导致手机出现故障。

2 卸下电池。

握住电池边缘，将电池从电池室取出。



3 插入 SIM 卡。

将 SIM 卡插入弹夹内。将 SIM 卡滑进 SIM 卡弹夹中。确保 SIM 卡以正确方式插入并且卡上的金色接触区域面朝下。要取出 SIM 卡，轻轻将卡向下按并反向推出。

使用入门



警告！

SIM 卡的金属触点很容易因刮擦而损坏。操作时请对 SIM 卡多加注意。遵守随 SIM 卡提供的说明。

4 插入电池。

先将电池后端插入电池室底部。向下推电池前端，直至电池卡入到位。



5 更换电池盖。

将电池盖放到手机的适当位置，并滑动它直至闩锁卡入到位。

为电池充电

要将手机连接到电源适配器，您必须首先安装电池。



- 1 在电池正确装入手机后，将旅行适配器的导线连接到手机左侧的插槽。确保导线接头上的箭头朝向手机正面。
- 2 将电源适配器的另一端连接到电源插座。请仅使用包装盒随附的充电器。
- 3 充电结束后，电池图标的移动条停止。

警告！

- 不要强行插拔接头，这可能会损坏手机和（或）旅行充电器。
- 将电池组充电器垂直插入墙上电源插座。
- 如果在本国外使用电池组充电器，务必使用附属的适配插头进行适当的配置。
- 不要在充电过程中取出电池或 SIM 卡。

警告！

- 在发生雷电时，务必拔掉电线和充电器，以免遭受电击或发生火灾。
- 确保没有细尖的物体，如动物牙齿、指甲等进入手机内触碰电池。这存在引发火灾的危险。
- 手机充电时，不要拨打或接听电话，否则会使手机短路和/或发生电击或引发火灾。

断开适配器连接

- 1 充电结束后，电池图标的移动条停止并且屏幕上显示“电池电量已满，请拔下充电器”字样。
- 2 从电源插座上拔下适配器。按住接头两侧的凸钮并拉出接头，将适配器从手机上断开。



使用入门

备注

- ▶ 使用手机之前，请确保电池已完全充电。
- ▶ 不要在充电过程中取出电池或 SIM 卡。
- ▶ 如果出现电池未正确充电的情况，请使用电源键关闭并重新打开手机，然后再次对电池进行充电。在取出并重新装入电池之后，请再次对电池进行充电。

如何使用 microSD 存储卡



<microSD 储存卡>


<如何插入 microSD 储存卡>

1 关机。

2 打开插槽保护。



3 将存储卡插入插槽。金属触点必须与 microSD 储存卡的背部接触。如果不能轻松地将储存卡插入插槽，则您可能是插入方式出错或是插槽内有异物。

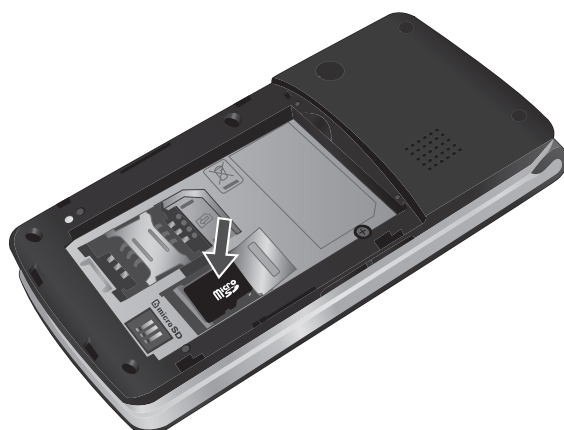

4 关闭插槽保护。

- 5 要取出储存卡，请关机。打开插槽保护，小心地取出储存卡。

备注

- ▶ 电池电量低时避免使用储存卡。
- ▶ 写入储存卡时，请在写入操作完成后再取出储存卡。
- ▶ 储存卡在设计时即采取仅以一个方向轻松插入到位。
- ▶ 不要折弯储存卡或强行将其插入插槽。
- ▶ 除 microSD 卡外，不要插入其它任何类型的储存卡。
- ▶ 将 microSD 卡插入手机后，请查看屏幕的图标区域。
- ▶ 如果显示内存错误图标 ，表明内存卡未被格式化或不受手机支持。
- ▶ 在这种情况下，您需要尝试格式化储存卡。
- ▶ 如果图标区域仍显示内存错误图标，请联系服务中心。

有关 microSD 卡的详细信息，请参阅储存卡说明指南。

储存卡格式化

开始使用储存卡之前，您必须先对其进行格式化。插入储存卡之后，选择**设置** → **内存状态** → **外部存储器**，然后按“确定”键。

此操作仅应在第一次插入储存卡时完成。格式化期间，手机将为不同的数据类型创建不同的文件夹。

开机

确保在手机中插入 SIM 卡并装入已充电的电池。按住结束键，直到开机。当 PIN 码请求设置为开时，请输入随 SIM 卡提供的 SIM PIN 码。数秒钟后，手机便可完成网络注册。

使用入门

关机

按住结束键，直到关机。关机时可能会出现几秒钟的延迟。在此期间，不要再次开机。

访问密码

您可以使用本节所述的访问密码来防止他人未经允许使用您的手机。您可以使用改变代码功能来更改访问密码（PUK 和 PUK2 码除外）。

PIN 码

（4 至 8 位数字）

PIN（个人身份号码）码可防止他人未经允许使用您的 SIM 卡。PIN 码通常随 SIM 卡提供。当“需要 PIN 码”设置为“开”时，每次开机时手机都会要求 PIN 码。当“需要 PIN 码”设置为“关”时，手机将直接连接到网络，而无需 PIN 码。

PIN2 码

（4 至 8 位数字）

随某些 SIM 卡会提供 PIN2 码，访问诸如**话费建议**和**固定拨号**之类的功能时要求 PIN2 码。仅当您的 SIM 卡支持此类功能时，才可以使用这些功能。请咨询网络运营商以获得进一步的信息。

PUK 码

（4 至 8 位数字）

更改被锁定的 PIN 码时需要 PUK（PIN 解锁密码）码。SIM 卡可能会提供 PUK 码。如果未提供，请联系您的网络运营商以获得该密码。如果丢失了该密码，请同样与您的网络运营商联系。

PUK2 码 (4 至 8 位数字)

随某些 SIM 卡会提供 PUK2 码，更改被锁定的 PIN2 码时需要 PUK2 码。如果丢失了该密码，请同样与您的网络运营商联系。

安全密码 (4 至 8 位数字)

安全密码可防止他人未经允许使用您的手机。默认的安全密码设置为“0000”，删除所有电话记录及激活恢复初始设定功能表时需要安全密码。并且，开关话机锁功能以防止未经允许使用手机时，也需要安全密码。从“安全”功能表中可以修改安全密码默认设置。

常规功能

拨打电话和应答电话

拨打电话

- 1 确保手机已开机。
- 2 输入电话号码，包括区号。
 - ▶ 按住  键删除整个号码。
- 3 按  键拨打电话。
- 4 要结束通话，请按  键。

通过通话记录列表拨打电话

- 1 在待机模式中，按  键，屏幕将显示最后的来电、去电和未接来电。
- 2 使用向上/向下导航键选择所需的号码。
- 3 按  键。

拨打国际电话

- 1 按住  键以输入国际前缀。“+”字符自动选择国际接入码。
- 2 输入国家代码、地区代码和电话号码。
- 3 按  键。

结束通话

结束通话时，请按  键。

从电话本拨打电话

您可以将常用的联系人姓名和电话号码保存在 SIM 卡和手机内存中，如联系人列表。通过在电话本中查找所需的姓名，即可拨打相应电话号码。

接听电话

当接收到电话时，手机响铃并且屏幕上出现闪烁的电话图标。如果可以识别致电者，则会显示该致电者的电话号码（或保存在电话本中的姓名）。

- 1 要接听来电，请打开手机（当已将翻盖接听设置为接听模式时）。您可以使用接听模式功能，根据需要更改接听模式。

备注

如果已将**按任意键**设置为接听模式，则按除  或右软键以外的任何按键可应答电话。

- ▶ 要在静音模式下拒接来电，无需打开手机，按住手机左侧的向下键即可。在其它情景模式下，若要在不打开手机的情况下拒接来电，需要执行两个步骤。

在来电时按住手机侧面的向下键，当前情景模式将更改为静音模式。

再次按住侧面的向下键，来电即被拒接。

- ▶ 在使用电话本或其它功能表功能时，您也可以接听来电。

- 2 要结束呼叫，关闭手机或按  键。

信号强度

您可以通过手机屏幕上的信号指示符 () 检查信号强度。

信号强度会有所差别，尤其是在建筑物内。移到窗口附近可以改进接收质量。

常规功能

输入文本

您可以使用手机键盘输入字母数字字符。

例如，在电话本中存储姓名、编写信息和创建个人问候语。本款手机提供以下文本输入方法。

T9 (T9 Abc) 模式

此模式允许以每个字母只需一次击键的方式输入单词。键盘上的每个按键对应于多个字母。T9 模式自动将所击按键与内部词典进行比较，然后确定正确的单词，因此所需的击键次数比传统的 ABC 模式要少。有时这也称为预测性文本。

ABC 模式

在此模式中，输入字母时，按标示为所需字母的按键一次、两次、三次或四次，直到显示该字母。

123 模式（数字模式）

以每个数字一次击键的方式输入数字。要在文本输入区域中更改为 123 模式，按  键直到显示 123 模式。

更改文本输入模式

- 1 当处于允许输入字符的区域中时，在屏幕的右上角可以看到文本输入模式指示符。
- 2 通过按  键更改文本输入模式。在屏幕的右下角，可以查看文本输入模式。

使用 T9 模式

T9 预测性文本输入模式允许您以最少的按键次数输入单词。当您按每个按键时，手机开始显示它根据内置词典认为正确的字符。您还可以在词典中添加新单词。当添加新单词时，手机将从词典中选择可能性最大的单词。

- 1 当处于 T9 预测性文本输入模式时，通过按  到  键开始输入单词。每个字母按一次键。
 - 在输入字母时，单词不断更改。请忽略屏幕上显示的单词，直至整个单词输入完毕。

- ▶ 如果在完成输入之后单词仍不正确，按键一次或多次以循环选择其它单词。

示例

按 4663 键入 Good

- ▶ 如果供选单词列表中没有所需的单词，请使用 ABC 模式添加该单词。
 - ▶ 也可以通过选择 **T9 关闭** 来关闭 T9 模式。手机的默认设置为“T9 开启”模式。
- 2 输入整个单词之后再对输入的内容进行编辑或删除。
 - 3 按键  或  键以空格结束每个单词。
要删除字母，请按 。按住  连续清除字母。

使用 ABC 模式

使用  到  键输入文本。

- 1 按标示为所需字母的按键：
 - ▶ 按一次输入第一个字母
 - ▶ 按两次输入第二个字母
 - ▶ 依此类推

- 2 要插入空格，请按向右导航键  一次。
要删除字母，按  键。
按住  键以清除所有文本。

使用123（数字）模式

使用 123 模式，您可以在文本信息中输入数字（例如电话号码）。

按与所需数字对应的按键，然后手动切换回适当的文本输入模式。


使用符号模式

使用符号模式，您可以输入各种符号或特殊字符。要输入符号，请选择**选项** → **插入** → **符号**。使用导航键和数字键选择所需的符号，然后按“确定”键。

选择功能和选项

本款手机提供一系列可供您自定义手机的功能。这些功能位于功能表和子功能表中，可以通过两个标记的软键来访问。每个功能表和子功能表允许您查看和更改特定功能的设置。

根据当前的操作环境，软键发挥的作用也不同；每个按键上方、屏幕底部一行的文字指示其当前的作用。

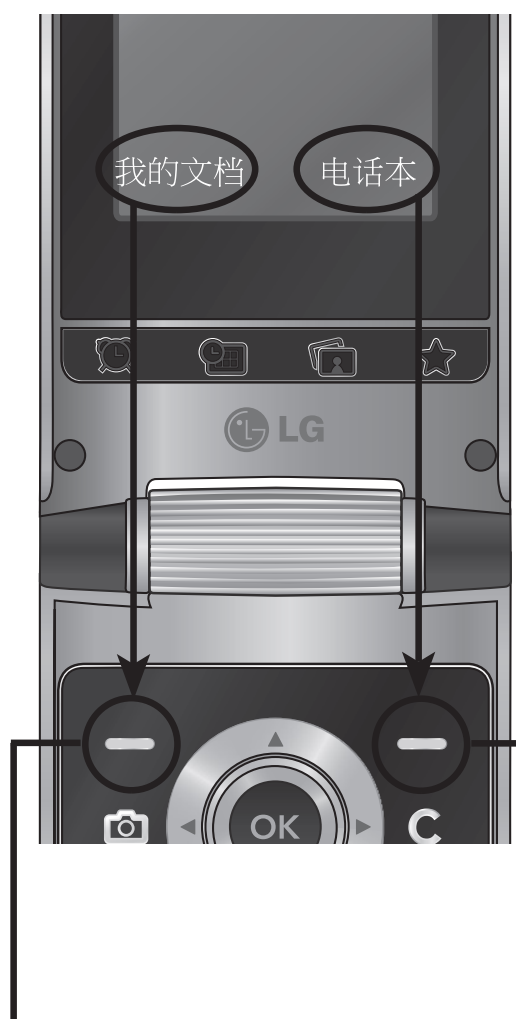

按左软键访问
可用的功能
表。

按右软键访问
电话本。

呼叫中功能表

您的手机提供许多可以在呼叫期间使用的控制功能。要在呼叫期间访问这些功能，按左软键 [选项]。

呼叫期间

在手机屏幕上，在呼叫期间显示的功能表与在待机模式中显示的默认主功能表不同，下面对这些选项进行说明。

拨打第二个电话 (需网络支持)

您可以在**电话本**中搜索并拨打号码，以拨打第二个电话。

在两个通话间切换

要在两个通话间切换，请按  键或左软键，然后选择**切换通话**。

应答来电

要在手机响铃时应答来电，只需按  键。当您已处于呼叫中时，手机还能够提示您有新人来电。

听筒中发出提示音，显示屏上将显示第二个呼叫正在等待。

此功能称为**呼叫等待**，仅当网络支持此功能时才可使用。有关如何激活和停用此功能的详细信息，请参阅“呼叫等待”功能。

如果**呼叫等待**功能已打开，您可以按左软键或发送键将第一个呼叫置于保持状态，然后接听第二个呼叫。

拒接来电

只需按  键，您可以拒接来电而不作应答。

通话过程中，您可以通过按  键拒接来电。

呼叫中功能表

使麦克风静音

通话过程中，您可以通过按右软键 [静音] 使麦克风静音。通过按右软键 [取消静音]，可以解除手机的静音。当手机静音时，致电者不能听到您的声音，但您仍可以听到他们的声音。

通话时的双音多频提示音

要在通话时打开双音多频提示（例如，通过自动电话交换台使用手机），请按左软键 [选项] 键，然后按“开启双音多频”。选择“关闭双音多频”以禁用双音多频提示音。双音多频提示音通常为开启。

多方通话

通过多方通话服务，您能够与多个致电者同时通话（如果您的网络服务提供商支持此功能）。

仅当您具有一个活动的呼叫及一个保持的呼叫时（已应答这两个呼叫），才可以建立多方通话。

一旦建立多方通话，则建立多方呼叫的用户可以添加、断开或分离

（即从多方通话中撤出，但仍与您相连接）呼叫。所有这些选项均在“呼叫中”功能表中提供。在多方通话中最多可以与五位致电者通话。开始之后，您即可以控制多方通话，并且只有您能将致电者加入多方通话。

拨打第二个电话

当目前已处于呼叫中时，您可以拨打第二个电话。输入第二个号码并按  键。

当连接第二个呼叫之后，第一个呼叫自动置于保持状态。通过按  键，可在通话间切换。

建立多方通话

建立多方通话：保持一个呼叫，并在一个呼叫处于活动状态时，按左软键，然后选择“多方通话”中的“加入”功能表。

激活保持的多方通话

要激活保持的多方通话，请按  键。此外也可以按左软键 [选项] 并选择“全部加入”/“保持所有通话”。保持通话的其他用户不会断开。要返回多方通话模式，请在选择多方通话后按左软键 [选项]。

向多方通话加入呼叫

要将一个通话添加到现有的多方通话，请按左软键，然后选择“多方通话”中的“加入”功能表。

多方通话中的私人电话

要与多方通话中的某个致电者进行私人通话，在屏幕上显示该致电者的号码，然后按左软键。选择“多方通话”中的“私人”功能表，保持所有其他致电者的通话。

结束多方通话

通过按  键可以将当前显示的多方通话中的致电者断开。

功能表树

本手机中的功能表可以 2 种方式显示。本手机中的功能表可以格式视图和列表视图显示。

请注意，这两种类型的功能表数字选项有所不同。

手机默认设置为以格式视图显示功能表，因此，本手册中所有功能表数字选择依此设置。

1. 游戏与应用程序	2. 通话记录	3. 公文包
1.1 游戏	2.1 所有通话	3.1 日历
1.2 应用程序	2.2 未接来电	3.2 备忘录
1.3 网络设置文件	2.3 拨电	3.3 任务
	2.4 已接来电	
	2.5 通话持续时间	
	2.6 通话费用	4. 多媒体
	2.7 数据资料	4.1 MP3播放机
		4.2 照相机
		4.3 录像机
		4.4 FM 收音机
		4.5 语音录音机

5. 信息
5.1 訊息
5.2 收件箱
5.3 电子邮件箱
5.4 草稿箱
5.5 发件箱
5.6 已发送
5.7 收听语音邮件
5.8 小区广播
5.9 模板
5.0 设置
6. 我的文档
6.1 图像
6.2 声音
6.3 视频
6.4 文件
6.5 其它
7. 情景模式
7.1 普通
7.2 静音
7.3 仅振动
7.4 户外
7.5 耳机

8. 电话本
8.1 搜索
8.2 新联系人
8.3 快速拨号
8.4 群组
8.5 全部复制
8.6 全部删除
8.7 设置
8.8 资料
9. 工具
9.1 闹钟
9.2 计算器
9.3 计时表
9.4 单位对换器
9.5 世界时钟
9.7 SIM 卡服务

*. 浏览器
*.1 主页
*.2 书签
*.3 输入地址
*.4 浏览记录
*.5 已保存的页面
*.6 设置
*.7 资料
0. 连接性
0.1 蓝牙
0.2 网络
0.3 USB 连接模式
#. 设置
#.1 日期和时间
#.2 语言
#.3 显示
#.4 快捷键
#.5 呼叫
#.6 保安
#.7 航行模式
#.8 省电模式
#.9 重新设置
#.0 储存器状态

游戏与应用程序

游戏

功能表 1.1

手机上提供了很多可供您选择的
游戏。

备注

Java™ 是由 Sun Microsystems 开发的一项技术。要安装 Java Applet，有两种方法。

第一种方法与使用标准微软 Internet Explorer 浏览器下载 Java Applet 的方式相同，可以使用具有 WAP 功能的手机下载 Java MIDlet。视服务提供商而定，所有基于 Java 的程序（如 Java 游戏）均可以下载到手机上并运行。一旦下载之后，即可以在“游戏与应用程序”功能表中查看、选择、执行或删除 Java 程序。Java 程序文件以 .JAD 或 .JAR 格式保存在手机中。

备注

JAR 文件是 Java 程序的压缩格式，JAD 文件是包含所有详细信息的描述文件。在下载之前，您可以从网络上的 JAD 文件中查看所有详细的文件说明。

第二种方法，您可以使用外部存储器中的 Java Applet。

转到“我的资料”->“外部存储器”->“其它”，然后选择要在手机中安装的 Java Applet 的 .jad 或 .jar 文件。

警告

只有基于 J2ME（Java 2 微版本）的程序会在手机上运行。基于 J2SE（Java 2 标准版本）的程序只能在 PC 环境中运行。

应用程序 功能表 1.2

选择“应用程序”功能表时，
将显示 Java 载入屏幕。

您可以选择并轻松访问此功
能表中的其它应用程序。有
关详细信息，请联系您的服务
提供商。

网络设置文件 功能表 1.3

“网络设置”功能表允许您
查看连接到互联网所用的网
络信息。您可以启动或添加
新设置。

通话记录

仅当网络支持服务区内的主叫线路识别 (CLI) 时，您才能检查未接来电、已接来电和已拨电话。

屏幕上显示电话号码和姓名（如果有）以及通话日期和时间。您还可以查看您呼叫的次数。

所有通话 功能表 2.1

您可以查看所有拨电和来电列表。

未接来电 功能表 2.2

使您能够查看未接来电的记录、拨打电话、发送信息以及将号码保存到电话本中。

拨电 功能表 2.3

使您能够查看拨出电话的记录、拨打电话、发送信息以及将号码保存到电话本中。

已接来电 功能表 2.4

使您能够查看已接来电的记录、拨打电话、发送信息以及将号码保存到电话本中。

通话持续时间 功能表 2.5

可查看来电和去电的通话持续时间长度。

您也可以重置通话计时器。

可以使用以下计时方式：

- ▶ **最后通话**：最后一次通话的时间长度。
- ▶ **所有通话**：自上次重置计时器后，所有来电和去电的总时间长度。
- ▶ **拨电**：拨电的时间长度。
- ▶ **已接来电**：来电的时间长度。

通话费用

功能表 2.6

允许您查看最后一次通话或所有通话的费用。

数据资料

功能表 2.7

您可以通过 GPRS 信息选项查看在网络上传输的数据量。
此外，您也可以查看自己的在线时间。

公文包

日历

功能表 3.1

您可以按月参考日程表。光标定位在当前日期上，注册日期下显示下划线。

每按一下		后退一年。
		前进一年。
		转到今天。
		后退一月。
		前进一月。

按“选择”键，您可以查看所选日程表备注或备忘录。

- ▶ **查看：**您可以查看所选日期的日程表备注或备忘录。
- ▶ **新日程表：**选择此选项输入新日程表或备忘录。
- ▶ **日程表铃音：**您可以设置闹钟类型。
- ▶ **所有日程表：**您可以显示所有日程表。
- ▶ **转到日期：**您可以直接转到所选日期。

- ▶ **删除旧的：**选择此选项删除已发出通知的过期日程表备注。
- ▶ **全部清除：**选择此选项删除所有日程表备注和备忘录。

备忘录

功能表 3.2

您可以添加新备忘录，查看并更改已保存的备忘录。

- 1 如果条目为空，按左软键 [新建] 以输入备忘录内容。按左软键 [选项]，然后选择 [保存]，您可以将备忘录保存在列表中。
- 2 如果您已经保存了备忘录，可以通过左软键 [选项] 访问以下选项：**查看、删除、新备忘录、发送方式、修改、多项删除、全部清除。**

备注

如果要更改文本输入模式，请依次按 键。

任务

功能表 3.3

您可以查看、编辑和添加要执行的任务。任务按时间顺序显示。已完成任务或未完成任务的显示方式不同。

- 1 如果条目为空，按左软键 [新建]。
- 2 输入期限日期、笔记、优先权和状态。
- 3 输入完数据后，请按左软键 [保存]。
- 4 您可以通过按左软键 [选项] 管理保存的任务笔记。

多媒体

MP3 播放机 功能表 4.1

KF305 拥有一个内置集成的 MP3 播放器。通过使用兼容耳机或通过内置听筒，您可以欣赏手机中的 MP3 音乐文件。

备注

由于扬声器的尺寸较小，在某些情况下声音可能失真，特别是在最大音量和低音部较多时。因此，建议您使用立体声耳机以便欣赏高质量的音乐。

音乐播放器支持：

- **MPEG-2 Layer III、MPEG-2.5 Layer III**：采样频率为 8KHz 至 48KHz。位速率高达 320Kbps，立体声。
- **AAC**：ADIF、ADTS 格式（采样频率为 8KHz 至 48KHz）

- **AAC+**：

V1：（位速率为 16~128Kbps）

V2：（位速率为 16~48Kbps）

（采样频率为 8KHz 至 48KHz）

备注

KF305 不支持所有已知的可变位速率文件类型。因此，您无法将文件从 MP3 格式更改为 AAC 格式。

使用**大量存储**，您可以将 MP3 文件从兼容的电脑传输到手机存储器中。

使用 USB 电缆将手机连接到电脑时，您可通过 Windows 资源管理器显示可移动磁盘。将歌曲复制到可移动磁盘后，您应执行从系统安全移除的相关操作。

备注

- ▶ 您应将 MP3 复制到“声音”/MP3 文件夹。如果您复制到其他文件夹，将无法看到 MP3 文件。
- ▶ 电脑应运行 Windows 98 SE、Windows ME、Windows 2000 或 Windows XP 操作系统。

所有歌曲（功能表 4.1.1）

您可以查看所有音乐文件。

我的播放列表（功能表 4.1.2）

您可以设置喜爱的音乐文件。

设置（功能表 4.1.3）

- ▶ **随机播放**：如果您选择开，则可以随机听音乐。
- ▶ **重复**：此功能表允许您设定播放模式：**关**、**单曲**、**全部**。

- ▶ **平衡**：此功能表可帮助您调整收听音乐时的各种环境。
- ▶ **播放机外皮**：此功能表允许您更改播放 MP3 文件时主屏幕的背景。

备注

音乐的版权受国际条约和国家版权法保护。可能需要获得许可或许可证才能复制音乐。在某些国家，国际法禁止私人复制版权所有的材料。请查看有关使用此材料的适用国家的国家立法。

多媒体

照相机

功能表 4.2

使用手机内置的相机模式，您可以拍摄人物照片。此外，您可以将照片发送给其他人，或将照片用作墙纸。

备注

使用相机时，耗电量增加。如果电池电量太低，可能无法使用**照相机**功能，请在使用前为电池充电。

• 拍照

- 要拍摄清晰的照片，请托稳相机不要晃动，按相机  键。
- 适当地调节与拍摄对象的距离（大于 50 厘米）。
- 小心保管相机，避免撞击，使用柔软的布擦拭相机镜头。
- 不要拆解或维修相机，这可能引起火灾或相机出现故障。

- 1 在待机模式下按相机  键。
- 2 对准要拍摄的对象，然后按相机  键或“确定”键。
- 3 您拍摄的照片会自动保存在**我的资料**的**图像**文件夹中。拍摄照片后，您可以通过按左软键 [选项] 选择子功能表。

在拍摄之前，您可以通过按左软键 [选项] 设定以下选项。

- ▶ **解析度**：允许您设置图像大小。(320*240/640*480/1280*1024/1600*1200)
- ▶ **质量**：允许您设置图像质量：**正常**、**精细**和**超精细**。
- ▶ **自拍计时器**：允许您选择延迟时间（关闭/3 秒/5 秒/10 秒）。手机将会在指定的时间之后拍照。
- ▶ **查看选项**：您可以设置查看模式。（完整图像/全屏）
- ▶ **保存**：您可以设置图片的保存选项。（手机/外部）

- ▶ **连拍**：允许您连续拍摄多张照片。
- ▶ **效果**：有 4 种设置可用。
(关/怀旧/黑白/反色)
- ▶ **白平衡**：允许您根据环境更改设置。(自动/日光/白炽灯/阴天/ 荧光灯/夜间模式)”
- ▶ **快门音**：您可以设置拍照时的声音。
- ▶ **恢复初始设置**：允许您重新设定设置。

备注

- ▶ 您可以使用 、 调节亮度。
- ▶ 缩放功能因照相机设定的分辨率而有所不同。例如，如果照相机分辨率设置为最高，则您将不能缩放。

- 4 您拍摄的照片会自动保存在“我的资料”的“图像”文件夹中。拍摄照片后，您可以通过按左软键 [选项] 选择子功能表。

- ▶ **新照片**：您可以拍摄新的照片。
- ▶ **设定为**：您可以将拍摄的照片设为**墙纸/图片编号**。
- ▶ **发送方式**：您可以通过信息/蓝牙/发送照片。
- ▶ **媒体匣**：您可以访问我的资料的**图像**文件夹。

录像机

功能表 4.3

您可以录制和保存视频剪辑。

- 1 要开始录制，请按“选择”键。一旦开始录制，屏幕上即会显示一个计时器。

在拍摄视频剪辑之前，您可以通过按左软键 [选项] 设定以下选项。

- ▶ **视频模式**：允许您通过**多媒体信息**或**普通**方式发送视频文件。
- ▶ **解析度**：允许您设置大小。
(176x144/320x240)

多媒体

- ▶ **质量**：允许您设置图像质量：**正常**、**精细**和**超精细**。
 - ▶ **保存**：您可以设置视频剪辑的保存选项。（手机/外部）
 - ▶ **效果**：有 4 种设置可用。（关/怀旧/黑白/反色）
 - ▶ **白平衡**：允许您根据环境更改设置。（自动/日光/荧光灯/阴天/白炽灯）
 - ▶ **恢复初始设置**：允许您重新设定设置。
- 2 按左软键 [停止]/确认键/相机热键结束录制。
 - 3 您摄制的视频剪辑会自动保存在**我的资料**的**视频**文件夹中。摄制照片后，您可以通过按左软键 [选项] 选择子功能表。
 - ▶ **新视频**：您可以录制新的视频。
 - ▶ **播放**：您可以播放录制的视频剪辑。
 - ▶ **发送方式**：您可以通过**多媒体信息/蓝牙**。

- ▶ **媒体匣**：您可以访问**我的资料**的视频文件夹。

FM 收音机

功能表 4.4

- 1 使用手机连接耳机。
- 2 预设收音机频道之后，您可以通过按（短按）相应的数字键来收听其它频道。
- 3 您可以通过按左软键 [选项] 来访问以下选项功能表。
 - ▶ **修改频道**：您可以调节频率以及更改指定频道的收音机电台。您可以使用向左/向右导航键和数字键更改频率。
 - ▶ **自动扫描**：如果将“现在自动扫描？”选择为“开”，将自动设置收音机频道。当弹出“保存此电台”信息时，如果选择“是”，将保存选定的频率。
 - ▶ **重置所有频道**：您可以删除保存的所有频道。

- ▶ **收听方式**：选择此选项，在[选项]中通过扬声器/有线耳机/蓝牙收听收音机。

- ▶ **媒体匣**：您可以访问我的文档的声音文件夹。

语音录音机 功能表 4.5

您可以录制语音备忘录。

- 1 按“确定”键开始录制。
录音开始后，屏幕上将显示“REC”字样以及录制时间，请对着麦克风说话。
- 2 如果要结束录音，请按右软键
[停止]。录制的文件会自动保存在我的文档的声音文件夹中。
- 3 如果您按左软键[选项]，则可以选择以下子功能表：
 - ▶ **新录音**：您可以开始录制新的语音备忘录。
 - ▶ **播放**：您可以播放录制的语音备忘录。
 - ▶ **发送方式**：您可以通过信息/蓝牙

信息

新信息

功能表 5.1

此功能表包含与短信（短信服务）、多媒体信息（彩信服务）、电子邮件，以及网络服务消息相关的功能。

选项

► **发送至**：发送文本信息。

1 输入收件人号码。

2 按向下导航键添加更多收件人。

3 您可以添加电话本中的电话号码。

4 按左软键 [选项]，然后在输入号码后选择**发送**。消息将自动保存在**已发送**文件夹。如果消息未发送出去，它将被保存在**发件箱**中并标记为失败状态。

插入

- **图像**：您可以插入适用于文本信息的图像。

- **歌曲**：您可以插入适用于信息的声音。

- **视频**：您可以插入适用于信息的视频。

- **符号**：您可以添加特殊字符。

- **文本模板**：可以使用手机中已设置的**文本模板**。

- **情绪图标**：您可以插入情绪图标。

- **姓名和号码**：您可以添加电话本中的手机号码或电子邮件地址。

- **新幻灯片**：您可插入幻灯片。

- **标题**：您可加标题。

- **更多**：您可插入联系人、名片、日程表、备忘录。

► **保存到草稿箱**：将信息保存到**草稿箱**。

► **设置 T9**：通过选择“开/关”，激活/停用 T9 输入模式。

► **编写语言**：选择 T9 输入模式的语言。

► **新建T9字**：选择**新建T9字**为字典添加新字。

► **清除文本**：您可以在编写短信时清除文本。

- ▶ **退出**：如果在写信息时选择**退出**，可结束写信息并返回“新信息”功能表。您写的信息不会保存。

备注

如果在创建多媒体信息时选择了图片 (200K)，则加载过程将用时至少 3 秒钟。此外，在载入期间您不能激活按键。3 秒钟后，您就可以编写多媒体信息了。

收件箱

功能表 5.2

当接收到信息时，您将会收到提示。这些信息存储在收件箱中。

如果手机显示**无空间接收 SIM 卡信息**，您仅需要从收件箱中删除 SIM 卡信息即可。

SIM 卡信息

SIM 卡信息指存储在 SIM 卡中的信息。

对于发出通知的彩信，您必须等待信息的下载和处理。

要阅读信息，请按左软键 [选项] 选择其中的一则信息。

可以使用以下选项。

- ▶ **查看**：您可以查看收到的信息。
- ▶ **删除**：您可以删除当前信息。
- ▶ **转发**：您可以将选定的信息转发给其他人。
- ▶ **回复电话**：您可以给发件人拨打电话。
- ▶ **保存号码**：您可以将发件人的电话号码保存在电话本中。
- ▶ **信息**：您可以查看与接收的信息有关的信息。
- ▶ **多项删除**：选定要删除的信息后，按“确定”，将删除您选定的所有信息。
- ▶ **删除已读**：您可以删除所有已读信息。
- ▶ **全部清除**：您可以删除所有信息。

信息

电邮信箱 菜单 功能表 5.3

当您进入此菜单时，您既可以连接您的远程邮箱检索新邮件，也可以在不登录电子邮件服务器的情况下查看之前检索到的邮件。

草稿箱 功能表 5.4

使用此功能表，您可以预设常用的彩信。此功能表显示预设的彩信列表。

可以使用以下选项。

- ▶ **查看**：您可以查看彩信。
- ▶ **修改**：修改您选定的信息。
- ▶ **删除**：删除您选定的信息。
- ▶ **信息**：您可以查看选定信息的信息。
- ▶ **多项删除**：选定要删除的信息后，按“确定”键删除您选定的所有信息。
- ▶ **全部清除**：删除文件夹中的所有信息。

发件箱 功能表 5.5

在此功能表中，您可以查看此功能表中正在发送/正在重新发送/正在等待/发送失败的列表和内容，还可以确认发送是否成功。

成功发送信息后，信息将被移到已发送信箱。

可以使用以下选项。

- ▶ **查看**：您可以查看信息。
- ▶ **删除**：您可以删除信息。
- ▶ **重新发送**：您可以重新发送选定的信息。
- ▶ **修改**：修改您选定的信息。
- ▶ **信息**：您可以查看信息的信息。
- ▶ **多项删除**：选择并删除选定的信息。
- ▶ **全部清除**：您可以删除文件夹中的所有信息。

已发送 功能表 5.6

此功能表允许您查看已发送的邮件。您可以检查邮件时间和内容。

收听语音邮件 功能表 5.7

此功能表提供访问语音邮箱的快速方法（如果网络提供语音邮箱）。

在使用此功能之前，您必须输入从网络运营商处获得的语音服务号码。

一旦选择此功能表，只需按左软键 [选择] 即可收听语音邮件。您也可以在此待机模式下长按  键来收听语音邮件。

备注

当您收到语音邮件时，您的手机会显示相应的图标并且您可以听到提示音。请与网络提供商联系，了解有关其服务的详细信息，以便对您的手机正确进行配置。

小区广播 功能表 5.8 (取决于网络和订阅)

小区广播信息是通过网络以文本信息形式向 GSM 用户发

送的。它们提供诸如天气报告、交通新闻、出租车、药店和股票行情之类的一般信息。不同类型的小区广播有不同的号码；因此您可以联系服务提供商，以便正确输入特定信息的特定号码。

在收到小区广播信息时，您会看到弹出信息，告诉您已收到信息，或者直接显示小区广播信息。

要再次查看信息或者不处于待机模式下，请按下述步骤执行操作：

阅读 (功能表 5.8.1)

- 1 收到小区广播信息时，请选择 **读取** 以查看信息，信息将显示在屏幕上。您可以通过向左或向右滚动导航键来阅读其它信息。
- 2 在其它信息到达之前，始终显示该信息。

信息

题目 (功能表 5.8.2)

(取决于网络和订阅)

您可以查看您添加的小区广播信息号码。如果您按左软键[选项]，可以编辑及删除添加的小区广播信息类别。

您可以选择活动列表中的小区广播信息号码。如果激活某小区广播信息号码，您便可以接收由该号码发出的信息。

模板

功能表 5.9

文本模板 (功能表 5.9.1)

您共有 6 种文本模板，如下所示：

- 请回我电话。
- 对不起! 我迟到了。我马上就到。
- 你现在在哪里？
- 我在路上。
- 非常紧急, 请速联系!
- 我爱你

可以使用以下选项。

- ▶ **查看**：您可以查看选定模板。
- ▶ **修改**：使用此功能撰写新的短信，或者在文本模板列表中编辑所选模板信息。
- ▶ **发送方式**
 - **信息**：使用此选项可以通过短信发送选定的模板信息。
- ▶ **删除**：删除模板。
- ▶ **新模板**：使用此选项创建新的模板。
- ▶ **全部清除**：允许您删除所有模板信息。

多媒体模板 (功能表 5.9.2)

您可以保存新的多媒体模板并编辑已保存的多媒体模板。

保存新模板后，您可以使用以下选项。

- ▶ **查看**：您可以查看多媒体模板。
- ▶ **修改**：使用此选项撰写新的信息，或者在多媒体模板

列表中编辑选定的多媒体模板信息。

- ▶ **发送**：使用此选项通过彩信发送选定的多媒体模板信息。
- ▶ **删除**：删除多媒体模板。
- ▶ **新模板**：使用此选项创建新的模板。
- ▶ **全部清除**：允许您删除所有彩信。

设置

功能表 5.0

文本信息（功能表 5.0.1）

- ▶ **信息类型**：
文本、语音、传真、传呼、X.400、电邮、ERMES
通常，信息类型设置为“文本”。您可以将文本信息转换为其它形式。请与服务提供商联系以了解是否提供此功能。
- ▶ **有效期**：此网络服务允许您设置信息在信息中心的保存时间。

- ▶ **发送报告**：如果设为“否”，您可以检查信息发送是否成功。
- ▶ **回复计费**：如果信息已发出，则它可以允许接收人回复并支付回复至您的手机所需要的费用。
- ▶ **信息中心号码**：您应输入短信中心号码。通常，短信中心号码从 SIM 卡读取。

多媒体信息（功能表 5.0.2）

- ▶ **幻灯片持续时间**：撰写信息时，每页的显示时间。
- ▶ **发送时间**：在指定时间发送信息。
- ▶ **优先权**：您可以设置您选择的信息的优先权。
- ▶ **有效期**：此网络服务允许您设置信息在信息中心的保存时间。
- ▶ **发送报告**：您可以在这些功能表中设置开/关。
 - **要求报告**：请求报告以查看信息是否成功发送至收件人。

信息

- **允许报告**：当发件人请求发送报告时，您可以决定是否要报告。
- ▶ **阅读报告**：您可以在这些功能表中设置开/关。
 - **要求报告**：请求报告以查看信息是否已被收件人读取。
 - **允许报告**：当发件人请求阅读报告时，您可以决定是否要报告。
- ▶ **自动下载**：如果选择此功能表中的“自动”，您可以从本地网络/漫游网络自动接收多媒体信息。如果选择“手动”，您仅可以在收件箱中收到通知信息，随后，您可以通过“通知”的选项功能表决定是否要接收多媒体信息。
- ▶ **网络设置文件**：如果您选择多媒体信息服务器，则可以为多媒体信息服务器设置 URL。
- ▶ **允许的信息类型**
 - **私人**：个人信息。

- **广告**：商业信息。
- **资料**：知识性信息。

电邮（功能表 5.0.3）

您可以配置设置以接收和传输电子邮件。

电子邮件账户（功能表 5.0.3.1）

您可以创建或配置电子邮件帐户，包括电子邮件服务器和用户 ID。

接入点（功能表 5.0.3.2）

此菜单将显示接入点列表。您可以使用“选项”菜单新建、删除或编辑网络设定。但是根据国家/地区不同，您可能无法删除或编辑默认配置。

检索间隔（功能表 5.0.3.3）

您可以配置检索间隔以从邮件接收服务器中自动检索电子邮件。请注意，使用检索间隔功能时可能会产生附加费用。

签名 (功能表 5.0.3.4)

您可以配置签名文本以附加在电子邮件的末尾。在发送电子邮件时，配置的签名文本将自动或手动附加在电子邮件的末尾。

语音邮件中心 (功能表 5.0.4)

如果您的网络服务提供商支持此功能，则可接收语音邮件。当新语音邮件到达时，屏幕上显示相应符号。请与您的网络服务提供商联系，了解有关其服务的详细信息，以便对您的手机进行相应配置。

服务信息 (功能表 5.9.5)

您可以通过设置选项来确定是否接收信息。

小区广播信息 (功能表 5.9.6)

► 接收

- 开：如果选择此功能表，您的手机将会接收小区广播信息。
- 关：如果选择此功能表，您的手机将不再接收小区广播信息。

► 提示

- 开：当您收到小区广播信息时，您的手机将发出蜂鸣音。
- 关：当您收到小区广播信息时，您的手机不会发出蜂鸣音。

► 语言

通过按“选择”键，您可以选择所需语言。随后，小区广播信息将以您选定的语言显示。

我的文档

图像

功能表 6.1

“图像”文件夹由用于从互联网下载图片的嵌入式链接和默认图像组成。要查看图像详细信息，请按选择键。

选定一个文件后，按左软键[选项]将出现以下选项：

- ▶ **查看**：您可以查看选定的文件。
- ▶ **删除**：删除选定的文件。
- ▶ **设定为**
 - **墙纸**：可将当前选定的图像设定为**墙纸**。
 - **图片编号**：可将当前选定的图像设定为**图片编号**。
- ▶ **发送方式**：将选定的文件通过**信息**、**蓝牙**发送到其它设备。
- ▶ **文件**
 - **重命名**：更改选定文件的文件名。您不能更改文件的扩展名。

- **移动至文件夹**：将选定文件移至文件夹。
- **移至外部存储器/移动至手机内存**：将选定的文件移动至手机中的外部存储器（如果插入）或多媒体存储器。
- **复制到外部存储器/复制至手机内存**：将选定的文件复制到手机中的外部存储器或多媒体存储器。
- **资料**：显示选定文件的资料。
- ▶ **通过蓝牙打印**：大多数您以相机模式拍摄的照片以及通过 WAP 下载的图片都可以通过蓝牙传送到打印机。
- ▶ **幻灯片**：您可以查看存储的幻灯片文件。
- ▶ **新建文件夹**：可以创建新的文件夹。
- ▶ **多项删除**：您可以删除选定的多个文件。

- ▶ **全部清除**：删除列表中的所有文件。
- ▶ **排列顺序**：您可以按日期、类型和名称排列文件。
- ▶ **缩略图视图/列表视图**：允许您设置视图类型。

声音

功能表 6.2

选定一个文件后，按左软键[选项]将出现以下选项：

- ▶ **播放**：您可以播放选定的文件。
- ▶ **删除**：删除选定的文件。
- ▶ **设定为**：可将当前选定的声音设置为铃声/铃声编号/信息提示音。
- ▶ **发送方式**：将选定的文件通过信息、蓝牙发送到其它设备。
- ▶ **文件**
 - **修改图像**：您可以编辑选定的图像。
 - **重命名**：更改选定文件的文件名。”

- **移动至文件夹**：将选定文件移至文件夹。
- **移至外部存储器/移动至手机内存**：将选定的文件移动至手机中的外部存储器（如果插入）或多媒体存储器。
- **复制到外部存储器/复制至手机内存**：将选定的文件复制至手机中的外部存储器（如果插入）或多媒体存储器。
- **资料**：显示选定文件的资料。
- ▶ **新建文件夹**：可以创建新的文件夹。
- ▶ **多项删除**：您可以删除选定的多个文件。
- ▶ **全部清除**：删除列表中的所有文件。
- ▶ **排列顺序**：您可以按日期、类型和名称排列文件。

我的文档

视频

功能表 6.3

显示多媒体存储器中“我的媒体”/“视频”内的 3GP、3G2 文件列表。仅支持 .3gp 文件，此类文件格式为 MPEG4、h.263 视频编码和 AMR 音频编码。

在此，您可以管理或发送保存的视频剪辑。选定一个文件后，按左软键 [选项] 将出现以下选项：

- ▶ **打开**：您可以打开选定的文件。
- ▶ **删除**：删除选定的文件。
- ▶ **发送方式**：将选定的文件通过**信息**、**蓝牙**发送到其它设备。
- ▶ **文件**
 - **重命名**：更改选定文件的文件名。最长为 59 个字符。

警告！

您不能使用以下字符：\ / : * ?
< > |

- **移动至文件夹**：将选定文件移至文件夹。
- **移至外部存储器/移动至手机内存**：将选定的文件移动至手机中的外部存储器（如果插入）或多媒体存储器。
- **复制到外部存储器/复制至手机内存**：将选定的文件复制至手机中的外部存储器（如果插入）或多媒体存储器。
- **资料**：显示选定文件的资料。
- ▶ **新建文件夹**：可以创建新的文件夹。
- ▶ **多项删除**：您可以删除选定的多个文件。
- ▶ **全部清除**：删除列表中的所有文件。
- ▶ **排列顺序**：您可以按**日期**、**类型**和**名称**排列文件。

文件

功能表 6.4

从文档菜单中，您可以查看所有文档文件。

其它

功能表 6.5

除图像、声音、视频以外的其它文件都保存在此文件夹中。

情景模式

在“情景模式”中，您可以调节和自定义手机铃声、提示音和音量。

有五种预设的情景模式：**普通、静音、仅振动、户外和耳机。**

每种情景模式均可以进行更改。按左软键 [功能表]，然后使用上/下导航键选择情景模式。

启动 (功能表 7.X.1)

- 1 屏幕上显示情景模式的列表。
- 2 在“情景模式”列表中，滚动到要启动的情景模式，然后按左软键 [选择] 或“选择”键。
- 3 然后，选择**启动**。

个人化 (功能表 7.X.2)

在“情景模式”列表中，滚动到所需的情景模式。按左软键或“选择”键后，选择**个人化**。

情景模式设置选项打开。按需要设置该选项。

- ▶ **来电提示类型**：设置来电提示类型。
- ▶ **铃声**：从列表中选择所需的铃声。
- ▶ **响铃音量**：设置铃声的音量。
- ▶ **短信提示类型**：设置信息的提示类型。
- ▶ **信息提示音**：选择信息的提示音。
- ▶ **信息音量**：设置信息提示的音量。
- ▶ **按键音**：选择所需的按键音。
- ▶ **按键音量**：设置按键音的音量。

- ▶ **翻盖音**：允许设置翻盖音，以适应环境。
- ▶ **效果音音量**：设置效果音音量。
- ▶ **开/关机音量**：设置开机/关机时的铃音音量。

电话本

搜索

功能表 8.1

- 1 选择**搜索**并输入您要搜索的姓名。

备注

- ▶ 您还可以通过在待机模式下按右软键 [电话本] 访问电话本。
- ▶ 通过输入姓名的第一个字母可以进行即时搜索。

- 2 找到所需的联系人之后，您可以按发送键拨打该号码。
- 3 如果要编辑、删除或复制条目，请选择左软键 [选项]。

屏幕上显示以下功能表。

- ▶ **查看**：您可以查看每个条目的详细信息。
- ▶ **修改**：您可以编辑选定的联系人。

- ▶ **新信息**：找到您需要的号码后，则可以向选定的号码发送**短信/多媒体信息**。
- ▶ **发送方式**：您可以通过**文本信息/多媒体信息/蓝牙**发送电话本数据。
- ▶ **删除**：可删除一个条目。
- ▶ **新联系人**：选定保存位置（SIM 卡/手机）后，您可以将其添加到电话本。
- ▶ **添加到快速拨号**：允许您对选定号码进行设置，以添加到快速拨号列表。
- ▶ **多项删除**：允许您删除选定的多个文件。
- ▶ **复制到 SIM 卡/复制到手机**：您可以将条目从手机复制到 SIM 卡或从 SIM 卡复制到手机。
- ▶ **主号码**：如果一个联系人有多个号码，请选择其中您经常使用的一个。主要号码将被首先显示。

新联系人

功能表 8.2

您可以添加或保存新联系人。您可以输入新联系人的姓名、不同电话号码和电子邮件地址。您也可以将联系人分配给群组，包括图片；为联系人分配特定铃声以及输入周年纪念。根据内存使用情况，您可以输入和管理联系人通讯信息。

备注

- ▶ 如果您在 SIM 卡的 SIM 卡地址中添加或保存联系人，那么联系人条目字段会有所不同。
- ▶ 最多可存储的姓名和号码长度取决于 SIM 卡的类型。

快速拨号

功能表 8.3

使用此功能表，您可以管理快速拨号。

您可以为姓名列表条目指定从  到  的任意按键。可按此按键直接呼叫。

- 1 在待机模式中，通过按右软键 [电话本]，首先打开电话本。
- 2 滚动到**快速拨号**，然后按左软键 [确定]。
- 3 如果您要添加快速拨号，请通过按左软键 [分配] 选择 <空条目>。然后，您可以通过“电话本”搜索姓名。
- 4 在指定快速拨号号码后，您可以更改或删除条目。您也可以呼叫此号码或向此号码发送信息。

电话本

群组

功能表 8.4

您可以列出每组的成员。在手机内存中，有 7 个默认群组：**家人、朋友、同事、重要人士、群组 1、群组 2 和群组 3**。

按左软键 [选项]，选择要管理的群组名称。屏幕上显示以下子功能表。

- ▶ **查看成员**：显示选定的群组成员。
- ▶ **群组铃声**：允许您为群组成员的来电指定铃音。
- ▶ **群组图标**：允许您按“群组”选择图标。
- ▶ **添加成员**：您可以添加组成员。
- ▶ **删除成员**：您可以从组成员列表中删除成员。但是，该成员的名字和号码仍将保留在电话本中。

- ▶ **重命名**：您可以更改组名。
- ▶ **全部重新设置**：允许您重设所有的联系人。

全部复制

功能表 8.5

您可以在 SIM 卡存储器和手机内存之间复制条目。

- ▶ **SIM 卡转到手机**：您可以将条目从 SIM 卡复制到内存存储器中。
- ▶ **手机转到 SIM 卡**：您可以将条目从内存存储器复制到 SIM 卡。

全部删除

功能表 8.6

您可以删除 SIM 卡存储器或手机内存中的所有条目。此功能要求提供安全密码。

设置

功能表 8.7

查看选项 (功能表 8.7.1)

您可以设置联系人显示选项。

- ▶ **只显示姓名**：设置联系人信息只显示姓名。
- ▶ **姓名和号码**：设置联系人信息显示姓名和号码。
- ▶ **附图片**：设置联系人信息带图片显示。

备份电话簿 (功能表 8.7.2)

(视外部存储器情况而定)

您可以将电话本数据保存到外部存储器的其它文件夹中。

恢复电话簿 (功能表 8.7.3)

(视外部存储器情况而定)

您可以将“我的资料”->“外部存储器”->“其它”中的Vcard 格式 (*.vcf) 保存到电话本中。

资料

功能表 8.8

服务拨号号码 (功能表 8.8.1)

您可以查看由您的服务提供商分配的服务拨号号码 (SDN) (如果 SIM 卡支持)。

本机号码 (功能表 8.8.2)

(视 SIM 卡情况而定)

您可以在 SIM 卡中保存和检查您自己的号码。

我的名片 (功能表 8.8.3)

此选项允许您创建自己的名片，包含姓名、号码以及电子邮件。要创建新名片，请按左软键 [新建] 并将信息输入字段中。如果您要编辑、删除或发送名片，请选择左软键 [选项]。

工具

闹钟

功能表 9.1

您可以将闹钟设为在指定时间响铃。

- 1 如果没有闹钟，请按左软键 [新建]，添加新的闹钟。
- 2 使用选项设置或取消闹钟，指定是否开启闹钟或者选择闹钟时间。
- 3 选择重复期间：一次、每天、周一至五、周一至六、周六至日。
- 4 使用**选项** → **声音**选择闹钟铃声。您可以按下上/下导航键选择所需的声音，然后按下左软键 [选择]。
- 5 编辑标题，然后按下左软键 [保存]。

计算器

功能表 9.2

计算器模式允许您执行基本的数学运算，例如加法、减法、乘法和除法；以及一些科学计算函数。

- 1 您可以使用数字键输入数字，并使用导航键输入运算符。

备注

- ▶ 要清除错误或清空显示屏，请使用 **C** 键。
- ▶ 要输入小数点，请按 **.** 键。
- ▶ 要输入圆括号，请按 **()** 键。

- 2 要计算结果，请按“确定”键。
- 3 计算之后，按右软键返回初始状态。

计时表

功能表 9.3

可用此功能表记录事件所用时间。

- 1 按左软键 [开始] 计时，按右软键 [记录] 记录时间。
- 2 按左软键 [停止] 确定记录时间。
- 3 按右软键 [重新设定] 复位。

单位对换器

功能表 9.4

此功能用于将任一度量值转换成所需的单位。共有 7 种单位可以转换：货币、面积、长度、重量、温度、体积/容量和速度。

世界时钟

功能表 9.5

世界时钟功能提供有关世界各地主要城市的时间信息。

您可以通过按左软键 [选项] 来选择以下选项功能表。

- ▶ **更改时区**：通过选择城市，您可以更改时区。
- ▶ **新城市**：您可以添加所需城市。
- ▶ **日光节能**：您可以适用日光节能时间。

SIM 卡服务

功能表 9.7

（视 SIM 卡情况而定）

通过“SIM 卡服务”功能表，您的手机能够满足将来的使用需要，并能够支持服务提供商所提供的额外服务。有关详细信息，请联系您的服务提供商。

浏览器

您可以访问不同的 WAP（无线应用协议）服务，如银行业务、新闻、天气报告和航班信息等。这些服务专为手机应用而设计，由 WAP 服务提供商负责进行维护。

向您的网络运营商或希望使用其服务的服务提供商咨询，了解 WAP 服务的提供、定价和收费情况。

服务提供商将向您提供有关如何使用其服务的说明。

一旦建立连接，屏幕上即显示主页。主页内容视服务提供商而定。要在任何时间退出浏览器，按  键。手机将返回待机屏幕。

使用 WAP 浏览器导航

您可以使用手机按键或 WAP 浏览器功能表上网。

使用手机按键

上网期间，手机按键的功能与手机模式中不同。

图标	说明
	将内容区域滚动一行
	返回上一页
	选择选项并确认操作

使用 WAP 浏览器功能表

当通过移动网络上网时，有多个功能表选项可供使用。

备注

视浏览器版本而定，WAP 浏览器功能表可能有所不同。

主页

功能表 *.1

连接到主页。主页是在已启动的网络设置中定义的站点。如果您未在已启动的网络设置中定义该站点，则将由服务提供商定义。

书签

功能表 *.2

此功能表使您可以存储喜爱网页的 URL 以便以后访问。

创建书签

- 1 按左软键 [选项]。
- 2 选择**新建书签**，然后按“选择”键。
- 3 输入相应的名称和 URL 后，按“选择”键。

选择需要的书签后，将出现以下选项。

- ▶ **连接**：连接到选定的书签。
- ▶ **查看**：您可以查看选定的书签。
- ▶ **修改**：您可以编辑选定的书签。

- ▶ **删除**：可以删除所选的书签。
- ▶ **新书签**：选择此选项创建新书签。
- ▶ **新建文件夹**：选择此选项创建新的文件夹。
- ▶ **移动**：您可以将选定的书签移动到子文件夹。
- ▶ **复制**：您可以复制选定的书签。
- ▶ **网址发送方式**：您可以通过信息发送选定的书签。
- ▶ **多项删除**：允许您选择并删除选定的书签。
- ▶ **全部清除**：删除所有书签。

输入地址

功能表 *.3

您可以直接连接到所要的站点。输入特定的 URL 后，按左软键 [选项] 然后选择**连接**。

浏览器

浏览记录

功能表 *.4

此功能表显示最近浏览的页面。

- ▶ **查看**：您可以查看选定的网络设置。
- ▶ **新设置文件**：您可以添加新的网络设置。

已保存的页面

功能表 *.5

本手机可将显示屏上的页面保存为脱机文件。

提供模式（功能表 *.6.2）

当页面大于手机屏幕时，您可以调整 URL 页面的大小。

设置

功能表 *.6

您可以设置与互联网服务相关的网络设置、缓存、和安全设置。

缓存（功能表 *.6.3）

您已访问的信息或服务保存在手机的缓存中。

备注

缓存是一种缓冲存储器，可以暂时保存数据。

网络设置文件（功能表 *.6.1）

网络设置是用于连接 Internet 的网络信息。

手机内存中已存有某些运营商的默认网络设置。不能重命名默认的网络设置。

每个网络设置均有子功能表，如下所示：

- ▶ **启动**：启动所选网络设置。

Cookies（功能表 *.6.4）

启用 Cookie 将允许您保存发自服务器的 Cookie。禁用此功能将阻止 cookie 存储到您的手机中。

保安证书（功能表 *.6.5）

您可以查看存储在手机中的个人证书列表。

显示图像（功能表 *.6.6）

您可以在 WAP 浏览过程中选择显示或隐藏图像。

Java 脚本（功能表 *.6.7）

选择开启或关闭 Java 脚本。

已用内存（功能表 *.6.8）

可选择手机或外部存储器。

资料 功能表 *.7

您可以查看 WAP 浏览器版本的信息。

连接性

蓝牙

功能表 0.1

使用蓝牙，您可以与近距离的可兼容移动设备、外围设备和计算机直接通信，而无需任何连线。

本款手机支持内置蓝牙连接，可连接蓝牙、兼容的蓝牙耳机以及计算机应用程序等。

备注

- ▶ 如果您通过蓝牙使用 LG PC Sync，则只可以交换电话本中的数据。
- ▶ 当您从其它蓝牙装置接收数据时，手机要求确认。确认传输后，文件将被复制到您的手机上。

备注

- ▶ 根据其类型，文件将被保存在以下文件夹：
 - 视频 (.3gp, mp4)：视频文件夹
 - 图像 (.bmp, gif, jpg, png)：图像文件夹
 - 声音 (.amr, wav, aac)：声音文件夹
 - MP3 (.mp3)：声音/MP3 文件夹
 - 其它文件 (.txt, html)：其它文件夹

▶ 开/关蓝牙

您可以启动或取消蓝牙设备功能。

▶ 装置列表

您可以查看 KF305 已配套的所有设备。如果输入已配套设备，便可以访问以下选项：

- **连接/切断连接**：与耳机或立体声耳机配套后，您便可以与这些设备连接。随后，您便可以使用这些设备了。

- **新增**：允许您搜索新的蓝牙设备，然后将其添加到手机的配套设备列表。当您选择“新建”时，手机会搜索一定范围内的蓝牙设备。一旦您要与其配套的设备出现在列表中，请按右软键[停止]。滚动到所需设备，然后按左软键[确定]。随后，系统将要求您输入密码。

密码可以是您希望使用的任何代码（两个设备必须使用同一密码），也可以是您要尝试与其配套的设备的制造商预定义的密码。请检查您要配套的设备的“用户手册”，以查看是否存在预定义的密码。

- **设置为已认可/设置为未认可**：允许您在每个蓝牙设备间设置已授权的连接。例如，如果您的手机经常使用蓝牙耳机，将连接设置为“已授权”即意味着每次手机开机时，都将自动连接蓝牙耳机。

- **全部服务**：允许查看蓝牙设备支持的所有服务。

- **删除**：您可以删除某个配套的蓝牙设备。

- **重命名**：允许您更改已配套蓝牙设备的名称，以及其在手机中的显示方式。

- **全部清除**：允许删除所有配套的蓝牙设备。

► 蓝牙设置

- **本机能见度**：指其它蓝牙设备是否可以搜索到您的手机。

- **我的手机名称**：您可以设置蓝牙设备的名称。默认名称为 LG KF305。

连接性

- **我的地址**：您可以查看您的蓝牙设备的地址。
- **主储存位置**

网络

功能表 0.2

您可以选择自动注册或手动注册的网络。

网络选择（功能表 0.2.1）

通常，网络选择设为**自动**。

- ▶ **自动**：如果您选择**自动**模式，手机将自动搜索并选择一个网络。一旦选择**自动**，无论手机是开机还是关机，都将被设定为**自动**。
- ▶ **手动**：手机将查找可用网络列表并显示它们。随后，您可以选择要使用的网络（该网络应与您的本地网络运营商之间具有漫游协议）。如果手机无法访问所选的网络，则您可以选择另一网络。

- ▶ **首选网络**：您可以设置首选网络列表，手机将首先尝试注册该网络，然后尝试注册任何其它网络。此列表在手机已知网络的预定义列表中设置。

GPRS 连接（功能表 0.2.2）

您可以根据不同的情形设定 GPRS 服务。

▶ 开机

如果选择此功能表，则在开机时，手机会自动注册到 GPRS 网络。启动 WAP 或计算机拨号应用程序，在手机和网络间建立连接，即可进行数据传输。结束该应用程序后，GPRS 连接即会断开，但 GPRS 网络的注册信息将会保持。

▶ 需要时

如果选择此功能表，则会在连接 WAP 或应用程序服务时建立起 GPRS 连接，并在断开 WAP 或应用程序连接后结束。

接入点（功能表 0.2.3）

- ▶ **查看**：您可以查看选定的网络设置。
- ▶ **修改**：您可以修改选定的网络设置。
- ▶ **新接入点**
 - **名称**：您可以键入网络名称。
 - **载体**：您可以设定载体数据服务。数据/GPRS。

<数据设定>

仅当选择“数据设定”作为载体服务时出现。

- **拨打号码**：输入要拨打的电话号码以访问 WAP 网关。
- **用户编号**：用于识别拨号服务器（不是 WAP 网关）的用户。
- **密码**：拨号服务器（不是 WAP 网关）要求提供的识别您身份的密码。
- **呼叫类型**：选择数据电话类型，模拟或数字 (ISDN)。

- **空闲时限**：您需要输入超时期间。

输入超时期间后，如果未输入或传输任何数据，WAP 导航服务将不可用。

- **主服务器**：输入您访问的首选 DNS 服务器的 IP 地址
- **副服务器**：输入您访问的副 DNS 服务器的 IP 地址。

该服务设置仅在选择 GPRS 作为载体服务时可用。

- **接入点**：输入 GPRS 的接入点。
- **用户名**：用于接入点服务器识别用户。
- **密码**：接入点服务器要求提供的密码。
- **主服务器**：输入您访问的首选 DNS 服务器的 IP 地址
- **副服务器**：输入您访问的副 DNS 服务器的 IP 地址。

连接性

USB 连接模式 功能表 0.3

您可以选择一种模式：数据服务和 USB 大量存储。

► 批量储存

您可以通过三种方式，使用数据线将手机连接到计算机以作为 USB 存储设备。

- 1 显示待机屏时，将手机连接到计算机。
- 2 执行操作或功能表功能时连接手机，然后转到待机屏。
- 3 执行操作或功能表功能时连接手机，然后选择 **USB 批量储存** 功能表。

结束使用 microSD 卡内存时，单击“退出”并执行以下步骤。

警告！

移除数据线之前，请务必先单击“退出”。否则，将无法保证传输数据的完整性。

- 1 单击通知区域。[拔出或弹出硬件]
- 2 选择 **USB 批量储存设备**，单击**停止**。此时将出现以下信息：“现在您可以从系统安全移除 **USB 批量储存设备**”。

- 3 然后，请移除数据线。

► 数据服务

选择**数据服务**功能表以使用 LG 手机同步程序。

设置

日期和时间

功能表 #.1

您可以设置与日期和时间相关的功能。

设定日期（功能表 #.1.1）

您可以输入当前日期。

日期格式（功能表 #.1.2）

您可以设定日期格式，如
YYYY/MM/DD、DD/MM/
YYYY、MM/DD/YYYY。
（D：日/M：月/Y：年）

设定时间（功能表 #.1.3）

您可以输入当前时间。

时间格式（功能表 #.1.4）

您可以在 24 小时制和 12 小时制之间设定时间格式。

自动更新（功能表 #.1.5）

选择开，手机将自动更新日期和时间。

语言

功能表 #.2

您可以更改手机中显示文本的语言。此更改还将影响语言输入模式。

显示

功能表 #.3

墙纸（功能表 #.3.1）

您可以在待机模式下选择背景图片。

时钟（功能表 #.3.2）

您可以选择要在内部/外部手机屏幕上显示的时钟格式。

背景灯计时器（功能表 #.3.3）

您可以设定屏幕显示的持续亮灯时间。

亮度（功能表 #.3.4）

您可以设定屏幕的亮度。

设置

主屏快捷键 (功能表 #3.5)

您可以设定 4 个导航键的功能以便在待机模式下使用快捷键。

字体大小 (功能表 #3.6)

您可以更改手机中显示文本的字体大小。

主题 (功能表 #3.7)

您可以设置要在主屏上显示的屏幕主题。

菜单样式 (功能表 #3.8)

手机提供了**格式视图**和**列表视图**功能表主题。通过滚动和按左软键 [确定] 来设定功能表样式。

正在拨号 (功能表 #3.9)

您可以设定在拨打电话时主屏上所显示数字的字体样式/字体大小。

待机文本 (功能表 #3.0)

如果选择**开**，您可以修改待机模式下显示的文本。

网络名称 (功能表 #3.*)

如果已激活此功能，网络名称将显示在屏幕上。

快捷键 功能表 #. 4

如果选择“**开**”，您可以修改待机模式下显示的文本。

呼叫 功能表 #.5

您可以通过在**设置**功能表中按左软键 [选择] 设定与呼叫相关的功能表。

呼叫转移 (功能表 #5.1)

呼叫转接服务允许您将接收到的语音电话、传真电话和数据电话转接到其它号码。有关详细信息，请联系您的服务提供商。

- ▶ **所有语音来电**：无条件地转接所有语音呼叫。
- ▶ **无法接听时**：当手机正在使用时转接语音呼叫。
- ▶ **无人接听时**：转接未应答的语音呼叫。
- ▶ **无法接通时**：当手机关机或处于网络覆盖范围之外时转接语音呼叫。
- ▶ **所有数据通话**：无条件地转接具有 PC 连接的号码。
- ▶ **所有传真**：无条件地转接具有传真连接的号码。
- ▶ **全部取消**：取消所有呼叫转接设置。

子功能表

“呼叫转接”功能表包含以下子功能表。

- **启动**：启动相应服务。
- 语音信箱**：转发到短信中心。此功能不会显示在**转接所有数据来电和转接所有传真来电**功能表下。
- 其它号码**：输入要转接到的号码。

常用号码：您可以查看五个最近的转接号码。

- **取消**：停用相应服务。
- **查看状态**：查看相应服务的状态。

呼叫阻截（功能表 #5.2）

“呼叫限制”服务阻止手机拨打或接听特定类别的电话。此功能要求呼叫限制密码。您可以看到以下子功能表。

- ▶ **所有呼出电话**
所有拨出电话的限制服务。
- ▶ **国际**
所有国际拨电的限制服务。
- ▶ **国际漫游时拨打电话**
漫游时所有拨出国际电话的限制服务
- ▶ **所有来电**
所有来电的限制服务。
- ▶ **国际漫游时来电**
所有国际漫游时来电的限制服务。

设置

▶ 取消所有阻截

您可以取消所有呼叫限制。

▶ 更换密码

您可以更改呼叫限制服务的密码。

子功能表：

- 启动

允许请求网络以后用呼叫限制。

- 取消

关闭选定的呼叫限制。

- 查看状态

查看呼叫是否被限制的状态。

固定拨号号码（功能表 #5.3） （视 SIM 卡情况而定）

- ▶ 您可以限制呼叫选定的电话号码。号码受 PIN2 码保护。

▶ 开

您可以限制呼叫选定的电话号码。

▶ 关

您可以取消固定拨号功能。

▶ 号码列表

您可以查看保存为固定拨号的号码列表。

接听模式（功能表 #5.4）

- ▶ **翻盖接听**：如果选择此功能表，那么您可以在打开翻盖时接听来电。
- ▶ **按任何键**：如果选择此功能表，您可以按除结束键和右软键以外的任意键接听来电。
- ▶ **仅发送键**：如果选择此功能表，您只有按发送键才可以接听电话。

发送本机号码（功能表 #5.5） （视网络和订阅情况而定）

- ▶ **网络设定**：如果选择此选项，您可以根据两条服务线路（如线路 1 和线路 2）发送手机号码。

- ▶ **开**：您可以将您的电话号码发送至其他方。您的电话号码将显示在接收手机上。
- ▶ **关**：您的电话号码将不显示。

呼叫等待（功能表 #.5.6） （视网络情况而定）

- ▶ **启动**：如果您选择**启动**，您可以接受等待（接收）的呼叫。
- ▶ **取消**：如果您选择**取消**，您无法识别等待（接收）的呼叫。
- ▶ **查看状态**：显示呼叫等待的状态。

道歉讯息（功能表 #.5.7）

您可以在来电时并拒绝时用”道歉讯息”发送解释为什么在未有接入来电。

分钟提示（功能表 #.5.8）

- ▶ 如果选择开，在通话过程中，手机每分钟会发出蜂鸣声，您可以据此了解通话持续时间。

自动重拨（功能表 #.5.9）

- ▶ **开**：如果已启动此功能，那么，连接呼叫失败时，手机将自动尝试重拨。
- ▶ **关**：如果无法连接原始呼叫，手机不会尝试重拨。

线路选择（功能表 #.5.0）

（需网络商及相关服务支援）
根据您的 SIM 卡是否支持 2 线路服务，您可以选择所需的线路。

发送双音多频（功能表 #.5.*）

您可以在通话过程中发送按键音，以控制语音邮箱或其它自动手机服务。

保安

功能表 #.6

PIN 码要求（功能表 #.6.1）

在此功能表中，您可以将手机设定为开机时要求输入 SIM 卡的 PIN 码。

如果启动此功能，手机将要求您输入 PIN 码。

设置

- 1 保安设置功能表中选择“需要 PIN 码”，然后按左软键[选择]。
- 2 设定开/关。
- 3 如果要更改设置，您需要在开机时输入 PIN 码。
- 4 如果 PIN 码输入错误次数超过 3 次，手机将被锁定。如果 PIN 码被锁，您需要输入 PUK 码。
- 5 可输入 PUK 码的最多次数为 10 次。如果 PUK 码输入错误次数超过 10 次，将无法解锁手机。您需要联系您的服务提供商。

手机锁 (功能表 #.6.2)

您可以使用安全密码来防止他人擅自使用手机。如果您将手机锁设置为**开机**，则无论何时，只要您打开手机，手机都将请求您输入安全密码。

如果您将手机锁设置为**SIM 卡更换时**，那么，只有在您更换 SIM 卡时才请求您输入安全密码。

防盗手机追踪器

(功能表 #.6.3)

本手机的 ATMT 功能为您提供跟踪系统，用于跟踪丢失或放错位置的手机。一旦未经授权的用户使用您的手机，手机便会生成一条短信并将其发送到预定义号码。手机将生成的短信发送到预定义号码时，不会通知该未经授权用户。

更改密码 (功能表 #.6.4)

PIN 码是 Personal Identification Number 的缩写，用于限制未经授权人员使用手机。

您可以更改访问密码：**安全密码、PIN2 码**。

- 1 如果要更改**安全密码/PIN2 码**，请输入您的初始码，然后按 [确定] 键。
- 2 输入新的安全密码/PIN2 码并验证。

航行模式

功能表 #.7

如果您在飞机上或在阻止了无线网络的处所，此功能允许您使用不需使用无线网络的电话功能。

如果您启用了飞行模式，该图标将代替网络信号图标显示在屏幕上。

- ▶ **开**：您无法拨打（或接听）任何电话，包括紧急电话，或使用需要网络信号的其它功能。
- ▶ **关**：您可以关闭飞行模式，然后重启手机以访问网络。

省电模式

功能表 #.8

选择开启或关闭初始的省电模式。

重新设置

功能表 #.9

您可以初始化所有出厂默认设置。要启动此功能，您需要**安全密码**。

储存器状态

功能表 #.0

您可以检查手机、SIM 卡和外部存储器（如已插入）的可用空间及内存使用情况。

配件

有多种配件适用于您的手机。您可以根据个人的通信要求选择这些配件。

标准电池



免提式耳机



旅行适配器

此充电器允许您在离开家或公司的时候可以对电池进行充电。



备注

- ▶ 务必使用原装LG 配件。
- ▶ 否则可能导致保修失效。
- ▶ 不同地区提供的配件可能不同；如需要进一步查询有关情况，请与我们的地区服务公司或代理联系。

技术参数

普通

产品名称：KF305

系统：E-GSM 900 / DCS 1800 / PCS 1900

外部环境

最高温度：+55°C（放电）
+45°C（充电）

最低温度：-10°C

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri Band Terminal Equipment

Model Name

KF305

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1
EN 300 328 V 1.7.1
EN 60950-1: 2001
EN 50360:2001/EN62209-1:2006
EN 301 511 V9.0.2

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, Fax : +31 - 36 - 547 - 8794
e-mail : jacob@lge.com

Name

Issued Date

Seung Hyoun, Ji / Director

10. Nov. 2009

Signature of representative



Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.



KF305 User Guide

Contents

Introduction	6	Menu Tree.....	32
For Your Safety	7	Games & Apps	34
Guidelines for safe and efficient use.....	8	Games	34
KF305 features.....	13	Applications	34
Parts of the phone	13	Network profiles	34
Display Information	17	Call history	35
On-Screen Icons.....	17	All calls	35
Getting started	19	Missed calls	35
Installing the SIM card and the handset battery	19	Dialled calls.....	35
Charging the Battery.....	20	Received calls	35
Disconnecting the adapter	22	Call duration.....	35
How to use a microSD memory card	22	Call costs	35
General Functions	25	Data information.....	35
Making and answering calls.....	25	Organiser	36
Entering text.....	26	Calendar	36
Selecting functions and options .	28	Memo	36
In-call menu	29	To do	36
		Multimedia	37
		MP3 player.....	37
		All songs.....	37
		My playlist.....	37
		Settings	37

Camera.....	38
Video camera	39
FM Radio	40
Voice recorder	40
Messaging.....	41
New message	41
Message.....	41
E-mail.....	42
E-mail box.....	44
Drafts.....	44
Outbox	44
Sent.....	44
Listen to voicemail.....	44
Info message.....	45
Templates	45
Text templates.....	45
Multimedia templates	45
Settings.....	45
Text message.....	45
Multimedia message	46
E-mail.....	47
Voicemail number	48
Service message.....	48
Info message	48

My stuff	49
Images.....	49
Sounds	50
Videos.....	51
Documents.....	52
Others.....	52
Profiles	53
Activate	53
Personailse	53
Contacts	54
Search	54
New contact.....	55
Speed dials	55
Groups.....	55
Copy all.....	55
Delete all.....	55
Settings.....	55
View options	55
Information.....	56
Service dial number.....	56
Own number	56
My business card	56

Contents

Tools	57	Connectivity.....	61
Alarm clock.....	57	Bluetooth	61
Calculator.....	57	Network	63
Stopwatch.....	57	Network selection.....	63
Unit converter.....	57	GPRS attach.....	64
World clock	57	Access Point	64
SIM services.....	57	USB connection mode.....	65
Browser	58	Settings	66
Home.....	58	Date & Time	66
Bookmarks.....	58	Languages	66
Enter address.....	59	Display.....	66
History	59	Wallpaper	66
Saved pages	59	Clock	66
Settings.....	59	Backlight timer	66
Network profiles	59	Brightness	66
Rendering mode.....	59	Home screen shortcut	66
Cache.....	59	Font size	66
Cookies	59	Theme.....	66
Security certificates	59	Menu style.....	66
Show image.....	60	Dialling	66
Java script	60	Standby text.....	67
Memory in use	60	Network name.....	67
Information.....	60	Shortcut	67

Call	67
Call divert.....	67
Call barring	67
Fixed dial number.....	67
Answer mode.....	68
Excuse message	68
Minute minder	68
Auto redial	68
Select line	69
Send DTMF tones.....	69
Security.....	69
PIN code request.....	69
Phone lock.....	69
Anti Theft Mobile Tracker	70
Change codes	70
Flight mode	70
Power save	70
Reset	70
Memory status	70
Accessories	71
Technical data	72

Introduction

Congratulations on your purchase of the advanced and compact KF305 mobile phone, designed to operate with the latest digital mobile communication technology.

This user's guide contains important information on the use and operation of this phone. Please read all the information carefully for optimal performance and to prevent any damage or misuse of the phone. Any changes or modifications not expressly approved in this user's guide could void your warranty for this equipment.



For Your Safety

WARNING !

- Mobile Phones must be switched off at all times in aircrafts.
- Do not hold the phone in your hand while driving.
- Do not use your phone near petrol stations, fuel depots, chemical plants or blasting operations.
- For your safety, use ONLY specified ORIGINAL batteries and chargers.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or serious damage to your phone.
- Keep the phone in a safe place out of small children's reach. It includes small parts which, if detached, may cause a choking hazard.
- Don't charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Do not charge the phone when it is on soft furnishings. The phone should be charged in a well ventilated area.

CAUTION !

- Switch off the phone in any area where required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on your mobile phone for emergency calls.
- Only use ORIGINAL accessories to avoid damage to your phone.
- All radio transmitters carry risks of interference with electronics in close proximity. Minor interference may affect TVs, radios, PCs, etc.
- Batteries should be disposed off in accordance with relevant legislation.
- Do not dismantle the phone or battery.
- Risk of explosion if battery is replaced by an incorrect type.

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information
This mobile phone model KF305 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2 W/Kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 1.24 W/Kg (10g) and when worn on the body is 0.417 W/Kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/Kg averaged over 1g of tissue.

Product care and maintenance

 **WARNING:** Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not to charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.

Guidelines for safe and efficient use

- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the aircraft without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Guidelines for safe and efficient use

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose off used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

KF305 features

Parts of the phone

1 Earpiece

2 Main LCD

3 Send key

- ▶ Initiates call to dial numbers and answer a call.
- ▶ **In standby mode:** Shows a history of calls.

4 Alpha numeric keys

- ▶ **In standby mode:**
Input numbers to dial
Hold down
 -  – International calls
 -  – Activate Voice mail centre menu
 -  to  – Speed dials
- ▶ **In editing mode:**
Enter numbers & characters

5 Clear key

- ▶ Clears a character with each press. Hold the key down to clear all input.


6 End key

- ▶ Switched on/off (hold down)
- ▶ End or reject a call.

7 Microphone



KF305 features

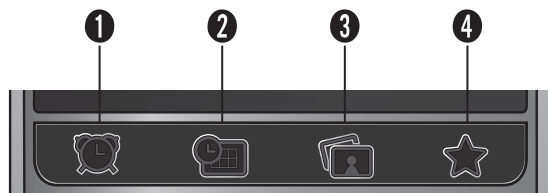

1 Alarm Hot key

- Goes to Alarm Menu

2 Schdeule Hot key


- Goes to Schedule Menu

3 Image Hotkey

- Goes to Image folder

4 Favorites Hot key

- Goes to Favorites Menu

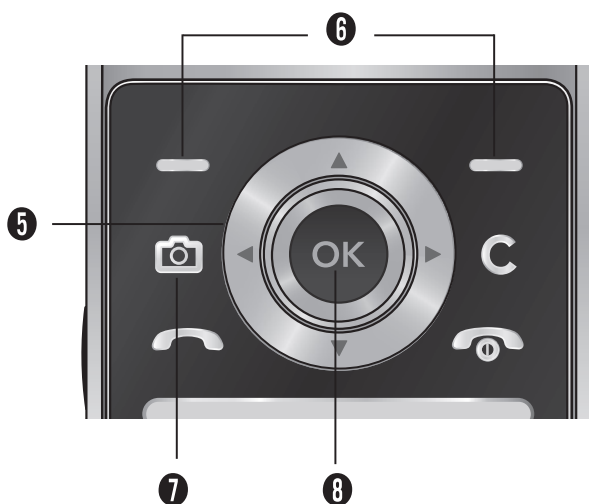

5 Navigation keys

- In standby mode:

 Briefly: Write Text message

 Briefly: Goes to Contacts list

 Briefly: Goes to Profiles Menu

 Briefly: Goes to MP3 Player Menu

- In menu: Scroll up & down

6 Soft keys

(Left soft key / Right soft key)


- These keys perform the function Indicated in the bottom of the display.

7 Camera hot key

- Goes to Camera preview.

8 Confirm key / OK key

- Selects menu options and confirms actions. Also use to view any saved data and call details in call history list.

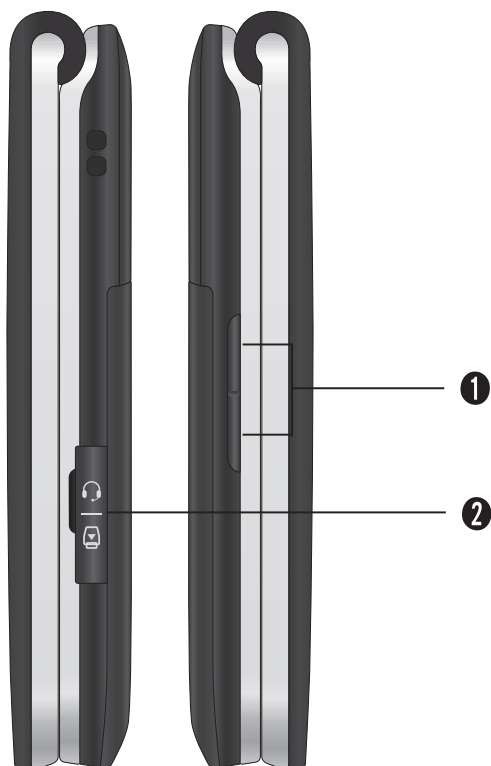


1 Side keys

- ▶ In standby mode (opened):
Ringing volume adjustment
- ▶ In standby mode (closed):
Show Date & Time by turns
- ▶ During a call: Earpiece
volume adjustment
- ▶ During playing MP3 music:
Audio volume adjustment

2 Headset/Charger/USB cable connector


Note

Please ensure phone is powered on and in idle mode before connecting the USB cable.

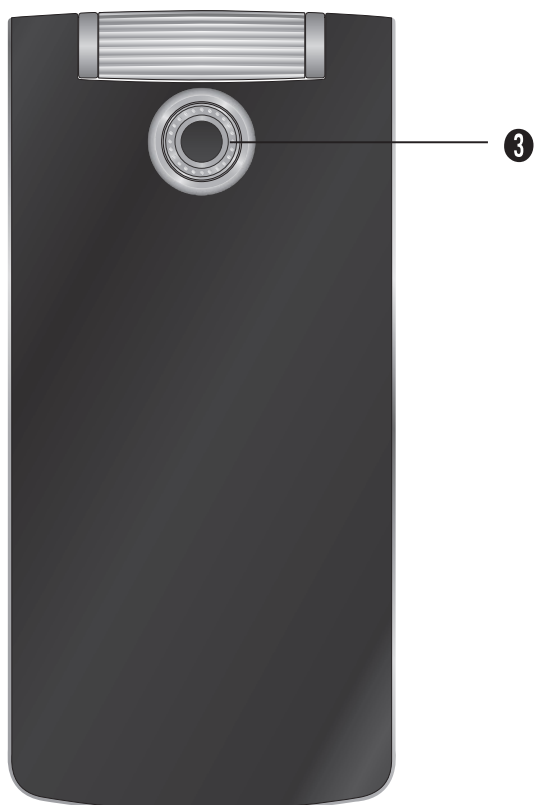


3 Camera lens

KF305 features

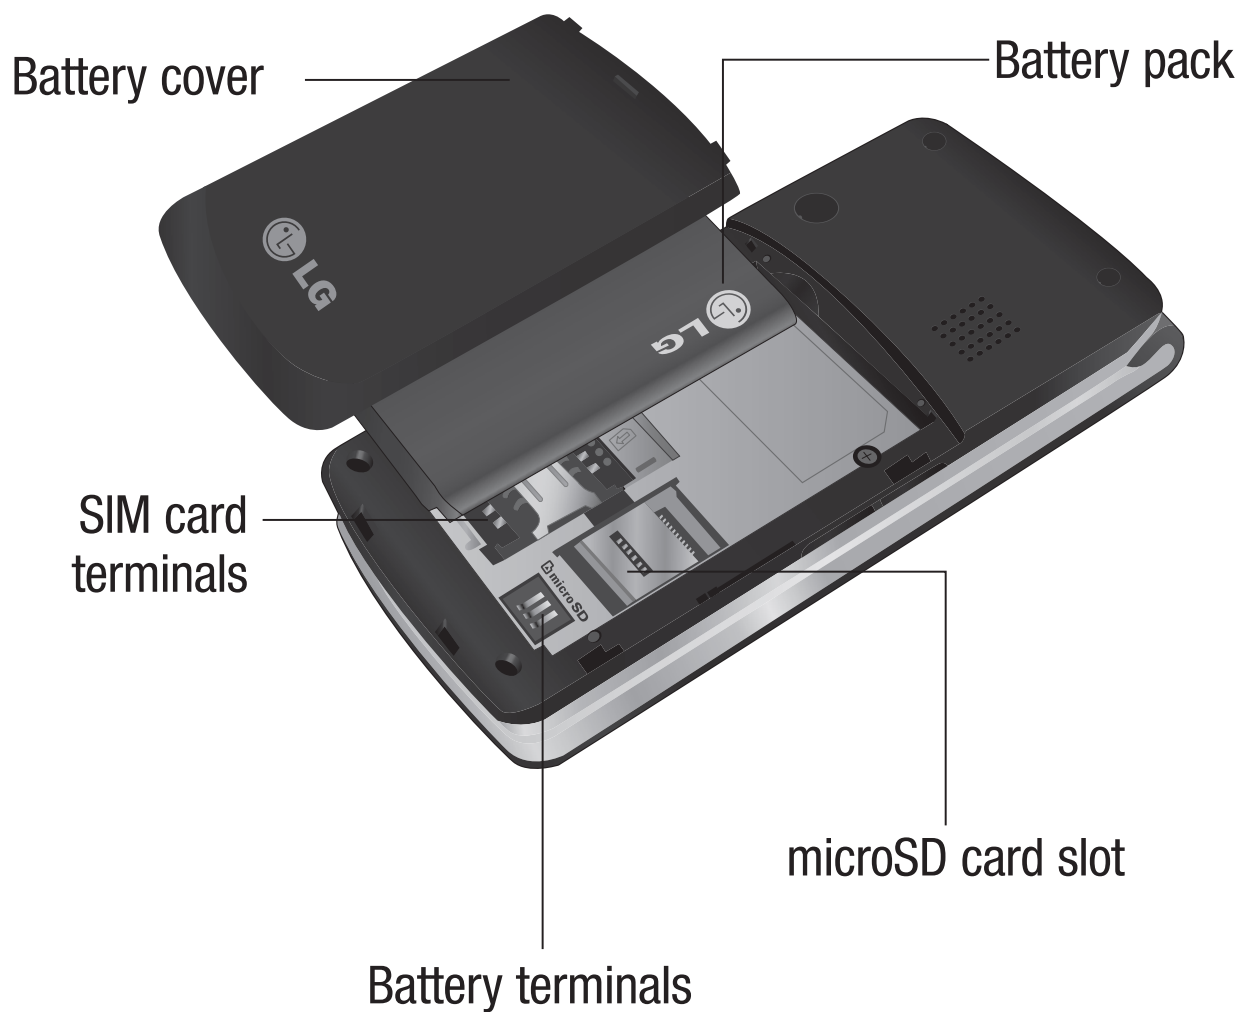

Display Information

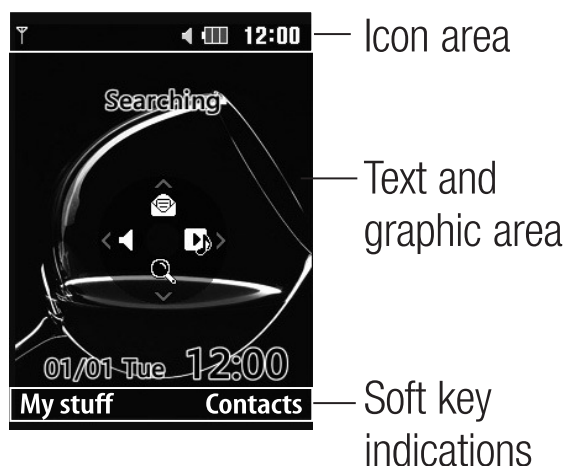

Area	Description
First line	Displays various icons.
Middle lines	Displays messages, instructions and any information that you enter, such as number to be dialled.
Last line	Shows the functions currently assigned to the two soft keys.

On-Screen Icons


The screen displays several icons. They are described below.

Icon	Description
	Indicates the strength of the network signal.*

Note

* The quality of the conversation may change depending on network coverage. When the signal strength is below 2 bars, you may experience muting, call drop and bad audio. Please take the network bars as indicator for your calls. When there are no bars, that means that there is no network coverage: in this case, you won't be able to access the network for any service (call, messages and so on).

KF305 features

Icon	Description
	Indicates that GPRS service is available.
	Indicates that flight mode has been activated.
	Indicates that a call is in progress.
	All calls are diverted.
	Indicates that the phone is accessing the WAP.
	Indicates that you are using GPRS.
	Shows that you are using a roaming service.
	The alarm has been set and is on.
	Indicates that you have a schedule.
	Indicates that external memory is installed.

Icon	Description
	You have received a message.
	You have received a voice mail.
	General menu in profile.
	Silent menu in profile.
	Vibrate only menu in profile.
	Outdoor menu in profile.
	Headset menu in profile.
	Tells you the status of the battery.
	Indicates that external memory is unformatted or is unsupported by the phone.



Getting started

Installing the SIM card and the handset battery

Make sure the power is off before you remove the battery.

1 Remove the battery cover

Press the battery release latch and slide the battery cover toward the bottom of the phone. And remove the battery cover.

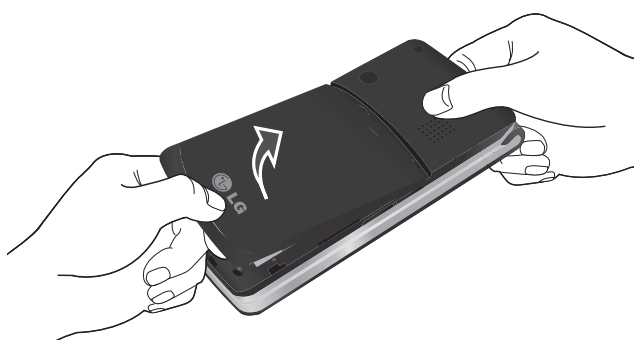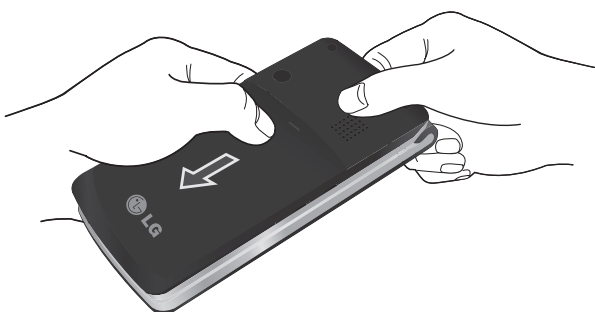

Note: Removing the battery from the phone when the power is on may cause the phone to malfunction.

2 Remove the battery

Hold the top edge of the battery and lift the battery from the battery compartment.



3 Install the SIM card

Insert the SIM card into the holder. Slide the SIM card into the SIM card holder. Make sure that the SIM card is inserted properly and that the gold contact area on the card is facing downwards. To remove the SIM card, press down lightly and pull it in the reverse direction.

Getting started



Caution! The metal contact of the SIM card can be easily damaged by scratches. Pay special attention to the SIM card while handling. Follow the instructions supplied with the SIM card.

4 Install the battery

Insert the bottom of the battery first into the bottom edge of the battery compartment. Push down the top of the battery until it snaps into space.



5 Replace the battery cover

Lay the battery cover in place of the phone and slide it until the latch clicks.

Charging the Battery

To connect the mains adapter to the phone, you must have installed the battery.



- 1 With the battery in position in the phone, connect the lead from the travel adapter to the socket on the right of the phone. Check that the arrow on the lead connector is facing towards the front of the phone.

- 2 Connect the other end of the mains adapter to the mains socket. Use only the included packing charger.
- 3 The moving bars of battery icon will stop after charging is complete.

Caution!

- Do not force the connector as this may damage the phone and/or the travel adapter.
- Insert the battery pack charger vertically to wall power outlet.
- If you use the battery pack charger out of your own country, use an attachment plug adapter for the proper configuration.
- Do not remove your battery or the SIM card while charging.

⚠ WARNING:

- Unplug the power cord and charger during lightning storms to avoid electric shock or fire.
- Make sure that no sharp-edged items such as animal teeth, nails, come into contact with the battery. There is a risk of this causing a fire.
- Do not place or answer calls while charging the phone as it may shortcircuit the phone and/or cause electric shock or fire.

Getting started

Disconnecting the adapter

- 1 When charging is finished, the moving bars of the battery icon stop and 'Battery Full unplug the charger' is displayed on the screen.
- 2 Unplug the adapter from the power outlet. Disconnect the adapter from the phone by pressing the tabs on both sides of the connector and pull the connector out.



Note

- Ensure the battery is fully charged before using the phone for first time.
- Do not remove the battery or SIM card while charging.
- In the case the battery is not properly charged, please turn the phone off and on using the power key, then recharge the battery. After detaching and reattaching the battery, please recharge the battery.

How to use a microSD memory card



<microSD memory card>

< How to insert a microSD memory card>

- 1 Turn the phone off.
- 2 Open the slot protection.



- 3 Insert the memory card into the slot. The gold contacts must be kept on the back of the microSD memory card. If the memory card doesn't go into the slot easily, you may be trying to insert it in the wrong way or there could be a foreign object in the slot.



- 4 Close the slot protection and slide upward to click fit the socket.

- 5 To remove the memory card, turn the phone off. Remove the battery. Open the slot protection and carefully extract the memory card.

Note

- Avoid using the memory card when the battery is low.
- When writing to the card, wait for the operation to complete before removing the card.
- The card is designed to fit easily into the system one way only.
- Do not bend the card or force it into the slot.
- Do not insert any memory cards other than those made by microSD.
- After you insert microSD card into your phone, please check the icon area on your screen.
- If the memory error icon  is displayed, your memory card is not formatted or is unsupported by the phone.
- In this case, you have to try to format your memory card.
- If the memory error icon is still displayed on icon area, please contact service center.

Getting started

For more information on the microSD, please refer to the memory card instruction manual.

Memory card formatting

Before you start to use the memory card you have to format it. After you insert the memory card, select **Settings** → **Memory status** → **External memory**, press OK key and then press format.

This operation should only be done when you insert the memory card for the first time. After formatting various folders will be created for different data types.

Turning your handset on

Ensure that your SIM card is in your handset and the battery is charged. Press and hold the end key until the power comes on. Enter the SIM PIN code that was supplied with your SIM card if the PIN code request is set to On. After a few seconds you will be registered on the network.

Turning your handset off

Press and hold the end key until the power goes off. There may be a few seconds delay while the handset powers down. Do not turn the handset on again during this time.

Security code (4 to 8 digits)

The security code protects the unauthorized use of your phone. The default security code is set to '0000' and the security code is required to delete all phone entries and to activate the Reset settings menu.

Also, the security code is required to enable or disable the phone lock function to prevent unauthorized use of the phone. The security code default setting can be modified from the Security menu.

General Functions

Making and answering calls

Making a call

- 1 Make sure your phone is powered on.
- 2 Enter a phone number including the area code.
 - ▶ Press and hold the  key to erase the entire number.
- 3 Press the  key to make the call.
- 4 To end the call, press the  key.

Making a call from the call history list

- 1 In standby mode, press the  key, and the latest incoming, outgoing and missed phone numbers will be displayed.
- 2 Select the desired number by using the up/down navigation key.
- 3 Press the  key.

Making an international call

- 1 Press and hold the  key for the international prefix. The '+' character automatically selects the international access code.
- 2 Enter the country code, area code, and the phone number.
- 3 Press the  key.

Ending a call

When you have finished your call, press the  key.

Making a call from the Contacts

Contacts:

- 1 Select Contacts from the Standby screen. In contact list select Search option and press OK.
- 2 Using the keypad, enter the first letter of the contact you want to call. For example, for Office, Press number 6 three times to select the first character, "O"
- 3 Press  to initiate the call.

General Functions

Answering a call

When you receive a call, the phone rings and the flashing phone icon appears on the screen. If the caller can be identified, the caller's phone number (or name if saved in the contacts) is displayed.

- To reject an incoming call in the Silent mode, press and hold side down key on the left side of the phone without opening the phone.

Signal strength

You can check the strength of your signal by the signal indicator () on the LCD screen of your phone.

Signal strength can vary, particularly inside buildings. Moving near to a window may improve reception.

Entering text

You can enter alphanumeric characters by using the phone's keypad.

T9 (T9 Abc) mode

This mode lets you enter words with only one keystroke per letter. Each key on the keypad has more than one letter. The T9 mode automatically compares your keystrokes with an internal dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional ABC mode. This is sometimes known as predictive text.

ABC mode

This mode lets you enter letters by pressing the key labelled with the required letter once, twice, three or four times until the letter is displayed.

123 mode (Number mode)

Type numbers using one keystroke per number. To change to 123 mode in a text entry field, press the  key until 123 mode is displayed.

Changing the text input mode

- 1 When you are in a field that allows characters to be entered, you will notice the text input mode indicator in the upper right corner of the LCD screen.
- 2 Change the text input mode by pressing the  key. You can check the current text input mode in the Top Most right corner of the LCD screen.

Using the T9 mode

The T9 predictive text input mode lets you enter words easily with a minimum number of key presses. As you press each key, the phone begins to display the characters that it thinks you are typing based on the built-in dictionary. You can also add new words in the dictionary. As new words are added, the word changes to reflect the most likely candidate from the dictionary.

Using the ABC mode

Use the  to  keys to enter your text.

Using the 123 (Number) mode

The 123 mode enables you to enter numbers in a text message (a telephone number, for example).

Press the keys corresponding to the required digits before manually switching back to the appropriate text entry mode.

Using the symbol mode

The symbol mode enables you to enter various symbols or special characters. To enter a symbol, select **Options** → **Insert** → **Symbol**. Use the navigation and numeric keys to select the desired symbol and press the OK key.

Selecting functions and options

Your phone offers a set of functions that allow you to customise the phone. These functions are arranged in menus and sub-menus, accessed via the two soft keys marked. Each menu and sub-menu lets you view and alter the settings of a particular function.

The roles of the soft keys vary according to the current context; the label on the bottom line of the screen just above each key indicates its current role.



Press the left soft key to access the available Menu.

Press the right soft key to access the Contacts.

In-call menu

Your phone provides a number of control functions that you can use during a call. To access these functions during a call, press the left soft key [Options].

During a call

The menu displayed on the handset screen during a call is different than the default main menu displayed when in idle screen, and the options are described below.

Making a Second Call (Network Dependent)

You can search and dial the number from **Contacts** to make a second call.

Swapping Between Two Calls

To switch between two calls, press the  key or the left soft key, and then select **Swap Call**.

Answering an Incoming Call

To answer an incoming call when the handset is ringing, simply press the  key. The handset is also able to warn you of an incoming call while you are already on a call.

A tone sounds in the earpiece, and the display will show that a second call is waiting.

This feature, known as **Call waiting**, is only available if your network supports it. For details of how to activate and deactivate it see Call waiting feature.

If **Call waiting** is on, you can put the first call on hold and answer the second, by pressing the left soft key or the send key.

Rejecting an Incoming Call

You can reject an incoming call without answering by simply pressing the  key.

During a call, you can reject an incoming call by pressing the  key.

In-call menu

Muting the Microphone

You can mute the microphone during a call by pressing the right soft key [Mute]. The handset can be unmuted by pressing the right soft key [Unmute]. When the handset is muted, the caller cannot hear you, but you can still hear them.

DTMF tones while calling

To switch on DTMF tones while calling (e.g. to use the phone with an automatic switchboard) press the left soft key [Options] followed by Enable DTMF. Select Disable DTMF to disable DTMF tones. DTMF tones are normally on.

Conference Calls

The conference service provides you with the ability to have a simultaneous conversation with more than one caller, if your network service provider supports this feature.

A conference call can only be set up when you have one active call and one call on hold, both calls having been answered.

Once a conference call is set up, calls may be added, disconnected or separated (that is, removed from the conference call but still connected to you) by the person who set up the conference call. These options are all available from the In-Call menu. The maximum callers in a conference call are five. Once started, you are in control of the conference call, and only you can add calls to the conference call.

Making a Second Call

You can make a second call while currently in call. Enter the second number and press the  key.

When the second call is connected, the first call is automatically placed on hold. You can swap between calls, by pressing the  key.

Setting Up a Conference Call

To set up a conference call, place one call on hold and while the active call is on, press the left soft key and then select the Join menu of Conference call.

Activate the Conference Call on Hold

To activate a conference call on hold, press the  key. Alternatively press the left soft key [Options] and select Join all/Hold all calls. Other users on hold will stay connected. To return to conference call mode, press the left soft key [Options] followed by Conference call.

Adding Calls to the Conference Call

To add a call to an existing conference call, press the left soft key, and then select the Join menu of Conference call.

Private Call in a Conference Call

To have a private call with one caller from a conference call, display the number of the caller you wish to talk to on the screen, then press the left soft key. Select the Private menu of Conference call to put all the other callers on hold.

Ending a Conference Call

Currently displayed caller from a conference call can be disconnected by pressing the  key.

Menu Tree

The menu in this phone can be displayed in 2 ways. One is by grid view or secondly by list view.

Please note that menu number options are different in each view.

The default setting on the phone is set to show the menu in grid view, so therefore all the menu number selections throughout the manual are shown according to that setting.

1. Games & Apps	3. Organiser	5. Messaging
1.1 Games	3.1 Calendar	5.1 New message
1.2 Applications	3.2 Memo	5.2 Inbox
1.3 Network profiles	3.3 To do	5.3 E-mail box
2. Call history	4. Multimedia	5.4 Drafts
2.1 All calls	4.1 MP3 player	5.5 Outbox
2.2 Missed calls	4.2 Camera	5.6 Sent
2.3 Dialed calls	4.3 Video camera	5.7 Listen to voicemail
2.4 Received calls	4.4 FM radio	5.8 Info message
2.5 Call duration	4.5 Voice recorder	5.9 Templates
2.6 Call costs		5.0 Settings
2.7 Data information		

6. My stuff
6.1 Images
6.2 Sounds
6.3 Videos
6.4. Documents
6.5 Others
7. Profiles
7.1 General
7.2 Silent
7.3 Vibrate only
7.4 Outdoor
7.5 Headset
8. Contacts
8.1 Search
8.2 New contact
8.3 Speed dials
8.4 Groups
8.5 Copy all
8.6 Delete all
8.7 Settings
8.8 Information

9. Tools
9.1 Alarm clock
9.2 Calculator
9.3 Stopwatch
9.4 Unit converter
9.5 World clock
9.6 SIM services
*. Browser
*.1 Home
*.2 Bookmarks
*.3 Enter address
*.4 History
*.5 Saved pages
*.6 Settings
*.7 Information

0. Connectivity
0.1 Bluetooth
0.2 Network
0.3 USB connection mode
#. Settings
#.1 Date & Time
#.2 Languages
#.3 Display
#.4 Shortcut
#.5 Call
#.6 Security
#.7 Flight mode
#.8 Power save
#.9 Reset
#.0 Memory status

Games & Apps

Games

Menu 1.1

You can access a great selection of games on your phone.

Applications

Menu 1.2

When Applications menu is selected, Java loading screen is displayed.

You can select and easily access other applications in this menu. For further details, please contact your service provider.

Network profiles

Menu 1.3

Network profiles menu allows you to see the network information used to connect to the Internet.

You can activate or add new profiles.

Call history

You can check the record of missed, received, and Last dialled calls only if the network supports the Calling Line Identification (CLI) within the service area.

The number and name (if available) are displayed together with the date and time at which the call was made. You can also view the number of times you have called.

All calls Menu 2.1

You can view all lists of outgoing or incoming calls.

Missed calls Menu 2.2

“Allows you to view missed call records, make a call pressing Call key, Using LSK options you can send a message, save the number in the contacts, delete and edit the number.”

Dialled calls Menu 2.3

Allows you to view dialled call records, make a call, send a

message, and save the number in the contacts.

Received calls Menu 2.4

Allows you to view received call records, make a call, send a message, and save the number in the contacts.

Call duration Menu 2.5

Allows you to view the duration of your incoming and outgoing calls.

Call costs Menu 2.6

Allows you to check the cost of your last call and all calls. Also you can perform cost setting using available options inside cost settings.

Data information Menu 2.7

You can check the amount of data transferred over the network through the GPRS information option.
In addition, you can also view how much time you are online.

Organiser

Calendar

Menu 3.1

You can refer to your schedule by months. The cursor is on the current date, and the registered date is marked. You can move the cursor to another date using the navigation keys.

Memo

Menu 3.2

You can add new memo, view and manage saved memos.

To do

Menu 3.3

You can view, edit and add tasks. Tasks are displayed in time order. Tasks that have been completed are placed at the bottom of to do list, and not completed tasks are displayed above completed to do .

Multimedia

MP3 player

Menu 4.1

The KF305 has an integrated MP3 player built-in. You can enjoy listening to MP3 music files on your phone using a compatible headset or via the internal loudspeaker.

Note

Because of the small dimension of the speaker, in some cases the audio could be distorted, especially at maximum volume and when there are lots of bass sounds. Therefore, we recommend you to use the stereo headset in order to appreciate the high quality of your music.

All songs (Menu 4.1.1)

You can see all the music files present in phone and also in external memory if inserted.

My playlist (Menu 4.1.2)

You can set the music files of your taste.

Settings (Menu 4.1.3)

- ▶ **Shuffle:** If you select **On**, you can listen to the music randomly.
- ▶ **Repeat:** This menu allows to set the play mode: **Off**, **One**, **All**.
- ▶ **Equalizer:** This menu helps you to adjust various of environment on listening to the music.
- ▶ **Player skin:** This menu allows to change the background of main LCD on playing MP3 file.

Note

Music is copyright protected in international treaties and national copyright laws. It may be necessary to obtain permission or a license to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Please check the national legislation of the applicable country concerning the use of such material.

Multimedia

Camera

Menu 4.2

Using the camera module built in your phone, you can take pictures of people. Additionally, you can send photos to other people and select photos as wallpaper.

Note

When using the camera, power consumption increases. If the battery is too low, you may not be able to use the **Camera** feature, please recharge the battery before use.

• To take a picture

- To take clear pictures, press the camera  key or camera option from multimedia menu while holding the camera without any movement.
- Appropriately adjust distance to the object that you want take a picture of (more than 50 cm).

- Handle carefully since the camera is vulnerable to shock and use a soft cloth when cleaning the camera lens.
- Do not disassemble or modify the camera as this may lead to fire or malfunctioning.

Before take a photo, you can set the following options by pressing the left soft key [Options].

- ▶ **Resolution:** Allows you to set the image size. (320*240/640*480/1280*1024/1600*1200)
- ▶ **Quality:** Allows you to set the image quality from **Normal**, **Fine** and **Super fine**.
- ▶ **Self timer:** Allows you to select the delay time (Off/3 Secs/5 Secs/10 Secs). Then the phone takes a photo after the specified time.
- ▶ **View option:** You can set the view mode. (Full image/Full screen)
- ▶ **Save to:** You can set the save option for a picture. (Phone/External)

- ▶ **Multi shot:** Allows to take multishot-photos successively. (1shot/3shots/6shots)
- ▶ **Effects:** 4 settings are available. (Off/Sepia/Mono/Negative)
- ▶ **White balance:** Allows you to change the settings according to the environment. (Auto/Daylight/Incandescent/Cloudy/Fluorescent/ Nightmode)
- ▶ **Shutter tone:** You can set the sound when taking a picture. (Off/Tone1/Tone2/Tone3).
- ▶ **Reset settings:** Allows you to reset the settings.

Note

- ▶ You can adjust the brightness by using the ◀ , ▶ .
- ▶ The zoom function varies depending on the resolution the camera is set to. For example, if the camera resolution is set to the highest setting you can't zoom.

The photo you taken is automatically saved in the Images folder of My stuff. After taking a photo, you can select the submenus by pressing the left soft key [Options].

- ▶ **New photo:** You can take a new photo.
- ▶ **Set as:** You can set the taken photo as a **Wallpaper/Picture ID**.
- ▶ **Send via:** You can send the photo via Multi media Message/Bluetooth/Email
- ▶ **Album:** You can access the **Images** folder of **My stuff**.

Video camera

Menu 4.3

You can record and save a video clip.

Before record a video clip, you can set the following options by pressing the left soft key [Options].

- ▶ **Video mode:** Allows you to send video file through **MMS** or **General**.

Multimedia

- ▶ **Resolution:** Allows you to set the size. (176x144/320x240)
- ▶ **Quality:** Allows you to set the image quality from **Normal**, **Fine** and **Super fine**.
- ▶ **Save to:** You can set the save option for a video clip. (Phone/ External)
- ▶ **Effects:** 4 settings are available. (Off/Sepia/Mono/ Negative)
- ▶ **White balance:** Allows you to change the settings according to the environment. (Auto/ Daylight/Incandescent/Cloudy/ Fluorescent)
- ▶ **Reset settings:** Allows you to reset the settings.
- ▶ **Play:** You can play the recorded video clip.
- ▶ **Send via:** You can send the photo via **Multi media Message/Bluetooth/Email**.
- ▶ **Album:** You can access the **Videos** folder of **My stuff**.

The video clip you recorded is automatically saved in the **Videos** folder of **My stuff**. After recording a video, you can select the submenus by pressing the left soft key [Options].

- ▶ **New video:** You can record a new video.

FM Radio

Menu 4.4

- 1 Connect the headset with your phone.
- 2 After presetting radio channels, you can listen to other channel by pressing the corresponding number key (short press). Also you can perform the actions available in LSK “options”.

Voice recorder

Menu 4.5

You can record a voice memo. Using LSK options you can set the memory storage as Phone / External memory, Also can change the recording mode as General / MMs.

Messaging

New message

Menu 5.1

This menu includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service), Email, as well as the network's service messages.

Message (Menu 5.1.1)

You can write and edit message.

- 1 Enter the **New message** menu by pressing the left soft key [OK].
- 2 If you want to write a new message, select **Message**.
- 3 To make text input easier, use T9.
- 4 Press the left soft key [Options] to attach the following.

Options

- **Send to:** Sends text messages.

► Insert

You can add the following:
Image, Sound, Video, Symbol, Text template, Emoticon, Name & number, New slide, Subject, More (contact, my business card, schedule, memo).

- **Save to drafts:** Stores messages in **Drafts**.
- **Preview:** You can preview multimedia messages you have created.
- **View attachment:** (Dynamic menu) you can see attachment lists.
- **Slide duration:** You can set the duration of slide of multimedia message.
- **Remove:** You can delete slide, subject , and attached media(image, video, sound , and attachment)
- **Set T9:** Activate/Deactivate T9 input mode by selecting ON/OFF.

Messaging

- ▶ **Writing language:** Select the language for T9 input mode.
- ▶ **New T9 word:** Select the **New T9 word** for inputting new word into the dictionary.
- ▶ **Clear text:** You can clear text while writing Message.
- ▶ **Exit:** If you select **Exit** while writing a message, you can end the writing message and back to the message menu. The message you have written is not saved.

Note

If you select the picture (200K) on writing multimedia message, loading duration will take around 3 seconds at least. Furthermore, you can't activate any key during loading time. After 3 seconds, it is available to write multimedia message.

E-mail (Menu 5.1.2)

To send/receive an e-mail, you should set up the e-mail account.

- 1 Key in the subject of the e-mail and press the OK key.
- 2 After writing an e-mail message, press the left soft key [Options]. You can access the following option menus.
 - ▶ **Send to:** Enter the e-mail address or select the e-mail address from the contacts.
 - ▶ **Insert:** You can add **Symbol/Text template/Name & Number**.
 - ▶ **Attachments:** You can add the following: **Image/Video/Sound/More/Others**.
 - ▶ **Save to drafts:** Select this to save the message in the **Drafts**.
 - ▶ **Edit subject:** You can edit the subject.

- ▶ **Preview:** You can preview e-mail you wrote.
- ▶ **Set T9:** Activate/Deactivate T9 input mode by selecting **ON/OFF**.
- ▶ **Writing language:** Select the language for T9 input mode.
- ▶ **New T9 word:** Select the **New T9 word** for inputting new word into the dictionary.
- ▶ **Clear text:** Allows you to delete all the text within the e-mail.
- ▶ **Exit:** If you select **Exit** while writing a message, you can end the writing message and back to the **Email** menu. The message you have written is not saved.

Note

- ▶ Enter the reference e-mail address to forward the e-mail in Cc (Carbon copy) field.
- ▶ Enter a hidden reference e-mail address to forward the e-mail without forwarding information in Bcc (Blind Carbon Copy) field.
- ▶ Only valid e-mail addresses are allowed for the recipient (To), reference address (Cc) and hidden reference address (Bcc) fields. When an e-mail address has been specified, another field where you can specify another address appears. You can specify up to 20 recipients for the To, Cc, Bcc address fields.

Inbox

Menu 5.2

You will be alerted when you have received messages. They will be stored in Inbox.

If the phone shows '**No space for SIM message**', you have to delete only SIM messages from Inbox.

Messaging

✳ SIM message

SIM message means the message exceptionally stored in SIM card.

For notified multimedia message, you have to wait for downloading and processing of the message.

E-mail box Menu 5.3

When you access this menu, you can either connect to your remote mailbox to retrieve your new e-mail messages, or you can view the previously retrieved e-mail messages without logging in to the e-mail server.

Drafts Menu 5.4

If you don't have time to finish writing a message, you can save what you have done so far here.

Outbox Menu 5.5

You can view the list and contents of sending/resending/waiting/send fail in this menu and can also verify if the transmission was successful.

After sending the message successfully, the message will be moved to sent box.

Sent Menu 5.6

This menu allows you to view the messages which are already sent. You can check the time and the contents of message.

Listen to voicemail Menu 5.7

This menu provides you with a quick way of accessing your voice mailbox (if provided by your network). Before using this feature, you must enter the voice server number obtained from your network operator.

Note

When you receive a voicemail, your phone displays the icon and you hear an alert. Please check with your network provider for details of their service in order to configure the handset correctly.

- Please, call me back .
- I'm late. I will be there at
- Where are you now?
- I am on the way.
- Urgent! Please, contact.
- I love you!

Info message Menu 5.8

(Dependent to network and subscription)

Info service messages are text messages delivered by the network to GSM. They provide general information such as weather reports, traffic news, taxis, pharmacies, and stock prices.

Templates Menu 5.9

Text templates (Menu 5.9.1)

You have 6 text templates as below;

Multimedia templates (Menu 5.9.2)

You can save a new multimedia template and edit the saved multimedia templates.

Settings Menu 5.0

Text message (Menu 5.0.1)

► Message types:

Text, Voice, Fax, Paging, X.400, Email, ERMES

Usually, the type of message is set to Text. You can convert your text into alternative formats. Contact your service provider for the availability of this function.

Messaging

- ▶ **Validity period:** This network service allows you to set how long your messages will be stored at the message centre.
- ▶ **Delivery report:** If you set to ON, you can check whether your message is sent successfully.
- ▶ **Reply charging:** When a message is sent, it allows the recipients to reply and charge the cost of the reply to your telephone bill.
- ▶ **Message center number:** If you want to send and receive the text message, the address of SMS centre should be inputted. Normally, this address automatically read from SIM card.
- ▶ **Character encoding:** Full support/Reduced support
 - **Full support:** Message with single byte character is normally encoded in Default alphabet(GSM7). Message with double-byte character is automatically encoded in unicode(UCS2).
 - **Reduced support:** Message with even double byte character is encoded in single byte. Please note that double byte characters with accent may be converted into single byte character without accent.

Multimedia message

(Menu 5.0.2)

- ▶ **Slide duration:** Displays the duration of each page when writing the message.
- ▶ **Delivery time:** Deliver your message at a specific time.
- ▶ **Priority:** You can set the priority of the message you choose.
- ▶ **Validity period:** This network service allows you to set how long your text messages will be stored at the message centre.
- ▶ **Delivery reports:** You can set ON/OFF in these menus.
 - **Request report:** Request reports to check out whether your messages are sent to the recipients successfully. You can set ON/ OFF in these menus.

- **Allow report:** When the senders request delivery reports, you can decide the report to be delivered or not. You can set ON/ OFF in these menus.
- ▶ **Read report:** You can set ON/ OFF in these menus.
- **Request report:** Request reports to check out whether your messages are read by the recipients
- **Allow report:** When the senders request read reports, you can decide the report to be delivered or not.
- ▶ **Auto download:** You can receive multimedia messages automatically from Home network / Roaming network when you select 'Automatic' in this menu. But when you select 'Manual', you receive only notification messages in the inbox and then you can decide to receive multimedia messages in the option menu of Notifications.

- ▶ **Network profiles:** If you select multimedia message server, you can set URL for multimedia message server.
- ▶ **Permitted message types**
 - **Personal:** Personal message.
 - **Advertisements:** Commercial message.
 - **Information:** Necessary information.

E-mail (Menu 5.0.3)

You can configure settings for receiving and transmitting e-mail.

Email accounts (Menu 5.0.3.1)

You can create or configure an Email account including the Email server and user ID.

Access points (Menu 5.0.3.2)

This menu shows the access point list. You can create new profiles, delete or edit them by using the Option Menu. However, you cannot delete or edit default configurations depending on country variant.

Messaging

Retrieve interval (Menu 5.0.3.3)

You can configure Retrieve interval to retrieve emails automatically from the incoming mail server. Please note that additional charges may be incurred using the Retrieve interval feature.

Signature (Menu 5.0.3.4)

You can configure a text signature to be attached to the end of an Email. The configured signature text is automatically or manually attached to the end of the Email when it is sent.

Voicemail number (Menu 5.0.4)

You can receive voicemail if your network service provider supports this feature. When a new voicemail is arrived, the symbol will be displayed on the screen. Please check with your network service provider for details of their service in order to configure the phone accordingly.

Service message (Menu 5.0.5)

You can set the option whether you will receive the message or not.

Info message (Menu 5.0.6)

► **Receive**

- **On:** If you select this menu, your phone will receive Info service messages.
- **Off:** If you select this menu, your phone will not receive Info service messages any more.

► **Alerts**

- **On:** Your phone will beep when you have received Info service message numbers.
- **Off:** Your phone will not beep even though you have received info service messages.

► **Languages**

You can mark and unmark the language you want by pressing the OK key. Then, the info service message will be shown in the language that you selected.

My stuff

Images

Menu 6.1

The Images folder consists of embedded links for downloading pictures through the internet and default images. To view the image in details, press the OK key.

When a file is selected, the following options will be displayed by pressing the left soft key [Options].

- ▶ **View:** You can see the selected file.
- ▶ **Delete:** Delete a selected file.
- ▶ **Set as**
 - **Wallpaper:** Currently selected image can be set as a **Wallpaper**.
 - **Picture ID:** Currently selected image can be set as contact image.
- ▶ **Send via:** Send the selected file to another device via **MMS**, **Bluetooth**, or **Email**.

▶ File

- **Edit image:** You can edit the selected image using this menu.
- **Rename:** Change the file name of selected file. You cannot change the extension of file.
- **Move to folder:** Move the selected file to the folder.
- **Move to external memory / Move to phone memory:** Move the selected file to the external memory (if inserted) or multimedia memory in your phone.
- **Copy to external memory / Copy to phone memory:** Copy the selected file to the external memory or multimedia memory in your phone.
- **Information:** Show the file information.

My stuff

- ▶ **Print via Bluetooth:** Most pictures that you have taken in the camera mode and downloaded through WAP can be transmitted via Bluetooth to a printer.
- ▶ **Slide show:** You can view a slide show of the files you stored.
- ▶ **New folder:** You can create a new folder.
- ▶ **Multi delete:** You can remove a number of files you selected.
- ▶ **Delete all:** Delete all files in the list.
- ▶ **Sort by:** You can arrange the files as **Date**, **Type** and **Name**.
- ▶ **Thumbnail view/List view:** Allows you to set the view type.

Sounds

Menu 6.2

The Sounds folder consists of embedded links for downloading ringtones and music as well as folders containing the default sounds and voice recordings.

When a file is selected, the following options will be displayed by pressing the left soft key [Options].

- ▶ **Play:** You can play the selected file.
- ▶ **Delete:** Delete a selected file.
- ▶ **Set as:** Currently selected sound can be set as a **Ringtone/ Ringtone ID/ Message tones**.
- ▶ **Send via:** Send the selected file to another device via **MMS, Bluetooth, or Email**.
- ▶ **File**
 - **Rename:** Changes the file name of the selected file.
 - **Move to folder:** Move the selected file to the folder.
 - **Move to external memory / Move to phone memory:** Move the selected file to the external memory (if inserted) or multimedia memory in your phone.

- **Copy to external memory / Copy to phone memory:** Copy the selected file to the external memory (if inserted) or multimedia memory in your phone.
- **Information:** Show the selected file information.
- ▶ **New folder:** You can create a new folder.
- ▶ **Multi delete:** You can remove a number of files you selected.
- ▶ **Delete all:** Delete all files in the list.
- ▶ **Sort by:** You can arrange the files as **Date**, **Type** and **Name**.

Videos

Menu 6.3

Here you can manage or send saved video clips. When a file is selected, the following options will be displayed by pressing the left soft key [Options].

- ▶ **Open:** You can open the selected file.

- ▶ **Delete:** Delete a selected file.
- ▶ **Send via:** Send the selected file to another device via **MMS**, **Bluetooth**, or **Email**.
- ▶ **File**
 - **Rename:** Change the file name of selected file.

 **WARNING:** You can't use the following characters: \ / : * ? < > |

- **Move to folder:** Move the selected file to the folder.
- **Move to external memory / Move to phone memory:** Move the selected file to the external memory (if inserted) or multimedia memory in your phone.
- **Copy to external memory / Copy to phone memory:** Copy the selected file to the external memory (if inserted) or multimedia memory in your phone.

My stuff

- **Information:** Show the file information.
- ▶ **New folder:** You can create a new folder.
- ▶ **Multi delete:** You can remove a number of files you selected.
- ▶ **Delete all:** Delete all files in the list.
- ▶ **Sort by:** You can arrange the files as **Date**, **Type** and **Name** .

Documents

Menu 6.4

From the Documents menu, you can view all your document files.

Others

Menu 6.5

Other files except images, sounds, videos are stored in this folder.

Profiles

In Profiles, you can adjust and customise the phone tones for different events, environments, or caller groups.

There are five preset profiles: **General**, **Silent**, **Vibrate only**, **Outdoor** and **Headset**.

Except Silent and Vibrate only, all other profiles can be personalised. Press the left soft key [OK] and select Profiles using up/down navigation keys.

Activate (Menu 7.X.1)

- 1 A list of profiles is displayed.
- 2 In the Profiles list, scroll to the profile you want to activate and press the left soft key [OK] or the OK key.
- 3 Then, select **Activate**.

Personalise (Menu 7.X.2)

Scroll to the desired profile in the Profiles list. After pressing the left soft key or the OK key, select **Personalize**.

The profile setting option opens.
Set the option as required.

- ▶ **Call alert type:** Set the alert type for incoming calls.
- ▶ **Ring tones:** Select the desired ring tone from the list.
- ▶ **Ring volume:** Set the volume of the ringing tone.
- ▶ **Message alert type:** Set the alert type for messages.
- ▶ **Message tones:** Select the alert tone for messages.
- ▶ **Message volume:** Set the volume of Message tone.
- ▶ **Keypad tones:** Select the desired keypad tone.
- ▶ **Keypad volume:** Set the volume of keypad tone.
- ▶ **Flip tones:** Allows to set the flip tone for adjusting environment.
- ▶ **Effect sound volume:** Set the volume of effect sound.
- ▶ **Power on/off volume:** Set the volume of the ringing tone when switching the phone on/off.

Contacts

Search

Menu 8.1

- 1 Select **Search** and enter the name that you want to search.

Note

- ▶ You can access the Contacts directly by pressing the right soft key [Contacts] in standby mode.
- ▶ Instant searching is available by inputting the initial letter of the name.

- 2 After finding the desired contact, you can make a call to the number by pressing the send key.
- 3 If you want to edit, delete, copy an entry, select the left soft key [Options].

The following menu will be displayed.

- ▶ **View:** You can view each entry in details.
- ▶ **Edit:** You can edit the selected contact.

- ▶ **New message:** After you have found the number you want, you can send a **message** to the selected number.
- ▶ **Send via:** You can send the data of the contacts via **SMS/MMS/Bluetooth/Email**.
- ▶ **Delete:** You can delete an entry.
- ▶ **New Contact:** After selecting the place (SIM/Phone) you want to save, you can add to the contacts.
- ▶ **Add to speed dial:** Allows you to set the selected number to add a speed dial list.
- ▶ **Multi delete:** Allows you to remove a number of files selected.
- ▶ **Copy to SIM / Copy to phone:** You can copy an entry from phone to SIM or from SIM to phone.
- ▶ **Main number:** If a contact has more than one number stored, select the one that you use most often. This main number will be displayed first.

New contact

Menu 8.2

You can register a new contact address. You can enter the name, different phone numbers and email addresses of a new contact. You can also assign the contact to groups, include a picture, assign a specific ringtone and enter the anniversary for the contact. You can enter and manage contact addresses depending on the memory usage.

Note

- ▶ The contact entry fields may differ when you register a contact address in the SIM.
- ▶ Maximum stored name and number length depends on SIM card type.

Speed dials

Menu 8.3

Using this menu you can manage speed dials.

You can assign any of the keys  to  with a name list entry. You can call directly by pressing this key.

Groups

Menu 8.4

You can list up to the members per each group. In the handset memory, there are 7 default groups: **Family**, **Friends**, **Colleagues**, **VIP**, **Group 1**, **Group 2**, and **Group 3**.

Copy all

Menu 8.5

You can copy entries from SIM card memory to phone memory and vice versa.

Delete all

Menu 8.6

You can delete all entries from SIM card or phone memory. This function requires the security code.

Settings

Menu 8.7

View options (Menu 8.7.1)

You can set the contact display option.

- ▶ **Name only:** Set the contact information with only name.

Contacts

- ▶ **Name & Number:** Set the contact information with name and number.
- ▶ **With picture:** Set the contact information with picture.

Backup Contacts (Menu 8.7.2) (External Memory dependent)

You can save Phonebook data to the others folder in external memory.

Restore Contacts (Menu 8.7.3) (External Memory dependent)

You can save Vcard format (*.vcf) existed in My stuff -> External memory -> Others to the Phonebook.

Information Menu 8.8

Service dial number (Menu 8.8.1)

You can view the list of Service Dialling Numbers (SDN) assigned by your service provider (if supported by the SIM card).

Own number (Menu 8.8.2) (SIM dependent)

You can save and check your own number in SIM card.

My business card (Menu 8.8.3)

This option allows you to create your own business card featuring name, any numbers and email.

Tools

Alarm clock

Menu 9.1

You can set the alarm clock to go on at a specified time.

Calculator

Menu 9.2

The calculator module allows you to perform basic arithmetic functions such as addition, subtraction, multiplication, and division as well as some scientific functions.

Stopwatch

Menu 9.3

This menu allows you to record the elapsed time of an event.

Unit converter

Menu 9.4

This converts any measurement into a unit you want. There are 7 types that can be converted into units: **Currency**, **Area**, **Length**, **Weight**, **Temperature**, **Volume** and **Velocity**.

World clock

Menu 9.5

The World clock function provides time information on major cities worldwide. You can add , delete cities, change any city with new one ,set any city as current city and make daylight saving ON / OFF for selected cities using LSK options.

SIM services

Menu 9.6

(SIM dependent)

With the SIM services menu your phone is future-proof and will support additions to your service provider's service. For more information contact your service provider.

Browser

You can access various WAP (Wireless Application Protocol) services such as banking, news, weather reports and flight information. These services are specially designed for mobile phones and they are maintained by WAP service providers.

Navigating with the WAP browser

You can surf the Internet using either the phone keys or the WAP browser menu.

Using the phone keys

When surfing the Internet, the phone keys function differently to phone mode.

Icon	Description
	Scrolls each line of the content area
	Returns to the previous page
	Select options and confirm actions

Using the WAP browser menu

There are various menu options available when surfing the Mobile Web.

Note

The WAP browser menus may vary, depending on your browser version.

Home

Menu *.1

Connects to a homepage. The homepage will be the site which is defined in the activated profile. It will be defined by the service provider if you have not defined it in the activated profile.

Bookmarks

Menu *.2

This menu allows you to store the URL of favourite web pages for easy access at a later time.

Enter address Menu *.3

You can connect directly to the site you want. After entering a specific URL, press the left soft key [OK] to connect to the site.

History Menu *.4

This menu shows the recently browsed pages.

Saved pages Menu *.5

The phone can save the page on display as an offline file.

Settings Menu *.6

You can set the profile, cache, cookies, java script, images, memory in use and security related to internet service.

Network profiles (Menu *.6.1)

A profile is the network information used to connect to the Internet.

There are default profiles for some operators, stored in phone memory. It is impossible to rename default profiles.

Rendering mode (Menu *.6.2)

You can adjust the size of URL page when the page is larger than phone screen.

Cache (Menu *.6.3)

The information or services you have accessed are saved in the cache memory of the phone.

Note

A cache is a buffer memory, which is used to save data temporarily.

Cookies (Menu *.6.4)

Enabling cookies allows you to store cookies sent from the server. Disabling this function will prevent cookies from being stored on your phone.

Security certificates (Menu *.6.5)

You can see the list of personal certificates that have been stored in your phone.

Browser

Show image (Menu *.6.6)

You can select to display image or not during WAP browsing.

Java script (Menu *.6.7)

Select whether to turn Java script on or off.

Memory in use (Menu *.6.8)

Information Menu *.7

You can view the information of WAP browser version.

Connectivity

Bluetooth

Menu 0.1

Bluetooth enables compatible mobile devices, peripherals and computers that are in close proximity to communicate directly with each other without wires.

Note

- ▶ If you use LG PC Sync via Bluetooth, you can exchange the data only within phonebook
- ▶ When you receive data from another Bluetooth device, the phone requests confirmation. After confirming the transfer, the file will be copied on to your phone.
- ▶ Depending on the file type, it will be stored in the following folders:
 - **Video** (3gp, mp4): Videos folder
 - **Image** (.bmp, gif, jpg, png): Images folder
 - **Sound** (.amr, wav, aac): Sounds folder
 - **MP3** (.mp3): Sounds/MP3 folder
 - **Other files** (.txt, html): Others folder

- ▶ **Bluetooth on/off**
You can activate or cancel the Bluetooth function.

Connectivity

► Device list

You can view all devices which your KF305 is already paired to. If you enter Paired devices, you can access the options.

- **Connect /Disconnect:** After pairing with headset or stereo headset, you should connect with those devices. Then you can use those devices.
- **New:** Allows to search new Bluetooth devices and add them to your phone's list of paired devices. When you select New your handset will start to search for Bluetooth devices within range. Once the device you wish to pair appears on the list press the Right soft key [Stop]. Scroll to the desired device and press the left soft key [ok]. You will then be asked to enter a passcode.

The passcode can be any code you wish to use (the same passcode must be used by both devices) or is one that is pre-determined by the manufacturer of the device you are trying to pair with. Please check the User Manual of the device you are initiating the pair with to see if it already has a predetermined passcode in place.

- **Set as authorized /Set as unauthorized:** Allows you to set an unauthorized connection between each Bluetooth device. For example if you regularly use a Bluetooth headset with your phone then setting the connection as unauthorized will mean the headset will automatically connect to the handset each time the headset is powered on.
- **All services:** Allows to view all services which are supported by Bluetooth device.

- **Delete:** Allows to delete a paired Bluetooth device.
- **Rename:** Allows you to change the name of the paired Bluetooth device and how it is displayed on the handset.
- **Delete all:** Allows to delete all the paired Bluetooth devices.
- ▶ **Bluetooth settings**
 - **My visibility:** This indicates whether or not your handset will be visible to other Bluetooth devices.
 - **My name:** You can set the name of Bluetooth device. The default name is LG KF305.
 - **My address:** You can view the address of your Bluetooth device.
 - **Primary storage**

Network

Menu 0.2

You can select a network which will be registered either automatically or manually.

Network selection (Menu 0.2.1)

Usually, the network selection is set to **Automatic**.

- ▶ **Automatic:** If you select **Automatic** mode, the phone will automatically search for and select a network for you. Once you have selected **Automatic**, the phone will be set to **Automatic** even though the power is off and on.
- ▶ **Manual:** The phone will find the list of available networks and show you them. Then you can select the network which you want to use if this network has a roaming agreement with your home network operator. The phone let you select another network if the phone fails to access the selected network.

Connectivity

- ▶ **Preferred:** You can set a list of preferred networks and the phone attempts to register with first, before attempting to register to any other networks. This list is set from the phone's predefined list of known networks.

GPRS attach (Menu 0.2.2)

You can set GPRS service depending on various situations.

- ▶ **Power on**

If you select this menu, the phone is automatically registered to a GPRS network when you switch the phone on. Starting a WAP or PC dial-up application created the connection between phone and network and data transfer is possible. When you end the application, GPRS connection is ended but the registration to the GPRS network remains.

- ▶ **When needed**

If you select this menu, the GPRS connection is established when you connect a WAP or application service and closed when you end the WAP or application connection.

Access Point (Menu 0.2.3)

- ▶ **View:** You can see the selected profile.
- ▶ **Edit:** You can edit the selected profile.
- ▶ **New access point**
 - **Name:** You can type the network name.
 - **Bearer:** You can set the bearer data service. Data/GPRS.
 - **APN:** Input the APN of the GPRS.
 - **User ID:** The users identity for your APN server.
 - **Password:** The password required by your APN server.

- **Primary Server:** Input the IP address of the primary DNS server you access.
- **Secondary server:** Input the IP address of the secondary DNS server you access.

USB connection mode

Menu 0.3

You can choose one mode of Mass storage and Pc suite.

Settings

Date & Time

Menu #.1

You can set functions relating to the date and time.

Languages

Menu #.2

You can change the language for the display texts in your phone. This change will also affect the language Input mode.

Display

Menu #.3

Wallpaper (Menu #.3.1)

You can select the background pictures in standby mode.

Clock (Menu #.3.2)

You can select the clock format to display the clock on the Internal/ External Phone screen.

Backlight timer (Menu #.3.3)

You can set the light-up duration of the display.

Brightness (Menu #.3.4)

You can set the brightness of LCD.

Home screen shortcut

(Menu #.3.5)

If you select On, you can access the menu which will be displayed in standby mode using navigation keys.

Font size (Menu #.3.6)

You can change the font size for display text in your phone.

Theme (Menu #.3.7)

You can set the screen theme to be displayed on the main screen.

Menu style (Menu #.3.8)

Your phone provides you with **Grid view** and **List view** menu styles. Set the menu style by scrolling and pressing the left soft key [OK].

Dialling (Menu #.3.9)

You can set the font style/font size of the numbers which appear in the home screen when you make a call.

Standby text (Menu #.3.0)

If you select **On**, you can edit the text which is displayed in standby mode.

Network name (Menu #.3.*)

If this function is activated, network name will be displayed on LCD.

Shortcut Menu #.4

You can set the functions of 4 navigation keys for using shortcut in the idle mode.

Call Menu #.5

You can set the menu relevant to a call by pressing the left soft key [OK] in the **call** menu.

Call divert (Menu #.5.1)

The **Call divert** service allows you to divert incoming voice calls, fax calls, and data calls to another number. For details, contact your service provider.

Call barring (Menu #.5.2)

The Call barring service prevents your phone from making or receiving certain category of calls. This function requires the call barring password.

Fixed dial number (Menu #.5.3) (SIM dependent)

- ▶ You can restrict your outgoing calls to selected phone numbers. The numbers are protected by your PIN2 code.

▶ **On**

You can restrict your outgoing calls to selected phone numbers.

▶ **Off**

You can cancel fixed dialling function.

▶ **Number list**

You can view the number list saved as Fixed dial number

Settings

Answer mode (Menu #.5.4)

- ▶ **Flip open:** If you select this menu, you can receive an incoming call when you open the flip.
- ▶ **Any key:** If you select this menu, you can receive a call by pressing any key except the end key and the right soft key.
- ▶ **Send key only:** If you select this menu, you can receive a call by only pressing the send key.

Send my number (Menu #.5.5) (network and subscription dependent)

- ▶ **Set by network:** If you select this, you can send your phone number depending on two line service such as line 1 or line 2.
- ▶ **On:** You can send your phone number to another party. Your phone number will be shown on the receiver's phone.
- ▶ **Off:** Your phone number will not be shown.

Call waiting (Menu #.5.6) (network dependent)

- ▶ **Activate:** If you select **Activate**, you can accept a waiting (receiving) call.
- ▶ **Cancel:** If you select **Cancel**, you cannot recognize the waiting (receiving) call.
- ▶ **View status:** Shows the status of **Call waiting**.

Excuse message (Menu #.5.7)

You can send a message to explain why you do not receive an incoming call using "Excuse message" before you reject an incoming call.

Minute minder (Menu #.5.8)

If you select **On**, you can check the call duration by a beep sound given every minute during a call.

Auto redial (Menu #.5.9)

- ▶ **On:** When this function is activated, the phone will automatically try to redial in the case of failure to connect a call.

- **Off:** Your phone will not make any attempts to redial when the original call has not connected.

Select line (Optional) (Menu #.5.0)

(Requires network operators and related services Support)

Depending on your SIM card whether to support the two-line services, you can select the desired line.

Send DTMF tones (Menu #.5.*)

You can send touch tones during an active call to control your voice mailbox or other automated phone services.

Security

Menu #.6

PIN code request (Menu #.6.1)

In this menu, you can set the phone to ask for the PIN code of your SIM card when the phone is switched on.

If this function is activated, you'll be requested to enter the PIN code.

- 1 Select PIN code request in the security settings menu,

and then press the left soft key [OK].

2 Set On/Off.

- 3 If you want to change the setting, you need to enter PIN code when you switch on the phone.

- 4 If you enter wrong PIN code more than 3 times, the phone will lock out. If the PIN is blocked, you will need to key in PUK code.

- 5 You can enter your PUK code up to 10 times. If you put wrong PUK code more than 10 times, you can not unlock your phone. You will need to contact your service provider.

Phone lock (Menu #.6.2)

You can use a security code to avoid unauthorized use of the phone. Whenever you switch on the phone, the phone will request security code if you set phone lock to **When power on**. If you set phone lock to **Immediately**, your phone will restrict you to make any calls except emergency calls.

Settings

If you set phone lock to **When SIM changed**, your phone will request security code only when you change your SIM card.

Anti Theft Mobile Tracker

(Menu #.6.3)

When the handset is stolen, handset sends the SMS to the numbers configured by real owner. To activate the ATMT feature, you will need to set ATMT on, and configure the ATMT settings with name, primary phone and secondary number. Default ATMT code is "0000." ATMT SMS will contain information about the stolen phone IMEI, current location (captured as perCell Broadcast message) & number of the person who is using that handset.

Change codes (Menu #.6.4)

PIN is an abbreviation of Personal Identification Number to prevent use by unauthorized person.

You can change the access codes: **Security code**, **PIN2 code** and ATMT code.

- 1 If you want to change the **Security code/PIN2 code** input

your original code, and then press the left soft key [OK].

- 2 Input new Security code/PIN2 code and verify them.

Flight mode

Menu #.7

This allows you to use only the phone features that do not require the use of the wireless network when you are in an airplane or in places where the wireless network is prevented.

Power save

Menu #.8

Choose to switch the factory set power saving settings on or off / Night mode / Always ON.

Reset

Menu #.9

You can initialize all factory defaults. You need **Security code** to activate this function.

Memory status

Menu #.0

You can check free space and memory usage of phone, SIM card and external memory (if inserted).

Accessories

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.

Standard Battery



Hands free earmicrophone



Travel Adapter

This charger allows you to charge the battery while away from home or your office.



Note

- ▶ Always use genuine LG accessories.
- ▶ Failure to do so may invalidate your warranty.
- ▶ Accessories may vary in different regions: please check with our regional service company or agent for further information.

Technical data

General

Product name: KF305

System: E-GSM 900 / DCS 1800 / PCS 1900

Ambient Temperatures

Max: +55°C (discharging)
+45°C (charging)

Min: -10°C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri Band Terminal Equipment

Model Name

KF305

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v1.2.1

EN 300 328 V 1.7.1

EN 60950-1: 2001

EN 50360:2001/EN62209-1:2006

EN 301 511 V9.0.2

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom

Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, Fax : +31 - 36 - 547 - 8794
e-mail : jacob@lge.com

Name

Issued Date

Seung Hyoun, Ji / Director

10. Nov. 2009

Signature of representative

Memo

[illegible]



Warranty Card 產品保用證

Mobile Phone 手提電話

服務承諾

- 服務員親切熱情的服務態度
- 多用途互動訊息系統
- 完善售後服務，提供專業的保養服務
- 為客戶介紹及推薦最新產品
- 有效率和快捷的服務
- 不斷創新產品，給客戶無限驚喜

Warranty Card

產品保用證

LG Customer Care Centre

客戶維修服務中心



**Welcome to contact for detailed information
& Customer Care Centre address**

歡迎致電查詢詳細資料及維修服務中心地址

Customer Service Hotline 客戶服務熱線 : (852) 3543 7777

E-mail Us 客戶查詢電郵 : cshelpdesk@lge.com

LG Website 瀏覽網站 : hk.lge.com

**Thank you for your purchase of LG Electronics product under the terms
and conditions listed on this warranty card.**

多謝閣下購買及使用本公司之產品，請參閱保用證所列之產品保用條款。

**IMPORTANT : Please keep and present this warranty card and purchase invoice when services are rendered.
Otherwise, this warranty will be voided.**

重要事項：顧客請保留此保用證和購貨發票，並需在檢查／維修時出示，否則保用無效。

Mobile Phone Warranty Policy


手提電話保用條款

- (1) LG Electronics Hong Kong Limited (hereafter LGEHK) provides warranty period from the date of purchase are as follows and only valid for mobile purchase in Hong Kong only (any promotion gift item is not included) :
 - (i) Handset :12 months (ii) Charger :6 months
 - (iii) Battery :6 months (iv) Hand free earphone :3 months.
- (2) Warranty is valid only for authorized product; parallel import and counterfeit product are invalid.
- (3) Product is under warranty against manufacturing defects by reason of faulty workmanship or internal electronic parts materials.
This warranty does not cover defects arising from natural wear of the product (including casing, key pad, display, antenna, and accessories. etc.)
- (4) If check-up or repairing are required, customer must present the original invoice and warranty card on which the relevant IMEI number was printed. Upon any failure to present the above documentation, customer must pay for the costs of the services provided.
- (5) All parts replaced within the warranty period are the property of LGEHK. We have rights to handle those parts as necessary.
- (6) Data stored in handsets may be lost after the repair and thus should be properly stored by customer beforehand.
- (7) Warranty will be voided under the following conditions, and LGEHK reserves the right to refuse providing service and/or shall demand charges for any costs of servicing from customer :
 - (i) Product has been tampered with or undergone unauthorized repair by third parties, improper installation, alternation or modification to this product, or damage, tearing, removal of the warranty sticker that is affixed to this product.
 - (ii) Defects arising from misuse, mishandling, abuse, accident, negligence and damage caused directly or indirectly by fire, flood, liquid water, corrosion, convulsion of nature, war, riot or civil commotion.
 - (iii) The IMEI number sticker on this product has been erased or modified.
 - (iv) The content of warranty policy has been modified without authorization.
- (8) LGEHK is not responsible for any loss of data or system corruption during the process of transportation or repair to and from the Service Centre and due to the forces of nature.
- (9) LGEHK reserves the right to terminate or modify the terms of this warranty card. For exceptional cases, subject to report of our investigation, we reserve the right to terminate this warranty card or modify terms of warranty policy.
- (10) Our company will not be liable for any loss directly or indirectly caused by the breakdown of the product.
- (11) This warranty card is restricted within Hong Kong SAR only.

Mobile Phone Warranty Policy

手提電話保用條款

- (1) 本公司為客戶提供保修期如下，只適用於香港購買之手機，並不包括各促銷活動之贈品(由購買日起計)
 - (i) 機身：12個月
 - (ii) 充電器：6個月
 - (iii) 電池：6個月
 - (iv) 免提耳機：3個月
- (2) 保修服務只適用於原裝行貨；水貨及冒牌貨均屬無效。
- (3) 此保修只適用於生產上的瑕疵，如電子零件偶然出現毛病，並不包括手機的自然磨損包括外殼、鍵盤、顯示屏、天線、附件等。
- (4) 用戶要求維修服務時，須同時攜同手機、保用證及印有IMEI號碼之有效發票正本到本公司指定之維修中心進行維修，否則保修服務無效，客戶須繳付維修費用。
- (5) 在保修期內維修更換后的所有零件、配置及附件，均屬本公司所有，本公司有權作出任何處理。
- (6) 手機內存資料有可能因維修后遺失，請顧客要自行保存。
- (7) 在下列情況下本保用證將自動失效，本公司有權拒絕維修該手機或向客人徵收所有的維修費用。
 - (i) 手機曾作未許可之維修、不適當的安裝、更改、或貼於其上的維修貼紙遭受損毀、撕破、除去、保修服務即無效。
 - (ii) 手機曾被錯誤使用、錯誤處理、疏忽使用、直接或間接意外由火、液體、火災、腐蝕、地震、戰爭、暴亂或天災所造成的損壞。
 - (iii) 手機上的IMEI號碼貼紙一經修改或除去，保修服務即無效。
 - (iv) 擅自修改本保用證的內容。
- (8) 本公司將對任何於使用、維修或運送時引致之系統錯誤及資料流失、或因天然災害、意外事件造成之損失概不負責。
- (9) 本保用證的發出及終止權均屬本公司所有。就不明的情況或個案，經審查後，本公司有權發出或終止本保用證。
- (10) 本公司將不負責由於產品損壞而直接或間接引致之任何損失。
- (11) 此保用證只適用於香港特別行政區範圍內。

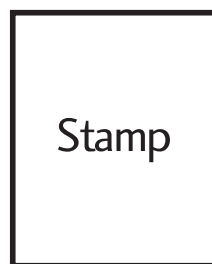

To:

LG Electronics HK Ltd.
North Point Post Office Box No.54509
香港北角郵政信箱54509號

To provide our best after-sales service, please complete and return this warranty card to us.

Customer Information

客戶姓名

地址

雷郵

MOBILE:

手提電話

Form 6

家居電話 _____

[illegible]

機身IMEI編號

購買日期

[illegible]

Retailer Information

零售商資料

Retailer's Name:

零售店名稱

Address:

Address: |

地址 |

Comments



Memo

[illegible]

Memo

[illegible]

Memo

[illegible]

Memo

[illegible]