LG
Life's Good

ENGLISH

General Inquiries

<LG Customer Information Center>

0844-847-5847

* Make sure the number is correct before making a call.

User Guide
KM570

PRINTED WITH SOY INK

CE 0168

P/N : MMBB0369626 (1.0) W

www.lg.com

FM Transmitter	The FM transmitter is intended to be used in all European countries except in Cyprus & Greece where the restrictive use applies.

Bluetooth QD ID B016265

LG KM570 User Guide

Congratulations on your purchase of the advanced and compact KM570 phone by LG, designed to operate with the latest digital mobile communication technology.

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

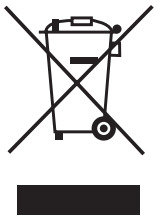

Disposal of your old appliance

1 When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.

2 All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.

3 The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.

4 For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

Contents

Guidelines for safe and efficient use .. 5

Getting know your phone..... 10

Installing the SIM and battery/ Charging your phone 12

Memory card 14

Installing a memory card..... 14
Formatting the memory card 14

Your home screen..... 15

Touch screen tips 15
Proximity sensor..... 15
Control the touch screen..... 15
The quick keys 17
Using the multitasking function..... 17
Changing your status from the status bar 17
Viewing the status bar 18

Calls 19

Making a call or a video call 19
Making a call from your contacts.... 19
Answering and rejecting a call..... 19
In-call options 20
Speed dialling 20
Making a second call..... 21
Viewing your call logs 21
Changing the call settings..... 21
Changing the common call setting.. 22

Contacts..... 23

Searching for a contact..... 23
Adding a new contact 23
Creating a group 23
Changing your contact settings..... 24
Viewing information 24

Messaging/E-mail..... 25

Messaging 25
Sending a message 25
Entering text..... 25
T9 mode 25
Abc mode 26
123 Mode..... 26
Handwriting recognition 26
Setting up your email..... 26
Microsoft Exchange email account.. 26
Retrieving your emails..... 26
Sending an email using your new account 27
Changing your email settings 27
Message folders..... 28
Changing your text message settings. 28
Changing your multimedia message settings..... 29
Changing your other settings..... 29
Social network services (SNS) 30
Facebook..... 30

Camera 32

Getting to know the viewfinder 32
Taking a quick photo 33
After taking a photo..... 33
Using the advanced settings..... 34

Video camera 36
Getting to know the viewfinder 36
Making a quick video 37
After making a video 37
Using the advanced settings 38

Your photos and videos 39
Viewing your photos and videos 39
Using zoom when viewing a photo .. 39
Adjusting the volume when viewing a video 39
Capturing an image from a video 39
Viewing your photos as a slide show 40
Setting a photo as a wallpaper 40
Editing your photos 40
Adding text to a photo 41
Cropping a photo 41
Changing your photo 42
Adding an effect to a photo 42
Trimming the length of the video 43
Merging two videos together 43
Merging a photo with a video 44
Adding text to a video 44
Overlaying a photo 44
Adding a soundtrack to your video .. 45
Adding a voice recording 45
Changing the speed of your video ... 46
Creating a movie 46

Entertainment 47
Images 47
My images options menu 47
Sending a photo 47
Using an image 47
Printing an image 48
Moving or copying an image 48
Sounds 48
Using a sound 48
Videos 49
Watching a video 49
Sending a video clip 49
Games & Apps 49
Installing a Java game and application 49
Documents 50
Transferring a file to your phone 50
Others 50
Music 51
Transferring music onto your phone 51
Playing a song 52
Creating a playlist 52
Creating your ringtone 52
FM radio 53
Searching for stations 53
Using the FM transmitter to play music 53

Utilities 55
Setting your alarm 55
Adding an event to your calendar 55
Adding an item to your tasks list 56
Using date finder 56
Adding a memo 56
Voice recorder 57
Recording a sound or voice 57
Using your calculator 57

Contents

Converting a unit 57
Adding a city to your world clock 58
Using the stopwatch 58
Sweet draw..... 58
Adding a memo with the sweet draw 59

PC sync 60
Installing LG PC suite on your computer 60
Connecting your phone and PC 60
Backing up and restoring your phone's information 60
Viewing phone files on your PC..... 61
Synchronising your contacts..... 61
Synchronising your messages 61
Using your phone as a mass storage device..... 61

Browser 63
Accessing the web 63
Google..... 63
Access to Google Service..... 63
Adding and accessing your bookmarks 63
Using RSS reader 64
Saving a page 64
Accessing a saved page..... 64
Viewing your browser history..... 64
Changing the web browser settings 65
Using your phone as a modem 65

Settings 66
Personalising your profiles 66
Changing your screen settings 66
Changing your phone settings 67
Change your touch settings..... 68
Using memory manager..... 68
Changing your Bluetooth settings ... 68
Pairing with another Bluetooth device 69
Using a Bluetooth headset..... 69
Sending and receiving your files using Bluetooth 70
Changing your connectivity settings 70
Phone Software update..... 72

Accessories 74

Trouble Shooting..... 75

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information. This mobile phone model KM570 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over 10 g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.994 W/kg (10 g) and when worn on the body is 1.20 W/kg (10 g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1 g of tissue.

Product care and maintenance

⚠ WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

Guidelines for safe and efficient use

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
  Repairs under warranty, at LG's option, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Guidelines for safe and efficient use

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.

- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

Getting know your phone

Handsfree or Stereo earphone connector

Power key / Lock&Unlock key
Turns the phone on/off.

Earpiece

Inner camera lens

Proximity Sensor

⚠ **WARNING:** Moisture on the proximity sensor may cause it to malfunction. Please wipe any moisture off the sensor surface.

End key
Rejects a call.

Touch once to return to the home screen.

Call key
Dials a phone number and answers incoming calls.

Multitasking key

⚠ **WARNING:** Putting a heavy object on the phone or sitting on it can damage its LCD and touch screen functionality.
Do not cover the proximity sensor with a protective film or cover. It can cause the sensor to malfunction.

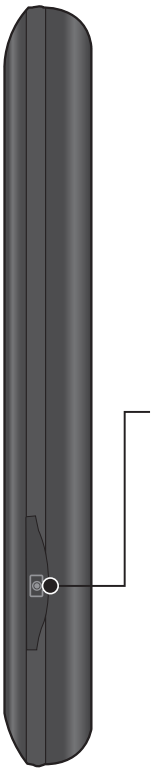

Camera key
Go to the camera menu directly by pressing and holding the key.

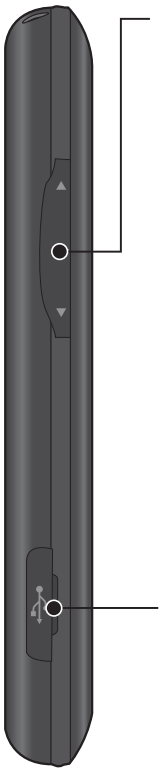

Volume keys

- When the screen is at the home screen: Touch tone or ring tone volume, press long the down key to silent on/off.
- During a call: Earpiece volume.
- When playing a track: Controls the volume continuously.

Charger and USB data cable connector

TIP! Before connecting the USB cable, wait until the phone has powered up and has registered on the network.

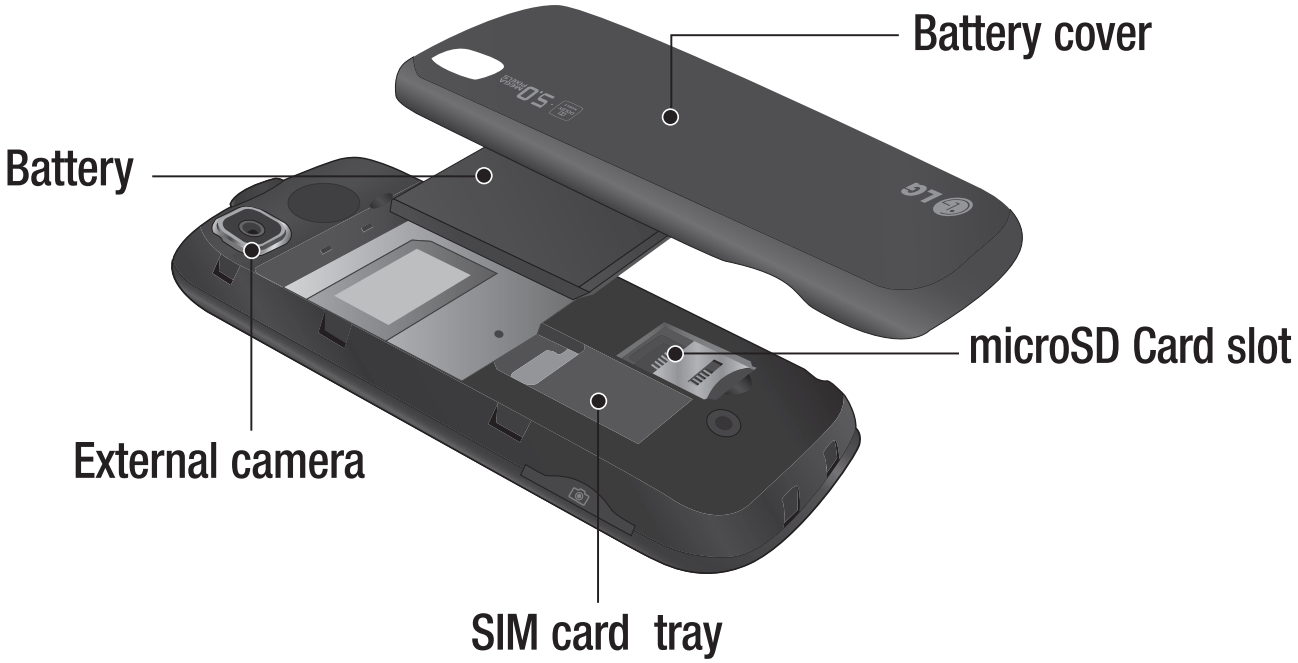

Installing the SIM and battery/Charging your phone

1 Press and hold down the battery release button on the top of the phone and lift off the battery cover.

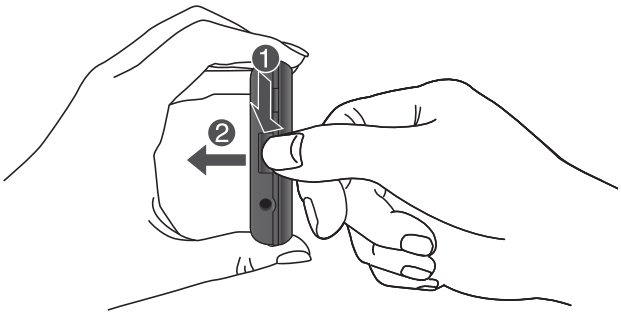

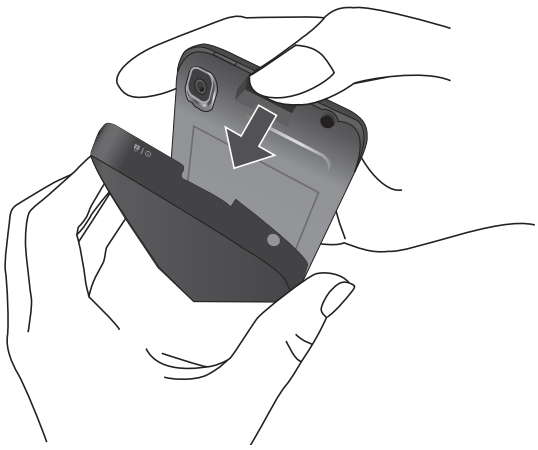

Hold the top edge of the battery and lift it away from the battery compartment.

> ⚠ **WARNING:** Do not remove the battery when the phone is switched on, as this may damage the phone.

2 Slide the SIM card into the SIM card holder. Make sure the gold contact area on the card is facing downwards. To remove the SIM card, pull it gently in the outwards.

3 First insert the top of the battery into the top edge of the battery compartment. Ensure that the battery contacts align with the phone's terminals. Press the bottom of the battery down until it clips into place.

4 Ensure the battery is fully charged before using the phone for the first time.

5 With the arrow facing you as shown in the diagram push the plug on the travel adapter into the socket on the side of the phone until it clicks into place.

6 Connect the other end of the travel adapter to the main socket.

7 The moving bars of battery icon will stop after charging is complete.

NOTE: The battery must be fully charged initially to improve battery lifetime. Disregard the first “Battery full” message and keep the phone on charge overnight.

Memory card

Installing a memory card

You can expand the memory space on your phone by using a microSD memory card.

NOTE: A memory card is an optional accessory.

1 Remove the battery cover.

2 Push the microSD card slot to release lock.

3 Flip up the slot.

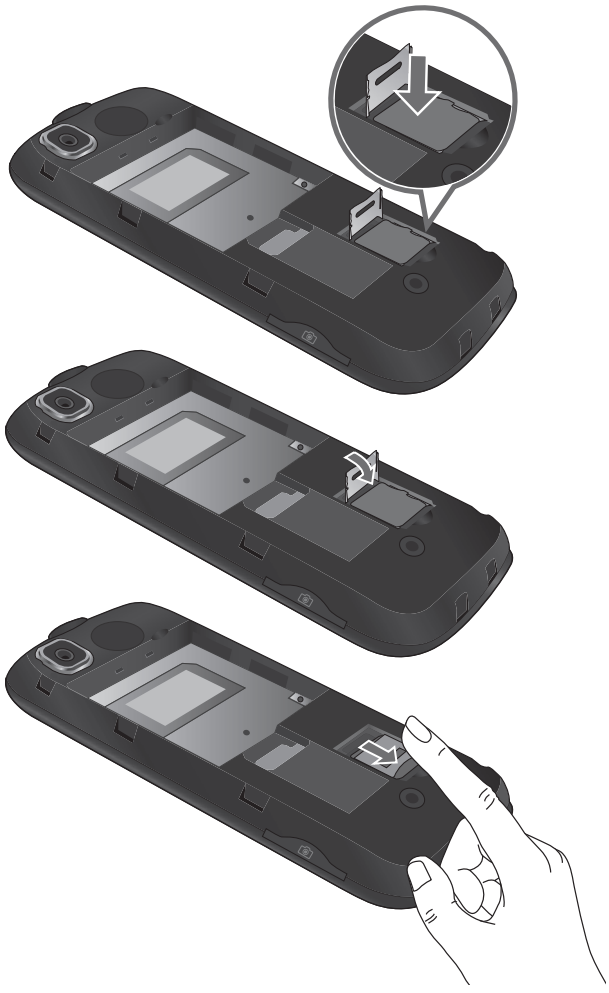

4 Put the microSD card on the card tray. Make sure the gold colour contact area is facing downwards.

5 Flip down then push the slot to lock.

6 Replace the cover.

Formatting the memory card

Your memory card may already be formatted. If it isn't, you will need to format it before you can start to use it.

NOTE: All files get deleted while formatting.

1 From the home screen, touch , and select **Phone settings** on the **SETTINGS** tab.

2 Touch **Memory info** then choose **External memory**.

3 Touch **Format** and then confirm your choice.

4 Enter the password, if one is set. Your card will then be formatted and ready to use.

NOTE: If there is existing content on your memory card, the folder structure may be different after formatting since all files will have been deleted.

Your home screen

Touch screen tips

- Do not press too hard. The touchscreen is sensitive enough to pick up a light, firm touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.
- Whenever your phone is not in use, it will return to the lock screen.
- When the screen light is off, press the power key or slide up the touch screen to return the home screen.

Proximity sensor

When receiving and making calls, this sensor automatically turns the backlighting off and locks the touch keypad by sensing objects when the phone is near the ear.

This makes the battery life last longer and prevents the touch keypad from malfunctioning through automatic key locking during calls.

Users, therefore, do not have the inconvenience of unlocking the phone when searching the contacts during calls.

Control the touch screen

The controls on the KM570 touch screen change dynamically depending on the task you are carrying out.

Opening Applications

To open any application, simply touch the centre of the icon.

Scrolling

Drag from side to side to scroll. On some screens, such as the call history list, you can also scroll up or down.

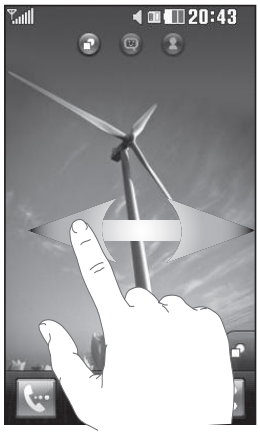

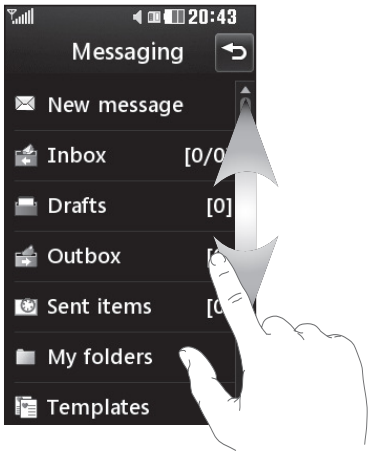

Your home screen

You can drag and click what you need right away in all home screen types.

Active

Widget home screen - When you touch on the bottom right of the screen, the mobile widget panel appears. When you register widget by dragging it, the widget is created in the spot where it was dropped.

Active

Active

Quick key icon

Speed dial home screen - When you touch , the speed dial list appears. You can call, send a message or edit the contact directly in this home screen.

Livesquare home screen - On the Livesquare screen, You can easily make a call and send a message to the number allocated to an avatar. To use the call, messaging or contacts function, select an avatar and choose the **Quick key icon** you want to use.
You can drag all of the avatars by six and even send the message at once.

TIP! The User Interface is based on three types of home screen. To swap between the home screens just wipe quickly over the display from left to right, or from right to left.

The quick keys

The quick keys on your home screen provide easy, one-touch access to the functions you use the most.

Touch to bring up the touch dialling pad to make a call.

Touch to open your **Contacts**. To search for the number you want to call, enter the name of the contact at the top of the screen using the touchpad. You can also create new contacts and edit existing ones.

Touch to access the **Messaging** menu. From here you can create a new SMS or MMS, or view your message folder.

Touch to open the top menu which is divided into four categories: **COMMUNICATION, ENTERTAINMENT, UTILITIES** and **SETTINGS.**

Using the multitasking function

Touch the multitasking key to open the multitasking menu. From here you can view all the applications that are running and access them with one touch.

When you have an application running in the background will appear in the status bar.

Changing your status from the status bar

Touch the centre of the status bar to open the **Status Summary**. It shows the current time, network, service ID, battery, handset memory, external memory, profile, MP3 and Bluetooth status. Here you can set the profile type, play/pause MP3 and activate/deactivate Bluetooth.

Your home screen

Viewing the status bar

The status bar uses various icons to indicate things like signal strength, new messages and battery life, as well as telling you whether your Bluetooth or GPRS is active.

Below is a table which explains the meaning of the icons you're most likely to see in the status bar.

Icon	Description
	Multitasking
	Network signal strength (number of bars will vary)
	No network signal
	EDGE in use
	Roaming
	Bluetooth is active
	Calls are diverted
	Remaining battery life
	Battery empty
	New text message

Icon	Description
	New voice message
	Message inbox is full
	Message sending failed
	Multimedia message sending failed
	An alarm is set
	Normal profile in use
	Outdoor profile in use
	Silent profile in use
	Headset in use
	Flight mode is on
	Customised profile in use (The number in the icon will vary)
	BGM play
	BGM pause
	Memory card is enabled for use

Calls

Making a call or a video call

1 Touch to open the keypad.

2 Key in the number using the keypad.

3 Touch to initiate the call.

4 To end the call, touch the end key.

TIP! To enter + for making an international call, touch and hold 0+.

TIP! Press the power key to lock the touchscreen to prevent calls being made by mistake.

Making a call from your contacts

1 From the home screen touch to open the **Contacts**.

2 Tap the **Name** field box on the top of the screen and enter the first few letters of the contact you would like to call using the keypad.

3 From the filtered list, touch the call icon next to the contact you want to call. The call will use the default number if there is more than one for that contact.

4 Or, you can touch the contact name and select the number to use if there is more than one for that contact to use. You can also touch to initiate the call to the default number.

Answering and rejecting a call

When your phone rings, touch the send key to answer the call.

To mute the ringing, touch . This is useful if you forgot to change your profile to **Silent** for a meeting. Touch **Reject** to reject an incoming call.

Calls

In-call options

Touch this icon to put a call on hold.

Touch this icon to turn off the microphone so the person you are talking to cannot hear you.

Touch this icon to turn on the speaker phone.

Choose from a list of further in-call options, including go to messages, so you can check your messages, go to contacts to add or search contacts during a call. You can also end the call from here by touching end call.

Choose to open a numerical keypad for navigating menus with numbered options. For example, when dialling call centres or other automated telephone services.

Choose to add another person to the call.

Choose to search your contacts during a call.

TIP! To scroll through a list of options or your list of contacts, touch the last item visible and slide your finger up the screen. The list will move up so more items become visible.

Speed dialling

You can assign a frequently-called contact to a speed dial number.

1 From the home screen, touch and select **Contacts** on the **COMMUNICATION** tab, then select **Speed dials**.

2 Your voicemail is already set to speed dial 1. You cannot change this. Touch any other number to assign it a speed dial contact.

3 Your contacts will open. Select the contact you want to assign to that number by touching their phone number once. To find a contact, tap the **Name** field box and enter the first letter of the name of the contact required.

Making a second call

1 During your initial call, touch and type the number you want to call.

2 Touch to connect the call.

3 Both calls will be displayed on the call screen. Your initial call will be locked and the caller put on hold.

4 To change between the calls, touch or touch the number of the held call.

5 To end one or both calls press and select **End** followed by **All**, **Held** or **Active**.

TIP! Touch any single call log entry to view the date, time and duration of the call.

NOTE: You will be charged for each call you make.

Viewing your call logs

From the home screen, touch and select **Call history** on the **COMMUNICATION** tab.

TIP! Touch any single call log entry to view the date, time and duration of the call.

Changing the call settings

You can set the menu relevant to a call. From the home screen, touch and select **Call settings** on the **SETTINGS** tab.

Call divert - Choose whether to divert your calls.

Call waiting - Be alerted when you have a call waiting. (Depends on your network provider.)

Call barring - Select when you would like calls to be barred.

Fixed dial numbers - Choose a list of numbers that can be called from your phone. You'll need your PIN2 code from your operator. Only numbers included in the fixed dial list can be called from your phone.

Reject call with SMS - When you reject a call, you can send a message quickly by using this function. This is useful if you need to reply the message during a meeting.

Call costs - View the charges applied to your last call or all calls. (This service is network dependent, some operators are unable to support this.)

Calls

Call durations - View the charges applied to your dialled numbers and the call duration of all your calls; received and dialled. (This service is network dependent, some operators are unable to support this.)

Data volume - View the amount in kilobytes of all your received and sent data.

Common settings - Please see **Changing the common call setting**.

Video call settings - Change the settings of your video calling.

Changing the common call setting

1 From the home screen, touch and select **Call settings** on the **SETTINGS** tab.

2 Scroll and touch **Common settings**. From here you can adjust the settings for:

Call reject - Slide the switch to **ON** to highlight the reject list. You can touch the text box to choose from all calls, specific contacts or groups, or those from unregistered numbers (those not in your contacts) or with no caller ID. Touch **Save** to change the setting.

Send my number - Choose whether your number will be displayed when you call someone.

Auto redial - Slide the switch left for **ON** or right for **OFF**.

Minute minder - Slide the switch left to **ON** to hear a tone every minute during a call.

BT answer mode - Select **Hands-free** to be able to answer a call using a Bluetooth headset, or select **Handset** to touch a key on the handset to answer a call.

Save new number - Select **Yes** to save a new number.

Proximity sensor - Slide the switch left for **ON** or right for **OFF.**

Contacts

Searching for a contact

1 From the home screen, touch and select **Contacts** on the **COMMUNICATION** tab.

2 Touch **Search**.

3 You see a list of contacts. Typing in the first letter of a contact's name in the **Name** field box will jump the menu to that alphabetical area of the list.

TIP! The alphabetical keypad is displayed once you tap the **Name** field box.

Adding a new contact

1 From the home screen, touch and select **Contacts** on the **COMMUNICATION** tab, then touch **Add contact**.

2 Choose whether to save the contact to your **Handset** or **SIM**.

3 Enter your first and last name.

4 You can enter up to different numbers per contact. Each entry has a preset type **Mobile**, **Home**, **Office**, **Pager**, **Fax**, **VT** and **General**. When you have finished, touch **Close.**

5 Add an email address and IM address.

6 Assign the contact to one or more groups. Choose between **No group**, **Family**, **Friends**, **Colleagues**, **School** or **VIP**.

7 You can also add a **Ringtone**, **Birthday**, **Anniversary**, **Homepage**, **Home address**, **Company name**, **Job title**, **Company address, Memo,** and **Livecon**.

8 Touch **Save** to save the contact.

Creating a group

1 From the home screen, touch and select **Contacts** on the **COMMUNICATION** tab, then touch **Groups**.

2 Touch **Add group** or touch and select **Add group**.

3 Enter a name for your new group. You can also assign a ringtone to the group.

4 Touch **Save**.

NOTE: If you delete a group, the contacts which were assigned to that group will not be lost. They will remain in your contacts.

Contacts

Changing your contact settings

You can adapt your contact settings so that your contacts suits your own preferences.

1 From the home screen, touch and select **Contacts** on the **COMMUNICATION** tab, then touch **SETTINGS**.

2 From here, you can adjust the following settings:

Contact list settings - Adjust the **Contacts location**, **Name display,** and **Quick command key** settings.

Copy - Copy your contacts from your handset to your SIM or from your SIM to your handset. You can choose one at a time, or all at once.

Move - This works in the same way as **Copy**, but the contact will only be saved to the location you've moved it to.

Send all contacts via Bluetooth - Send all of your contacts to another device using Bluetooth. You will be prompted to turn on Bluetooth if you select this option.

Backup contacts - Performs a backup your contacts on to the external memory. This option requires external memory.

Restore contacts - Restores your contacts from the external memory. This option requires external memory.

Clear contacts - Delete all your contacts. Choose between **Handset** and **SIM** and touch **Yes** if you are sure you want to wipe your contacts.

Viewing information

1 From the home screen, touch and select **Contacts** on the **COMMUNICATION** tab, then touch **Information**.

2 From here you can view your **Service dial numbers**, your **Own number**, your **Memory info.** (showing your memory usage) and **My business card**.

TIP! To add your own business card, select **My business card** and enter your details as you would for any contact. Touch **Save** to finish.

Messaging/E-mail

Messaging

Your phone combines SMS and MMS into one intuitive and easy-to-use menu.

Sending a message

1 From the home screen, touch and select **Messaging** on the **COMMUNICATION** tab. And touch **New message** to begin composing a new message.

2 Touch **Insert** to add an image, video, sound, template and so on.

3 Touch **Recipient** at the bottom of the screen to enter the recipients. Then enter the number or touch to select a contact. You can even add multiple contacts.

4 Touch **Send** when ready.

> ⚠ **WARNING:** If an image, video or sound is added to an SMS, it will be automatically converted to an MMS and you will be charged accordingly.

Entering text

There are five ways to enter text: **Keypad, Keyboard, Handwriting-Screen, Handwriting-Box,** and **Handwriting-Double Box**.

You can **choose** your input method by tapping and **Input method**.

Touch to turn on T9 mode. This icon is only shown when you choose **Keypad** as the input method.

Touch to choose the writing language.

Touch to change from numbers, symbols and text input.

Use **Shift** to change between capital or lowercase input.

T9 mode

The T9 mode uses a built-in dictionary to recognise the words you're writing based on the sequence of keys you've touched. It predicts the word you are inputting and suggests alternatives.

Messaging/E-mail

Abc mode

This mode allows you to enter letters by touching the key labeled with the required letter once, twice, three or four times until the letter is displayed.

123 Mode

This mode allows you to enter numbers in a text message (a telephone number, for example) more quickly. Touch the keys corresponding to the required digits before manually switching back to the appropriate text entry mode.

Handwriting recognition

In Handwriting mode you simply write on the screen and Your phone will convert your handwriting into your message. Select **Handwriting-Screen** or **Handwriting-Box** according to your preferred view.

Setting up your email

From the home screen, touch and select **E-mail** on the **COMMUNICATION** tab.

If the email account is not set up, start the email set up wizard and finish it.

You can check and edit settings by selecting . You can also check the additional settings that were filled in automatically when you created the account.

Microsoft Exchange email account

Email address - Enter the account email address.

Server address - Enter the email server address.

Domain - Enter the account domain (Optional).

Username - Enter the account's username.

Password - Enter the account's password.

Now your account is set up, it will appear in the list of accounts in your E-mail folder.

Retrieving your emails

You can automatically or manually check your account for new emails. To check manually:

1 From the home screen, touch and select **E-mail** on the **COMMUNICATION** tab.

2 Touch the account you want to use.

Sending an email using your new account

1 From the home screen, touch and select **E-mail** on the **COMMUNICATION** tab.

2 Touch **New e-mail** and a new email will open.

3 Complete the message.

4 Touch **Send** and your email will be sent.

Changing your email settings

1 From the home screen, touch and select **E-mail** on the **COMMUNICATION** tab.

2 Touch and select **E-mail settings** and then you can adapt the following settings:

E-mail accounts - You can set up an email account.

Preferred e-mail

Allow reply e-mail - Choose to allow the sending of read confirmation messages.

Request reply e-mail - Choose whether to request read confirmation messages.

Retrieve interval - Choose how often your KM570 checks for new email messages.

Retrieve amount - Choose the number of emails to be retrieved at any one time.

Include message in Fwd. & Reply - Choose to include the original message in your reply.

Include attachment - Choose to include the original attachment in any reply.

Auto retrieval in roaming - Choose whether to retrieve your messages automatically when abroad (roaming).

New e-mail notification - Choose whether to be alerted to new emails.

Signature - Switch this feature **ON** and create an email signature.

Priority - Choose the priority level of your email messages.

Mail sending size - Set the maximum size of sending mail.

E-mail counter - Input the date you want. You can check emails you sent during that period.

Messaging/E-mail

Message folders

You'll recognise the folder structure used on your KM570, which is fairly self-explanatory. From the home screen, touch and select **Messaging** on the **COMMUNICATION** tab. And choose from the list below:

Inbox - All the messages you receive are placed into your inbox.

TIP! When you receive the message, you can reply quickly by using **Quick reply** function. This is useful if you need to reply the message during a meeting.

TIP! While you see the message, touch and select **Extract**. You can extract the information such as a number, e-mail address or web address from the selected message.

Drafts - If you do not finish writing a message, you can save what you have done in this folder.

Outbox - This is a temporary storage folder while messages are being sent.

Sent items - All the messages you have sent are placed in this folder.

My folders - Create folders to store your messages.

Templates - A list of pre written useful messages, useful for a quick reply.

Emoticons - You can add, edit and delete emoticons. You can insert the emoticon which you preferred on writing a message.

Settings - Your message settings are predefined so that you can send messages immediately. If you would like to change the settings, you can do this using the settings options.

Changing your text message settings

From the home screen, touch and select **Messaging** on the **COMMUNICATION** tab. Then choose **Settings** and **Text message**. You can make changes to:

Text message centre - Enter the details of your message centre.

Delivery report - Slide the switch left to **ON** to receive confirmation that your messages have been delivered.

Validity period - Choose how long your messages are stored at the message centre.

Message types - Convert your text into **Text, Voice**, **Fax**, **X.400** or **E-mail**.

Character encoding - Choose how your characters are encoded. This impacts the size of your messages and therefore data charges.

Send long text as - Choose to send long messages as **Multiple SMS** or as an **MMS**.

Changing your multimedia message settings

From the home screen, touch and select **Messaging** on the **COMMUNICATION** tab. Then choose **Settings** and **Multimedia message**. You can make changes to:

Retrieval mode - Choose between **Home network** or **Roaming network**. If you then choose **Manual** you will receive only notifications of MMS and you can then decide whether to download them in full.

Delivery report - Choose to request and/or allow delivery reports.

Read reply - Choose to request and/or allow read replies.

Priority - Choose the priority level of your multimedia message.

Validity period - Choose how long your messages are stored at the message centre.

Slide duration - Choose how long your slides appear on the screen by default.

Creation mode - Choose to create multimedia messages freely or restrictively.

Delivery time - Choose how long to wait before a message is delivered.

Multi msg centre - Choose or add a multimedia message centre.

Changing your other settings

From the home screen, touch and select **Messaging** on the **COMMUNICATION** tab, then touch **Settings**.

Messaging/E-mail

Voicemail - Touch to add a new Voicemail service. Contact your network operator for more information about the service they provide.

Service message - Choose to receive or block service messages. You can also set your message security by creating trusted and untrusted lists of senders in **Service security** option.

Message counter - Choose to set period for counting messages.

Info. service - Choose whether to turn cell broadcast on/off and select your channels and languages.

Social network services (SNS)

With your phone, you can enjoy the social network services and manage your micro-blog on SNS. You can update your own SNS place status and view your friends' SN updates. Touch **Social network** menu and select the site as below: Orkut, Facebook, Twitter, Picasa, Flickr, and Myspace.

TIP! Facebook is a native application preloaded onto your phone, and easy to access. Twitter is a java application based on Java technology. Other applications access to the WAP (Wireless Application Protocol) services.

NOTE: An additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.

Facebook

Home: Log in and you will see your friend's updated status. Input your comment about new status or check others. You can also write comments by selecting + icon.

Profile: You can select the Wall > Status updates and write the current status. See your info detail and upload the photo by touching Album > Upload Photo. Choose from Go to images or Take a picture, and then input some caption with images.

Friends: You can find many friends in SNS and view their status. Search your friends in facebook by selecting Search tap.

Message: You can see the Inbox/ Sent folder, and write a SN message.

TIP! Using Facebook Feed Widget
You can add the facebook feed widget to your home screen. Drag the facebook feed widget from widget tray and touch OK. You can also access the facebook application directly by touching up the feed widget.

Camera

Getting to know the viewfinder

Exposure - This defines and controls of the amount of sunlight entering the image. Slide the brightness indicator along the bar, towards "–" for a lower brightness image, or towards "+" for a higher brightness image.

Zoom - Zoom in or zoom out. Alternatively you can use the side volume keys. This function is enabled depending on the picture size you take.

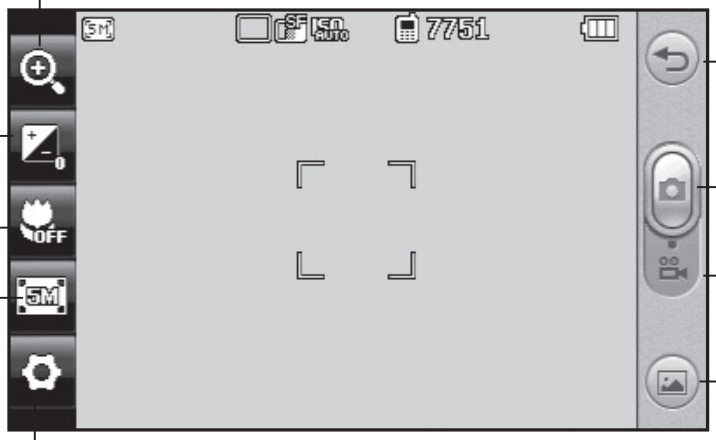

Back - Touch here to return to the menu map.

Taking a photo

Video mode - Slide down this icon to switch to video mode.

Gallery -This enables you to access your saved photos from within the camera mode. Simply touch, and your gallery will appear on the screen.

Settings - Touch this icon to open the settings menu.
See **Using the advanced settings**.

Size - Change the size of the photo to save memory space or take a picture preset to the correct size for a contact. Select a pixel value from the numerical options:
5M (2560x1920), 3M (2048x1536), 2M (1600x1200), 1M (1280x960), VGA (640x480), WQVGA (400x240), QVGA (320x240).

Macro - Switch this on to take close up shots.

TIP! You can bring up the options by tapping the screen. They automatically turn off after a few seconds.

Taking a quick photo

1 Press the camera key on the right side of the phone.

2 Holding the phone horizontally, point the lens towards the subject of the photo.

3 Press the camera key lightly and a focus box will appear in the centre of the viewfinder screen.

4 Position the phone so you can see the photo subject in the focus box.

5 When the focus box turns green, the camera has focused on your subject.

6 Press the camera key fully to capture the shot.

TIP! To switch to the camera mode or video mode, slide up/down the camera or video icon on the centre-right of the viewfinder.

After taking a photo

Your captured photo will appear on the screen. The following options are available:

Touch to send the photo as a message, e-mail or via Bluetooth.

Set the image you have just taken as home screen, a contact image or in your start up/shut down screen.

Touch to edit the photo.

Touch to edit the name of the selected picture.

Touch to return to the previous menu.

Touch to delete the photo you have just taken and confirm by touching **Yes**. The “Deleted” message appears.

Touch to take another photo immediately. Your current photo will be saved.

Touch to view a gallery of your saved photos.

Camera

Using the advanced settings

From the viewfinder, touch to open all the advanced settings options.

Shot mode - Choose from **Normal shot**, **Continuous shot** and **Panorama shot**.

Colour Effect - Choose a colour tone to apply to the photo you're taking. There are four colour tone options: **Off**, **Black & White**, **Negative** or **Sepia**.

NOTE: You can change a picture taken in colour to black and white or sepia, but you cannot change a picture taken in black and white or sepia to colour.

ISO - The ISO rating determines the sensitivity of the camera's light sensor. The higher the ISO, the more sensitive the camera will be. This is useful in darker conditions when you can not use the flash. Select the ISO value from **Auto, 100, 200, 400** and **800.**

White balance - The white balance ensures that any white in your photo is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent** and **Cloudy**.

Self-timer - The self-timer allows you to set a delay before the camera takes the picture, after the capture button is pressed. Choose from **3 seconds**, **5 seconds** or **10 seconds**. Great for the group photo you want to be part of.

Quality - Choose from **Super fine**, **Fine** and **Normal**. The finer the quality the sharper a photo will be, but the file size will increase. This means you'll be able to store fewer photos in your memory.

Focus - Choose from **Auto focus**, **Face tracking** and **Off**.

- **Auto focus -** Your camera can automatically adjust the focus for a clear, sharp image with a single press of the camera button.

- **Face tracking -** Your camera can automatically identify face and have another rectangular for better focus.
- **Off -** Focus mode is off.

View mode - Choose your view mode.

Swap cam - Switch between the inner camera and the outer camera.

More...

- **Memory** - Choose whether to save your photos to the **Handset memory** or to the **External memory**.
- **Hide icons** - Choose the camera settings icons to be hidden manually or automatically.
- **Image stabilization** - Select **On** to compensate for unsteady hands.
- **Show captured image** - Choose to view the picture with options after taking a photo.
- **Shutter sound** - Select one of the three shutter sounds.
- **Grid screen** - Choose from **Off**, **Simple cross** or **Trisection**.
- **Reset settings** - Reset all the camera settings.

Video camera

Getting to know the viewfinder

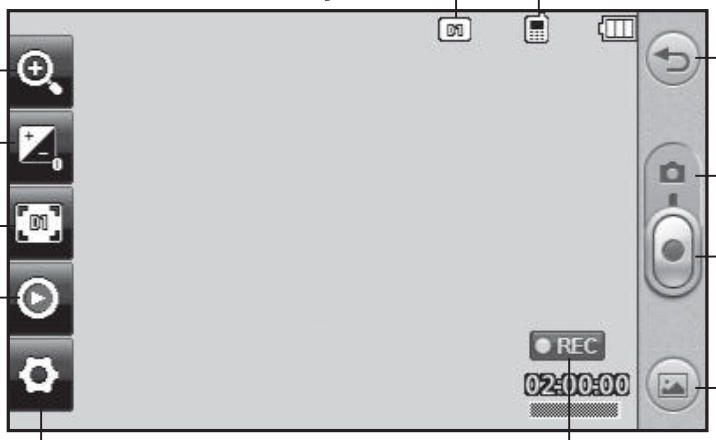

Zoom - Zoom in or zoom out. Alternatively you can use the side volume keys.

Image size

Saving to handset memory/ external memory

Back

Camera mode - Touch this icon to switch to camera mode.

Start recording

Gallery

Video mode - Video mode is selected.

Settings - Touch this icon to open the settings menu. See **Using the advanced settings**.

Recording speed - Choose your video recording speed.

Video size - Choose your video image size from D1 (720x480), VGA (640x480), QVGA (320x240) or QCIF (176x144).

Exposure - This defines and controls of the amount of sunlight entering the image. Slide the brightness indicator along the bar, towards "–" for a lower brightness image, or towards "+" for a higher brightness image.

TIP! You can close all shortcut options for a clearer viewfinder screen. Simply touch the centre of the viewfinder once. To recall the options, touch the screen again.

Making a quick video

1 Press the camera key on the right side of the phone for a few seconds.

TIP! To switch to the camera mode or video mode, slide up/down the camera or video icon on the right centre of the viewfinder.

2 Holding the phone horizontally, point the lens towards the subject of the video.

3 Press the camera key on the phone once to start recording. Or touch .

4 **REC** will appear at the bottom of the viewfinder with a timer at the bottom showing the length of the video.

5 To pause the video, touch and resume by selecting .

6 Touch on screen or press the camera key a second time to stop recording.

After making a video

A still image representing your captured video will appear on the screen. The following options are available:

Touch to play the video.

Touch to send the video as a message, e-mail or via Bluetooth.

Touch to edit the video.

Touch to edit the name of the selected picture.

Touch to return to the previous menu.

Touch to delete the video you have just made and confirm by touching **Yes**. The viewfinder will reappear.

Touch to shoot another video straight away.

Touch to view a gallery of saved videos and images.

Video camera

Using the advanced settings

From the viewfinder, touch **SETTINGS** to open all the advanced settings options.

Colour effect - Choose a colour tone to use on your new video from **Off**, **Black & White**, **Negative**, and **Sepia.**

White balance - The white balance ensures that any white in your videos is realistic. In order for your camera to correctly adjust the white balance, you may need to determine the light conditions. Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent**, and **Cloudy**.

Quality - Choose from **Super fine**, **Fine** and **Normal**. The finer the quality, the sharper a video will be, but the file size will increase. As a result, you will be able to store fewer videos in the phone's memory.

Set time - Set a time limit for your video. Choose whether or not to send the video as an MMS.

TIP! If you choose MMS duration, choosing a lower image quality will enable you to shoot a longer video.

View mode - Choose your view mode.

Select storage - Choose whether to save your videos to the **Handset memory** or to the **External memory**.

Voice - Choose whether or not to record a video with sound.

Hide icons - Choose the camera settings icons to be hidden manually or automatically.

Swap cam - Switch between the inner camera and the outer camera.

Reset settings - Reset all the video camera settings.

Your photos and videos

Viewing your photos and videos

1 From the home screen, touch and select **Gallery** on the **ENTERTAINMENT** tab. Or, touch on your camera preview screen. You can check your pictures and videos.

2 Your gallery will appear on the screen.

3 Touch the video or photo to open it fully.

4 To play the video touch . To pause playback touch .

TIP! Flick left or right to view other photos or videos.

TIP! To delete a photo or video, open it and select . Touch **Yes** to confirm.

Using zoom when viewing a photo

To zoom in touch "+" repeatedly. To zoom out touch "–". Use the thumbnail in the bottom right corner to move the focus area.

Adjusting the volume when viewing a video

To adjust the volume of a video while it is playing, touch the volume bar on the screen bottom after touching the loudspeaker symbol. Alternatively, use the volume keys on the side of the phone.

Capturing an image from a video

1 Select the video you would like to capture an image from.

2 Touch to pause the video on the frame you'd like to convert to an image and touch the upper left side of the screen to open the menu.

3 Touch and then select .

4 The image will appear on the screen, with its image name.

5 Touch to return to the video.

6 The image will be saved in your **My folder** and appear in the **Gallery**.

Your photos and videos

⚠ **WARNING:** Some functions will not work properly if the multimedia file has not been recorded on the phone.

Viewing your photos as a slide show

Slide show mode will show all the photos in your **Gallery** one at a time as a slide show. Videos can not be viewed as a slide show.

1 Touch in the **Gallery**, then scroll and select **Slide show**.

2 The slide show will begin.

There are options within slide show:

Touch to go back.

Touch to pause the slide show on a particular photo.

Touch again to resume playback.

Touch to increase or decrease the speed of the slide show.

To show random, touch and select **Random on**.

Setting a photo as a wallpaper

1 From the home screen, touch and select **Gallery** on the **ENTERTAINMENT** tab.

2 Touch the photo you would like to set as wallpaper.

3 Touch .

4 You can change the size of the picture with .

5 When you are happy with the picture touch **Set**.

6 Choose from the options what you want to change: **All**, **Widget**, **Speed dial**.

Editing your photos

1 Open the photo you'd like to edit and touch to bring up the options.

2 Touch the icons to alter your photo:

Move your finger across the screen to select the area.

Draw something on your photo freehand. Select the line thickness from the four options, then the colour you want to use.

Add writing to the picture.

Decorate your photo with stamps. Choose from the different stamps and colours and touch your photo where you want to place them.

Erase whatever you draw. You can also select the eraser size.

Touch to send the photo as a message, e-mail or via Bluetooth.

Touch to return to the gallery.

Save the changes you have made to the photos. Select to save the changes over the **Original file**, or as a **New file**. If you select **New file,** enter a file name.

Undo the last effect or edit you made to the photo.

Touch to open further effect options. There are also more advanced editing options.

Touch to open the Filter options.

You can adjust the selected photo.

Adding text to a photo

1 From the editing screen, touch .

2 Select **Signature** to add unframed text or choose one of the speech bubble shapes.

3 Enter your text using the keypad and touch **Save**.

4 Move the text by touching it and sliding it to where you want it.

Cropping a photo

1 From the editing screen, touch .

2 Choose the shape you want to use to crop the picture.

3 Drag the box over the area you want to crop.

4 When you are finished with your selection, touch .

Your photos and videos

Changing your photo

1 From the editing screen, touch .

2 Choose to alter your photo:

Rotate - Rotate or flip your photo for fun or better view.

Mirror - Reverse the photo to a mirror image.

Resize - Resize your photo.

Frame - Add a frame to your photo.

Morphing - Morphing a photo is great for changing the facial expressions of friends, or just for distorting a photo for artistic effect. If the face is detected, it will let you know the positions of the eyes and the ending points of the mouth on your photo. Select the morphing style you would like to use on the phone.

Colour Accent - Add a colour accent to a photo.

Colour Swapping - Swap the colours in a photo.

Add Images - Add some clip art on the photo.

Red-eye reduction - Reduce the red eye on your photo.

Adding an effect to a photo

1 From the editing screen, touch .

2 Choose to apply any of the options to the photo:

Face beautify - Automatically detect a face in the image and brighten it up.

Tunnel effect - Lomo camera effect.

Colour negative - Give a colour negative effect.

Black and white - Give a black and white colour effect.

Sepia - Give a sepia effect.

Blur - Give a blurred effect.

Sharpen - Move the marker along the bar to sharpen the focus of the photo. Select **OK** icon to apply the changes or choose to cancel.

Mosaic blur - Touch to apply a blurred mosaic effect to the photo.

Oil painting - Give an oil painting effect.

Sketch - Apply an effect that makes the picture look like a sketch.

Emboss - Give an emboss effect.

Solarize - Change the effect of exposure to the light.

Vivid - Give an effect of clearness and brilliance.

Moonlight - Change the light to look like moonlight.

Antique - Give an old-looking effect.

Glow - Give a light beam effect.

Cartoon - Give a cartoon effect.

Water color - Give a watercolour effect.

3 To undo an effect simply touch **Undo** ⇦.

Trimming the length of the video

1 Open the video you want to edit, select ⏸ and touch ▤.

2 Select **Edit** and choose **Trim**.

3 Touch ▶ and set the new start and end points using ✂.

4 Touch **Save** or, alternatively, touch ↩ to return to the gallery and discard the changes.

Merging two videos together

1 Open the video you want to edit, select ⏸ and touch ▤.

2 Select **Edit** and choose **Video merge**.

3 The **My stuff** folder will open, select either **My videos** or **My memory card** (if fitted). Choose the video you would like to merge and touch **Select**.

4 Touch and slide the photo to move it to the end or the beginning of the video.

5 Touch **Effect** to choose how the videos merge together: **None, Pan zoom, Oval, Uncover, Blind, Checker board, Dissolve, Split** or **Shape diamond.**

6 Touch **Save** followed by **Yes** to save the new merged video. Select whether to replace the original file or save as a new file.

7 Repeat these steps to merge more videos.

Your photos and videos

Merging a photo with a video

1 Open the video you want to edit, select and touch .

2 Select **Edit** and choose **Image merge**.

3 The **My stuff** folder will open select either **My Images** or **My memory card** (if fitted). Choose the photo you would like to merge into your video, and touch **Select**.

4 Touch and slide the photo to move it to the end or the beginning of the video.

5 Touch **Effect** to choose how the photo and video merge together: **None, Pan zoom, Oval, Uncover, Blind, Checker board, Dissolve, Split** or **Shape diamond.**

6 Touch **Save** followed by **Yes**. Select whether to replace the original file or save as a new file.

7 Repeat these steps to merge more photos.

Adding text to a video

1 Open the video you want to edit, select and touch .

2 Select **Edit** and choose **Text overlay**.

3 Enter your text using the keypad and select **Save**.

4 Touch and indicate when you want the text to appear using .

5 Touch the area of the screen where you want the text to appear and touch **OK**.

6 Touch to indicate when you want the text to disappear.

7 Touch **Preview** to ensure you are happy with the text overlay.

8 Touch **Save** and choose to save over the original file or as a new file.

9 Repeat these steps to add more text.

Overlaying a photo

1 Open the video you want to edit, select and touch .

2 Select **Edit** and choose **Image overlay**.

3 The **My stuff** folder will open select either **My images** or **My memory card** (if fitted). Choose the photo you would like to overlay your video and touch **Select**.

4 Touch and indicate when you want the photo to appear using .

5 Touch the area of the screen where you want the photo to appear and touch **OK**. If the photo is too big it will overlay the whole screen, not just the selected area.

6 Touch to mark when you want the photo to disappear.

7 Touch **Preview** to ensure you are happy with the photo overlay.

8 Touch **Save** and choose to save over the original file or as a new file.

9 Repeat these steps to add more photos.

Adding a soundtrack to your video

1 Open the video you want to edit, select and touch .

2 Select **Edit** and choose **Audio dubbing**.

3 The **My stuff** folder will open select either **My sounds** or **My memory card** (if fitted). Choose the track you would like to add to your video and touch **Select**.

4 The original audio track on your video will be erased. Touch **Yes** to continue.

5 If the audio is shorter than the video, choose whether to play it **Once** or to **Repeat** it.

6 Select whether to replace the original file or save as a new file.

Adding a voice recording

1 Open the video you want to edit, select and touch .

2 Select **Edit** and choose **Voice recording**.

3 The quality of the original audio will be affected by adding a voice recording. Touch **Yes** to continue.

4 Touch ▶ to view your video. When you get to the part you want to record your voice over, touch ●.

5 Touch ▣ or □ to stop recording and playback.

6 Touch **Preview** to ensure you are happy with the voice recording.

7 Touch **Save** followed by **Yes** to save. Choose to save over the original file or as a new file.

8 Repeat these steps to add more voice recordings to the video.

Changing the speed of your video

1 Open the video you want to edit, select ❚❚ and touch ▣.

2 Select **Edit** and choose **Time scaling**.

3 Select one of the four speed options: **x4**, **x2**, **x1/4**, **x1/2**.

4 Choose to save over the original file or as a new file.

NOTE: Only 3gp Video files can be edited.

Creating a movie

1 From the home screen, touch ⋮⋮ and select **Muvee studio** on the **ENTERTAINMENT** tab.

2 Touch + to add an image. Tap the check box for the images you want to include, then select **Insert**.

3 Touch the style tab to choose a **Muvee style**. The default style is **Classic Sepia**.

4 Touch **Default sound** to change the sound.

5 Touch ▷ to see what you've created.

6 Touch ▣ then **Play order** to create an order. You can make it random or sequential.

7 Touch ▣ then **Save location** to choose where to save the movie.

Entertainment

You can store any multimedia files on your phone's memory so that you have easy access to all your pictures, sounds, videos and games. You can also save your files to a memory card. Using a memory card allows you to free space in your phone's memory. To access the **My stuff**, touch and select **My stuff** on the **ENTERTAINMENT** tab. You can open a list of the folders that store all your multimedia files.

TIP! To delete any files in **My stuff**, touch then **Delete**.

Images

Images contains a list of pictures including default images pre-loaded onto your phone, images downloaded by you and images taken on your phone's camera.

My images options menu

The options available to you in **Images** depend on the type of image you have selected. All options will be available for pictures you have taken on the phone's camera, but only the **Use as**, **Slide show** and **File info.** options are available for default images.

Sending a photo

1 From the home screen, touch and select **My stuff** on the **ENTERTAINMENT** tab, then select **Images**. Select the picture you want.

2 Touch **Send** and choose from **Multimedia message, E-mail** and **Bluetooth.**

Using an image

You can choose images to use as wallpapers and the lock screen or even to identify a caller.

1 From the home screen, touch and select **My stuff** on the **ENTERTAINMENT** tab, then select **Images**. Select the picture you want and touch .

2 Touch **Use as** and choose from:

Homescreen image - Set a wallpaper for the home screen.

Lock screen image - Set a wallpaper for the lock screen.

Entertainment

Contacts image - Allocate an image to a particular person in your contacts list so that their picture shows when they call you.

Start up image - Set an image to appear when you switch the phone on.

Shut down image - Set an image to appear when you switch the phone off.

Printing an image

1 From the home screen, touch and select **My stuff** on the **ENTERTAINMENT** tab, then select **Images**. Select the picture you want and touch .

2 Touch **Print** then choose between **Bluetooth** and **PictBridge**.

Moving or copying an image

You can move or copy an image between the phone memory and the memory card. You might want to do this to either free some space in one of the memory banks or to safeguard your images from being lost.

1 From the home screen, touch and select **My stuff** on the **ENTERTAINMENT** tab, tab, then select **Images**. Select the picture you want and touch .

2 Select **Move** or **Copy**.

3 You can mark/unmark the images by tapping it sequentially. Mark the image that you want to move or copy and touch **Copy/Move**.

Sounds

The **Sounds** contains a list of sounds including the downloaded sounds, default sounds and voice recordings. From here you can manage or send sounds or set them as a ringtone.

Using a sound

1 From the home screen, touch and select **My stuff** on the **ENTERTAINMENT** tab, then select **Sounds**.

2 Select a sound you want and a confirmation message appears.

3 Touch **Yes.** It will begin to play.

4 Touch and select **Use as**.

5 Choose from **Voice ringtone, Video ringtone, Message tone**, **Start-up** and **Shut down**.

Videos

The **Videos** shows a list of downloaded videos and videos you have recorded on your phone.

Watching a video

1 From the home screen, touch and select **My stuff** on the **ENTERTAINMENT** tab, then select **Videos**.

2 Select a video to play.

Sending a video clip

1 Select a video you want to send.

2 Touch then **Send** and choose from **Message, E-mail** and **Bluetooth**.

3 If you choose **Message** or **E-mail**, your video clip will be attached to the message, which you can write and send as normal. If you choose **Bluetooth**, your phone will search for a device to send the video to.

Games & Apps

You can install new games and applications on your phone to keep you amused when you have spare time. From the home screen, touch and select **My stuff** on the **ENTERTAINMENT** tab, then select **Games & Apps**.

You can also access **Pocket apps** on the **ENTERTAINMENT** tab, then select a game and applications you want to launch.

Installing a Java game and application

1 From the home screen, touch and select **My stuff** on the **ENTERTAINMENT** tab.

2 If you insert a new memory card, touch the external memory tap.

3 Select the file (*.jad or *.jar) you want to download and install the file.

NOTE: The Java program files are in .jad or .jar format. The .jad file should contain its own .jar file.

4 Once installed, the Java program can be viewed in the **Games** or **Applications** menu where you can select, execute, or delete.

TIP! You can also download Java MIDlet in your phone by using the WAP (Wireless Application Protocol) services. Please note that additional costs may be incurred when using online services.

Documents

From the **Documents** folder in **My stuff**, you can view all your document files. From here, you can view your Excel, PowerPoint, Word, Text and pdf files.

Transferring a file to your phone

Bluetooth is probably the easiest way of transferring a file from your computer to your phone. You can also use the LG PC suite via USB cable.

To transfer using Bluetooth:

1 Make sure your phone and computer have Bluetooth switched on and are visible to one another.

2 Use your computer to send the file via Bluetooth.

3 When the file is sent you will have to accept it on your phone by touching **Yes**.

4 The file should appear in your **Documents** or **Others** folder.

Others

The **Others** contains a list of the files which are not pictures, sounds, videos, documents, games or applications. It is used in the same way as the **Documents** folder. You may find that when you transfer files from your computer to your phone that they appear in the **Others** folder. If this happens, you can move them.

Music

Your phone has a built-in music player so you can play all your favourite tracks. To access the music player, from the home screen, touch and select **Music** on the **ENTERTAINMENT** tab.

NOTE: KM570 is one of few mobile phones to apply Dolby Mobile™ for music, providing Dolby™ sound quality to your mobile phone.

Manufactured under license from Dolby Laboratories. “Dolby” and the double-D symbol are trademarks of Dolby Laboratories.

Recently played - Plays the songs you have played recently.

All tracks - Contains all the songs you have on your phone except the pre-loaded default music.

Artists - Browse through your music collection by artist.

Albums - Browse through your music collection by album.

Genres - Browse through your music collection by genre.

Playlists - Contains all the playlists you have created.

Ringtone creator - You can edit the song and save it if yon want to set ringtone. It can be found in profile menu of settings. Please see **Creating your ringtone**.

Shuffle tracks - Play your tracks in a random order.

Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or your sync cable.

You can also use LG PC suite. To transfer using Bluetooth:

1. Make sure both devices have Bluetooth switched on and can see each other.
2. Select the music file on the other device and choose to send it via Bluetooth.
3. When the file is ready to be sent you should accept it on your phone by touching **Yes**.
4. The file should appear in **Music** > **All tracks**.

Entertainment

Playing a song

1 From the home screen, touch and select **Music** on the **ENTERTAINMENT** tab.

2 Select one of the folders and the song you want to play.

3 Touch to pause the song.

4 Touch to skip to the next song.

5 Touch to go back to the previous song.

6 Touch to return to the **Music** menu. You may touch more than once to return to the menu.

TIP! To change the volume while listening to music, touch .

Creating a playlist

You can create your own playlists by choosing a selection of songs from the **Playlists** folder.

1 From the home screen, touch and select **Music** on the **ENTERTAINMENT** tab.

2 Touch **Playlists**, then **Add new playlist**, enter the playlist name and touch **Save**.

3 The **All tracks** folder will show all the songs in your phone. Touch all of the songs that you would like to include in your playlist; a tick will show next to the track names.

4 Touch **Done**.

Creating your ringtone

1 From the home screen, touch and select Touch **Music** on the **ENTERTAINMENT** tab.

2 Select one of the folders and the song you want to play.

3 Select the music what you would like to use in music lists, and then select **OK**.

4 Select **Cut** when you want to start recoding music to use as a **Ringtone** while playing music.

5 Select **Stop** to stop.

6 Select **Save** and choose from **Original file** or **New file**. Then select **Save**.

NOTE: The copyright of music files can be protected by international treaties and national copyright laws. It may be necessary to obtain permission or a license to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Before downloading or copying the file, please check the national legislation of the applicable country concerning the use of such material.

FM radio

Your phone has an FM radio feature so you can tune into your favourite stations to listen on the move.

NOTE: You will need to insert your headset in order to listen to the radio. Insert the plug into the headset connector in order to listen to the radio and keep the good radio reception.

Searching for stations

You can tune your phone to radio stations by searching for them either manually or automatically. They will then be saved to specific channel numbers, so you don‘t have to keep re-tuning. You must first attach the headset to the phone as this acts as the aerial.

To auto tune:

1 From the home screen, touch and select **FM radio** on the **ENTERTAINMENT** tab, then choose .

2 Touch **Auto scan**. A confirmation message appears. Select **Yes**, then the stations will be automatically found and allocated to a channel in your phone.

NOTE: You can also manually tune into a station by using and displayed in the centre of the screen. If you press and hold and , the stations will be automatically found.

Using the FM transmitter to play music

Your phone allows you with its builtin FM transmitter to listen to your music via any FM tuner in range of the phone, e.g. at home or in your car.

1 From the home screen, touch and scroll then select **Tools** and choose **FM Transmitter** on the **UTILITIES** tab.

Entertainment

2 Select a frequency that you want to tranmit an FM signal on, and then touch **Transmit**.

3 Then set your tuner to the same frequency.

NOTE: The operating distance of the FM transmitter is up to a maximum of 2 metres (6.5 feet). The transmission maybe subject to interference due to obstructions, such as walls, other electronic devices, or from public radio stations. To avoid interference, always search for a free FM frequency on the receiver before using the FM transmitter.

The FM transmitter cannot be used at the same time as the FM radio of your device.

WARNING: FM transmitter is not available on the countries who have different standards.

Utilities

Setting your alarm

1 From the home screen, touch and select **Alarm** on the **UTILITIES** tab. **Widget alarm** should appear in the list as default and you can not delete it.

2 Touch **New alarm**.

3 Set the time you would like the alarm to sound in the **Time** field box.

4 Choose how you would like your alarm to repeat in the **Repeat** box: **Not repeated, Daily, Mon ~ Fri, Mon ~ Sat, Sat ~ Sun, Except holiday** or **Choose weekday**. The icons then indicate the weekday you select.

5 Select **Alarm type** to select the type of alarm you want.

6 Choose **Alarm bell** and select a sound from the folder. To listen to sounds, touch the sound, followed by .

7 Add a memo for the alarm in the **Memo** box.

8 Finally, you can set the snooze interval to 5, 10, 20, or 30 minutes, 1 hour or off.

9 Once you have set your alarm, touch **Save**.

NOTE: You can set up to 5 alarms including **Widget alarm**.

TIP! Slide the switch **ON/OFF** to the alarm to set it.

Adding an event to your calendar

1 From the home screen, touch and select **Organiser** on the **UTILITIES** tab, then select **Calendar**.

2 Select the date you would like to add an event to.

3 Touch then **Add event**.

4 Touch **Category** then choose from **Appointment**, **Anniversary** or **Birthday**.

5 Enter **Subject**.

6 Check and enter the date and the time you would like your event to begin. For **Appointment** and **Anniversary** enter the time and date your event finishes in the lower two time and date boxes. Enter the location if it is an **Appointment**.

7 Set **Alarm** and **Repeat**.

8 Select **Save** and your event will be saved in the calendar. A square cursor will mark the day that any events have been saved to and a bell will ring at the start time of your event, so that you can stay organised.

Adding an item to your tasks list

1 From the home screen, touch and select **Organiser** on the **UTILITIES** tab.

2 Select **Tasks** and touch **Add to do**.

3 Set the date for the task, add notes and select a priority level: **High**, **Medium** or **Low**.

4 Save your task by selecting **Save**.

Using date finder

Date finder is a handy tool to help you calculate what the date will be after a certain amount of days has passed. For example, 60 days from 10.10.2010 will be 09.12.2010.

1 From the home screen, touch and select **Organiser** on the **UTILITIES** tab.

2 Select **Date finder**.

3 Set the required date in the **From** tab.

4 Set the number of days in the **After** tab.

5 The **Target date** will be shown below.

Adding a memo

1 From the home screen, touch and select **Memo** on the **UTILITIES** tab.

2 Touch **Add memo**.

3 Type your memo, then touch **Save**.

4 Your memo will then appear on the screen in the **Memo** application.

Voice recorder

Use your voice recorder to record voice memos or other audio files. From the home screen, touch and scroll then select **Voice recorder** on the **UTILITIES** tab, then choose , then **Settings** to change settings:

Duration - Set the recording duration. Choose from **No limit**, **MMS** or **1 minute**.

Quality - Select the sound quality. Choose from **Super fine**, **Fine** or **Normal**.

Memory in use - Select where to save the audio files. Choose between **External memory** and **Handset memory**.

Recording a sound or voice

1 Touch to begin recording.

2 Touch to pause recording.

3 Touch to end recording.

4 Touch to listen to your recording.

Using your calculator

1 From the home screen, touch and scroll then select **Tools** on the **UTILITIES** tab, then select **Calculator**.

2 Touch the numeric keys using the keypad to input numbers.

3 For simple calculations, touch the function you require (+, −, ×, ÷), followed by =.

4 For more complex calculations, touch and choose from **sin**, **cos**, **tan**, **log**, **ln**, **exp**, **sqrt**, **deg** or **rad** etc.

Converting a unit

1 From the home screen, touch and scroll then select **Tools** on the **UTILITIES** tab, then select **Unit converter**.

2 Choose whether you would like to convert **Currency**, **Area**, **Length**, **Weight**, **Temperature**, **Volume** or **Velocity**.

3 You can then select the unit, and enter the value you would like to convert from, followed by the unit you would like to convert to.

4 The corresponding value will appear on the screen.

Adding a city to your world clock

1 From the home screen, touch and scroll then select **Tools** on the **UTILITIES** tab, then select **World clock**.

2 Touch the , followed by **New city**.

3 Scroll the globe, touch the area you want and choose the city on the map. Or touch the and type the name of the city you require in the search field box.

Using the stopwatch

1 From the home screen, touch and scroll then select **Tools** on the **UTILITIES** tab, then select **Stopwatch**.

2 Touch **Start** on the bottom of the screen to begin the timer.

3 Touch **Lap** if you want to record a lap time.

4 Touch **Stop** to end the timer.

5 Touch **Resume** to restart the stopwatch at the time you stopped it at, or touch **Reset** to begin the time again.

Sweet draw

When using your phone, you can press the camera key twice to capture the current image, then adding a memo on the captured image by using **Sweet draw** feature. Please note, the capture function is available on the following screens: WAP, SNS (Native/JAVA), Message & E-mail (Native email/Push email) composer, Received messages (SMS/MMS), E-mail view screen, JAVA game & application, Native flash game, and Pocket apps.

If you set the **Auto save** to **On**, the captured screen image will be saved in **My stuff** folder.

When **Auto save** is **Off**, you can edit the image with **Sweet draw** after capturing an image.

To change the setting of the **Sweet draw** feature, from the home screen, touch and scroll then select **Sweet draw** on the **UTILITIES** tab.

NOTE: This feature may not be used for infringement upon the copyright of any third party like the image of the gallery, wallpaper, speed dial etc.

Adding a memo with the sweet draw

1 From the home screen, touch and scroll then select **Sweet draw** on the **UTILITIES** tab.

2 Touch **Start application > Add drawing.**

3 Draw your memo on the touch screen LCD followed by .

4 Touch **Yes**, then your memo will appear on the screen in the **Sweet draw** application.

PC sync

You can synchronise your PC with your phone to make sure all your important details and dates match. You can also backup your files to put your mind at ease.

TIP! You will need to install the application PC suite from http://update.lgmobile.com or http://www.lg.com/common/index.jsp → select country → Support

Installing LG PC suite on your computer

1 From the home screen, touch and select **Connectivity** on the **SETTINGS** tab.

2 Select **USB connection mode** and touch **PC suite.**

3 Connect the handset and PC via USB cable and wait for a while. Installation guide message will be displayed.

4 Follow the instructions on the screen to complete the LG PC suite Installer wizard.

5 Once installation is complete, the LG PC suite icon will appear on your PC screen.

Connecting your phone and PC

1 From the home screen, touch and select **Connectivity** on the **SETTINGS** tab.

2 Select **USB connection mode**.

3 Touch **PC suite**.

4 Connect your phone and PC via USB cable and wait for a while. PC suite runs automatically.

Backing up and restoring your phone's information

1 Connect your phone to your PC by using the USB cable.

2 Click on the **Backup** icon, and select **Backup** or **Restore**.

3 Choose whether to back up Contents Data and/or Phonebook/ Schedule/Todo/ Memo Data. Select the location you want to back up the information to, or restore it from. Click **OK**.

4 Your information will be backed up.

Viewing phone files on your PC

1 Connect your phone to your PC by using the USB cable.

2 Click on the **Manage Files** icon.

3 Images and videos you have saved on your phone will be displayed on the screen in the LG Phone folder.

TIP! Viewing the contents of your phone on your PC helps you to manage files you no longer need.

Synchronising your contacts

1 Connect your phone to your PC by using the USB cable.

2 Click on the **Contacts** icon.

3 Click **Sync Contacts** button your PC will now import and display all the contacts saved on your phone.

4 Click on **Menu** and select **Export**. You can now select where you want to save your contacts to.

Synchronising your messages

1 Connect your phone to your PC by using the USB cable.

2 Click on the **Messages** icon.

3 All your phone messages will be displayed in folders on the PC screen.

4 Use the toolbar at the top of the screen to edit and rearrange messages.

WARNING: Do not disconnect your phone during the transfer.

Using your phone as a mass storage device

Your phone can be used as a mass storage device.

1 Disconnect your phone from your PC.

PC sync

2 From the home screen, touch and select **Connectivity** on the **SETTINGS** tab.

3 Select **USB connection mode**.

4 Touch **Mass storage**. This mode will be saved.

5 Connect the phone to your PC by using the USB cable. Your phone will display **Connected**.

6 Drag and drop your images, videos, music or documents into the correct folders.

7 Safely remove your phone by clicking on the safely remove hardware icon in your PC toolbar.

Browser

Accessing the web

1 From the home screen, touch and select **Tesco Mobile** on the **UTILITIES** tab.

2 To go straight to the browser home page, select **Home**. Alternately, select **Enter address** and type in the URL, followed by **Connect**.

Google

You can access Google mobile internet service. To access Google services, from the home screen, touch and select **Google** on the **UTILITIES** tab.

NOTE: You may be unable to access Google in some countries. This is dependent on network services.

Access to Google Service

Search: Google Mobile Web Search allows you to search for websites that are specifically designed for mobile phones and devices.

Mail: The Google Mail for mobile application is a downloadable Java application, offering the best possible Google Mail experience for supported mobile devices. To download, visit http://gmail.com/app from your mobile browser.

Blogger: You can manage your account and share your blog. It is available to upload a picture and video.

YouTube: You can watch videos on YouTube Mobile from your mobile device. You may want to contact your carrier for more information about the availability of data streaming on your mobile device.

Adding and accessing your bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save web pages.

1 From the home screen, touch and select **Tesco Mobile** on the **UTILITIES** tab.

2 Select **Bookmarks**. A list of your bookmarks will appear on the screen.

3 To add a new bookmark, touch **Add bookmark**. Enter a name for your bookmark followed by the URL in the corresponding field box.

4 Touch **Save**. Your bookmark will now appear in the list of bookmarks.

5 To access the bookmark simply touch the Connect icon next to the bookmark or touch the bookmark title and then touch **Connect**. You will be connected to your bookmark.

Using RSS reader

RSS (Really Simple Syndication) is a family of web feed formats used to publish frequently updated content such as blog entries, news headlines or podcasts. An RSS document, which is called a feed, web feed, or channel, contains either a summary of content from an associated web site or the full text. RSS makes it possible for people to keep up with their favourite web sites automatically. It is much easier than checking them manually.

The user subscribes to a feed by entering the feed's link into the reader or by clicking an RSS icon in a browser that initiates the subscription process. The reader checks the user's subscribed feeds regularly for new content, downloading any updates that it finds.

Saving a page

1 Access your required webpage as described above.

2 Touch and select **Save this page**.

3 Enter a name for the webpage so you can easily recognise it.

4 Touch **Save**.

Accessing a saved page

From the home screen, touch and select **Tesco Mobile** on the **UTILITIES** tab, then select **Saved pages**. Select the page you want to view and it will open.

Viewing your browser history

From the home screen, touch and select **Tesco Mobile** on the **UTILITIES** tab, then select **History**.

The web pages you have accessed recently will be displayed. To access any of these pages, simply select it.

Changing the web browser settings

From the home screen, touch and select **Tesco Mobile** on the **UTILITIES** tab, then select **Settings**. You can choose to edit **Profiles**, **Appearance settings**, **Cache**, **Cookies** or **Security** settings. You can simply set these on or off by touching the switch icon.

Using your phone as a modem

Your phone can double as a modem for your PC, giving you email and internet access even when you can't connect using wires. You can use either the USB cable or Bluetooth.

Using the USB cable:

1 Ensure you have the LG PC suite installed on your PC.

2 Connect your phone and your PC by using the USB cable and launch the LG PC suite software.

3 Click **COMMUNICATION** on your PC. Then click **Settings** and select **Modem**.

4 Choose **LG Mobile USB Modem** and select **OK**. It will now appear on the screen.

5 Click **Connect** and your PC will connect via your phone.

Using Bluetooth:

1 Ensure Bluetooth is switched **On** and **Visible** for both your PC and your phone.

2 Pair your PC and your phone. so that a passcode is required for connection.

3 Use the **Connection wizard** on your LG PC suite to create an active Bluetooth connection.

4 Click **COMMUNICATION** on your PC. Then click **Setting**.

5 Click **Modem**.

6 Choose **Standard Modem** over Bluetooth link and click **OK**. It will now appear on the screen.

7 Click **Connect** and your PC will connect via your phone.

Settings

Personalising your profiles

You can quickly change your profile on the home screen. You can also personalise each profile setting using the settings menu.

1 From the home screen, touch and select **Profiles** on the **SETTINGS** tab.

2 Choose the profile you want to edit.

3 You can then change all the sounds and alert options available in the list, including your ringtone, volume, message tone settings and more.

Changing your screen settings

From the home screen, touch and select **Screen settings** on **SETTINGS** tab, then choose from the list below.

Wallpaper - Choose the theme for your home screen (Widget/Speed dial) or lock screen.

Livesquare - Touch **Livesquare guide** to check its functions.

Handset theme - Choose the theme for menus. If you select **Black**, you can adjust the point colour. If you select **White**, the cartoon styled UI will be set on your phone.

Top menu - Choose the style of the top menu, choose from **Zigzag**, **Scrolling** and **Screen by screen**.

Lock screen - Adjust the type of the lock screen when the screen automatically turns off.

Dialling - Adjust the number colour.

Font - You can adjust the font size and style.

Brightness - Adjust the screen brightness.

Greeting message - Select **ON** and enter the greeting message in the text field. When the phone is switched on, the greeting message will be shown.

Network name - Choose to show or hide the network name.

Start-up/Shut down - Choose the theme for your start-up/shut down screen.

Changing your phone settings

Enjoy the freedom of adapting how your phone works for your own style.

From the home screen, touch and select **Phone settings** on the **SETTINGS** tab, then choose from the list below.

Date & Time - Adjust your date and time settings or choose whether to update the time automatically or to use the daylight saving option.

Power save - Change the factory-set power saving settings: **Off**, **Night only** or **Always on**.

Languages - Change the language of your phone's display.

Motion silent - Make your phone go into the mute or snooze settings by flipping it over when it is ringing.

Auto key lock - Allows you to set the time of **Auto key lock.**

Security - Adjust your security settings, including PIN codes request and handset lock. You can select change codes to change your **PIN code**, **PIN2 code** and your **Security code**.

> **NOTE: Security code**
>
> The default security code is set to '0000' and the security code is required to delete all phone entries and to activate the **Reset settings** menu. The security code default setting can be modified from the **Security** > **Change codes**.

Memory info - You can use memory manager to see how each memory is been used and see how much space is available.

Reset settings - Restores all settings to their factory defaults.

Handset information - View the technical information for your phone. And you can upgrade software via web.

Settings

Change your touch settings

From the home screen, touch and select **Touch settings** on the **SETTINGS** tab, then choose from the list below.

Touchpad calibration - Reset your screen for ease of use.

Touchscreen effect - Change the touchscreen settings.

Using memory manager

From the home screen, touch and select **Phone settings** on the **SETTINGS** tab, then choose **Memory info**.

Handset common memory - View the memory available on your phone for pictures, sounds, videos, MMS, email, Java applications and others.

Handset reserved memory - View the memory available on your handset for SMS, contacts, calendar, tasks list, memo, alarm, call history, bookmarks and miscellaneous items.

SIM memory - View the memory available on your SIM card.

External memory - View the memory available on your external memory card (you may need to purchase the memory card separately).

Primary storage setting - Choose the location you prefer items to be saved to between **Handset memory** and **External memory**.

Changing your Bluetooth settings

From the home screen, touch and select **Bluetooth** on the **SETTINGS** tab, then select and choose **Settings.** Make your changes to:

My device visibility - Set **Visible** or **Visible for 1 min** so other devices can detect your phone when searching for Bluetooth devices. If you select **Hidden**, other devices will not be able to detect your phone when searching for Bluetooth devices.

My device name - You can name or rename your phone as it will appear on other devices. Your phone's name will be shown on other devices only when My device visibility is set to visible.

Supported services - You can view the list of devices, such as headsets and handsfree devices, supported by your Bluetooth-enabled phone.

Remote SIM Mode - For connecting the hands-free kit with your phone, you can activate remote SIM mode related with the SAP (SIM Access Profile).

My address - Show your Bluetooth address.

Pairing with another Bluetooth device

By pairing your phone and another device, you can set up a passcode protected connection.

1 Check that your Bluetooth is **ON** and **Visible**. You can change your visibility in the **SETTINGS** menu.

2 Touch **Search**.

3 your phone will search for devices. When the search is completed, **Refresh** will appear on screen.

4 Choose the device you want to pair with and enter the passcode, then touch **OK**.

5 Your phone will then connect to the other device, on which you will need to enter the same passcode.

6 Your passcode protected Bluetooth connection is now ready.

NOTE: Read the user guide of each Bluetooth accessory you are trying to pair with because the instructions may vary.

TIP! The connection may be improved if there are no solid objects in between your phone and the other Bluetooth device.

Using a Bluetooth headset

1 Check your Bluetooth is **ON** and **Visible**.

2 Follow the instructions that came with your headset to put it in pairing mode and pair your devices.

3 Touch **Ask before connect** or **Always connect** and touch **Yes** to connect now. your phone will automatically switch to headset profile. If you select **Always connect**, the handset will prompt you every time the Bluetooth connection is available.

Sending and receiving your files using Bluetooth

To send a file:

1 Open the file you want to send, typically this will be a photo, video or music file.

2 Choose **Send**.
Choose **Bluetooth**.

3 If you have already paired the **Bluetooth** device, your phone will not automatically search for other **Bluetooth** devices. If not, your phone will search for other **Bluetooth** enabled devices within range.

4 Choose the device you want to send the file to.

5 Your file will be sent.

TIP! Check the progress bar to make sure your file is sent.

To receive a file:

1 To receive files, your Bluetooth must be both **ON** and **Visible**. See **Changing your Bluetooth settings** below for more information.

2 A message will prompt you to accept the file from the sender. Touch **Yes** to receive the file.

NOTE: The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc, and any use of such marks by LG Electronics is under licence. Other trademarks and trade names are those of their respective owners.

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone immediately. To change any settings, use this menu.

From the home screen, touch and select **Connectivity** on the **SETTINGS** tab, then choose from the list below.

Network settings

- **Select network** - If you select **Automatic**, your phone automatically searches for the network and registers the handset to the network. This is recommended for best service and quality.
  If you select **Manual**, all the currently available networks are shown and you can select one of them for registration.
- **Network mode** - You can set a type of network to search for when networks are searched in the **Select network** menu. Choose from **Automatic** or **GSM only**.
- **Preferred lists** - You can add a preferred network to connect to. If the network is searching automatically, simply choose one from the network list and if not, add a new network manually.

Internet profiles - This menu shows the Internet profiles. You cannot delete or edit default configurations depending on your country variant.

Access points - Your network operator has already saved this information. You can add new access points using this menu.

Packet data conn. - Choose when your device should be connected to network for packet data.

USB connection mode - Choose a data service from the options and synchronise your phone using the LG PC suite software to copy files from your phone. See **PC sync** for more information on synchronisation.

Java settings - Allows you to set profiles for connections made by Java programs and to view certificates.

Streaming settings - Your network operator has already saved this information. You can edit it if you want to make changes.

Settings

Phone Software update

LG Mobile Phone Software update from internet

For more information on using this function, please visit the http://update.lgmobile.com or http://www.lg.com/common/index.jsp → select country → Support

This Feature allows you to update the firmware of your phone to the latest version conveniently from the internet without the need to visit a service center.

As the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure to check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable or battery during the upgrade may seriously damage you mobile phone.

Technical data

Ambient Temperatures

Max: +55 °C (discharging), +45 °C (charging)

Min: -10 °C

Declaration of Conformity

LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc. LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 850/GSM 900/ DCS 1800/ PCS 1900/ W-CDMA Terminal Equipment

Model Name

KM570

Trade Name

LG

CE 0168 !

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-1 V1.8.1/ EN 301 489-7 V1.3.1
EN 301 489-9 V1.4.1/ EN 301 489-17 V1.3.2/ EN 301 489-24 V1.4.1
EN 60950-1: 2001
EN 50360: 2001/ EN 62209-1: 2006
EN 300 328 V1.7.1
EN 301 357-1 V1.4.1/ EN 301 357-2 V1.3.1
EN 301 511 V9.0.2/ EN 301 908-1 V3.2.1/ EN 301 908-2 V3.2.1

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House-Churchfield Road - Walton-on-Thames, Surrey - KT12 2TD , United Kingdom

Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands

Name: Seung Hyoun, Ji / Director

Issued Date: 23. Feb. 2010

Signature of representative

Accessories

There is a variety of accessories, some sold separately, for your mobile phone. Choose the accessories that meet your personal needs. Consult your local dealer for availability. (Items described below may be optional).

Charger

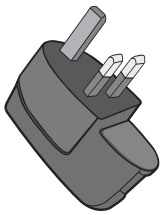

Data cable and CD

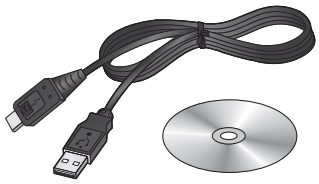

Battery

Stereo headset

NOTE:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquires.

Trouble Shooting

This chapter lists a number of problems you might encounter while using your phone. Some problems require you to call your service provider, but most are easy to correct yourself.

Message	Possible causes	Possible Corrective measures
SIM error	There is no SIM card in the phone, or you may have inserted it incorrectly.	Make sure that the SIM card is correctly inserted.
No connection to the network	Signal weak outside network	Move to a higher location, a window or open space. Check the service provider coverage map.
Codes do not match	When you want to change a security code, you must confirm the new code, by entering it again. The two codes you have entered do not match.	Contact your service provider.
Function cannot be set	Not supported by service provider or registration required.	Contact your service provider.
Calls not available	Dialling error, New SIM card inserted, Charge limit reached.	New network not authorised. Check for new restrictions. Contact a service provider, or reset limit with PIN2.

Trouble Shooting

Message	Possible causes	Possible Corrective measures
Phone cannot be switched on	On/Off key pressed too briefly	Press On/Off key for at least 2 seconds.
	Battery empty Battery contacts dirty	Charge battery. Check battery indicator on the screen. Clean the contacts.
Charging error	Battery completely empty Temperature out of operating range Contact problem No mains voltage Charger defective Wrong charger Defective battery	Charge battery. Make sure the surrounding temperature is within the operating range, wait, and then charge again. Check the power supply and connection to the phone. Check the battery contacts, and clean them if necessary. Plug in to a different socket, or check the voltage. If the charger does not warm up, replace it. Only use original LG accessories. Replace the battery.
Phone loses network	Signal too weak	Reconnection to another service provider is automatic.
Number not permitted	The fixed dial number function is on.	Check settings.

LIMITED WARRANTY STATEMENT

1. WHAT THIS WARRANTY COVERS :

LG offers you a limited warranty that the enclosed phone and its enclosed accessories will be free from defects in material and workmanship according to the following terms and conditions:

(1) The limited warranty for the product extends the warranty period beginning on the date of purchase of the product.

(2) The limited warranty applies for 1 year from the original date of purchase and extends only to the original purchaser of the product and is not assignable or transferable to any subsequent purchaser/end user. It shall neither exclude nor limit any mandatory statutory rights of the customer or any of the customer rights against the seller/dealer of the product.

(3) This warranty is good only to the original purchaser during the warranty period, but limited to certain country if specified.

(4) The external housing and cosmetics parts shall be free of defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.

(5) Upon request from LG. or their designated service agent the consumer must provide information to reasonably prove the date of purchase.

(6) Unless other service arrangements have been specified the customer shall bear the cost of shipping a defective product back to the Customer Service Department of LG.
LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.

(7) During the warranty period LG or its authorised service agent will repair or replace at LG's sole discretion a defective product. A repaired or replaced product will not be given a prolonged or renewed warranty period.

2. WHAT THIS WARRANTY DOES NOT COVER :

(1) Defects OR Damages resulting from use of the product in other than its normal and customary manner.

(2) Defects or damages from abnormal use, abnormal conditions, improper storage.
exposure to moisture or dampness, unauthorised modifications, unauthorised connections, unauthorised repair, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.

(3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.

(4) A warranty repair if the Customer Service Department at LG or other agreed service agent was not notified by the consumer of the alleged defect or malfunction of the product during the applicable limited warranty period.

(5) Products which have had the serial number or IMEI number removed or made illegible.

(6) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of marketability or fitness for a particular use.

(7) Damage resulting from use of non-LG approved accessories.

(8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.

(9) Products operated outside published maximum ratings.

(10) Products used or obtained n a rental program.

(11) Consumables (such as fuses).

(12) Suspected defects caused by a failure of the cellular network.

3. CONDITIONS :

No other express warranty is applicable to this product.

The DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IL LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HERIN. LG ELECTRONCS INC. SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCOVINIENCE, LOO OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED MARKETABLITY APPLICABLE TO THIS PRODUCT.

Some do not allow the exclusive of limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from country to country.

LG Electronics Inc.

Memo

Memo