Life's Good

www.lgmobile.com

P/N: MMBB0273224 (1.0)

Life's Good

KP115

Some of contents in this manual may differ from your phone depending on the software of the phone or your service provider.

CE 0168

KP115_India_Cover_1.0_0911.indd 1 2008.9.11 9:59:36 AM

KP115 USER GUIDE

P115_india_E_1.0_0827_□□□.indd 1 2008.8.27 4:45:32 PM

Contents

Installing the SIM Card and Charging the Battery 3

Installing the SIM Card

Illustrations

Phone Components 4

Turning Your Phone On and Off 5

Making a Call

Making an international call

Answering a Call

Selecting functions and options 6

Entering Text 7

T9 Mode

ABC Mode

123 Mode

Symbol Mode

Anti Theft Mobile Tracker 8

Menu tree 9

Quick feature reference 10

Browser

Call history 11

Tools 12

Multimedia 13

Messaging 14

My stuff 15

Profiles

Contacts 16

Settings 17

Guidelines for safe and efficient use 19

Technical Data 24

P115_india_E_1.0_0827_□□□.indd 2 2008.8.27 4:45:32 PM

Installing the SIM Card and charging the Battery

Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

Important!

› The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.

› USIM is not supported in this phone.

Illustrations

1. Open battery cover
2. Open battery
3. Insert your SIM
4. Insert your Memory card
5. Close the battery cover
6. Charge your battery

1

2

3

4

5

6

Fully charge the battery
before using it for the first time.

Phone Components

Turning Your Phone On and Off

1. Press and hold the End key until the power comes on.

2. Press and hold the End key until the power goes off.

Making a Call

1. Enter a phone number including the area code.

2. Press the key to call the number.

3. To end the call, press the key or the right soft key.

Making an international call

1. Press and hold the key for the international prefix. The '+' character automatically selects the international access code.

2. Enter the country code, area code, and the phone number.

3. Press [send] key to call the number.

Answering a Call

1. When you receive a call, the phone rings and the flashing phone icon appears on the screen.

2. If the Any key has been set as the answer mode, any key press will answer a call except for the key.

3. To end the call, press the key.

P115_india_E_1.0_0827_□□□.indd 5 2008.8.27 4:45:36 PM

Selecting functions and options

Your phone offers a set of functions that allow you to customise the phone. These functions are arranged in menus and sub-menus, accessed via the two soft keys marked and . Each menu and sub-menu lets you view and alter the settings of a particular function. The roles of the soft keys vary according to the current context; the label on the bottom line of the screen just above each key indicates its current role.

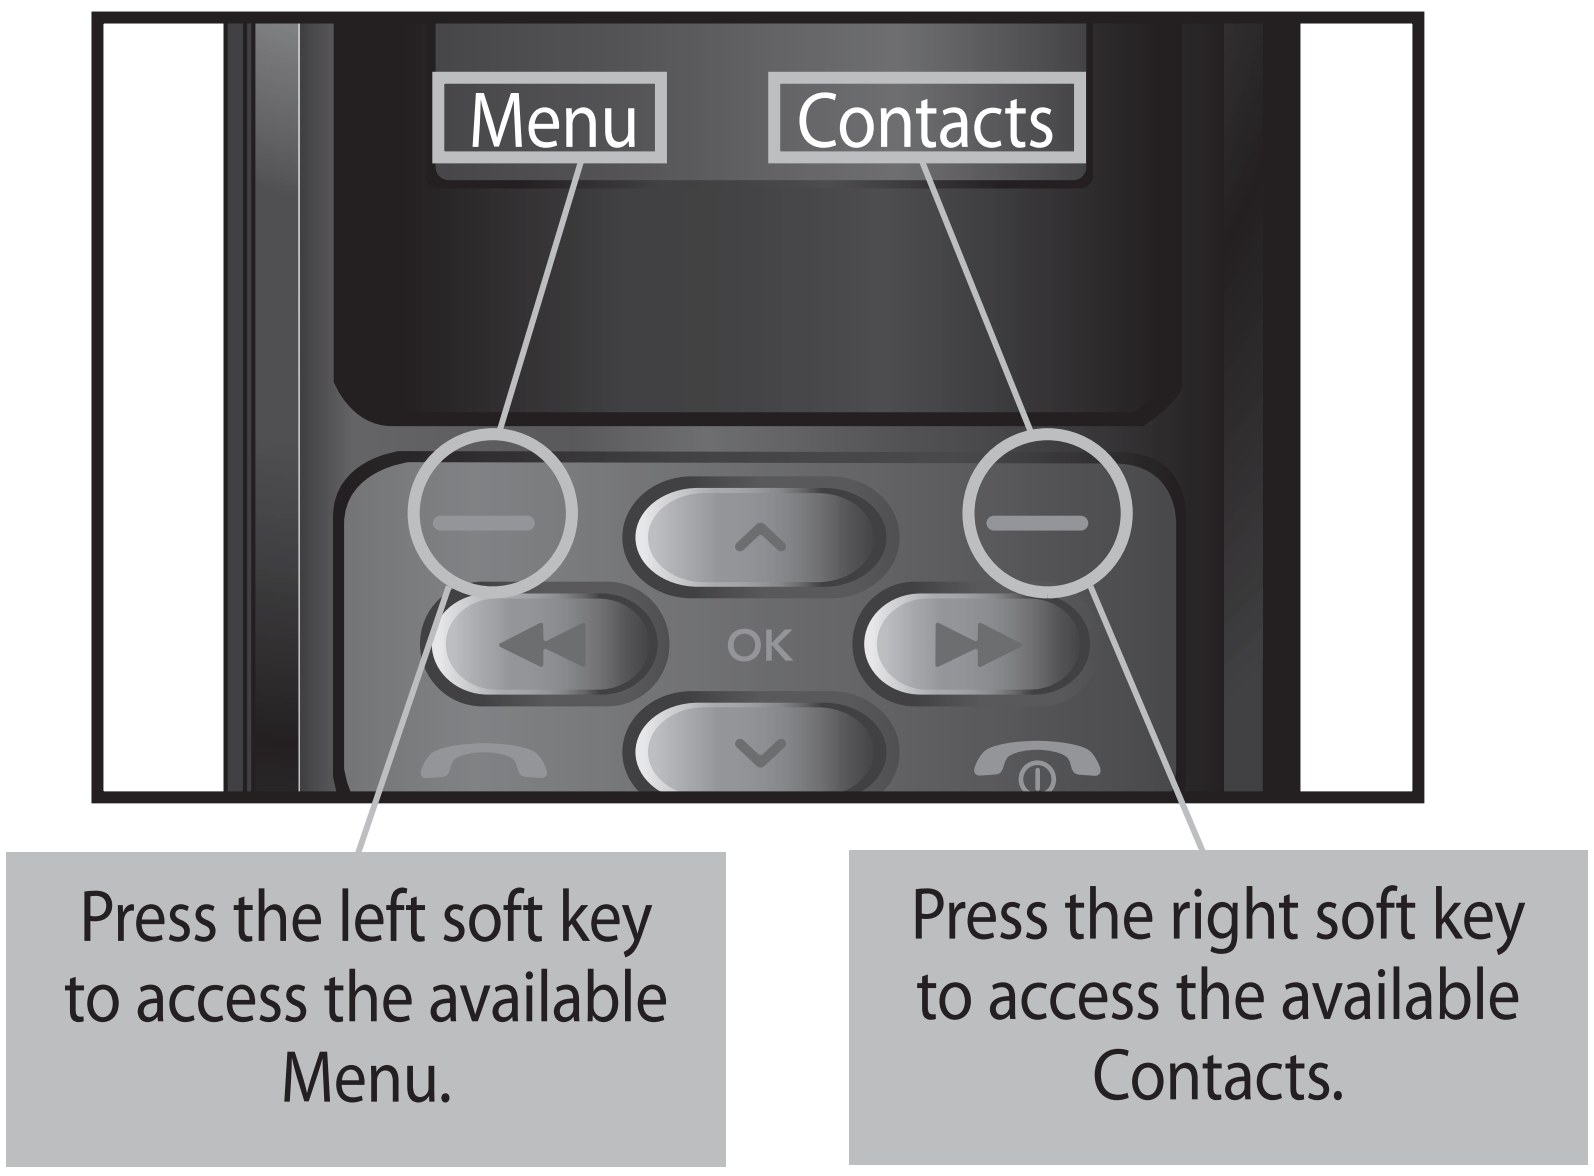

Entering Text

You can enter alphanumeric characters by using the phone's keypad. Change the text input mode by pressing the # key.

T9 Mode

The T9 predictive text input mode lets you enter words easily with a minimum number of key presses. As you press each key, the phone begins to display the characters that it thinks you are typing based on the built-in dictionary. You can also add new words in the dictionary. As new words are added, the word changes to reflect the most likely candidate from the dictionary.

ABC Mode

This mode allows you to enter letters by pressing the key labeled with the required letter once, twice, three or four times until the letter is displayed.

123 Mode (Numbers Mode)

Type numbers using one keystroke per number.

Symbol Mode

symbol either select Options → Insert → Symbol or press * key. Use the navigation and numeric keys to select the desired symbol and press the OK key.

P115_india_E_1.0_0827_□□□.indd   7   2008.8.27   4:45:37 PM

Anti Theft Mobile Tracker(ATMT)

1. The ATMT feature of this phone provides you with the ability to have a tracking system in place for your mobile in case you lose or misplace it.
2. The moment an un-authorized user uses your phone, a SMS is triggered from your phone and the message is send to your pre-defined number.
3. Setting the ATMT ON [Menu 9.6.4]
   - Select Anti Theft Mobile Tracker
   - Enter Default ATMT code.
   - Select Set ATMT
   - Select ON, press OK

   Note

   - In case you want to use your phone with some other SIM card, make sure to set the ATMT feature OFF.
   - It is recommended to enter the Number for ATMT with the country code (e.g. for INDIA +91 followed by mobile number)
   - Default ATMT code is “0000”.

P115_india_E_1.0_0827_□□□.indd 8 2008.8.27 4:45:38 PM

Menu tree

1. Browser
- 1.1 Home
- 1.2 Bookmarks
- 1.3 Enter address
- 1.4 History
- 1.5 Saved pages
- 1.6 Settings
- 1.7 Information

2. Call history
- 2.1 All calls
- 2.2 Missed calls
- 2.3 Dialled calls
- 2.4 Received calls
- 2.5 Call duration
- 2.6 Call costs
- 2.7 Data information

3. Tools
- 3.1 Alarm clock
- 3.2 Calendar
- 3.3 Calculator
- 3.4 Memo
- 3.5 To Do
- 3.6 Stopwatch
- 3.7 Unit converter
- 3.8 World clock
- 3.9 SIM services

4. Multimedia
- 4.1 MP3 player
- 4.2 FM radio
- 4.3 Voice recorder

5. Messaging
- 5.1 New message
- 5.2 Inbox
- 5.3 Drafts
- 5.4 Outbox
- 5.5 Sent
- 5.6 Listen to voicemail
- 5.7 Info messages
- 5.8 Templates
- 5.9 Settings

6. My stuff
- 6.1 Images
- 6.2 Sounds
- 6.3 Others
- 6.4 Games
- 6.5 External memory

7. Profiles
- 7.1 General
- 7.2 Silent
- 7.3 Vibrate Only
- 7.4 Outdoor
- 7.5 Headset

8. Contacts
- 8.1 Search
- 8.2 New contact
- 8.3 Speed dials
- 8.4 Groups
- 8.5 Copy all
- 8.6 Delete all
- 8.7 Settings
- 8.8 Information

9. Settings
- 9.1 Date & Time
- 9.2 Languages
- 9.3 Display
- 9.4 Network
- 9.5 Call
- 9.6 Security
- 9.7 Flight mode
- 9.8 Power save
- 9.9 Reset
- 9.0 Memory status

P115_india_E_1.0_0827_□□□.indd 9 2008.8.27 4:45:38 PM

Quick feature reference

This section provides brief explanations of features on your phone.

Browser Menu 1

Home	Connects to a homepage. The homepage will be the site which is defined in the activated profile. It will be defined by the service provider if you have not defined it in the activated profile.
Bookmarks	This menu allows you to store the URL of favorite web pages for easy access at a later time.
Enter address	You can connect directly to the site you want. After entering a specific URL, press the OK key and select the Connect.
History	This menu shows the recently browsed pages.
Saved pages	You can store the address of your favorite pages.
Settings	You can set the profile, cache and security related to internet service.
Information	You can view the information of WAP browser version.

P115_india_E_1.0_0827_□□□.indd 10 2008.8.27 4:45:38 PM

Call history Menu 2

You can check the record of missed, received, and dialled calls only if the network supports the Calling Line Identification (CLI) within the service area.

All calls	You can view the list of outgoing, incoming and missed calls.
Missed calls	You can view the unanswered calls.
Dialled calls	You can view the outgoing calls(called or attempted).
Received calls	You can view the incoming calls.
Call duration	Allows you to view the duration of your incoming and outgoing calls. You can also reset the call timers.
Call costs	You can view the charges applied to your dialled numbers and the call duration of all your received and dialled calls.
Data information	You can check the amount of data transferred over the network through the GPRS information option. In addition, you can also view how much time you are online.

P115_india_E_1.0_0827_□□□.indd 11 2008.8.27 4:45:38 PM

Tools Menu 3

Alarm clock	You can set the alarm clock to go on at a specified time.
Calendar	When you enter this menu, a calendar appears. A square cursor is located on the current date.
Calculator	The calculator provides the basic arithmetic functions: addition, subtraction, multiplication and division.
Memo	You can add new memo, view and manage saved memos.
To Do	You can view, edit and add tasks to do.
Stopwatch	This menu allows you to record the elapsed time of an event.
Unit converter	This converts any measurement into a unit you want. There are 7 types that can be converted into units: Currency, Area, Length, Weight, Temperature, Volume and Velocity.
World clock	The World Clock function provides time information on major cities worldwide.
SIM services	This menu depends on SIM and the network services.

P115_india_E_1.0_0827_□□□.indd 12 2008.8.27 4:45:38 PM

Multimedia Menu 4

MP3 player	Using the MP3 player in your phone, you can easily enjoy various music.
FM radio	You can search radio stations and enjoy listening to the radio.
Voice recorder	You can record voice memo.

P115_india_E_1.0_0827_□□□.indd 13 2008.8.27 4:45:38 PM

Messaging Menu 5

New message	This menu includes functions related to SMS (Short Message Service) and MMS (Multimedia Message Service)
Inbox	You will be alerted when you have received messages. They will be stored in Inbox. You can save SMS and MMS up to 150 respectively(summing up all the messages in each folder; inbox, drafts, sent and outbox).
Drafts	Using 'Save to draft' menu, you can save the message temporarily in Drafts.
Outbox	You can view the list and contents of sending/resending/waiting/failed messages in this menu and can also verify if the transmission was successful.
Sent	This menu allows you to view the messages which are already sent.
Listen to voicemail	This menu provides you with a quick way of accessing your voice mailbox (if provided by your network).
Info messages	Info service messages are text messages delivered by the network to GSM.
Templates	There are pre-defined messages in the list. You can view and edit the template messages or create new messages.
Settings	This menu allows you to set features of your network service provider.

P115_india_E_1.0_0827_□□□.indd 14 2008.8.27 4:45:39 PM

My stuff   Menu 6

Images	Shows the list of image files such as JPG, GIF, BMP, etc.
Sounds	Plays the list of MP3, AMR, MID, IMY files in Multimedia memory.
Others	Other files except images, sounds are stored in this folder.
Games	You can access a great selection of games on your phone.
External memory	When you insert the memory card, you can view Image, Sounds and Others menu in memory card.

Note

› Only the external memory card formatted in FAT16 is available.

Profiles   Menu 7

In Profiles, you can adjust and customise the phone tones for different events, environments, or caller groups. There are five preset profiles: General, Silent, Vibrate only, Outdoor and Headset.

Each profile can be personalised (Except Vibrate only & Silent profiles).

P115_india_E_1.0_0827_□□□.indd   15   2008.8.27   4:45:39 PM

Search	Select Search and enter the name that you want to search.
New contact	You can register a new contact address. You can enter the name, different phone numbers and email addresses of a new contact.
Speed dials	You can assign any of the keys from 2 to 9 with a Name list entry. You can call directly by pressing this key when you are in idle screen.
Groups	You can list up to the members per each group. There are 7 groups you can make lists to.
Copy all	You can copy entries from SIM card memory to Phone memory and vice versa.
Delete all	You can delete all the entries from SIM or Phone. This function requires the security code.
Settings	You can set the contact display option.
Information	› **Service dial number:** Use this function to access a particular list of services provided by your network operator (if supported by the SIM card). › **Own number:** You can save and check your own number in SIM card. › **My business card:** This option allows you to create your own business card featuring Name, any numbers and email.

P115_india_E_1.0_0827_□□□.indd 16 2008.8.27 4:45:39 PM

Settings Menu 9

Date & Time	You can set functions relating to the date and time.
Languages	You can change the language for the display texts in your phone. This change will also affect the Language Input mode.
Display	You can change settings for the phone display.
Network	You can select a network which will be registered either automatically or manually.
Call	You can set the menu relevant to a call by pressing the left soft key [Select] in the Setting menu.
Security	This menu allows you to set the phone safely.

- **PIN code request :** You can set the phone to ask for the PIN code of your SIM card when the phone is switched on.
- **Auto key lock :** You can make the key pad locked automatically after some time.
- **Phone lock :** You can use a security code to avoid unauthorized use of the phone.
- **Anti Theft Mobile Tracker :** The ATMT feature of this phone provides you with the ability to have a tracking system in place for your mobile in case you lose or misplace it.
- **Change codes :** PIN is an abbreviation of Personal Identification Number to prevent use by unauthorized persons. You can change the access codes: Security code, PIN code, PIN2 code and ATMT code.

P115_india_E_1.0_0827_□□□.indd 17 2008.8.27 4:45:40 PM

Flight mode	This allows you to use only the phone's features that do not require the use of the wireless network when you are in an airplane or in places where the wireless network is prevented.
Power save	Choose among the followings, Off/Night only/Always On, to change the factory set power saving settings.
Reset	You can initialize all factory defaults. You need Security code to activate this function.
Memory status	You can check free space and memory usage of phone , SIM card and external memory (if inserted).

P115_india_E_1.0_0827_□□□.indd 18 2008.8.27 4:45:40 PM

❑ Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal. Further detailed information is given in this manual.

Warning

- For your safety, use ONLY specified ORIGINAL batteries and chargers.
- Switch off the phone in any area where required by special regulations, e.g. in a hospital where it may affect medical equipment.
- Batteries should be disposed off in accordance with relevant legislation.

Product care and maintenance

WARNING! Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- The unit should be kept away from heat sources such as radiators or cookers.
- Use a dry cloth to clean the exterior of the unit. (Do not use any solvents.)
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.

P115_india_E_1.0_0827_□□□.indd 19 2008.8.27 4:45:40 PM

❑ Guidelines for safe and efficient use (Continued)

Electronic devices

All mobile phones may get interference, which could affect performance.

› Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over a pacemaker, i.e. in your breast pocket.

Road safety

Check the laws and regulations on the use of mobile phones in the areas when you drive.

› Do not use a hand-held phone while driving.

› Use a hands-free kit, if available.

› Pull off the road and park before making or answering a call if driving conditions so require.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

Do not use the phone at a refueling point. Do not use near fuel or chemicals.

P115_india_E_1.0_0827_□□□.indd 20 2008.8.27 4:45:40 PM

❑ Guidelines for safe and efficient use (Continued)

In aircraft

Wireless devices can cause interference in aircraft.

› Turn off your mobile phone before boarding any aircraft.

Children

Keep the phone in a safe place out of children's reach. It includes small parts which if detached may cause a choking hazard.

Emergency calls

Emergency calls may not be available under all cellular networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service
provider.

P115_india_E_1.0_0827_□□□.indd 21 2008.8.27 4:45:40 PM

❑ Guidelines for safe and efficient use (Continued)

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times before it needs to be replaced.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- Risk of explosion if battery is replaced by an incorrect type.
- Dispose off used batteries according to the manufacturer's instructions

P115_india_E_1.0_0827_□□□.indd 22 2008.8.27 4:45:41 PM

❑ Guidelines for safe and efficient use (Continued)

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model KP115 has been designed to comply with applicable safety requirement for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to ensure safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over ten (10) gram of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.997 W/kg (10g) and when worn on the body is 0.831 W/kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE) is 1.6 W/kg averaged over one (1) gram of tissue. (for example USA, Canada, Australia and Taiwan).

P115_india_E_1.0_0827_□□□.indd 23 2008.8.27 4:45:41 PM

❑ Technical Data

General

› **Product name :** KP115

› **System :** GSM 900 / DCS 1800

Ambient Temperatures

› **Max. :** +55°C (discharging)
+45°C (charging)

› **Min :** -10°C

Declaration of Conformity LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

Electronics Inc. LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721 LG

Product Details

Product Name

E-GSM 900 / DCS 1800 Dual Band Terminal Equipment

Model Name

KP115

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN50360:2001 and EN 50361:2001
EN 60950-1:2001
EN 301 489-1:v1.6.1 and EN 301 489-7: v1.3.1
EN 301 511: v9.0.2

Supplementary Information

The conformity to above standards is verified by BABT.

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 – 8940, Fax : +31 – 36 – 547 - 8794
e-mail : jacob @ lge.com

Name	Issued Date
Seung Hyoun, Ji / Director	05.JUN. 2007

Signature of representative

P115_india_E_1.0_0827_□□□.indd 24 2008.8.27 4:45:45 PM

KP115 उपयोगकर्ता निर्देशिका

P115_Hindi_1.0_0827.indd 1 2008.8.27 5:53:5 PM

Contents

सिम कार्ड और हैंडसेट बैटरी डालना 3
सिम कार्ड डालना
निर्देश

फोन के भाग 4

अपना फोन चालू और बंद करना 5
कॉल करना
अंतर्राष्ट्रीय कॉल करना
कॉल का उत्तर देना

फंक्शंस और विकल्पों को चुनना 6

पाठ लिखना 7
T9 मोड
ABC मोड
123 मोड
प्रतीक मोड

एंटी थेफ्ट मोबाइल ट्रैकर 8

मेनू ट्री 9

त्वरित सुविधा संदर्भ 10
ब्राउजर
कॉल इतिहास 11
उपकरण 12
मल्टीमीडिया 13
मैसेजिंग 14
मेरी चीजें 15
प्रोफाइलें
संपर्क 16
सेटिंग्स 17

सुरक्षित और प्रभावी उपयोग के निर्देश 19

तकनीकी डेटा 24

P115_Hindi_1.0_0827.indd 2 2008.8.27 5:53:16 PM

सिम कार्ड और हैंडसेट बैटरी डालना

सिम कार्ड डालना

जब भी आप किसी सेल्यूलर नेटवर्क की सदस्यता लेना चाहते हैं तो आपको एक प्लग-इन सिम कार्ड दिया जाता है, जिसमें आपका सदस्यता का विवरण शामिल रहता है जैसे आपका पिन, कोई उपलब्ध वैकल्पिक सुविधाएँ और अन्य कई बातें.

महत्त्वपूर्ण!

- खरोंच से या मोड़ने से प्लग-इन सिम कार्ड और उसके कॉन्टैक्ट आसानी से खराब हो सकते हैं, इसलिए कार्ड को रखने, लगाने और निकालने में सावधानी रखें. सभी सिम कार्ड बच्चों की पहुँच से दूर रखें.
- यूसिम इस फ़ोन में काम नहीं करती.

निर्देश

1. बैटरी कवर खोलें
2. बैटरी निकालें
3. आपकी सिम डालें
4. आपका मेमोरी कार्ड डालें
5. बैटरी कवर बंद करें
6. बैटरी चार्ज करें

1

2

3

4
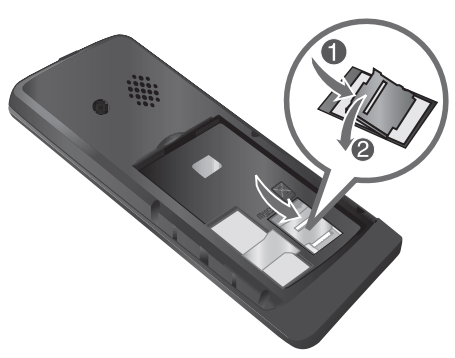

5

6

बैटरी को पहली बार उपयोग करने के पूर्व पूर्ण रूप से चार्ज करें.

P115_Hindi_1.0_0827.indd 3 2008.8.27 5:53:18 PM

फोन के भाग

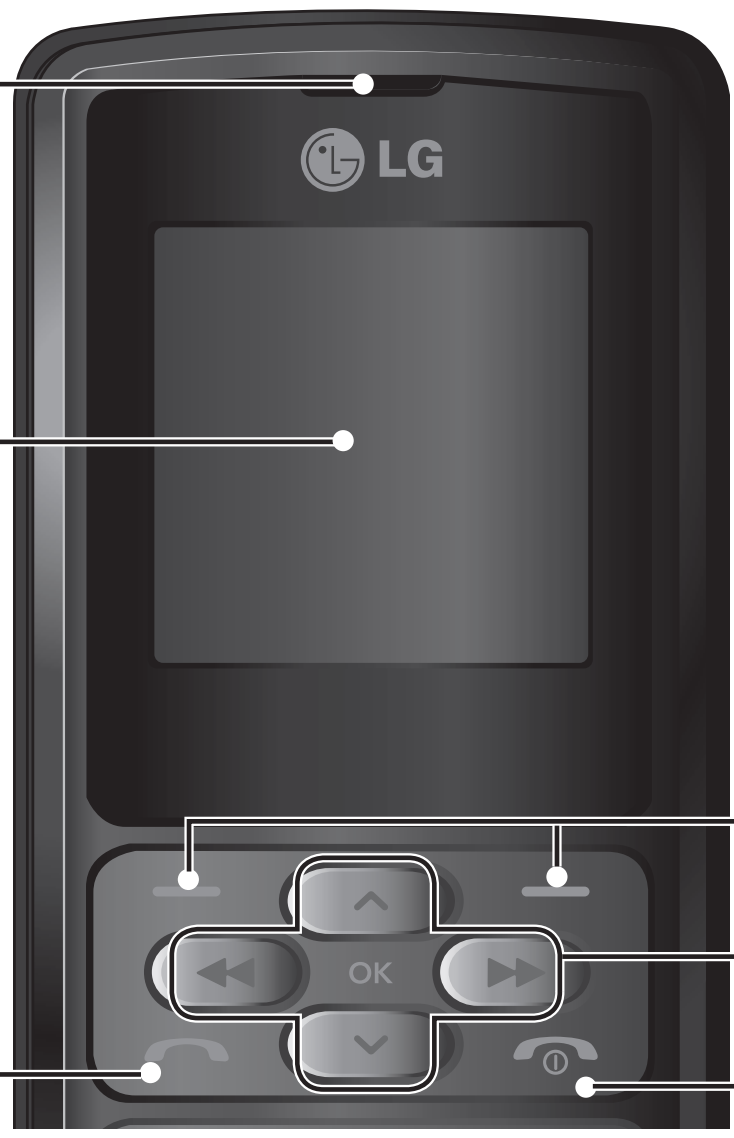

ईयरपीस

प्रदर्शन स्क्रीन

भेजें कुंजी
- फोन नंबर डायल किया जाता है और किसी कॉल का उत्तर दिया जाता है.
- स्टैंडबाय मोड में: कॉल इतिहास दिखाती है.

सॉफ्ट कुंजियाँ (बाईं सॉफ्ट कुंजी / दाईं सॉफ्ट कुंजी)
इन कुंजियों के द्वारा प्रदर्शन में नीचे दर्शाए गए फंक्शन किए जाते हैं.

नेविगेशन कुंजी
फोन फंक्शनों पर जल्दी से ले जाती है.

समाप्त कुंजी
- चालू/बंद करती है (दबाकर रखने पर)
- कॉल को समाप्त या अस्वीकार करती है.

P115_Hindi_1.0_0827.indd 4 2008.8.27 5:53:20 PM

अपना फोन चालू और बंद करना

1. पावर चालू होने तक समाप्त कुंजी को दबाकर रखें.
2. पावर बंद होने तक समाप्त कुंजी को दबाकर रखें.

कॉल करना

1. क्षेत्र कोड सहित फोन नंबर लिखें.
2. नंबर पर कॉल करने के लिए कुंजी दबाएँ.
3. कॉल समाप्त करने के लिए, कुंजी या दाईं सॉफ़्ट कुंजी दबाएँ.

अंतर्राष्ट्रीय कॉल करना

1. अंतर्राष्ट्रीय प्रीफिक्स के लिए 0 कुंजी को दबाकर रखें.
   '+' वर्ण अपने आप अंतर्राष्ट्रीय पहुँच कोड का चयन करता है.
2. देश कोड, क्षेत्र कोड, और फोन नंबर लिखें.
3. कॉल करने के लिए [भेजें] दबाएँ.

कॉल का उत्तर देना

1. जब आप कोई कॉल प्राप्त करते हैं, तो फोन रिंग करता है और फ्लैश करने वाला फोन का चिह्न स्क्रीन पर दिखाई देता है.
2. यदि किसी कुंजी को उत्तर मोड के रूप में सेट किया गया है,
   ता कुंजी के अलावा किसी भी कुंजी को दबाने से कॉल का उत्तर दिया जाएगा.
3. कॉल समाप्त करने के लिए, कुंजी दबाएँ.

P115_Hindi_1.0_0827.indd 5 2008.8.27 5:53:22 PM

फंक्शंस और विकल्पों को चुनना

आपके फोन में फंक्शंस का सेट होता है जिससे आप फोन को अनुकूलित कर सकते हैं. ये फंक्शंस मेनू और सबमेनू में व्यवस्थित होते हैं जिन्हें दो सॉफ्ट कुंजियों द्वारा एक्सेस किया जाता है जा ▬ और ▬ द्वारा चिह्नित होती हैं. प्रत्येक मेनू और सब-मेनू द्वारा आप किसी विशेष फंक्शन की सेटिंग्स देख और बदल सकते हैं.

सॉफ्ट कुंजियों की भूमिकाएँ वर्तमान स्थिति के अनुसार बदलती है; प्रत्येक कुंजी के ठीक ऊपर स्क्रीन में नीचे वाली पंक्ति पर लेबल इस कुंजी की वर्तमान भूमिका बताता है.

उपलब्ध मेनू पर जाने के लिए बाईं सॉफ्ट कुंजी दबाएँ.

उपलब्ध संपर्कों पर जाने के लिए दाई सॉफ्ट कुंजी

P115_Hindi_1.0_0827.indd 6 2008.8.27 5:53:23 PM

पाठ लिखना

आप फोन का कीपैड उपयोग करके अल्फान्यूमेरिक वर्णों को लिख सकते हैं. पाठ इनपुट मोड को # कुंजी दबाकर बदलें.

T9 मोड

T9 प्रिडिक्टिव पाठ इनपुट मोड द्वारा आप कम से कम कुंजी दबाकर शब्दों को आसानी से लिख सकते हैं. जैसे ही आप प्रत्येक कुंजी दबाते हैं, फोन वर्णों को यह सोचकर दिखाना प्रारंभ कर देता है कि आप अंतर्निहित शब्दकोश के आधार पर लिख रहे हैं. आप शब्दकोश में नए शब्दों को भी जोड़ सकते हैं. जैसे ही नए शब्द जोड़े जाते हैं, वैसे ही शब्द शब्दकोश से सर्वाधिक समान शब्द दिखाने के लिए बदल जाता है.

ABC मोड

इस मोड के द्वारा आप आवश्यक अक्षर के साथ लेबल की गई कुंजी को एक बार, दो बार, तीन या चार बार दबाकर अक्षरों को तब तक लिखते हैं जब तक कि वह अक्षर न दिखने लगे.

123 मोड (नंबर मोड)

प्रति नंबर एक कीस्ट्रोक उपयोग करके नंबर लिखें.

प्रतीक मोड

प्रतीक मोड द्वारा आप विभिन्न प्रकार के प्रतीकों या विशेष वर्णों को लिख सकते हैं. कोई प्रतीक लिखने के लिए, विकल्प → सम्मिलित करें → प्रतीक चुनें. इच्छित प्रतीक चुनने के लिए नेविगेशन और सांख्यिक कुंजियों का उपयोग करें और ठीक कुंजी दबाएँ.

एंटी थेफ्ट मोबाइल ट्रैकर(ATMT)

1. इस फोन की ATMT सुविधा आपके मोबाइल के खोने या गलत जगह रखने की स्थिति में आपको ट्रैकिंग सिस्टम की योग्यता प्रदान करती है.
2. किसी अनधिकृत उपयोगकर्ता द्वारा आपका फोन उपयोग करने की स्थिति में, एक SMS आपके फोन स ट्रिगर होता है और संदेश आपके पूर्वनिर्धारित नंबर पर भेजा जाता है.
3. ATMT चालू पर सेट करना [मेनू 9.6.4]
   › उपकरणों की सूची प्रदर्शित होती है.
   › एंटी थेफ्ट मोबाइल ट्रैकर चुनें.
   › डिफॉल्ट ATMT कोड लिखें.
   › ATMT सेट करें चुनें
   › चालू चुनें, ठीक दबाएँ

नोट

› यदि आप अपने फ़ोन को किसी दूसरे सिम कार्ड के साथ उपयोग करना चाहते हैं, तो सुनिश्चित करें कि ATMT सुविधा बंद पर सेट है.

› ATMT के लिए देश कोड के साथ नंबर लिखने की अनुशंसा की जाती है (उदाहरण के लिए भारत के लिए मोबाइल नंबर के पहले +91 लिखें)

› डिफॉल्ट ATMT कोड "0000" है.

P115_Hindi_1.0_0827.indd 8 2008.8.27 5:53:24 PM

मेनू ट्री

1. ब्राउजर
- 1.1 होम
- 1.2 बुकमार्क्स
- 1.3 पता दर्ज करें
- 1.4 इतिहास
- 1.5 रक्षित पृष्ठ
- 1.6 सेटिंग्स
- 1.7 जानकारी

2. कॉल इतिहास
- 2.1 सभी कॉल्स
- 2.2 छूटे कॉल्स
- 2.3 डायल की गईं कॉल्स
- 2.4 प्राप्त कॉल्स
- 2.5 कॉल अवधि
- 2.6 कॉल कीमत
- 2.7 डेटा जानकारी

3. उपकरण
- 3.1 अलार्म क्लॉक
- 3.2 कैलेंडर
- 3.3 कैलक्युलेटर
- 3.4 मेमो
- 3.5 टू डू
- 3.6 स्टॉपवॉच
- 3.7 इकाई परिवर्तक
- 3.8 विश्व घड़ी
- 3.9 सिम सेवाएँ

4. मल्टीमीडिया
- 4.1 MP3 प्लेयर
- 4.2 FM रेडियो
- 4.3 वॉइस रिकॉर्डर

5. मैसेजिंग
- 5.1 नया संदेश
- 5.2 इनबॉक्स
- 5.3 प्रारूप
- 5.4 आउटबॉक्स
- 5.5 प्रेषित
- 5.6 वॉइसमेल सुनें
- 5.7 जानकारी संदेश
- 5.8 टेम्पलेट्स
- 5.9 सेटिंग्स

6. मेरी चीजें
- 6.1 चित्र
- 6.2 ध्वनिया
- 6.3 अन्य
- 6.4 गेम्स
- 6.5 बाह्य मेमोरी

7. प्रोफाइलें
- 7.1 सामान्य
- 7.2 मौन
- 7.3 सिर्फ कंपन
- 7.4 आउटडोर
- 7.5 हेडसेट

8. संपर्क
- 8.1 खोजें
- 8.2 नया संपर्क
- 8.3 शीघ्र डायल्स
- 8.4 समूह
- 8.5 सभी की प्रतिलिपि बनाएँ
- 8.6 सभी हटाएँ
- 8.7 सेटिंग्स
- 8.8 जानकारी

9. सेटिंग्स
- 9.1 दिनांक और समय
- 9.2 भाषाएँ
- 9.3 प्रदर्शन
- 9.4 नेटवर्क
- 9.5 कॉल
- 9.6 सुरक्षा
- 9.7 फ्लाइट मोड
- 9.8 ऊर्जा बचत
- 9.9 रीसेट करें
- 9.0 मेमोरी स्थिति

P115_Hindi_1.0_0827.indd 9 2008.8.27 5:53:25 PM

त्वरित सुविधा संदर्भ

यह अनुभाग आपके फोन पर सुविधाओं की संक्षिप्त व्याख्या देता है.

ब्राउजर मेनू 1

होम	होमपेज से कनेक्ट करता है. होमपेज वह साइट होगी जो सक्रिय प्रोफ़ाइल में परिभाषित होगी. यदि आपने इसे सक्रिय प्रोफाइल में निर्धारित नहीं किया है तो यह सेवा प्रदाता द्वारा निर्धारित किया जाता है.
बुकमार्क्स	इस मेनू द्वारा आप पसंदीदा वेब पेज के URL संग्रहीत कर सकते हैं जिससे बाद में आसानी से पहुँचा जा सके.
पता दर्ज करें	आप सीधे ही इच्छित साइट से कनेक्ट हो सकते हैं. कोई विशिष्ट URL लिखने के बाद, ठीक कुंजी दबाएँ और कनेक्ट करें चुनें.
इतिहास	यह मेनू हाल ही में ब्राउज किए गए पेज दिखाता है.
रक्षित पृष्ठ	आप अपने पसंदीदा पृष्ठों का पता संग्रहीत कर सकते हैं.
सेटिंग्स	आप इंटरनेट सेवा से संबंधित प्रोफाइल, कैश और सुरक्षा सेट कर सकते हैं.
जानकारी	आप WAP ब्राउजर संस्करण की जानकारी देख सकते हैं.

P115_Hindi_1.0_0827.indd 10 2008.8.27 5:53:26 PM

कॉल इतिहास मेनू 2

यदि नेटवर्क सेवा क्षेत्र में कॉलिंग लाइन आइडेंटिफिकेशन (CLI) का समर्थन करता है केवल तभी आप छूटी, प्राप्त और डायल की गईं कॉलें जाँच सकते हैं.

सभी कॉल्स	आप सभी जावक और आवक कॉल्स की सूचियाँ देख सकते हैं.
छूटे कॉल्स	आप अनुत्तरित कॉल्स देख सकते हैं.
डायल की गईं कॉल्स	आप जावक कॉल्स (कॉल किए गए या कॉल का प्रयास किए गए) देख सकते हैं.
प्राप्त कॉल्स	आप आवक कॉल्स देख सकते हैं.
कॉल अवधि	आप अपने आवक और जावक कॉल्स की अवधि देख सकते हैं आप कॉल टाइमर्स भी रीसेट कर सकते हैं.
कॉल कीमत	आपके डायल किए नंबर पर लागू शुल्क और आपके सभी प्राप्त और डायल किए गए कॉल्स की कॉल अवधि दिखाता है.
डेटा जानकारी	आप GPRS जानकारी विकल्प द्वारा नेटवर्क पर स्थानांतरित डेटा की मात्रा जाँच सकते हैं. इसके अतिरिक्त, आप यह भी देख सकते हैं कि आप कितने समय ऑनलाइन रहे.

P115_Hindi_1.0_0827.indd 11 2008.8.27 5:53:26 PM

अलार्म क्लॉक	किसी निर्दिष्ट समय जाने के लिए आप अलार्म क्लॉक सेट कर सकते हैं
कैलेंडर	इस मेनू में जाने पर, एक कैलेंडर दिखाई देता है. एक चौकोर कर्सर वर्तमान दिनांक पर स्थित होता है.
कैलक्यूलेटर	कैलक्यूलेटर में प्रमुख अंकगणितीय फंक्शंस होते हैं: जोड़, घटाव, गुणा और भाग.
मेमो	आप नया मेमो जोड़ सकते हैं, रक्षित मेमो देख सकते हैं और प्रबंधित कर सकते हैं.
टू डू	आप किए जाने वाले कार्य देख सकते हैं, संपादित कर सकते हैं और जोड़ सकते हैं.
स्टॉपवॉच	इस मेनू द्वारा किसी ईवेंट पर बिताए गए समय को रिकॉर्ड कर सकते हैं.
इकाई परिवर्तक	यह किसी भी इकाई को इच्छित इकाई में बदल देता है. 7 ऐसे प्रकार हैं जिन्हें इकाइयों में कनवर्ट किया जा सकता है: मुद्रा, क्षेत्र, लंबाई, वजन, ताप, आयतन और गति.
विश्व घड़ी	विश्व घड़ी फ़ंक्शन विश्वव्यापी मुख्य शहरों के समय की जानकारी देता है.
सिम सेवाएँ	यह मेनू सिम और नेटवर्क सेवाओं पर निर्भर करता है.

P115_Hindi_1.0_0827.indd 12 2008.8.27 5:53:27 PM

MP3 प्लेयर	अपने फोन में MP3 प्लेयर उपयोग करके, आप विभिन्न प्रकार के संगीत का आनंद ले सकते हैं.
FM रेडियो	आप रेडियो स्टेशंस खोजकर रेडियो सुनने का आनंद ले सकते हैं.
वॉइस रिकॉर्डर	आप वॉइस मेमो रिकॉर्ड कर सकते हैं.

P115_Hindi_1.0_0827.indd 13 2008.8.27 5:53:27 PM

मैसेजिंग मेनू 5

नया संदेश	इस मेनू में SMS (शॉर्ट मैसेज सर्विस) और MMS (मल्टीमीडियो मैसेज सर्विस) से संबंधित फ़ंक्शंस होते हैं.
इनबॉक्स	संदेश प्राप्त होने पर आपको संकेत किया जाएगा. वे इनबॉक्स में संग्रहीत हो जाएँगे.
प्रारूप	'प्रारूप में सहेजें' मेनू उपयोग करके, आप संदेश को प्रारूप में अस्थायी रूप से सहेज सकते हैं.
आउटबॉक्स	आप भेजे जा रहे/पुन: भेजे जा रहे/प्रतीक्षारत/विफल संदेशों की सूची और सामग्री इस मेनू में देख सकते हैं और यदि ट्रांसमिशन सफल हो तो आप सत्यापित भी कर सकते हैं.
प्रेषित	इस मेनू द्वारा आप पहले से ही प्रेषित संदेशों को देख सकते हैं.
वॉइसमेल सुनें	यह मेनू आपको अपने वॉइस मेलबॉक्स को एक्सेस करने का त्वरित तरीका प्रदान करता है (यदि आपके नेटवर्क द्वारा प्रदान किया गया हो).
जानकारी संदेश	जानकारी सेवा संदेश पाठ संदेश होते हैं जो नेटवर्क द्वारा GSM को भेजे जाते हैं.
टेम्पलेट्स	सूची में पूर्व-निर्धारित संदेश होते हैं. आप टेम्पलेट संदेशों को देख सकते हैं और संपादित कर सकते हैं या नए संदेश बना सकते हैं.
सेटिंग्स	इस मेनू द्वारा आप अपने नेटवर्क सेवा प्रदाता की सुविधाओं को सेट कर सकते हैं.

P115_Hindi_1.0_0827.indd 14 2008.8.27 5:53:28 PM

मेरी चीजें मेनू 6

चित्र	चित्र फाइलों जैसे JPG, GIF, BMP, इत्यादि की सूची दिखाता है.
ध्वनियाँ	MP3, AMR, MID, IMY फाइलों की सूची मल्टीमीडिया मेमोरी में चलाती हैं.
अन्य	चित्रों के अलावा अन्य फाइलें, ध्वनियाँ इस फोल्डर में संग्रहीत की जाती हैं.
गेम्स	आप अपने फोन पर गेम्स का बढ़िया चयन कर सकते हैं.
बाह्य मेमोरी	जब आप मेमोरी कार्ड डालते हैं, तो आप मेमोरी कार्ड में चित्र, ध्वनियाँ और अन्य मेनू देख सकते हैं.

नोट

› केवल FAT16 में स्वरूपित बाह्य मेमोरी कार्ड उपलब्ध होता है.

प्रोफाइलें मेनू 7

प्रोफाइलों में, आप विभिन्न ईवेंट्स, परिवेशों या कॉलर समूहों के लिए फोन टोन्स को समायोजित और अनुकूलित कर सकते हैं. पाँच प्रीसेट प्रोफाइलें होती हैं: सामान्य, मौन, सिर्फ कंपन, आउटडोर और हेडसेट.

प्रत्येक प्रोफाइल को व्यक्तिगत किया जा सकता है (सिर्फ कंपन, मौन मेनू को छोड़कर).

खोजें — खोजें चुनें और वह नाम लिखें जिसे आप खोजना चाहते हैं.

नया संपर्क — आप नया संपर्क पता रजिस्टर कर सकते हैं. आप नए संपर्क का नाम, भिन्न फोन नंबर और ईमेल पते लिख सकते हैं.

शीघ्र डायल्स — आप नाम सूची प्रविष्टि के साथ 2 से 9 तक कोई भी कुंजी असाइन कर सकते हैं. जब आपकी स्क्रीन निष्क्रिय हो तो आप यह कुंजी दबाकर सीधे ही कॉल कर सकते हैं.

समूह — आप हर समूह से सदस्यों की सूची बना सकते हैं. आप इसमें 7 समूहों में सूचियाँ बना सकते हैं.

सभी की प्रतिलिपि बनाएँ — आप प्रविष्टियों की कॉपी SIM कार्ड मेमोरी से फ़ोन मेमोरी में और इसके विपरीत फ़ोन मेमोरी से SIM कार्ड मेमोरी में बना सकते हैं.

सभी हटाएँ — आप SIM या फ़ोन से सभी प्रविष्टियाँ हटा सकते हैं. इस फ़ंक्शन के लिए सुरक्षा कोड की आवश्यकता होती है.

सेटिंग्स — आप संपर्क प्रदर्शन विकल्प सेट कर सकते हैं.

जानकारी

- **सेवा डायल नंबर :** अपने नेटवर्क ऑपरेटर द्वारा दी गई सेवाओं की विशेष सूची तक पहुँचने के लिए इस फ़ंक्शन का उपयोग करें (यदि SIM कार्ड द्वारा समर्थित हो).
- **स्वयं का नंबर :** आप SIM कार्ड में अपने नंबर को रक्षित कर सकते और जाँच सकते हैं.
- **मेरा व्यवसाय कार्ड :** यह विकल्प आपको नाम, कोई भी नंबर्स और ईमेल वाला अपना व्यवसाय कार्ड बनाने की सुविधा देता है.

P115_Hindi_1.0_0827.indd 16 2008.8.27 5:53:29 PM

दिनांक और समय	आप दिनांक और समय से संबंधित फ़ंक्शनों को सेट कर सकते हैं.
भाषाएँ	आप अपने फ़ोन में प्रदर्शन पाठों के लिए भाषा बदल सकते हैं. यह परिवर्तन भाषा इनपुट मोड को भी प्रभावित करेगा.
प्रदर्शन	आप फ़ोन प्रदर्शन की सेटिंग्स बदल सकते हैं.
नेटवर्क	आप कोई ऐसा नेटवर्क चुन सकते हैं, जिसे या तो स्वचालित रूप से या मैन्युअली रजिस्टर किया जाएगा.
कॉल	आप सेटिंग मेनू में बाईं सॉफ़्ट कुंजी [चयन करें] को दबाकर कॉल से संबद्ध मेनू को सेट कर सकते हैं.
सुरक्षा	यह मेनू आपको फ़ोन को सुरक्षित रूप से सेट करने की सुविधा देता है. › **PIN कोड अनुरोध :** आप फ़ोन का स्विच चालू किए जाने पर अपने फ़ोन को आपके SIM कार्ड के PIN कोड के बारे में पूछने के लिए सेट कर सकते हैं. › **स्वतः की लॉक :** आप कुछ समय बाद की पैड को अपने आप लॉक करने के लिए सेट कर सकते हैं. › **फोन लॉक :** आप फ़ोन को अनधिकृत उपयोग से बचाने के लिए किसी सुरक्षा कोड का उपयोग कर सकते हैं.

सुरक्षा

› **एंटी थेफ्ट मोबाइल ट्रैकर :** इस फ़ोन की ATMT सुविधा आपको अपने मोबाइल के खो जाने या ग़लत जगह पर रखे जाने पर आपके मोबाइल में ट्रैकिंग सिस्टम रखने की क्षमता उपलब्ध कराता है.

› **कोड बदलें :** PIN पर्सनल आइडेंटिफ़िकेशन नंबर का संक्षिप्त रूप है, जो अनधिकृत व्यक्तियों द्वारा उपयोग को रोकता है.
आप एक्सेस कोड्स बदल सकते हैं : सुरक्षा कोड, PIN कोड, PIN2 कोड.

फ्लाइट मोड

इससे आप फ़ोन की केवल उन सुविधाओं का उपयोग कर सकते हैं, जिनके लिए आपके हवाई जहाज़ में होने पर या जहाँ वायरलेस नेटवर्क प्रतिबंधित हो, ऐसे स्थान पर रहने पर
वायरलेस नेटवर्क के उपयोग की आवश्यकता नहीं होती.

ऊर्जा बचत

फैक्टरी सेट ऊर्जा बचत की सेटिंग्स बदलने के लिए इनमें चुनें, बंद/केवल रात्रि/हमेशा चालू.

रीसेट करें

आप सारे फ़ैक्टरी डिफ़ॉल्ट्स को आरंभ कर सकते हैं. आपको इस फ़ंक्शन को सक्रिय करने के लिए सुरक्षा कोड की आवश्यकता होती है.

मेमोरी स्थिति

आप फोन, सिम कार्ड और बाहरी मेमोरी (यदि लगाई गई है) में खाली स्थान और उपयोग की गई मेमोरी का पता लगा सकते हैं.

❏ सुरक्षित और प्रभावी उपयोग के निर्देश

कृपया इन आसान निर्देशों को पढ़ें. इन निर्देशों का पालन नहीं करना खतरनाक या गैरकानूनी हो सकता है. विस्तृत जानकारी इस मैन्युअल में आगे दी गई है.

चेतावनी

› आपकी सुरक्षा के लिए केवल निर्दिष्ट की गई ओरिजनल बैटरी और चार्जर का उपयोग करें.

› जहाँ विशेष नियमों के तहत जरूरत हो उन क्षेत्रों में फोन बंद रखें, जैसे चिकित्सालय में जहाँ चिकित्सा उपकरणों पर प्रभाव पड़ सकता है.

› संबंधित कानून के अनुसार बैटरियाँ नष्ट की जानी चाहिए.

उत्पाद की देखभाल और रखरखाव

चेतावनी! केवल इस विशेष फोन मॉडल के साथ उपयोग के लिए बनाई गई बैटरियों, चार्जरों और अतिरिक्त उपकरणों का उपयोग करें. किसी भी दूसरे प्रकार के उपयोग से फोन पर लागू स्वीकृति या वारंटी अमान्य हो सकती है, और इससे खतरा भी हो सकता है.

› इस फोन को स्वयं न खोलें. जब भी इसमें किसी सुधार की जरूरत हो तो इसे किसी योग्य सेवा तकनीशियन के पास ले
जाएँ.

› फोन को रेडिएटर या कुकर जैसी गरम चीजों से दूर रखा जाना चाहिए.

› फोन को बाहर से साफ करने के लिए सूखे कपड़े का उपयोग करें (किसी सॉल्वेंट का उपयोग न करें.)

› फोन को क्रेडिट कार्ड या ऐसे ही किसी और कार्ड के पास न रखें; इससे चुंबकीय पट्टियों की जानकारी प्रभावित हो सकती है.

P115_Hindi_1.0_0827.indd 19 2008.8.27 5:53:31 PM

❑ सुरक्षित और प्रभावी उपयोग के निर्देश (जारी)

इलेक्ट्रॉनिक डिवाइस

सभी मोबाइल फोन रूकावट पैदा कर सकते हैं, जिससे काम पर असर होता है.

› बिना अनुमति के आपके मोबाइल फोन का उपयोग किसी चिकित्सा उपकरण के पास न करें. फोन को पेसमेकर के पास अर्थात आपके शर्ट के ऊपरी जेब में न रखें.

सड़क सुरक्षा

जिस क्षेत्र में आप वाहन चला रहे हैं वहाँ पर मोबाइल फोन के उपयोग के कानून और नियमों की जानकारी प्राप्त करें.

› वाहन चलाने के दौरान हैंड-हेल्ड फोन का उपयोग न करें.

› यदि उपलब्ध हो तो हैंड्स-फ्री किट का उपयोग करें.

› कोई कॉल करने या उत्तर देने के पहले यदि जरूरत हो तो वाहन को सड़क के एक तरफ करके रोक लें.

विस्फोट वाला क्षेत्र

जिस स्थान पर विस्फोट हो रहे हों वहाँ फोन का उपयोग न करें. प्रतिबंधों पर ध्यान दें और कानून व नियमों का पालन करें.

संभावित विस्फोट वाले वातावरण

पेट्रोल, डीजल या गैस पंप पर फोन का उपयोग न करें. ईंधन या रसायनों के पास फोन का उपयोग न करें.

P115_Hindi_1.0_0827.indd 20 2008.8.27 5:53:32 PM

❏ सुरक्षित और प्रभावी उपयोग के निर्देश (जारी)

हवाई जहाज में

वायरलेस डिवाइसों से हवाई जहाज में बाधा उत्पन्न हो सकती है.

› किसी भी हवाई जहाज में चढ़ने से पहले अपना मोबाइल फोन बंद कर लें.

बच्चे

फोन को बच्चों की पहुँच से दूर किसी सुरक्षित स्थान पर रखें. इसमें छोटे छोटे पुर्जे होते हैं जो यदि अलग हो जाएँ तो गले में अटक सकते हैं.

आपातकालीन कॉल

आपातकालीन कॉलों की सुविधा सभी मोबाइल नेटवर्कों में उपलब्ध नहीं होती है. इसलिए, आपको आपातकालीन कॉलों के लिए कभी भी पूरी तरह से फोन पर निर्भर नहीं रहना चाहिए. अपने स्थानीय सेवा प्रदाता से इसकी जानकारी लें.

P115_Hindi_1.0_0827.indd   21   2008.8.27   5:53:33 PM

❑ सुरक्षित और प्रभावी उपयोग के निर्देश (जारी)

बैटरी की जानकारी और देखभाल

- बैटरी रिचार्ज करने के पहले आपको उसे पूरी तरह डिस्चार्ज करने की आवश्यकता नहीं है. दूसरे बैटरी सिस्टमों के विपरीत, इसमें ऐसा कोई मेमोरी प्रभाव नहीं है जिससे बैटरी के काम पर असर होता़ हो.
- केवल LG बैटरियों और चार्जरों का उपयोग करें. LG के चार्जर बैटरी के जीवन को बढ़ाने के लिए बने होते हैं.
- बैटरी पैक को अलग-अलग न करें या उसका शॉर्ट-सर्किट न होने दें.
- जब बैटरी का काम आशानुरूप न रहे तो उसे बदल दें. बैटरी पैक को बदलने के पूर्व कई बार रिचार्ज किया जा सकता है.
- बैटरी चार्जर को सीधे ही सूर्य की रोशनी में न रखें या अधिक नमी जैसे बाथरूम में इसे उपयोग न करें.
- बैटरी को किसी ग़लत प्रकार द्वारा बदलने पर विस्फोट का खतरा रहता है.
- उपयोग की गई बैटरियों को निर्माता के निर्देशों के अनुसार नष्ट कर दें.

❑ सुरक्षित और प्रभावी उपयोग के निर्देश (जारी)

रेडियो आवृत्ति ऊर्जा के संपर्क में आना

रेडियो तरंगों की पहुँच में आना और स्पेसिफिक एब्सॉर्पशन रेट (SAR) की जानकारी

मोबाइल फोन के इस मॉडल KP115 को रेडियो आवृत्ति के संपर्क में आने के लिए लागू सुरक्षा आवश्यकताओं के अनुसार बनाया गया है. यह आवश्यकता वैज्ञानिक निर्देशों पर आधारित है जिसमें सभी आयु वर्ग और हर प्रकार के स्वास्थ्य के लोगों की सुरक्षा तय करने के लिए बनाए गए सेफ्टी मार्जिन शामिल हैं.

- रेडियो तरंग के संपर्क से संबंधित निर्देश मापन की एक इकाई लागू करते हैं जिसे स्पेसिफिक एब्जॉर्प्शन रेट या एसएआर कहा जाता है. एसएआर के परीक्षण मानकीकृत पद्धतियों का उपयोग करके किए जाते हैं, जहाँ फोन उपयोग होने वाले सभी फ्रीक्वेंसी बैंड्स में उच्चतम प्रमाणित क्षमता स्तर के संप्रेषण की स्थिति में होता है.
- हालाँकि एसएआर का स्तर विभिन्न LG फोन मॉडल में अलग-अलग हो सकता है, फिर भी उन्हें रेडियो तरंगों के संपर्क की स्थिति में संबंधित सुरक्षात्मक उपायों के साथ डिजाइन किया गया है.
- नॉन-आयोनाइजिंग रेडिएशन प्रोटेक्शन (ICNIRP) के लिए अंतरर्राष्ट्रीय आयोग द्वारा अनुशंसित एसएआर सीमा 10g टिश्यू पर औसतन 2W/kg होती है.
- इस फोन मॉडल के लिए DASY4 द्वारा परीक्षण किया गया उच्चतम एसएआर मान कान के पास 0.997 W/kg (10g) और शरीर के पास 0.831 W/kg (10g) है.
- देशों/ क्षेत्रों के निवासियों के लिए, जिन्होंने इंस्टीट्यूट ऑफ इलेक्ट्रिकल एंड इलेक्ट्रॉनिक्स इंजीनियर्स (IEEE) द्वारा अनुशंसित एसएआर सीमा को स्वीकार किया है, एसएआर डेटा जानकारी एक (1) ग्राम टिश्यू पर औसतन 1.6 W/kg होती

  है. (उदाहरण के लिए यूएसए, कनाडा, ऑस्ट्रेलिया और ताईवान).

❑ तकनीकी डेटा

सामान्य

› उत्पाद नाम : KP115

› सिस्टम : GSM 900 / DCS 1800

वातावरण का तापमान

› अधिकतम : +55°C (डिस्चार्जिंग)
+45°C (चार्जिंग)

› न्यूनतम : -10°C

Declaration of Conformity

LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

Electronics Inc. LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721 LG

Product Details

Product Name

E-GSM 900 / DCS 1800 Dual Band Terminal Equipment

Model Name

KP115

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN50360:2001 and EN 50361:2001
EN 60950-1:2001
EN 301 489-1:v1.6.1 and EN 301 489-7: v1.3.1
EN 301 511: v9.0.2

Supplementary Information

The conformity to above standards is verified by BABT.

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 – 8940, Fax : +31 – 36 – 547 - 8794
e-mail : jacob @ lge.com

Name: Seung Hyoun, Ji / Director

Issued Date: 05.JUN. 2007

Signature of representative