



繁體中文
簡體中文
ENGLISH



用戶指南

LG-P690



CE 0168

P/N : MFL67322418 (1.0)

www.lg.com



繁體中文

LG-P690 用戶指南

本指南將幫助您開始使用您的手機。

如果需要更多資訊，請瀏覽 www.lg.com。

- 此手冊中的部份內容可能會因手機程式之改良或不同網絡商提供的服務而令實際情況有所不同,這並不會另行通知。
- 由於使用觸控螢幕鍵盤，我們不建議視障人士使用此手機。
- Copyright ©2011 LG Electronics, Inc. All rights reserved. LG 及 LG 標誌乃 LG 集團及其相關公司的註冊商標。所有其他商標均屬於其擁有者。
- Google™、Maps™、Gmail™、YouTube™、Talk™ 及 Android Market™ 均為 Google, Inc. 的商標。



內容

安全及有效使用準則	5
重要通知	11
了解您的手機	21
安裝智能卡（SIM 卡）及電池	23
為手機充電	24
安裝記憶卡	25
格式化記憶卡	26
您的桌面	27
觸控螢幕提示	27
鎖定您的手機	27
解鎖螢幕	28
靜音模式	28
主頁	28
在您的桌面上新增小工具	29
返回最近使用的應用程式	29
通告欄	30
檢視狀態列	30
螢幕鍵盤	32
輸入重音字母	33
Google 帳戶設定	34
建立您的 Google 帳戶	34
登入您的 Google 帳戶	34
通話功能	36
撥打電話	36
從通訊錄中撥打電話	36
接聽來電和拒接來電	36
調整通話音量	36
通話期間撥打第二個電話	36
檢視通話記錄	37
通話設定	37
通訊錄	38
搜尋聯絡人	38
新增聯絡人	38
常用的聯絡人	38
訊息/電子郵件	39
訊息	39
發送訊息	39
更改訊息設定	40
設定您的電子郵件	40
Microsoft Exchange 電子郵件帳戶	40

其他 (POP3, IMAP) 電郵帳戶	41
編寫及發送電子郵件	42
處理帳戶資料夾	43
新增及編輯電子郵件帳戶	43
相機	44
了解取景器	44
快速拍照	45
拍攝相片後	45
使用進階設定	45
檢視已儲存的相片	47
視像攝錄機	48
瞭解取景器	48
拍攝快速影片	49
拍攝影片後	49
使用進階設定	49
觀看已儲存的影片	50
觀看影片時調整音量	50
多媒體	51
檢視模式	51
時間軸檢視	51
使用 SmartShare	51

音樂	52
播放歌曲	52
使用 USB 大容量儲存裝置傳送檔案	53
如何在手機上儲存音樂/影片檔案	53
將通訊錄從舊手機移動至新手機	54
使用藍芽從手機傳送數據	54
使用收音機	55
搜尋電台	55
重設頻道	56
收聽電台	56
實用程式	57
設定鬧鐘	57
使用計算機	57
新增事件至日曆	57
更改您的預設日曆檢視模式	58
Polaris Viewer	58
錄音程式	59
錄製聲音或語音	59
發送錄音	59

內容

網絡功能.....	60	USB 連線網絡及可攜式	
瀏覽器.....	60	Wi-Fi 熱點設定.....	71
使用網絡工具列.....	60	要透過 USB 連線的數據連	
使用選項.....	60	接.....	71
設定.....	62	共享網絡及數據共享.....	71
無線及網絡.....	62	要將手機的數據連接以可	
通話設定.....	63	攜式熱點的形式分享.....	72
聲音.....	64	要重新命名或保護可攜式	
顯示.....	65	熱點.....	72
位置及安全.....	65	軟件更新.....	74
應用程式.....	66	手機軟件更新.....	74
帳號及同步處理.....	66	DivX 手機.....	74
隱私設定.....	67	配件.....	76
SD 卡及手機儲存.....	67	技術數據.....	77
語言及鍵盤.....	67	疑難排解.....	78
語音輸入及輸出.....	67		
協助工具.....	69		
日期及時間.....	69		
關於手機.....	69		
Wi-Fi.....	69		
開啓 Wi-Fi.....	69		
連接至 Wi-Fi.....	69		
共享手機的流動數據連			
接。.....	70		

安全及有效使用準則

請讀取以下簡易的使用規則。違反這些準則可能會發生危險或觸犯法律。

射頻能量暴露準則

無線電波暴露及特定吸收比率 (SAR) 資訊。本型號手機 LG-P690 之設計符合適用的無線電波暴露安全要求。這些要求乃基於可確保所有使用者安全的科學指引，範圍涵蓋任何年齡與任何健康狀況的人士。

- 無線電波暴露指引的量度單位叫作特定吸收比率或 SAR。SAR 測試使用標準方法進行，用手機以在所有使用的頻帶最高的合格電源水平傳輸。

- 雖然不同型號 LG 手機的 SAR 水平有所差異，但所有這些手機的設計均符合無線電波暴露的相關指引。

- 國際非離子化輻射保護委員會 (ICNIRP) 建議的 SAR 限制為平均 10 克組織 2 W/kg。
- 本型號的最高 SAR 值經由 DAS-Y4 鑒定，用於耳邊時為 1.05 W/kg (10 克)，隨身攜帶時為 0.606 W/kg (10 克)。
- 採用了電氣與電子工程師學會 (IEEE) 建議的 SAR 限制，即平均 1 克組織 1.6 W/kg 的國家/地區居民的 SAR 數據資訊。

產品保護及維護



警告

請僅使用經認可適用於此型號手機的電池、充電器及配件。使用其他種類的配件可能會導致手機的認可或保養失效，並可能引致危險。

安全及有效使用準則

- 請勿拆開此裝置。如手機需要維修，請由合資格的維修技師進行維修。
- 根據 LG 的政策，保養期內的維修可能會包括更換部件或主板，這些用於更換的部件或主板可能是新的，亦可能是返修的，但其功能與被更換的部件相同。
- 請遠離如電視、收音機或個人電腦等電器產品而使用手機。
- 裝置需遠離發熱來源，如散熱器或烹調器具。
- 請勿摔落手機。
- 請勿讓此裝置遭機械震動或衝擊。
- 請於任何有特殊限制的地方關閉手機。例如，請勿在醫院內使用手機，否則它可能會對敏感的醫療設備造成影響。
- 請勿以濕水的手操作充電中的手機。這可能會引致觸電和造成手機嚴重損壞。
- 請不要在易燃材料附近為手機充電，因為充電期間手機會發熱並導致火災。
- 使用乾布清潔裝置表面（請勿使用苯、稀釋劑或酒精等溶劑）。
- 切勿在布質家具上為手機充電。
- 手機應在通風良好的環境中充電。
- 請勿讓此裝置接觸過多煙霧或塵埃。
- 請勿將手機置於信用卡或車票附近，這可能會影響磁帶上的資料。
- 請勿以尖銳物件敲打螢幕，否則可能會對手機造成損毀。
- 請勿將手機暴露於液體或濕氣中。

- 請小心使用耳機等配件。如非必要，請勿觸及天線。
- 如果玻璃螢幕碎裂，請勿使用、接觸或嘗試移除或修補玻璃。因妄用或正確使用而導致玻璃螢幕受損並不在保養範圍內。
- 您的手機是一部電子裝置，在正常操作期間，會產生熱力。在沒有足夠通風的環境下，長時間與皮膚直接接觸可能導致不適或輕度灼傷。因此，操作期間或操作之後處理手機時，請謹慎使用。

有效地操作手機

電子裝置

所有手機都可能因為受到干擾而影響效能。

- 請勿在未得到批准下在醫療儀器附近使用您的手機。避免將手機放置在心

臟起搏器附近，例如您胸口上的口袋。

- 一些助聽器可能會受手機干擾。
- 手機可能會輕微干擾電視、收音機、個人電腦等。

道路安全

檢查您駕駛時所在地區使用手機的法例及規則。

- 駕駛時切勿使用手持手機。
- 請專心一致駕駛。
- 請視乎駕駛情況，駛離馬路並停泊好汽車後才撥打或接聽電話。
- RF 能量可能會影響車內某些電子系統，例如車載立體聲音響及安全設備等。
- 如果您的汽車設有安全氣袋，切勿讓已安裝的無線設備或手提無線設備阻擋氣袋。這可能會導致氣袋

安全及有效使用準則

無法正常彈出，使其失去保護作用或造成嚴重人身傷害。

- 如果在外出時聆聽音樂，請確保將音量設定至合適水平，以便可以對周圍環境產生警覺。這在馬路旁邊時尤為必要。

避免損害您的聽覺

如果長時間以較大音量收聽，可能會對聽覺造成損害。所以我們建議開啓或關閉手機時，不要將它放於太近耳朵。我們亦建議將音樂及通話音量設定至合適水平。

- 使用耳機時，如果您未能聽見附近的人說話，或者坐在您身邊的人能聽見您正在聆聽的聲音，就應將聆聽音量調低。

注意：來自耳機的過度噪音和壓力可導致聽力損失。

玻璃部件

您的手機的部分部件以玻璃製造。如您的手機摔在堅硬的表面上或受猛烈撞擊，玻璃部件可能會破裂。如玻璃破裂，請勿接觸或嘗試移除碎片。請停止使用您的手機，直至授權的服務供應商為您更換玻璃部件。

爆破地區

請勿在進行爆破時使用手機。請嚴格遵守相關限制、規定或條例。

潛在爆炸環境

- 請勿在燃料補給點使用手機。
- 請勿在燃料或化學物質附近使用電腦。
- 請勿使用放置了手機及配件的汽車傳輸或放置易燃氣體、液體或爆炸物。

在飛機上

無線裝置可引致飛機干擾。

- 登機前，請先關掉手機。
- 未經地勤人員批准，請勿在陸上使用手機。

兒童

請將手機放在兒童接觸不到的安全地方。手機包含微細零件，如果拆開，可能造成哽咽危險。

緊急通話

緊急電話可能在某些流動網絡中不能發出。因此，您不應僅倚賴手機作為緊急通話的方式。請向您本地的服務供應商查詢。

電池資訊及保護

- 充電前，您無須完全放電。跟其他電池系統不同，它不會產生可降低電池效能的記憶效應。

- 請只使用 LG 電池及充電器。LG 充電器是為將電池壽命擴至最大而設。
- 請勿拆解電池組或造成電池組短路。
- 請保持電池組的金屬接點清潔。
- 當電池不再提供可接受的效能，請更換電池。電池組可重充數百次直至需要更換為止。
- 如果電池很久沒有使用，重新充電以擴展其用量。
- 請勿直接將充電器暴露於日光下或高濕度環境（如浴室）中。
- 請勿將電池置於過熱或過冷處，此類場合可能會損害電池效能。
- 若使用類型不當的電池，則有發生爆炸的危險。
- 請根據製造商的指示來處理廢棄電池。請盡量回收利用。請勿作為家庭廢棄物處理。

安全及有效使用準則

- 如果需要更換電池，請帶同手機前往最近的授權 LG 電子產品服務點或經銷商以尋求協助。
- 請謹記在手機完全充電後，從牆壁插座拔出充電器，避免充電器造成不必要的電力損耗。
- 電池的實際壽命將取決於網絡設定、產品設定、使用模式、電池及環境條件。

重要通知

在您將手機送往維修或致電服務人員前，請檢查您手機出現的問題有否在此部分描述。

1. 手機記憶體

當手機記憶體的可用空間少於 10%，您的手機便可能不能再接收新訊息。您需要檢查您的手機記憶體，並刪除一些數據如應用程式或訊息，以騰出更多可用記憶。

管理應用程式

- 1 從桌面點按**應用程式標籤**，然後選擇**設定 > 應用程式 > 管理應用程式**。
- 2 當所有應用程式出現後，捲動並選擇您想解除安裝的應用程式。
- 3 點按**解除安裝**然後點按**確定**，以解除安裝已選擇的應用程式。

2. 優化電池壽命

關閉無須持續在背景運行的功能，便能延長兩次充電之間的電池壽命。您可檢查應用程式及系統資源的電池電量消耗。

延長電池壽命

- 關閉不使用的無線電通訊。不使用 Wi-Fi、藍芽或 GPS 時，請關閉這些應用程式。
- 降低螢幕亮度，並設定較短的螢幕超時。
- 關閉 Gmail™、日曆、通訊錄及其他應用程式的自動同步。
- 您下載的某些應用程式可能會減少電池壽命。

檢查電池電量

- 1 從桌面點按**應用程式標籤**，然後選擇**設定 > 關於手機 > 狀態**。
- 2 電池狀態（充電中、未充電）及電池電量（已充電

重要通知

的百分比) 會在螢幕頂部顯示。

檢查及控制電池使用情況

- 1 從桌面點按應用程式標籤，選擇設定>關於手機>電池使用狀況。

- 2 顯示電池電力剩餘時間。會告知手機自上次連接到電源的時間，或如果已連接到電源，便會告知您的手機最後使用電池電力運作的時間。螢幕內容會列出使用電池電力的應用程式或服務，並根據耗用的電量由多至少排列。

3. 安裝開放源碼的作業系統

如果您並非使用製造商提供的作業系統，而是在手機安裝並使用開放源碼的作業系統，可能會導致您的手機出現故障。



警告：

如果您安裝及使用並非由製造商提供的作業系統，您的手機將不再受保養。



警告：

爲了保護您的手機和您的個人資料，請只從受信任的來源下載應用程式，例如 Android Market™。如果手機載有並非正確地安裝的應用程式，您的手機可能無法正常工作或出現嚴重錯誤。您必須從手機解除安裝該等應用程式及其所有的數據及設定。

4. 使用解鎖圖案

設定解鎖圖案以保護您的手機。從桌面點按應用程式標籤，然後選擇設定>位置及安全>設定螢幕鎖定>圖形。按畫面上的指示繪畫螢幕解鎖圖形。選擇繼續

前往下一個螢幕。開啓一系列畫面，以指導您繪畫螢幕解鎖圖案。

注意：先建立 Gmail 帳戶，才設定解鎖圖形。



警告：

使用圖案鎖定的注意事項。

請記住您所設定的解鎖圖案，這是非常重要的。如果錯誤輸入圖案的次數達到 5 次，您將無法存取您的手機。您有 5 次輸入解鎖圖案、PIN 或密碼的機會。如果您已使用全部 5 次機會，您可在 30 秒後再次嘗試。

當您記不起您的解鎖圖案：

如果您在手機已有您的 Google 帳戶登入記錄，但錯誤輸入解鎖圖案 5 次，請點按忘記解鎖圖案鈕。然後，您需要登入您的 Google 帳戶以解鎖您的手機。

如果您的手機尚未建立 Google 帳戶或忘記帳戶資料，您需要進行硬性重新設定。

注意：若進行硬性重新設定，所有用戶應用程式及用戶數據會被刪除。請記住先備份所有重要的數據，才進行硬性重新設定。

5. 使用硬性重新設定

如果無法回復本來的狀態，使用硬性重新設定將您的手機初始化。

關閉手機後，同時按住主頁鍵 + 音量降低控制鍵 + 電源鍵超過十秒。當螢幕顯示 LG 標誌，釋放電源鍵。

螢幕顯示硬性重新設定螢幕後，釋放其他按鍵。

手機進行硬性重新設定時等待至少一分鐘，您的手機將會開啓。

注意：若進行硬性重新設定，所有用戶應用程式及用戶數據會被

重要通知

刪除。這並不能還原。請記住先備份所有重要的數據，才進行硬性重新設定。

6. 連接至 Wi-Fi 網絡

要在您的手機上使用 Wi-Fi，請連接無線存取點，亦即「熱點」。一些存取點乃開放的存取點，您只需簡單連接便可。其他存取點乃隱藏或使用保安功能；在連接它們前必須先設定您的手機。

要延長電池壽命，請在不使用 Wi-Fi 時將其關閉。

開啓 Wi-Fi 並連接至 Wi-Fi 網絡

1 從桌面點按應用程式標籤，並選擇設定 > 無線及網絡 > Wi-Fi 設定。

2 點按開啓 Wi-Fi，手機便會開始掃描可使用的 Wi-Fi 網絡。

- 可使用的 Wi-Fi 網絡會以清單顯示。已加密的網絡旁邊會有一個鎖形圖示。

3 點按一個網絡以開始連接。

- 如該網絡為開放，手機會提示您點按**連接**，以確認您希望連接至該網絡。
- 如該網絡已加密，手機會提示您輸入密碼或其他憑證。（請向您的網絡管理員查詢詳情）

4 狀態列上的圖示會顯示 Wi-Fi 狀態。

7. 使用 microSD 卡

圖片、音樂及影片只能儲存到外置記憶體。

在使用內置相機前，您需要先將 microSD 記憶卡插入手機。

在沒有插入記憶卡的情況下，無法拍攝相片及影片。



警告：

手機開啓時，請勿插入或移除記憶卡。這樣做可能會損壞您的記憶卡及手機，而記憶卡內儲存的數據亦可能毀損。要安全地移除記憶卡，從桌面點按**應用程式標籤**，然後選擇**設定 > SD 卡及手機儲存 > 移除 SD 卡**。

8. 開啓及切換應用程式

在 Android 能夠輕鬆使用多重任務，因為您可同時運行兩個或以上的應用程式。您無須在開啓另一應用程式前退出應用程式。使用及切換數個開啓中的應用程式。Android 會管理每一個應用程式，根據需要停止及啓動程式，確保閒置的應用程式不會耗用不必要的資源。

停止應用程式

- 1 從桌面點按**應用程式標籤**，然後選擇**設定 > 應用程式 > 管理應用程式**。
- 2 捲動至該應用程式，點按**強制停止**以停止使用。

提示 按住主頁鍵以返回最近的應用程式。螢幕將顯示您最近使用的應用程式清單。

重要通知

9. 安裝 LG PC suite至您的電腦

要以 USB線同步數據至您的電腦，您需在電腦上安裝 LG PC suite程式。

您可於 LG 網站下載此程式。 瀏覽至 <http://www.lg.com> 網站以獲取您的手機安裝程式和使用資訊。您可參考往下圖示和依據網站指示以下載適合您手機型號的軟件並完成安裝。

LG PC Suite IV 的主要功能

- 輕鬆建立、編輯和刪除手機資料
- 從電腦和手機同步數據（通訊錄、日曆、訊息（文字訊息）、書簽、通話記錄）
- 只需在電腦和手機之間拖放便可輕鬆傳輸多媒體檔案（相片、影片、音樂）
- 將手機的文字訊息傳輸至電腦


- 在不會損失數據的情況下更新軟件

下載 LG 手機支援軟件

1) 登入 www.lg.com , 到支援➡手機支援



2) 下載及安裝LG 手機支援軟件

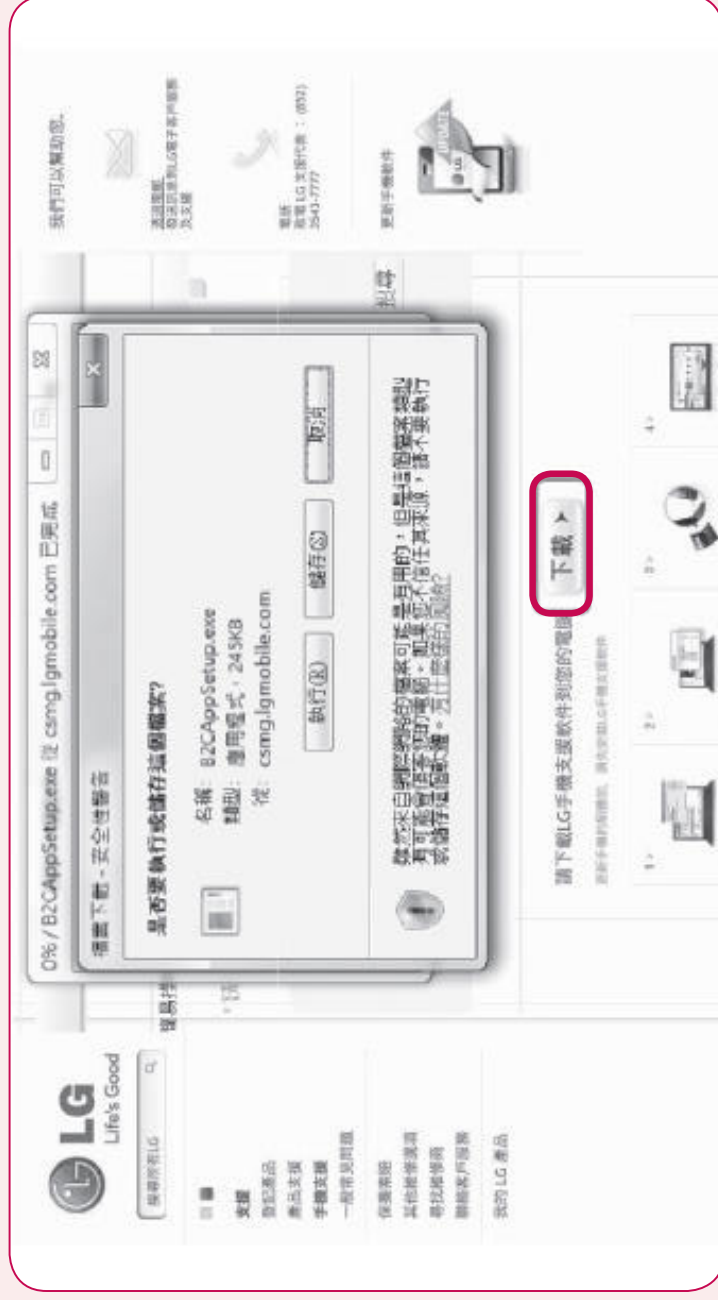

重要通知

3) 在下載相關手機支援軟件後並執行以完成下載所購買手機型號的 LG PCSuite IV 檔案並按照指示完成安裝。

* 在完成 LG PCSuite IV 安裝後，請確保大容量儲存設定在停用模式，以執行 LGPCSuite IV。

10. 使用 USB 連接手機至電腦

LG-P690 不支援：

- LG Air Sync (Web Sync, R-Click)
- OSP (On Screen Phone)
- 日曆中的待辦事項
- 備忘錄
- Java 應用程式

安裝 PC Suite IV 後，您可在說明功能表找到使用手冊。

- 1 使用手機隨附的 USB 線，將手機連接至電腦的 USB 連接埠。連接後，您將會收到已進行 USB 連接的通知。
- 2 開啓通告欄，點按 USB 已連接。
- 3 點按「開啓 USB 儲存裝置」以確認您要在手機的 microSD 卡與電腦之間傳送檔案。

當手機作為 USB 儲存裝置連接，您將會收到通知。手機的 microSD 卡會作為磁碟安裝至您的電腦上。您現在便可將檔案複製至 microSD 卡。

注意：卸載 PC Suite IV、USB 及藍芽後，不會自動移除驅動程式。您必須手動解除安裝。

提示 要重新在手機上使用 microSD 卡，您需要開啓通告欄並點按**關閉 USB 儲存裝置**。

期間您無法在手機上存取 microSD 卡，因此您亦無法使用依賴 microSD 卡的應用程式，例如相機、媒體匣及音樂。

要令手機從電腦中斷連接，請小心地按照電腦的說明正確地中斷連接 USB 裝置，以免記憶卡上的資料流失。

- 1 開啓通告欄，點按**關閉 USB 儲存裝置**。
- 2 安全地從電腦中斷 USB 裝置連接。

重要通知

11. 使用數據連接時解鎖螢幕

如在數據連接期間長時間不點按螢幕，您的螢幕會關掉。要重新開啓 LCD 螢幕，點按解鎖即可。

12. 垂直握住手機

請如普通電話一樣，垂直握住手機。LG-P690 擁有內置天線。小心不要刮花或損壞手機背部，這會令手機功能受損。

撥打 / 接聽電話或傳送 / 接收數據時，避免握住天線所在的手机下部分。這樣做可能影響通話品質。

13. 螢幕凍結時

如果螢幕凍結或當您嘗試操作手機時沒有回應：

取出電池，重新插入，然後開啓手機。如果問題仍然存在，請聯絡服務中心。

14. 在開啓/關閉您的電腦時，請勿連接您的手機。

確保中斷連接手機與電腦之間的數據線；保持連接可能令電腦產生錯誤。

了解您的手機

要開啓手機，請長按電源鍵。

要關閉手機，請長按電源鍵，然後點按**關機**及**確定**。

聽筒

感應器

電源/鎖定鍵

長按此鍵以開啓 / 關閉手機電源。
關閉以鎖定畫面。

主頁鍵

由任何畫面回到主頁。

功能表鍵


查看可使用的選項。

返回鍵

返回前一畫面。

搜尋鍵

搜尋網頁以及您手機中的內容。

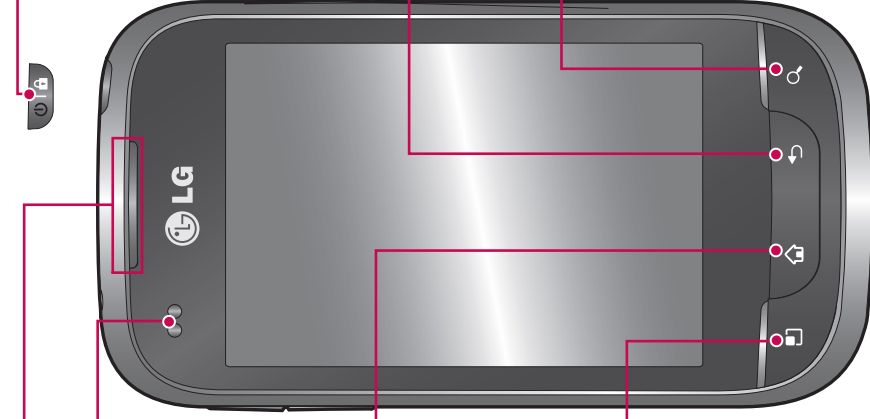

注意：感應器


當接收或撥出通話時，感應器會感應手機接近您的耳朵，並自動關閉畫面背光照明及鎖上觸控鍵盤。此功能有助延長電池壽命，並防止於通話期間無意地啓動觸控鍵盤。

警告：

若將較重物體置於手機上，或坐在手機上會損壞 LCD 和觸控螢幕功能。請勿將保護貼覆蓋 LCD 的感應器。這可能會導致感應器出現故障。

了解您的手機


音量鍵

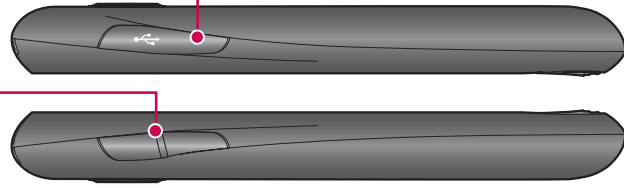

在桌面上：控制鈴聲音量。


- 通話中：控制聽筒音量。
- 播放曲目時：控制媒體音量。

充電器、USB 線 插孔

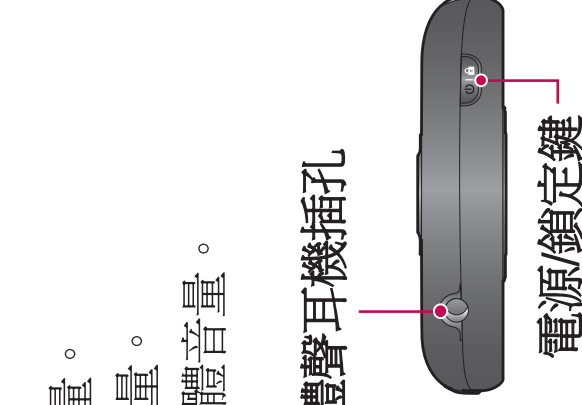

立體聲耳機插孔

電源/鎖定鍵

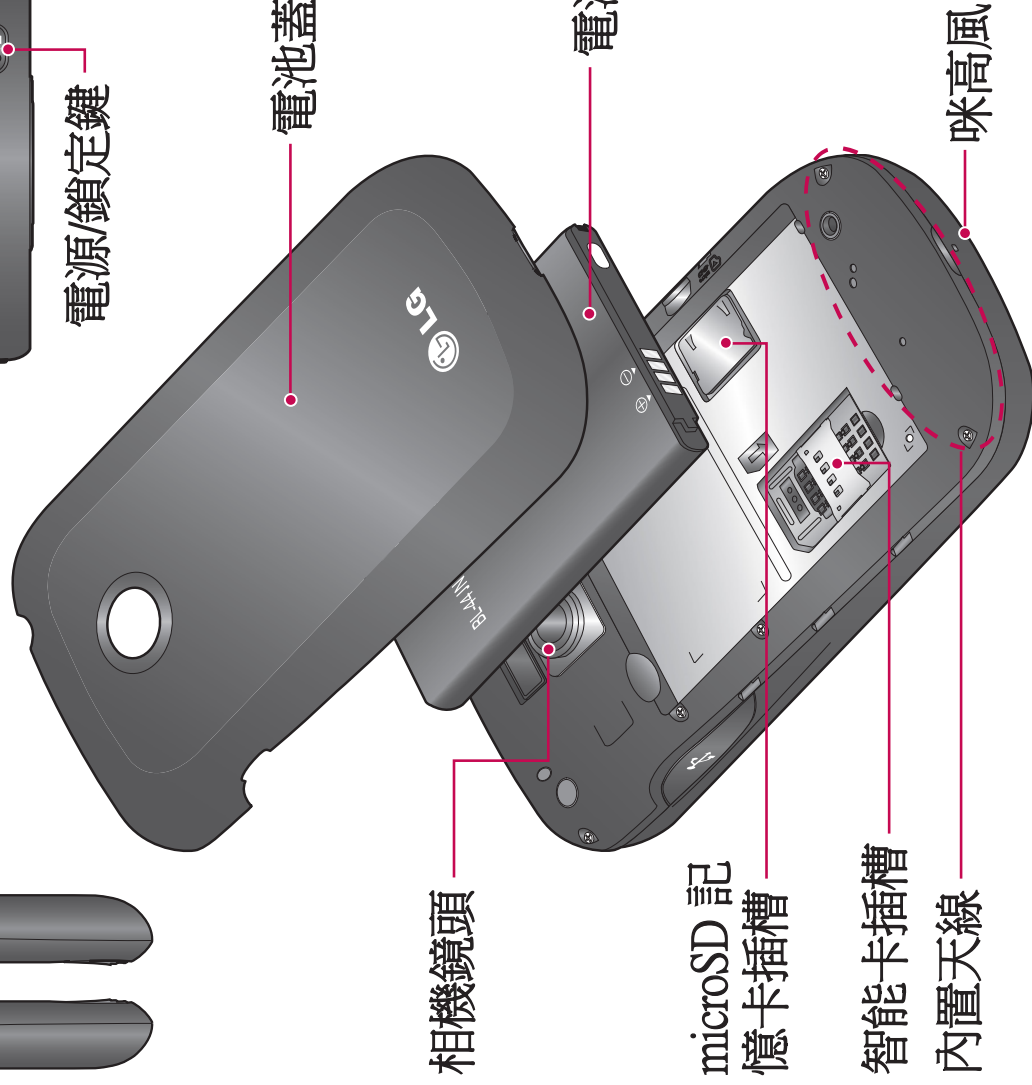

相機鏡頭

電池蓋

電池

microSD 記 憶卡插槽


智能卡插槽

內置天線


咪高風

安裝智能卡 (SIM 卡) 及電池

- 1 要取下電池蓋，請用手握住手機。用另一隻手的拇指按壓電池蓋。然後揭開電池蓋。

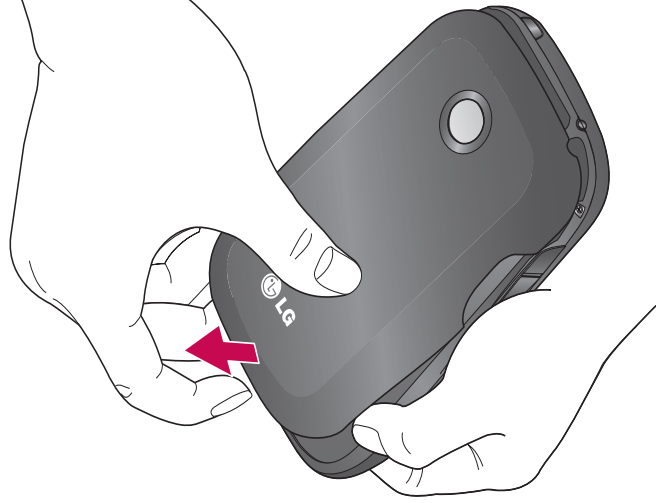

- 2 將智能卡滑入智能卡插槽。確保智能卡的金屬接觸面朝下。

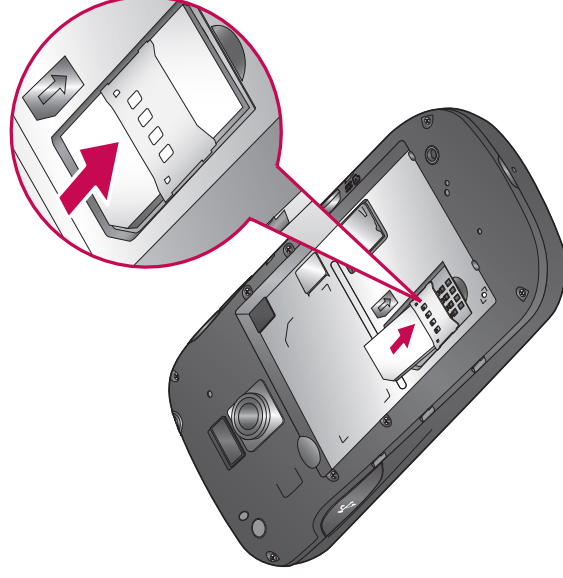

- 3 對準手機及電池的金屬接觸面插入電池。



- 4 重新蓋上電池蓋。

了解您的手機



為手機充電

打開側邊的充電器連接器蓋。插入充電器，然後將其連接至電源插座。您必須繼續為 LG-P690 充電，直至您看見 。




注意：第一次充電時必須將電池完全充電，以提高電池壽命。

安裝記憶卡


要儲存多媒體檔案（例如使用內置相機拍攝的圖像），您必須安裝記憶卡至您的手機。

要安裝記憶卡：

1 取下電池蓋。

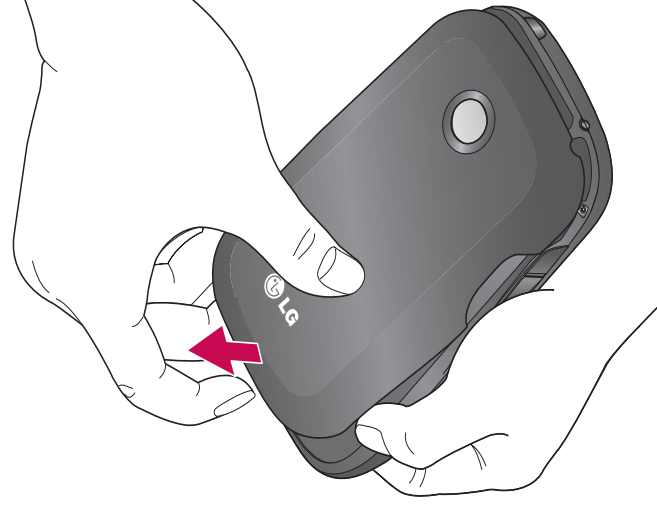

2 將記憶卡插入插槽中，並確保金屬接觸面朝下。

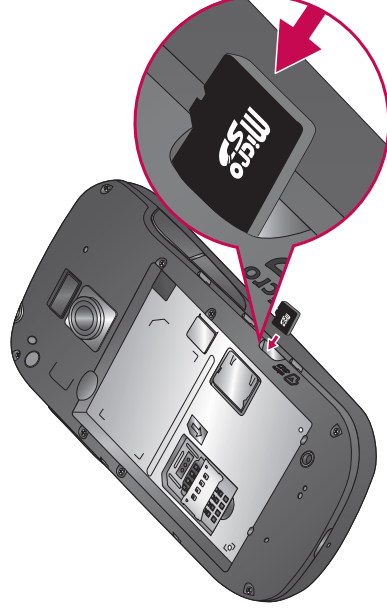

警告：

手機開啓時，請勿插入或移除記憶卡。這樣做可能會損壞您的記憶卡及手機，而記憶卡內儲存的數據亦可能毀損。

了解您的手機

格式化記憶卡

您的記憶卡可能已格式化。如尚未格式化，您必須在使用前將其格式化。

注意：格式化記憶卡時，卡內所有檔案會被刪除。

- 1** 從桌面**點按應用程式標籤**，以開啓應用程式功能表。
- 2** 捲動並**點按設定 > SD 卡及手機儲存**。
- 3** **點按移除 SD 卡**。
- 4** **點按清除 SD 卡**，並確認您的選項。
- 5** 如您已設定圖形鎖定，輸入圖形鎖定然後**選擇清除全部清除**。記憶卡將被格式化並且可使用。

注意：如您的記憶卡包含其他內容，記憶卡格式化後的資料夾結構可能會改變，因為所有舊檔案經已刪除。

您的桌面

觸控螢幕提示

以下是一些小秘訣，讓您輕鬆使用觸控螢幕操作手機。

點按 - 要選擇功能表選項或開啓應用程式，只需點按即可。

點按並按住 - 要開啓選項功能表或抓住要移動的物件，點按並按住該選項。

捲動 - 要捲動清單或緩慢移動，用手指在觸控螢幕上拖動就可。

翻閱 - 要捲動清單或快速移動，用手指掃過螢幕（快速拖動並放手）。

附註：

- 要選擇某個項目，請觸控圖示中心。
- 請勿過份用力按壓；只需輕力但確切地點按，觸控螢幕已能感應。

- 使用手指指尖點按您需要的選項。請注意不要碰到其他按鍵。

鎖定您的手機

當您不使用 LG-P690 時，請輕按電源鍵鎖定您的手機。這有助於防止意外按鍵，並可節省電池電力。

另外，如果您有一段時間不使用手機，桌面或其他您正在瀏覽的畫面會被鎖定螢幕取代，以節省電池電量。

如果您在設定圖形時正在執行任何應用程式，則這些應用程式可能仍在鎖定模式中執行。建議先結束所有程式，再進入鎖定模式，避免造成不必要的收費（例如通話、存取網絡及數據通訊）。

設定解鎖圖形：您可以將點連接起來，以繪畫您專屬的解鎖圖形。如果您設定圖

您的桌面

案，手機螢幕便會鎖定。

要解除鎖定手機，請在螢幕上繪畫您所設定的圖形。

注意：在設了解鎖圖形時，您必須先建立您的 Gmail 帳戶。

注意：如果連續有 5 個以上的圖案繪畫錯誤，則無法解除鎖定手機。在此情況下，您的個人資料及下載的數據將被刪除。

解鎖螢幕

不使用 LG-P690 手機時，系統會返回鎖定螢幕。將手指從底至頂拖動便可解鎖螢幕。



靜音模式

從通告欄中點按  改爲 .

主頁

只需將手指左右滑動便可檢視控制面板。您可使用小工具、捷徑（至您喜愛的應用程式式）、資料夾和牆紙，自訂每個控制面板。

注意：視乎您的手機供應商而定，某些螢幕圖像可能有差異。

在桌面上，您可檢視螢幕下方的快速按鍵。快速按鍵提供簡易的存取方法，讓您一按即能使用您最常用的功能。

 點按**手機圖示**開啓觸控撥號鍵盤，撥打電話。

 點按**通訊錄**以開啓您的通訊錄。

 點按**訊息圖示**，進入訊息功能表。在此您可以建立新訊息。

 點按**螢幕底下的應用程式標籤**。您便可檢視您安裝的全部應用程式。

如要啓動應用程式，點按應用程式表上的圖示即可。

注意：預載應用程式可能會因應您手機的軟件及您的服務供應商而有所不同。

在您的桌面上新增小工具

您可新增捷徑、小工具或資料夾，以自訂您的桌面。將您喜愛的小工具新增至桌面上，您便可更方便地使用您的手機。

- 1 從桌面點按**功能表**鍵並選擇**新增**。或點按並按住桌面的空白部分。
- 2 在**編輯模式**功能表上，點按您要新增的項目。
- 3 例如，在清單中選擇**資料夾**並點按。
- 4 您會在桌面上看到一個新的資料夾圖示。將其拖動至所需控制面板上的所需位置，然後鬆開手指。

提示 要從**應用程式功能表**新增應用程式圖示至桌面，點按並按住您要新增的應用程式。

提示 要從桌面移除應用程式圖示，點按並按住您要移除的圖示，然後將其拖動至.

注意：您無法刪除預載應用程式。（只能從螢幕上刪除其圖示）



返回最近使用的應用程式

- 1 點按並按住**主頁**鍵。螢幕顯示彈出視窗，當中載有您最近使用的應用程式。
- 2 點按圖示以開啓應用程式，或者按**返回**鍵回到使用中的應用程式。

您的桌面

通告欄

通告欄顯示於螢幕的頂部。

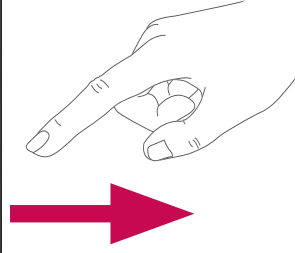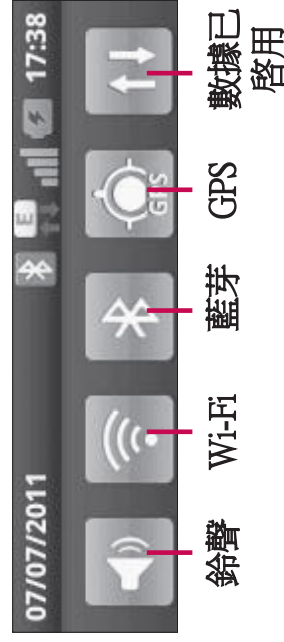

您可點按並向下滑動通告欄。

或者，您可在桌面點按功能表鍵，並選擇**通知**。您可在此檢查及管理聲音、Wi-Fi、藍芽和 GPS 狀態，以及其他通知。

檢視狀態列

狀態列使用不同圖示顯示手機資訊，例如訊號強度、新訊息、電池壽命及啓動中的藍芽及數據連接。

下表解釋了狀態列中可能出現的圖示的含義。



[狀態列]

圖示	說明
	沒有智能卡
	無訊號
	飛航模式
	已連接至 Wi-Fi 網絡
	有線耳機
	正在通話
	通話保留
	揚聲器開啓

圖示	說明
	電話話筒已靜音
	未接來電
	藍芽開啓
	已連接至一個藍芽裝置
	系統警告
	鬧鐘已設定
	新留言訊息
	鈴聲靜音
	震動模式
	電池已完全充電
	電池充電中
	數據輸入及輸出
	手機已通過 USB 線連接至電腦
	數據下載

圖示	說明
	數據上傳
	正在取得 GPS
	從 GPS 接收位置數據
	螢幕電話已連接
	還有 3 個通知未顯示
	正在同步數據
	下載完成
	新 Gmail
	新語音訊息
	新訊息
	正在播放歌曲
	待辦事項

您的桌面

圖示	說明
	FM 收音機已在背景啓動
	SmartShare 開啓
	SmartShare 共享要求
	USB 共享網絡已啓動
	可攜式 Wi-Fi 熱點已啓動
	USB 共享網絡及可攜式 Wi-Fi 熱點已啓動

螢幕鍵盤

您也可以使用螢幕鍵盤輸入文字。當您需要輸入文字時，螢幕鍵盤會自動顯示在螢幕上。要手動顯示鍵盤，只需點按您要輸入文字的文字欄位即可。

使用鍵盤輸入文字

 點按一下以大寫您輸入的下一個字母。點按兩下即可大寫所有字母。

  點按切換至數字符號鍵盤。您亦可以點按並按住這個標籤以瀏覽設定功能表。

 點按以檢視或按住以變更寫入語言。

 點按以輸入一個空格。

 點按以在訊息欄新建一行。

 點按以刪除前一字母。

 點按以隱藏螢幕鍵盤。

輸入重音字母

當您選擇法文或西班牙文作為文字輸入語言，您可輸入特殊的法文或西班牙文字元（例如：「á」）。

例如，要輸入「á」，點按並按住「a」鍵直至放大鍵放大並顯示其他語言的字元。然後選擇所需的特殊字元。

Google 帳戶設定

當您第一次在手機上開啓 Google 應用程式，您需要使用您現有的 Google 帳戶登入。如您沒有 Google 帳戶，手機會提示您建立帳戶。

建立您的 Google 帳戶

- 1 在主頁點按應用程式標籤 ，以開啓應用程式功能表。
- 2 點按 **Gmail**，然後點按 **Next (下一步) > Create (建立)** 以開始 Gmail™ 設定精靈。
- 3 爲您的 Google 帳戶輸入您的名稱和使用者名稱。
- 4 點按 **Next (下一步)**。您的手機正在連接 Google 的伺服器，檢查使用者名稱是否可用。
- 5 輸入並重新輸入密碼。按照指示，輸入與帳戶有關的必填及可填資訊。

請等待伺服器建立您的帳戶。

登入您的 Google 帳戶

- 1 輸入您的電子郵件地址及密碼，然後點按 **Sign in**。請等候系統爲您登入。
- 2 登入後，您可使用 Gmail™ 並在手機上使用 Google 服務。
- 3 只要您已在手機上設定 Google 帳戶，您的手機便會自動與您的 Google 帳戶在互聯網上同步。（視乎您的同步設定而定）登入後，您可在手機上使用其他 Google 服務。

重要資訊！

- 某些應用程式，例如日曆，只能適用於您新增的首個 Google 帳戶。如果您打算在手機上使用多個 Google 帳戶，確保首先登入您希望使用日曆等

應用程式的帳戶。當您登入時，您在網上的通訊錄、Gmail 訊息、日曆活動及這些應用程式和服務中的其他資訊將與您的手機同步。如果您在設置時沒有登入一個 Google 帳戶，則在您首次啟動一個需要 Google 帳戶的應用程式（例如 Gmail 和 Android Market™）時，需要登入或建立一個 Google 帳戶。

- 如果您擁有一個您的公司或其他組織的企業帳戶，您的 IT 部會對如何登入這種帳戶給予特別指示。

通話功能

撥打電話

- 1 點按  開啓按鈕。
- 2 使用鍵盤輸入號碼 要刪除一個數字，點按清除圖示 .
- 3 點按通話圖示  撥打電話。
- 4 要結束通話，點按結束圖示 .

提示 若要在撥打國際電話時輸入「+」，請點按並按住 **0+**。

從通訊錄中撥打電話

- 1 點按  可開啓通訊錄。
- 2 捲動聯絡人清單，或點按 **搜尋** 以輸入您想致電的聯絡人名稱的第一個字母。
- 3 在清單內點按您想致電的聯絡人。

接聽來電和拒接來電

手機響鈴後，將**接聽**圖示  向右拖動。

將**拒絕**圖示  向左拖動以拒接來電。

如果您要傳送道歉訊息，請從底部拖動**歉意**訊息列。

調整通話音量

要在通話時調整通話音量，按手機左側的向上及向下音量鍵。

通話期間撥打第二個電話

- 1 進行原來通話時，點按功能表並選擇 .
- 2 撥打電話號碼或搜尋聯絡人。
- 3 點按**通話**圖示  以開始撥號。
- 4 兩個通話均會在通話螢幕中顯示。 您的原來通話會被鎖定及保留。

- 5 點按顯示的號碼，在通話之間切換。或點按  **合併通話**開始會議通話。
- 6 要結束當前使用中的通話，點按**結束**或按**主頁鍵**並將通知欄向下滑動再選擇**結束通話**。

注意：您撥打的每一個通話均需收費。

檢視通話記錄

在桌面點按 ，然後選擇**通話記錄**標籤。

您可檢視所有已撥、已接及未接話音通話的完整清單。

提示 點按任何通話記錄

項目，檢視通話的日期、時間和持續時間。

提示 點按**功能表**鍵，然

後點按**刪除全部**，刪除所有記錄項目。

通話設定

您可設置手機的通話設定，例如來電轉接及服務供應商提供的特別功能。

- 1 在主頁點按**應用程式標籤**，以開啓應用程式功能表。
- 2 捲動並點按**設定**。
- 3 點按**通話設定**，選擇您要調整的選項。

通訊錄

您可在手機上新增通訊錄，並與您的 Google 帳戶或其他帳戶（須支援同步通訊錄）內的通訊錄同步。

搜尋聯絡人

在桌面

- 1 點按  可開啟通訊錄。
- 2 點按**搜尋**，使用鍵盤輸入該聯絡人姓名。

新增聯絡人

- 1 點按 ，輸入新聯絡人的號碼，然後按**功能表**鍵。 點按**新增通訊錄**，然後**建立新通訊錄**。
- 2 如您希望為新聯絡人新增相片，點按 。 從**拍攝照片或從相簿挑選**。
- 3 點按  選擇通訊錄類型。
- 4 點按一個聯絡資訊類別，然後輸入聯絡人的詳情。
- 5 點按**儲存**。

常用的聯絡人

您可將常用的聯絡人分類為您的最愛。

新增聯絡人至您的最愛

- 1 點按  可開啟通訊錄。
- 2 點按一個聯絡人以檢視詳情。
- 3 點按聯絡人名稱右上方的星星。 星號會轉為黃色。

從最愛清單移除聯絡人

- 1 點按  可開啟通訊錄。
- 2 點按**群組標籤**，在清單上選擇最上方的**最愛**，然後選擇一個聯絡人以檢視詳情。
- 3 點按聯絡人名稱右方的金色星號。 星號會轉為灰色，表示該聯絡人已從您的最愛清單中移除。

訊息/電子郵件

訊息

LG-P690 將文字訊息和多媒體訊息結合在一個的功能表中。

發送訊息

1 點按  圖示，然後點按新訊息。

2 在收件者一欄中輸入聯絡人的名稱或撥打號碼。當您輸入該聯絡人名稱時，會顯示匹配的聯絡人。點按一個建議的收件者。您可以新增多個聯絡人。

注意：如訊息有多個收件者，您需要為每一位收件者分別繳付文字訊息費用。

3 點按輸入訊息開始輸入訊息內容。

提示 點按功能表鍵以開啓選項功能表。從通話、新增主旨、捨棄、附加和插入表情符號, 所有訊息中選擇。

提示 您可點按  圖示，在訊息中加入附件。

4 點按發送以發送訊息。

5 螢幕會顯示回覆。當您檢視及發送更多訊息，便會建立一個訊息對話。

警告：

 160 個字元的限制可能會依國家/地區而有所不同，取決於語言及文字訊息的編碼方式。

警告：

 如您新增圖像、影片或聲音檔案至一個文字訊息，它會自動轉換為多媒體訊息，而您亦會被收取相應費用。

注意：當您在通話時收到文字訊息，將會收到通知。

訊息/電子郵件

更改訊息設定

LG-P690 已為您預先定義訊息設定，讓您可立即發送訊息。您可按喜好更改這些設定。

點按桌面上的**訊息**圖示，然後按**功能表**鍵，再點按**設定**。

設定您的電子郵件

點按**應用程式**標籤，然後選擇**電子郵件**。如果尚未設定電子郵件帳戶，請開始電子郵件設定精靈。

提示 如已設定電子郵件帳戶，則不會啓動精靈。

您可從 **Microsoft Exchange** 及其他選擇信箱類型。

Microsoft Exchange 電子郵件帳戶

電郵地址 - 輸入電子郵件地址。

密碼 - 輸入電郵帳號密碼。

網域\使用者名稱 - 輸入網域和使用者名稱。

伺服器 - 輸入伺服器位址。

使用安全連線 (SSL) - 選擇 **Microsoft Exchange** 是否使用 SSL。

接受所有安全資料傳輸層 (SSL) 憑證 - 選擇是否以接受所有 SSL 憑證。

點按**下一步**按鈕以連接至伺服器。

設定完成螢幕會出現，您需要為帳戶輸入「名稱」及您的名稱。

帳戶現在會顯示在帳戶清單中。

其他 (POP3, IMAP) 電郵帳戶

電郵地址 - 輸入電子郵件地址。

密碼 - 輸入帳號密碼。

下一步選擇電郵帳號類型

- POP3, IMAP, Exchange (設定會因應不同帳號類型有所不同)

內送伺服器 - 輸入內送電郵伺服器的地址。

連接埠 - 顯示每個帳號的預設連接埠。

安全性類型 - 從選項中選擇 SSL、TLS 及無的選項。

外送伺服器 - 輸入外送電郵伺服器的地址。

連接埠 - 顯示每個帳戶的預設號碼。

安全性類型 - 從 TLS、SSL 及 關閉中選擇。

帳號螢幕

帳號 螢幕列出您的聯合收件匣及您的每個電子郵件帳戶。

點按**應用程式標籤**，然後選擇**電子郵件**。螢幕顯示**帳號清單**。

您可點按某一個帳戶以檢視其**收件匣**。預設情況下，您發出電子郵件的帳戶以勾選標記表示。

訊息/電子郵件

編寫及發送電子郵件

要編寫及發送訊息：

- 1 在電子郵件應用程式，按功能表鍵，然後按編寫。**
- 2 輸入訊息收件者的地址。**當您輸入文字時，會從您的聯絡人清單顯示匹配的地址 以逗號分隔多個地址。
- 3 按功能表鍵選擇新增副本/密件副本，以抄寫或密件抄寫發送復制本至其他聯絡人/電郵地址。**
- 4 輸入訊息內容的文字。**
- 5 點按新增附件**可在訊息中插入附件。
- 6 點按發送。**如果您未準備好發送訊息，按功能表鍵並按儲存為草稿，可把訊息儲存到草稿資料夾。點按草稿資料夾內的草稿訊息，繼續編寫訊息。如您發送前點按返回鍵 ，您的訊息也會

儲存為草稿。點按捨棄以放棄並刪除訊息，包括已儲存的草稿。如您沒有連接至網絡，例如正處於飛航模式，您發送的訊息會儲存在**寄件匣**資料夾內，直至您連接至網絡。如載有任何有待處理的訊息，會於**帳號**螢幕顯示**寄件匣**。

請注意，使用 Exchange 帳戶發送的訊息並非位於手機內，而是位於 Exchange 伺服器內。

如您想檢視**寄件備份**資料夾內您所發送的訊息（或帶有**寄件備份**標籤的訊息），您便需要時常開啓**寄件備份**資料夾 / 標籤，並從選項功能表中選擇**重新整理**。

提示 當收件匣收到新電子郵件，您會收到聲音或震動通知。點按電子郵件通知以結束相關通知。

處理帳戶資料夾

每個帳戶設有收件匣、寄件匣、寄件備份及草稿資料夾。您可能會有更多資料夾，視乎您的帳戶服務供應商所支援的特色而定。

新增及編輯電子郵件帳戶

要新增電子郵件

- 1 點按應用程式標籤，然後選擇電子郵件。
- 2 選擇 Microsoft Exchange 或其他。
- 3 輸入新增帳戶的資訊。
(請參閱「設定您的電子郵件」。)
- 4 輸入該帳戶的名稱，設定發出郵件內您想顯示的名稱，然後點按完成。

要變更帳戶設定

- 1 開啓帳號畫面。
- 2 點按並按住您想變更的帳戶。在開啓的功能表內，點按帳號設定。

要刪除電子郵件

- 1 開啓帳號畫面。
- 2 點按並按住您想刪除的帳戶。
- 3 在開啓的功能表點按**移除帳號**，然後在對話方塊中點按OK以確認。

相機

了解取景器

亮度 - 決定及控制進入圖像的光線量。沿著亮度計滑動指標，向「-」方向可降低圖像亮度，向「+」則可提升亮度。

縮放 - 放大或縮小。或者，您可使用側音量鍵。



影片模式 - 向下滑動此圖示可切換到影片模式。

拍攝相片

媒體匣 - 點按就可觀賞您最後拍下的相片。這容許您從相機模式存取媒體匣並觀看已保存的相片。

設定 - 點按此圖示，開啓設定功能表。請參閱「使用進階設定」。

圖像大小 - 點按以設定所拍攝相片的大小（像素）。

場景模式 - 選擇自動、人像、風景、運動、夜間及黃昏。

提示 關閉所有捷徑選項，可獲取更清晰的取景螢幕。點按一下取景器的正中心。要顯示選項，請再次點按螢幕。

快速拍照

- 1 開啓**相機**應用程式。
- 2 橫向握住手機，將鏡頭對準拍攝的對象。
- 3 在取景器螢幕的中央，對焦方塊會於嘗試對焦對象時開始閃爍。
- 4 完成對焦對象後，對焦方塊變成綠色。
- 5 按下拍攝按鈕。不論對焦方塊是否為綠色，您也可以按下拍攝按鈕。
- 6 按下拍攝  按鈕。

拍攝相片後

拍攝的相片將顯示在螢幕上。

分享

點按以使用 SmartShare、Gmail、Picasa、Social+、訊息、電子郵件或藍芽分享相片。

注意：如在漫遊期間下載多媒體訊息，則可能需額外收費。

提示 如您擁有 SNS 應用程式帳戶並已在手機中設定，您可將相片分享至 SNS 社區。

設為

點按可將圖像設為**通訊錄圖示**或**牆紙**。

重新命名

點按以編輯所選擇相片的名稱。



點按以刪除圖像。



點按以立即拍攝新相片。當前的相片將會被儲存。



點按以檢視已儲存的相片集。

使用進階設定

在取景器內點按  以開啓所有進階選項。

捲動清單以變更相機設定。選擇選項後，請點按**返回**鍵。

ISO - ISO 等級決定相機感光器的敏感度。ISO 愈高，

相機

鏡頭對光線的敏感度愈高。

當您在光線較暗環境下拍照且無法使用補光燈時，此功能非常有用。您可選擇的 ISO 值為**自動**、**400**、**200**及**100**。

白平衡 - 選擇**自動**、**白熱光**、**陽光**、**日光燈**及**陰天**。

色彩效果 - 為新相片選擇色調。

計時器 - 自拍時計讓您設定按拍攝按鈕後的延遲時間。您可選擇**關閉**、**3 秒**、**5 秒**或**10 秒**。此功能最適合自拍時使用。

圖片品質 - 選擇最細緻、**細緻**及**標準**。質素愈細緻，相片便愈清晰。然而，相片的大小亦會隨之增加，表示您可儲存在記憶體內的相片數量會減少。

自動檢視 - 如您將**自動檢視**設定為開啓，便會自動顯示您剛拍攝的相片。

快門音 - 有四種快門聲音可供選擇。

標籤位置 - 啓動以使用手機的定位服務。您可隨時隨地拍攝相片，並標籤相片拍攝的位置。如您將已標籤的相片上載至支援地理位置標記的網誌，您的相片便會在地圖上顯示。

注意：本功能在 GPS 啓動時才能使用。

 - 還原所有相機預設設定。

 - 如您想知道此功能如何操作，點按便可。此會向您提供快速指南。

提示 當您結束相機後，某些設定將返回預設，例如白平衡、色彩效果、計時器及場景模式。拍攝下一張相片前，請先檢查這些設定。

提示 設定功能表乃疊於取景器上，因此當您更改圖像顏色或品質的設定，您會在設定功能表背後看見預覽圖像的更改。

向左旋轉。
向右旋轉。

檢視已儲存的相片

在相機模式中存取已儲存的相片。只需點按右下角 ，然後點按螢幕。您會看到**投影播放及功能表**。

提示 左右滑動以檢視其他相片或影片。



- 點按以觀看投影播放。



- 點按以分享內容或刪除相片。點按**更多**以檢視更多選項。

詳細資料 - 檢查內容的資訊。

設為 - 設為通訊錄圖示或牆紙。


修剪 - 裁剪您的相片。在螢幕上移動手指以選擇修改區域。

視像攝錄機

瞭解取景器

亮度 - 決定及控制進入影片的光線量。沿著亮度計滑動指標，向「-」方向可降低圖像亮度，向「+」則可提升亮度。

縮放 - 放大或縮小。或者，您可使用側音量鍵。

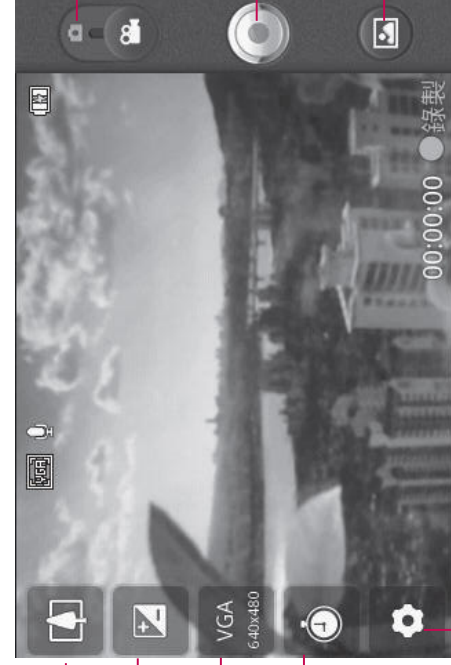

相機模式 - 將此圖示向上滑動，以切換至相機模式。

開始錄製

媒體匣 - 點按以觀看您最後錄製的影片。這容許您從視像攝錄機模式存取媒體匣並觀看已保存的影片。

設定 - 點按此圖示，開啓設定功能表。請參閱「使用進階設定」。

持續時間 - 設定影片的最長錄製持續時間。您可選擇標準或多媒體訊息限制大小上限，以透過多媒體訊息發送影片。

影片大小 - 點按以設定所錄製影片的大小（像素）。

拍攝快速影片

- 1 將相機模式按鍵向下滑動，而圖示將會變更為.
- 2 視像攝錄機的取景器會在螢幕上顯示。
- 3 水平握住手機，將鏡頭對準拍攝影片的對象。
- 4 按錄製按鍵一下以開始錄影。
- 5 錄製將顯示於取景器底部，同時計時器會顯示影片錄製的長度。
- 6 點按螢幕上的以停止攝錄。

拍攝影片後

代表該影片的靜止圖像會在螢幕上出現。

播放

點按以播放影片。

分享

點按以使用

SmartShare、Gmail、YouTube、訊息、電子郵件或藍芽 分享影片。

注意：如在漫遊期間下載多媒體訊息，則可能需額外收費。

重新命名

點按以編輯所選擇影片的名稱。

-  點按以刪除剛錄製的影片。點按**確定**以確認。取景器將再次出現。
-  點按以立即拍攝新影片。當前的影片將會被儲存。
-  點按以檢視已儲存影片的媒體匣。

使用進階設定

使用取景器，點按以開啓所有進階選項。捲動清單以調整視像攝錄機設定。選擇選項後，請點按返回鍵。

白平衡 - 白平衡確保您影片內的任何白色區域均為真實顏色。要使您的相機正確調整白平衡，您可能需要指定光線環境。您可選擇**自動**、**白熱光**、**陽光**、**日光**、**燈**或**陰天**。

視像攝錄機

色彩效果 - 為影片選擇新色調。

影片品質 - 選擇最細緻、細緻及標準。

聲音 - 選擇靜音以錄製無聲影片。

自動檢視 - 自動檢視將會自動顯示您剛錄製的影片。

 - 還原所有影片的相機預設設定。

 - 如您想知道此功能如何操作，點按便可。此會向您提供快速指南。

觀看已儲存的影片

- 1** 在取景器中，點按右下角 。
- 2** 媒體匣會顯示在螢幕上。
- 3** 點按一下影片，以播放。將會自動開始播放。

觀看影片時調整音量

要在影片播放途中調整音量，您可使用在手機左方的音量鍵。

多媒體

您可儲存多媒體檔案至記憶卡，輕易存取您所有的圖像及影片檔案。

點按**應用程式標籤**，然後選擇**媒體匣**。開啓目錄列清單，裡面儲存您所有的多媒體檔案。

注意：請確保您將記憶

卡安裝到手機，以儲存相片和存取您全部的圖片。如沒有記憶卡，手機則不會顯示儲存於 Picasa 相簿內沒有 Picasa 圖像的相片或影片。

檢視模式

點按**媒體匣**。將會顯示資料夾檢視。

點按任何資料夾，便會轉為格線檢視模式。如果點按相片，便會變更為全螢幕檢視模式。

時間軸檢視

LG-P690 的**媒體匣**讓您以時間軸形式檢視您的相片和影片。在格線檢視模式，拖放  至右方，便會由最近期開始，顯示您拍攝相片的日期。如果您選擇特定的日期，當日拍攝的所有相片將會分為一組。

使用 SmartShare

SmartShare 為您提供以其他 DLNA（數位生活網路聯盟）設備享受多媒體內容的更好方法。

* 將您的媒體內容與其他 DLNA 設備分享 (DMS)

- 1 在桌面點按**應用程式標籤**，然後選擇 SmartShare。
- 2 點按**功能表鍵**並選擇 Settings。
- 3 點按 Discoverable 勾選框就可開啓。

多媒體

- 4** 您可改變您的裝置名稱，及選擇內容類別。

*** 讓您的播放裝置（例如：電視）從遠方資料庫（例如：電腦）播放多媒體內容。**

- 1** 點按右上方的按鈕以從播放裝置清單選擇裝置。
- 2** 點按左上方的按鈕以選擇遠端資料庫。
- 3** 您可瀏覽遠方資料庫。
- 4** 點按內容縮圖或**按功能表**鍵，然後選擇播放按鈕。

通知：使用本程式時檢查您的裝置是否已經由 Wi-Fi 連接到您的家居網路。

通知：部分 DLNA 設備（例如：電視）只支援 DLNA 的 DMP 功能，這些裝置將不會出現在播放裝置清單。

音樂

LG-P690 具有內置音樂播放裝置，讓您播放所有您最愛的曲目。要存取音樂播放

裝置，在桌面點按應用程式標籤，然後選擇**音樂**。

播放歌曲

- 1** 在桌面點按應用程式標籤，然後選擇**音樂**。
- 2** 點按**歌曲**。
- 3** 選擇要播放的歌曲。
- 4** 點按  暫停播放歌曲。
- 5** 點按  跳至下一首歌曲。
- 6** 點按  返回歌曲的開首。點按  兩次以返回上一首歌曲。
- 要在聆聽音樂時調節音量，按手機左方的向上及向下音量鍵。
- 點按並按住清單上的任何歌曲，便會顯示**播放、新增至播放列表、設成來電鈴聲、刪除、詳細資料和分享、搜尋**選項。

注意：音樂檔案的版權可能受國際公約和國內版權法保護。因此，您或需要取得授權或許可，才可以複寫或複製音樂。在某些國家，國內法律禁止私人複製受版權保護的材料。下載或複製檔案前，先檢查有關國家關於使用這類材料的國家法律。

使用 USB 大容量儲存裝置傳送檔案

要使用 USB 裝置傳送檔案

- 1 使用 USB 線連接 LG-P690 至電腦。
- 2 如果您沒有在電腦上安裝 LG Android 平台驅動程式，您需要手動變更設定。選擇設定 > SD 卡及手機儲存，然後選擇僅限大容量儲存。
- 3 點按開啓 USB 儲存裝置。
- 4 您可於電腦檢視大容量儲存體的內容並傳送檔案。

注意：您必須先安裝 SD 卡。如沒有 SD 卡，則無法使用 USB 大容量儲存。

注意：如果您已安裝 LG Android 平台驅動程式，將會立即看見開啓 USB 儲存體的彈出視窗。

如何在手機上儲存音樂/影片檔案

- 1 使用 USB 線將手機連接並到電腦。在桌面點按並向下拖動狀態列。選擇 USB 已連接 > 開啓 USB 儲存裝置。開啓資料夾以檢查電腦上的檔案。如果電腦上沒有安裝 LG Android 平台驅動程式，則必須手動進行設定。有關更多資訊，請參閱「使用 USB 大容量儲存裝置傳送檔案」。
- 2 將電腦中的音樂或影片檔案儲存至手機的可移除儲存體。

多媒體

- 您可以使用讀卡器，將檔案從電腦複製或移動至手機的可移除儲存裝置。
- 如果影片檔案包含字幕檔案（與影片檔案同名的 *.srt 檔案），請將其放入相同資料夾，以便在播放影片檔案時自動顯示字幕。
- 在下載音樂或影片檔案時，必須保護版權的安案。請注意，已損壞檔案或副檔名不正確的檔案可能會損壞手機。

將通訊錄從舊手機移動至新手機

使用電腦同步程式，將通訊錄以 CSV 檔案格式從舊手機匯出至電腦。

- 1 從 www.lg.com 下載 LG PC Suite IV，然後將其安裝在電腦上。執行該程式，並使用 USB 線將

Android 行動手機連接到電腦。

- 2 選擇**通訊錄**圖示。轉到**功能表** > **更多** > **匯入/匯出**，然後選擇儲存於電腦中的 CSV 檔案。
- 3 如果匯入的 CSV 檔案中的欄位與 PC Suite IV 中的欄位不同，則需要對應欄位。對應欄位後，按一下「確定」。通訊錄將會新增至 PC Suite IV。
- 4 如果 PC Suite IV 偵測到 LG-P690 手機的連接（使用 USB 線），按同步或同步通訊錄，將儲存在電腦上的通訊錄與手機同步。

使用藍芽從手機傳送數據

使用藍芽傳送數據 您可執行相應程式使用藍芽傳送數據，而無需像大部分其他手機般從藍芽功能表進行操作。

* **發送圖片**：執行媒體匣應用程式，然後選擇**圖片 > 功能表**。按**分享**，然後選擇**藍芽**。檢查是否已開啟藍芽，然後選擇**掃描裝置**。選擇要將數據發送至的裝置。

* **匯出通訊錄**：執行通訊錄應用程式。點按要匯出的地址。按**功能表鍵**，然後選擇**分享 > 藍芽**。檢查是否已開啟藍芽，然後選擇**掃描裝置**。選擇要將數據發送至的裝置。

* **發送所選的多個聯絡人**：執行通訊錄應用程式。要選擇多個聯絡人，按**功能表鍵**並點按**分享 > 選擇全部 > 分享 > 藍芽**、**訊息**、**電子郵件**或**藍芽**。

* **連接至 FTP（此手機僅支援 FTP 伺服器）**：選擇**設定 > 無線及網絡 > 藍芽設定**。選擇**可偵測性方塊**，

您便可在其他裝置搜尋您的手機。尋找 FTP 服務並連接至 FTP 伺服器。

- 如果您要從其他裝置中搜尋此手機，請轉到**設定 > 無線及網絡 > 藍芽設定**。選擇**可偵測性方塊**。方塊在 120 秒後會清除。

使用收音機

LG-P690 具有內置 FM 收音機，只要作出適當調校，就可以隨時隨地聆聽您最愛的電台。

注意：您必須插入耳機才能收聽電台。請將之插入耳機插孔。

搜尋電台

您可以使用**手動**或**自動**搜尋功能調校電台。電台便會儲存至特定的頻道編號，因此您不用再次尋找它們。您最多可以將 48 個頻道儲存到手機。

多媒體

自動調頻

- 1 在桌面點按應用程式標籤，然後選擇 FM 收音機。
- 2 按功能表鍵，然後點按自動掃描。
- 3 如有預設頻道，您將會看見詢問「重設所有頻道並啓動自動掃描？」的彈出視窗。如果您選擇確定，將會刪除所有預設頻道，然後開始自動掃描。
- 4 在自動掃描的過程中，如您希望停止掃描點按停止。只會儲存您停止掃描之前的已掃描頻道。

注意：您亦可使用轉輪以手動方式調頻。

重設頻道

點按功能表鍵及選擇重設頻道以重新設定目前的頻道，或選擇重設所有頻道以重新設定所有頻道。

收聽電台

點按收聽方式以設定使用揚聲器還是有線耳機收聽廣播。

提示 要改善收音機的接收效果，您可延長耳機線，因為耳機線也有收音機天線的功能。



警告：

若連接的耳機並非爲了接收電台訊號而特製，接收效果會欠佳。

實用程式

設定鬧鐘

- 1 在桌面點按應用程式標籤，然後選擇時鐘。
- 2 若要新增新的鬧鐘，點按並選擇**新增鬧鐘**。
- 3 設定時間，然後點按以開啓鬧鐘。設定時間後，LG-P690 會讓您知道距離鬧鐘響起還剩下多少時間。
- 4 設定**重複、鈴聲或震動**，然後新增標籤為鬧鐘命名。點按**完成**。

注意：如要在鬧鐘清單上變更鬧鐘設定，按**功能表鍵**並選擇設定。您可調較以下選項：**靜音模式下的鬧鐘、鬧鐘音量、暫停時間和側面按鈕動作**。

使用計算機

- 1 在桌面點按**應用程式標籤**，然後選擇**計算機**。
- 2 點按數字鍵以輸入數字。
- 3 對於簡單計算，點按所需的運算符號（+、-、x 或 ÷），然後按 =。
- 4 對於複雜的計算，按**功能表鍵**，然後點按**進階面板**，再選擇 sin、cos、tan、log 等等。

新增事件至日曆

- 1 在桌面點按**應用程式標籤**，然後選擇**日曆**。
- 2 要檢查事項，點按日期。如您希望新增事件，點按並按住事件。點按**新增事件**。
- 3 點按**主題**，然後輸入事件名稱。檢查日期，並輸入事件開始及完結的時間。

實用程式

- 4 然後點選按地點，輸入事件的地點。
- 5 若要新增備註至您的事件，點選說明，然後輸入詳細資料。
- 6 若要重複鬧鐘，請設定**重複頻率**，如有需要亦可設定**提醒類型**。
- 7 點選日曆中的**完成**以儲存事件。日曆中所有已儲存事件的日子將以顏色方格標記。鬧鐘將於事件的開始時間響起，讓您安排得井井有條。

更改您的預設日曆檢視模式

- 1 在桌面點選**應用程式標籤**，然後選擇**日曆**。按**功能表鍵**。
- 2 選擇以特定日期、星期或月份的形式檢視日曆。

Polaris Viewer

Polaris Viewer是專業的流動辦公室解決方案，讓使用者隨時隨地使用流動裝置輕鬆檢視不同類型的辦公室文件，包括 Word、Excel 和 PowerPoint 檔案。

管理檔案

Polaris Viewer為手機用戶提供方便管理檔案的功能，包括直接在裝置上複製、剪下與貼上，以及刪除檔案和資料夾。

檢視檔案

手機用戶現在可以直接在流動裝置上輕易檢視各式各樣的檔案類型，包括 Microsoft Office 文件和 Adobe PDF。使用 Polaris Viewer檢視文件時，物件和版面會保持與原始文件相同。

錄音程式

使用錄音程式錄製語音檔案或聲音檔案。

錄製聲音或語音

1 在桌面點按**應用程式標籤**，然後選擇錄音程式。

2 點按  開始錄音。

3 選擇  結束錄音。

4 點按  以聆聽錄音。

注意：點按  以存取您的專輯。您可聆聽已儲存的錄音。

通知：可用的錄製時間可能與真實時間有所不同。

發送錄音

1 完成錄製後，可透過**點按** **分享**發送聲音短片。

2 從**藍芽**、**Gmail**、**訊息**、**電子郵件**及**藍芽**中選擇。當您選擇**電子郵件**、**Gmail**及**訊息**，錄音會新增至訊息中，然後您可以正常編寫和發送訊息。

網絡功能

瀏覽器

瀏覽器令您透過手機盡享快捷、全彩色的遊戲、音樂、新聞、體育、娛樂及更多。無論您身在何處，有何需求。

注意：連接到這些服務和下載內容需繳交額外費用。請向網絡供應商諮詢收費詳情。

使用網絡工具列



點按以跳至前一頁。
點按以前往您在目前頁面後連接的一頁。
當您按**返回**鍵返回上一頁，這就是其相反操作。



點按以顯示所有您已開啓的視窗。



點按以新增新視窗。



點按以變更瀏覽器設定。



新增/顯示書簽並顯示常用網頁、稍後讀取和記錄。

使用選項

按功能表鍵檢視選項。



稍後讀取 - 將目前網頁新增至書簽。



新增 RSS 收取點 - 將目前網頁新增至 RSS 收取點。



分享網頁 - 讓您與其他分享網頁。



在頁面中尋找 - 讓您在目前網頁尋找字母或字詞。



選擇文字 - 讓您從網頁複製任何文字。



更多

- **主頁：**轉到主頁。
- **設定主頁：**設定目前網頁為主頁。
- **新增捷徑至主頁：**將目前網頁的捷徑新增至桌面。
- **頁面資訊：**顯示該網頁的資訊。
- **下載：**顯示下載記錄。

提示 要返回之前的網頁，按**返回**鍵。

設定

在桌面點選**應用程式式標籤**，然後捲動，再點選**設定**。

無線及網絡

您可在此管理 Wi-Fi 和藍芽。您亦可設定流動網絡和切換至飛航模式。

飛航模式 - 切換至飛航模式後，所有無線通訊會被停用。

Wi-Fi - 點選以勾選：啟動 Wi-Fi 以連接可使用的 Wi-Fi 網絡。

Wi-Fi 設定 - 讓您設定及管理無線存取點。設定網絡通知，或新增 Wi-Fi 網絡。從 Wi-Fi 設定螢幕訪問進階 Wi-Fi 設定螢幕。按**功能表**鍵並點選**進階**。

提示 如何取得 MAC 位址

若要在某些設有 MAC 過濾器
的無線網絡建立連線，您需要
把 LG-P690 手機的 MAC 位址
輸入到路由器。

您可在以下用戶介面找到
MAC 位址：點選**應用程式式**
設定 > **無線及網絡** > **Wi-Fi** 設
定，然後按**功能表**鍵。再選
擇**進階** > **MAC 位址**。

藍芽 - 點選以勾選：啟動
藍芽以連接至藍芽裝置。

藍芽設定 - 設定裝置名稱
及可偵測性，並掃描其他裝
置。或者，檢查您以前配
置的藍芽裝置列表，以及手
機最近一次掃描藍芽裝置時
所偵測到的藍芽裝置。

**網絡共享及可攜式無線熱
點** - 您可以設定 USB 網
絡連線及可攜式 Wi-Fi 熱點
設定。

VPN 設定 - 顯示您以前配置的虛擬專用網絡 (VPN) 列表。允許您新增不同類型的 VPN。

流動網絡 - 設定數據漫遊、網絡模式、存取點名稱 (APNs)，等等。

通話設定

< 固定撥號 >

選擇**固定撥號**，以開啓並編輯一份可從您手機撥打的號碼清單。需要使用 PIN2 碼，您可以向網絡商索取此 PIN2 碼。僅可從手機撥出固定撥號列表包含的號碼。

< 語音留言 >

語音信箱服務 - 讓您選擇您的服務供應商的語音信箱服務。

語音信箱設定 - 如果您正在使用您的服務供應商所提供的語音信箱服務，此選項允許您輸入電話號碼用來接

聽或者管理您的語音信箱。

< 其他通話設定 >

歉意訊息 - 當您想拒接來電時，使用此功能可以快速發送訊息。如果您需要在會議中拒接來電，此功能將十分有用。

來電轉接 - 選擇**永遠轉接**、**線路繁忙時**、**無人接聽時**或**無法接通時**。

通話限制 - 選擇您想要何時限制通話。輸入通話限制密碼。請向您的網絡供應商瞭解此服務詳情。

拒接來電 - 您可新增您想拒接的電話號碼。您可在**來電拒接列表 > 功能表 > 新增號碼**以新增新號碼。來自來電拒接列表的來電將會自動被拒。在通話記錄，該等通話會以拒接圖示顯示。

設定

通話費用 - 檢視您的通話收費。（此服務視乎您的網絡而定；一些網絡供應商不支援此功能）

通話時間 - 檢視最後通話、所有通話、撥出通話、已接來電的通話時間。

其他設定 - 您可更改以下設定：

本機號碼：選擇是否在撥出的電話中顯示您的電話號碼。

來電等候：如已啓動來電等候，當您在通話中接到來電，手機便會通知您。（視乎您的網絡供應商而定）。

聲音

< 標準 >

靜音模式 - 讓您將所有聲音（包括來電及提示鈴聲）靜音，但不包括播放音樂及影片的聲音，以及您已設定的鬧鐘響鬧。您必須要通

過媒體和鬧鐘自己的應用程式來使得它們靜音。

震動 - 允許您設定來電時手機震動。

音量 - 允許您設定鈴聲、多媒體及鬧鐘的音量。如果您沒有勾選來電和通知使用相同音量的選項，那麼您可以分別設定它們的音量。

< 來電 >

電話鈴聲 - 允許您設定預設的來電鈴聲。

< 通知 >

通知鈴聲 - 允許您設定預設的通知鈴聲。

< 回饋 >

觸控音效 - 當您使用撥號鍵盤撥號時，允許您設定手機播放按鍵音。

選擇項目時發聲 - 當您點擊按鈕、圖示或者其他對您的點按作出反應的螢幕上的項目時，允許您設定您的手機播放按鍵音。

螢幕鎖定聲音 - 允許您設定鎖定或解鎖螢幕時播放聲音。

顯示

亮度 - 調校螢幕亮度。

自動旋轉螢幕 - 設定當您旋轉手機時自動切換方向。

動畫 - 設定以顯示動畫。

螢幕逾時 - 設定螢幕逾時的時間。

位置及安全

使用無線網絡 - 如選擇使用無線網絡，手機會使用 Wi-Fi 和流動網絡確定您大概所處的位置。如選擇此選項，系統會問您是否同意允許 Google 在提供這些服務時，使用您所處的位置。

使用 GPS 衛星定位 - 如選擇使用 GPS 衛星定位，手機會確定您所處的位置，準確地找出您身處的街道。

設定螢幕鎖定 - 設定解鎖圖案以保護您的手機。開啟一系列畫面，以指導您繪畫螢幕解鎖圖案。您可以設定 PIN 碼或密碼以取代圖形，或保留選項為無。

當您開啓手機或喚醒螢幕時，您需要繪製解鎖圖形以解鎖螢幕。

Set up SIM/RUIM card lock

- 設定 SIM/RUIM 卡鎖定或變更 SIM/RUIM PIN 碼。

顯示密碼 - 選擇隨您輸入顯示密碼、或於輸入時隱藏並取消選擇。

選取裝置管理員 - 新增一個或多個管理員。

使用安全認證 - 讓您存取安全證書。

從 SD 卡安裝 - 選擇從 SD 卡安裝加密證書。

設定密碼 - 設定或變更憑證儲存密碼。

設定

清除儲存空間 - 清除所有內容的憑證儲存並重設密碼。

應用程式

您可以管理應用程式，並設定快速啟動捷徑。

未知的來源 - 安裝並非從 Market 下載的應用程式的預設設定。

管理應用程式 - 管理及移除已安裝的應用程式。

正在運作的服務 - 檢查正在運作的服務。

儲存空間使用量 - 檢視應用程式的儲存空間使用量。

電池使用狀況 - 查看使用電池的項目。

開發 - 設定開發應用程式的選項。

帳號及同步處理

<一般同步處理設定>

背景資料 - 允許應用程式在背景中同步資料，而不論您是否啟動它們。不勾選此設定會幫助節省電池電力，同時也會降低（但不會完全停止）資料用量。

自動同步處理 - 應用程式會自動同步處理資料。

<管理帳號>

您新增到此手機上的所有 Google 帳戶和其他帳戶的列表。

如果您點按該螢幕上的某一帳戶，則該帳戶的螢幕會開啓。

隱私設定

如果您選擇重設為原廠設定，手機內部儲存空間所有資料，包括您的 Google 帳戶資料、您的系統 / 應用程式資料和設定，還有任何已下載程式及 DRM 認證都會被刪除。重設手機並不會刪除任何您所下載的系統軟件更新，也不會刪除諸如音樂或相片等在您 microSD 卡上的檔案。如果您用此方法重設您的手機，您會被提示重新輸入您第一次啟動 Android 時所輸入的訊息。

SD 卡及手機儲存

< USB 連接模式 >

僅限大容量儲存 - 如果您插入例如一張記憶卡，您的手機就可以當做一個大容量儲存體裝置來使用。您可以設定**僅限大容量儲存**為 USB 連接模式下的預設設定。

< SD 卡 >

檢查可用的 SD 卡總空間。點按**移除 SD 卡**以安全移除。如您希望刪除 SD 卡上的所有資料，請**清除 SD 卡**。

< 手機內置記憶體 >

檢查可使用空間。

語言及鍵盤

設定裝置語言及鍵盤設定。

語音輸入及輸出

< 語音輸入 >

語音辨識系統設定 - 使用語音識別系統設定，以設定 Android 語音輸入功能。

- **Language (語言)**：開啓螢幕讓您設定使用語音輸入文字的語言。

- **SafeSearch**：開啓對話方塊，從中設定使用 Google SafeSearch 時是否希望程式過濾部份結果。

設定

- **Block offensive words (封鎖令人反感的字詞)**：取消勾選後，當您使用語言輸入文字時，Google 語音識別會辨認大部分人認為令人反感的字詞，並會譯成文字。勾選後，語音識別於轉換時會以內有井號的括號 (#) 代替相關字詞。

< 語音輸出 >

文字轉語音設定 - 使用文字轉語音設定，為可使用 Android 文字轉語音合成器的應用程式設定此功能。

注意：如果您沒有安裝語音合成數據，那麼只有**安裝語音資料項設定**可使用。

- **聆聽範例**：使用您的現有設定，播放語音合成器的簡短範例。

- **永遠使用我的設定**：勾選以使用此螢幕的設定，以代替其他應用程式內可選用的語音合成設定。

- **預設引擎**：開啓對話方塊，從中設定您想使用的文字轉語音應用程式（如有兩個或以上的應用程式。）
- **安裝語音資料**：如果手機沒有安裝語音合成數據，連接至 Android Market，系統會指導您下載及安裝數據。如已安裝數據，則無法選擇此設定。
- **語音速率**：開啓對話方塊，從中選擇合成器發聲的速度。
- **語言**：開啓對話方塊，從中選擇合成器所讀取的文字語言。配合**永遠使用我的設定**使用尤其實用，能確保在不同應用程式內也能正確讀出文字。
- **Pico TTS**：設定 Pico TTS 設定。

協助工具

您可使用**協助工具**設定，以設定已安裝到手機的可存取性外掛程式。

注意：需要其他外掛程式。

日期及時間

使用**日期及時間**設定以設置您希望日期顯示方式的偏好。您還可以使用這些設定來設置您自己的時間和時區，而不只是從流動網絡獲得當前時間。

關於手機

檢視法律資訊，檢查手機狀態和軟件版本。

Wi-Fi

使用 Wi-Fi，您可以在無線接入點 (AP) 範圍內高速訪問互聯網。

使用 Wi-Fi 享用無線互聯網，而不會收取額外費用。

開啓 Wi-Fi

從桌面開啓通告欄，然後點按 。

或點按**應用程式 > 設定 > 無線及網絡**，然後 > Wi-Fi



連接至 Wi-Fi

選擇要連接的 Wi-Fi 網絡。如果看到 ，則需要輸入密碼才能連接。

注意：

- 如果您在 Wi-Fi 覆蓋範圍外並選擇 3G 連接，則可能需要額外收費。
- 如果您的手機在連接至 Wi-Fi 時進入睡眠模式，Wi-Fi 連接會自動停用。
- 在此情況下，如果您的手機已存取 3G 數據，則可能會自動連接至 3G 網絡，並會收取額外費用。
- LG-P690 支援 WEP、WPA/WPA2-PSK 及 802.1x EAP

設定

安全。如您的 Wi-Fi 服務供應商或網絡管理員設定了加密，以保障網絡安全，請在彈出視窗輸入加密鑰匙。如果尚未設定加密，則系統不會顯示此彈出視窗。可從您的 Wi-Fi 服務供應商或網絡管理員取得加密鑰匙。

共享手機的流動數據連接。

您可以透過 USB 線（USB 共享網絡）與單一電腦共享手機的流動數據連接。您可將手機切換成可攜式 Wi-Fi 熱點，同時與最多 5 部裝置共享手機的數據連接。當手機正共享數據連接，狀態列會顯示圖示，而通告欄內也會顯示進行中的通告。

圖示	說明
	USB 共享網絡已啓動
	可攜式 Wi-Fi 熱點已啓動
	USB 共享網絡及可攜式 Wi-Fi 熱點已啓動

有關共享網絡及可攜式熱點的最新资讯，包括受支援的操作系統及其他詳情，請瀏覽 <http://www.android.com/tether>。

注意：連接及使用網上服務可能需要額外付費。請向網絡供應商諮詢收費詳情。

USB 連線網絡及可攜式 Wi-Fi 熱點設定

- 1 在桌面點選應用程式標籤，然後選擇設定。
- 2 點選**無線及網絡**並選擇**網絡共享及可攜式無線熱點**。
- 3 選擇您想調整的選項。

USB 網絡連線 - 勾選以透過 USB 連接與電腦共享手機的網絡數據連接。

可攜式 Wi-Fi 熱點 - 勾選以共享手機的網絡數據連接作為 Wi-Fi 共享。

說明 - 開啓載有 USB 共享網絡及可攜式 Wi-Fi 熱點資料的對話方塊，並取得更多資料的詳情。

要透過 USB 連線的數據連接

如果您的電腦運行 Windows 7 或近期推出的 Linux 系統（如 Ubuntu），則基本上

不需要為共享網絡而設定電腦。但如果電腦正運行較早期的 Windows 版本或其他操作系統，則可能需要透過 USB 建立網絡連接。有關支援 USB 共享網絡的操作系統及其設定方式的最新資訊，請瀏覽 <http://www.android.com/tether>。

共享網絡及數據共享

無法同時透過 USB 共享手機的數據連接及 microSD 卡。如果您正透過 USB 將 microSD 卡連接至電腦上，則必須先中斷連接。

- 1 使用附手機附上的 USB 線，將手機連接至電腦。
- 2 在桌面點選**應用程式標籤**，然後選擇設定。
- 3 點選**無線及網絡**並選擇**網絡共享及可攜式無線熱點**。
- 4 勾選 **USB 網絡連線**。

設定

- 手機會開始透過 USB 連接與電腦共享流動網絡數據連接。進行中的通告

 會加入至狀態列及通告欄內。

- 5 取消勾選 **USB 網絡連線**，以停止共享數據連接。您也可中斷 USB 線的連接。

要將手機的數據連接以可攜式熱點的形式分享

- 1 在桌面點按應用程式標籤，然後選擇設定。
- 2 點按**無線及網絡**並選擇**網絡共享及可攜式無線熱點**。
- 3 勾選**可攜式 Wi-Fi 熱點**。
- 手機將會開始廣播 Wi-Fi 網絡名稱 (SSID)，您可以將手機連接至最多 5 台電腦或其他裝置。進行中的通告  會加入至狀態列及通告欄內。

- 勾選**可攜式 Wi-Fi 熱點**後，您可更改其網絡名稱或保護 Wi-Fi 網絡。

- 4 取消勾選**可攜式 Wi-Fi 熱點**以停止透過 Wi-Fi 共享數據連接。

要重新命名或保護可攜式熱點

您可以更改手機 Wi-Fi 網絡名稱 (SSID)，並保護手機的 Wi-Fi 網絡。

- 1 在桌面點按**應用程式標籤**，然後選擇**設定**。
- 2 點按**無線及網絡**並選擇**網絡共享及可攜式無線熱點**。
- 3 確保已勾選**可攜式 Wi-Fi 熱點**。
- 4 點按**可攜式 Wi-Fi 熱點設定**設定。
- 5 點按**設定 Wi-Fi 熱點**。
 - 設定 **Wi-Fi 熱點**設定對話方塊開啓。

- 您可以更改當掃描 Wi-Fi 網絡時其他電腦所看見的網絡 SSID（名稱）。
- 您也可以點按**安全功能**表，以預先共用的金鑰 (PSK) 設定 Wi-Fi 受保護存取 2 (WPA2) 的網絡。
- 如果您點按 WPA2 PSK 安全選擇，密碼欄位會加入至**設定 Wi-Fi 熱點**的對話方塊內。如果您輸入密碼，使用電腦或其他裝置連接至手機的熱點時則需要輸入該密碼。或點按**安全功能表內的開啓**，從 Wi-Fi 網絡移除安全性。

注意！

如果您將安全選項設定為**開啓**，則無法防止其他人士在未經授權的情況下使用網上服務，並可能產生額外收費。要避免未經授權的使用，您應該保留啓用此安全選項。

6 點按儲存。

軟件更新

手機軟件更新

從互聯網更新 LG 手機軟件

要了解更多有關此功能的資訊，請瀏覽 <http://www.lg.com>。透過此功能，您便無須親臨客戶服務中心，就可透過互聯網更新手機軟體至較新版本，這非常方便。此更新功能只在 LG 發佈適合您的手機有較新軟體版本時才可使用。

手機軟體更新要求使用者必需緊密留意整個更新過程。請確保繼續進行前，已檢查所有在每一個步驟出現的指引和備註。請注意，更新期間若移除 USB 數據線或電池，有可能對您的手機造成嚴重損害。

注意：LG 保留權利，可酌情決定只為指定型號提供軟體更新，並不保證所有手機型號均有軟體的較新版本。

透過空中下載 (OTA) 進行 LG 手機軟件更新

此功能讓您無須連接 USB 數據線，也能輕鬆透過 OTA 將手機軟體更新為較新版本。LG 推出適合您裝置韌體的較新版本時，此功能才可使用。

首先，您可以使用手機檢查軟件版本：設定 > 關於手機 > 軟件更新 > 軟件更新檢查。

附註：此功能因網路服務供應商、國家或者地區而定。

DivX 手機 **DIVX**

關於 DIVX VIDEO：DivX[®] 是由 Rovi Corporation 的子公司 DivX, LLC 所建立的數碼影片格式。這是官方 DivX Certified[®] 的裝置，能夠播放 DivX 影片。有關用於將檔案轉換成 DivX 影片的軟件工具的更多資訊，請瀏覽 divx.com。

關於 DIVX VIDEO-ON-DEMAND：這個 DivX Certified® 裝置必須先註冊，才可播放已購買的 DivX Video-on-Demand (VOD) 電影。若要取得註冊編碼，請在您的裝置設定功能表找出 DivX VOD 部分。前往 vod.divx.com 以獲取有關如何完成註冊的更多資訊。

DivX Certified® 最多可播放 320 x 240 的 DivX® 影片

DivX®、DivX Certified® 及相關標誌乃 Rovi Corporation 或其子公司的商標並經授權下使用。

通知：

公開原始碼軟件

若要取得 GPL、LGPL、MPL 或其他公開來源授權的相應原始碼，請瀏覽


<http://opensource.lge.com/>

所有授權的條款、免責聲明及通知均可連同原始碼一同下載。


配件

該等配件適合配合 LG-P690 使用。（下述配件為可選購配件。）

旅行充電器

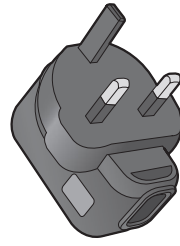

USB線
連接您的
LG-P690 至
電腦。

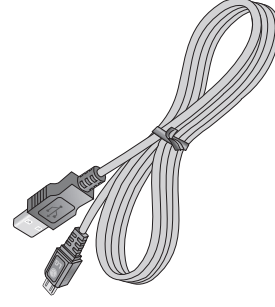

電池



使用手冊
了解更多有
關 LG-P690
的資訊。



立體聲耳機



附註：

- 只可使用原裝 LG 配件。
- 若不使用原裝 LG 配件，手機保養有可能失效。
- 配件可能會視乎不同地區而有所不同。

技術數據

環境溫度

最高：+55°C（放電），+45°C（充電）

最低：-10°C

Declaration of Conformity



Suppliers Details

Name
LG Electronics Inc

Address
LG Electronics Inc. LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name
GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

Model Name
LG-P690

Trade Name
LG

CE0168

Applicable Standards Details

R&TTE Directive 1999/5/EC
EN 301 489-01 V1.8.1, EN 301 489-07 V1.3.1
EN 301 489-17 V2.1.1, EN 301 489-19 V1.2.1, EN 301 489-24 V1.5.1
EN 301 511 V9.0.2
EN 301 908-1 V4.2.1 EN 301 908-2 V4.2.1,
EN 300 328 V1.7.1
EN 50360:2001, EN62209-1:2006, EN62209-2:2010
EN 60950-1 : 2006 + A11 :2009

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)
BABT, ForsythHouse, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility
that the product mentioned above to which this
declaration relates complies with the above mentioned
standards, regulation and directives

Name
Doo Haeng Lee / Director

Issued Date
Jun.20, 2011

LG Electronics Inc. –EU Representative
Veluwezoom 15, 1327 AE Almere, The Netherlands

Signature of representative

疑難排解

本章會列出一些使用手機時可能遇上的問題。您可能需要就某些問題聯絡您的服務供應商，但多數問題均可輕易自行修正。

訊息	可能起因	可用解決方法
智能卡錯誤	手機內無智能卡，或不正確地插入智能卡。	確保已正確地插入智能卡。
無網絡連接/失去網絡	訊號較弱或您位於運營商網絡服務範圍外。 網絡商套用新服務。	移近窗邊或移至空曠地方。檢查網絡供應商的覆蓋範圍。 檢查智能卡是否多於 6~12 個月。如是者，請前往網絡供應商的就近分店更換智能卡。請聯絡您的服務供應商。
密碼不正確	要更改安全密碼，您需要重新輸入以確認新的安全密碼。 您所輸入的兩個密碼並不相符。	如您忘記密碼，請聯絡您的服務供應商。
無法設定無任何應用程式	服務供應商不支援此功能，或需要註冊使用此功能。	請聯絡您的服務供應商。

訊息	可能起因	可用解決方法
無法撥打電話	撥號錯誤 新智能卡已插入。 已達預付費用上限。	新網絡未獲受權。 請檢查新的限制。 聯絡您的服務供應商，或使用PIN2 重設限額。
手機無法啓動	按開/關鍵時間太快。 電池並無充電。 電池接觸面骯髒。	按下開啓/關閉鍵至少兩秒。 替電池充電。檢查螢幕上的充電指示器。 清潔電池接觸面。
充電錯誤	電池並無充電。 外界溫度太高或太低。 接觸不良 無電壓 充電器故障 使用不當充電器 電池故障	替電池充電。 確保於正常溫度下為手機充電。 檢查充電器是否正常，以及是否正確地連接電源至手機。檢查電池接觸點，如有髒污則需清潔。 將充電器插入不同的插座。 如充電器沒有變暖，則需更換充電器。 請只使用原裝 LG 配件。 更換新電池。
不允許撥打號碼	固定撥號功能已開啓。	檢查設定功能表並關閉功能。

疑難排解

訊息	可能起因	可用解決方法
無法接收 / 發送文字訊息和圖片	記憶體已滿	刪除手機的部分訊息。
檔案沒有開啓	不支援的檔案格式	檢查受支援的檔案格式。
SD 卡無法運作	只支援 FAT 16，FAT 32 檔案系統	透過讀卡器檢查 SD 卡檔案系統，或使用手機將 SD 卡格式化。
接收來電時，螢幕並無開啓。	感應器問題	如果您使用任何保護貼或保護套，檢查該等配件是否覆蓋感應器附近的範圍。確保感應器附近並無任何障礙物。
無聲音	震動模式	檢查聲音功能表的設定狀態，確保您並非使用震動或靜音模式。
掛線或凍結	軟件間歇性問題	請取下電池，再次插入電池並開啓手機。 透過網站嘗試進行軟件更新。
手機已鎖定並沒有運作。	重新啓動手機	1. 關閉手機。 2. 取下電池蓋。 3. 安裝電池。 4. 關蓋。 5. 再次開啓手機。



简体中文

LG-P690 用户手册

本手册有助于您开始使用您的新手机。

如果需要更多信息，请访问 www.lg.com。

- 此手册中的部份内容可能会因手机程序之改良或不同网络商提供的服务而令实际情况有所不同，这并不会另行通知。
- 由于这款手机的键盘为触摸屏键盘，不推荐视障人士使用。
- 版权所有 ©2011 LG Electronics, Inc. 保留所有权利。LG 和 LG 徽标是 LG 集团及其相关实体的注册商标。所有其他商标是其各自所有者的财产。
- Google™、Maps™、Gmail™、YouTube™、Talk™ 和 Android Market™ 是 Google, Inc. 的商标。



目录

关于安全有效使用手机的准则.....	5	Google 帐户设置.....	33
重要注意事项.....	11	创建 Google 帐户.....	33
开始了解您的手机.....	21	登录 Google 帐户.....	33
安装 SIM 卡和电池...	23	电话.....	35
充电.....	24	拨打电话.....	35
安装存储卡.....	24	呼叫联系人.....	35
格式化存储卡.....	25	接听和拒绝电话.....	35
主屏.....	26	调节音量.....	35
触摸屏提示.....	26	拨打第二个电话.....	35
锁定手机.....	26	查看通话记录.....	36
解锁屏幕.....	27	通话设置.....	36
静音模式.....	27	联系人.....	37
主屏.....	27	搜索联系人.....	37
将小工具添加到主屏..	28	添加新联系人.....	37
返回到最近使用的应用程序.....	28	收藏夹联系人.....	37
通知抽屉.....	29	信息/电子邮件.....	38
查看状态栏.....	29	信息.....	38
屏上键盘.....	31	发送信息.....	38
输入带注音的字母....	32	更改信息设置.....	39
		设置电子邮件.....	39
		Microsoft Exchange 电子邮件帐户.....	39

其他 (POP3、IMAP、GME)	
电子邮件帐户	40
撰写和发送电子邮件 ..	41
使用帐户文件夹	42
添加或编辑电子邮件帐户	42
照相机	43
了解取景器	43
快速拍照	44
拍照后	44
使用高级设置	45
查看保存的照片	46
摄像机	47
了解取景器	47
快速摄像	48
拍摄视频后	48
使用高级设置	49
观看保存的视频	49
观看视频时调节音量 ..	49
多媒体	50
视图模式	50
时间线视图	50
使用 SmartShare	50

音乐	51
播放歌曲	51
使用 USB 大容量存储设备	
传输文件	52
如何将音乐/视频文件保存	
到手机	52
将旧手机上的电话本移至	
新手机	53
使用蓝牙从手机发送数	
据	54
使用收音机	54
搜索电台	55
重置频道	55
收听收音机	55
实用工具	56
设置闹钟	56
使用计算器	56
将事件添加到日历中 ..	56
更改日历视图	57
Polaris 查看器	57
录音机	57
录制声音或语音	58
发送录音	58

目录

网络.....	59	USB 绑定和便携式 Wi-Fi 热点设置	69
浏览器	59	通过 USB 共享您手机的数据连接	70
使用 Web 工具栏	59	USB 绑定和数据共享 ..	70
使用选项	59	将手机的数据连接共享为便携式 Wi-Fi 热点	71
设置.....	61	重命名或确保您的便携式热点安全	71
无线和网络	61	软件更新.....	73
通话设置	62	手机软件更新	73
声音	63	DivX 移动	73
显示屏	64	配件.....	75
位置和安全	64	技术参数.....	76
应用程序	65	故障排除.....	77
帐户与同步	65		
隐私权	65		
存储卡和手机内存	66		
语言和键盘	66		
语音输入与输出	66		
辅助功能	67		
日期和时间	67		
关于手机	68		
Wi-Fi	68		
打开 Wi-Fi	68		
连接到 Wi-Fi	68		
共享您手机数据连接 ..	69		

关于安全有效使用手机的准则

请阅读以下简单的准则。
违反这些准则可能造成危险或者触犯法律。

暴露射频能量之下

无线电波暴露和“特定吸收率”(SAR)信息。此款LG-P690型手机已设计为遵守有关适用的无线电波暴露安全要求。此要求基于相关的科学准则,其中包括为确保所有人员(无论年龄和健康状况)安全而设计的安全裕量。

- 无线电波暴露准则采用一种称为“特定吸收率”或SAR的测量单位。SAR测试是在所有用到的频段中以手机的最高认可功率电平进行发射时使用标准化方法执行的。

- 不同的LG手机型号可能有不同的SAR能级,但它们均符合相关的无线电波暴露准则。

- 国际非电离辐射防护委员会(ICNIRP)建议的SAR上限值为:每10克重的人体组织吸收的能量平均值不超过2 W/Kg。
- 由DASY4对该型号手机进行的测试,人耳能够承受的SAR最大值为1.05 W/kg(10克),戴在身体上时,其值为0.606 W/kg(10克)。
- 电气电子工程师协会(IEEE)建议的SAR上限值为:每1克重的人体组织吸收的能量平均值不超过1.6W/kg,此SAR数据适用于各个国家/地区的居民。

关于安全有效使用手机的准则

产品保养和维护



警告

仅使用经核准为用于此特定手机型号的电池、充电器和配件。使用任何其他类型可能导致适用于此手机的许可或保修失效，并可能造成危险。

- 不要拆解本机。当需要维修时，请将手机送往合格的服务技术人员处。
- 保修（由 LG 决定）可能包括使用新的或返修的更换部件或板，只要其功能与更换的部件等效。
- 远离诸如电视、收音机或个人计算机之类的电器。
- 远离诸如暖气片或燃气灶之类的热源。
- 小心不要让手机摔落。
- 不要让手机受到机械振动或撞击。

- 在任何有特殊条例要求的区域关闭手机。例如，请勿在医院使用手机，因为它可能影响敏感的医疗装置。
- 手机充电时，请勿用湿手操作手机。这可能会导致电击或手机严重受损。
- 请勿在靠近易燃物体的位置充电，因为手机可能因加热而引发火灾。
- 使用干布清洁手机外壳（不要使用如苯、稀释剂或酒精之类的溶剂）。
- 如果手机置于柔软物体之上，请不要充电。
- 应将手机放在完全通风的位置充电。
- 不要在烟雾或灰尘过多的环境中使用或存放手机。
- 不要将手机放在信用卡或卡式车票旁边，它可能会影响磁条上的信息。

- 不要用尖锐物体敲击屏幕，这可能会损坏手机。
- 不要将手机暴露在液体或潮气中。
- 谨慎使用诸如耳机之类的配件。 在不必要的情况下，不要触摸天线。
- 请勿使用、触摸或试图取下或修复破碎或破裂的玻璃。 由于滥用或误用造成的玻璃显示屏损坏不在保修范围内。
- 作为电子设备，您的手机在正常操作下会发热。长时间空气不流通情况下，长时间与皮肤直接接触可能会导致不适或轻微灼伤。因此，在手机使用中或刚使用完后，请小心接触。

有效的手机操作

电子设备

所有手机都可能受到干扰，这种干扰会对性能造成影响。

- 在未经允许的情况下，不得在医疗装置附近使用手机。 不要将手机放在心脏起搏点上，即胸前的口袋内。
- 手机可能会对某些助听器造成干扰。
- 微弱的干扰可能会影响电视、收音机、个人计算机等。

行车安全

查阅有关在驾驶时使用手机的本地法律法规。

- 不要在驾驶时使用手持式手机。
- 将注意力完全集中在驾驶上。

关于安全有效使用手机的准则

- 如果行驶条件需要，请在拨打或接听电话之前将车辆驶离道路并停车。
- 射频能量可能影响车辆内的电子系统，例如立体声音响、安全设备等。
- 当车辆配备气囊时，不要让安装的便携式无线设备阻挡气囊。这样做可能因性能不当而导致气囊无法释放或导致严重受伤。
- 如果您在外出时使用耳机收听音乐，请确保将音量设置为合理的音量级别，以便注意周围的情况。在过马路时，尤其要注意这一点。

防止损伤您的听力

如果您长时间置身于高音环境中，那么您的听力可能会遭到伤害。因此，我们建议您开机或关机时不要将手机置于耳边。同时，我们还建议您将音乐和通话音量设置为合理的音量级别。

备注：耳机声音压力过大可能导致听力受损。

玻璃部分

手机部分为玻璃制。如果手机摔落到坚硬表面或受到强烈撞击，玻璃会破碎。如果玻璃破碎，请勿触摸或尝试取出玻璃碎片。停止使用手机，在授权的服务提供商处更换玻璃。

爆破区域

不要在正进行爆破的地区使用手机。请依照有关限制，并遵守任何规章或规定。

易爆环境

- 不要在加油站内使用手机。
- 不要在靠近燃料或化学制品处使用手机。
- 不要在放有手机和配件的车厢内运输或存放可燃气体、液体或爆炸品。

在飞机上

无线设备可能对飞机造成干扰。

- 登机前，请关机。
- 未经机务人员允许，不得在地面上使用手机。

儿童

将手机放在儿童接触不到的安全地方。手机中包含细小零件，如果脱落可能导致窒息危险。

紧急电话

并非在所有手机网络中均可使用紧急电话。因此，您不应仅依赖于手机的紧急呼叫功能。请向本地的服务提供商核准。

电池信息及保养

- 您无需在再次充电前对他池进行完全放电。与其他电池系统不同，本机电池不具有可能影响电池性能的记忆效应。
- 只能使用 LG 电池和充电器。LG 充电器设计为最大程度地延长电池使用寿命。

关于安全有效使用手机的准则

- 不要拆解电池组或将其短路。
 - 保持电池组的金属触点清洁。
 - 当电池不再提供合乎要求的性能时，请更换电池。在需要更换之前，电池组可以反复充电数百次。
 - 如果很长一段时间都没用过电池，请将电池再次进行充电以保持最佳使用状态。
 - 不要将电池充电器暴露在直射阳光下，也不要置于浴室之类的高湿环境中使用。
 - 不要将电池存放在过热或过冷的地方，这可能损害电池的性能。
 - 如果用不当的电池进行替换，可能会有爆炸危险。
 - 请按制造商的说明处置用过的电池。 如果可能，
- 请循环使用电池。 不要象处理家用废物一样处理电池。
 - 如果要更换电池，请将其携带至 LG Electronics 授权服务点或经销商处以寻求帮助。
 - 手机充好电后，请务必将充电器从墙上插座拔下，以避免不必要的耗电。
 - 实际的电池寿命将取决于网络配置、产品设置、使用方式、电池和环境条件。

重要注意事项

请检查以查看本节是否介绍了您手机遇到的任何问题，然后再将手机拿去维修或者致电给服务代表。

1. 手机内存

当手机内存的可用空间小于10% 时，您的手机无法收到新信息。您需要检查手机内存并删除一些数据（如应用程序或信息），以有更多内存可用。

管理应用程序

1 在主屏中，点触应用程序选项卡，然后选择设置 > 应用程序 > 管理应用程序。

2 所有应用程序都显示后，请滚动并选择要卸载的应用程序。

3 轻触卸载，然后点触确定可卸载所选应用程序。

2. 优化电池使用寿命

通过禁用无需在后台持续运行的功能来延长电池的使用寿命。您可以监视应用程序和系统资源如何消耗电池电量。

延长电池的使用寿命

- 如果您未使用无线电通信，请关闭它。如果不使用 Wi-Fi、蓝牙或 GPS，请将其关闭。
- 调低屏幕亮度，设置较短的屏幕待机时间。
- 关闭 Gmail™、日历、联系人及其他应用程序的自动同步功能。
- 您下载的一些应用程序可能会缩短电池的使用寿命。

重要注意事项

检查电池电量水平

1 在主屏中，点触应用程序选项卡，然后选择设置 > 关于手机 > 状态。

2 电池状态（正在充电、未在充电）和电量（充电百分比）显示在屏幕顶部。

监视并控制使用电池的项目

1 在主屏中，点触应用程序选项卡，然后选择设置 > 关于手机 > 电量使用情况。

2 电池使用时间显示在屏幕顶部。它告诉您自上次连接到电源以来的时间，或者连接到电源后在电池电源上运行的时间。屏幕上方列出了使用电池电源的应用程序或服务，从最大量到最小量。

3. 安装开源操作系统

如果在手机上安装开源操作系统（OS），而不使用制造商提供的操作系统，则手机可能无法正常工作。



警告

如果安装并使用非制造商提供的操作系统，您的手机不再享受保修。



警告

为保护您的手机和个人数据，请只从信任的来源（如 Android Market™）下载应用程序。如果手机上存在未正确安装的应用程序，您的手机可能无法正常工作，甚至可能发生严重错误。您必须从手机中卸载那些应用程序及其所有数据和设置。

4. 使用解锁图样

设置保护手机的解锁图样。在主屏上点触并选择**设置** > **位置和安全** > **设置屏幕锁定** > **图案**。按照屏上指南指示，绘制屏幕解锁图样。选择“继续”进入下一个屏幕。打开一组屏幕，它们可指导您绘制制屏幕解锁图样。

注意：先创建 Gmail 帐户，再设置解锁图样。



警告

使用图样锁定时**的预防措施**。

请务必记住您设置的解锁图样。如果有 5 次使用不正确的图样，您将无法访问您的手机。您有 5 次机会输入解锁图样、PIN 或密码。如果您用完 5 次机会，需等待 30 秒方可再次尝试。

在无法调用解锁图样时：

如果您在手机上登录 Google 帐户并尝试输入正确图样 5 次均失败，请轻触“忘记图样”按钮。随后，您需要使用 Google 帐户登录才能将手机解锁。

如果未在手机上创建

Google 帐户或者忘记了该帐户，则需要执行恢复出厂设置。

注意：如果执行硬重置，所有用户应用程序和用户数据都将被删除。在执行硬重置之前，记得备份任何重要数据。

5. 使用硬重置

如果未恢复到原始条件，请使用硬重置初始化手机。

当手机关机时，同时按住**主屏幕键 + 音量调低键 + 电源键 10 秒钟以上**。当屏幕显示 LG 徽标时，释放**电源键**。

重要注意事项

在屏幕显示硬重置屏幕后，释放其他按键。

执行硬重置时请至少在 1 分钟内不要执行任何操作，随后，手机会开机。

注意：如果执行硬重置，所有用户应用程序和用户数据都将被删除。此操作无法撤消。在执行硬重置之前，记得备份任何重要数据。

6. 连接 Wi-Fi 网络

要在手机上使用 Wi-Fi，您可以访问无线接入点或“热点”。一些接入点已打开，您只需连接即可。其他接入点处于隐藏状态或使用安全功能，因此您必须配置手机才能进行连接。

禁用不使用的 Wi-Fi，以延长电池使用寿命。

打开 Wi-Fi 并连接 Wi-Fi 网络

- 1** 在主屏中，点触**应用程序选项卡**，然后选择**设置 > 无线和网络 > WLAN 设置**。
- 2** 点触 **WLAN** 将其打开，开始扫描可用的 Wi-Fi 网络。
 - 将显示可用的 Wi-Fi 网络列表。锁图标表示受到安全保护的网络。
- 3** 点触某个网络进行连接。
 - 如果网络已打开，系统会要求您点触**连接**确认连接到该网络。
 - 如果网络安全，系统会要求您输入密码或其他凭证。（请咨询网络管理人员获取详细信息）
- 4** 状态栏显示了可指明 Wi-Fi 状态的图标。

7. 使用 microSD 卡

图片以及音乐和视频文件只能保存到外部存储器。

使用内置相机之前，您需要先将 microSD 卡插入手机中。

未插入存储卡则无法拍照或拍摄视频。



警告

请勿在手机开机时插入或取出存储卡。这样做可能会损坏存储卡以及手机，并且存储卡上存储的数据也可能损坏。要安全取出存储卡，请在主屏中点触应用程序选项卡，然后选择设置 > 存储卡和手机内存 > 卸载SD卡。

8. 打开和切换应用程序

多任务可在 Android 中轻松实现，因为您可同时运行多个应用程序。打开其他应用程序之前无需退出当前应用程序。使用多个打开的应用程序，并在这些应用程序之间切换。Android 管理各个应用程序、根据需要停止和启动应用程序，从而确保闲置应用程序不会不必要地耗费资源。

停止应用程序

- 1 在主屏中，点触应用程序选项卡，然后选择设置 > 应用程序 > 管理应用程序。

- 2 滚动到所需应用程序，然后点触**强制停止**以停止该应用程序。

提示 返回到最近的应用程序按住主屏键。屏幕将显示您最近使用的应用程序列表。

重要注意事项

9. 在 PC 上安装 LG PC 套件

要通过 USB 数据线同步手机与 PC，您需要在 PC 上安装 LG PC 套件程序。

您可以从 LG 网站 (<http://www.lg.com>) 下载您的手机安装程式和使用资讯。您可参往下图示和依据网站指示下载适合您手机型号的软件并完成安装。

LG PC Suite IV 的主要功能


- 轻松创建、编辑和删除手机数据
- 从 PC 或手机同步数据（联系人、日历、信息（短信）、书签和通话记录）
- 通过简单的拖放操作在 PC 和手机之间轻松地传输多媒体文件（照片、视频和音乐）
- 将短信从手机传输到 PC
- 软件更新而不丢失任何数据

下載 LG 手机支援软件

1) 登入 www.lg.com，到支援，手机支援



2) 下載及安裝LG 手机支持软件

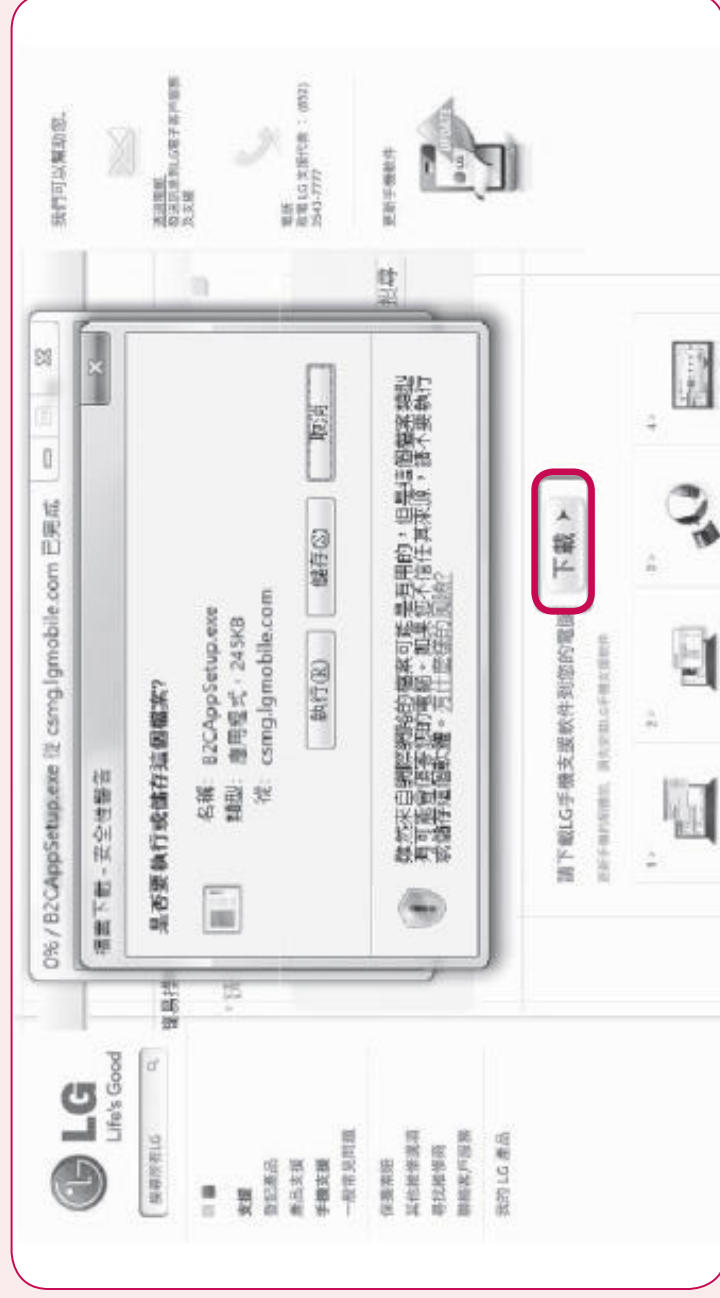

重要注意事项

3) 在下载相关手机支援软件后并执行以完成所下载的 LG PCSuite IV 文件，然后按说明执行操作。

* LG PC Suite IV 安装完成后，禁用大容量存储模式以运行 LG PC Suite IV。

10. 使用 USB 将手机连接到计算机

LG-P690 不支持:

- LG Air Sync (Web Sync、右键单击)
- OSP (On Screen Phone)
- 日历中的待办事项
- 备忘录
- Java 应用程序

安装 PC Suite IV 后, 您可以在“帮助”菜单中找到用户手册。

1 使用 USB 数据线将手机连接到计算机上的 USB 端口。连接后, 您将收到已建立 USB 连接的通知。

2 打开通知抽屉, 并点触 USB 已连接。

3 点触打开 USB 存储设备以确认要在手机的 microSD 卡和计算机之间传输文件。

当手机作为 USB 存储设备进行连接时, 您会收到通知。您手机的 microSD 卡已作为计算机的驱动器安装。现在, 您可以将文件复制到 microSD 卡, 也可以从 microSD 卡中复制文件。

备注: 卸载 PC Suite IV 时, 会自动删除 USB 和蓝牙驱动程序。您必须手动卸载它们。

提示 要再次在手机上使用 microSD 卡, 您需要打开通知抽屉, 然后点触**关闭 USB 存储设备**。

在此期间, 无法从手机访问 microSD 卡, 因此也不能使用依赖 microSD 卡的应用程序 (如相机、图片库和音乐)。

要断开手机与计算机的连接, 请仔细按照计算机的说明正确地断开 USB 设备的连接, 从而避免丢失卡上的信息。

重要注意事项

- 1 打开通知抽屉，并点触关闭 USB 存储设备。
- 2 安全地断开电脑上的 USB 设备。

11. 使用数据连接时解锁屏幕

使用数据连接时，如果您一段时间内未触摸屏幕，则屏幕将变黑。要打开 LCD 屏幕，点触即可。

12. 向上握持手机

请将手机向普通电话一样向上握持。LG-P690 具有内置天线。请注意不要刮伤或损坏手机背面，否则会导致性能损失。

拨打/接听电话或发送/接收数据时，避免握持天线所处的手机下部。这样做可能会影响通话质量。

13. 屏幕冻结时

如果屏幕冻结或您尝试操作时手机无响应：

卸下电池，将它重新插入，然后打开手机。如果这仍不起作用，请联系服务中心。

14. 不要在 PC 开机/关机时连接手机。

确保断开手机和 PC 之间的数据线；保持连接可能会导致 PC 出错。

开始了解您的手机

要将手机开机，请按住电源键 3 秒。

要将手机关闭，请按住电源键 3 秒，然后依次点触关机和确定。

扬声器

近程传感器

电源/锁定键

按住此键可开/关机。

关闭并锁定屏幕。

主屏键

从任何屏幕返回主屏。

返回键


返回上一个屏幕。

菜单键

检查可用的选项。

搜索键

在手机中搜索网络和内容。

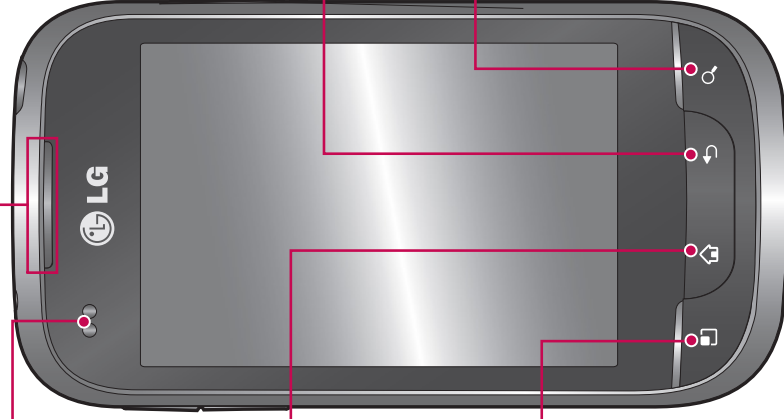


备注：近程传感器

接听及拨打电话时，若手机位于耳旁，一旦感应到物体，此传感器将自动关闭背景灯并锁定轻触式键盘。这样有助于延长电池寿命，并避免键盘在通话期间无意激活。

警告


在手机上放置重物或坐在手机上可能会损坏手机的 LCD 屏幕及触摸屏的功能。不要在 LCD 的进程传感器上使用保护膜。这可能会影响传感器的感应度。

开始了解您的手机

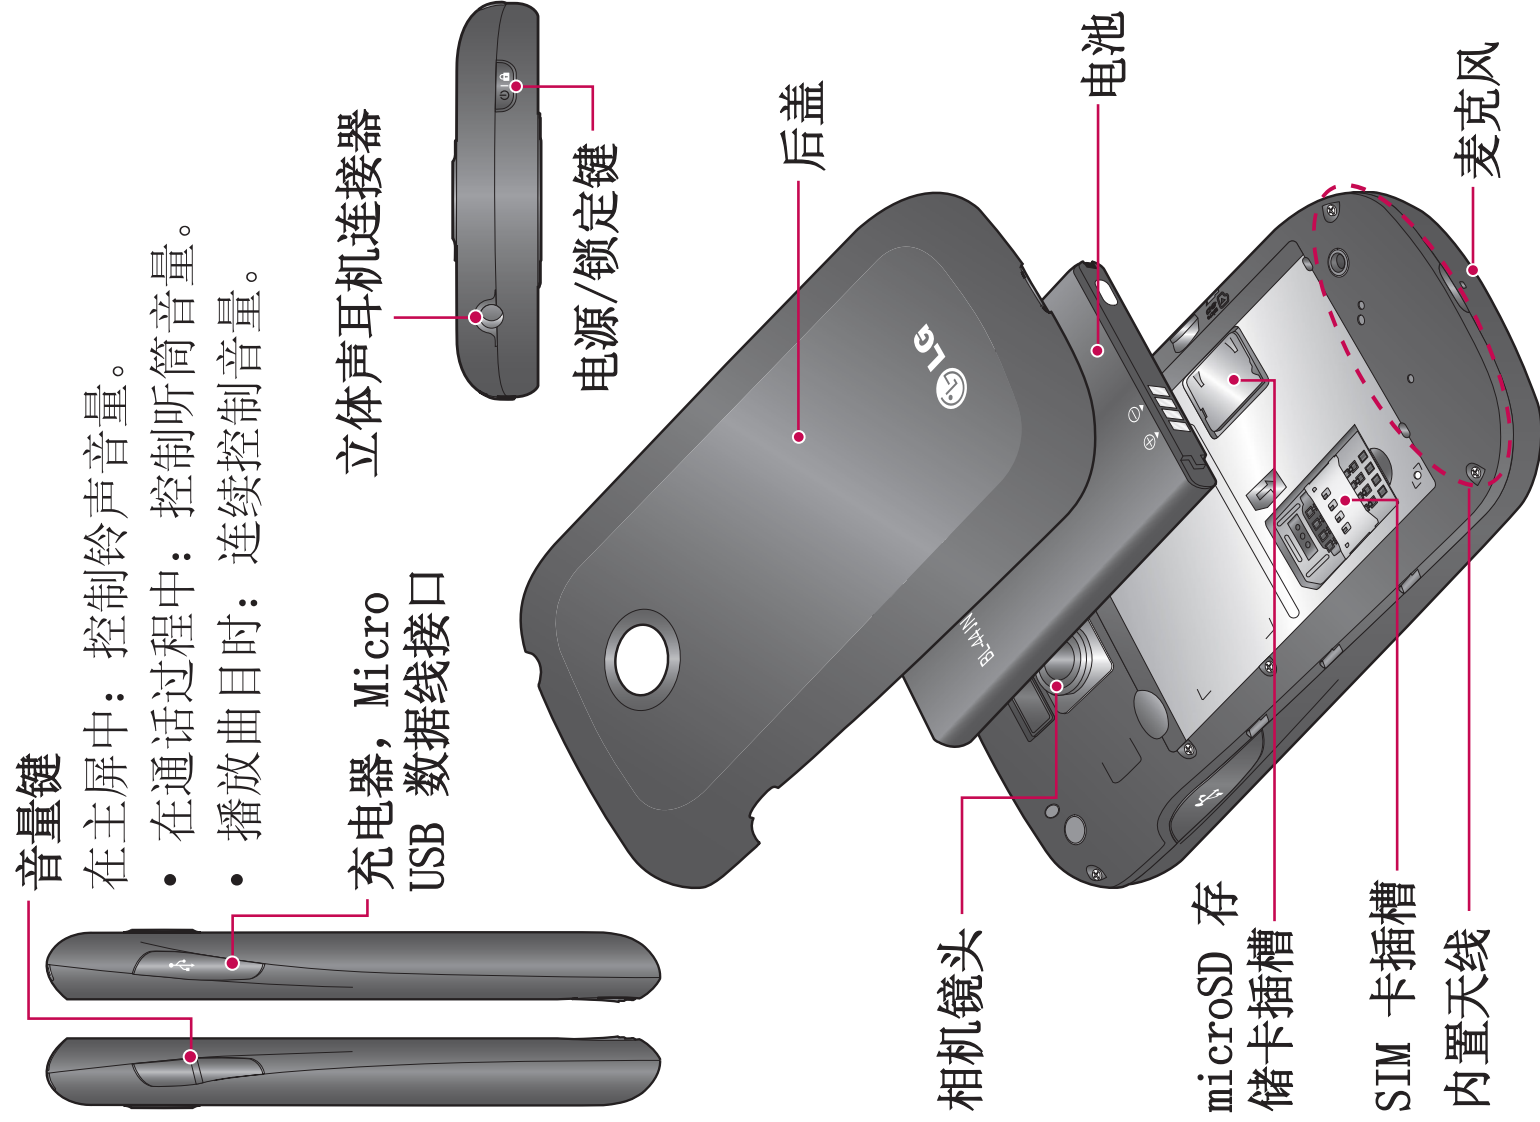


安装 SIM 卡和电池

1 要卸下后盖，请用手抓紧手机。用另一只手的拇指用力按后盖。现在，卸下电池盖。

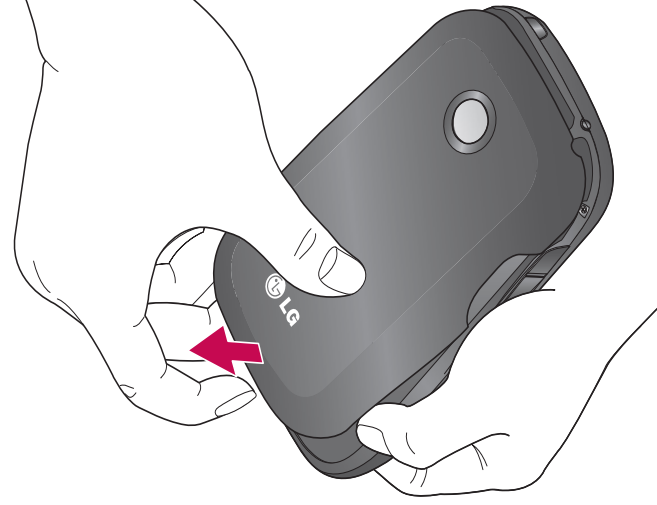

2 将 SIM 卡滑进 SIM 卡插槽中。确保卡的金色接触区域面朝下。

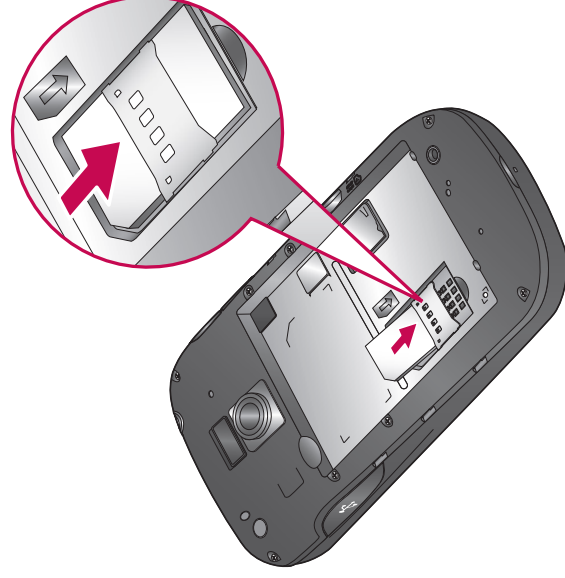

3 对齐手机和电池上的金色接触区域以插入电池。




4 盖上手机的后盖。

开始了解您的手机



充电

滑开侧面的充电器连接器盖。插入充电器，然后插入电流插座。必须为 LG-P690 充电，直至看到 .

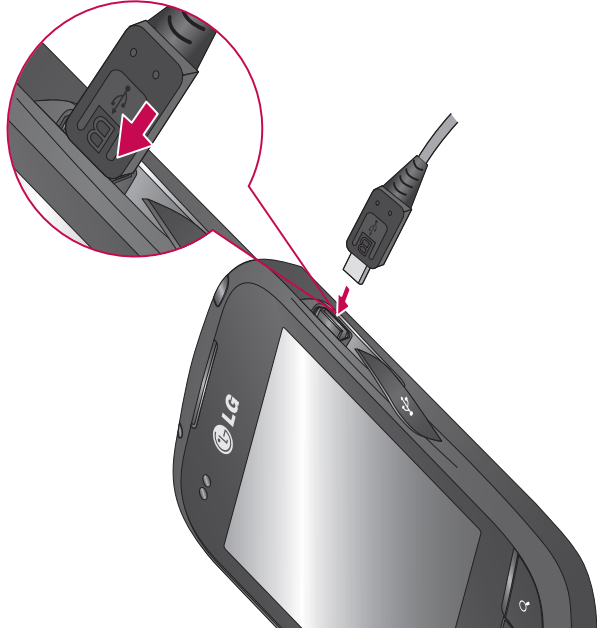


备注：第一次充电时必须为电池完全充电，这样可以延长电池使用寿命。

安装存储卡


要存储更多媒体文件（如使用内置相机拍摄的图像），您必须将存储卡插入手机中。

插入存储卡：

1 卸下后盖。

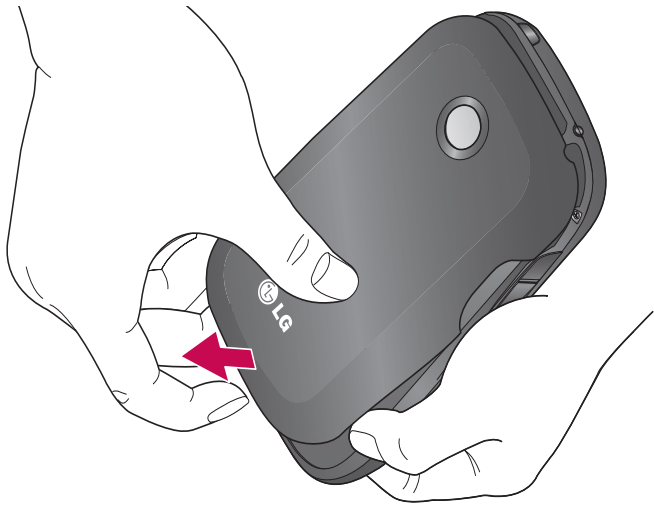

- 2 将存储卡插入插槽。确保金色接触区域面朝下。

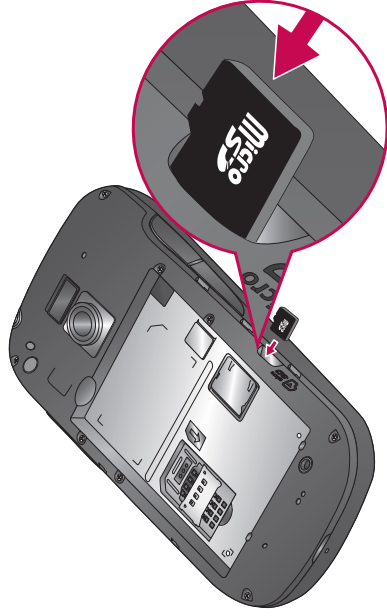

警告

请勿在手机开机时插入或取出存储卡。这样做可能会损坏存储卡以及手机，并且存储卡上存储的数据也可能损坏。

格式化存储卡

如果已格式化存储卡，您可以开始使用。如果没有，您必须先对其进行格式化才能使用。

备注：格式化卡时，卡上的所有文件将被删除。

- 1 在主屏中，点触应用程序选项卡以打开应用程序菜单。

- 2 滚动并点触设置 > 存储卡和手机内存。

- 3 点触卸载SD卡。

- 4 点触格式化 SD 卡，然后确认选择。

- 5 如果设置了图样锁定，请输入图样锁定，然后选择清除所有内容。存储卡完成格式化，现在，您可以使用了。

备注：如果存储卡中包含内容，由于格式化后将删除所有文件，所以文件夹结构会有所不同。

主屏

触摸屏提示

以下是关于如何浏览手机的一些提示。

点触 - 要选择菜单/选项或打开应用程序，请点触它。

点触并按住 - 要打开选项菜单或选中要移动的对象，请点触并按住它。

拖动 - 要滚动浏览列表或慢慢移动，请在触摸屏上拖动。

轻弹 - 要滚动浏览列表或快速移动，请在触摸屏上轻弹（快速拖动然后释放）。

备注：

- 要选择项目，请点触图标中心位置。
- 无需大力按，触摸屏非常敏感，仅需点触即可。

- 使用指尖点触所需选项。请注意不要触碰到其他键。

锁定手机

不使用 LG-P690 时，按电源键可锁定手机。这有助于防止意外按键和节省电量。

此外，如果一段时间不使用手机，主屏或者您正在查看的其他屏幕将替换为锁定屏幕以节省电池电量。

如果在您设置图像时有任何程序在运行，则它们仍可在锁定模式中运行。建议在进入锁定模式前退出所有程序以避免不必要的费用（例如，打电话、Web 访问和数据通信）。

设置解锁图像：您可以通过连接的点来绘制自己的解锁图案。如果设置了图像，则手机的屏幕被锁定。要将


手机解锁，请在屏幕上绘制您设置的图样。

注意：设置解锁图样时，需要先创建 Gmail 帐户。

注意：如果一行中有不止 5 个图样绘制错误，则无法将手机解锁。这种情况下，您的个人信息和下载的数据将被删除。

解锁屏幕

LG-P690 未使用时，将返回锁定屏幕。从下到上移动手指以解除屏幕锁定。

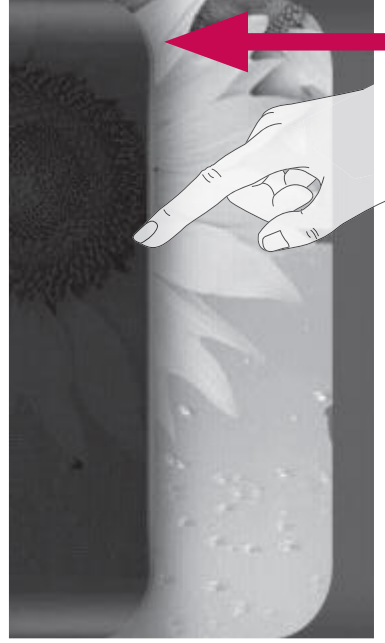

静音模式

从通知抽屉中，点触，点触，以使

主屏

向左或向右轻轻滑动手指以查看面板。您可以使用小工具、快捷方式（用于您喜爱的应用程序）、文件夹和墙纸自定义每个面板。

备注：一些屏幕图像可能因手机提供商而不同。

在主屏中，您可以查看屏幕底部的快速键。通过快速键，您点触一次即可轻松进入经常使用的功能。

 点触手机图标可打开触摸屏拨号键盘，以拨打电话。

 点触联系人图标可打开电话本。

 点触信息图标可访问信息菜单。您可以在此处创建新信息。

 点触屏幕底部的应用程序选项卡。然后，您可以查看安装的所有应用程序。

主屏

要打开所需应用程序，从应用程序列表中点触相应图标即可。

备注：根据手机软件或服务提供商的不同，预加载的应用程序将有所不同。

将小工具添加到主屏

您可以通过将快捷方式、小工具或文件夹添加到主屏来自定义主屏。为更方便地使用手机，请在主屏上添加您喜爱的小工具。

- 1 在主屏中，按**菜单键**，选择**添加**。或点触并按住主屏的空白部分。
- 2 在**编辑模式**菜单上，点出您要添加的项目类型。
- 3 例如，从列表中选择**文件夹**并轻触它。
- 4 接着，您将在主屏上看到新文件夹的图标。将其拖动到所需面板的所需位置，然后在屏幕上松开手指。

提示 要将应用程序图标添加到主屏，请在**应用程序菜单**上点触并按住要添加到主屏的应用程序。

提示 要从主屏上删除应用程序图标，请点触并按住要删除的图标，然后将其拖到.



备注：您无法删除预加载的应用程序。（只可以从屏幕上删除其图标）

返回到最近使用的应用程序

- 1 点触并按住**主屏键**。屏幕将显示一个弹出窗口，其中列出了您最近使用的应用程序图标。
- 2 点触某个图标以打开其应用程序。或者，点触**返回键**以返回到当前应用程序。

通知抽屉

通知抽屉在屏幕顶部运行。

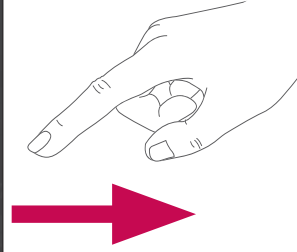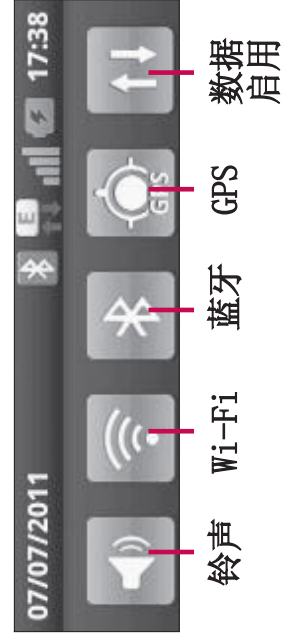

请使用手指点触并滑动通知抽屉。

或者，在主屏中按**菜单键**，然后选择**通知**。您可以在此处检查和管理声音、Wi-Fi、蓝牙和 GPS 以及其他通知。

查看状态栏

状态栏使用不同的按钮显示手机信息，例如信号强度、新信息、电池使用寿命以及活动的蓝牙和数据连接。

下表说明了您可能在状态栏中看到的不同图标的涵义。



[状态栏]

图标	描述
	无 SIM 卡
	无信号
	飞行模式
	已连接到 Wi-Fi 网络
	有线耳机
	正在通话
	呼叫保持

主屏

图标	描述
	扬声器
	手机麦克风静音
	未接来电
	蓝牙开启
	已连接到蓝牙设备
	系统警告
	已设置闹钟
	新语音邮件
	铃声静音
	振动模式
	电池已充满电
	电池正在充电
	数据传进和传出
	手机已通过 USB 数据线 与 PC 连接

图标	描述
	正在下载数据
	正在上传数据
	GPS 正在采集
	正在从 GPS 接收位置数据
	屏幕手机已连接
	还有 3 个通知未显示
	数据正在同步
	下载完成
	新 Gmail
	新 Talk 信息
	新信息
	正在播放歌曲
	近期事件

图标	描述
	在后台打开 FM 收音机
	SmartShare 开关
	SmartShare 共享请求
	USB 绑定已激活
	便携式 WLAN 热点已激活
	USB 绑定和便携式热点均已激活

屏上键盘

您可以使用屏上键盘输入文本。屏上键盘在您需要输入文本时自动在屏幕上显示。要手动显示键盘，只需点击触要输入文本的文本字段。

使用键盘并输入文本

 轻触一次以使键入的下一字母变为大写字母。轻触两次表示全部为大写字母。

 轻触以切换为数字和符号键盘。您也可以点触并按住此选项卡以查看“设置”菜单。

 轻触以查看，或按住以更改编写语言。

 轻触以输入空格。

 轻触以在信息字段新建一行。

主屏



轻触以删除上一字符。



轻触以隐藏屏上键盘。

输入带注音的字母

当选择法语或西班牙语作为文本输入语言时，您可以输入特殊的法语或西班牙语字符（如“á”）。

例如，要输入“á”，请点触并按住“a”键，直到放大键变大并显示其他语言的字符。然后，选择所需特殊字符。

Google 帐户设置

首次手机上打开 Google 应用程序时，您需要使用现有 Google 帐户登录。如果您没有 Google 帐户，则系统会要求您创建一个。

创建 Google 帐户

- 1 在主屏中，点触应用程序选项卡  以打开应用程序菜单。
- 2 轻触 Gmail，然后轻触下一步 > 创建，以启动 Gmail™ 设置向导。
- 3 输入您的姓名和您 Google 帐户的用户名。
- 4 轻触下一步。您的手机现在正与 Google 服务器通信，正在检查用户名可用性。
- 5 输入并重新输入您的密码。按照说明输入有关帐户的必需和可选信息。服务器正在创建您的帐户，请稍候。

登录 Google 帐户

- 1 输入您的电子邮件地址和密码，然后轻触登录。系统正在登录，请稍候。
- 2 登录后，您可在手机上使用 Gmail™ 收发邮件和利用 Google 服务。
- 3 一旦在手机上设置了 Google 帐户，您的手机将自动与网络上的 Google 帐户同步。（具体取决于您的同步设置）登录后，您可在手机上其他 Google 服务。

Google 帐户设置

重要！

- 诸如日历等一些应用程序只适用于您添加的第一个 Google 帐户。如果您计划手机使用不止一个 Google 帐户，请确保登录到您想先使用此类应用程序的帐户。登录后，您的电话本、Gmail 信息、日历事件和来自网络上这些应用程序和服务的其他信息将与您的手机同步。如果在安装期间未登录 Google 帐户，则在首次启动需要 Google 帐户的应用程序（如 Gmail 或 Android Market™）时会要求您登录或创建一个 Google 帐户。

- 如果您拥有公司或其他组织的企业帐户，则 IT 部门可能具有关于如何登录该帐户的特殊说明。

通话

拨打电话

- 1 点触  以打开键盘。
- 2 使用键盘输入号码。要删除一个数字，请点触清除按钮。
- 3 点触 **呼叫图标**  以拨打电话。
- 4 要结束通话，请点触 **结束图标** .

提示 要输入“+”以拨打国际电话，请点触并按住 **[0+]**。

呼叫联系人

- 1 点触  可以打开电话本。
- 2 滚动浏览联系人列表，或点触 **搜索** 输入您要呼叫的联系人的首字母。
- 3 在列表中，点触您要呼叫的联系人。

接听和拒绝电话

当手机响铃时，点触 **接听图标** 。

点触 **拒绝图标**  以拒接来电。

如果要发送 **借口信息**，请从底部拖动借口信息栏。

调节音量

要在通话期间调节通话音量，请使用手机左侧的音量调高和调低键。

拨打第二个电话

- 1 在第一个通话过程中，按 **菜单键**，然后点触 。
- 2 拨号或在电话本中搜索。
- 3 点触 **呼叫图标**  以连接通话。
- 4 此时呼叫屏幕上显示两个呼叫。初始呼叫被锁定，通话方进入保持状态。

通话

5 点触显示的数字可在不同的通话间切换。或点触  合并通话进行多方通话。

6 要结束当前通话，点触结束，或向下滑动通知栏，然后选择**挂断通话**。

备注：您可能需要对每通电话付费。

查看通话记录

在主屏上，点触  并选择**通话记录**选项卡。

查看所有已拨电话、已接来电和未接语音电话的完整列表。

提示 点触任意通话记录条目，以查看通话日期、时间和时长。

提示 按**菜单**键，然后点触**全部删除**以删除所有记录条目。

通话设置

您可以配置通话设置（例如呼叫转移）以及运营商提供的其他特殊功能。

- 1** 在主屏中，点触**应用程序**选项卡以打开应用程序菜单。
- 2** 滚动并点触**设置**。
- 3** 轻触**通话设置**，然后选择要调整的选项。

联系人

在手机上添加联系人，并将其与 Google 帐户或其他支持联系人同步的帐户中的联系人同步。

搜索联系人

在主屏中

- 1 点触  可以打开电话本。
- 2 点触**搜索**，使用键盘输入联系人姓名。

添加新联系人

- 1 点触 ，输入新联系人的号码，然后按**菜单**键。点触**添加至联系人**，然后点触**新建联系人**。
- 2 如果您要为新联系人添加图片，请点触 。从**拍摄照片**“从图片库中选取”中选择。
- 3 点触  以选择联系人类型。
- 4 点触联系人信息类别，并输入有关联系人的详细信息。

- 5 点触**保存**。

收藏夹联系人

您可以按收藏夹归类经常呼叫的联系人。

将联系人添加到收藏夹

- 1 点触  可以打开电话本。
 - 2 点触联系人以查看其详细信息。
 - 3 点触联系人姓名右侧的星号。星号变为金色。
- ### 从收藏夹列表中删除联系人
- 1 点触  可以打开电话本。
 - 2 点触“**群组**”选项卡，选择列表顶部的“**收藏**”，然后选择要查看其详细信息的联系人。
 - 3 点触联系人姓名右侧的蓝色星号。星号变为灰色，联系人已从收藏夹中删除。

信息/电子邮件

信息

LG-P690 将短信和彩信结合到一个直观易使用的菜单中。

发送信息

1 点触  图标，然后点触写信息。

2 在收件人字段中输入联系人姓名或电话号码。随着您输入联系人姓名，匹配的联系人将会显示。您点触建议的收件人。您可以添加多个联系人。

备注：您将按每个收件人每条文本信息付费。

3 点触写短信开始撰写信息。

提示 您可以点触  图标以向信息附加文件。

4 点触发送信息。

5 屏幕上会显示回复。当您查看并发送附加信息时，将创建信息会话。



警告

160 个字符的限制在不同国家/地区有所不同，具体取决于语言和短信编码方式。



警告

如果在短信中添加图像、视频或音频文件，则短信将自动转换为彩信，您需要支付相应费用。

备注：在通话期间收到短信时，将收到一则通知。

提示 按菜单键打开“选项”菜单。从通话、添加主题、取消、附加和插入表情符号，所有信息中选择。

更改信息设置

LG-P690 已预定义信息设置，因此您可以立即发送信息。 您可以根据喜好更改设置。

在主屏上点触**信息**图标，然后按**菜单**键，再轻触**设置**。

设置电子邮件

点触**应用程序**选项卡，然后选择**电子邮件**。 如果尚未设置电子邮件帐户，则需要启动电子邮件设置向导。

提示 如果已设置电子邮件帐户，则不会激活向导。

您可以在 **Microsoft Exchange** 和其他中选择邮箱类型。

Microsoft Exchange 电子邮件帐户

电子邮件地址 - 输入电子邮件地址。

密码 - 输入帐户密码。

域名/用户名 - 输入帐户用户名。

服务器 - 输入电子邮件服务器地址。

采用安全连接 (SSL)

- 选择是否使用适用于 Microsoft Exchange 的 SSL 并接受所有所有 SSL 证书。

同步联系人 - 选择是否同步 Microsoft Exchange 帐户联系人。

同步日历 - 选择是否同步 Microsoft Exchange 帐户日历。

点触**下一步**按钮以连接到服务器。

信息/电子邮件

此时将出现设置完成屏幕，您需要输入帐户的“名称”和您的姓名。

现在，帐户将显示在帐户列表中。

其他 (POP3、IMAP、GME) 电子邮件帐户

电子邮件地址 - 输入电子邮件地址。

密码 - 输入帐户密码。

此时将出现设置完成屏幕，您需要输入“名称”。

现在，帐户将显示在帐户列表中。

接收服务器 - 输入接收邮件服务器的地址。

端口 - 显示每个帐户的默认端口号。

安全类型 - 从 TLS、SSL 和“关”中选择。

发送服务器 - 输入发件服务器的地址。

端口 - 显示每个帐户的默认端口号。

安全类型 - 从 TLS、SSL 和“关”中选择。

帐户屏幕

帐户屏幕列出了您的合并的收件箱以及您的每个电子邮件帐户。

点触应用程序选项卡，然后选择电子邮件。此时将出现帐户列表屏幕。

您可以点触帐户以查看其收件箱。您用于发送电子邮件的默认帐户将以勾选符号表示。

撰写和发送电子邮件

要撰写和发送邮件：

- 1** 在电子邮件应用程序中，按**菜单**键，然后点触**新建**。
- 2** 输入邮件收件人的地址。输入文本时，会建议联系人列表中与所述内容匹配的地址。用逗号分隔多个地址。
- 3** 按**菜单**键和**添加抄送/密送地址**，以抄送或密送给其他联系人/电子邮件地址。
- 4** 输入邮件正文的文本。
- 5** 点触**附加**，向信息附件文件。
- 6** 点**按发送**。如果暂不发送邮件，请依次按**菜单**键和**保存至草稿箱**，以将其保存在**草稿箱**文件夹中。草稿邮件，以继续编辑邮件。如果在发送前点触

了**返回**键，您的邮件也会另存为草稿。点触**取消**以舍弃或删除邮件，包括任何已保存的草稿。如果未连接至网络，例如如果您以飞行模式工作，您发送的邮件将存储到您的**发件箱**文件夹中，直到重新连接至网络。如果包括任何未发送的邮件，**发件箱**会显示在帐户屏幕上。

请注意，使用 Exchange 帐户发送的邮件不会保存在手机上；它们保存在 Exchange 服务器上。

如果要查看**已发送**文件夹中（或带**已发送**标签）的已发送邮件，通常需要打开**已发送**文件夹/标签并从“**选择**”菜单选择**刷新**。

信息/电子邮件

提示 当新电子邮件到达“收件箱”时，您将通过声音或振动收到通知。轻触电子邮件通知可停止通知。

使用帐户文件夹

每个帐户均具有收件箱、发件箱、已发送和草稿箱文件夹。取决于您帐户的服务提供商支持的功能，您可能具有其他文件夹。

添加或编辑电子邮件帐户

添加电子邮件帐户

1 点触应用程序选项卡，然后选择电子邮件。

2 选择 Microsoft Exchange 或其他。

3 输入添加帐户所需的消息。（请参阅“设置电子邮件”。）

4 输入姓名，设置您希望您的姓名在外发邮件中显示的方式，然后点触完成。

更改帐户设置

1 打开帐户屏幕。

2 点触并按住您要更改的帐户。在打开的菜单中，点触帐户设置。

删除电子邮件帐户

1 打开帐户屏幕。

2 点触并按住您要删除的帐户。

3 点触打开菜单中的删除帐户，然后点触对话框中的 OK 确认删除。

照相机

了解取景器

亮度 - 此选项定义并控制进入图像的光量。沿滚动条滑动亮度指示器，“-”降低图像亮度，“+”调高图像亮度。

缩放 - 放大或缩小。或者，您可以使用侧音量键。



视频模式 - 向下滑动此图标可切换到视频模式。

拍照

我的文档 - 点触以查看最近拍摄的照片。您可以访问“我的文档”并查看相机模式下保存的照片。

设置 - 点触此图标可以打开“设置”菜单。请参阅“使用高级设置”。

图像大小 - 点触可设置所拍照片的尺寸（以像素为单位）。

场景模式 - 从以下选项中选择：自动、人物、风景、运动、夜间和日落。

提示 关闭所有快捷键选项，使取景器屏幕看起来干净利落。点触一次取景器中心即可。要显示选项，请再次点触屏幕。

照相机

快速拍照

- 1 打开**照相机**应用程序。
- 2 水平拿稳手机，并将镜头对准您要拍摄的物体。
- 3 在取景器屏幕中间位置有一个对焦框开始闪动，这是对对焦框在尝试对物体进行对焦。
- 4 对好焦后，对话框变为绿色。
- 5 按下拍摄按钮。无论对焦框是否为绿色，您都可以按下拍摄按钮。
- 6 按下拍摄  按钮。

拍照后

拍摄的照片将显示在屏幕上。

分享

点触可以使用 SmartShare、蓝牙、电子邮件、Gmail、信息、Picasa 或 社会共享照片。

备注：漫游时如果下载了彩信，可能会额外收费。

提示

如果有 SNS 帐户并在手机上设置了该帐户，您可以向 SNS 社区共享您的照片。

设置为

点触以将图像用作**联系人图像**或**壁纸**。

重命名

点触以编辑选定图片的名称。



点触可以删除图像。



点触可以立即拍摄其他照片。这将保存您的当前照片。



点触可以查看保存的图像库。

使用高级设置



在取景器中点触  以打开所有高级选项。

通过滚动列表，更改相机设置。选择选项后，点触返回键。

ISO - ISO 确定相机的光照传感器的感光性。ISO 越高，相机感光性能越好。

在您无法使用闪光灯而光线较差的条件下，此功能很有用。选择 ISO 值：自动、400、200 和 100。

白平衡 - 从以下选项中选择：自动、白炽灯、日光、荧光灯和阴天。
色彩效果 - 选择新照片的色彩效果。

计时器 - 自拍器允许您设置按下拍摄按钮后的延迟。从关、3 秒、5 秒或 10

秒。如果要为自己拍摄照片，此功能理想之选。

图像质量 - 从**最细致**、**细致**和**正常**中选择。质量越精细，照片越清晰。但是，同时文件更大，这意味着着手机内存可保存的照片数更少。

自动查看 - 如果将“**自动查看**”设置为开启，它将自动向您显示刚刚拍摄的照片。

快门声音 - 从四种快门声音中选择一种。

标签位置 - 激活以使用手机基于位置的服务。拍照并添加所在位置以对其进行标记。如果将标记过的图片上传到支持相片定位功能的的博客，您可以在地图上看到此照片。

照相机

备注：此功能仅在激活了 GPS 时可用。

 - 恢复所有相机默认设置。

 - 无论您何时想要了解此功能如何操作，均可点触该选项。这将为您提供快速指南。

提示 退出相机时，部分设置将返回默认值，如白平衡、色彩效果、计时器和场景模式。拍摄下一张照片之前，请先查看。

提示 设置菜单层叠在取景器之上，因此，当您更改图像颜色或质量时，您将在设置菜单下预览到图像更改效果。

查看保存的照片

在相机模式下访问保存的照片。点触  即可，然后点触屏幕。随后，您将看到幻灯片和菜单。

提示 向左或向右轻弹以查看其他照片或视频。



- 点触可查看幻灯片。
- 点触可共享内容或删除照片。点触更多可获得更多选项。

详细信息 - 检查内容相关信息。

设置为 - 设置为联系人图标或墙纸。

剪切 - 裁切照片。使用手指移过屏幕以选定区域。

向左旋转/向右旋转
- 向左或向右旋转。

摄像机

了解取景器

亮度 - 此选项定义并控制进入视频的光量。沿滚动条滑动亮度指示器，“-”降低视频亮度，“+”调高视频亮度。

缩放 - 放大或缩小。或者，您可以使用侧音量键。



相机模式 - 向上滑动此图标以切换到相机模式。

开始录制

我的文档 - 点触以查看最近录制的视频。您可以访问“我的文档”并查看摄像机模式下保存的视频。

设置 - 点触此图标可以打开“设置”菜单。请参阅“使用高级设置”。

长度 - 设置视频的长度限制。从标准和彩信中选择，以限制彩信最大大小。

视频大小 - 点触可设置录制的视频的大小（以像素为单位）。

摄像机

快速摄像

- 1 向下滑动**照相机**模式按钮，图标将更改为 。
- 2 屏幕上将显示摄像机的取景器。
- 3 水平拿稳手机，将镜头对准您要摄像的物体。
- 4 点触录制  按钮一次以开始录制。
- 5 录制将显示在取景器底部，计时器将显示视频长度。
- 6 点触屏幕上的  停止录制。

拍摄视频后

屏幕上将显示所拍摄视频的静态图像。

播放

点触以播放视频。

分享

点触可以通过 SmartShare、蓝牙、电子邮件、Gmail、信息或 YouTube 共享视频。

备注：漫游时如果下载了彩信，可能会额外收费。

重命名

点触以编辑选定视频的名称。



点触可以立即拍摄另一段视频。这将保存您的当前视频。



点触可删除刚刚拍摄的视频。点触**确定**确认。取景器将重新出现。



点触可查看您保存的视频的图片库。

使用高级设置

从取景器中点触  以打开所有高级选项。滚动列表以调节摄像机设置。选择选项后，点触**返回**键。

白平衡 - 白平衡确保视频中的任何白色区域显示真实。要正确调整相机的白平衡，您需要确定光照条件。从**自动**、**白炽灯**、**日光**、**荧光灯**或**阴天**中选择。**色彩效果** - 选择要对新视图使用的色彩效果。**视频质量** - 从**最细致**，**细致**和**正常**中选择。

语音 - 选择**静音**以录制视频而不录制声音。

自动查看 - 自动查看将向您显示刚刚录制的视频。

 - 恢复所有摄像机默认设置。

 - 如果要了解此功能如何操作，请点触该选项。这将为您提供快速指南。

观看保存的视频

- 1 在取景器中，点触 .
- 2 您的图片库将显示在屏幕上。
- 3 点触视频一次，将其调到“我的文档”前方。它自动开始播放。

观看视频时调节音量

要在播放视频时调节音量，请使用手机左侧的音量键。

多媒体

您可以将多媒体文件保存在存储卡中，以便轻松访问所有图像和视频文件。

点触**应用程序**选项卡，然后选择**图片库**。打开存储所有多媒体文件的目录栏列表。

备注：请确保在手机上安装一个存储卡，以便保存照片和访问您的所有图片。如果没有存储卡，手机不会显示任何照片或视频，并且您的 Picasa 相册中也不会有任何 Picasa 图像。

视图模式

点触**图片库**。此时将显示文件夹视图。

点触任何文件夹都将返回网格视图模式。如果轻触照片，它将更改为完整视图模式。

时间线视图

LG-P690 图片库提供了照片和视频的时间线视图。在网格视图模式中，向右拖动



将显示您拍摄的照片的日期，其中从最新的照片开始。如果选择特定日期，在该日拍摄的所有照片将分组显示。

使用 SmartShare

SmartShare 为您提供了一种与其他启用了 DLNA（数字生活网络联盟）的设备共享多媒体内容的更好方法。

*** 与其他 DLNA 设备 (DMS) 共享您的媒体内容**

1 在主屏上点触**应用程序**选项卡，然后选择 SmartShare。

2 按**菜单**键，然后选择**设置**。

3 点触 Discoverable 勾选框以打开。

4 您可以更改设备名称，单击图标并选择共享内容类型。

*** 允许您的图像生成设备（如 TV）播放来自远程内容库（如 PC）的多媒体内容**

1 点触右上角的按钮，从图像生成设备列表中选择设备。

2 点触右上角的按钮，选择一个远程内容库。

3 您可以浏览远程内容库。

4 点触内容缩略图或按菜单键，然后选择“播放”按钮。

注意：要使用此应用程序，请检查您的设备已通过 Wi-Fi 连接到主网络。

注意：部分启用了 DLNA 的设备（如 TV）仅支持 DLNA 的 DMP 功能，将不会显示在图像生成设备列表中。

音乐

LG-P690 拥有内置的音乐播放器，因此，您可以播放所有喜爱的曲目。要访问音乐播放器，请在主屏上点触“应用程序”选项卡，然后选择音乐。

播放歌曲

1 在主屏中点触应用程序选项卡，然后选择音乐。

2 点触歌曲。

3 选择您要播放的歌曲。

4 点触  以暂停歌曲。

5 点触  以跳到下一首歌曲。

6 点触  以返回到歌曲的开头。点触  两次以返回到上一首歌曲。

要在聆听音乐时更改音量，请按手机左侧的上下音量键。

点触并按住列表中的任何歌曲。它将显示**播放、添加**

多媒体

到播放列表、用作手机铃声、删除、详细信息、分享和搜索选项。

备注：音乐文件的版权可能受国际条约和国家版权法保护。因此，可能需要获得许可或许可证才能复制音乐。在某些国家，国际法禁止私人复制版权所有的材料。在下载或复制文件之前，请检查相应国家/地区关于使用此类材料的国家/地区立法。

使用 USB 大容量存储设备传输文件

使用 USB 设备传输文件

- 1 使用 USB 数据线将 LG-P690 连接到 PC。
- 2 如果您未在 PC 上安装 LG Android 平台驱动程序，则需要手动更改设置。选择设置 > 存储卡和手机内存，然后选择仅大容量存储。
- 3 点触打开 USB 存储设备。

- 4 您可以在 PC 中查看大容量存储内容，然后传输文件。

备注：您需要首先安装 SD 卡。没有 SD 卡，您不能使用 USB 大容量存储。

注意：如果安装了 LG Android 平台驱动程序，将立即看到含“打开 USB 存储设备”的弹出窗口。

如何将音乐/视频文件保存到手机

- 1 使用 USB 数据线将手机连接到 PC。在屏幕中，点触并向下拖动状态栏。选择 USB 已连接 > 打开 USB 存储设备。打开文件夹以查看 PC 中的文件。如果未在电脑上安装 LG Android 平台驱动程序，则需要手动设置它。有关详情，请参阅“使用 USB 大容量存储设备传输文件”。

2 将音乐或视频文件从 PC 保存到手机的可移动存储设备。

- 您可以使用读卡器将文件从 PC 复制或移到手机的可移动存储设备。
- 如果存在视频文件和子标题文件（名称与视频文件相同的 *.srt 文件），请将它放在同一文件夹中，以便在播放视频文件时自动显示子标题。
- 下载音乐或视频文件时，必须保护版权。请注意，损坏的文件或带有错误扩展名的文件可能会损坏手机。

将旧手机上的电话本移至新手机

使用 PC 同步程序将联系人作为 CSV 文件从旧手机导出到 PC。

1 从 www.lg.com 下载 PC Suite IV，并将其安装在 PC 上。运行程序，并使用 USB 数据线将您的 Android 手机连接到电脑。

2 选择联系人图标。转到 **菜单 > 更多 > 导入/导出**，然后选择在 PC 中保存的 CSV 文件。

3 如果导入的 CSV 文件中的字段与 PC Suite IV 中的不同，则需要映射字段。在映射字段后，单击“确定”。随后，电话本将被添加到 PC Suite IV 中。

4 如果 PC Suite IV 检测到 LG-P690 手机的连接（使用 USB 数据线），请单击“同步”或“同步电话本”以将 PC 中保存的电话本与手机同步。

多媒体

使用蓝牙从手机发送数据

使用蓝牙发送数据 与大多数手机不同，您可以通过不从蓝牙菜单运行对应的应用程序，使用蓝牙发送数据。

* **发送图片：**运行“图片库”应用程序，然后选择**图片 > 菜单**。单击**分享**，然后选择**蓝牙**。检查蓝牙是否开启，然后选择**扫描查找设备**。从列表中選擇您要向其发送数据的设备。

* **导出电话本：**运行电话本应用程序。点触您要导出的地址。按**菜单**键，然后选择**分享 > 蓝牙**。检查蓝牙是否开启，然后选择**扫描查找设备**。从列表中选择您要向其发送数据的设备。

* **发送多个选定联系人：**运行电话本应用程序。要选择多个联系人，请按菜

单键，然后点触**分享 > 全选 > 分享 > 蓝牙**或电子邮件或Gmail或信息。

* **连接到 FTP（仅在此手机上支持 FTP 服务器）：**选择**设置 > 无线和网络 > 蓝牙**设置。选择**可检测性**框；现在，您可以从其他设备搜索您的手机。查找 FTP 服务，并连接到 FTP 服务器。

• 如果要从其他设备搜索此手机，请转到**设置 > 无线和网络 > 蓝牙**设置。选择**可检测性**框。120 秒后，该框将取消选定。

使用收音机

LG-P690 内置了 FM 收音机，因此您在路上也能转到喜爱的电台并收听无线广播。

备注：您必须连接耳机才能收听无线广播。将耳机插入耳机插孔。

搜索电台

您可以手动或自动微调收音机电台。它们将保存为特定频道编号，这样，您就不用再次查找。您可以在手机中最多保存 48 个频道。

自动微调

- 1 在主屏上点触应用程序选项卡，然后选择 FM 收音机。
- 2 按菜单键，然后点触自动扫描。
- 3 如果有预设频道，您将看到一个显示“重置所有频道并开始自动扫描？”的弹出窗口。如果选择“确定”，将删除所有预设频道并启动自动扫描。
- 4 在自动扫描期间，若要停止扫描，请点触**停止**。停止扫描前，仅保存已扫描的频道。

备注：您还可以使用显示的转盘手动微调电台。

重置频道

按菜单键并选择**重新设定频道**以重置当前频道，或选择**重置所有频道**以重置所有频道。

收听收音机

点触收听方式设置是使用扬声器还是耳机来收听无线广播。

提示 要提高收音机接收质量，请伸展耳机线，它具有收音机天线的功能。



警告

如果连接的耳机不是专门面向收音机接收设计的，则收音机接收质量可能较差。

实用工具

设置闹钟

- 1 在主屏中点触应用程序选项卡，然后选择时钟。
- 2 如果要添加新闹钟，请点触 ，然后选择添加闹钟。
- 3 设置时间，然后点触  以打开闹钟。在设置时间后，LG-P690 将让您得知闹钟响铃之前的剩余时间。
- 4 设置重复、铃声或振动，然后添加标签以命名闹钟。点触完成。

备注：要更改闹钟列表屏幕上的闹钟设置，点触菜单键，然后选择设置。您可以调整下列选项：静音模式下闹钟响、闹钟音量，再响间隔，侧边按钮行为。

使用计算器

- 1 在主屏中点触应用程序选项卡，然后选择计算器。
- 2 点触数字键输入数字。
- 3 对于简单的计算，请点触所需的功能（+、-、x 或 ÷），然后点触 =。
- 4 对于更复杂的计算，请按菜单键，点触高级面板然后选择 Sin、Cos、Tan、Log 等等。

将事件添加到日历中

- 1 在主屏中点触应用程序选项卡，然后选择日历。
- 2 要查看活动，请点触日期。如果要添加新活动，请点触并按住。点触新建活动。
- 3 点触内容，然后输入事件名称。查看日期并输入活动开始和结束的时间。
- 4 也可以点触地点，然后输入位置。

5 如果您要为事件添加备注，请点触**说明**，然后输入详细信息。

6 如果要重复闹钟，请设置**重复**，必要时设置**提醒**。

7 点触**完成**，将活动保存在日历中。日历中带颜色的方框将标记具有已保存活动的日期。在活动开始时间会有闹钟提醒，以便您进行安排。

更改日历视图

1 在主屏中点触**应用程序选项卡**，然后选择**日历**。
按菜单键。

2 选择特定日期、星期或月份的日历视图。

Polaris 查看器

Polaris Viewer 是专业的移动办公解决方案，让用户可使用移动设备随时随地查看各种类型的办公

文档，如 Word、Excel 和 PowerPoint 文件。

管理文件

Polaris 查看器可向移动用户提供方便的文件管理功能，包括在设备上复制、剪切和粘贴以及删除文件和文件夹。

查看文件

现在，移动用户可在移动设备上轻松查看各种文件类型，包括 Microsoft Office 文档和 Adobe PDF。使用 Polaris 查看器查看文档时，对象和布局与原始文档相同。

录音机

使用录音机录制录音机或其他音频文件。

实用工具

录制声音或语音

1 在主屏中点触应用程序选项卡，然后选择录音机。

2 点触  开始录音。

3 选择  结束录音。

4 点触  收听录音。

备注：点触  可访问相册。您可以收听保存的录音。

注意：可用录制时间以实际时间为准。

发送录音

1 录音完成后，您可以点触分享发送音频剪辑。

2 从蓝牙、电子邮件、Gmail 和信息中选择。选择电子邮件、Gmail 和信息时，录音将添加到邮件中，您可以照常撰写和发送邮件。

网络

浏览器

浏览器为您提供了一个涵盖游戏、音乐、新闻、体育、娱乐等更多内容缤纷世界，您可以快速、直接地通过手机访问。随时随地、不受限制。

备注：连接这些服务并下载内容时，可能会产生额外费用。查看网络提供商要求的数据付费。

使用 Web 工具栏



点触可返回到上一页。



点触可前进到当前页的下一页。这正好与按返回键的效果相反，按“返回”键将转到上一页。



点触可显示所有打开的窗口。



点触可添加新窗口。



点触可更改 Web 浏览器设置。



添加/显示书签以及显示访问最多、稍后读取和历史记录。

使用选项

按菜单键可查看选项。



稍后读取 - 将当前网页添加为书签。



添加 RSS 源 - 将当前网页添加到 RSS 源。



分享网页 - 您可以与其他人分享网页。



在网页上查找 - 您可以在当前网页中查找字母或词语。



选择文本 - 您可以复制网页中的任意文本。



更多

- **主页：**转到主页。
- **设置主页：**将当前页面设置成主页

网络

- **向主屏幕添加快捷方式：**
将当前网页的快捷方式添加到主屏上。
- **网页信息：** 显示网页信息。
- **下载内容：** 显示下载历史记录。

提示 要返回上一个网页，请按返回键。

设置

在主屏中点触应用程序选项卡，然后滚动并点触设置。

无线和网络

在这里，您可以管理 Wi-Fi 和蓝牙。您也可以设置移动网络以及切换为飞行模式。

飞行模式 - 切换为飞行模式之后，将禁用所有无线连接。

WLAN (Wi-Fi) - 点触以勾选：打开 Wi-Fi 已连接到可用的 Wi-Fi 网络。

WLAN (Wi-Fi) 设置 - 允许您设置和管理无线接入点。设置网络通知，或添加 Wi-Fi 网络。从 Wi-Fi 设置屏幕可访问高级 Wi-Fi 设置屏幕。按菜单键然后点触高级。

提示 如何获取 MAC 地址

要使用 MAC 筛选器在某些无线网络中建立连接，您需要在路由器中输入 LG-P690 的 MAC 地址。

您可以在以下用户界面中找到 MAC 地址：点触**应用程序 > 设置 > 无线和网络 > WLAN 设置**，然后按菜单键。然后，选择**高级 > MAC 地址**。

蓝牙 - 点触以勾选：打开蓝牙以连接蓝牙设备。

蓝牙设置 - 设置设备名称和可见模式，扫描其他设备。或者，检查您之前配置的蓝牙设备以及手机上上次扫描蓝牙设备时检测到的那些设备的列表。

绑定 - 您可以配置 USB 绑定与便携式 Wi-Fi 热点的设置。

虚拟专用网设置 - 显示您之前配置的虚拟专用网

设置

(VPN) 的列表。 允许您添加不同类型的 VPN。

移动网络 - 为数据漫游、网络模式和运营商、接入点名称 (APN) 等项设置选项。

通话设置

<固定拨号>

选择**固定拨号**打开并汇集一个号码列表，可从手机拨打此列表中的号码。 您需要提供 PIN2 码，此密码由运营商提供。 仅可以使用手机拨打此号码列表中的号码。

<语音邮件中心>

语音信箱服务 - 允许您选择运营商的语音信箱服务。

语音信箱设置 - 如果当前在使用运营商的语音信箱服务，此选项使您可以输入用于收听和管理语音信箱的号码。

<其他通话设置>

借口信息 - 拒绝通话时，您可使用此功能快速发送一条信息。 此选项可用于在会议时拒接来电。

来电转接 - 选择是转接所有通话、线路忙时转接、无人接听时转接，或无法接通时转接。

呼叫限制 - 选择何时限制呼叫。 输入呼叫限制密码。 请与您的网络运营商联系，了解有关此服务的信息。

拒接来电 - 您可添加拒接来电对象的电话号码。 您可在将新号码添加在**拒接来电列表 > 菜单 > 添加号码**。 来自拒接列表的来电，将被自动拒接。 在通话记录中，会显示此类来电的拒接图标。

通话费用 - 查看通话的相关费用。 （此服务取决于

网络；某些运营商不支持此功能)

通话时间 - 查看所有通话的时间，包括“全部”、“已拨电话”、“已接来电”和“最后通话”。

其他设置 - 此菜单允许您更改以下设置：

本机号码：选择是否要在拨出电话时显示您的号码。

来电等待：如果启用了呼叫等待功能，在通话过程中，手机将提醒您有新来电（取决于网络提供商）。

声音

〈常规〉

静音模式 - 允许您将所有声音（包括通话和通知铃声）静音，音乐、视频和已设置的闹钟的声音除外。若要使媒体和闹钟静音，您必须各自的应用程序中进行操作。

振动 - 允许您将手机设置为在接到来电时振动。

音量 - 允许您为铃声、媒体和闹钟设置音量。如果取消勾选为通知使用来电音量的选项，您可以分别为来电和通知设置各自的音量。

〈来电〉

手机铃声 - 允许您设置默认来电铃声。

〈通知〉

通知铃声 - 允许您设置默认通知铃声。

〈反馈〉

屏幕按键音 - 允许您将手机设置为在使用拨号盘拨号时播放音调。

操作音选择 - 允许您将手机设置为在点触按钮、图标和其他可响应点触的屏上项目时播放声音。

屏幕锁定提示音 - 允许您将手机设置为在锁定和解锁屏幕时播放声音。

设置

显示屏

亮度 - 调整屏幕亮度。

自动旋转屏幕 - 设置为在旋转手机时自动切换方向。

动画 - 设置为显示动画。

屏幕待机时间 - 设置屏幕超时的时间。

位置和安全

使用无线网络 - 如果选择“使用无线网络”，您的手机将使用 Wi-Fi 和移动网络确定您的大概位置。

选择此选项时，您将被询问在提供这些服务时是否允许 Google 使用您的位置。

使用 GPS 卫星 - 如果选择“使用 GPS 卫星”，您的手机将确定您的位置并精确到街道级别。

设置屏幕锁定 - 设置解锁图案以确保您的手机安全。打开一组屏幕，它们可指导您绘制制屏幕解锁图案。您

可设置 PIN 或密码，而不要使用图案或保持其值为无。

在您打开手机或唤醒屏幕时，系统将要求您画出解锁图案以解除屏幕锁定。

设置USIM卡锁定 - 设置SIM/RUIM 卡锁定或更改SIM/RUIM PIN。

可见的密码 - 选择该选项可在您键入时显示密码，而取消选择则在您键入时隐藏密码。

选择设备管理器 - 添加一个或多个管理器。

使用安全凭据 - 允许您访问安全证书。

从 SD 卡安装 - 选择从SD 卡安装加密的证书。

设置密码 - 设置或更改凭据存储密码。

清除存储 - 清除所有内容的凭据并重置密码。

应用程序

您可以管理应用程序以及设置快速启动快捷方式。

未知源 - 将设置默认为非 Market 应用程序的安装。

管理应用程序 - 管理和删除安装的应用程序。

正在运行的服务 - 检查当前正在运行的服务。

存储空间使用情况 - 查看应用程序所用的存储空间。

电量使用情况 - 查看耗电情况。

开发 - 设置应用程序开发的选项。

帐户与同步

〈常规同步设置〉

背景数据 - 允许应用程序在后台同步数据，无论您当前是否正在操作它们。取消勾选此设置可节省电池电量并减少（而非消除）数据使用。

自动同步 - 允许应用程序根据您的计划同步、发送和接收数据。

〈管理帐户〉

所有 Google 帐户及已添加到手机的其他帐户的列表。如果点触此屏幕中的某个帐户，将会打开其帐户屏幕。

隐私权

如果选择重设出厂数据，将清除手机内存汇总的所有个人数据，包括有关 Google 帐户及其它帐户的信息、您的系统/应用程序数据和设置，以及下载的应用程序和 DRM 许可。重置手机不会擦除您已下载的任何系统软件更新或 microSD 卡上的任何文件，如音乐或照片。如果以此方式重置手机，将提示您重新输入与首次启动 Android 时相同类型的信息。

设置

存储卡和手机内存

<USB 连接模式>

仅大容量存储 - 插入存储卡时，您的手机可用作大容量存储设备。您可将仅大容量存储设置为 USB 连接模式的默认设置。

<外置 SD 卡>

检查 SD 卡总可用空间。
点触**卸载 SD 卡**以安全移除。如果要删除 SD 卡上的所有数据，请**格式化**SD 卡。

<手机内部存储>

选择可用空间。

语言和键盘

设置设备语言及键盘设置。

语音输入与输出

<语音输入>

语音识别程序设置 - 使用语音识别程序设置配置 Android 语音输入功能。

- **语言：**打开一个屏幕，在此可以设置您在通过讲话的方式输入文字时使用的语言。
 - **安全搜索：**打开一个对话框，在此，您可以设置是否需要 Google SafeSearch 筛选器屏蔽某些搜索结果。
 - **屏蔽不文明的字词：**取消勾选时，Google 语音识别将在您以口头方式输入文本时识别和抄写许多人认为具有攻击性的言论。勾选时，Google 语音识别将用由井号 (#) 组成的占位符替代文字记录中的那些字眼。
- <语音输出>
- 文字转语音设置 - 您可以使用**文字转语音**设置来配置 Android 文本转语音合成器，通过该应用程序来使用时此功能。

备注：如果未安装语音合成器数据，则只有安装语音数据设置可用。

- **聆听示例：**使用您的当前设置播放语音合成器的简短示例。

- **总是使用我的设置：**勾选以使用该屏幕上的设置替代其他应用程序中提供的语音合成器设置。

- **默认引擎：**如果安装了多个文本至语音应用程序，则会打开一个对话框，在此可以设置您要使用的文本至语音应用程序。

- **安装语音数据：**如果您的手机未安装语音合成器数据，请连接至 Android Market，系统将引导您完成下载和安装数据的过程。如果数据已经安装，则此设置不可用。

- **语速：**打开一个对话框，在此可以选择您希望合成器发音的速率。

- **语言：**打开一个对话框，在此可以选择您希望合成器读出的语言。该选项在结合**总是使用我的设置**，这样可以确保文本在不同的应用程序中均可正确发音。

- **Pico TTS：**配置 Pico TTS 设置。

辅助功能

使用**辅助功能**可配置您在手机上安装的辅助功能插件。

备注：需要额外的插件。

日期和时间

使用**日期和时间**设置，以设置日期显示方式的首选项。您还可使用这些设置来设置自己的时间和时区，而非从移动网络获取当前时间。

设置

关于手机

查看法律信息，检查手机状态和软件版本。

Wi-Fi

使用 Wi-Fi，您可在无线接入点 (AP) 覆盖区内高速访问 Internet。

使用 Wi-Fi 尽情享受无线互联网，而且无需额外付费。

打开 Wi-Fi

从主屏中打开“通知抽屉”，并点触 。或者点触应用程序 > 设置 > 无线和网络 > WLAN (Wi-Fi) .

连接到 Wi-Fi

选择要连接的 Wi-Fi 网络。如果看到 ，则需要输入密码才能连接。

备注：

- 如果不在 Wi-Fi 覆盖区域内并选择 3G 连接，则可能会产生额外费用。
- 如果手机在连接到 Wi-Fi 后进入睡眠模式，将自动禁用 Wi-Fi 连接。
- 这种情况下，如果手机具有 3G 数据的访问权，则它可自动连接到 3G 网络，并且可能产生额外费用。
- LG-P690 支持 WEP、WPA/WPA2-PSK 和 802.1x EAP 安全。如果您的 Wi-Fi 服务提供商或网络管理员为网络安全设置了加密，请在弹出窗口中输入密钥。如果未设置加密，不会显示此弹出窗口。从您的 Wi-Fi 服务提供商或网络管理员处获得密钥。

共享您手机数据连接

您可以通过 USB 数据线（USB 绑定）将您手机的移动数据连接与一台电脑共享。您也可以将您的手机转接到便携式 Wi-Fi 热点，一次将您手机的数据连接与最多五个设备进行共享。

当手机共享其数据连接时，状态栏中将出现一个图标，同时通知抽屉中将出现持续的通知。

图标	描述
	USB 绑定已激活
	便携式 WLAN 热点已激活
	USB 绑定和便携式热点均已激活

有关绑定和便携式热点的信息，包括支持的操作系统及其他详细信息，请访问 <http://www.android.com/tether>。

备注：连接并使用在线服务时可能需要花费额外的费用。查看网络提供商要求的数据付费。

USB 绑定和便携式 Wi-Fi 热点设置

- 1 在主屏上点触应用程序选项卡，然后选择设置。
- 2 点触无线和网络，然后选择绑定。
- 3 选择您要调整的选项。

USB 绑定 - 勾选以通过 USB 连接将手机的移动网络数据连接与您的电脑进行共享。

便携式WLAN (Wi-Fi)热点
- 勾选以将您的手机网络数据连接共享为 Wi-Fi 热点。

设置

帮助 - 打开一个对话框，上面显示有关 USB 绑定与便携式 Wi-Fi 热点以及有关在哪可以了解更多的信息。

通过 USB 共享您手机的数据连接

如果您的电脑运行 Windows 7 或部分 Linux 风格的最新分发（例如 Ubuntu），通常无需准备电脑进行绑定。但是如果运行的是较早版本的 Windows 或其他操作系统，则可能先准备您的电脑，才能通过 USB 建立网络连接。如需获得有关哪种操作系统支持 USB 绑定以及如何配置它们的最新信息，请访问 <http://www.android.com/tether>。

USB 绑定和数据共享

您不能同时通过 USB 共享手机的数据连接和 microSD 卡。如果您正在使用 USB 连接来将 microSD 卡接入您的电脑，将必须先将其断开连接。

- 1** 使用手机附带的 USB 数据线将手机连接到电脑。
- 2** 在主屏上点触应用程序选项卡，然后选择设置。
- 3** 点触**无线和网络**，然后选择**绑定**。
- 4** 勾选 **USB 绑定**。
 - 手机将开始通过 USB 连接将其移动网络数据连接与您的电脑进行共享。持续的通知  将添加到状态栏和通知抽屉中。
- 5** 取消勾选 **USB 绑定**可停止共享您的数据连接。或者只需断开 USB 数据线的连接。

将手机的数据连接共享为便携式 Wi-Fi 热点

- 1 在主屏上点触应用程序选项卡，然后选择设置。
- 2 点触**无线和网络**，然后选择**绑定**。

3 勾选**便携式WLAN (Wi-Fi)**热点。

- 片刻之后，手机将开始广播其 Wi-Fi 网络名称 (SSID)，这样您将可以通过其连接最多五台电脑或其他设备。持续的通知



将添加到状态栏和通知抽屉中。

- 勾选**便携式WLAN (Wi-Fi)**热点之后，您可以更改其网络名称或确保安全。

4 取消勾选**便携式WLAN (Wi-Fi)**热点以停止通过 Wi-Fi 共享您的数据连接。

重命名或确保您的便携式热点安全

您可以更改手机 Wi-Fi 网络名称 (SSID) 的名称并确保其 Wi-Fi 网络的安全。

- 1 在主屏上点触**应用程序选项卡**，然后选择**设置**。
- 2 点触**无线和网络**，然后选择**绑定**。

3 确保已勾选**便携式WLAN (Wi-Fi)**热点。

4 点触**便携式 WLAN 热点**设置。

5 点触**配置 WLAN**。

- 此时将**打开配置 WLAN**对话框。
- 您可以更改网络 SSID (名称)，这将是其他电脑在扫描 Wi-Fi 网络时看到的名称。
- 您也可以点触**安全性**菜单来为网络配置 Wi-Fi 保护访问 2 (WPA2) 安全性以及预共享密钥 (PSK)。

设置

- 如果点触 **WPA2 PSK 安全性** 选项，则密码字段将会添加到 **配置 WLAN** 对话框中。如果输入密码，您将需要在将手机的热点与电脑或其他设备连接时输入密码。或者在安全性菜单中点触 **打开**，以从 Wi-Fi 网络中删除 **安全性**。

注意！

如果将安全性选项设为 **开放**，则不可避免其他人在未经授权的情况下使用在线服务并可能产生额外收费。为避免未经授权使用，最好保持激活安全性选项。

6 点触保存。

软件更新

手机软件更新

从互联网的 LG 手机软件更新

有关使用此功能的详细信息，请访问 <http://www.lg.com>。

此功能帮助您方便地从互联网将手机固件更新为最新版本，而无需访问服务中心。仅当 LG 提供可供手机使用的固件新版本时，此功能可用。

由于手机固件更新要求用户在更新过程期间保持全部注意力，因此，在继续执行操作之前，请留意每一个步骤中出现的说明和提示。请注意，在升级过程中移除 USB 数据线或取出电池将严重损坏您的手机。

备注：LG 保留根据自行判断决定固件更新仅可用于指定型号的权利，不保证所提供的固件更新版本可供所有手机型号使用。

通过空中下载 (OTA) 的 LG 手机软件更新

此功能允许您通过空中下载 (OTA) 方便地将手机的固件更新为最新版本，而无需连接 USB 数据线。仅当 LG 提供可供手机使用的固件新版本时，此功能可用。

首先，您可以在手机上检查软件版本：设置 > 关于手机 > 软件更新 > 软件更新检查。

备注：此功能具体取决于网络服务提供商、所在区域或国家/地区。

DivX 移动 **DIVX™**

关于 DIVX 视频：DivX®

是由 DivX, LLC (Rovi Corporation 的子公司) 开

软件更新

发的一种数码视频格式。本手机是播放 DivX 视频的 DivX Certified® 官方设备。有关详细信息以及要获取将文件转换为 DivX 格式的工具，请访问 divx.com。

关于 DIVX VIDEO-ON-

DEMAND: 要播放购买的

DivX Video-on-Demand (VOD) 电影，必须先注册此 DivX Certified® 设备。要获取您的注册码，请在设备安装目录下找到 DivX VOD 部分。转到 vod.divx.com 以获取有关如何完成注册的详细信息。

DivX Certified® 可播放高达 320x240 的 DivX® 视频 DivX®、DivX Certified® 及相关徽标是 Rovi Corporation 或其子公司的商标，使用必须经过许可。

备注:

打开源软件

要获取 GPL、LGPL、MPL 及其他开源证书下的相应源代码，请访问


<http://opensource.lge.com/>

可使用源代码下载所有相关许可条款、声明和通知。


配件

以下配件可与 LG-P690 一起使用。（以下配件为可选配件。）

旅行适配器

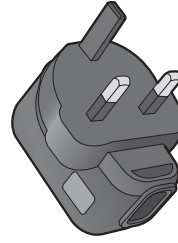

数据线
连接 LG-
P690 和
PC。

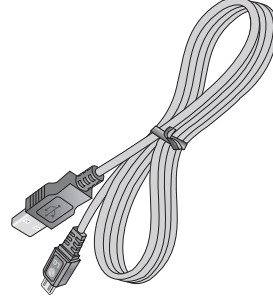

电池



用户手册
了解更多关
于 LG-P690
的信息。



立体声耳机



备注:

- 务必使用正品 LG 配件。
- 否则可能导致保修失效。
- 配件可能根据国家/地区有所不同。

技术参数

外部环境

最高温度: +55° C (放电) , +45° C (充电)

最低温度: -10° C

Declaration of Conformity



LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

Model Name

LG-P690

Trade Name

LG

CE0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.8.1, EN 301 489-07 V1.3.1

EN 301 489-17 V2.1.1, EN 301 489-19 V1.2.1 , EN 301 489-24 V1.5.1

EN 301 511 V9.0.2

EN 301 908-1 V4.2.1 EN 301 908-2 V4.2.1,

EN 300 328 V1.7.1

EN 50360:2001, EN62209-1:2006, EN62209-2:2010

EN 60950-1 : 2006 + A11 :2009

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, ForsythHouse, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility
that the product mentioned above to which this
declaration relates complies with the above mentioned
standards, regulation and directives

Name

Doo Haeng Lee / Director

Issued Date

Jun.20, 2011

LG Electronics Inc. —EU Representative
Veluwezoom 15, 1327 AE Almere, The Netherlands

Signature of representative

故障排除

本章列出了您在使用手机过程中可能遇到的一些问题。有些问题可能需要您致电服务提供商，但大多数问题您可自行解决。

信息	可能原因	可行解决措施
SIM 卡错误	手机中没有安装 SIM 卡或 SIM 卡插入不正确。	请确保正确插入 SIM 卡。
没有网络连接/网络断开	信号弱，或者您在运营商网络范围之外。 运营商应用了新服务。	将手机移到窗边或开放的区域中。 。 检查网络运营商覆盖地图。 检查 SIM 卡使用时间是否超过 6~12 个月。 如果超过，请在最近的网络提供商处更换 SIM 卡。 请与服务提供商联系。
代码不匹配	要更改安全码，您需要在此输入以确认新代码。 两次输入的代码不匹配。	如果忘记代码， 请联系您的服务提供商。
任何应用程序均无法设置	服务提供商不支持或需要注册。	请与服务提供商联系。

故障排除

信息	可能原因	可行解决措施
无法拨打电话	拨号错误。 已插入新 SIM 卡。 达到预付费用上限。	新网络未获得授权。 查看新的限制。 与服务提供商联系或重新设置 PIN 2 的限制。
手机无法打开	按开/关键时间过短。 电池未充电。 电池触点脏。	请按开/关键至少两秒钟。 为电池充电。 检查显示屏上的充电指示灯。 清洁电池触点。
充电错误	电池未充电。 外部温度太热或太冷。 触点问题 无电压 充电器故障 错误充电器 电池故障	为电池充电。 确保手机在正常温度下充电。 检查充电器以及到手机的连接。 检查电池触点，如果需要，请清洁。 将充电器插入其它插座。 如果充电器不发热，请替换。 请仅使用原装 LG 配件。 替换电池。
不允许输入号码	已打开固定拨号功能。	检查“设置”功能表并关闭该功能。

信息	可能原因	可行解决措施
无法接收/发送短信和图片	内存已满	删除手机中的部分信息。
未打开的文件	不受支持的文件格式	检查支持的文件格式。
存储卡不起作用	仅支持 FAT 16、FAT32 文件格式	通过读卡器检查 SD 卡文件系统，或使用手机格式化 SD 卡。
我收到来电时，屏幕未打开。	近程传感器问题	如果使用任何保护带或保护套，请检查其是否盖住近程传感器周围的区域。确保近程传感器周围的区域干净。
无声音	振动模式	检查声音菜单的设置状态以确保您不处于振动或静音模式下。
挂机或死机	间歇性软件问题	卸下电池，将它再次插入并将手机开机。 尝试通过网站执行软件更新。
电话锁定并且未工作。	重新启动手机	1. 关机。 2. 卸下电池盖。 3. 安装电池。 4. 关闭插槽盖。 5. 重新开机。



English

LG-P690 User Guide

This guide helps you get started using your phone.
If you need more information, please visit www.lg.com.

- Some of the contents of this manual may not apply to your phone. This depends on your phone's software and your service provider.
- This handset is not recommended for the visually impaired because of its touch screen keyboard.
- Copyright ©2011 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.
- Google™, Maps™, Gmail™, YouTube™, Talk™ and Android Market™ are trademarks of Google, Inc.



Contents

Guidelines for safe and efficient use.....	5
Important notice	12
Getting to know your phone .	24
Installing the SIM card and battery	26
Charging your phone	27
Installing the memory card ...	28
Formatting the memory card.	29
Your Home screen	30
Touch screen tips.....	30
Lock your phone	30
Unlock screen	31
Silent mode	31
Home	31
Adding widgets to your Home screen.....	32
Returning to recently-used applications	33
Notification drawer	33
Viewing the status bar	34
Onscreen keyboard	36
Entering accented letters	36
Google account setup	37
Creating your Google account	37
Signing in to your Google account.....	37
Calls.....	39
Making a call	39
Calling your contacts	39
Answering and rejecting a call.....	39
Adjusting call volume	39
Making a second call	39
Viewing your call logs.....	40
Call settings.....	40
Contacts.....	41
Searching for a contact	41
Adding a new contact.....	41
Favourite contacts	41
Messaging/email	43
Messaging.....	43
Sending a message.....	43
Changing your message settings	44
Setting up your email	44

Microsoft Exchange email account.....	44
Others (POP3, IMAP) email account.....	45
Composing and sending email.....	46
Working with account folders	47
Adding and editing email accounts	47

Camera 48

Getting to know the viewfinder	48
Taking a quick photo	49
Once you've taken the photo	49
Using the advanced settings .	50
Viewing your saved photos ...	51

Video camera..... 52

Getting to know the viewfinder.....	52
Shooting a quick video	53
After shooting a video.....	53
Using the advanced settings .	54
Watching your saved videos..	54

Adjusting the volume when viewing a video	54
---	----

Multimedia..... 55

View model.....	55
Timeline view.....	55
Using SmartShare	55
Music.....	56
Playing a song	56
Transferring files using USB mass storage devices.....	57

How to save music/video files on your phone.....	58
Moving contacts from your old phone to your new phone	59
Sending data from your phone using Bluetooth.....	59
Using the radio	60
Searching for stations	60
Resetting channels.....	61
Listening to the radio.....	61

Utilities..... 62

Setting your alarm.....	62
Using your calculator.....	62

Contents

Adding an event to your calendar	62	About phone.....	75
Changing your calendar view	63	Wi-Fi.....	75
Polaris Viewer	63	Turning on Wi-Fi.....	75
Voice recorder	64	Connecting to Wi-Fi.....	75
Recording a sound or voice...	64	Sharing your phone's data connection.....	76
Sending the voice recording..	64	USB tethering & portable Wi-Fi hotspot settings	77
The Web.....	65	To share your phone's data connection via USB	77
Browser.....	65	USB tethering and data sharing.....	78
Using the web toolbar.....	65	To share your phone's data connection as a portable Wi-Fi hotspot.....	78
Using options.....	65	To rename or secure your portable hotspot.....	79
Settings	67	Software update	81
Wireless & networks.....	67	Phone software update.....	81
Call settings.....	68	DivX Mobile	82
Sound	69	Accessories	83
Display	70	Technical data.....	84
Location & security	70	Troubleshooting	85
Applications.....	71		
Accounts & sync	72		
Privacy	72		
Storage	73		
Language & keyboard	73		
Voice input & output.....	73		
Accessibility.....	75		
Date & time	75		

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information. This mobile phone model LG-P690 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at

its highest certified power level in all used frequency bands.

- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over 10 g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 1.05 W/kg (10 g) and when worn on the body is 0.606 W/kg (10 g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6

Guidelines for safe and efficient use

W/kg averaged over 1g of tissue.

equal to that of the parts being replaced.

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Repairs under warranty, at LG's option, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality

- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Do not use, touch or attempt to remove or fix broken, chipped or cracked glass. Damage to the glass display due to abuse or misuse is not covered under the warranty.
- Your phone is an electronic device that generates heat during normal operation. Extremely prolonged, direct skin contact in the absence of adequate ventilation may result in discomfort or minor burns. Therefore, use care when handling your phone during or immediately after operation.

Guidelines for safe and efficient use

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.

- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.

- Give full attention to driving.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

- When using headphones, turn the volume down if you cannot hear the people speaking near you, or if the person sitting next to you can hear what you are listening to.

NOTE: Excessive sound pressure from earphones can cause hearing loss.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorised service provider.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.

Guidelines for safe and efficient use

- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.

- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

Important notice

Please check to see whether any problems you encountered with your phone are described in this section before taking the phone in for service or calling a service representative.

1. Phone memory

When available space in your phone memory is less than 10%, your phone cannot receive new messages. You need to check your phone memory and delete some data, such as applications or messages, to make more memory available.

Managing applications

1 In the Home screen, touch the **Applications** tab, then select **Settings > Applications > Manage applications**.

2 Once all applications appear, scroll to and select the application you want to uninstall.

3 Tap **Uninstall**, then touch **OK** to uninstall the application you selected.

2. Optimising battery life

Extend your battery's life between charges by turning off features you don't need to run constantly in the background. You can monitor how applications and system resources consume battery power.

Extending your battery's life

- Turn off radio communications if you are not using. If you are not using Wi-Fi, Bluetooth, or GPS, turn them off.
- Reduce screen brightness and set a shorter screen timeout.
- Turn off automatic syncing for Gmail™, Calendar, Contacts and other applications.
- Some applications you have downloaded may cause your battery life to be reduced.

Checking the battery charge level

- 1 In the Home screen, touch the **Applications** tab, then select **Settings > About phone > Status**

- 2 The battery status (Charging, Not charging) and level (percentage charged) is displayed at the top of the screen.

Monitoring and controlling what uses the battery

- 1 In the Home screen, touch the **Applications** tab, then select **Settings > About phone > Battery use**.
- 2 Battery usage time is displayed at the top of the screen. It tells you how long it has been since you last connected to a power source or, if connected to a power source, how long you

were last running on battery power. The body of the screen lists applications or services using battery power, from greatest amount to least.

3. Installing an open source operating system

If you install and use an open source operating system (OS) on your phone rather than using the OS provided by the manufacturer, your phone may malfunction.

WARNING

If you install and use an OS other than the one provided by the manufacturer, your phone is no longer covered by the warranty.

Important notice

WARNING

To protect your phone and personal data, only download applications from trusted sources, such as Android Market™. If there are improperly installed applications on your phone, your phone may not work normally or a serious error may occur. You must uninstall those applications and all their data and settings from the phone.

that guide you through drawing a screen unlock pattern.

Caution: create a Gmail account before setting an unlock pattern.

WARNING

Precautions to take when using pattern lock.

It is very important to remember the unlock pattern you set. You will not be able to access your phone if you use an incorrect pattern 5 times. You have 5 opportunities to enter your unlock pattern, PIN or password. If you have used all 5 opportunities, you can try again after 30 seconds.

4. Using unlock pattern

Set unlock pattern to secure your phone. On the home screen, touch Applications tab and select **Settings > Location & security > Set up screen lock > Pattern**. Follow the screens to be guided through drawing a screen unlock pattern. Select Continue to next screen. Opens a set of screens

When you cannot recall your unlock pattern:

If you logged in to your Google account on the phone but failed to enter the correct pattern 5 times, tap the Forgotten pattern button. You are then required to

log in with your Google account to unlock your phone.

If you have not created a Google account on the phone or you forgot it, you have to perform a hard reset.

5. Using the hard reset

If it does not restore to the original condition, use hard reset to initialise your phone.

When the phone is turned off, press and hold the **Home** key + **Volume down** key + **Power** key for over ten seconds. When the screen shows the LG logo, release the **Power** key.

After the screen shows the hard reset screen, release the other keys.

Leave your phone for at least a minute while it performs the hard reset, then your phone will be turned on.

Caution: if you perform a hard reset, all user applications and user data are deleted. This cannot be reversed. Remember to back up any important data before performing a hard reset.

6. Connecting to Wi-Fi networks

To use Wi-Fi on your phone, access a wireless access point or “hotspot.” Some access points are open and you can simply connect to them. Others are hidden or use security features; you must configure your phone to be able to connect to them.

Turn off Wi-Fi when you're not using it to extend the life of your battery.

Important notice

Turning Wi-Fi on and connecting to a Wi-Fi network

- 1** In the Home screen, touch the **Applications** tab, then select **Settings > Wireless & networks > Wi-Fi settings**.
- 2** Touch **Wi-Fi** to turn it on and begin scanning for available Wi-Fi networks.
 - A list of available Wi-Fi networks is displayed. Secured networks are indicated by a lock icon.
- 3** Touch a network to connect to it.
 - If the network is open, you are asked to confirm that you want to connect to that network by touching **Connect**.
 - If the network is secure, you're asked to enter a password or other credentials. (Ask your network administrator for details)
- 4** The status bar displays icons that indicate Wi-Fi status.

7. Using a microSD card

Pictures, along with music and video files, can only be saved to external memory.

Before using the built-in camera, you first need to insert a microSD card into your phone.

Without inserting a memory card, you cannot take the picture and video.

WARNING

Do not insert or remove the memory card when the phone is on. Doing so may damage the memory card as well as your phone, and the data stored on the memory card may be corrupted. To remove the memory card safely, in the Home screen, touch the **Applications** tab, then select **Settings > Storage > Unmount SD card**.

8. Opening and switching applications

Multitasking is easy with Android because you can keep more than one application running at the same time. There's no need to quit an application before opening another. Use and switch between several open applications. Android manages each application, stopping and starting them as needed to ensure that idle applications don't consume resources unnecessarily.

Stopping applications

- 1** In the Home screen, touch the **Applications** tab, then select **Settings > Applications > Manage applications**.
- 2** Scroll to the desired application and touch **Force stop** to stop it.

TIP Returning to recent apps. Press and hold the Home key. A screen then displays a list of the applications you used recently.

Important notice

9. Installing the LG PC suite on your PC

To synchronise your phone with your PC via a USB cable, you need to install the LG PC suite program on your PC.

You can download this program at the LG web site. Browse to <http://www.lg.com> site to get the installer on your phone and user information. You may refer to the pictures below and follow the instructions to download the software for your phone and complete the installation.


The PC suite is saved in the microSD memory card found as part of the in-box contents and you can simply copy it to your PC

Major functions of LG PC Suite IV


- Create, edit and delete phone data with ease
- Synchronise data from PC & phone (Contacts, Calendar, Message(SMS), Bookmarks and Call log)
- Easily transfer multimedia files (photos, videos, music) by simply dragging and dropping between a PC and your phone
- Transfer SMS messages from your phone to a PC
- Software update without losing your data

Download LG Mobile Support Tool

1) Go to www.lg.com , Support , Mobile Phone Support

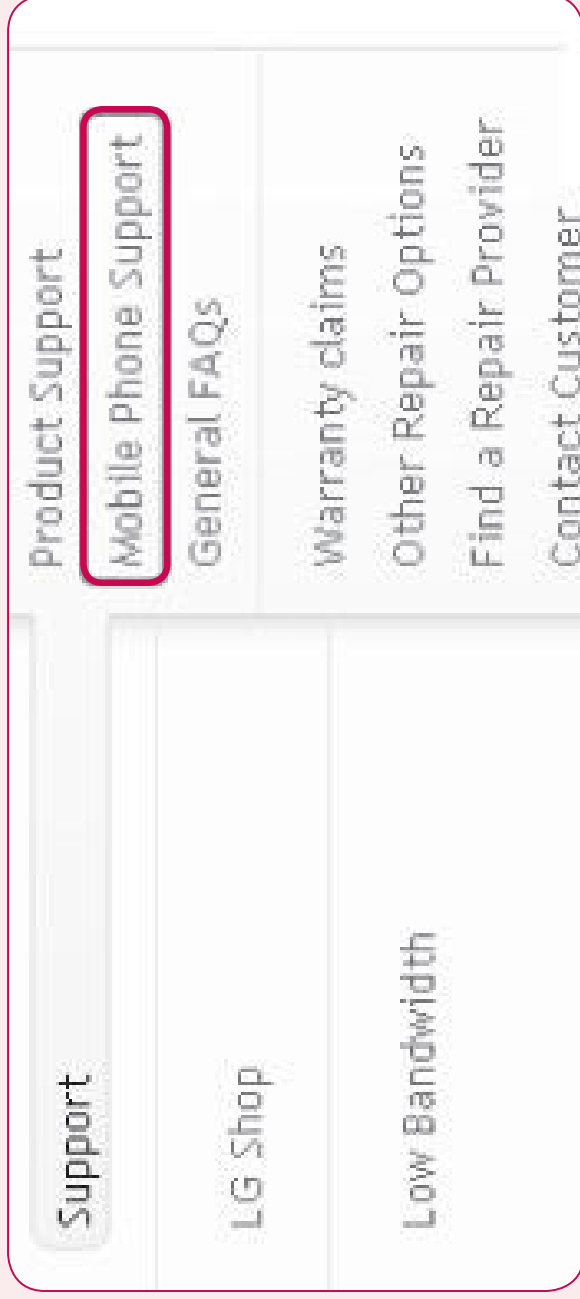

2) Download and Install LG Mobile Support Tool

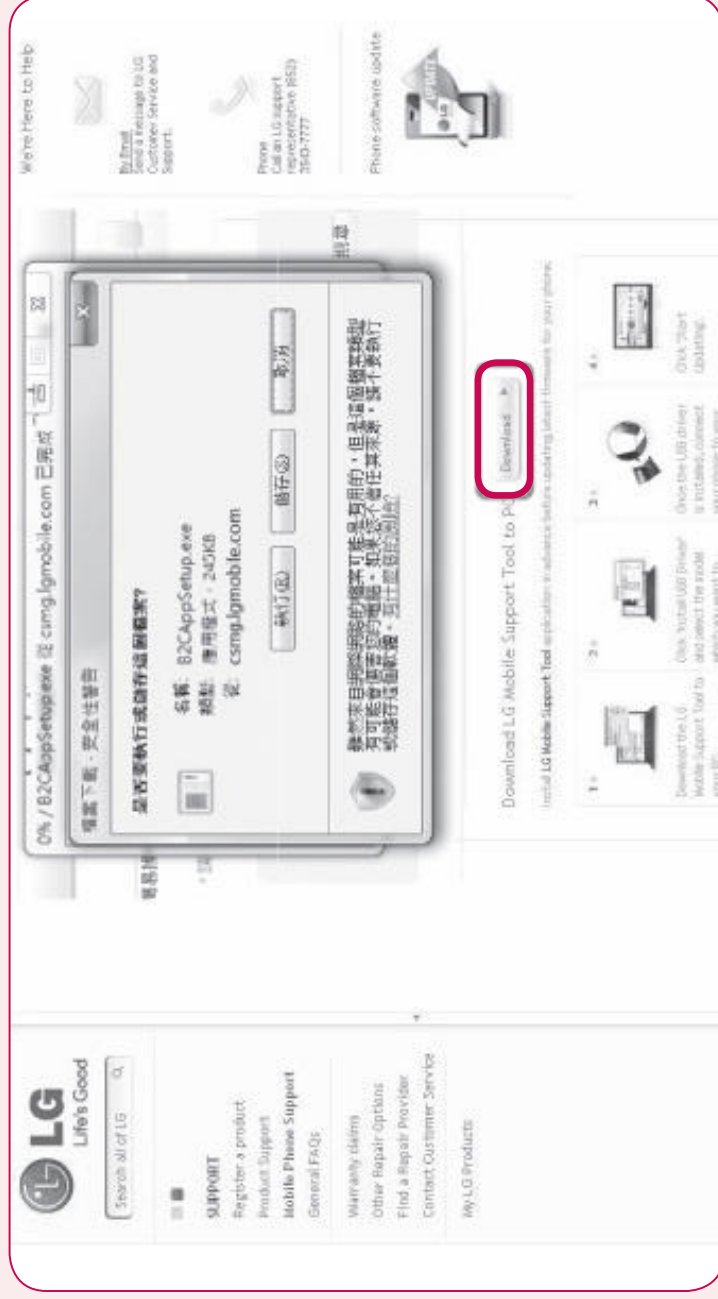

Important notice

- 3) After download software and run LG PCSuite IV file and follow the instructions to complete the installation.
- * When LG PCSuite IV installation is completed, disable Mass storage mode to run the LG PCSuite IV.

10. Connecting your phone to a computer using USB

LG-P690 does not support:

- LG Air Sync (Web Sync, R-Click)
- OSP (On Screen Phone)
- To-do in Calendar
- Memo
- Java application

After installing PC Suite IV, you can find the User Guide in the Help menu.

- 1 Use the USB cable to connect your phone to a USB port on your computer. Once connected, you will receive a notification that a USB connection has been made.
- 2 Open the notification drawer and touch USB connected.
- 3 Touch **Turn on USB storage** to confirm that you want to

transfer files between your phone's microSD card and the computer.

You will receive a notification when the phone connects as USB storage. Your phone's microSD card is mounted as a drive on your computer. You can now copy files to and from the microSD card.

NOTE: when uninstalling PC Suite IV, USB and Bluetooth, drivers are not automatically removed. You must uninstall them manually.

TIP To use the microSD card on your phone again, you need to open the notification drawer and touch **Turn off USB storage**.

During this time, you can't access the microSD card from your phone, so you can't use applications that rely on the microSD card, such as Camera, Gallery and Music.

To disconnect your phone from the computer, carefully follow

Important notice

your computer's instructions for properly disconnecting USB devices to avoid losing information on the card.

1 Open the notification drawer and touch **Turn off USB storage**.

2 Safely disconnect the USB device from your computer.

11. Unlocking the screen when using a data connection

Your display goes dark if untouched for a period of time when using a data connection. To turn on your LCD screen, just touch it.

12. Hold your phone straight up

Please hold the mobile phone straight up as a regular phone. The LG-P690 has an internal antenna. Be careful not to scratch or damage the back of the phone, as that causes loss of performance.

While making/receiving calls or sending/receiving data, avoid holding the lower part of the phone where the antenna is located. Doing so may affect call quality.

13. When the screen freezes

If the screen freezes or the phone does not respond when you try to operate it:

Remove the battery, reinsert it, then turn the phone on. If it still does not work, please contact the service centre.


14. Do not connect your phone when you turn on/off your PC.

Make sure you disconnect the data cable between your phone and PC; leaving it connected might cause errors on your PC.

Getting to know your phone

To turn on your phone, press and hold the Power key for 3 seconds.

To turn off the phone, press and hold the Power key for 3 seconds, then touch **Power off** and **OK**.

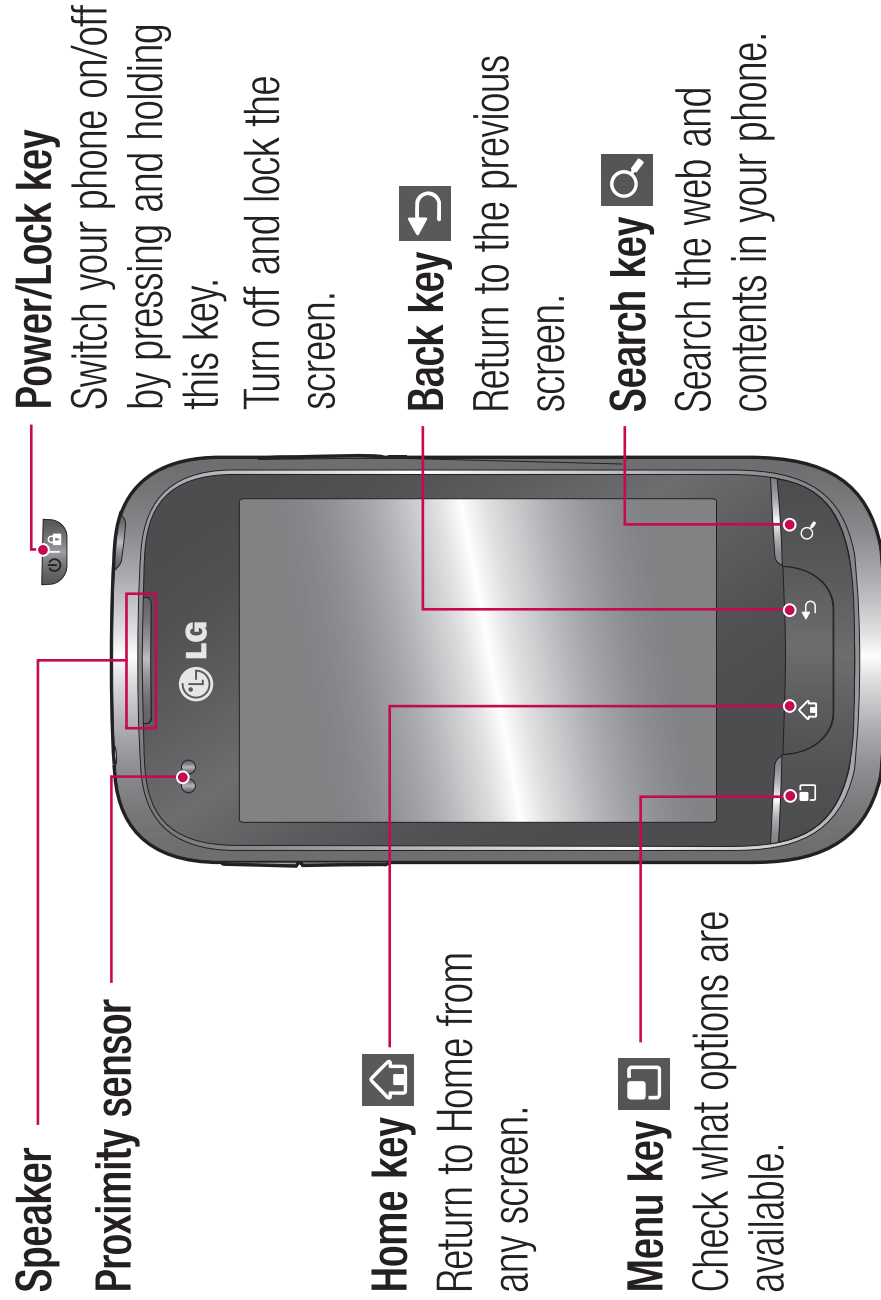

Power/Lock key
Switch your phone on/off by pressing and holding this key.

Turn off and lock the screen.

Home key
Return to Home from any screen.

Back key
Return to the previous screen.

Menu key
Check what options are available.


Search key
Search the web and contents in your phone.

NOTE: proximity sensor

When receiving and making calls, the proximity sensor automatically turns the backlight off and locks the touch keypad by sensing when the phone is near your ear. This extends battery life and prevents the touch keypad from activating unintentionally during calls.

WARNING


Placing a heavy object on the phone or sitting on it can damage the LCD and touch screen functions. Do not cover the protective film on the LCD's proximity sensor. This may cause the sensor to malfunction.

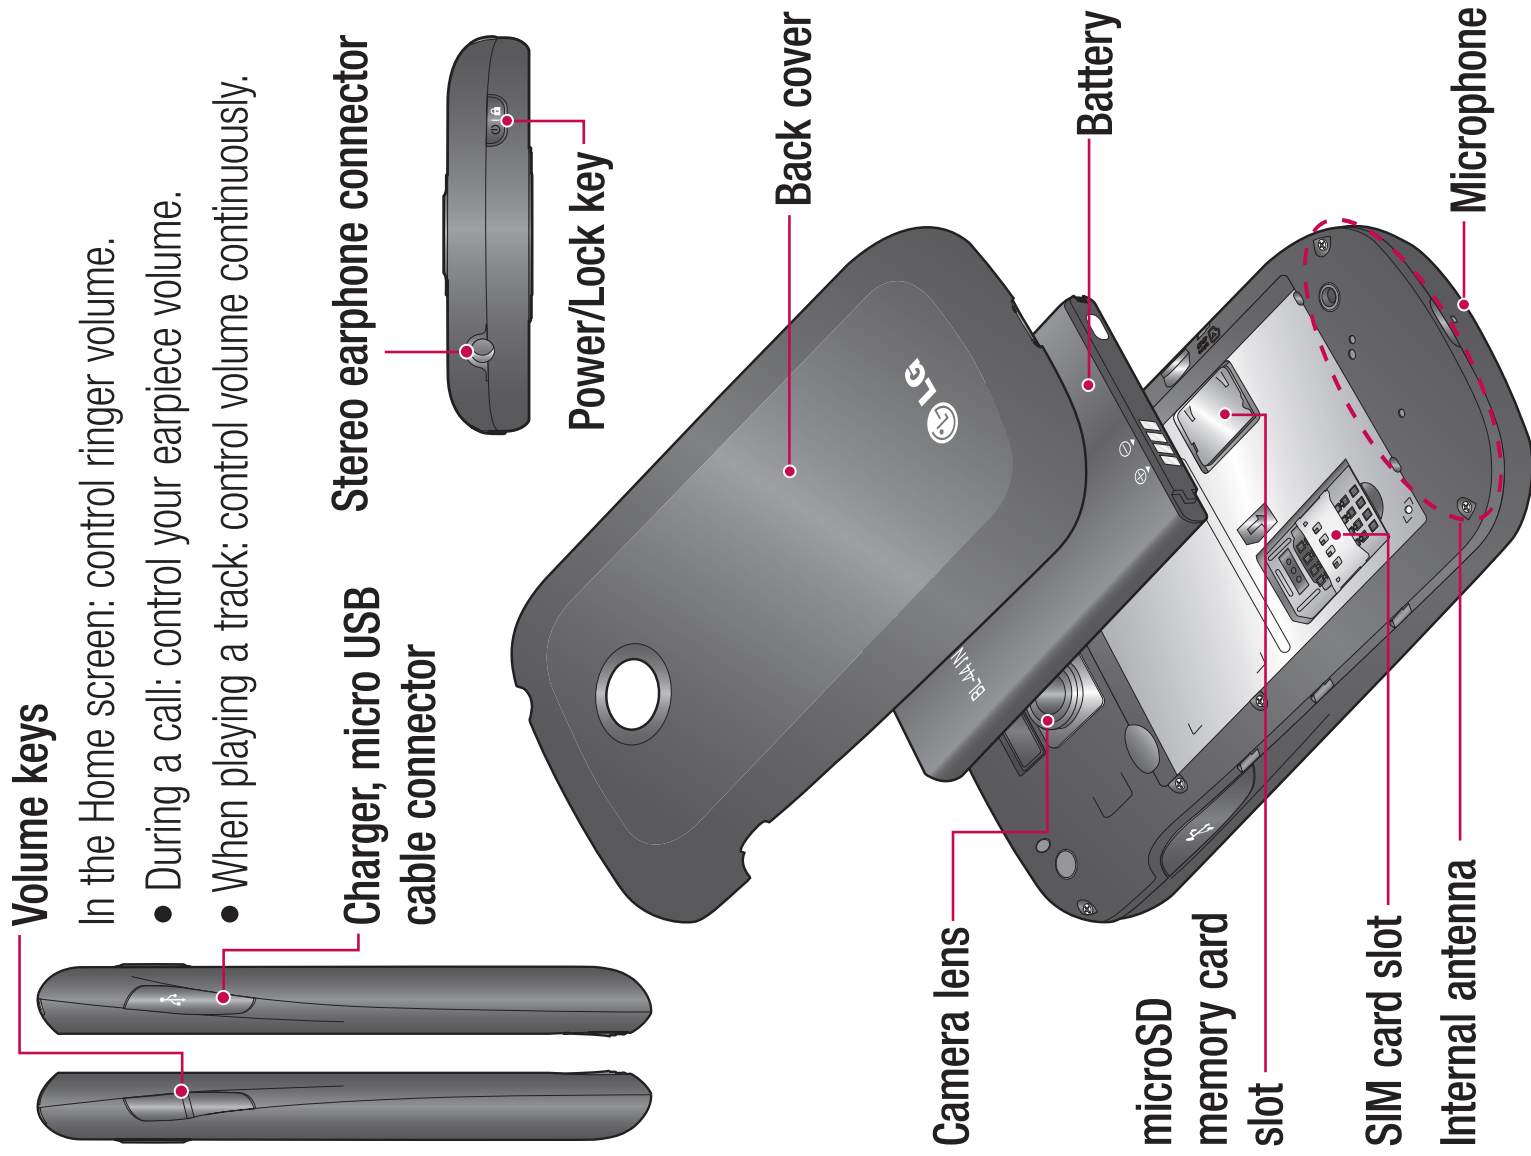


Getting to know your phone

Installing the SIM card and battery

1 To remove the back cover, hold the phone in your hand firmly. With the other hand, firmly press your thumb on the back cover. Now lift off the battery cover.

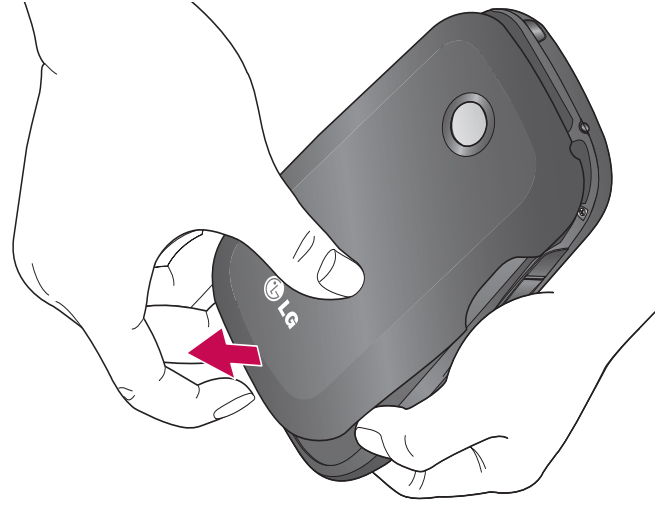

2 Slide the SIM card into the SIM card slot. Make sure the gold contact area on the card is facing downwards.

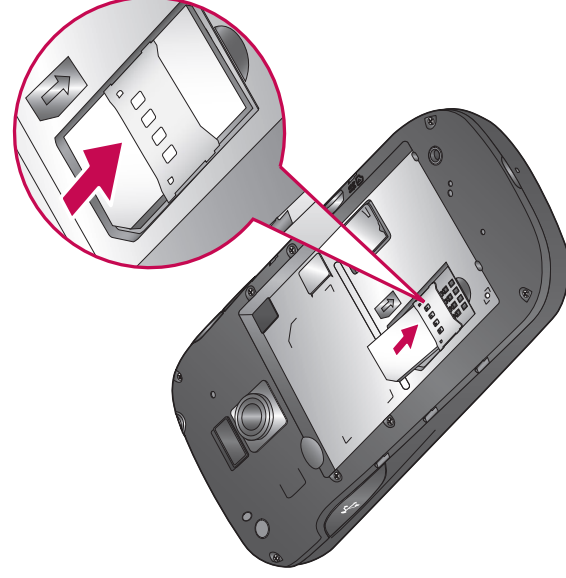

3 Insert the battery by aligning the gold contacts on the phone and the battery.




- 4** Replace the back cover of the phone.



Charging your phone

Slide open the cover of the charger connector on the side.

Insert the charger, then plug it into an electrical outlet. Your LG-P690 must be charged before you see

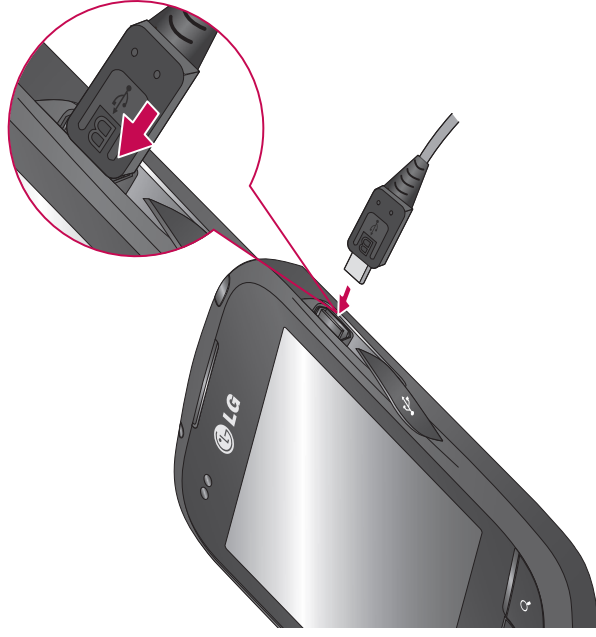

NOTE: the battery must be fully charged initially to improve battery life time.


Getting to know your phone

Installing the memory card


To store multimedia files, such as images captured using the built-in camera, you must insert a memory card into your phone.

To insert a memory card:

- 1 Remove the back cover.

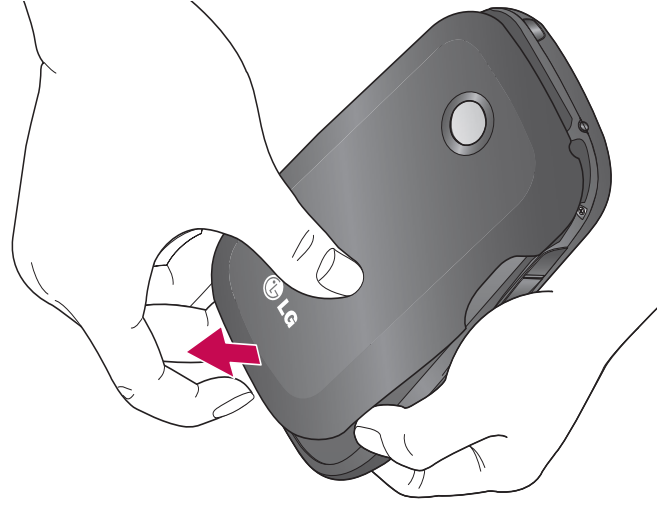

- 2 Insert the memory card into the slot. Make sure the gold contact area is facing downwards.

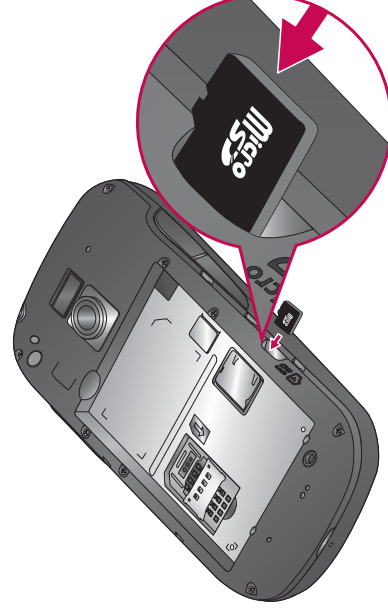

WARNING

Do not insert or remove the memory card when the phone is on. Doing so may damage the memory card as well as your phone, and the data stored on the memory card may be corrupted.

Formatting the memory card

Your memory card may already be formatted. If it isn't, you must format it before you can use it.

NOTE: all files on the card are deleted when you format the card.

1 In the Home screen, touch the **Applications** tab to open the applications menu.

2 Scroll to and touch **Settings** > **Storage**.

3 Touch **Unmount SD card**.

4 Touch **Erase SD card**, then confirm your choice.

5 If you have set a pattern lock, input the pattern lock then select **Erase everything**. The card is then formatted and ready to use.

NOTE: if there is content on your memory card, the folder structure may be different after formatting since all the files will have been deleted.

Your Home screen

Touch screen tips

Here are some tips on how to navigate around your phone.

Touch – to choose a menu/option or open an application, touch it.

Touch and hold – to open an options menu or grab an object you want to move, touch and hold it.

Drag – to scroll through a list or move slowly, drag across the touch screen.

Flick – to scroll through a list or move quickly, flick across the touch screen (drag quickly and release).

NOTE:

- To select an item, touch the centre of the icon.
- Do not press too hard; the touch screen is sensitive enough to pick up a light, firm touch.

- Use the tip of your finger to touch the option you want. Be careful not to touch any other keys.

Lock your phone

When you are not using the LG-P690, press the power key to lock your phone. This helps prevent accidental presses and saves battery power.

Also, if you do not use the phone for a while, the Home screen or another screen you are viewing is replaced with the lock screen to conserve battery power.

If there are any programs running when you set the pattern, they may be still running in Lock mode. It is recommended that you exit all programs before entering the Lock mode to avoid unnecessary charges (e.g. phone calls, Web access and data communications).


Setting an unlock pattern: you can draw your own unlock pattern by connecting the dots. If you set a pattern, the phone screen locks. To unlock the phone, draw the pattern that you set on the screen.

Caution: when you set an unlock pattern, you need to create your Gmail account first.

Caution: if there are more than 5 pattern drawing errors in a row, you cannot unlock the phone. In this case, your personal information and downloaded data is deleted.

Unlock screen

Whenever your LG-P690 is not in use, it returns to the lock screen. Drag your finger from bottom to top to unlock the screen.

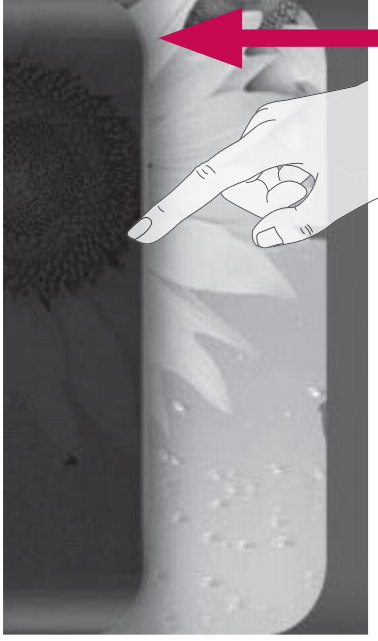

Silent mode

In the notification drawer, touch



to be

Home

Simply swipe your finger to the left or right to view the panels.

You can customise each panel with widgets, shortcuts (to your favourite applications), folders and wallpaper.

NOTE: some screen images may be different depending on your phone provider.

Your Home screen

In your Home screen, you can view quick keys at the bottom of the screen. Quick keys provide easy, one-touch access to the functions you use the most.

 Touch the **Phone** icon to bring up the touch screen dialpad to make a call.

 Touch the **Contacts** icon to open your contacts.

 Touch the **Messaging** icon to access the messaging menu. This is where you can create a new message.

 Touch the **Applications** tab at the bottom of the screen. You can then view all your installed applications.

To open the desired application, simply touch the icon in the applications list.

NOTE: preloaded applications may differ according to your phone's software or your service provider.

Adding widgets to your Home screen

You can customise your Home screen by adding shortcuts, widgets or folders to it. For more convenience using your phone, add your favourite widgets to the Home screen.

1 In the Home screen, press the **Menu** key and select **Add**. Or touch and hold the empty part of the home screen.

2 In the **Edit mode** menu, touch the type of item you want to add.

3 For example, select **Folders** from the list and tap it.

4 You then see a new folder icon on the Home screen. Drag it to the desired location on the desired panel, then take your finger off the screen.

TIP To add an

application icon to the Home screen from the **Applications** menu, touch and hold the application you want to add.

TIP To remove an

application icon from the Home screen, touch and hold the icon you want to remove, then drag it to .



NOTE: you cannot delete preloaded applications. (Only their icons can be deleted from the screen)

Returning to recently-used applications

- 1 Touch and hold the **Home** key. The screen displays a pop-up with icons of applications you used recently.
- 2 Touch an icon to open the application. Or touch the **Back** key to return to the current application.

Notification drawer

The notification drawer runs across the top of your screen.

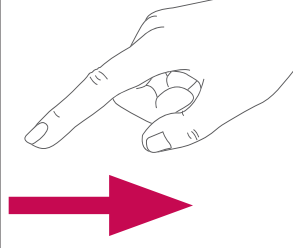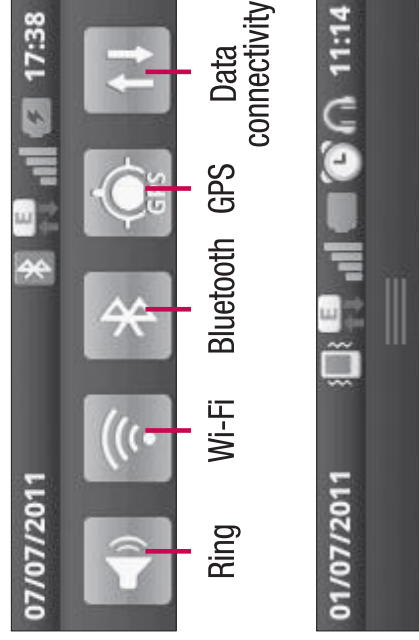

Touch and slide the notification drawer down with your finger.

Or, in the Home screen, press the **Menu** key and select **Notifications**. Here you can check and manage sound, Wi-Fi, Bluetooth and GPS as well as other notifications.

Your Home screen

Viewing the status bar

The status bar uses different icons to display phone information such as signal strength, new messages, battery life and active Bluetooth and data connections.

Below is a table explaining the meaning of icons you're likely to see in the status bar.



[Status bar]

Icon	Description
	No SIM card
	No signal
	Airplane mode
	Connected to a Wi-Fi network
	Wired headset

Icon	Description
	Call in progress
	Call hold
	Speakerphone
	Phone microphone is muted
	Missed call
	Bluetooth is on
	Connected to a Bluetooth device
	System warning
	Alarm is set
	New voicemail
	Ringer is silenced
	Vibrate mode
	Battery fully charged
	Battery is charging

Icon	Description
	Data in and out
	Phone is connected to PC via USB cable
	Downloading data
	Uploading data
	GPS is acquiring
	Receiving location data from GPS
	On-Screen Phone connected
	3 more notifications not displayed
	Data is syncing
	Download finished
	New Gmail
	New Talk message

Icon	Description
	New message
	Song is playing
	Upcoming event
	FM radio turned on in the background
	SmartShare On
	SmartShare sharing request
	USB tethering is active
	Portable Wi-Fi hotspot is active
	Both USB tethering and portable hotspot are active

Your Home screen

Onscreen keyboard

You can enter text using the onscreen keyboard. The onscreen keyboard appears automatically on the screen when you need to enter text. To manually display the keyboard, simply touch a text field where you want to enter text.

Using the keypad & entering text

 Tap once to capitalise the next letter you type. Double tap for all caps.

 Tap to switch to the numeric and symbol keyboard. You can also touch and hold this tab to view the Settings menu.

 Tap to view or press and hold to change the writing language.

 Tap to enter a space.

 Tap to create a new line in the message field.

 Tap to delete the previous character.

 Tap to hide the onscreen keyboard.

Entering accented letters

When you select French or Spanish as the text entry language, you can enter special French or Spanish characters (e.g. “á”).

For example, to input “á”, touch and hold the “a” key until the zoom-in key grows bigger and displays characters from different languages. Then select the special character you want.

Google account setup

The first time you open the Google application on your phone, you are required to sign in with your existing Google account. If you do not have a Google account, you are asked to create one.

Creating your Google account

- 1 In the Home screen, touch the **Applications** tab  to open the Applications menu.
- 2 Tap **Gmail**, then tap **Next > Create** to start the Gmail™ setup wizard.
- 3 Enter your name and username for your Google account.
- 4 Tap **Next**. Your phone is now communicating with Google servers and checking username availability.
- 5 Enter and re-enter your password. Follow the instructions and enter

the required and optional information about your account. Wait while the server creates your account.

Signing in to your Google account

- 1 Enter your email address and password, then tap **Sign in**. Wait while the system signs you in.
 - 2 After signing in, you can use Gmail™ and take advantage of Google services on your phone.
 - 3 Once you have set up your Google account on your phone, your phone automatically synchronises with your Google account on the Web. (This depends on your synchronisation settings)
- After signing in, you can use other Google services on your phone.

Google account setup

IMPORTANT!

- Some applications, such as Calendar, only work with the first Google account you add. If you plan to use more than one Google account on your phone, be sure to sign in to the one you want to use with applications such as Calendar first. When you sign in, your contacts, Gmail messages, Calendar events and other information from these applications and services on the Web are synchronised with your phone. If you do not sign in to a Google account during setup, you are asked to sign in or create a Google account the first time you start an application that requires one, such as Gmail or Android Market™.

- If you have an enterprise account through your company or other organisation, your IT department may have special instructions on how to sign in to that account.

Calls

Making a call

- 1 Touch  to open the keypad.
- 2 Enter the number using the keypad. To delete a digit, touch the **Clear** icon  .
- 3 Touch the **Call** icon  to make a call.
- 4 To end a call, touch the **End** icon .

TIP To enter “+” to make international calls, touch and hold .

Calling your contacts

- 1 Touch  to open your contacts.
- 2 Scroll through the contact list or enter the first letter(s) of the contact you want to call by touching **Search**.
- 3 In the list, touch the contact you want to call.

Answering and rejecting a call

When your phone rings, touch the **Answer** icon .

Touch the **Decline** icon  to reject an incoming call.

Drag the **Excuse Messages** bar from the bottom if you want to send one.

Adjusting call volume

To adjust the in-call volume during a call, use the Volume Up and Down key on the left side of the phone.

Making a second call

- 1 During your initial call, tap on the **Menu** and select .
- 2 Dial the number, or search your contacts.
- 3 Touch the **Call** icon  to connect the call.

Calls

4 Both calls are displayed on the call screen. Your initial call is locked and put on hold.

5 Touch the displayed number to toggle between calls. Or touch



Merge calls to make a conference call.

6 To end active calls, touch **End** or press the **Home** key and slide the notification bar down and select **End call**.

NOTE: you are charged for each call you make.

Viewing your call logs

In the Home screen, touch  and choose the **Call log** tab.

View a complete list of all dialled, received and missed voice calls.

TIP Press the **Menu** key, then touch **Delete all** to delete all the recorded items.

Call settings

You can configure phone call settings such as call forwarding and other special features offered by your carrier.

1 In the Home screen, touch the **Applications** tab to open the applications menu.

2 Scroll and touch **Settings**.

3 Tap **Call settings** and choose the options that you want to adjust.

TIP Touch any call log entry to view the date, time and duration of the call.

Contacts

Add contacts to your phone and synchronise them with the contacts in your Google account or other accounts that support contact syncing.

Searching for a contact

In the Home screen

- 1 Touch  to open your contacts.
- 2 Touch **Search** and enter the contact name using the keyboard.

Adding a new contact

- 1 Touch , enter the new contact's number, then press the **Menu** key. Touch **Add to contacts** and then **Create new contact**.
- 2 If you want to add a picture to the new contact, touch . Choose from **Capture picture** or **Pick from Gallery**.

- 3 Select the contact type by touching .
- 4 Touch a category of contact information and enter the details about your contact.
- 5 Touch **Save**.

Favourite contacts

You can classify frequently called contacts as favourites.

Adding a contact to your favourites

- 1 Touch  to open your contacts.
- 2 Touch a contact to view its details.
- 3 Touch the star to the right of the contact's name. The star turns gold.

Removing a contact from your favourites list

- 1 Touch  to open your contacts.

Contacts

- 2** Touch the **Groups** tab, select **Favorites** at the top of the list and choose a contact to view its details.
- 3** Touch the gold star to the right of the contact's name. The star turns grey and the contact is removed from your favourites.

Messaging/email

Messaging

Your LG-P690 combines SMS and MMS into one intuitive, easy-to-use menu.

Sending a message

- 1 Touch the  icon, then touch **New Message**.

- 2 Enter a contact name or call number into the **To** field. As you enter the contact name, matching contacts appear. Touch a suggested recipient. You can add multiple contacts.

NOTE: you are charged for one text message for every person you send the message to.

- 3 Touch **Enter message** to start entering your message.

TIP Press the **Menu** key to open the Options menu. Choose from **Call**, **Add subject**, **Discard**, **Attach** and **Insert smiley**, **All messages**.

TIP You can touch the  icon to attach a file to your message.

- 4 Touch **Send** to send your message.
- 5 Responses appear on the screen. As you view and send additional messages, a message thread is created.

WARNING

The 160-character limit may vary from country to country depending on the language and how the SMS is coded.

WARNING

If an image, video or audio file is added to an SMS message, it is automatically converted into an MMS message and you are charged accordingly.

Messaging/email

NOTE: when you get an SMS message during a call, you receive a notification.

Changing your message settings

Your LG-P690 message settings are predefined so that you can send messages immediately. You can change the settings based on your preferences.

Touch the **Messaging** icon in the Home screen and press the **Menu** key, then tap **Settings**.

Setting up your email

Touch the **Applications** tab and select **Email**. If the email account is not set up, you need to start the email setup wizard.

TIP If an email account is already set up, the wizard is not activated.

You can select the mailbox type from **Microsoft Exchange** and **Others**.

Microsoft Exchange email account

Email address – enter the email address.

Domain/Username – enter the account username.

Password – enter the account password.

Server – enter the server address.

Use secure connection (SSL)

– choose whether to use SSL for Microsoft Exchange also to accept all SSL certificates.

Sync contacts – choose whether to synchronise the Microsoft Exchange account contacts.

Sync calendar – choose whether to synchronise the Microsoft Exchange account calendar.

Touch the **Next** button to connect to the server.

The **Setup complete** screen appears and you need to enter a “name” for the account and your name.

The account will now appear in the list of accounts.

Others (POP3, IMAP) email account

Email address – enter the email address.

Password – enter the account password.

The **Manual setup** screen will appear and you will need to enter a “name” .

The account will now appear in the list of accounts.

Incoming server – enter the incoming email server address.

Port – each account’s default number is displayed.

Security type – choose from TLS, SSL and Off.

Outgoing server – enter the outgoing email server address.

Port – each account’s default number is displayed.

Security type – choose from TLS, SSL and Off.

Accounts screen

The **Accounts** screen lists your combined inbox and each of your email accounts.

Touch the **Applications** tab and select **Email**. The **Account list** screen appears.

You can touch an account to view its **Inbox**. The account from which you send email by default is indicated with a tick.

Messaging/email

Composing and sending email

To compose and send a message:

- 1** In the **Email** application, press the **Menu** key and then **Compose**.
- 2** Enter an address for the message's recipient. As you enter text, matching addresses from your list of contacts are suggested. Separate multiple addresses with commas.
- 3** Press the **Menu** key and **Add Cc/Bcc** to Cc or Bcc other contacts/email addresses.
- 4** Enter the text of the message body.
- 5** Touch **Add attachment** to attach a file to your message.
- 6** Touch **Send**.
If you're not ready to send the message, press the **Menu** key and then **Save as draft** to save it to the **Drafts** folder. Touch

the draft message in the **Drafts** folder to resume working on it. Your message is also saved as a draft if you touch the **Back** key  before sending it.

Touch **Discard** to abandon and delete a message, including a saved draft. If you aren't connected to a network, for example if you're working in airplane mode, the messages you send are stored in your **Outbox** folder until you connect to a network. If it contains any pending messages, the **Outbox** is displayed on the **Accounts** screen.

Please note that messages sent using an Exchange account are not located on the phone; they are located on the Exchange server itself.

If you want to see your sent messages in the **Sent** folder (or with the **Sent** label), you often

need to open the **Sent** folder/label and select **Refresh** from the Options menu.

TIP When a new email arrives in the inbox, you will receive a notification by sound or vibration. Tap the email notification to stop notifications.

Working with account folders

Each account has **Inbox**, **Outbox**, **Sent** and **Drafts** folders. Depending on the features supported by your account's service provider, you may have additional folders.

Adding and editing email accounts

To add an email account

- 1 Touch the **Applications** tab, then select **Email**.

- 2 Select **Microsoft Exchange** or **Others**.

- 3 Enter the information for adding the account. (Refer to 'Setting up your email'.)

- 4 Enter a name to set how you want your name to appear in outgoing mail, then touch **Done**.

To change account settings

- 1 Open the **Accounts** screen.
- 2 Touch and hold the account you want to change. In the menu that opens, touch **Account settings**.

To delete an email account

- 1 Open the **Accounts** screen.
- 2 Touch and hold the account you want to delete.
- 3 Touch **Remove account** in the menu that opens, then touch **OK** in the dialog box to confirm.

Camera

Getting to know the viewfinder

Brightness - this defines and controls the amount of sunlight entering the image. Slide the brightness indicator along the bar towards “-” to lower the brightness of the image or towards “+” to increase it.

Zoom - zoom in or zoom out. Alternatively you can use the side volume keys.



Video mode - slide this icon down to switch to video mode.

Taking a photo

Gallery - touch to view the last photo you captured. This enables you to access your gallery and view saved photos from within camera mode.

Settings - touch this icon to open the Settings menu. See 'Using the advanced settings'.

Image size – touch to set the size (in pixels) of the picture you take.

Scene mode – choose from **Auto**, **Portrait**, **Landscape**, **Sports**, **Night** and **Sunset**.

TIP Close all shortcut options to give a clearer viewfinder screen. Touch the centre of the viewfinder once. To display the options, touch the screen again.

Taking a quick photo

- 1 Open the **Camera** application.
- 2 Hold the phone horizontally and point the lens towards the subject you want to photograph.
- 3 In the centre of the viewfinder screen, a focus box starts blinking as it tries to get the subject in focus.
- 4 The focus box turns green when the subject is in focus.
- 5 Press the capture button. You can press the capture button whether the focus box is green or not.
- 6 Press the capture  button.

Once you've taken the photo

Your captured photo appears on the screen.

Share

Touch to share your photo using **SmartShare**, **Bluetooth**, **Email**, **Gmail**, **Messaging**, **Picasa** or **Social+**.

NOTE: additional charges may apply when MMS messages are downloaded while roaming.

TIP

If you have an SNS account and set it up on your phone, you can share your photo with the SNS community.

Set as

Touch to use the image as a **Contact icon** or **Wallpaper**.

Rename

Touch to edit the name of the selected picture.



Touch to delete the image.

Camera



Touch to take another photo immediately. Your current photo is saved.



Touch to view a gallery of your saved photos.

Using the advanced settings

In the viewfinder, touch  to open all advanced options.

Change camera settings by scrolling through the list. After selecting the option, touch the **Back** key.

ISO – the ISO rating determines the sensitivity of the camera's light sensor. The higher the ISO, the more sensitive the camera is. This is useful in darker conditions when you cannot use the flash. Select from ISO values of **Auto**, **400**, **200** and **100**.

White balance – choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent** and **Cloudy**.

Color effect – choose a colour tone for your new photo.

Timer – the self-timer allows you to set a delay after the capture button is pressed. Select **Off**, **3 secs.**, **5 secs.** or **10 secs.** This is ideal if you want to be in the photo.

Image quality – choose from **Super fine**, **Fine** and **Normal**.

The finer the quality, the sharper the photo. However, the file size increases as a result, which means you can store fewer photos in the memory.

Auto review – if you turn **Auto review** on, it automatically shows you the picture you just took.

Shutter sound – select one of four shutter sounds.

Tag location – activate to use your phone's location-based services. Take pictures wherever you are and tag them with the location. If you upload tagged

pictures to a blog that supports geotagging, you can see the pictures displayed on a map.

NOTE: this function is only available when GPS is active.

 – Restore all camera default settings.

 – Touch whenever you want to know how this function operates. This provides you with a quick guide.

TIP When you exit the camera, some settings return to their defaults, such as white balance, colour effect, timer and scene mode. Check these before you take your next photo.

TIP The Settings menu is superimposed over the viewfinder so, when you change elements of the image colour or quality, you see a preview of the image change behind the Settings menu.

Viewing your saved photos

Access your saved photos while in **Camera** mode. Just touch  and touch the screen. You then see **Slideshow** and **Menu**.

TIP Flick left or right to view other photos or videos.



- Touch to see a slideshow.



- Touch to share the contents or delete a photo. Touch

More for more options.

Details – check information on the content.

Set as – set as a contact icon or wallpaper.

Crop – crop your photo.

Move your finger across the screen to select the area.

Rotate Left / Rotate Right
– rotate left or right.

Video camera

Getting to know the viewfinder

Brightness - this defines and controls the amount of sunlight entering the video. Slide the brightness indicator along the bar towards “-” to lower the brightness of the video or towards “+” to increase it.

Zoom - zoom in or zoom out. Alternatively you can use the side volume keys.



Camera mode - slide this icon up to switch to camera mode.

Start recording

Gallery - touch to view the last video you recorded. This enables you to access your gallery and view your saved videos from within video mode.

Settings - touch this icon to open the settings menu. See 'Using the advanced settings'.

Duration – set a duration limit for your video. Choose between Normal and MMS to limit the maximum size to send as an MMS message.

Video size – touch to set the size (in pixels) of the video you record.

Shooting a quick video

- 1 Slide the **Camera** mode button down and the icon changes to .
- 2 The video camera viewfinder appears on the screen.
- 3 Holding the phone horizontally, point the lens towards the subject you want to capture in your video.
- 4 Press the Record  button once to start recording.
- 5 REC appears at the bottom of the viewfinder with a timer showing the length of the video.
- 6 Touch  on the screen to stop recording.

After shooting a video

A still image representing your video will appear on the screen.

Play

Touch to play the video.

Share

Touch to share your

video using **SmartShare**,

Bluetooth, Email,

Gmail, Messaging or

YouTube.

NOTE: additional charges may apply when MMS messages are downloaded while roaming.

Rename

Touch to edit the name of the selected video.



Touch to shoot another video right away. Your current video is saved.



Touch to delete the video you just made. Confirm by

touching **OK**. The viewfinder reappears.



Touch to view a gallery of your saved videos.

Video camera

Using the advanced settings

Using the viewfinder, touch  to open all the advanced options. Adjust the video camera setting by scrolling through the list. After selecting the option, touch the **Back** key.

White balance – white balance ensures that the white areas in your video are realistic. To enable your camera to adjust the white balance correctly, you may need to determine the light conditions.

Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent** and **Cloudy**.

Color effect – choose a colour tone to use for your new view.

Video quality – choose from **Super fine**, **Fine** and **Normal**.

Audio recording – choose **Mute** to record a video without sound.

Auto review – auto review automatically shows you the video you just recorded.

 – Restore all video camera default settings.

 – Touch if you want to know how this function operates. This provides you with a quick guide.

Watching your saved videos

- 1 In the viewfinder, touch .
- 2 Your gallery appears on the screen.
- 3 Touch a video once to bring it to the front of the gallery. It starts playing automatically.

Adjusting the volume when viewing a video

To adjust the volume of a video while it is playing, use the volume keys on the left-hand side of the phone.

Multimedia

You can store multimedia files on a memory card to have easy access to all your image and video files.

Touch the **Applications** tab, then select **Gallery**. Open a list of catalogue bars that store all your multimedia files.

NOTE: make sure you install a memory card in the phone to save photos and access all your pictures. Without a memory card, the phone does not display photos or videos without Picasa images, which are in your Picasa album.

View model

Touch **Gallery**. Folder view is displayed.

Touch any folder and it turns to grid view mode. If you tap a photo, it changes into full view mode.

Timeline view

LG-P690 **Gallery** provides a timeline view of your photos and videos. In grid view mode, drag  to the right and the date you took your photos is displayed, starting with the most recent. If you select a specific date, all the photos you took on that day are grouped.

Using SmartShare

SmartShare provides you with a better way to enjoy multimedia contents with other DLNA (Digital Living Network Alliance) enabled devices.

*** Share your media contents with other DLNA devices (DMS)**

1 In the Home screen, touch the **Applications** tab and select **SmartShare**.

Multimedia

- 2 Press the **Menu** key and select **Settings**.
- 3 Touch the Discoverable tickbox to turn on.
- 4 You can change your device name, icon and select the sharing content types.

*** Let your renderer device (e.g. TV) play multimedia contents from remote content library (e.g. PC)**

- 1 Touch the top right button to select the device from a list of renderers.
- 2 Touch the top left button and select a remote content library.
- 3 You can browse the remote content library.
- 4 Touch a content thumbnail or press the **Menu** key and select the Play button.

Notice: check that your device is connected to your home network using a Wi-Fi connection in order to use this application.

Notice: some DLNA-enabled devices (e.g. TV) support only DMP features of DLNA and will not appear in the renderer device lists.

Music

Your LG-P690 has a built-in music player that lets you play all your favourite tracks. To access the music player, On the home screen, touch the Applications tab and select **Music**.

Playing a song

- 1 In the Home screen, touch the **Applications** tab and select **Music**.
- 2 Touch **Songs**.
- 3 Select the song you want to play.
- 4 Touch  to pause the song.
- 5 Touch  to skip to the next song.

- 6** Touch  to go back to the beginning of the song. Touch  twice to return to the previous song.
- To change the volume while listening to music, press the up and down volume keys on the left-hand side of the phone.
- Touch and hold any song in the list. It displays **Play, Add to playlist, Use as phone ringtone, Delete, Details, Share** and **Search** as options.

NOTE: music file copyrights may be protected by international treaties and national copyright laws.

Therefore, it may be necessary to obtain permission or a license to reproduce or copy music.

In some countries, national laws prohibit private copying of copyrighted material. Before downloading or copying the file, check the national laws of the relevant country concerning the use of such material.

Transferring files using USB mass storage devices

To transfer files using USB devices

- 1** Connect the LG-P690 to a PC using a USB cable.
- 2** If you haven't installed LG Android Platform Driver on

Multimedia

your PC, you need to change the settings manually. Choose

Settings > Storage, then select **Mass storage only**.

3 Touch **Turn on USB storage**.

4 You can view the mass storage contents on your PC and transfer the files.

NOTE: you need to install an SD card first. Without an SD card, you cannot use USB mass storage.

NOTE: if you installed LG Android Platform Driver, you will immediately see a pop-up saying Turn on USB storage.

How to save music/video files on your phone

1 Connect your phone to the PC using the USB cable. In the Home screen, touch and drag the status bar down. Select

USB connected > Turn on USB storage. Open folderto view files in your PC.

If you didn't install LG Android Platform Driver on your PC, you must set it up manually.

For more information, refer to 'Transferring files using USB mass storage devices'.

2 Save music or video files from the PC to the phone's removable storage.

- You can copy or move files from your PC to your phone's removable storage using a card reader.

- If there is a video file with a subtitle file (*.srt file with the same name as the video file), place it in the same folder to display subtitles automatically when playing the video file.

- When downloading music or video files, copyrights must be secured. Note that corrupted files or files with incorrect extensions may damage your phone.

Moving contacts from your old phone to your new phone

Export your contacts as a CSV file from your old phone to your PC using a PC sync program.

- 1** Download PC Suite IV from www.lg.com and install it on the PC. Run the program and connect your Android mobile phone to the PC using the USB cable.
- 2** Select the **Contacts** icon. Go to **Menu > More > Import/Export** and select the CSV file saved on your PC.
- 3** If the fields in the imported CSV file are different from those in PC Suite IV, you need to map the fields. After mapping the fields, click OK. The contacts are then added to PC Suite IV.
- 4** If PC Suite IV detects the connection of your LG-P690

phone (using the USB cable), click Sync or Sync contacts to synchronise the contacts saved on your PC with your phone.

Sending data from your phone using Bluetooth

Sending data using Bluetooth

You can use Bluetooth to send data by running a corresponding application, not from the Bluetooth menu as on most other mobile phones.

* **Sending pictures:** run the

Gallery application, then select **Picture > Menu**. Click **Share**, then select **Bluetooth**. Check whether Bluetooth is turned on, then select **Scan for devices**. Choose the device you want to send data to from the list.

* **Exporting contacts:** run the Contacts application. Touch the address you want to export to. Press the **Menu** key and select

Multimedia

Share > Bluetooth. Check whether Bluetooth is turned on, then select **Scan for devices.** Choose the device you want to send data to from the list.

* **Sending multi-selected contacts:** Run the Contacts application. To select more than one contact, press the **Menu** key and touch **Share > Select all > Share > Bluetooth** or Email or Gmail or Messaging.

* **Connecting to FTP (only FTP server is supported on this handset):** select **Settings**

> **Wireless & networks > Bluetooth Settings.** Select the **Discoverable** box so you can search for your phone on other devices. Find the FTP service and connect to the FTP server.

- If you want to search for this phone from other devices, go to **Settings > Wireless**

& networks > Bluetooth Settings. Select the **Discoverable** box. The box is cleared after 120 seconds.

Using the radio

Your LG-P690 has a built-in FM radio so you can tune in to your favourite stations and listen on the go.

NOTE: you must attach your headphones to listen to the radio. Insert them into the headphone jack.

Searching for stations

You can tune in to radio stations by searching for them manually or automatically. They are then saved to specific channel numbers, so you don't have to find them again. You can store up to 48 channels on your phone.

Tuning in automatically

- 1** In the Home screen, touch the **Applications** tab and select **FM Radio**.
- 2** Press the **Menu** key, then touch **Auto scan**.
- 3** If there are preset channels, you will see a pop-up asking "Reset all channels and start auto scan?". If you choose OK, all the preset channels are deleted and **Auto scan** starts.
- 4** During auto scanning, touch **Stop** if you want to stop scanning. Only scanned channels are saved before you stop scanning.

NOTE: you can also manually tune in to a station using the displayed wheel.

Resetting channels

Press the **Menu** key and choose **Reset channel** to reset the current channel, or choose **Reset all channels** to reset all the channels.

Listening to the radio

Touch **Listen Via** to set the speaker or headset to listen to the radio.

TIP To improve radio reception, extend the headset cord as this also functions as the radio antenna.

WARNING

If you connect a headset not specifically made for radio reception, radio reception may be poor.

Utilities

Setting your alarm

- 1 In the Home screen, touch the **Applications** tab and select **Clock**.

- 2 If you want to add a new alarm, touch  and select **Add Alarm**.

- 3 Set the time, then touch  to turn on the alarm. After you set the time, the LG-P690 lets you know how much time is left before the alarm will sound.

- 4 Set **Repeat**, **Ringtone** or **Vibrate**, then add a label to name the alarm. Touch **Done**.

NOTE: to change alarm settings on alarm list screen, press the **Menu** key and select **Settings**.

You can adjust the below options:

Alarm in silent mode, **Alarm volume**, **Snooze duration** and **Side button behavior**.

Using your calculator

- 1 In the Home screen, touch the **Applications** tab and select **Calculator**.

- 2 Touch the number keys to enter numbers.

- 3 For simple calculations, touch the function you want (+, −, x or ÷) followed by =.

- 4 For more complex calculations, press the **Menu** key, touch the **Advanced panel**, then choose sin, cos, tan, log and so on.

Adding an event to your calendar

- 1 In the Home screen, touch the **Applications** tab and select **Calendar**.

- 2 To check the event, touch the date. Touch and hold if you want to add a new event. Touch **New event**.

- 3 Touch **What** then enter the event name. Check the date and enter the time you want your event to start and finish.
- 4 Also, touch **Where** then enter the location.
- 5 If you want to add a note to your event, touch **Description** and enter the details.
- 6 If you want to repeat the alarm, set **Repetition**, and set **Reminders**, if necessary.
- 7 Touch **Done** to save the event in the calendar. A coloured square in the calendar marks all days that have saved events. An alarm sounds at the event start time to help you stay organised.

Changing your calendar view

- 1 In the Home screen, touch the **Applications** tab and select **Calendar**. Press the **Menu** key.
- 2 Select the calendar view for a particular day, week or month.

Polaris Viewer

Polaris Viewer is a professional mobile office solution that lets users conveniently view various types of office documents, including Word, Excel and PowerPoint files, anywhere, anytime, using their mobile devices.

Managing files

Polaris Viewer provides mobile users with convenient file management features, including copying, cutting and pasting, and deleting files and folders right on the device.

Utilities

Viewing files

Mobile users can now easily view a wide variety of file types, including Microsoft Office documents and Adobe PDF, right on their mobile devices. When viewing documents using Polaris Viewer, the objects and layout remain the same as in their original documents.

Voice recorder

Use the voice recorder to record voice memos or other audio files.

Recording a sound or voice

- 1 In the Home screen, touch the **Applications** tab and select

Voice Recorder.

- 2 Touch  to begin recording.
- 3 Touch  to end the recording.
- 4 Touch  to listen to the recording.

NOTE: touch  to access your album. You can listen to the saved recording.

Notice: the available recording time may differ from the real time.

Sending the voice recording

- 1 Once you have finished recording, you can send the audio clip by touching **Share**.
- 2 Choose from **Bluetooth**, **Email**, **Gmail** and **Messaging**. When you select **Email**, **Gmail** and **Messaging**, the voice recording is added to the message, then you write and send the message normally.

The Web

Browser

Browser gives you a fast, full-colour world of games, music, news, sport, entertainment and much more, right on your mobile phone. Wherever you are and whatever you enjoy.

NOTE: additional charges apply when connecting to these services and downloading content. Check data charges with your network provider.

Using the web toolbar



Touch to go backwards one page.



Touch to go forwards one page to the one you connected to after the current page. This is the opposite of what happens when you press the **Back** key, which goes to the previous page.



Touch to show all your open windows.



Touch to add new window.



Touch to change web browser settings.



Add/show bookmark and show **Most visited, Read it later** and **History**.

Using options

Press the **Menu** key to view options.



Read it later – add the current web page as a bookmark.



Add RSS Feed – add the current web page to the RSS feed.



Share page – allows you to share the web page with others.



Find on page – allows you to find letters or words on the current web page.



Select text – allows you to copy any text from the web page.

The Web

More

- **Home page:** go to the Home page.
- **Set Home page:** set the current web page as your Home page.
- **Add shortcut to Home:** add the shortcut of the current web page to the Home screen.
- **Page info:** displays the web page information.
- **Downloads:** displays your download history.

TIP To return to the previous web page, press the **Back** key.

Settings

In the Home screen, touch the **Applications** tab then scroll to and touch **Settings**.

Wireless & networks

Here, you can manage Wi-Fi and Bluetooth. You can also set up mobile networks and switch to airplane mode.

Airplane mode – after switching to airplane mode, all wireless connections are disabled.

Wi-Fi – touch to tick: This turns on Wi-Fi to connect to available Wi-Fi networks.

Wi-Fi settings – allows you to set up and manage wireless access points. Set network notification, or add a Wi-Fi network. The advanced Wi-Fi settings screen is accessed from the Wi-Fi settings screen. Press the **Menu** key and touch **Advanced**.

TIP How to obtain the MAC address

To set up a connection in some wireless networks with MAC filters, you may need to enter the MAC address of your LG-P690 into the router.

You can find the MAC address in the following user interface: Touch **Applications > Settings > Wireless & networks > Wi-Fi settings**, and press the **Menu** key. Then select **Advanced > MAC address**.

Bluetooth – touch to tick: This turns on Bluetooth to connect to Bluetooth devices.

Bluetooth settings – set device name & discoverable mode, scan for other devices. Or, check a list of Bluetooth devices that you've previously configured and those detected when the phone last scanned for Bluetooth devices.

Settings

Tethering & portable hotspot

– you can configure the USB tethering and portable Wi-Fi hotspot settings.

VPN settings – displays the list of Virtual Private Networks (VPNs) that you’ve previously configured. Allows you to add different types of VPN.

Mobile networks – set options for data roaming, network mode & operators, access point names (APNs) and so on.

Call settings

< Fixed Dialing Numbers >

Select **Fixed Dialing Numbers** to turn on and compile a list of numbers that can be called from your phone. You’ll need your PIN2, which is available from your operator. Only numbers within the fixed dial list can be called from your phone.

< Voicemail >

Voicemail service – allows you to select your carrier’s voicemail service.

Voicemail settings – if you are using your carrier’s voicemail service, this option allows you to enter the phone number to use for listening to and managing your voicemail.

< Other call settings >

Excuse Messages – when you want to reject a call, you can send a quick message using this function. This is useful if you need to reject a call during a meeting.

Call forwarding – choose whether to divert all calls, when the line is busy, when there is no answer or when you have no signal.

Call barring – select when you would like calls to be barred. Enter the call barring password. Please

check with your network operator about this service.

Call reject – You can add the phone numbers of the person whose call you want to reject.

You can add new number in **Call Reject List > Menu > Add new number**. The incoming calls

received from the Call rejection list numbers will be automatically rejected. In call log, rejected icon would be shown for such calls.

Call costs – view the charges applied to your calls. (This service is network dependent; some operators do not support this function)

Call duration – view the duration of calls including all calls, dialed calls, received calls and last call.

Additional settings – this lets you change the following settings:

Caller ID: choose whether to display your number on an outgoing call.

Call Waiting: if call waiting is activated, the handset will notify you of an incoming call while you are on the phone (depending on your network provider).

Sound

< **General** >

Silent mode – allows you to silence all sounds (including call and notification ringtones) except the audio from music and videos and any alarms you have set. You must silence media and alarms in their own applications.

Vibrate – allows you to set your phone to vibrate when you receive an incoming call.

Volume – allows you to set the volume for ringtones, media and alarms. If you untick the option to use the incoming call volume for notifications, you can set the volume for incoming calls and notifications separately.

Settings

< Incoming calls >

Phone ringtone – allows you to set your default incoming call ringtone.

< Notifications >

Notification ringtone – allows you to set your default notification ringtone.

< Feedback >

Audible touch tones – allows you to set the phone to play tones when using the dialpad to dial numbers.

Audible selection – allows you to set your phone to play a sound when you touch buttons, icons and other onscreen items that react to your touch.

Screen lock sounds – allows you to set your phone to play a sound when locking and unlocking the screen.

Display

Brightness – adjust the screen brightness.

Auto-rotate screen – set to switch orientation automatically when you rotate the phone.

Animation – set to display an animation.

Screen timeout – set the time for screen timeout.

Location & security

Use wireless networks – if you select **Use wireless networks**, your phone determines your approximate location using Wi-Fi and mobile networks. When you select this option, you're asked whether you consent to allowing Google to use your location when providing these services.

Use GPS satellites – if you select **Use GPS satellites**, your phone

determines your location to street level accuracy.

Set up screen lock – set an unlock pattern to secure your phone. Opens a set of screens that guide you through drawing a screen unlock pattern. You can set a **PIN** or **Password** instead of a **Pattern** or leave it as **None**.

When you turn on your phone or wake up the screen, you're asked to draw your unlock pattern to unlock the screen.

Set up SIM/RUIM card lock – set up SIM/RUIM card lock or change the SIM/RUIM PIN.

Visible passwords – select to show passwords as you type them or deselect to hide passwords as you type them.

Select device administrators – add one or more administrators.

Use secure credentials – allows you to access secure certificates.

Install from SD card – choose to install encrypted certificates from your SD card.

Set password – set or change the credential storage password.

Clear storage – clear credentials for all content and reset password.

Applications

You can manage applications and set up quick launch shortcuts.

Unknown sources – default setting to install non-Market applications.

Manage applications – manage and remove installed applications.

Running services – check services that are currently running.

Storage use – view storage used by applications.

Battery use – see what has been using the battery.

Development – set options for application development.

Settings

Accounts & sync

< General sync settings >

Background data – permits applications to synchronise data in the background, whether or not you are actively working in them. Unticking this setting can save battery power and lowers (but does not eliminate) data usage.

Auto-sync – permits applications to synchronise, send and receive data to their own schedule.

< Manage accounts >

List of all Google accounts and other accounts you've added to your phone.

If you touch an account in this screen, its account screen opens.

Privacy

If you select Factory data reset, it will erase all of your personal data from the internal phone storage, including information about your Google account, any other accounts, your system/application data and settings as well as any downloaded applications and DRM licence.

Resetting the phone does not erase any system software updates you have downloaded or any files on your microSD card, such as music or photos. If you reset the phone in this way, you are prompted to re-enter the same information that you did when you first started Android.

Storage

< USB connection mode >

Mass storage only – your phone can be used as a mass storage device if you have a memory card inserted. You can set **Mass storage only** as a default setting of the USB connection mode.

< SD card >

Check total available SD card space. Touch **Unmount SD card** for safe removal. **Erase SD card** if you want to delete all data from the SD card.

< Internal storage >

Checks the available space.

Language & keyboard

Set Device Language and keyboard settings.

Voice input & output

< Voice input >

Voice recognizer settings – use the **Voice recognizer settings** to configure the Android voice input feature.

- **Language:** opens a screen where you can set the language you use speech to enter text.
- **SafeSearch:** opens a dialog where you can set whether you want the Google SafeSearch filter to block some results.
- **Block offensive words:** when unticked, Google voice recognition will recognise and transcribe words many people consider offensive, when you use speech to enter text. When ticked, Google voice recognition replaces those words in transcriptions with a placeholder comprised of hash symbols (#).

Settings

< Voice output >

Text-to-speech settings – use the **Text-to-speech settings** to configure the Android text-to-speech synthesiser for applications that can use this feature.

NOTE: if you don't have speech synthesiser data installed, only the **Install voice data setting** is available.

- **Listen to an example:** plays a brief sample of the speech synthesiser, using your current settings.
- **Always use my settings:** tick to use the settings on this screen in place of speech synthesiser settings available in other applications.
- **Default Engine:** opens a dialog where you can set the text-to-speech application you want to use, if you have more than one installed.

- **Install voice data:** if your phone does not have speech synthesiser data installed, this connects to Android Market and guides you through the process of downloading and installing the data. This setting is not available if the data is already installed.
- **Speech rate:** opens a dialog where you can select how quickly you want the synthesiser to speak.
- **Language:** opens a dialog where you can select the language of the text you want the synthesiser to read. This is particularly useful in combination with **Always use my settings** to ensure that text is spoken correctly in a variety of applications.
- **Pico TTS:** configure the **Pico TTS settings**.

Accessibility

Use the **Accessibility** settings to configure accessibility plug-ins you have installed on your phone.

NOTE: requires additional plug-ins.

Date & time

Use **Date & time** settings to set your preference for how dates are displayed. You can also use these settings to set your own time and time zone rather than obtaining the current time from the mobile network.

About phone

View legal information and check phone status and software version.

Wi-Fi

With Wi-Fi, you can use high-speed Internet access within the coverage of the wireless access point (AP).

Enjoy wireless Internet using Wi-Fi, without extra charges.

Turning on Wi-Fi

From the Home screen, open the notification drawer and touch .

Or touch **Applications** > **Settings** > **Wireless & networks**, then > **Wi-Fi** .

Connecting to Wi-Fi

Choose the Wi-Fi network you want to connect to. If you see , you need to enter a password to connect.

NOTE:

- if you are outside the Wi-Fi coverage area and choose 3G connection, additional charges may apply.
- If your phone goes into sleep mode when connected to Wi-Fi, the Wi-Fi connection is automatically disabled.

Settings

- In this case, if your phone has access to 3G data, it may connect to the 3G network automatically and additional charges may apply.
- The LG-P690 supports WEP, WPA/WPA2-PSK and 802.1x EAP security. If your Wi-Fi service provider or network administrator sets encryption for network security, enter the key into the pop-up window. If encryption is not set, this pop-up window is not shown. Obtain the key from your Wi-Fi service provider or network administrator.

Sharing your phone's data connection

You can share your phone's mobile data connection with a single computer via a USB cable (USB tethering). You can also share your phone's data connection with up

to five devices at a time by turning your phone into a portable Wi-Fi hotspot.

When your phone is sharing its data connection, an icon appears in the status bar and as an ongoing notification in the notifications drawer.

Icon	Description
	USB tethering is active
	Portable Wi-Fi hotspot is active
	Both USB tethering and portable hotspot are active

For the latest information about tethering and portable hotspots, including supported operating systems and other details, visit <http://www.android.com/tether>.

NOTE: additional costs may be incurred when connecting and using online services. Check data charges with your network provider.

USB tethering & portable Wi-Fi hotspot settings

1 In the Home screen, touch the **Applications** tab and select **Settings**.

2 Touch **Wireless & networks** and select **Tethering & portable hotspot**.

3 Choose options that you want to adjust.

USB tethering – tick to share your phone’s mobile network data connection with your computer via a USB connection.

Portable Wi-Fi hotspot – tick to share your phone’s mobile network data connection as Wi-Fi sharing.

Help – opens a dialog with information about USB tethering and portable Wi-Fi hotspots as well as information on where to learn more.

To share your phone’s data connection via USB

If your computer is running Windows 7 or a recent distribution of some flavours of Linux (such as Ubuntu), you don’t usually need to prepare your computer for tethering. But if you’re running an earlier version of Windows or another operating system, you may need to prepare your computer to establish a network connection via USB. For the most current information about which operating systems support USB tethering and how to configure them, visit <http://www.android.com/tether>.

Settings

USB tethering and data sharing

You can't share your phone's data connection and microSD card via USB at the same time. If you are using your USB connection to make your microSD card available to your computer, you must disconnect it first.

- 1 Use the USB cable that came with your phone to connect your phone to your computer.
- 2 In the Home screen, touch the **Applications** tab and select **Settings**.
- 3 Touch **Wireless & networks** and select **Tethering & portable hotspot**.
- 4 Tick **USB tethering**.
 - The phone starts sharing its mobile network data connection with your computer via the USB connection. An ongoing notification  is added to

the status bar and notifications drawer.

- 5 Untick **USB tethering** to stop sharing your data connection. Or just disconnect the USB cable.

To share your phone's data connection as a portable Wi-Fi hotspot

- 1 In the Home screen, touch the **Applications** tab and select **Settings**.
- 2 Touch **Wireless & networks** and select **Tethering & portable hotspot**.
- 3 Tick **Portable Wi-Fi hotspot**.
 - After a moment, the phone starts broadcasting its Wi-Fi network name (SSID) so you can connect to it with up to five computers or other devices. An ongoing notification  is added to the status bar and notifications drawer.

- When **Portable Wi-Fi hotspot** is ticked, you can change its network name or secure it.

- 4** Untick **Portable Wi-Fi hotspot** to stop sharing your data connection via Wi-Fi.

To rename or secure your portable hotspot

You can change the name of your phone's Wi-Fi network name (SSID) and secure its Wi-Fi network.

- 1** In the Home screen, touch the **Applications** tab and select **Settings**.

- 2** Touch **Wireless & networks** and select **Tethering & portable hotspot**.

- 3** Ensure **Portable Wi-Fi hotspot** is ticked.

- 4** Touch **Portable Wi-Fi hotspot settings**.

- 5** Touch **Configure Wi-Fi hotspot**.

- The **Configure Wi-Fi hotspot** dialog opens.
- You can change the network SSID (name) that other computers see when scanning for Wi-Fi networks.
- You can also touch the **Security** menu to configure the network with Wi-Fi Protected Access 2 (WPA2) security, with a pre-shared key (PSK).
- If you touch the **WPA2 PSK** security option, a password field is added to the **Configure Wi-Fi hotspot** dialog. If you enter a password, you will need to enter that password when you connect to the phone's hotspot with a computer or other device. Or touch **Open** in the **Security** menu to remove security from your Wi-Fi network.

Settings

ATTENTION!

If you set the security option as **Open**, you cannot prevent unauthorised usage of online services by other people and additional charges can be incurred. To avoid unauthorised usage, you are advised to keep the security option active.

6 Touch Save.

Software update

Phone software update

LG Mobile phone software update from the Internet

For more information about using this function, please visit the <http://update.lgmobile.com> or <http://www.lg.com/common/index.jsp> -> select country and language.

This feature allows you to update the firmware on your phone to a newer version conveniently from the Internet without needing to visit a service centre. This feature is only available if and when LG makes the newer version of the firmware available for your device.

As the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure you check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable

or battery during the upgrade may seriously damage your mobile phone.

NOTE: LG reserves the right to make firmware updates available only for selected models at its own discretion and does not guarantee the availability of the newer version of the firmware for all handset models.

LG Mobile Phone software update via Over-the-Air (OTA)

This feature allows you to update the firmware of your phone to the newer version conveniently via OTA without connecting the USB data cable. This feature is only available if and when LG makes the newer version of the firmware available for your device.

First, you can check the software version on your mobile phone:

Settings > About phone > Software update > Software update check.

Software update

You can also delay the update by 1 hour, 4 hours, 8 hours or 24 hours. In this case, the application will notify you to update when the time is up. You can also rearrange an update manually.

NOTE: This feature is dependent on the network service provider, region or countries.

DivX Mobile **DIVX**[™]

ABOUT DIVX VIDEO: DivX[®] is a

digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified[®] device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-

DEMAND: This DivX Certified[®] device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the

DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

DivX Certified[®] to play DivX[®] video up to 320x240

DivX[®], DivX Certified[®] and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under licence.

Notice:


Open Source Software

To obtain the corresponding source code under GPL, LGPL, MPL and other open source licences, please visit <http://opensource.lge.com/>. All referred licence terms, disclaimers and notices are available for download with the source code.

Accessories


These accessories are available for use with the LG-P690.
(Items described below may be optional.)

Travel adapter

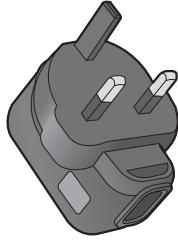

Data cable

Connect your
LG-P690 and
PC.

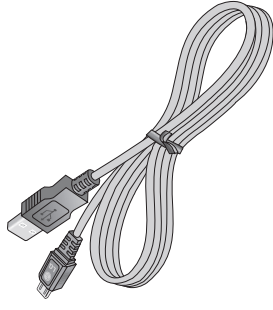

Battery



User Guide

Learn more
about your LG-
P690.



Stereo headset



NOTE:

- Always use genuine LG accessories.
- Failure to do this may void your warranty.
- Accessories may vary in different regions.

Technical data

Ambient temperatures

Max: +55°C (discharging), +45°C (charging)

Min: -10°C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc, LG Twin Towers 20,
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

Model Name

LG-P690

Trade Name

LG

CE0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.8.1, EN 301 489-07 V1.3.1

EN 301 489-17 V2.1.1, EN 301 489-19 V1.2.1, EN 301 489-24 V1.5.1

EN 301 511 V9.0.2

EN 301 908-1 V4.2.1 EN 301 908-2 V4.2.1,

EN 300 328 V1.7.1

EN 50360:2001, EN62209-1:2006, EN62209-2:2010

EN 60950-1 : 2006 + A11 :2009

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, ForsythHouse, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility
that the product mentioned above to which this
declaration relates complies with the above mentioned
standards, regulation and directives

Name

Doo Haeng Lee / Director

Issued Date

Jun.20, 2011

LG Electronics Inc. -EU Representative
Veluwezoom 15, 1327 AE Almere, The Netherlands

Signature of representative

Troubleshooting

This chapter lists some problems you might encounter while using your phone. Some problems require you to call your service provider, but most are easy to fix yourself.

Message	Possible causes	Possible corrective measures
SIM error	There is no SIM card in the phone or it is inserted incorrectly.	Make sure that the SIM card is correctly inserted.
No network connection/ Losing network	Signal is weak or you're outside the carrier network. Operator applied new services.	Move towards a window or into an open area. Check the network operator coverage map. Check whether the SIM card is more than 6~12 months old. If so, change your SIM at your network provider's nearest branch. Contact your service provider.
Codes do not match	To change a security code, you will need to confirm the new code by re-entering it. The two codes you have entered do not match.	If you forget the code, contact your service provider.
Any application cannot be set	Not supported by service provider or registration required.	Contact your service provider.

Troubleshooting

Message	Possible causes	Possible corrective measures
Calls not available	Dialing error New SIM card inserted. Pre-paid charge limit reached.	New network not authorised. Check for new restrictions. Contact service provider or reset limit with PIN2.
Phone cannot be switched on	On/Off key pressed too briefly. Battery is not charged. Battery contacts are dirty.	Press the On/Off key down for at least two seconds. Charge battery. Check charging indicator on the display. Clean the battery contacts.
Charging error	Battery is not charged. Outside temperature is too hot or cold. Contact problem No voltage Charger defective Wrong charger Battery defective	Charge battery. Make sure phone is charging at a normal temperature. Check the charger and connection to the phone. Check the battery contacts and clean them if necessary. Plug the charger into a different socket. If the charger does not warm up, replace it. Only use original LG accessories. Replace battery.

Message	Possible causes	Possible corrective measures
Number not permitted	The Fixed dialling number function is on.	Check the Settings menu and turn the function off.
Impossible to receive / send SMS & picture	Memory full	Delete some messages from the phone.
Files not opening	Unsupported file format	Check the file formats that can be supported.
SD card not working	FAT16, FAT32 file system supported	Check SD card file system via card reader, or format SD card using the phone.
The screen does not turn on when I receive a call.	Proximity sensor problem	If you use any protection tape or case, check to see if it has covered the area around the proximity sensor. Make sure that the area around the proximity sensor is clean.
No sound	Vibration mode	Check the settings status of the sound menu to make sure you are not in vibrate or silent mode.
Hang up or freeze	Intermittent software problem	Remove the battery, insert it again and switch on the phone. Try to perform a software update via the website.

Troubleshooting

Message	Possible causes	Possible corrective measures
Phone locked and does not function.	Restarting the phone	1. Turn the phone off. 2. Remove the battery cover. 3. Install the battery. 4. Close the cover. 5. Turn the phone on again.