



LG

Life's Good

繁體中文
簡體中文
ENGLISH

使用手冊
用戶手冊
User Guide

LG-P936



CE 0168 

P/N : MFL67527205 (1.0)

www.lg.com



繁體中文

LG-P936 使用手冊

本指南將幫助您開始使用您的手機。

如果需要更多資訊，請瀏覽 www.lg.com。

- 此手冊中的部份內容可能會因手機程式之改良或不同網絡商提供的服務而令實際情況有所不同,這並不會另行通知。
- 由於使用觸控螢幕鍵盤，我們不建議視障人士使用此手機。
- Copyright © LG Electronics, Inc.。版權所有。LG 及 LG 標誌乃 LG 集團及其相關公司的註冊商標。所有其他商標均屬於其擁有者。
- Google™、Maps™、Gmail™、YouTube™、Talk™ 及 Play Store™ 均為 Google, Inc. 的商標。



目錄

安全及有效使用準則.....	5	輸入重音字母.....	32
了解您的手機.....	10	Google 帳戶設定.....	33
您的手機.....	16	建立您的 Google 帳戶.....	33
入門指南.....	18	登入您的 Google 帳戶.....	33
安裝 SIM 卡及電池.....	18	連接到網絡及裝置.....	35
為手機充電.....	19	Wi-Fi.....	35
插入 micro SD 卡.....	19	藍芽.....	36
移除 micro SD 卡.....	20	數據網絡共享.....	37
格式化 microSD 卡.....	21	手機熱點.....	38
在應用程式之間切換及結束 應用程式.....	21	Wi-Fi Direct	38
HDMI	22	Wi-Fi Share.....	39
您的桌面.....	23	智能分享.....	39
觸控螢幕提示.....	23	通話功能.....	42
距離感應器.....	23	撥打電話.....	42
鎖定您的手機.....	24	從通訊錄中撥打電話.....	42
快速切換至靜音模式.....	24	接聽來電和拒接來電.....	42
首頁	24	調節通話音量.....	42
自訂桌面.....	25	通話期間撥打第二個電話....	43
返回最近使用的應用程式....	26	檢視通話記錄.....	43
通知面板.....	26	通話設定.....	43
檢視狀態欄.....	26	通訊錄.....	44
螢幕鍵盤.....	28	搜尋聯絡人.....	44
輸入文字.....	31	新增聯絡人.....	44
123 模式.....	32	常用的聯絡人.....	44

訊息/電子郵件.....	45	多媒體.....	58
訊息.....	45	圖片庫.....	58
電子郵件.....	46	發送影片.....	58
社交網絡.....	49	使用圖像.....	59
在手機新增帳號.....	49	檢視幻燈片.....	59
在桌面新增社交網絡小工具..	49	檢視相片詳細資料.....	59
檢視及更新您的狀態	50	使用 USB 大容量儲存裝置	
從手機同步帳號.....	50	傳送檔案.....	59
從手機移除帳戶.....	50	音樂.....	60
相機.....	51	如何將音樂/影片檔案儲存	
瞭解取景器.....	51	至手機.....	60
拍攝相片	52	如何播放手機的音樂/影片	
拍攝相片後.....	52	檔案.....	60
使用進階設定.....	52	播放歌曲.....	60
檢視已儲存的相片.....	54	處理播放列表.....	61
將相片設定為牆紙.....	54	從播放列表移除歌曲.....	61
視像攝錄機.....	55	重新命名或刪除播放列表....	61
瞭解取景器.....	55	Google 應用程式.....	62
錄製影片.....	56	關於 Google 應用程式.....	62
錄製影片後.....	56	Google Maps™.....	62
使用進階設定.....	56	搜尋位置及地點.....	62
觀看已儲存的影片.....	57	取得路線.....	63
觀看影片時調整音量.....	57	我的地點	63
		清除地圖.....	64
		緯度.....	64
		地點.....	64

目錄

Play Store™.....	65	應用程式.....	80
Gmail™.....	66	帳號及同步處理.....	81
Google Talk™.....	66	隱私設定.....	81
實用程式.....	68	SD 卡及手機儲存.....	81
設定鬧鐘.....	68	語言及鍵盤.....	81
使用計算機.....	68	語音輸入及輸出.....	81
新增事件至日曆.....	68	協助工具.....	81
Polaris Office.....	69	連接設定.....	81
語音控制.....	70	日期及時間.....	82
語音記錄器.....	71	關於手機.....	82
應用程式管理.....	71	軟件更新.....	83
網絡功能.....	72	手機軟件更新.....	83
瀏覽器.....	72	透過空中下載 (OTA) 進行	
使用選項.....	72	LG 手機軟件更新.....	83
新增書籤.....	73	版權和商標.....	84
變更網頁瀏覽器設定.....	73	DivX 手機	84
On - Screen Phone.....	74	Dolby Mobile	84
LG On - Screen Phone 2.0..	74	配件.....	85
設定.....	77	技術數據.....	86
無線及網絡.....	77	疑難排解.....	87
通話設定.....	77		
聲音.....	78		
顯示.....	78		
手勢.....	78		
位置及安全	79		

安全及有效使用準則

請讀取以下簡易的使用規則。違反這些準則可能會發生危險或觸犯法律。

無線電波暴露準則

無線電波暴露及特定吸收比率 (SAR) 資訊。本型號手機 LG-P936 之設計符合適用的無線電波暴露安全要求。此要求包括可確保市民安全的設計準則，範圍涵蓋各年齡階層與所有的健康狀況。

- 無線電波暴露指引的量度單位叫作特定吸收比率或 SAR。SAR 測試使用標準方法進行，用手機以在所有使用的頻帶最高的合格電源水平傳輸。
- 雖然不同型號 LG 手機的 SAR 水平有所差異，但所有這些手機的設計均符合無線電波暴露的相關指引。
- 國際非離子化輻射保護委員會 (ICNIRP) 建議的 SAR 限制為平均 10 克組織 2 W/kg。
- 經 DASY4 測試，本型號手機在耳邊使用的最高 SAR 值為 0.567 W/kg (10 克)，攜帶於身上時則為 0.872 W/kg (10 克)。

- 在將手機置於耳邊正常使用或使其距身體至少 1.5 厘米遠的情況下，此流動電話符合關於 RF 暴露的指引。如果隨身攜帶手機，所用的手機套或其他裝置中不可包含金屬物品，並應使手機與身體至少保持 1.5 厘米的距離。要傳輸數據檔案或訊息時，該裝置與網絡進行有效的連接。在某些情況下，數據檔案或訊息的傳送可能會延遲，直至這類連接可用為止。請確保遵守以上的特別距離指示，知道傳輸完成為止。

產品保護及維護

警告：

請僅使用經認可適用於此特定型號手機的電池、充電器及配件。使用其他種類的配件可能會導致手機的認可或保養失效，並可能引致危險。

- 請勿拆開此裝置。如手機需要維修，請由合資格的維修技師進行維修。
- 根據 LG 的政策，保養期內的維

安全及有效使用準則

修可能會包括更換部件或主板，這些用於更換的部件或主板可能全新的或是經過翻新的，但其功能與被更換的部件相同。

- 使用時請遠離電器產品，如電視、收音機或個人電腦。
- 裝置需遠離發熱來源，如散熱器或烹調器具。
- 請勿摔落手機。
- 請勿讓此裝置遭機械震動或衝擊。
- 請於任何有特殊限制的地方關閉手機。例如，請勿在醫院內使用手機，否則它可能會對敏感的醫療設備造成影響。
- 請勿以潮濕的雙手對充電中的手機進行操作。這可能會引致觸電和造成手機嚴重損壞。
- 請不要在易燃材料附近為手機充電，因為充電期間手機會發熱並導致火災。
- 使用乾布清潔裝置表面（請勿使用苯、稀釋劑或酒精等溶劑）。
- 切勿在布質家具上為手機充電。
- 手機應在通風良好的環境中充電。
- 請勿讓此裝置接觸過多煙霧或塵埃。
- 請勿將手機置於信用卡或車票附近，這可能會影響磁帶上的資料。
- 請勿以尖銳物件敲打螢幕，否則可能會對手機造成損毀。
- 請勿將手機暴露於液體或濕氣中。
- 請小心使用耳機等配件。如非必要，請勿觸及天線。
- 如果玻璃螢幕碎裂，請勿使用、接觸或嘗試移除或修補玻璃。因妄用或不正確使用而導致玻璃螢幕受損並不在保養範圍內。
- 您的手機是一部電子裝置，在正常操作期間，會產生熱力。在沒有足夠通風的環境下，長時間與皮膚直接接觸可能導致不適或輕度灼傷。因此，操作期間或操作之後處理手機時，請謹慎使用。

有效地操作手機

電子裝置

所有手機都可能會因為受到干擾而影響效能。

- 請勿在未得到批准下在醫療儀器附近使用您的手機。避免將手機放置在心臟起搏器附近，例如您胸口上的口袋。
- 一些助聽器可能會受手機干擾。
- 手機可能會輕微干擾電視、收音機、個人電腦等。

道路安全

檢查您駕駛時所在地區使用手機的法例及規則。

- 駕駛時切勿使用手持手機。
- 請專心一致駕駛。
- 請視乎駕駛情況，駛離馬路並停泊好汽車後才撥打或接聽電話。
- RF 能量可能會影響車內某些電子系統，例如車載立體聲音響及安全設備等。
- 如果您的汽車配有氣囊，切勿讓已安裝的無線設備或手提無線設備阻擋氣囊。這可能會導致氣袋無法正常彈出，使其失去保護作用或造成嚴重人身傷害。

- 如果在外出時聆聽音樂，請確保將音量設定至合適水平，以便可以對周圍環境產生警覺。這在馬路旁邊時尤為必要。

避免損害您的聽覺

如果長時間以較大音量收聽，可能會對聽覺造成損害。因此，我們建議您不要在靠耳朵太近的地方開啓或關閉手機。我們亦建議將音樂及通話音量設定至合適水平。

- 使用耳機時，如果您未能聽見附近的人說話，或者坐在您身邊的人能聽見您正在聆聽的聲音，就應將聆聽音量調低。

附註：來自耳機的過度噪音和壓力可導致聽力損失。

玻璃部件

您的手機的部分部件以玻璃製造。如您的手機摔在堅硬的表面上或受猛烈撞擊，玻璃部件可能會破裂。如玻璃破裂，請勿接觸或嘗試移除碎片。請停止使用您的手機，直至授權的服務供應商為您更換玻璃部件。

安全及有效使用準則

爆破地區

請勿在進行爆破時使用手機。請嚴格遵守相關限制、規定或條例。

潛在爆炸氣壓

- 請勿在燃料補給點使用手機。
- 請勿在燃料或化學物質附近使用手機。
- 請勿使用放置了手機及配件的汽車傳輸或放置易燃氣體、液體或爆炸物。

在飛機上

無線裝置可引致飛機干擾。

- 登機前，請先關掉手機。
- 未經地勤人員批准，請勿在陸上使用手機。

兒童

請將手機放在兒童接觸不到的安全地方。手機含有微細零件，如果拆開，可能造成哽咽危險。

緊急通話

緊急電話可能在某些流動網絡中不能發出。因此，您不應僅倚賴手

機作為緊急電話方式。請向您本地的服務供應商查詢。

電池資料及保護

- 充電前，您無須完全放電。跟其他電池系統不同，它不會產生可降低電池效能的記憶效應。
- 只使用 LG 電池及充電器。LG 充電器是為將電池壽命擴至最大而設。
- 請勿拆解電池組或造成電池組短路。
- 請保持電池組的金屬接點清潔。
- 當電池不再提供可接受的效能，請更換電池。電池組可重充數百次直至需要更換為止。
- 如果電池很久沒有使用，重新充電以擴展其用量。
- 請勿直接將充電器暴露於日光下或高濕度環境（如浴室）中。
- 請勿將電池置於過熱或過冷的地方，此類場合可能會損害電池效能。
- 若使用類型不當的電池，則有發生爆炸的危險。
- 請根據製造商的指示來處理廢棄

電池。盡量回收利用。請勿作為家庭廢棄物處理。

- 如果需要更換電池，請帶同手機前往最近的授權 LG 電子產品服務點或經銷商以尋求協助。
- 請謹記在手機完全充電後從牆壁插座拔出充電器，避免充電器造成不必要的電力損耗。
- 電池的實際壽命將取決於網絡設定、產品設定、使用模式、電池及環境條件。

了解您的手機

在您開始使用手機前，請先閱讀這裏！

在您將手機送往維修或致電服務人員前，請檢查您手機出現的問題有否在此部分描述。

1. 手機記憶體

爲了有更多可用的記憶體，您需要管理應用程式並刪除部分數據，例如應用程式或訊息。

管理應用程式

- 1 從桌面點按**功能表鍵**  並點按**設定 > 應用程式 > 管理應用程式**。
- 2 顯示應用程式列表時，捲動並點按要解除安裝的應用程式。
- 3 點按**強制停止**，然後點按**確定**以確認要解除安裝所需應用程式。

2. 延長電池壽命

您可關閉無須持續在背景運行的功能，便能延長兩次充電之間的電池壽命。您亦可監控應用程式及系統資源的電池電量消耗。

要延長您的電池壽命

- 關閉您不使用的無線電通訊功

能，例如 Wi-Fi、藍芽或 GPS。

- 調低螢幕亮度，並設定較短的螢幕逾時。
- 關閉 Gmail™、日曆、通訊錄及其他應用程式的自動同步。
- 您下載的某些應用程式可能會減少電力。
- 使用已下載的應用程式期間，查看電池充電量。

要檢查電池充電量

- 1 從桌面點按**功能表鍵**  並點按**設定 > 關於應用程式 > 狀態**。
- 2 電池狀態（充電中、放電中）及電池電量將於螢幕上方功能表中顯示。

要監察及控制電池使用情況

- 1 從桌面點按**功能表鍵**  並點按**設定 > 關於應用程式 > 電池使用狀況**。
- 2 螢幕頂部會顯示電池使用時間：電池使用狀況及電池電力剩餘時間。螢幕亦會列出使用電池電力的應用程式或服務，並根據耗用的電量由多至少排列。

3. 安裝開放源碼的作業系統

在手機上安裝開放源碼的作業系統而不使用製造商提供的作業系統，可能導致手機出現故障。

警告

- 如果您安裝及使用並非由製造商提供的作業系統，您的手機將不再受保養。
- 爲了保護您的手機和您的個人資料，請只從受信任的來源下載應用程式，例如 Play Store。如某些應用程式並非正確地安裝至您的手機上，您的手機可能無法正常地運作或出現嚴重錯誤。您需要從手機卸載這些應用程式以及其所有的數據及設定。

4. 使用解鎖圖形、PIN 碼或密碼

設定解鎖圖形、PIN 碼或密碼保障手機的安全。要設定螢幕鎖定，依照以下程序操作。

點按**功能表鍵**  點按**設定 > 位置及安全 > 設定螢幕鎖定**並選擇**圖形、PIN 碼或密碼**。

警告

使用解鎖圖形、PIN 碼或密碼時格外留神。密碼時格外留神。您有5次機會輸入螢幕解鎖資訊。

在無法重新開啓您的解鎖圖形、PIN 碼或密碼時：

如果您已在手機登入 Google 帳號，且 5 次都無法使用正確的圖形，點按**忘記解鎖圖形？**您需要登入 Google 帳號，系統會提示您建立新解鎖圖形。

如果您尚未在手機上建立 Google 帳號或忘記 PIN 碼或密碼，您需要進行硬性重新設定。

了解您的手機

5. 使用硬性重新設定（出廠設定）

如果手機需要還原成為本來的狀態，使用**硬性重新設定**重新啟動手機。

- 1 關閉電源。
- 2 同時按住以下按鍵 8 秒：**電源/鎖定鍵 + 向下音量鍵**。
- 3 顯示出廠硬性重新設定螢幕時，釋放按鍵。

警告

若進行硬性重新設定，所有用戶應用程式及用戶數據將被刪除。請記住先備份所有重要的數據，才進行**硬性重新設定**。

6. 使用 micro SD 卡

圖片、音樂及影片檔只能儲存到外置記憶體。儲存這些檔案至外置記憶體時，您需要插入 micro SD 卡。如果您未插入 micro SD 卡，將無法在外置記憶體儲存這些項目。

警告

請勿在解除安裝 micro SD 卡之前將其移除。否則，micro SD 卡及手機可能會損壞，而 micro SD 卡內儲存的數據亦可能毀損。要安全取出 micro SD 卡，從桌面點按**功能表鍵**  並點按**設定 > SD 卡及手機儲存 > 移除 SD 卡**。

7. 透過 USB 連接手機至電腦

- 1 使用手機隨附的 USB 線，將手機連接至電腦的 USB 端口。您將會收到通知指出已連接 USB，並會看見 USB 連接模式快顯視窗。
- 2 點按**大容量儲存**及**確定**以確認您要在手機的 micro SD 卡及電腦之間傳送檔案。

當手機已連接為 USB 記憶體，您會收到通知。您手機上的 micro SD 卡會作為磁碟安裝至您的電腦上。您現在便可將檔案複製至 micro SD 卡。

提示

在作為 USB 儲存連接期間，無法從手機存取 micro SD 卡。因此您不可使用依賴 micro SD 卡上的應用程式，例如音樂。

8. 將手機同步至電腦 (LG PC Suite)

LG PC Suite IV 是助您使用 USB 數據傳輸線連接手機至電腦的程式。連接後，您可以在電腦上使用手機的功能。

LG PC Suite IV 的主要功能

- 輕鬆建立、編輯和刪除手機資料
- 與電腦數據同步手機數據（通訊錄、日曆、SMS 訊息、書簽和通話記錄）
- 只需在電腦和手機之間拖放便可輕鬆傳輸多媒體檔案（相片、影片、音樂）

安裝「LG PC Suite」電腦應用程式

「LG PC Suite」電腦應用程式可從 LG 的網頁下載。

- 1 轉至 www.lg.com，然後選擇所需國家/地區。
- 2 移至**支援** > **手機支援** > 選擇型號 (LG-P936)。
- 3 按**下載**中的**PC 同步**，然後案

了解您的手機

WINDOW PC 同步下載即可下載「LG PC Suite」PC 軟件。

或者您可從預先安裝的 microSD 卡下載程式。

- 1 連接 USB 數據線至電腦。確保手機已啓用**大容量儲存**模式。
- 2 將大量儲存內的 LGPCSuiteIV 資料夾複製至電腦。
- 3 在電腦上執行 LGInstaller.exe 檔案，然後按照指示繼續。
- 4 在完成 LG PC Suite IV 安裝後，便會停用**大容量儲存**模式以執行 LG PC Suite IV。

注意：請勿移除或刪除安裝在記憶卡上的其他程式檔案。這可能對預先安裝的應用程式造成損壞。

注意：安裝「LG PC Suite」軟件時，需要 LG 內置 USB 驅動程式，以連接 LG 裝置和電腦並自動安裝。

9. 使用數據連接時解鎖螢幕

如在數據連接期間長時間不點按螢幕，您的螢幕會自行關掉。要開啓 LCD 螢幕，按電源/鎖定鍵。

10. 垂直握住手機

請如普通電話一樣，垂直握住手機。

撥打 / 接聽電話或傳送 / 接收數據時，盡量避免握住天線所在的手機下部分。否則可能影響通話品質。

11. 螢幕凍結時

如果手機不能回應用戶輸入或螢幕凍結：

按住**電源/鎖定鍵** 12 秒以關閉手機。 然後，再次長按**電源/鎖定鍵** 3 秒重新啟動手機。

12. 在開啓/關閉您的電腦時，請勿連接您的手機

開啓或關閉電腦時，確保從電腦中斷手機的連接，否則電腦可能造成錯誤。

您的手機

要開啓手機，長按電源鍵/鎖定鍵。

要關閉手機，長按電源鍵/鎖定鍵，然後點按**關機**及**確定**以確認。

正視圖




警告

若將較重物體置於手機上，或坐在手機上會損壞手機的 LCD 和觸控螢幕功能。請勿使用保護膜及蓋子遮住距離感應器。否則可能會導致感應器出現故障。


提示

- 每當您點按應用程式以查看可使用的選項時，點按功能表鍵 。
- 如果手機在使用時發生錯誤或無法開啓，取下電池，並重新裝上電池，然後在 5 秒後開機。

側視圖

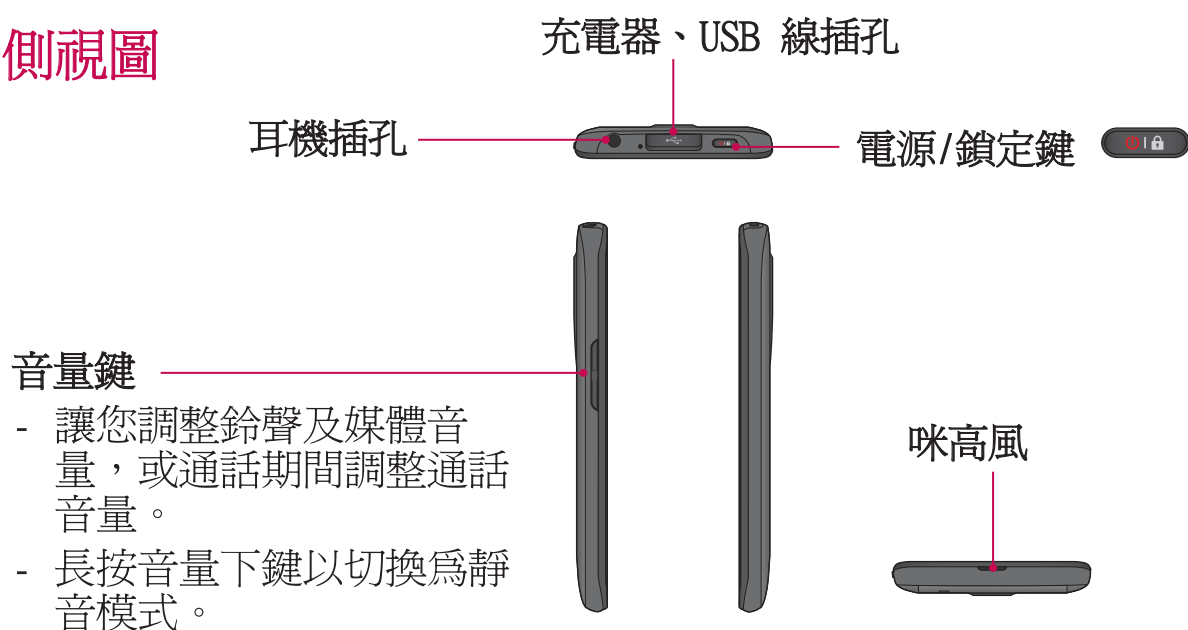

後視圖

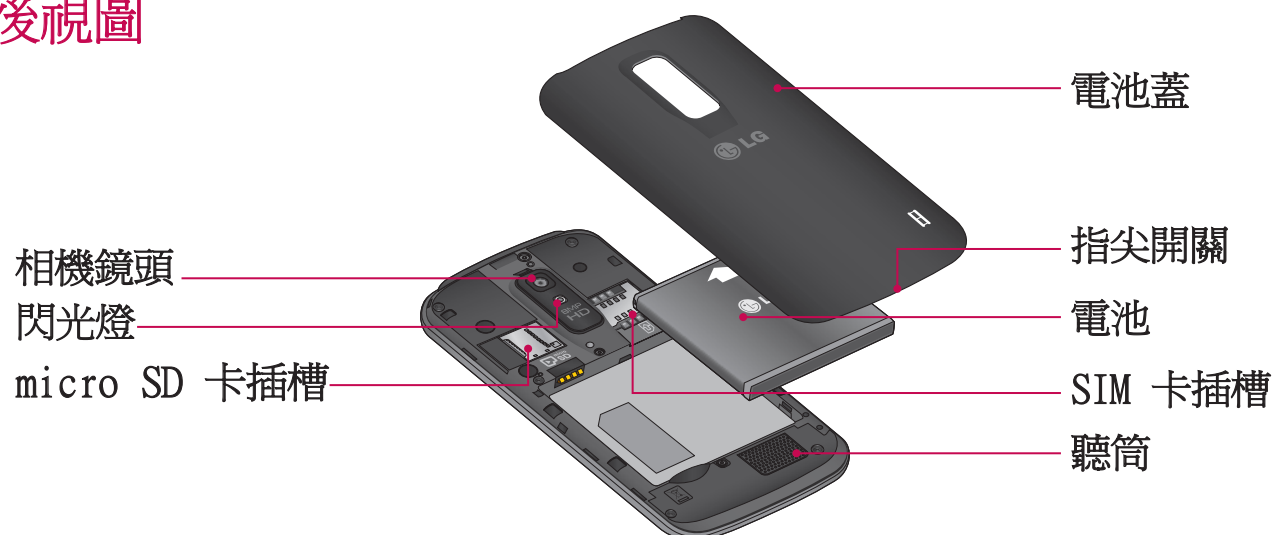

入門指南


安裝 SIM 卡及電池

開始探索新手機前，您需要進行設定。要插入 SIM 卡及電池：


- 1 用手穩固握住手機。用另一隻手使用位於電池蓋底部的指尖開關揭電池蓋並將其移除。



- 2 將SIM 卡滑入 SIM 卡插槽。確保智能咭的金屬接觸面朝下。

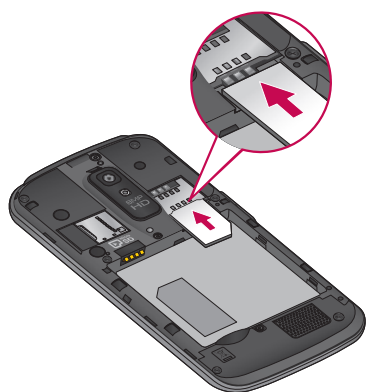

- 3 對準手機及電池的金屬接觸面插入電池。

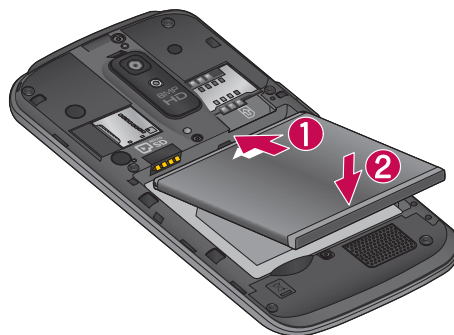

- 4 放回電池蓋（如下圖所示）。平穩地向下壓，直至電池蓋卡緊入位。



為手機充電

- 1 連接無線牆壁配接器和 USB 線。
- 2 將 USB 線（如下圖所示）插入手機的充電器、USB 線插孔。確保 USB 符號向上。



注意

第一次充電時必須將電池完全充電，以提高電池壽命。

注意

手機備有內置天線。請加倍小心，避免刮花或損壞此背面區域，否則會影響手機性能。如果當電池完全放電時關閉手機，這種電池稱為弱電池。在此情況下，當手機連接至充電器（TA 或 USB）纜線，手機底部的按鍵 LED 將會閃爍。這對弱電池而言屬於正常操作，以防流入過高電流，因為手機經過特別設計，提供合理保證演算法預防電池受損。數分鐘後，LCD 將會正常開啓。

插入 micro SD 卡



插入 micro SD™ 卡以使用相機及其他多媒體功能。多媒體內容可儲存在 micro SD 卡內。LG-P936 設有預先安裝的 micro SD 卡。

- 1 插入或移除 micro SD 卡前，請先關閉手機。取下電池蓋。

入門指南



2 然後將 micro SD 卡插入插槽。
並確保金屬接觸面朝下。

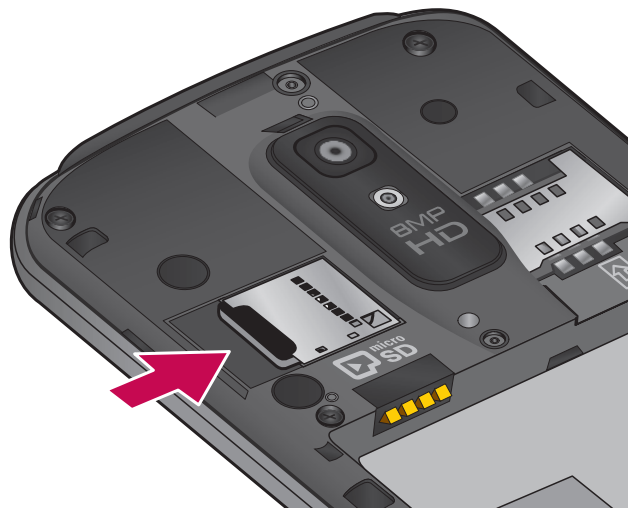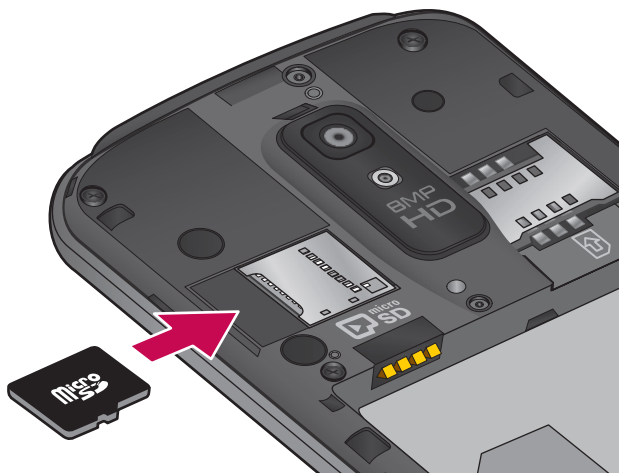

移除 micro SD 卡

要從手機安裝移除 micro SD 卡，
您首先需要將其解除安裝。

注意

在 Android OS 2.3 及以上，
您可從 Play Store 下載應
用程式，然後儲存在 micro
SD 卡及手機上。 正因為這個
功能，如果您略過解除安裝
程序，可能造成錯誤，因為
micro SD 卡及手機之間的資訊
並非一致。 在最惡劣的情況
下，或許會令 micro SD 卡損
壞或受損。

- 1 從桌面點按**功能表鍵**  並點按**設定 > SD 卡及手機儲存 > 移除 SD 卡**。
- 2 移除電池蓋並從卡槽小心地取出 microSD 卡。

警告

請勿在解除安裝 microSD 卡之前將其移除。否則，microSD 卡及手機可能會損壞，而 microSD 卡內儲存的數據亦可能毀損。

格式化 microSD 卡

您的 microSD 卡可能已格式化。如尚未格式化，您必須在使用前將其格式化。

注意

格式化 microSD 卡時，卡內所有檔案會被刪除。

- 1 從桌面點按**功能表鍵**  並點按**設定 > SD 卡及手機儲存 > 移除 SD 卡**。

- 2 點按**清除 SD 卡及清除 SD 卡按鍵**。

- 3 如果您設定解鎖圖形，輸入圖形並點按**清除全部**。記憶咭將被格式化並且可使用。

注意

如您的 microSD 卡包含其他內容，記憶卡格式化後的資料夾結構可能會改變，因為所有舊檔案經已刪除。

在應用程式之間切換及結束應用程式

您可輕易在 Android 上進行多重任務，即使您開啓另一應用程式，已開啓的應用程式依然會繼續運行。您無須在開啓另一應用程式前退出應用程式。使用及切換數個開啓中的應用程式。Android 會管理每一個應用程式，根據需要停止及啓動程式，確保閒置的應用程式不會耗用不必要的資源。

在應用程式之間切換

- 點按並按住**主頁鍵** 。將會

入門指南

顯示最近使用的應用程式列表。
然後點按要存取的應用程式。

要停止/結束應用程式

- 1 從桌面點按**功能表鍵**  並點按**設定 > 應用程式 > 管理應用程式**。
- 2 點按所需應用程式並點按**強制停止**以結束。

MHL

MHL（流動高清連結）是將手機及其他可攜式消費電子裝置連接至高清電視及螢幕的流動聲音／影片介面標準。MHL 標準備有 5 孔介面的單一電纜，能夠支援高達 1080p HD 影片及影碼聲音。當手機畫面顯示影片播放器或圖像檢視器，您便可以透過電視／螢幕觀看圖像及影片檔案。

注意

當裝置連接至已啓用 MHL 的 HDTV，電纜將會同時為裝置充電並輸出媒體。如果連接至沒有 MHL 的 HDTV，除非使用 MHL-HDMI 適配器，否則電纜將不會為已連接的裝置充電。

您的桌面

觸控螢幕提示

您可用手指存取可用應用程式、選擇功能表，以及存取儲存在手機的數據。以下字詞用來說明使用觸控螢幕時不同的可用動作：

點按 - 單次指按以選擇項目、連結、捷徑及螢幕鍵盤上的字母。

點按並按住 - 接觸螢幕上的項目，即是點按且不提起手指，直至出現動作。例如，要開啓通訊錄的可用選項，點按並按住通訊錄列表，直至開啓內容功能表。

拖放 - 點按並按住項目一段時間，然後在沒有提起手指的情況下，在螢幕上移動手指，直至到達目標位置。您可在桌面拖放項目改變其放置。

掃動或滑動 - 要掃動或滑動，當您接觸螢幕時沒有停止動作，在螢幕上快速移動手指（您便不會拖放項目）。例如，您可向上或向下滑動螢幕以捲動列表，或向左或向右掃動以瀏覽不同桌面（反之亦然）。

點按兩下 - 點按兩下在網頁或地圖上進行縮放。例如快速點按兩下網頁的一部分，以調整該部分以切合螢幕的闊度。您亦可在拍照（使

用相機）及使用地圖時，點按兩下進行縮放。

多點觸控 - 使用瀏覽器、地圖或瀏覽圖片時，使用食指及拇指的拉近或拉開動作進行放大或縮小。

旋轉螢幕 - 在許多應用程式及功能表中，裝置的實際方向會調整螢幕的方向。

注意

- 要選擇項目，請點按圖示的正中心。
- 請勿過份用力按壓；只需輕力但確切地點按，觸控螢幕已能感應。
- 使用指尖點按所需選項。小心不要點按任何其他按鍵或圖示。

距離感應器

當接收及撥打電話時，距離感應器會感應到手機快會貼近您的耳邊，並會自動將背光燈關掉及鎖定觸控鍵盤。此功能有助延長電池壽命，並防止於通話期間無意地啓動觸控鍵盤。

您的桌面

鎖定您的手機

當您不使用 LG-P936 時，請按住**電源/鎖定鍵**  鎖定您的手機。這有助於防止意外按鍵，並可節省電池電力。

同時，如果您有一段時間不使用手機，在沒有使用桌面時會被自動被鎖定螢幕取代，以節省電量並預防不小心撥號。

要喚醒手機，按**電源/鎖定鍵** 。鎖定螢幕會出現。向上拖動以解鎖。將開啓您最後使用的螢幕。

注意

- 可於設定配置自動螢幕逾時。
- 如果您在鎖定手機時有任何應用程式正在執行，則這些應用程式可能仍在鎖定模式中執行。建議先結束所有程式，再進入鎖定模式，避免造成不必要的收費（例如通話、存取網絡及數據通訊）。

設定解鎖圖形：

您可以連接四個或以上的點以繪畫您專屬的解鎖圖形。

要解除鎖定手機，請在螢幕上繪畫您所設定的圖形。

注意

如果連續 5 個圖形都繪畫錯誤，則需要等待 30 秒才可再嘗試。

快速切換至靜音模式

要將手機快速切換至靜音模式，按住**音量下鍵**，直至在狀態列上看見 .

首頁

只需將手指左右滑動便可檢視不同的控制板。

您亦可運用捷徑及資料夾自訂每個面板。您可使用小工具自訂每個控制板，它們是您喜愛的應用程式或資料夾的捷徑。

注意

在桌面上，您可在螢幕底部檢視快捷鍵。快捷鍵提供簡易的存取方法，讓您一按即能使用您最常用的功能。

自訂桌面

您可新增快速存取元素，例如捷徑、小工具、資料夾以自訂桌面，或變更牆紙。

- **小工具**：在桌面新增動態更新的小工具，在無須開啓完整應用程式的情況下快速存取應用程式。
- **捷徑**：在桌面新增應用用程式、通訊錄及音樂播放列表。
- **資料夾**：新增資料夾以管理通訊錄及捷徑。
- **牆紙**：變更桌面的牆紙。

要在桌面新增小工具、捷徑及資料夾：

- 1 從左至右或相反掃動桌面，選擇位置（桌面面板）以新增項目。
- 2 點按**功能表鍵**  > **新增**。
或者點按並按住桌面的空白部分。
- 3 點按要在螢幕新增的項目類型：小

工具、捷徑、資料夾或牆紙。

- 4 點按可用的小工具、捷徑或資料夾。
- 5 您會在桌面上看到一個新圖示。要將其放在不同面板，將其拖放在所需面板的位置，然後從螢幕放開手指。

提示

要在桌面新增預載應用程式或您從 Play Store 下載的應用程式，只需在應用程式螢幕點按並按住所需圖示並新增至桌面。

注意

如果特定桌面面板沒有可用空間，將無法使用**新增**。您必須先刪除或移除項目，才能新增其他項目。在此情況下，您可選擇切換至另一個桌面面板。

要從桌面刪除應用程式圖示，點按並按住要刪除的捷徑圖示，再拖放至螢幕底部的 .

您無法刪除預載應用程式。（只能從螢幕上刪除其圖示。）

您的桌面

返回最近使用的應用程式

- 1 點按並按住主頁鍵 。螢幕將會顯示您最近使用的應用程式圖示。
- 2 點按圖示以開啓其應用程式或點按返回鍵  以返回目前的應用程式。

通知面板

狀態欄的通知圖示匯報收到新訊息、日曆事件、鬧鐘，以及正在進行的事件，例如當您正在進行通知。您可檢視所有最近通知的列表。

通告欄顯示於螢幕的頂部。



點按並按住狀態欄並以手指向下滑動。或從桌面點按功能表鍵  > 通知。從這裡您可以查看以及快速開啓/關閉靜音（震動）模式、Wi-Fi、藍芽、GPS 以及資料模式。

檢視狀態欄

狀態欄使用不同圖示顯示手機資訊，例如訊號強度、新訊息、電池壽命及啓動中的藍芽及數據連接。下表說明可能在狀態欄中看到的圖示的含義。

[狀態欄]



圖示	說明
	沒有插入 SIM 卡
	沒有可用的網絡訊號
	已開啓飛航模式
	已連接至 Wi-Fi 網絡
	已連接有線耳機
	正在通話

圖示	說明
	通話保留
	揚聲器開啓
	電話話筒已靜音
	未接來電
	藍芽開啓
	已連接至一個藍芽裝置
	鬧鐘已設定
	新語音留言
	鈴聲靜音
	已開啓震動模式
	電池已完全充電
	電池充電中
	手機已通過 USB 線連接至電腦
	數據下載
	數據上載
	GPS 開啓

圖示	說明
	從 GPS 接收位置數據
	On-Screen 電話已連接
	還有 3 個通知未顯示
	正在同步資料
	下載完成
	新電郵
	新 Gmail
	新 Google Talk 語音訊息
	新文字/多媒體訊息
	正在播放歌曲
	待辦事項
	USB 網絡共享已啓動。
	可攜式 Wi-Fi 熱點已啓動
	USB 網絡共享及可攜式 Wi-Fi 熱點已啓動。
	數據輸入及輸出

您的桌面

螢幕鍵盤


您可以使用螢幕鍵盤輸入文字。
螢幕鍵盤在您需要輸入文字時會自動在螢幕上顯示。要手動顯示鍵盤，只需點按您要輸入文字的文字欄位即可。

您可使用兩種按鍵：FreeWriter 鍵盤及 LG 鍵盤。

要選擇鍵盤：

- 1 點按功能表鍵  > 設定 > 語言及鍵盤 > 輸入方式。
- 或者 -
點按並按住文字輸入欄位，然後點按輸入方式。
- 2 從 FreeWriter 鍵盤及 LG 鍵盤選擇所需鍵盤。

FreeWriter - 格線編寫模式

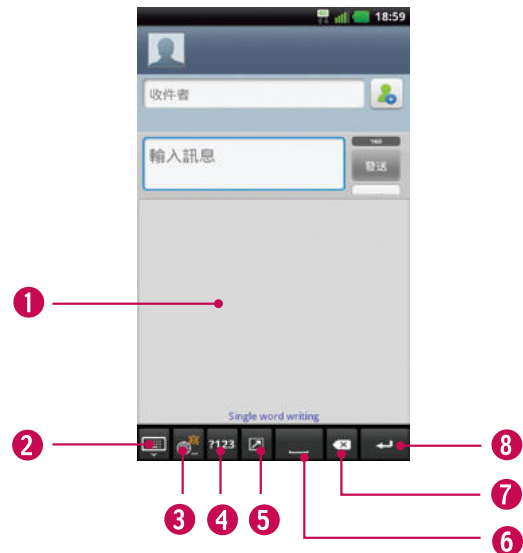

- 1 手寫區 - 可在手寫區中書寫字元。辨識後的結果將於目前游標的位置插入。
- 2 設定/輸入方式功能表 - 點按  以關閉 FreeWriter，或者點按並按住此圖示以開啓 FreeWriter 設定和輸入方式。
- 3 切換 Freewriter 輸入方式 - 點按  以在內建的手寫輸入、英文鍵盤、注音鍵盤、倉頡鍵盤、速成鍵盤和拼音鍵盤之間切換。

- ④ **數字和符號** - 點按  以開啓數字和符號鍵盤。
- ⑤ **全螢幕模式** - 點按  文字欄位，然後點按此按鈕以切換至全螢幕模式。
- ⑥ **空白鍵** - 點按  以輸入空白鍵。
- ⑦ **刪除鍵** - 點按  以刪除游標左方的字元。
- ⑧ **功能鍵** - 根據您的運作中程式的文件或欄位的特性，會顯示不同的功能鍵。例如發送鍵、換行跳到下一個欄位、完成輸入、跳到該網址、進行搜尋。

FreeWriter - 螢幕鍵盤



- ① **Shift 鍵** - 點按一下以大寫輸入下一個字母。點按並按住此按鍵即可全部以大寫輸入。
- ② **設定/輸入方式功能表** - 點按  以關閉 FreeWritter，或者點按並按住此圖示以開啓 FreeWritter 設定和輸入方式。
- ③ **切換 Freewriter 輸入方式** - 點按  以在內建的手寫輸入、英文鍵盤、注音鍵盤、倉頡鍵盤、速成鍵盤和拼音鍵盤之間切換。
- ④ **數字和符號** - 點按  以開啓數字和符號鍵盤。
- ⑤ **語音文字輸入鍵** - 點按  以使用語音輸入功能。
注意：必須要有網絡連接才能使用語音輸入的功能。
- ⑥ **空白鍵** - 點按  以輸入空白鍵。
- ⑦ **刪除鍵** - 點按  以刪除游標左方的字元。
- ⑧ **功能鍵** - 根據您的運作中程式的文件或欄位的特性，會顯示不同的功能鍵。例如發送鍵、換行跳到下一個欄位、完成輸入、跳到該網址、進行搜尋。

您的桌面

LG 鍵盤 - QWERTY - 輸入字母



- ❶ **Shift 鍵** - 點按一下以大寫輸入下一個字母。點按兩下即可大寫所有字母。
- ❷ **數字及符號/ 設定鍵** - 點按將輸入變更為數字和符號輸入。點按並按住以設定多個 LG 鍵盤設定。
- ❸ **刪除鍵** - 點按以刪除游標左方的字元。
- ❹ **隱藏鍵盤鍵** - 點按以隱藏鍵盤。
- ❺ **輸入鍵** - 點按將游標移至下一行。


LG 鍵盤 - QWERTY - 輸入數字及符號



- ❶ **Alt 鍵** - 點按以輸入額外符號。鍵盤將會變為備用字元。
- ❷ **字母/ 設定鍵** - 點按將輸入變為字母輸入。點按並按住以設定多個 LG 鍵盤設定。
- ❸ **空白鍵** - 點按以輸入空白鍵。
- ❹ **刪除鍵** - 點按以刪除游標左方的字元。
- ❺ **隱藏鍵盤鍵** - 點按以隱藏鍵盤。
- ❻ **下一步鍵** - 點按將游標移至下一個欄位。

LG 鍵盤 - 手機按鍵

要在 LG 鍵盤切換至手機按鍵，點按並按住 。點按 **鍵盤配置**，然後點按**手機按鍵**。手機按鍵讓您點按標籤有所需字母的按鍵以輸入字母，跟傳統的 12 鍵手機相似。您可能需要點按一個鍵最多四次以輸入所需字母或數字。

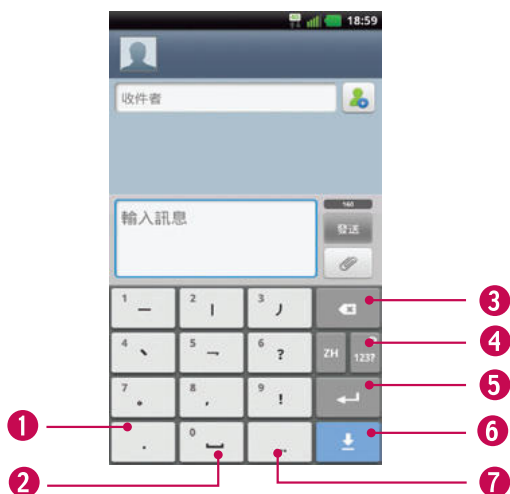

- ❶ **Shift 鍵** - 點按一下以大寫輸入下一個字母。點按兩下即可大寫所有字母。
- ❷ **空白鍵** - 點按以輸入空白鍵。
- ❸ **刪除鍵** - 點按以刪除游標左方的字元。
- ❹ **數字及符號 / 設定鍵** - 點按將輸入變更為數字和符號輸入。

點按並按住以設定多個 LG 鍵盤設定。

- ❺ **輸入鍵** - 點按將游標移至下一行。
- ❻ **隱藏鍵盤鍵** - 點按以隱藏鍵盤。
- ❼ **T9 鍵** - 點按以開啓 T9 輸入模式。

輸入文字

 **Shift 鍵** - 點按一下以大寫輸入下一個字母。點按兩下即可大寫所有字母。按鍵上的顏色標誌告知您是否鎖定了大寫  還是僅限一個字元 。

 **數字及符號 / 設定鍵** - 點按以變更為 123 模式，以及輸入數字及符號。點按並按住以設定多個 LG 鍵盤設定。

 **輸入鍵** - 輸入文字時新增另一行。

 **隱藏按鍵鍵** - 從屏幕移除按鍵。

 **刪除鍵** - 刪除任何您已輸入的文字。

您的桌面

要輸入空格，點按 。

123 模式

此模式讓您更快捷地在文字訊息中輸入數字（例如電話號碼）。點按所需數字的相應按鍵，然後點按  鍵，手動切換回適用的文字輸入模式。

輸入重音字母

當您選擇法文作為文字輸入語言，您可輸入特殊的法文字元（例如：「á」）。

從手機按鍵

當相應的字母字元消失後，重複按相同按鍵直至出現您需要的特殊字元。

從 Qwerty 鍵盤

要輸入聲調，按住「a」鍵。

顯示備有聲調的字元後，點按以輸入。

Google 帳戶設定

當您第一次在手機上開啓 Google 應用程式，您需要使用您現有的 Google 帳戶登入程式。如您沒有 Google 帳戶，手機會提示您建立帳戶。

建立您的 Google 帳戶

- 1 從桌面按**應用程式鍵** 。
- 2 點按 **Gmail > Next (下一步) > Create (建立)**以開始 Gmail™ 設定精靈。
- 3 點按文字欄位以開啓鍵盤，然後輸入您的姓名及 Google 帳戶使用者名稱。完成輸入文字時，您可按鍵盤上的**Next (下一步)**移至下一個文字欄位。
- 4 完成輸入姓名及使用者名稱後，點按**下一步**。手機將會連接 Google 伺服器，並檢查使用者名稱是否可用。
- 5 輸入並重新輸入密碼。然後按照指示，輸入與帳戶有關的必填及可填資訊。請等待伺服器建立您的帳戶。

登入您的 Google 帳戶

- 1 輸入您的電子郵件地址及密碼，然後點按**登入**。
- 2 登入後，您可使用 Gmail™ 並在手機上使用 Google 服務。
- 3 當您在手機上設定了 Google 帳戶，您的手機便會自動與您的 Google 帳戶在互聯網上同步。（視乎您的同步設定而定。）

登入後，手機將會與您的 Google 服務同步，例如 Gmail™、通訊錄、Google 日曆及 Picasa 相簿。您亦可以使用 Google Maps™、從 Play Store™ 下載應用程式、將設定備份至 Google 伺服器，以及在手機上使用其他 Google 服務。

Google 帳戶設定

重要資訊

- 某些應用程式，例如日曆，只能適用於您新增的首個 Google 帳戶。如果您打算在手機上使用多個 Google 帳戶，確保首先登入您希望使用這些應用程式的帳戶。當您登入時，您在網上的通訊錄、Gmail 訊息、日曆活動及這些應用程式和服務中的其他資訊將與您的手機同步。如果您在設置時，沒有登入一個 Google 帳戶，則在您首次開始一個需要 Google 帳戶的應用程式時，您將被提示登入或新建一個 Google 帳戶，例如 Gmail 和 Play Store™。
- 如果您擁有一個您的公司或其他組織的企業帳戶，您的 IT 部會對如何登入這種帳戶給予特別指示。

連接到網絡及裝置

Wi-Fi

要在您的手機上使用 Wi-Fi，您需要連接無線存取點，亦即「熱點」。一些存取點乃開放的存取點，您只需簡單連接便可。其他存取點乃隱藏或嵌入了其他保安功能，因此必須先設定您的手機才能連接。

開啓 Wi-Fi

從桌面開啓通知面板，然後點按  以開啓 Wi-Fi。

或者

點按**功能表鍵**  並點按**設定 > 無線及網絡 > Wi-Fi** .

要連接至 Wi-Fi 網絡

要延長電池壽命，請在不使用 Wi-Fi 時將其關閉。

- 1 從桌面點按**功能表鍵**  並點按**設定 > 無線及網絡 > Wi-Fi 設定**。
- 2 點按 **Wi-Fi 啓動**，手機便會開始掃描可使用的 Wi-Fi 網絡。
 - 可使用的 Wi-Fi 網絡會以清單顯示。已加密的網絡旁邊會有一個鎖形圖示。
- 3 點按一個網絡進行連接。
 - 如該網絡為開放，手機會提示

您點按**連接**，以確認您希望連接至該網絡。

- 如該網絡已加密，手機會提示您輸入密碼或其他憑證。（請向您的網絡管理員查詢詳情。）

- 4 位於螢幕頂部的狀態欄將會顯示指示 Wi-Fi 狀態的圖示。

提示

如果您不在 Wi-Fi 網絡範圍內，使用網絡連接。可能需額外收取資料費用。

連接到網絡及裝置

注意

本裝置支援 WEP、WPA/WPA2-PSK、WPA PSK、WPA2 Only PSK 及 802.1x EAP。（不支援部分 EAP 方式。）如您的 Wi-Fi 服務供應商或網絡管理員設定了加密，以保障網絡安全，請在彈出視窗輸入加密鑰匙。如沒有設定加密，彈出視窗則不會出現。您可從您的 Wi-Fi 服務供應商或網絡管理員取得加密鑰匙。

藍芽

使用藍芽

- 1 從**無線及網絡**螢幕點按**藍芽**以開啓藍芽設定。
- 2 點按**藍芽設定 > 掃描裝置**。
- 3 點按要配對的裝置名稱，然後點按**配對**進行配對及連接。

提示

請參閱藍芽裝置隨附的文字，查看配對模式及密碼（通常是 0 0 0 0 - 四個零）的資訊。

如何透過藍芽發送手機中的數據

透過藍芽發送數據：與普通行動手機不同，您可以執行對應的應用程式，而並非從藍芽功能表，透過藍芽發送數據。

- * **發送圖片**：開啓媒體匣應用程式並點按圖片。然後點按**功能表 > 分享 > Bluetooth**。查看是否已開啓藍芽，然後點按**掃描裝置**。然後從列表點按要將數據發送至的設備。
- * **匯出通訊錄**：開啓通訊錄應用程式。點按要分享的通訊錄，點按**功能表鍵**  並點按**分享 > 藍芽**。查看是否已開啓藍芽，然後點按**掃描裝置**。然後從列表點按要將數據發送至的設備。
- * **發送所選的多個聯絡人**：開啓通訊錄應用程式。要選擇多個聯絡人，點按**功能表鍵** ，然後點按**分享**。點按要發送的通訊錄或點按**選擇全部**。然後點按**分享 > 藍芽**。查看是否已開啓藍芽，然後點按**掃描裝置**。然後從列表點按要將數據發送至的設備。
- * **連接至 FTP（本手機僅支援 FTP 伺服器）**：從桌面點按**功能表**

鍵  並點按設定 > 無線及網絡 > 藍芽設定。確保藍芽已開啓。點按可偵測性以放置核取符號，使其他藍芽裝置看見手機。然後搜尋其他裝置。尋找所需的服務並連接至 FTP 伺服器。

提示

支援的藍芽版本為 3.0 並經 Bluetooth SIG 認證。此與其他 Bluetooth SIG 認證的設置相容。

- 如果您要從其他裝置搜尋此手機，從桌面點按**功能表鍵**  並點按**設定 > 無線及網絡 > 藍芽設定**。確保藍芽已開啓。點按可偵測性以放置核取符號，使其他藍芽裝置在 120 秒內看見手機。
- 支援的設定檔有 HFP/ HSP、A2DP、AVRCP、OPP、FTP（伺服器）及 PBAP。

數據網絡共享

您可啓用網絡共享並透過 USB 線進行連接，使用手機向電腦提供數據連接。

要使用 USB 與電腦網絡共享手機

- 1 使用 USB 線將手機連接到電腦。
- 2 您會看見 USB 連接模式快顯視窗，點按確定以確認，然後點按網絡共享。
- 3 將會顯示藍色勾選標記，指示已啓用功能。

連接到網絡及裝置

注意

- 數據網絡共享需要適合的 DataPro 數據計劃。透過網絡共享連接的裝置使用 DataPro 計劃的數據。計劃並非無限制，如果超逾包含的數據限額，可能需要支付大量費用。效能可能視乎連接的裝置數量及其他因素而有所不同。
- 使用 USB 網絡連線時，無法在電腦存取手機的 micro SD 卡。
- 從桌面點按**功能表鍵**  並點按**設定 > 無線及網絡 > 網絡共享及可攜式無線熱點 > USB 網絡連線**。

手機熱點

您亦可使用智能手機，為最多其他 8 部裝置提供手機寬頻連接。建立熱點並分享連接。

要建立可攜式熱點，點按**功能表鍵**  > **設定 > 無線及網絡 > 網絡共享及可攜式無線熱點 > 可攜式 Wi-Fi 熱點**。首次使用時設定密碼。

注意

手機熱點需要適合的 DataPro 數據計劃。連接至手機的裝置使用 DataPro 計劃的數據。計劃並非無限制，如果超逾包含的數據限額，可能需要支付大量費用。效能可能視乎連接的裝置數量及其他因素而有所不同。如果您沒有使用密碼，其他人將會能夠使用您的手機熱點連接。

Wi-Fi Direct

了解如何使用 WLAN Direct 功能，在無需存取點的情況下，透過 WLAN 連接兩部裝置。

將裝置連接至其他 WLAN 裝置

- 1 **設定 > 無線及網絡 > Wi-Fi Direct 設定 > Wi-Fi Direct**
- 2 按下**功能表 > 掃描**。
- 3 選擇裝置，然後選擇**連接**。其他裝置的所有者接受連接，便會完成配對。
- 4 如要停用 WLAN Direct 功能，選擇**中斷連接 Wi-Fi Direct**。

Wi-Fi Share

您可與透過相同 Wi-Fi、Wi-Fi Directed 或可攜式熱點網絡連接的使用者，分享您的音樂、圖片及影片內容。

預先查看網絡設定，確保使用者連接至相同網絡。

發送數據

- 1 應用程式鍵  > Wi-Fi Share
- 2 新增要分享的檔案。
- 3 在螢幕頂部，您會看見連接至您手機的所有裝置。
選擇要分享的裝置，然後點按 。當另一部裝置接受要求，便會開始發送。

使用功能表鍵，多運用相關功能。

接收數據

出現提示時，選擇**確定**以確認您願意接收數據。

智能分享

SmartShare 使用 DLNA（數碼生活網絡聯盟）科技透過無線網絡分享數碼內容。

兩個裝置均必須獲 DLNA 認證以支援此功能。

開啓 SmartShare 及允許共享內容

- 1 點按應用程式鍵  > **SmartShare**。
- 2 點按功能表鍵  > 設定。
- 3 點按可偵測性勾選框便可開啓。
 - 點按**始終接受請求**以自動接受其他裝置的分享要求。
 - 點按**接收檔案**，自動允許從其他裝置上載檔案至我的手機。
- 4 在分享內容部分下，點按每個要分享的內容類型。從**圖片**、**影片**及**音樂**中選擇。
- 5 **SmartShare** 現已啓用以共享內容。

從遠方資料庫共享內容至其他裝置
讓您的播放裝置（例如：電視）從遠方資料庫（例如：電腦）播放多媒體內容。

連接到網絡及裝置

注意

請確保裝置的 DLNA 功能已正確設定（例如：電視及電腦）

- 1 點按**應用程式鍵**  > **SmartShare**。
- 2 點按右上方的按鈕以從播放裝置列表選擇裝置。
- 3 點按左上方的按鈕以從遠方資料庫選擇裝置。
- 4 您可瀏覽資料庫。
- 5 點按**內容縮圖**或點按**功能表鍵**  並點按**播放**按鈕。

從手機共享內容至播放裝置（如電視）

注意

確保已正確設定播放裝置。

- 1 使用**媒體匣**應用程式瀏覽圖片或影片時，點按並按住以選擇檔案。然後，您便可選擇多個用以共享的檔案。
- 2 點按**分享** > **SmartShare**。**SmartShare** 將自動啟動並包括所選檔案。

- 3 從播放裝置表選擇裝置以播放檔案。

注意

按照類似步驟使用音樂播放器、相機及影片播放器來分享内容。

通知

使用本程式時檢查您的裝置是否已經由 Wi-Fi 連接到您的家居網路。部分 DLNA 設備（如電視）只支援 DLNA 的 DMP 功能，這些裝置將不會在播放裝置清單上出現。您的裝置可能無法播放部分內容。

要從遠方資料庫下載內容

- 1 點按**應用程式鍵**  > **SmartShare**。
- 2 點按左上方的按鈕以從遠方資料庫選擇裝置。
- 3 您可瀏覽資料庫。
- 4 點按**內容縮圖**，然後點按**下載功能表鍵**。

通知

不支援某些類型的內容。

要將手機的內容上載至遠方資料庫

注意

確保已正確安裝 SD 卡並已在設定功能表中勾選**接收檔案**。

- 1 點按應用程式鍵  > SmartShare。
- 2 點按左上方的按鈕以選擇**我的手機**。
- 3 您可瀏覽資料庫。
- 4 點按並按住內容縮圖，然後點按**上載功能表鍵**。
- 5 選擇要上載的遠方資料庫裝置。

通知

部分 DLNA 裝置不支援 DMS 上載功能並不會進行上載。不支援某些類型的內容。

通話功能

撥打電話

- 1 點按  開啓按鍵。
- 2 在鍵盤上輸入號碼。要刪除一個數字，點按清除圖示 。
- 3 點按通話圖示  撥打電話。
- 4 要結束通話，點按結束圖示 。

提示

要在撥打國際電話時輸入「+」，點按並按住 。

從通訊錄中撥打電話

- 1 點按  以開啓通訊錄。
- 2 捲動通訊錄列表或點按搜尋方塊，然後輸入要撥號的聯絡人的首數個字母。
- 3 在顯示的列表中點按要撥號的聯絡人。
- 4 在通訊錄資訊中，點按要撥號的電話號碼。

接聽來電和拒接來電

在螢幕鎖定時

手機響鈴後，將應答圖示  向右拖動。

將拒接圖示  向左拖動以拒接來電。如果要向來電者發送訊息，向上滑動發送訊息列。如果是不明來電者，便無法使用道歉訊息。

在螢幕解鎖時

手機響鈴後，點按接聽圖示 。點按拒絕圖示  以拒接來電。

如果要向來電者發送訊息，向上點按發送訊息列。如果是不明來電者，便無法使用發送訊息列。

調節通話音量

要在通話時調整通話音量，按手機左側的向上及向下音量鍵。

通話期間撥打第二個電話

- 1 開始通話時，點按**功能表鍵**  並選擇 。或者，點按**撥號鍵盤**圖示 。然後輸入要撥號的號碼。
- 2 撥打電話或搜尋聯絡人。
- 3 點按**通話圖示**  以開始撥打電話。
- 4 兩個通話均會在通話螢幕中顯示。您的原來通話會被鎖定及保留。
- 5 點按在螢幕上的電話在通話之間切換或點按  以合併通話。
- 6 要結束使用中通話，點按**結束**。如沒有使用中通話，保留通話將會結束。

注意

您需為撥打的每個通話付費。

檢視通話記錄

從桌面點按**通話圖示**  及**通話記錄**標籤。

您可檢視所有已撥、已接及未接來電的完整清單。

提示

點按任何一個通話記錄項目，便可檢視該通話的日期、時間及持續時間。

提示

點按 **功能表鍵** ，然後點按**刪除全部**以刪除所有記錄項目。

通話設定

您可設置手機的通話設定，例如來電轉接及您的服務供應商提供的特別功能。

- 1 從桌面按**功能表鍵** ，然後點按**設定**。
- 2 點按**通話設定**。

通訊錄

您可在手機上新增通訊錄，並與您的 Google 帳戶或其他帳戶（須支援同步通訊錄）內的通訊錄同步。

搜尋聯絡人

- 1 從桌面點按應用程式鍵 ，然後點按  以開啓通訊錄。
- 2 點按**搜尋欄位**並使用按鍵輸入聯絡人名稱。

新增聯絡人

- 1 點按  並輸入新聯絡人的號碼。點按**功能表鍵** ，點按**新增通訊錄**，然後再點按**建立新通訊錄**。
- 2 如您希望為新聯絡人新增相片，點按 。從**拍攝照片**或從相簿挑選中選擇。
- 3 點按  選擇通訊錄類型。
- 4 點按聯絡資訊類別，然後輸入聯絡人的詳情。
- 5 點按**儲存**以儲存聯絡人項目。

常用的聯絡人

您可將常用的聯絡人分類為您的最愛。

新增聯絡人至您的最愛

- 1 從桌面點按應用程式鍵 ，然後點按  以開啓通訊錄。
- 2 點按聯絡人以檢視詳情。
- 3 點按聯絡人名稱右上角的星星。星星變為橙色，聯絡人便新增至您的最愛。

要從最愛清單移除聯絡人

- 1 從桌面點按應用程式鍵 ，然後點按  以開啓通訊錄。
- 2 點按**群組**並點按**最愛**。
- 3 點按聯絡人以檢視詳情。
- 4 點按聯絡人名稱右上角橙色星星。星號會轉為灰色，表示該聯絡人已從您的最愛清單移除。

訊息/電子郵件

訊息

手機將文字訊息和多媒體訊息結合在一個易用的功能表中。

訊息串連方塊

與另一方交換的訊息（文字訊息及多媒體訊息）可按時間順序顯示，讓您方便地查看對話總覽。

發送訊息

- 1 點按桌面的  圖示，然後點按**新訊息**以建立新訊息。
- 2 在**收件者**一欄中輸入聯絡人名稱或電話號碼。當您輸入該聯絡人名稱時，會顯示匹配的聯絡人。您可點按建議的收件者。您還可新增多個聯絡人。

注意

如訊息有多個收件者，您需要為每一位收件者分別繳付文字訊息費用。

- 3 點按文字欄位，開始輸入訊息。
- 4 點按**功能表鍵**  以開啓選項功能表。選擇**訊息已存成草稿**、**新增**、**主旨**、**捨棄**、**附加**、**插入表情符號**及更多。

- 5 點按**發送**以發送訊息。

- 6 訊息畫面會開啓，訊息內容會顯示在收件者/號碼之下。螢幕會顯示回覆。當您檢視及發送更多訊息，便會建立一個訊息對話。

警告

160 個字元的限制可能會視乎不同國家的文字訊息編碼方式及訊息內使用的語言而有所不同。

警告

如您新增圖像、影片或音頻檔案至一個文字訊息，它會自動轉換為多媒體訊息，而您亦會被收取相應費用。

注意

當您在通話期間收到短信，您會收到響音通知。

使用表情圖示

表情圖示能使您的訊息更生動。

在編寫新訊息時點按**功能表鍵** ，然後點按**插入表情符號**。

訊息/電子郵件

更改訊息設定

手機已為您預先定義訊息設定，讓您可立即發送訊息。您可按偏好更改這些設定。

► 從桌面點按訊息  > 功能表鍵  > 設定。

電子郵件

您可以使用**電郵**應用程式讀取 Gmail 以外供應商的電郵。電郵應用程式支援以下帳戶類型：POP3、IMAP 及 Microsoft Exchange ActiveSync（企業使用者適用）。

開啓電郵應用程式

► 從桌面點按應用程式鍵  > 電子郵件。

當您第一次在手機上開啓**電子郵件**應用程式，將會開啓設定精靈以協助您新增電郵帳戶。

MS Exchange 電郵帳戶

電郵地址 - 輸入帳號電郵地址。

密碼 - 輸入帳號密碼。

使用者名稱 - 輸入帳號電郵地址。

網域 - 輸入帳號的網域（可選）

伺服器位址 - 輸入伺服器位址

使用 SSL - 選擇是否為 Microsoft Exchange 使用 SSL。

其他 (POP3, IMAP) 電郵帳戶

電郵地址 - 輸入帳戶的電子郵件地址。

密碼 - 輸入帳號密碼。設定完成頁面會出現，您需要輸入「名稱」。帳戶現在會顯示在電郵資料夾的帳戶清單中。

POP3 / IMAP4 - 選擇協定類型，即 POP3 或 IMAP4。

內送伺服器 - 輸入內送電郵伺服器的地址。

安全種類 - TLS/SSL/關閉。

連接埠號碼 - 通常會顯示帳戶的預設號碼。

外送伺服器 - 輸入外送電郵伺服器的地址。

SMTP 安全連接 - TLS/SSL/關閉。

連接埠號碼 - 通常會顯示帳戶的預設號碼。

點按下一步按鈕以連接伺服器。將會顯示**設定已完成**頁面。您需要輸入帳戶顯示的「名稱」及我的名稱。然後點按**完成**。

帳戶現在會顯示在電郵資料夾的帳戶清單中。

帳號螢幕

帳號螢幕列出您的聯合收件匣及您的每個電子郵件帳戶。

- ▶ 點按應用程式鍵  > 電子郵件。將會顯示帳戶列表。

提示

要為帳戶的收件匣建立捷徑：

在帳戶列表中點按並按住電郵帳戶。然後點按**新增至主頁畫面**。您可點按帳戶以檢視其收件匣。發送電郵的預設帳戶旁邊會有一個勾號。

要開啓聯合收件匣

如您已配置電子郵件從多於一個帳戶發送及接收電子郵件，則可以在聯合收件匣檢視發送至所有帳戶的所有訊息。

- ▶ 點按**電郵** > **合併的收件匣**（於**帳號螢幕**上）。

合併的收件匣內的訊息左側會按照帳戶以在**帳號螢幕**內用於帳號的相同顏色編碼標示。

當收件匣收到新電郵，會發出聲音及震動通知。點按電郵通知以結束相關通知。

編寫及發送電子郵件

- 1 在**電子郵件應用程式**點按**撰寫**。
- 2 輸入將會收到訊息的收件者的地址。當您輸入文字時，會從您的通訊錄顯示匹配的地址。
- 3 點按**副本/密件副本**欄位，以複製或隱藏複製至其他聯絡人/電郵地址。
- 4 輸入訊息的文字。
- 5 點按**附加**，在訊息上附加要發送的檔案。
- 6 點選**發送**。

如果您未準備好發送訊息，點按**儲存**將其儲存在**草稿**資料夾內。點按**草稿**資料夾內的訊息，繼續編寫訊息。如您發送前點按**返回**鍵，您的訊息也會儲存為草稿。

點按**取消**以放棄並刪除訊息，包括任何已儲存的草稿。如您沒有連接至網絡，例如正處於飛航模式，您發送的訊息會儲存在**寄件匣**料夾內，直至您連接至網絡。如載有任何有待處理的訊息，會於**帳戶**螢幕顯示**寄件匣**。

訊息/電子郵件

注意

使用 Exchange 帳號發送的訊息將不會儲存在手機內，而是儲存在 Exchange 伺服器內。如您想檢視已發送資料夾內您所發送的訊息（或帶有已發送標籤的訊息），您便需要時常開啓已發送資料夾/標籤，並從選項功能表中選擇重新整理。

處理帳戶資料夾

每個帳戶設有收件匣、寄件匣、已發送、草稿、垃圾桶及垃圾郵件資料夾。視乎您的帳戶服務供應商支援的功能，您可擁有額外資料夾。

新增及編輯電子郵件帳戶

要新增電子郵件

- 1 點按應用程式鍵  > 電子郵件。
 - 2 選擇 MS Exchange 或其他。
- 如已設定電子郵件帳戶，則不會自動啓動精靈。
- 在此情況下，點按功能表鍵  > 新增帳號。

要變更帳戶設定

- 1 開啓帳戶畫面。
- 2 點按功能表鍵  > 設定。

要刪除電子郵件

- 1 開啓帳戶畫面。
- 2 點按並按住您想刪除的帳戶。
- 3 在開啓的功能表點按移除帳戶，然後在對話方塊中點按移除以確認。

社交網絡

您可在手機上盡享社交網絡的樂趣，並管理您在網上社區內的微型博客。您可更新目前狀態、上傳相片，並檢視朋友們的即時狀態更新。

您可新增 Facebook、Twitter 及 Myspace 帳戶至您的手機。如您沒有這些帳戶，您可到相關網站設立一個帳戶。

注意

連接及使用網上服務可能需要額外付費。請向網路提供商查詢資料費用。

在手機新增帳號

- 1 從桌面點按功能表鍵  > 設定 > 帳號及同步處理。
- 2 點按新增帳號。
- 3 點按任何要使用的社交網絡服務。
- 4 輸入您為社交網絡帳號設定的電郵地址及密碼，然後點按登入。

在桌面新增社交網絡小工具

如您在桌面新增社交網絡小工具，當您的手機從網絡接收更新時，該小工具便會顯示您的狀態。點按小工具亦可讓您直接存取社區。

- 1 點按並按住桌面的空白位置。
注意：如果特定桌面面板沒有可用空間，您便無法新增任何小工具。您必須先刪除或移除項目，才能新增其他項目。在此情況下，您可選擇切換至另一個桌面面板。
- 2 顯示不同小工具時，捲動小工具並點按 Social+ .

社交網絡

檢視及更新您的狀態

- 1 轉至 Social+ 小工具所在的桌面面板。您可查看您設定社交應用程式的目前狀態。
- 2 您可選擇每個要檢視的社交應用程式。點按 。
- 3 點按「您在做什麼？」欄位以留言或上載相片更新狀態。
 - 勾選所有要更新的社交應用程式。將會自動更新全部。
- 4 輸入設有附件（如有）的留言後，點按張貼。

提示

您僅能使用社交網絡的朋友資訊，或者同步處理所有數據至通訊錄。

從手機同步帳號

您可將社交網絡帳戶的資訊與手機的通訊錄及其他功能同步（如適用）。

- 1 從桌面點按**功能表鍵**  > **設定** > **帳號及同步處理**。選擇要同步的帳篷並輸入所需資訊。
- 2 勾選背景資料及自動同步。
- 3 點按帳篷以進行同步。
- 4 勾選同步選項，如同步通訊錄。「」指示已啓用同步。

從手機移除帳戶

- 1 從桌面點按**功能表鍵**  > **設定** > **帳號及同步處理**。
- 2 點按要刪除的帳號，然後點按**移除帳號**（兩次）。

相機

要開啓相機應用程式，點按應用程式鍵  > 相機 。

瞭解取景器

亮度 - 決定及控制進入鏡頭的光線量。

您可滑動亮度指標：向「-」滑動使圖像較亮，或向「+」滑動使圖像較暗。

變焦 - 拉近或拉遠鏡頭。或者，您可使用音量鍵。

相機切換 - 讓您在前置相機及後置相機之間切換。



影片模式 - 向下滑動此圖示可切換到影片模式。

拍攝相片 - 讓您拍照。

媒體匣 - 此功能允許您在相機模式中存取已儲存的相片。只需點按，您的媒體匣即會顯示在螢幕上。

設定 - 點按此圖示 開啓設定功能表。參閱第 52-54 頁的**使用進階設定**，了解詳情。

閃光燈 - 容許您在黑暗地方拍照時打開閃光燈。

注意

您可關閉所有捷徑選項，獲得更清晰的取景器畫面。只需點按屏幕中間一次。要重新開啓選項，再點按一下屏幕。

相機

拍攝相片

- 1 從桌面點按**相機**。
- 2 橫向握住手機，將鏡頭對準拍攝的對象。
- 3 輕輕點按並按住擷取按鍵，對焦方塊會顯示在取景器螢幕的中央。
- 4 定位手機，使您能在對焦方塊中看到拍照的對象。
- 5 當對焦完成。
- 6 按擷取按鍵。

注意

基於相機本身的特質，當您於室內拍攝的時後有可能會產生暗角問題。（「暗角」指中心與周圍之間輕微的色差。）

拍攝相片後

如果已開啓自動檢視，拍攝的相片將會在螢幕上顯示。

共享

點按以透過**Bluetooth**或**訊息**等不同方法分享圖片。

注意

如在漫遊期間發送多媒體訊息，則可能需額外收費。

設為

點按可將圖像設為**通訊錄圖示**或**牆紙**。

重新命名

點按編輯選定圖片的名稱。



點按以刪除圖像。



點按以立即拍攝新相片。您當前的相片會儲存在手機內。



點按以檢視已儲存相片的媒體匣。

使用進階設定

在取景器，點按  以開啓進階選項。

您可以捲動列表，變更相機設定。選擇選項後，請點按**返回鍵** 。

對焦 – 點按以選擇對焦模式。

- **自動**：允許相機自動對焦。
- **臉部追蹤**：相機自動偵測並對焦人臉。

圖像大小 - 點按以設定所拍攝相片的大小（像素）。從以下選項選擇像素值：8M (3264X2448)、W6M (3264X1836)、5M (2560X1920)、3M (2048X1536)、W3M (2304X1296)、1M (1280X960)、W1M (1536X864)。

場景模式 - 選擇適當目前環境的顏色和燈光設定。

- **標準**：根據環境自動調整。
- **人像**：適合拍攝人物。
- **風景**：適合拍攝自然景物，如樹木、花朵和天空。
- **運動**：適合拍攝運動情景。
- **黃昏**：適合拍攝黃昏景像。
- **夜間**：適合拍攝夜間景像。慢的快門速度用於偵測夜間風景。

ISO - 控制相機對光線的敏感度。選擇自動、400、200 及 100。

白平衡 - 選擇自動、白熱光、陽光、日光燈及陰天。

色彩效果 - 為下一張相片選擇色調。

計時器 - 自動計時器讓您設定按下快門後的延遲拍攝時間。選擇關閉、3 秒、5 秒或 10 秒。如

要在相片中拍攝自己，此項最適合不過。

拍攝模式 - 選擇**標準**、**連環拍攝**及**全景拍攝**。

快門聲音 - 有四種快門聲音可供選擇。

自動檢視 - 如果您設定**自動檢視**為開啓，將會自動顯示剛拍攝的圖片。

標籤位置 - 啓動以使用手機的定位服務。您可隨時隨地拍攝相片，並標籤相片拍攝的位置。如您將已標籤的相片上載至支援地理位置標記的網誌，您的相片便會在地圖上顯示。

注意

此功能使用無線網絡。您需要勾選使用無線網絡。

從桌面點按**功能表鍵**  > **設定** > **位置及安全** > **使用無線網絡**。

-  - 還原所有相機預設設定。
-  - 如您想知道功能如何操作，點按便可。此會向您提供快速手冊。

相機

注意

- 當您結束相機後，某些設定將返回預設。拍攝下一張相片前，需要檢查相機設定。
- 設定功能表乃疊於取景器上，因此當您更改圖像顏色或質素的設定，您會即時在設定功能表背後看見預覽圖像的更改。

檢視已儲存的相片

您可在相機模式內存取您已儲存的相片。只需點按媒體匣按鍵 ，將會顯示媒體匣。

提示

左右翻閱以檢視其他相片或影片。

▶ 投影播放

- 點按以檢視投影播放。

⦿ 功能表

- 點按以存取以下選項：
分享以透過Bluetooth或訊息等不同方法分享圖片。

刪除 - 刪除圖片。
更多 - 存取詳細資料、設為、修剪、向左旋轉、向左旋轉等選項。

將相片設定為牆紙

- 1 點按您想設定為牆紙的相片以開啓該相片。
- 2 點按螢幕以開啓選項功能表。
- 3 點按功能表 > 更多 > 設為 > 牆紙。
- 4 按需要修剪影像，然後點按儲存。

視像攝錄機

瞭解取景器

亮度 - 決定及控制進入鏡頭的光線量。您可滑動亮度指標：向「-」滑動使影片較亮，或向「+」滑動使影片較暗。

變焦 - 拉近或拉遠鏡頭。或者，您可使用音量鍵。

相機切換 - 讓您在前置相機及後置相機之間切換。



相機模式 - 向上滑動此圖示，以切換至相機模式。

開始錄製 - 讓您開始錄製。

媒體匣 - 讓您在視像攝錄機模式內存取您已儲存的相片及影片。只需點按，您的媒體匣即會顯示在屏幕上。

設定 - 點按此圖示 開啓設定功能表。參閱第 56 頁的使用進階設定，了解詳情。

閃光燈 - 容許您在黑暗地方錄製影片時打開閃光燈。

視像攝錄機

錄製影片

- 1 在桌面，點按**相機**，然後滑動相機模式按鈕變為影片模式。圖示會變成 .
- 2 視像攝錄機的取景器會在螢幕上顯示。
- 3 橫向握住手機，將鏡頭對準拍攝影片的對象。
- 4 點按錄製圖示  一次以開始錄製。
- 5 錄製將顯示於取景器底部，同時計時器會顯示影片錄製的長度。
- 6 點按螢幕的停止圖示  以停止錄製。

錄製影片後

代表該影片的靜止圖像會在螢幕上出現。

播放 點按以播放影片。

共享 點按以透過**Bluetooth**或**訊息**等不同方法分享圖片。

注意

如在漫遊期間下載多媒體訊息，則可能需額外收費。

重新命名 點按以編輯所選擇影片的名稱。

 點按以刪除剛錄製的影片。點按確定以確認。取景器將再次出現。

 點按以立即錄製另一段影片。當前影片將會被儲存。

 點按以檢視已儲存影片的媒體匣。

使用進階設定

使用取景器，點按  以開啓進階選項。

捲動列表以調整視像攝錄機設定。選擇選項後，請點按**返回鍵** 。

影片大小 - 點按以設定所錄製影片的大小（像素）。從Full HD (1920x1088)、HD (1280x720)、TV (720x480)、VGA (640x480)、QVGA (320x240)（多媒體訊息）及 QCIF (176x144)（多媒體訊息）選擇影片大小。

白平衡 - 白平衡確保您影片內的任何白色區域均為真實顏色。要使您的相機正確調整白平衡，您可能需要指定光線環境。您可選擇**自動**、**白熱光**、**陽光**、**日光燈**或**陰天**。

色彩效果 - 為新影片選擇色調。

聲音錄製 - 選擇**靜音**以錄製無聲影片。

自動檢視 - 如果您開啓自動檢視，將會自動播放剛錄製的影片。

 - 還原所有影片的相機預設設定。

 - 如您想知道功能如何操作，點按便可。此會向您提供快速手冊。

觀看已儲存的影片

- 1 在取景器中，點按 。
- 2 您的媒體匣會顯示於螢幕上。
- 3 點按以自動播放影片。

觀看影片時調整音量

要在影片播放途中調整音量，您可使用在手機左側的音量鍵。

多媒體

您可儲存多媒體檔案至 micro SD 咭，輕易存取您所有的圖像及影片檔案。

圖片庫

點按應用程式鍵  > 媒體匣。

檢視模式

當您開啓媒體匣，相片將會以資料夾檢視顯示。開啓資料夾後，相片將會處於格線檢視。當您從格線檢視點按相片，將以全螢幕檢視顯示。

日曆檢視

在資料夾檢視，點按  以變更日曆檢視。將會開啓日曆，您會在日子上看見所拍攝的相片。

時間軸檢視

手機的**媒體匣**讓您以時間軸形式檢視相片和影片。從格線檢視模式，向右拖動 。您拍攝相片的日期將首先以最近期拍攝的顯示。

如您選擇特定日期，所有您在那天拍攝的相片會分爲一組。

媒體匣功能表選項

點按相片並點按**功能表鍵**  以查看以下可用選項：分享、刪除及更多。點按**更多**以存取詳細資料、設爲、修剪、向左旋轉、向右旋轉。

發送相片

- 1 要發送相片，點按並按住該相片。
- 2 點按**分享**並從任何可用應用程式中選擇。
- 3 當您選擇**電子郵件**、**Gmail**或**訊息**等，相片將會附加到訊息，之後您可一如以往進行撰寫及傳送。

提示

如果您已經在手機上設定社交網絡帳戶，便可以與該社交網絡帳戶分享相片。

發送影片

- 1 要發送影片，點按並按住該影片。
- 2 點按**分享**並從任何可用應用程式中選擇。
- 3 當您選擇**電子郵件**、**Gmail**或**訊息**，影片將會附加到訊息，之後您可一如以往進行撰寫及傳送。

使用圖像

選擇圖像作為牆紙，或用作識別來電者。

- 1 點按並按住相片，然後點按**更多** > **設為**。
- 2 選擇**通訊錄圖示**或**牆紙**。

檢視幻燈片

如要檢視相片幻燈片，開啓媒體匣並點按相片。顯示相片後，點按螢幕以查看功能表。點按**投影播放**以開啓所有相片的幻燈片。

檢視相片詳細資料

您可檢視相片的詳細資料，例如名稱、日期、時間、大小和類型。

檢視相片期間，點按**功能表** > **更多** > **詳細資料**。

使用 USB 大容量儲存裝置傳送檔案

使用 USB 裝置傳送檔案：

- 1 使用 USB 線連接手機至電腦。
- 2 您會看見 USB 連接模式快顯視窗。（從桌面點按**功能表鍵**  並點按**設定** > **連接設定** > **USB 連接模式** > **大容量儲存**。）
- 3 點擊**大容量儲存**，然後點擊**確定**以確認。
- 4 您可於電腦檢視手機容並傳送檔案。

注意

如果您不想看到 USB 連接模式快顯視窗，取消勾選 USB 連接模式快顯視窗或關閉永遠詢問（**設定** > **連接設定** > **永遠詢問**）。

多媒體

音樂

手機備有音樂播放器，讓您播放所有您最喜愛的曲目。如從桌面存取音樂播放器，點按**應用程式鍵**  並點按**音樂**。

如何將音樂/影片檔案儲存至手機

使用 USB 線將手機連接到電腦。

您將會收到通知指出已連接 USB，並會看見 USB 連接模式快顯視窗。點按大容量儲存及確定。然後從電腦開啓想檢視的資料夾。

將電腦中的音樂或影片檔案儲存至手機的可移除儲存體。

- 您可以使用讀卡器，將檔案從電腦複製或移動至手機的可移除儲存體。
- 如果影片檔案包含字幕檔案（與影片檔案同名的 .smi 檔案），請將其放入相同資料夾，以便在播放影片檔案時自動顯示字幕。
- 在下載音樂或影片檔案時，必須保護版權的安全。請注意，已損壞檔案或副檔名錯誤的檔案可能會損壞手機。

如何播放手機的音樂/影片檔案

播放音樂/影片檔案

在媒體匣找出所需檔案，然後點按播放。

播放歌曲

- 1 從桌面點按**應用程式鍵**  並點按**音樂**。
- 2 點按**歌曲標籤**。
- 3 點按要播放的歌曲。
- 4 點按  暫停歌曲。
- 5 點按  跳至下一首歌曲。
- 6 點按  返回歌曲的開首。點按  兩次以返回至上一首歌曲。

若要在聆聽音樂時調節音量，按手機左側的向上及向下音量鍵。

如要顯示歌曲選項，點按並按住列表內的任何歌曲。 您將會看見以下選項：**搜尋**，**播放**，**全部播放**，**新增至播放列表**、**派對隨機播放**及更多。

處理播放列表

您可建立播放列表，以管理音樂檔案為歌曲集，讓您以自己設定的次序或隨機播放。

若要建立播放列表

- 1 在資料庫檢視歌曲列表時，點按並按住要新增至新增播放列表的第一首歌曲。
- 2 點按**新增至播放列表**。
- 3 點按**新增播放列表**。
- 4 為播放列表輸入名稱，然後點按**儲存**。

新播放列表將會新增至**播放列表**資料庫。

您亦可將播放螢幕正在播放的歌曲新增為播放列表的第一首歌曲，方法是按**功能表鍵** ，然後點按**新增至播放列表**，將專輯內所有正在播放的歌曲儲存儲存為播放列表。

從播放列表移除歌曲

- 1 開啓播放列表。
- 2 點按並按住要移除的歌曲，然後點按**從播放列表移除**或檢視目前播放的播放列表時，點按**功能表鍵** ，然後點按**從播放列表移除**，從目前的播放列表移除所有歌曲。

重新命名或刪除播放列表

- 1 開啓**播放列表**資料庫。
- 2 點按並按住播放列表以顯示功能表，然後點按**刪除**或**重新命名**。

注意

音樂檔案的版權可能受國際公約和國內版權法保護。 因此，您或需要取得授權或許可，才可以複寫或複製音樂。 在某些國家，國內法律禁止私人複製受版權保護的材料。 下載或複製檔案前，請先檢查有關國家關於使用這類材料的國內法律。

Google 應用程式

關於 Google 應用程式

Google 應用程式，包括 Gmail、including mobile versions of Gmail, Google Talk、Google Calendar 和 Google Maps 的手機版，已載入您的手機內。

- 1 首先，請建立一個 Google 帳戶。然後輸入您的使用者名稱及密碼以登入。
- 2 登入後，您 Google 帳戶中的通訊錄、電郵和日曆會自動與手機同步。

Google Maps™

開啓 Google Maps 並檢視您的位置

- 1 從桌面點按**應用程式鍵**  並點按**Maps**。
- 2 在地圖上點按**我的位置**圖示 。地圖置中的藍點指示您的位置。藍點四周的藍圈指示您的實際位置在圓圈內。

取得位置的地址及額外資訊

- 在地圖上點按並按住位置。載有地址及街景圖縮圖（如有）的汽

球會在位置上開啓。

- 點按汽球以存取額外選項。

如要檢視地圖、衛星或交通層次

- 在地圖上點按**層次**圖示 ，然後選擇層次選項。您可選擇交通、衛星、地形、緯度或更多層次。

搜尋位置及地點

您可以搜尋位置並在地圖上檢視。您亦可於正在檢視的地圖上搜尋地點。

搜尋位置

- 1 檢視地圖期間，點按螢幕頂部的搜尋欄位。您亦可點按**功能表鍵**  並點按**搜尋**。
- 2 在搜尋方塊中輸入要搜尋的地點。您可輸入地址、城市或商務或機構類型。例如「紐約劇院」。
- 3 點按搜尋圖示。
設有字母標籤的標記在地圖上指示搜尋相符項目。

注意

如果已關閉 GPS 及 Wi-Fi，位置資訊或許不準確。請確保開啓 GPS 及 Wi-Fi。

取得路線

取得路線

- 1 檢視地圖期間，點按**功能表鍵**  並點按**路線**。
- 2 在第一個文字方塊中輸入起點；在第二個文字方塊中輸入目的地。
如要反轉路線，點按**功能表鍵**  並點按**對調起點與終點**。
- 3 點按汽車圖示、公共交通或行走路線。
- 4 點按**規劃路線**。前往目的地的路線將於列表內出現。

檢視列表內的逐步路線

您可以書面路線列表檢視路線的每一步。

檢視路線列表時，點按**瀏覽圖示** ，在瀏覽來視中檢視逐步路線。

沿著路線搜尋位置

您可沿著路線搜尋商業、景點及其他特色。當您在瀏覽期間進行搜尋，您的結果包括沿著路線的位置，而不是目前位置附近的位置。

- 點按**搜尋鍵**並搜索景點。

結果會沿著路線以標記顯示，並會標籤首個結果。您可點按標籤，取得相關標記的更多資訊。

- 完成時，點按**瀏覽圖示**  以返回瀏覽檢視。

我的地點

我的地點將您最喜愛的地點設為書籤，例如地址或當地商業，以便稍後快速搜尋。

檢視我的地點

檢視地圖期間，點按**功能表鍵**  並點按**我的地點**。

Google 應用程式

清除地圖

從地圖清除任何資訊，例如路線及搜尋結果。

清除地圖

檢視地圖期間，點按**功能表鍵**  並點按**清除地圖**。

緯度

使用 Google Latitude™ 尋找您的朋友

Google Latitude 讓您和朋友在地圖上互相檢視大家的位置，並使用 Google Latitude 取得前往朋友位置的路線。不會自動分享您的位置。僅限透過邀請。

您必須加入緯度，然後邀請您的朋友查看您的位置，或接受朋友的邀請。

加入緯度

► 檢視地圖期間，點按**功能表鍵**  並點按**加入緯度**。

首次加入緯度時，系統會提示您接受或拒絕 Google 私隱政策。加入緯度後，加入緯度選項變為**緯度**。

開啓緯度

加入緯度後，您可將其開啓以尋找

朋友並檢視他們的更新。

► 檢視地圖期間，點按**功能表鍵**  並點按**緯度**。

邀請朋友以分享位置

加入緯度後，您可開啓與朋友分享位置。只有您已明確邀請或接受的朋友才能看到您的位置。

- 1 開啓緯度，點按**功能表鍵**  並點按**新增朋友**。
- 2 在開啓的功能表中點按**從通訊錄中選擇**或**經由電郵地址新增**。
- 3 在螢幕底部點按**新增朋友**。如果您的朋友已使用緯度，他們在緯度上會收到電郵要求和通知。如果他們未加入緯度，將會收到電郵邀請他們以 Google 帳號登入緯度。

地點

尋找地點

在 Google Maps 點按**地點圖示**  以尋找不同地方，例如加油站、咖啡店、酒吧及餐廳等。

選擇類別後，您將會看見最接近的相符項目列表，包括相關距離、指南針方位、說明甚至使用者評論。您可自訂自己的位置搜尋類別，甚至在桌面新增地點圖示。

貼士

檢視地圖期間，點按**功能表鍵**  > **更多**取得以下選項：**實驗、快取設定、說明、條款、隱私與通告及關於**。

Play Store™

Play Store™ 讓您瀏覽並下載數千款有趣實用的應用程式及遊戲。您可以檢視其他使用者對某個應用程式的評論，或者您可以發表您的評論。如果您從 Play Store™ 下載應用程式及遊戲，它們將會在手機功能表中預載應用程式下方顯示，您可以用手指向下捲動以尋找它們。您可點按**功能表鍵**  > **我的應用程式**，開啓從 Play Store 下載的應用程式。

開啓應用程式及遊戲

1 從 Play Store 主頁，點按在螢幕頂部附近的類別。

2 捲動以檢視子類別，然後點按要探索的子類別。

3 點按應用程式以開啓其詳細資料的螢幕，或進一步為子類別分類，方法是點按熱門付費、熱門免費、熱門綜合、熱門新付費、熱門新免費和潮流。

4 點按要安裝的應用程式。將會顯示應用程式的說明和價格。

5 如果是付款應用程式，點按螢幕右上方的**價格**按鈕。如果是免費應用程式，點按**免費**按鈕。然後便會下載並安裝應用程式。

注意

要購買付費應用程式，您需要以 Google Checkout™ 設定付款方法。您可選擇信用卡或向您的運營商帳單收費。

Google 應用程式

注意

如要退出遊戲或應用程式使用主頁或返回鍵，您便會返回桌面。或選擇遊戲或應用程式內的功能表（或選項），然後選擇結束。（結束選項可能視乎遊戲/應用程式而有所不同。）結束繼續在背景執行的應用程式（返回桌面後）有助保存電池壽命並減少不必要的資料用量。

Gmail™

首次設定手機時可設定 Gmail™。視乎您的同步設定，手機的 Gmail™ 會與您在網上的 Google™ 帳號自動同步。收件匣對話清單是您預設的 Gmail™ 檢視模式。

點按**功能表鍵** ，然後點按**Refresh (重新整理)**以發送或接收新電郵並與網絡上的 Gmail™ 帳號同步電郵。點按**功能表鍵** 取得以下額外選項：**Compose (撰寫)**、**Accounts (帳號)**、**Go to labels (轉至標籤)**、**Search (搜尋)**及**更多**。

點按**功能表鍵** 並點按

Accounts (帳號) > Add Accounts (新增帳號)以新增另一個 Gmail 帳號。您亦可在帳戶內任何螢幕點按**功能表鍵**  > **更多 > Settings (設定)**以變更設定。

Google Talk™

Google Talk™ 是 Google 的即時通訊程式，讓您與其他使用 Google Talk™ 的用戶通訊。

點按**功能表鍵** 取得以下可用選項。

All friends (所有朋友)  - 顯示所有您可通訊的朋友。

Add friends (新增朋友)  - 發送聊天邀請。

Search (搜尋)  - 搜尋要聊天的聯絡人或任何載有輸入字詞聊天記錄。

Sign out (登出)  - 登出聊天。如果您啓動**自動登入**，當您從桌面點按 Talk 圖示，您將會自動登入。

Settings (設定)  - 讓您調整多個設定。

更多  - 選擇結束所有聊天以關閉所有目前的聊天、邀請以查

看您已發送聊天邀請的朋友列表，或者封鎖以檢視您已去封鎖的朋友列表。

變更 Google Talk Settings (設定)

您可設定 Google Talk，在聊天中收到每個訊息時向您發送 Notification (通知)，並可發出鈴聲或令手機震動。

您亦可設定 Google Talk，當您開啓手機時自動將您登入，而您可設定您在其他用戶的朋友列表上的名稱旁是否顯示手機指示器。

設定新 Google Talk 訊息的通知

- 1 從朋友列表點按**功能表鍵** ，然後點按**Settings (設定)**。
- 2 在 **Notification (通知)** 加上核取符號，有新聊天訊息時，即可在狀態欄收到通知。
- 3 點按**Ringtone (鈴聲)**以選擇就新聊天通知您而發出的鈴聲。
- 4 點按**Vibrate (震動)**以選擇當您接收新聊天通知時的震動**Settings (設定)**。

向朋友顯示或隱藏手機指示器

- 1 從朋友列表點按**功能表鍵** ，然後點按**設定**。
- 2 在**手機指示器**加上或取消核取符號。如果在手機指示器加上核取符號，當您在 Android 手機登入 Google Talk，朋友在其朋友列表上會看見您的名稱旁有一個 AndroidTM 略圖。

設定是否自動將您登入 Google Talk

- 1 從朋友列表點按**功能表鍵** ，然後點按**Settings (設定)**。
- 2 在**Sign in automatically (自動登入)**加上或取消核取符號。在自動登入加上核取符號時，當您開啓手機時便會登入 Google Talk。

設定 Google Talk 以變更您的狀態

- 1 從朋友列表點按**功能表鍵** ，然後點按**Settings (設定)**。。
- 2 在**Automatic away status (自動離開狀態)**加上或取消核取符號。在自動離開狀態加上核取符號時，當螢幕關閉時，您的狀態將會自動變為離開。

實用程式

設定鬧鐘

- 1 從桌面點按**應用程式鍵**  並點按**鬧鐘/時鐘**。
- 2 要新增新鬧鐘，點按  標籤（如有需要）。
- 3 點按**新增鬧鐘**並設定鬧鐘時間。
- 4 設定任何其他所需選項並點按**儲存**。
- 5 點按**功能表鍵**  以新增另一個鬧鐘或調整鬧鐘設定。

使用計算機

- 1 從桌面點按**應用程式鍵**  並點按**計算機**。
- 2 觸控數字鍵以輸入數字。
- 3 對於簡單計算，點按所需的運算符號（+、-、x 或 ÷），然後按 =。
- 4 至於較複雜的計算，點按**功能表鍵** ，點按**進階面板**，然後選擇選項。

新增事件至日曆

注意

您必須建立一個 Google 帳戶，才可使用日曆。

- 1 從桌面點按**應用程式鍵**  並點按**日曆**。
- 2 要檢視事件，點按日期。當天發生的事件將於日曆下顯示。點按日曆以檢視詳細資料。如果您想新增事件，點按日曆右上角的 。
- 3 點按**內容欄位**並輸入事件名稱。檢查日期，並輸入事件需要的開始及完結時間。
- 4 點按**地點欄位**以輸入位置。
- 5 要在事件新增附註，點按**說明欄位**並輸入詳細資料。
- 6 要重複事件，設定**重複頻率**並設定**提醒類型**（如有需要）。

- 7 點按**儲存**，將事件儲存至日曆。
日曆中所有已儲存事件的日子將以顏色方格標記。如果您已設定，鬧鐘會於事件開始時間響起。

更改您的預設日曆檢視模式

- 1 從桌面點按**應用程式鍵**  並點按**日曆**。
- 2 在日曆頂部，點按**月**、**星期**、**議事日程**或**日**。

Polaris Office

您可運用 Polaris Office 在裝置上檢視、建立及編輯文件檔案。載入的檔案可來自裝置的 micro SD 卡或下載的電郵附件。Polaris Office 應用程式支持以下檔案格式：txt、doc、docx、xls、xlsx、ppt、pptx、pdf。

建立新文件

- 1 從桌面點按**應用程式鍵**  > **Polaris Office**。
- 2 在使用者註冊頁面中註冊名稱及電郵地址。如果您想略過註冊程序，點按**稍後**。
- 3 如果是 micro SD 卡上的資料夾及文件，點按**我的資料夾**。
- 4 點按**功能表鍵**  > **新檔案**以開

始新文件。

- 5 點按**文件類型**。
- 6 使用螢幕底部的工具，在文件中輸入內容。
- 7 當您完成處理文件，點按**功能表鍵**  > **檔案** > **儲存**（或**另存新檔**以輸入新文件名稱）以儲存。
- 8 點按**返回鍵**  以結束。

檢視及編輯裝置上的文件

- 1 從桌面點按**應用程式鍵**  > **Polaris Office**。
- 2 如果是 micro SD 卡上的資料夾及文件，點按**我的資料夾**。
- 3 如果並非在根目錄內，移至載有要開啓檔案的資料夾。
點按要檢視或編輯的文件。

注意

您亦可點按訊息內的附件，在電郵中開啓附件。

- 4 將會開啓文件以供檢視。如要編輯，點按**功能表鍵** ，然後選擇**編輯模式**。
- ▶ 要在頁面之間移動或平移檢視文件，向對應的方向捲動。
 - ▶ 要變更縮放級別，點按**功能表**

實用程式

鍵  > 縮放，然後點按所需的縮放級別，或只需多點觸控以取得所需的縮放級別。

- ▶ 使用螢幕底部的工具列，編輯文件（Word、Excel 或 PowerPoint 檔案）。
 - ▶ 點按**功能表鍵**  取得額外功能表選項，例如流回文字、書夾、發送檔案及設定
- 5 完成編輯後，點按儲存。然後，點按返回鍵  以結束。

Polaris Office 文件工具

The Polaris Office 應用程式設有工具列，當您建立文字時便會自動顯示。

- 1 要在現有的文件中顯示工具列，點按**功能表鍵** ，然後選擇**編輯模式**。
- 2 點按工具列圖示，便會在快顯汽球顯示相應工具選項以供點按及使用。
- 3 要隱藏工具選項快顯汽球，再次點按工具列圖示。工具列的左右箭頭指示您可水平捲動以取得更多圖示。工具列的工具視乎文件類型而有所不同。

管理線上文件

- 1 從桌面點按**應用程式鍵**  > Polaris Office。
- 2 點按**新增帳戶** > **Box.net** 以存取線上帳號。
- 3 輸入電郵帳號及密碼以存取您的帳號，然後點按**新增**。
- 4 按需要在伺服器檢視並管理您的文件。

語音控制

只需點按語音控制圖示，即可透過語音搜尋及完成其他語音動作，例如撥號或向聯絡人發送文字、發送電郵、建立附註或取得路線。

- 1 從桌面點按**應用程式鍵**  > Voice search (語音控制)。
- 2 等待「speak now」指示，然後說出您的查詢。
- 3 如果是查詢，搜尋結果將於網絡瀏覽器中顯示。點按所需結果或繼續搜尋。

語音記錄器

使用語音備忘錄錄製語音備忘錄或其他聲音檔案。

錄製聲音或語音

- 1 從桌面點按**應用程式鍵**  並點按**語音備忘錄**。
- 2 點按  **錄製** 開始錄音。
- 3 點按  **停止** 結束錄音。

注意

點按  **列表** 以存取您的錄音。
您可聆聽已儲存的錄音。

發送錄音

- 1 完成錄音後，可透過點按**分享**發送聲音短片。
- 2 選擇**藍芽**、Bluetooth、Gmail、Wi-Fi Share、訊息、電子郵件。
當您選擇**電子郵件**、Gmail 或**訊息**，錄音將會新增到訊息，您可一如以往進行撰寫及傳送。

應用程式管理

您可以使用「App 管理」來管理應用程式。

- 1 點按 [執行] 應用程式標籤，可以看到目前使用中的應用程式。高度消耗資源的應用程式之敘述為紅色。點按停止圖示以結束此應用程式。
- 2 點按已安裝的應用程式標籤，可以看到目前安裝的應用程式。
- 3 點按 [儲存] 標籤，可容許您看到系統記憶體及 SD 咭的容量。
- 4 您可於桌面放置「App 管理」小工具，以便查看目前執行中應用程式的數量。

網絡功能

瀏覽器

瀏覽器令您透過手機盡享快捷、全彩色的遊戲、音樂、新聞、體育、娛樂及更多。

注意

連接到這些服務和下載內容需繳交額外費用。請向網絡供應商諮詢收費詳情。

< 工具列 >

以下螢幕的圖示列讓您在使用瀏覽器時更為簡便。

在瀏覽器瀏覽網頁，跟您在電腦上瀏覽相似。

-  返回 - 移至上一個網頁。
-  前進 - 結合與返回鍵一起使用。讓您無需開啓多個視窗，也可在網頁之間來往。
-  視窗 - 顯示所有您已開啓的視窗。
-  新視窗 - 開啓新視窗。
-  設定 - 移至瀏覽器設定。

使用選項

點按**功能表鍵**  以檢視以下選項：

-  稍後讀取 - 新增目前的網頁以稍後讀取。
-  新增 RSS 收取點 - 新增您最愛的網頁。當網站上出現新項目，Google 讀取裝置將會自動向您發送通知。

注意

RSS（簡易資訊聚合）是網絡 Feed 格式成員之一，用於發布經常更新的內容，如部落格條目、新聞標題或天氣預報。RSS 文件也稱為 feed、web feed 或頻道，載有來自關聯網站的內容概要或完整文字。RSS 讓人們能夠以自動化的方式跟貼最愛網站的更新，這比手動查看更輕鬆容易。使用者可透過在讀取裝置中輸入 Feed 連結，或按一下啓動訂閱程序瀏覽器中的 RSS 圖示，即可訂閱 Feed 服務。讀取裝置會定期檢查使用者訂閱的 Feed，查看是否有新內容並下載任何找到的更新。至於無法使用的 RSS Feed 網頁，將會停用「Add RSS Feed」圖示。



分享網頁 - 點按以分享網頁。



在頁面中尋找 - 讓您在目前網頁尋找文字。



選擇文字 - 在網頁上選擇文字。用手指反白所需文字。反白的文字複製到剪貼板，您可以將其貼在任何可輸入文字的地方。



更多

- 主頁 - 移至主頁。
- 設定主頁 - 設定目前網頁為主頁。
- 新增捷徑至主頁 - 新增本頁至主頁作為捷徑。
- 頁面資訊 - 檢視網頁詳細資料。
- 下載 - 檢視已下載的記錄。

提示

要返回之前的網頁，按返回鍵 。

新增書籤

1 點按網址欄旁的 。

- 從縮圖檢視點按**新增**，輸入名稱及網址，然後點按**確定**。
- 從列表檢視點按**新增書籤**，輸入名稱及網址，然後點按**確定**。

變更網頁瀏覽器設定

點按  並設定任何所需選項。

On - Screen Phone

LG On - Screen Phone 2.0

On - Screen Phone 讓您透過 USB、藍芽或 Wi-Fi 連接，使用電腦檢視您的手機螢幕。您亦可在電腦上利用滑鼠或鍵盤，控制您的手機。

On - Screen Phone 圖示



將手機連接到電腦，或中斷連接。



旋轉 On - Screen Phone 視窗（只適用於支援旋轉的應用程式）。



啟動 LG Home Panorama 或變更 On - Screen Phone 偏好。



將 On - Screen Phone 視窗最小化。



結束 On - Screen Phone 程式。



將 On - Screen Phone 視窗最小化。

On - Screen Phone 功能

- **即時傳送及控制**：連接至電腦時，顯示並控制您的手機屏幕。
- **滑鼠操控**：讓您在電腦螢幕上使用滑鼠拖動並點按，以控制您的手機。
- **使用鍵盤輸入文字**：讓您使用電腦鍵盤編寫文字訊息或備註。
- **檔案傳輸（手機至電腦）**：從手機（例如：媒體匣、影片播放器、音樂及 Polaris Office）手機的將檔案發送至電腦內。只須按滑鼠右鍵，並將檔案拖動至您的電腦內。
- **檔案傳送（電腦至手機）**：從電腦將檔案發送至手機內。只須選擇您想傳送的檔案，然後拖放至 On - Screen Phone 視窗內。您發送的檔案將會儲存在 OSP 資料夾內。
- **LG Home Panorama**：顯示 LG Home 的整個工作空間。您可輕易管理圖示或小工具，並透過雙按捷徑執行應用程式。

注意：請確保 LG Home 為預設啟動程式。部分小工具可能在 LG Home Panorama 上無法正常運作。

如何在電腦上安裝 On - Screen Phone

瀏覽 LG Home (<http://www.lg.com>) 並轉至支援 > 手機支援 > 選擇型號 (LG-P936) > 按一下 OSP (On-Screen 手機) 進行下載。您可於電腦上安裝 On - Screen Phone。

如何將手機連接至電腦

On - Screen Phone 2.0 提供 USB、藍芽和 Wi-Fi 連接。請依照 OSP 程式連接精靈的指示操作。

注意

請確保已選擇設定 > 連接設定 > On - Screen Phone內的 On - Screen Phone核取方塊。

如果 On - Screen Phone透過 Wi-Fi 連接，請留意電池因電流消耗量較大而可能較快耗盡電量。

當您透過手機熱點將手機連接至電腦，並在電腦上存取互聯網，可能需要額外數據費用，視乎您的 DataPro 數據計劃而定。

使用 Wi-Fi 網絡存取互聯網可能無法順暢運作，視乎網絡流量而定。當您放大 On - Screen Phone視窗，螢幕上的顯示可能變得較慢。

要檢查手機至電腦連接

只要已連接裝置，向下拖動桌面頂部的狀態列，以檢查 On - Screen Phone的連接狀態。

On - Screen Phone

要中斷電腦與手機的連接

點按在 On - Screen Phone 視窗左上角的 。或者，向下拖動桌面頂部的狀態列，然後選擇「On-Screen Phone connected」>「Disconnect On-Screen Phone」。

- 在中斷連接對話框中點按「Disconnect」。

設定

無線及網絡

本功能表讓您管理 Wi-Fi 及藍芽連接、可攜式熱點及數據網絡共享、飛航模式及 VPN 連接。要存取本功能表，從桌面點按**功能表鍵**  > **設定** > **無線及網絡**。

飛航模式

飛航模式讓您快速關閉所有無線連接。

1 從**無線及網絡**螢幕，點按**飛航模式**核取方塊將其開啓（將會顯示藍色核取符號）。

2 再次點按將其關閉。

或者

1 按住**電源/鎖定鍵**  並點按**飛航模式**。

2 再次按住**電源/鎖定鍵**  並點按**飛航模式**將其關閉。

Wi-Fi - 啓動 Wi-Fi 以連接可使用的 Wi-Fi 網絡。

Wi-Fi 設定 - 讓您設定及管理無線存取點。設定網絡通知，或新增 Wi-Fi 網絡。從 Wi-Fi 設定螢幕進入進階 Wi-Fi 設定螢幕。按**功能表鍵**並點按**進階**。

Wi-Fi Direct 設定 - 勾選核取

方塊以啓用 Wi-Fi Direct。設定 Wi-Fi Direct 裝置名稱及掃描其他裝置。

藍芽 - 開啓或關閉藍芽無線功能。

藍芽設定

- **裝置名稱**：爲您的裝置設定藍芽名稱。
- **可偵測性**：設定您的裝置可被其它藍芽裝置察覺。
- **搜尋裝置**：設定其他藍芽裝置能夠看見您的裝置。

網絡共享及可攜式無線熱點 - 您可以設定網絡共享及可攜式 Wi-Fi 熱點設定。

VPN 設定 - 顯示您以前配置的虛擬專用網絡 (VPN) 列表。允許您新增不同類型的 VPN。

流動網絡 - 設定數據漫遊、網絡模式和存取點名稱、電訊網絡商 (APN) 等等。

通話設定

您可設定固定撥號、語音留言及其他通話設定，包括拒接來電、發送訊息、通話時間及來電轉接。

設定

聲音

調整聲音、通知預設設定及震動模式。您亦可管理響音及觸控回饋。

靜音模式 - 在此加上核取符號會將媒體及鬧鐘以外的所有聲音震音。

震動 - 設定是否讓手機以震動方式向您作出回饋。

音量 - 調整手機的音量設定以配合您的需要及環境。

電話鈴聲 - 選擇來電的鈴聲。

通知鈴聲 - 選擇通知鈴聲，如接收新訊息或日曆事件。

觸控音效 - 選擇當您使用撥號鍵盤時是否聽到音效。

選擇項目時發聲 - 選擇當點按鈕、圖示及其他螢幕項目時是否聽到聲音。

螢幕鎖定聲音 - 選擇鎖定或解鎖螢幕時是否聽到聲音。

觸控回饋 - 按下軟鍵及某些使用者介面互動時作出震動。

顯示

亮度 - 調校螢幕亮度。

自動旋轉 - 設定當您旋轉手機時自動切換方向。

動畫 - 設定允許動畫。

螢幕逾時 - 設定螢幕自動關閉前的逾時。

顯示字體 - 變更顯示字體。

前鍵LED逾時 - 設定手機正面 LED 自動熄滅前的持續時間

螢幕最佳化 - 變更已下載應用程式的解析度大小以適應螢幕大小。

運動感應器校正 - 讓您重設運動感應器的校正。

手勢

移動游標 - 在此項加上核取符號以設定裝置移動游標，在輸入期間點按裝置任何一側以移動游標。

重新查找項目 - 如果您勾選此項，點按並按住項目及傾斜手機，便可以將項目重置到其他桌面。

靜音 - 勾選此項後，當手機響鈴期間翻轉手機，即可將來電靜音。

延遲（停止） - 在此項加上核取符號，翻轉手機即可延遲（停止）鬧鐘。

上一個/下一個項目 - 在此項加上核取符號，點按手機的左/右側

即可顯示媒體匣的上一張/下一張相片。

暫停 - 勾選此項後，翻轉手機可暫停影片。

位置及安全

使用無線網絡 - 如勾選使用無線網絡，手機會借助 Wi-Fi 和流動網絡確定您大概所處的位置。如勾選此選項，系統會問您是否同意允許 Google 在提供這些服務時，使用您所處的位置。

啓用 GPS 衛星定位 - 如勾選 使用 GPS 衛星，手機會確定您所處的位置，準確地找出您身處的街道。

設定螢幕鎖定 - 設定解鎖圖案以保護您的手機。開啓一系列畫面，以指導您繪畫螢幕解鎖圖案。您可以設定 PIN 碼 或密碼，而不是解鎖圖案或什麼都不設定。

當您開啓手機或喚醒螢幕時，系統會提示您繪製解鎖圖形以解鎖螢幕。

螢幕鎖定計時器 - 設定啓用螢幕鎖定前的閒置時間長度。

設定 SIM 卡鎖定 - 設定鎖定 SIM 卡或更改 SIM 卡 PIN 碼。

顯示密碼 - 選擇隨您輸入顯示密碼、或於輸入時隱藏並取消選擇。

選擇裝置管理員 - 增加或移除裝置管理員。

使用安全認證 - 可讓您存取安全證書

從 SD 卡安裝 - 選擇從 SD 卡安裝加密證書。

設定密碼 - 設定或變更憑證儲存密碼。

清除儲存空間 - 清除所有內容的憑證儲存並重設其密碼

使用解鎖圖形、PIN 碼 或密碼

設定解鎖圖形、PIN 碼 或密碼保障手機的安全。要設定螢幕鎖定，依照以下程序操作。

點按**功能表鍵** ，點按**設定** > **位置及安全** > **設定螢幕鎖定**並選擇**圖形**、**PIN 碼** 或**密碼**。

設定

警告

使用解鎖圖形、PIN 碼 或密碼時格外留神。請記住您所設定的螢幕解鎖資訊，這是非常重要的。您有 5 次機會輸入螢幕解鎖資訊。如果用盡 5 次機會，則需要等待 30 秒，才可再次嘗試解鎖手機。

在無法重新開啓您的解鎖圖形、PIN 碼 或密碼時：

如果您已在手機登入 Google 帳號，且 5 次都無法使用正確的圖形，點按**忘記解鎖圖形？**您需要登入 Google 帳號，系統會提示您建立新解鎖圖形。如果您尚未在手機上建立 Google 帳號或忘記 PIN 碼 或密碼，您需要進行硬性重新設定。

注意

若進行硬性重新設定，所有用戶應用程式及用戶數據將被刪除。請記住先備份所有重要的數據，才進行硬性重新設定。

- 1 關閉電源。
- 2 同時按住以下按鍵 8 秒：**電源/鎖定**

定鍵 + 向下音量鍵。

- 3 顯示出廠硬性重新設定屏幕時，釋放按鍵。
- 4 按 **電源/鎖定** 鍵以確認 - 刪除所有用戶資料，並且按 **音量** 鍵刪除。

應用程式

未知的來源 - 在此項加上核取符號，允許安裝您從網站或 Play Store 以外任何其他地方取得的應用程式。

警告

視乎您所安裝的應用程式，手機可能無法正確操作，並可能透過互聯網被非法用於建立您的位置及存取個人資資訊。

爲了保護您的手機和您的個人資料，請只從受信任的來源下載應用程式，例如 Play Store。

管理應用程式 - 管理及移除已安裝的應用程式。

正在運作的服務 - 查看目前執行的服務。

儲存空間使用量 - 檢視應用程式

的儲存空間使用量。

電池使用狀況 - 查看使用電池的項目。

開發 - 設定開發應用程式的選項。

帳號及同步處理

讓您啓用背景資料、自動同步處理及新增帳號。

隱私設定

讓您執行重設為原廠設定。請注意，此操作將清除您的所有數據。

SD 卡及手機儲存

讓您查看 micro SD 卡可用的總空間。您也可以解除安裝 micro SD 卡以安全地移除或格式化。

語言及鍵盤

選取語言並自訂輸入方式及鍵盤設定。

語音輸入及輸出

設定語音識別設定及使用文字轉語音設定，為可使用 Android 文字轉語音合成器的應用程式設定此功能。

協助工具

您可使用可存取性設定，以設定任何已安裝到手機的可存取性外掛程式。

注意

需要其他外掛程式，才可選擇此選項。

連接設定

USB 連接模式 - 只有在您已插入記憶咭的情況下，手機方可用作大容量儲存裝置。您可以設定大容量儲存為 USB 連接模式下的預設設定。

On - Screen Phone - 點按此項可使用 On - Screen Phone。請參閱第 74 頁的 On - Screen Phone 資訊。

設定

日期及時間

設定日期、時間、時區及日期和時間格式。

關於手機

檢視法律資訊、檢視手機狀態及軟件版本，以及執行軟件更新。

軟件更新

手機軟件更新

有了這項功能，您無需親臨服務中心，就可透過互聯網將手機韌體更新為最新版本，十分方便。

更多有關此功能的資訊，請瀏覽：

<http://www.lg.com>

手機軟件更新要求使用者密切注意整個更新過程。請確保繼續進行前，已檢查所有在每一個步驟出現的說明和備註。請注意，更新期間若移除 USB 線或電池，有可能對您的手機造成嚴重損害。

透過空中下載 (OTA) 進行 LG 手機軟件更新

此功能讓您無須連接 USB 數據線，也能輕鬆透過 OTA 將手機韌體更新為較新版本。LG 推出適合您裝置韌體的較新版本時，此功能才可使用。

首先，您可以使用手機檢查軟件版本：

點按**功能表鍵**  > **設定** > **關於手機**。您可在列表底部查看軟件版本。

要執行手機軟件更新，點按**功能表鍵**  > **設定** > **關於手機** > 軟

體更新 > 現在檢查更新。

注意

LG 保留權利，可酌情決定只為選定型號提供軟件更新，並不保證所有手機型號均有軟件的較新版本。

注意

您的個人資料，包括 Google 帳戶及任何其他帳戶的資訊、系統 / 應用程式數據及設定、任何已下載的應用程式及 DRM 授權—在更新手機軟件的程序期間可能會遺失。因此，LG 建議您先備份個人資料，才更新手機軟件。LG 對於個人資料的任何遺失概不責任。

版權和商標

通知：

公開原始碼軟件

若要取得 GPL、LGPL、MPL 或其他公開來源授權的相應原始碼，請瀏覽

<http://opensource.lge.com/>

所有授權的條款、免責聲明及通知均可連同原始碼一同下載。

DivX 手機

關於 DIVX VIDEO：DivX® 是由 Rovi Corporation 的子公司 DivX, LLC 所建立的數碼影片格式。這是官方 DivX Certified® 的裝置，能夠播放 DivX 影片。有關用於將檔案轉換成 DivX 影片的軟件工具的更多資訊，請瀏覽 divx.com。

關於 DIVX VIDEO-ON-DEMAND：這個 DivX Certified® 裝置必須先註冊，才可播放已購買的 DivX Video-on-Demand (VOD) 電影。若要取得註冊編碼，請在您的裝置設定功能表找出 DivX VOD 部分。轉到 vod.divx.com 以獲取有關如何完成註冊的更多資訊。

DivX Certified® 可播放高達 HD 720p 的 DivX® 影片，包括專貴內容。

DivX®、DivX Certified® 及相關標誌乃 Rovi Corporation 或其子公司的商標並經授權下使用。

Dolby Mobile




Dolby Laboratories 授權製造。

Dolby 及 double-D 符號乃 Dolby Laboratories 的商標。

配件


該等配件適合配合 LG-P936 使用。（下述配件為可選購配件。）

旅行充電器

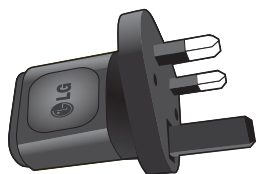

USB線

連接您的 LG-P936 和電腦。

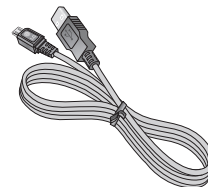


使用手冊

了解更多有關 LG-P936 的資訊。



立體聲耳機

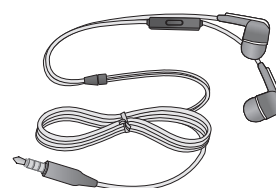

注意：

- 只可使用原裝 LG 配件。若不使用原裝 LG 配件，則保養可能失效。
- 配件可能會視乎不同地區而有所不同。

技術數據

環境溫度

最高：+55°C（放電）+45°C（充電）

最低：-10°C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band , WCDMA and LTE Terminal Equipment

Model Name

LG-P936

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.8.1 / EN 301 489-7 V 1.3.1 / EN 301 489-17 V 2.1.1 /
EN 301 489-19 V 1.2.1 / EN 301 489-24 V1.5.1
EN 60950-1:2006+A11:2009
EN 50360:2001 / AC:2006 / EN62209-1:2006 / EN62209-2:2010 / EN 62311:2008 / EN 62479:2010
EN 300 328 V1.7.1
EN 301 511 V9.0.2
EN 301 908-1 V5.2.1 / EN 301 908-2 V5.2.1/EN 301 908-13 V5.2.1

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility
that the product mentioned above to which this
declaration relates complies with the above mentioned
standards and Directives

LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands

Name

Doo Haeng Lee/Director

Issued Date

19. Mar. 2012

Signature of representative

疑難排解

本章會列出一些使用手機時可能遇上的問題。您可能需要就某些問題聯絡您的服務供應商，但多數問題均可輕易自行修正。

訊息	可能起因	可用解決方法
智能咭錯誤	手機內無智能咭，或不正確地插入智能咭。	確保已正確地插入智能咭。
無網絡連接/失去網絡	訊號較弱或您位於運營商網絡服務範圍外。 網絡商套用新服務。	移近窗邊或移至空曠地方。檢查網絡供應商的覆蓋範圍。 檢查智能咭是否多於 6~12 個月。如果屬情這個情況，於鄰近網絡供應商分行更換 SIM。聯絡您的網絡供應商。
代碼不相符	要更改安全密碼，您需要重新輸入以確認新的安全密碼。 您所輸入的兩個密碼並不相符。	如您忘記密碼，請聯絡您的服務供應商。
無法設定無任何應用程式	服務供應商不支援此功能，或需要註冊使用此功能。	請聯絡您的服務供應商。
無法撥打電話	撥號錯誤 新智能咭已插入。 已達預付費用上限。	新網絡未獲授權。 請檢查新的限制。 聯絡您的服務供應商，或使用 PIN2 重設限額。

疑難排解

訊息	可能起因	可用解決方法
手機無法啓動	按開/關鍵時間太快。 電池並無充電。 電池接觸面骯髒。	按下開啓/關閉鍵至少兩秒。 爲電池充電。 檢查螢幕上的充電指示器。 清潔電池接觸面。
充電錯誤	電池並無充電。 外界溫度太高或太低。 接觸不良 無電壓 充電器故障 使用不當充電器 電池故障	爲電池充電。 確保於正常溫度下爲手機充電。 檢查充電器是否正常，以及是否正確地連接電源至手機。 檢查電池接觸點，如有髒污則需清潔。 將充電器插入不同的插座。 如果充電器沒有反應，請更換充電器。 只可使用原廠 LG 配件。 更換電池。
不允許撥打號碼	固定撥號功能已開啓。	檢查設定功能表並關閉功能。
無法接收 / 發送文字訊息和圖片	記憶體已滿	刪除手機的部分訊息。
檔案沒有開啓	不支援的檔案格式	檢查受支援的檔案格式。
SD 咭無法運作	只支援 FAT 16、FAT 32 檔案系統	透過讀卡器檢查 SD 咭檔案系統，或使用手機將 SD 咭格式化。

訊息	可能起因	可用解決方法
接收來電時，螢幕並無開啓。	距離感應器問題	如果您使用任何保護貼或保護套，檢查該等配件是否覆蓋距離感應器附近的範圍。確保距離感應器附近並無任何障礙物。
沒有聲音	震動模式	檢查聲音功能表的設定狀態，確保您並非使用震動或靜音模式。
掛線或凍結	軟件間歇性問題	請取下電池，再次插入電池並開啓手機。 透過網站嘗試進行軟件更新。
手機已鎖定並沒有運作。	重新啓動手機	1. 關閉手機。 2. 取下電池蓋。 3. 安裝電池。 4. 關蓋。 5. 再次開啓手機。





简体中文

LG-P936 用户手册

本手册有助于您开始使用您的新手机。
如果需要更多信息，请访问 www.lg.com。

- 本手册的部分内容可能不适用于您的手机。具体取决于手机软件和服务提供商。
- 由于这款手机的键盘为触摸屏键盘，不推荐视障人士使用。
- 版权所有 ©2012 LG Electronics, Inc. 保留所有权利。LG 和 LG 徽标是 LG 集团及其相关实体的注册商标。所有其他商标是其各自所有者的财产。
- Google™、Maps™、Gmail™、YouTube™、Talk™ 和 Play 商店™ 是 Google, Inc. 的商标。



目录

关于安全有效使用手机的准则.	5	123 模式.....	32
开始了解您的手机.....	10	输入带注音的字母.....	32
您的手机.....	16	Google 帐户设置.....	33
使用入门.....	18	创建 Google 帐户.....	33
安装 SIM 卡和电池.....	18	登录 Google 帐户.....	33
充电.....	19	连接到网络和设备.....	35
插入 microSD 卡.....	19	Wi-Fi.....	35
取出 microSD 卡.....	20	蓝牙.....	36
格式化 microSD 卡.....	21	数据绑定.....	37
在应用程序之间切换和退出应用程序.....	21	移动热点.....	38
MHL.....	22	Wi-Fi Direct	39
主屏.....	23	Wi-Fi 共享.....	39
触摸屏提示.....	23	智能共享.....	39
近程传感器.....	23	通话.....	42
锁定手机.....	24	拨打电话.....	42
快速切换到静音模式.....	24	呼叫联系人.....	42
主页	24	接听和拒绝电话.....	42
自定义主屏.....	25	调节通话音量.....	42
返回到最近使用的应用程序..	26	拨打第二个电话.....	43
通知面板.....	26	查看通话记录.....	43
查看状态栏.....	26	通话设置.....	43
屏上键盘.....	28	联系人.....	44
输入文本.....	31	搜索联系人.....	44
		添加新联系人.....	44

常用联系人.....	44	多媒体.....	58
信息/电子邮件.....	45	图片库.....	58
信息.....	45	发送视频.....	58
电子邮件.....	46	使用图像.....	59
社交网络.....	49	观看幻灯片.....	59
在手机中添加帐户.....	49	查看照片详细信息.....	59
在主屏中添加社交网络小工具.....	49	使用 USB 大容量存储设备	
查看和更新状态	49	传输文件.....	59
同步手机上的帐户.....	50	音乐.....	60
在手机上删除帐户.....	50	如何将音乐/视频文件保存	
相机.....	51	到手机.....	60
了解取景器.....	51	如何将在手机上播放音乐/	
拍照	52	视频文件.....	60
拍照后.....	52	播放歌曲.....	60
使用高级设置.....	52	使用播放列表.....	61
查看保存的照片.....	54	要在播放列表中删除歌曲....	61
将照片设为墙纸.....	54	要重命名播放列表或删除播	
摄像机.....	55	放列表.....	61
了解取景器.....	55	Google 应用程序.....	62
录制视频.....	56	关于 Google 应用程序.....	62
录制视频后.....	56	Google Maps™.....	62
使用高级设置.....	56	搜索位置和地方.....	62
观看保存的视频.....	57	获得方向指示.....	63
观看视频时调节音量.....	57	My Places	63
		清除地图.....	63
		纬度.....	63

目录

地方.....	64	位置和安全	78
Play 商店™.....	65	应用程序.....	79
Gmail™.....	66	帐户与同步.....	80
Google Talk™.....	66	隐私.....	80
实用工具.....	68	SD 卡和手机存储器.....	80
设置闹钟.....	68	语言和键盘.....	80
使用计算器.....	68	语音输入与输出.....	80
将事件添加到日程表中.....	68	辅助功能.....	80
Polaris Office.....	69	连接设置.....	80
语音控制.....	70	日期和时间.....	81
语音备忘录.....	71	关于手机.....	81
应用程序管理器.....	71	软件更新.....	82
网络.....	72	手机软件更新.....	82
浏览器.....	72	通过空中下载 (OTA) 的	
使用选项.....	72	LG 手机软件更新.....	82
添加书签.....	73	版权所有和商标.....	83
更改浏览器设置.....	73	DivX 移动	83
屏幕手机.....	74	Dolby Mobile.....	83
LG 屏幕手机 2.0.....	74	技术参数.....	84
设置.....	76	配件.....	85
无线和网络.....	76	故障排除.....	86
通话设置.....	77		
声音.....	77		
显示.....	77		
手势.....	77		

关于安全有效使用手机的准则

请阅读以下简单的准则。违反这些准则可能造成危险或者触犯法律。

暴露在射频能量之下

无线电波暴露和“特定吸收率” (SAR) 信息。此款 LG-P936 型手机已设计为遵守有关适用的无线电波暴露安全要求。此要求基于相关的科学准则，其中包括为确保所有人员（无论年龄和健康状况）安全而设计的安全裕量。

- 无线电波暴露准则采用一种称为“特定吸收率”或 SAR 的测量单位。SAR 测试是在所有用到的频带中以手机的最高认可功率电平进行发射时使用标准化方法执行的。
- 不同的 LG 手机型号可能有不同的 SAR 能级，但它们均符合相关的无线电波暴露准则。
- 国际非电离辐射防护委员会 (ICNIRP) 建议的 SAR 上限值为：每 10g 重的人体组织吸收的能量平均值不超过 2 W/kg。
- 由 DASY4 对该型号手机进行的测试，人耳能够承受的 SAR 最大值为 0.567 W/kg (10 克)，

戴在身体上时，其值为 0.872 W/kg (10 克)。

- 本设备在靠近耳朵的正常使用位置使用或放置在距人体至少 1.5 厘米的位置时符合 RF 暴露标准。当使用便携盒、皮带夹或皮套进行身体佩戴操作时，不得包含金属并且产品应至少距身体 1.5 厘米。为了发送数据文件或信息，此设备需要高质量的网络连接。在某些情况下，数据文件或信息的发送可能被延迟，直到有这样的连接可用。确保遵照以上间隔距离说明直到完成发送。

产品保养和维护

警告

仅使用经核准为用于此特定手机型号的电池、充电器和配件。使用任何其它类型可能导致适用于此手机的许可或保修失效，并可能造成危险。

- 不要拆解本机。当需要维修时，请将手机送往合格的服务技术人员处。

关于安全有效使用手机的准则

- 保修（由 LG 决定）可能包括使用新的或返修的更换部件或板，只要其功能与更换的部件等效。
- 远离诸如电视、收音机或个人计算机之类的电器。
- 远离诸如暖气片或厨灶之类的热源。
- 小心不要让手机摔落。
- 不要让手机受到机械振动或撞击。
- 在任何有特殊条例要求的区域关闭手机。例如，请勿在医院使用手机，因为它可能影响敏感的医疗装置。
- 手机充电时，请勿用湿手操作手机。这可能会导致电击或手机严重受损。
- 请勿在靠近易燃物体的位置充电，因为手机可能因加热而引发火灾。
- 使用干布清洁手机外壳（不要使用如苯、稀释剂或酒精之类的溶剂）。
- 如果手机置于柔软物体之上，请不要充电。
- 应将手机放在完全通风的位置充电。
- 不要在烟雾或灰尘过多的环境中使用或存放手机。
- 不要将手机放在信用卡或卡式车票旁边，它可能会影响磁条上的信息。
- 不要用尖锐物体敲击屏幕，这可能会损坏手机。
- 不要将手机暴露在液体或潮气中。
- 谨慎使用诸如耳机之类的配件。在不必要的情况下，不要触摸天线。
- 请勿使用、触摸或试图取下或修复破碎或破裂的玻璃。由于滥用或误用造成的玻璃显示屏损坏不在保修范围内。
- 本手机为正常使用过程中会发热的电子设备。在缺乏足够通风的条件下过长时间直接接触皮肤时，可能导致不舒服或轻微灼伤。因此，在操作的过程中或之后立即处理您的手机时，应特别小心。

有效的手机操作

电子设备

所有手机都可能受到干扰，这种干扰会对性能造成影响。

- 在未经允许的情况下，不得在医疗装置附近使用手机。不要将手机放在心脏起搏点上，即胸前的口袋内。
- 手机可能会对某些助听器造成干扰。
- 微弱的干扰可能会影响电视、收音机、个人计算机等。

行车安全

查阅有关在驾驶时使用手机的本地法律法规。

- 不要在驾驶时使用手持式手机。
- 将注意力完全集中在驾驶上。
- 如果行驶条件需要，请在拨打或接听电话之前将车辆驶离道路并停车。
- 射频能量可能影响车辆内的电子系统，例如立体声音响、安全设备等。
- 当车辆配备气囊时，不要让安装的便携式的无线设备阻挡气囊。

这样做可能因性能不当而导致气囊无法释放或导致严重受伤。

- 如果您在外出时使用耳机收听音乐，请确保将音量设置为合理的音量级别，以便注意周围的情况。在过马路时，尤其要注意这一点。

防止损伤您的听力

如果您长时间置于高音环境中，那么您的听力可能会遭到伤害。因此，我们建议您在开机或关机时不要将手机置于耳边。同时，我们还建议您将音乐和通话音量设置为合理的音量级别。

- 使用耳机时，如果您不能听到附近的人说话，或者坐在您旁边的人能听到您在听的内容，则将音量调低。

备注：耳机声音压力过大可能导致听力受损。

关于安全有效使用手机的准则

玻璃部分

手机部分为玻璃制。如果手机摔落到坚硬表面或受到强烈撞击，玻璃会破碎。如果玻璃破碎，请勿触摸或尝试取出玻璃碎片。停止使用手机，在授权的服务提供商处更换玻璃。

爆破区域

不要在正进行爆破的地区使用手机。请依照有关限制，并遵守任何规章或规定。

易爆环境

- 不要在加油站内使用手机。
- 不要在靠近燃料或化学制品处使用手机。
- 不要在放有手机和配件的车厢内运输或存放可燃气体、液体或爆炸品。

在飞机上

无线设备可能对飞机造成干扰。

- 登机前，请关机。
- 未经机务人员允许，不得在地面上使用手机。

儿童

将手机放在儿童接触不到的安全地方。手机中包含细小零件，如果脱落可能导致窒息危险。

紧急电话

并非在所有手机网络中均可使用紧急电话。因此，您不应仅依赖于手机的紧急呼叫功能。请向本地的服务提供商核准。

电池信息及保养

- 您无需在再次充电前对电池进行完全放电。与其它电池系统不同，本机电池不具有可能影响电池性能的记忆效应。
- 只能使用 LG 电池和充电器。LG 充电器设计为最大程度地延长电池使用寿命。
- 不要拆解电池组或将其短路。
- 保持电池组的金属触点清洁。

- 当电池不再提供合乎要求的性能时，请更换电池。 在需要更换之前，电池组可以反复充电数百次。
- 如果很长一段时间都没用过电池，请将电池再次进行充电以保持最佳使用状态。
- 不要将电池充电器暴露在直射阳光下，也不要放在诸如浴室之类的高湿环境中使用。
- 不要将电池存放在过热或过冷的地方，这可能损害电池的性能。
- 如果用不适当的电池进行替换，可能会有爆炸危险。
- 请按制造商的说明处置用过的电池。 如果可能，请循环使用电池。 不要象处理家用废物一样处理电池。
- 如果要更换电池，请将其携带至 LG Electronics 授权服务点或经销商处以寻求帮助。
- 手机充好电后，请务必将充电器从墙上插座拔下，以避免不必要的耗电。
- 实际的电池寿命将取决于网络配置、产品设置、使用方式、电池和环境条件。

开始了解您的手机

开始使用手机前，请阅读此内容！

请检查以查看本节是否介绍了您手机遇到的任何问题，然后再将手机拿去维修或者致电给服务代表。

1. 手机内存

为有更多内存可用，您必须管理您的应用程序并删除一些数据，如应用程序或消息。

管理应用程序

- 1 从主屏轻触**菜单键** ，然后轻触**设置 > 应用程序 > 管理应用程序**。
- 2 显示应用程序列表后，滚动并轻触要卸载的应用程序。
- 3 轻触**卸载**，然后轻触**确定**，以确认卸载目标应用程序。

2. 优化电池使用寿命

您可以通过禁用无需在后台持续运行的功能来延长电池的使用寿命。您也可以监视应用程序和系统资源如何消耗电池电量。

延长电池使用寿命

- 关闭未使用的无线电通信，如 Wi-Fi、蓝牙或 GPS。
- 调低屏幕亮度，设置较短的屏幕超时。
- 关闭 Gmail™、日历、联系人及其他应用程序的自动同步功能。
- 您下载的一些应用程序可能会减少电池电量。
- 使用下载的应用程序时，检查电池电量水平。

查看电池电量水平

- 1 从主屏轻触**菜单键** ，然后轻触**设置 > 关于手机 > 状态**。
- 2 电池状态（正在充电、未在充电）和电量显示在屏幕的顶层菜单。

监视并控制使用电池的项目

- 1 从主屏轻触**菜单键** ，然后轻触**设置 > 关于手机 > 电池使用**。
- 2 屏幕顶部显示电池使用时间。自上次连接到电源的时间，或者连接

到电源后，使用电池电源所运行的时间。屏幕上还列出了使用电池电源的应用程序或服务，从最大量到最小量。

3. 安装开源操作系统

在手机上安装开源操作系统，而不使用制造商提供的操作系统，可能会造成手机无法正常工作。

警告

- 如果安装并使用非制造商提供的操作系统，您的手机不再享受保修。
- 为保护您的手机和个人数据，请只从信任的来源（如 Play 商店）下载应用程序。如果手机上的一些应用程序未正确安装，您的手机可能无法正常工作，甚至发生严重错误。您需要从手机中卸载那些应用程序及其所有数据和设置。

4. 使用解锁图案、PIN 码或密码

设置解锁图案、PIN 码或密码以保护您的手机安全。要设置屏幕锁定，请遵循以下流程。

轻触**菜单键** ，轻触**设置** > **位置和安全** > **设置屏幕锁定**，然后在**图案、PIN 码或密码**之间选择。

警告

使用解锁图案、PIN 码或密码时的预防措施。请务必记住您设置的屏幕解锁信息。允许您有 5 次机会输入您的屏幕解锁信息。如果您用完所有 5 次机会，您必须等待 30 秒才能再次尝试解锁手机。

在无法调用解锁图案、PIN 码或密码时：

如果您在手机上登录 Google 帐户并尝试使用图样 5 次均失败，请轻触**忘记了图案？**系统将要求使用您的 Google 帐户登录并提示您创建新的解锁图案。

如果未在手机上创建 Google 帐户或者忘记了 PIN 码或密码，则需要执行硬重置。

开始了解您的手机

5. 使用硬重置（恢复出厂设置）

如果手机需要恢复到它的原始条件，请使用**硬重置**初始化手机。

- 1 关机。
- 2 同时按住以下按键（持续 8 秒钟）：**电源/锁定键** + **向下音量键**。
- 3 当显示出厂硬重置屏幕时，释放以上按键。

警告

如果执行硬重置，所有用户应用程序和用户数据将被删除。在执行**硬重置**之前，请记得备份任何重要数据。

6. 使用 microSD 卡

图片、音乐和视频文件只能保存到外部存储器。需要先插入 microSD 卡，然后再将这些文件保存到外部存储器。如果未插入 microSD 卡，您将无法将这些项目保存在外部存储器上。

警告

尚未卸载 microSD 卡之前，请勿取出该卡。否则，可能损坏 microSD 卡以及手机，并且 microSD 卡上存储的数据也可能会损坏。要安全取出 microSD 卡，请从主屏轻触**菜单键** ，然后轻触**设置 > SD 卡和手机存储器 > 卸载 SD 卡**。

7. 通过 USB 将手机连接到电脑

- 1 使用手机附带的 USB 电缆将手机连接到计算机上的 USB 端口。您将收到提示 USB 已连接的通知，还会看到 USB 连接模式弹出窗口。
- 2 轻触**批量储存**和**确定**，以确认在手机的 microSD 卡和计算机之间传输文件。

当手机作为 USB 存储器进行连接时，您会收到一则通知。您手机的 microSD 卡已安装为计算机的驱动器。现在，您可以将文件复制到 microSD 卡，也可以从 microSD 卡中复制文件。

提示

当手机作为 USB 存储器进行连接时，您无法从手机访问 microSD 卡。因此，您无法使用依赖 microSD 卡的应用程序（如音乐）。

8. 将手机与计算机同步 (LG PC Suite)

LG PC Suite IV 是一种可帮助您使用 USB 数据通信电缆将手机连接到 PC 的程序。连接后，您可以在 PC 上使用手机的功能。

LG PC Suite IV 的主要功能

- 方便地创建、编辑和删除手机数据
- 将手机数据与 PC 数据（联系人、日历、短信、书签和通话记录）同步
- 通过简单的拖放操作在 PC 和手机之间轻松地传输多媒体文件（照片、视频和音乐）

安装“LG PC Suite”PC 应用程序

可以从 LG 网页下载“LG PC Suite”PC 应用程序。

- 1 转到 www.lg.com，选择您所在的国家/地区。
- 2 转到**支持 > 手机支持 > 选择型号** (LG-P936)。
- 3 单击**下载**中的 **PC 同步**，然后单击 **WINDOW PC 同步下载**，以下载 LG

开始了解您的手机

PC Suite PC 软件。

您也可以从预安装的 microSD 卡下载程序。

- 1 将 USB 数据线连接到您的 PC。
确保手机已启用**大容量存储**模式。
- 2 将大容量存储中的 LGPCSuiteIV 文件夹复制到 PC。
- 3 在 PC 上运行 LGInstaller.exe 文件并遵循说明。
- 4 LG PC Suite IV 安装完成后，禁用**大容量存储**模式以运行 LG PC Suite IV。

备注：请勿移除或删除存储卡上安装的其他程序文件。这可能会损害预安装的应用程序。

备注：需要使用 LG 集成的 USB 驱动程序连接 LG 设备和 PC，并且该驱动程序将在安装“LG PC Suite”PC 软件时自动安装。

9. 使用数据连接时的解锁屏幕

使用数据连接时，如果您一段时间内未触摸屏幕，则屏幕将变黑。要打开 LCD 屏幕，按电源/锁定键即可。

10. 向上持握手机

请将手机象普通电话一样向上持握。

拨打/接听电话或发送/接收数据时，尽量避免持握天线所处的手机下部。这可能影响通话质量。

11. 屏幕冻结时

如果手机对用户输入无响应或者屏幕冻结：

按住**电源/锁定键** 12 秒可关机。然后，再次按住**电源/锁定键** 3 秒以重新开机。

12. 不要在 PC 开机/关机时连接手机

确保打开或关闭 PC 时断开手机与 PC 的连接，否则可能造成 PC 错误。

您的手机

要将手机开机，请按住电源/锁定键 3 秒。

要将手机关机，请按住电源/锁定键 3 秒，然后点按**关机**和**确定**以确认。

正面图

听筒

前置相机镜头

- 用于自拍。

快速键

- 电话键 
- 联系人键 
- 信息键 
- 应用程序键 

菜单/搜索键 

- 为当前屏幕显示可用选项。
- 点触并按住以激活搜索功能。

主屏键 

- 从任何屏幕返回到主屏。

电源/锁定键 

- 按住该键可打开或关闭手机。
- 打开然后关闭屏幕，并锁定屏幕。

近程传感器

- 能感知对其他事物的接近（如通话时您的头），这样您就不会意外激活不需要的功能。

返回键 

- 返回上一个屏幕。
- 关闭弹出菜单和对话框。


警告

在手机上放置重物或坐在手机上可能会损坏手机的 LCD 屏幕及触摸屏的功能。不要在 LCD 的近程传感器上使用保护膜。这可能会影响传感器的感应度。


提示

- 当您打开应用程序以检查可用选项时，请点触菜单键 。
- 如果手机在使用时出错或无法开机，请取出电池、重新装入并在 5 秒后开机。

侧面视图

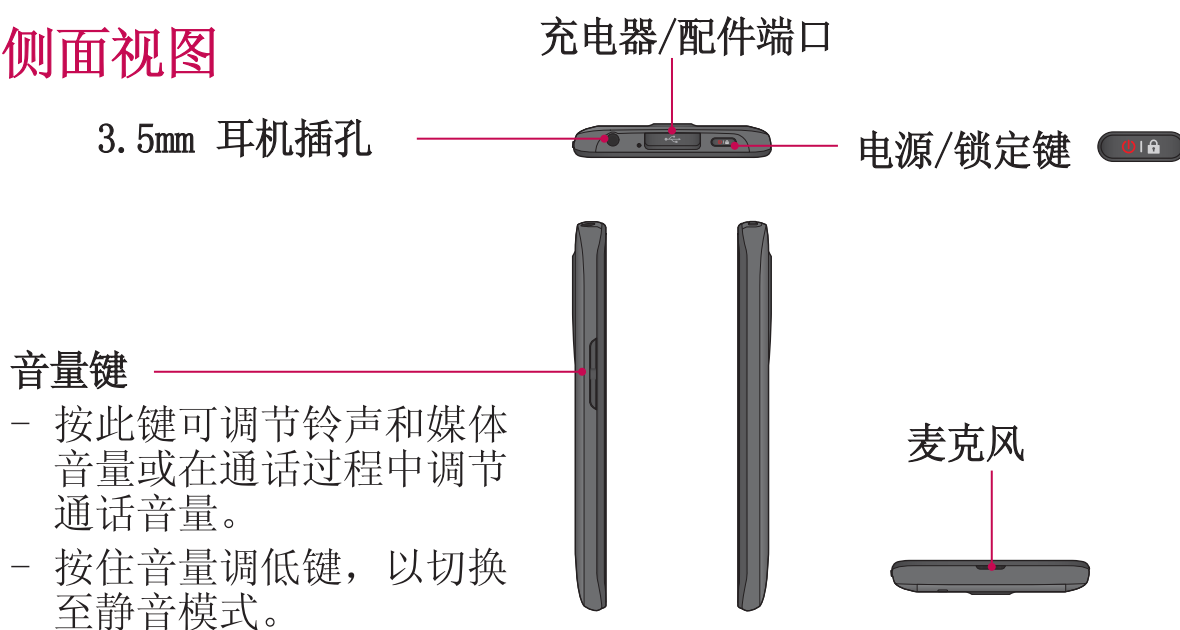

背视图

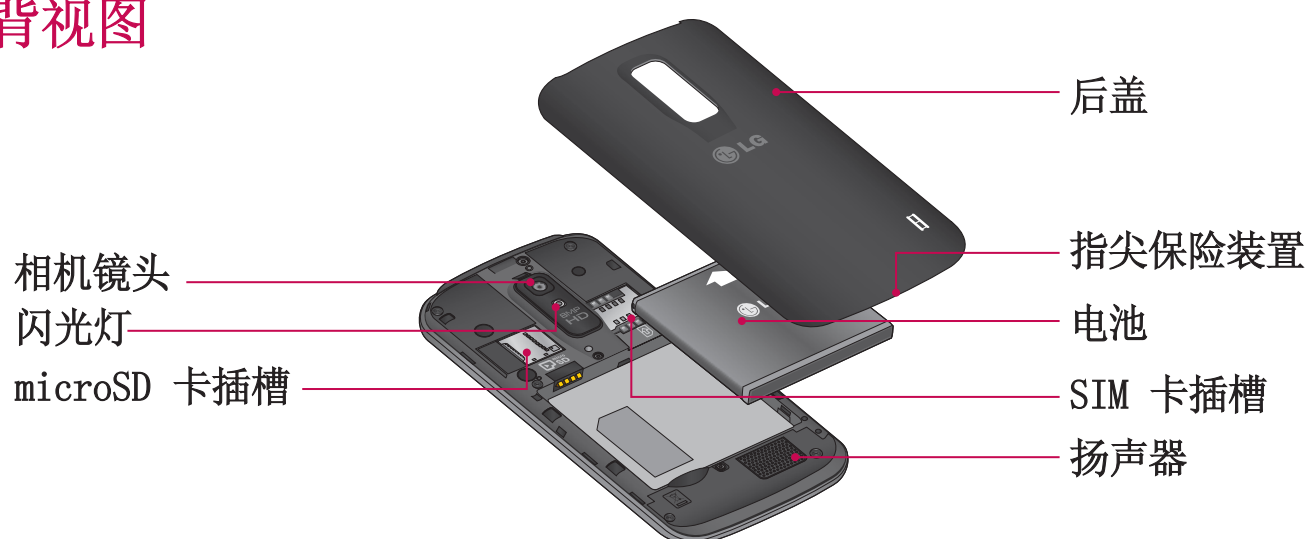

使用入门


安装 SIM 卡和电池

在开始浏览新手机之前，您需要先进行设置。要插入 SIM 卡和电池，请


- 1 用手抓紧手机。在后盖底部的指尖开孔盖处，另一只手抬起后盖，以将其取下。



- 2 将 SIM 卡滑进 SIM 卡插槽中。确保卡的金色接触区域面朝下。

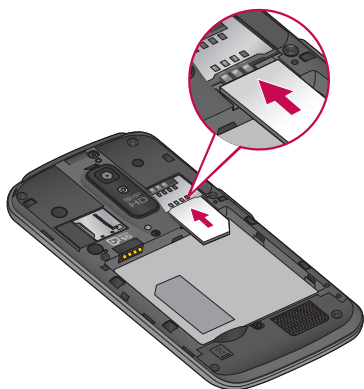

- 3 对齐手机和电池上的金色接触区域以插入电池。

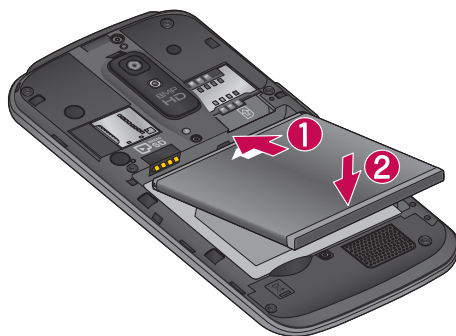

- 4 盖上手机的后盖（如下所示）。向下均匀施力，直至电池盖卡入到位。



充电

- 1 连接无线墙上适配器和 USB 数据线。
- 2 将 USB 数据线（如下所示）插入手机的充电器/配件端口。确保 USB 符号面朝上。



备注

第一次充电时必须为电池完全充电，这样可以延长电池使用寿命。

备注

您的手机具有内置天线。请注意不要刮伤或损坏此背面区域，否则会导致性能受损。如果因电池放完电而导致手机关机，这种电池即为电量不足的电池。在此情况下，当手机连接充电器（TA 或 USB）数据线时，手机底部的键盘 LED 将开始闪烁。由于手机设计成可提供合理保护算法，以防电池受损，因此这是低电量电池的正常操作。几分钟之后，LCD 即正常打开。

插入 microSD 卡

插入 microSD™ 卡，以使用相机和其他多媒体功能。多媒体内容可保存在 microSD 卡中。LG-P936 预安装了 microSD 卡。

备注



此设备支持最高 32GB microSD 卡。

使用入门

- 1 在插入或取出存储卡之前，请关闭手机。取下后盖。



- 2 然后将 microSD 卡插入插槽。确保金色接触区域面朝下。

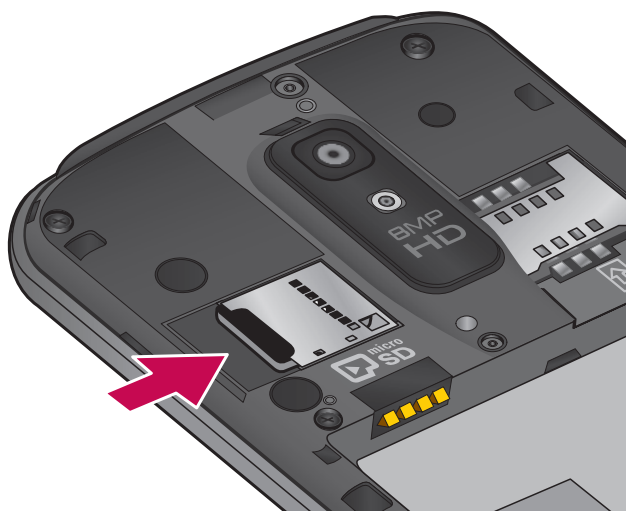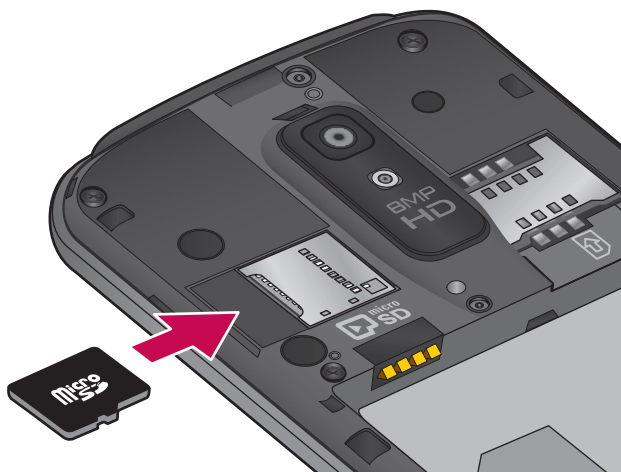

取出 microSD 卡

要安全地从手机中取出 microSD 卡，首先需要卸载此卡。

备注

在 Android OS 2.3 和以上版本中，可从 Play 商店下载应用程序并保存在 microSD 卡和手机上。由于有此功能，如果跳过卸载过程，那么 microSD 卡和手机之间的信息不能准确相符，将导致错误。在最糟的情形下，microSD 卡可能损坏。

- 1 从主屏轻触**菜单键** , 然后轻触**设置 > SD 卡和手机存储器 > 卸载 SD 卡**。
- 2 取下电池后盖, 从插槽向外轻推 microSD 卡。
- 2 轻触**清除 SD 卡**和**清除 SD 卡按钮**。
- 3 如果设置了解锁图案, 将其输入并轻触**清除全部内容**。存储卡完成格式化, 现在, 您可以使用了。

警告

尚未卸载 microSD 卡之前, 请勿取出该卡。否则, 可能损坏 microSD 卡以及手机, 并且 microSD 卡上存储的数据也可能会损坏。

备注

如果存储卡中有内容, 由于格式化后将删除所有文件, 因此文件夹的结构会有所不同。

格式化 microSD 卡

您的 microSD 卡已格式化。如果没有, 您必须先对其进行格式化才能使用。

备注

格式化 microSD 卡时, 卡上的所有文件将被删除。

- 1 从主屏轻触**菜单键** , 然后轻触**设置 > SD 卡和手机存储器 > 卸载 SD 卡**。

在应用程序之间切换和退出应用程序

Android 可轻松地运行多任务, 因为即使您打开另一应用程序, 当前打开的应用程序也会保持运行状态。打开其他应用程序之前, 无需退出当前应用程序。使用多个打开的应用程序, 并在这些应用程序之间切换。Android 管理各个应用程序、根据需要停止和启动应用程序, 从而确保闲置应用程序不会不必要地耗费资源。

使用入门

在应用程序之间切换

- 点触并按住**主页键** 。屏幕将显示最近使用的应用程序列表。然后轻触要访问的应用程序。

停止/退出应用程序

- 1 从主屏轻触**菜单键** , 然后轻触**设置 > 应用程序 > 管理应用程序**。
- 2 轻触所需应用程序, 然后轻触**强制停止退出**。

MHL

MHL（移动高清链接）是一种将手机和其他便携式消费电子设备连接至高清电视和显示器的移动音频/视频接口标准。MHL 标准特点是单根数据线的接口具有 5 个引脚, 最多能支持 1080p 的高清视频和数字音频。当手机屏幕上显示视频播放器或图像查看器时, 您可以通过电视/显示器查看图像和视频文件。

备注

当设备连接至启用 MHL 的高清电视时, 该数据线将同时给设备充电和输出媒体。如果连接至高清电视时不启用 MHL, 该数据线将不会给连接的设备充电, 除非使用了 MHL-HDMI 适配器。

主屏

触摸屏提示

通过手指点触，可以访问可用的应用程序、选择菜单和访问手机中保存的数据。以下术语用于描述使用触摸屏可执行的各种操作：

轻触 - 手指轻触一下，选择项目、链接、屏上键盘的快捷方式和字母。

点触并按住 - 点触并按住项目，方法是点触并按住屏幕上的某个项目，不要抬起手指，直到动作发生。例如，要打开一个联系人的可用选项，在联系人列表中点触并按住联系人，直至打开上下文菜单。

拖动 - 点触项目并短暂按住，不要抬起手指，在屏幕上移动手指，直至达到目标位置。在主屏上，可拖动项目进行重新定位。

滑动 - 滑动的方法是手指点触屏幕后不要停顿（因而避免拖动项目），在屏幕表面迅速移动。例如，将屏幕向上或向下滑动可滚动浏览列表，或从左向右滑动浏览不同的主屏（反之亦然）。

轻触两次 - 轻触两次可缩放网页或地图。例如，快速轻触两次网页的局部，以调整局部适应屏幕的宽度。在使用相机拍照和使用地图

时，也可轻触两次以放大和缩小。

双指缩放 - 使用浏览器、地图或浏览图片时，将食指和拇指并拢或张开，即可放大或缩小。

旋转屏幕 - 可通过多个应用程序和菜单将屏幕的方向调整为设备的实际方向。

备注

- 要选择项目，请轻触图标中心位置。
- 无需大力按，触摸屏非常敏感，仅需点触即可。
- 使用指尖轻触所需选项。请小心不要触碰到其他键或图标。

近程传感器

接听及拨打电话时，若手机位于耳旁，一旦感应到物体，此传感器将自动关闭背景灯并锁定轻触式键盘。这样有助于延长电池寿命，并避免键盘在通话期间无意激活。

主屏

锁定手机

不使用 LG-P936 时，按**电源/锁定键**  可锁定手机。这有助于防止意外按键和节省电池电量。

此外，如果一段时间不使用手机，在停用 30 秒之后，主屏或正在查看的其他屏幕将自动替换为锁定屏幕，以节省电池电量，并防止意外拨号。

要唤醒手机，请按**电源/锁定键** 。锁定屏幕将会显示。请向上滑动锁定屏幕，最后所用的屏幕将会打开。

备注

- 自动屏幕待机时间可在“设置”中手动配置。
- 如果在锁定手机时有任何程序在运行，则它们仍可在锁定模式中运行。建议在进入锁定模式前退出所有程序以避免不必要的费用（例如，打电话、Web 访问和数据通信）。

设置解锁图案：

您可以通过连接四个或更多个点来绘制自己的解锁图样。

要将手机解锁，请在屏幕上绘制您设置的图案。

警告

如果绘制图案连续 5 次出错，您需要等待 30 秒重试。

快速切换到静音模式

要将手机快速设置为静音模式，请按住**音量调低键**，直至在状态栏看到 .

主页

向左或向右轻轻滑动手指，便可查看不同面板。

也可使用快捷方式和文件夹自定义每一面板。还可使用小工具自定义每一面板，这些小工具是“喜爱的应用程序”的快捷方式。

备注

在主屏上，您可以查看屏幕底部的快速键。通过快速键，您点触一次即可轻松进入经常使用的功能。

自定义主屏

通过添加快速访问元素，如快捷方式、小工具、文件夹，或更改墙纸，以自定义主屏。

- **小工具：**在主屏添加动态更新的小工具，在不必完全打开应用程序的情况下，允许快速访问该应用程序。
- **快捷方式：**在主屏添加应用程序、网页书签、联系人、电子邮件和音乐播放列表的快捷方式。
- **文件夹：**添加文件夹，以整理联系人和快捷方式。
- **墙纸：**更改主屏的墙纸。

要在主屏添加小工具、快捷方式和文件夹：

- 1 从左向右滑动主屏（反之亦然），选择要添加项目的位置（主屏面板）。

- 2 轻触**菜单键**  > **添加**，或点触并按住主屏的空白部分。
- 3 轻触要在屏幕上添加的项目类型：**小工具、快捷方式、文件夹或墙纸**。
- 4 轻触可用的小工具、快捷方式或文件夹。
- 5 您会在主屏上看到一个新图标。要将其放置到其他位置，请将其拖动到所需面板上的位置，然后在屏幕上松开手指。

提示

要在主屏添加预加载的应用程序或从 Play 商店 下载的应用程序，在“应用程序屏幕”中点触并按住所需图标，以添加到主屏。

备注

如果在特定主屏面板中没有可用空白，则无法使用**添加**功能；在添加另一项目之前，必须先删除一个项目。在此情况下，您可以选择切换到另一主屏面板。

主屏



要从主屏面板删除应用程序图标，点触并按住要删除的快捷方式图标，拖动至屏幕底部的 。无法删除预加载应用程序。（只可以从屏幕上删除其图标）。

返回到最近使用的应用程序

- 1 点触并按住主屏键 。屏幕将显示您最近使用的应用程序图标。
- 2 轻触图标以打开应用程序，或轻触返回键  以返回当前应用程序。

通知面板

状态栏的通知图标报告收到新信息、日历事件、闹钟以及正在进行的事件，例如在通话时。您可查看最近所有通知的列表。通知面板在屏幕顶部运行。

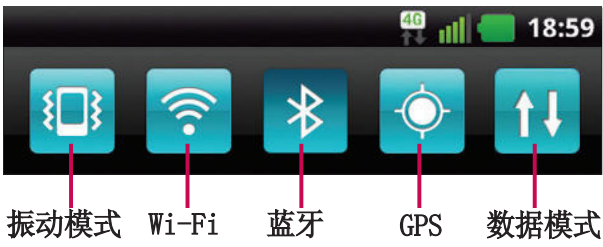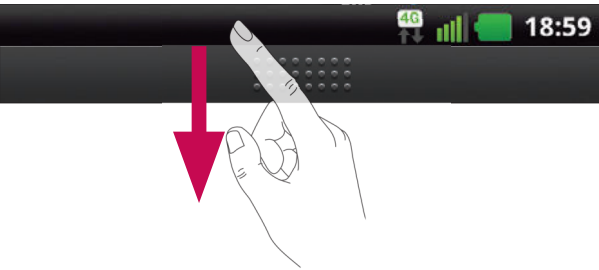

点触并按住状态栏，用手指向下滑动。或者，从主屏轻触菜单键  > 通知。在此，您可以查看并快速打开和关闭静音（振动）模式、Wi-Fi、蓝牙、GPS 和数据模式。

查看状态栏

状态栏使用不同的按钮显示手机信息，例如信号强度、新信息、电池使用寿命以及活动的蓝牙和数据连接。下表说明了您可能在状态栏中看到的不同图标的涵义。

[状态栏]



图标	说明
	未插入 SIM 卡
	无可用网络信号

图标	说明
	已打开飞行模式
	已连接到 Wi-Fi 网络
	已连接有线耳机
	正在通话
	通话正在保持
	扬声器开启
	手机麦克风静音
	未接来电
	蓝牙开启
	已连接到蓝牙设备
	已设置闹钟
	收到新语音邮件
	铃声静音
	已打开振动模式
	电池已充满电
	电池正在充电

图标	说明
	手机已通过 USB 数据线与 PC 连接
	正在下载数据
	正在上传数据
	GPS 打开
	正在从 GPS 接收位置数据
	屏幕手机已连接
	还有 3 个通知未显示
	正在同步数据
	下载完成
	收到新电子邮件
	收到新 Gmail
	收到新 Google Talk 信息
	收到新文本/多媒体信息
	正在播放歌曲
	近期事件

主屏

图标	说明
	USB 绑定已激活
	便携式 Wi-Fi 热点已激活
	USB 绑定和便携式 Wi-Fi 热点均已激活
	数据传进和传出

屏上键盘

您可以使用屏上键盘输入文本。在您需要输入文本时，屏上键盘会自动显示在屏幕上。要手动显示键盘，只需轻触要输入文本的文本字段。


有两种可以使用的键盘类型：FreeWriter 键盘和 LG 键盘。

要选择键盘：

- 1 轻触菜单键  > 设置 > 语言和键盘 > “输入法”。
- 或 -
点触并按住文本输入字段，并轻触输入法。
- 2 在 FreeWriter 键盘和 LG 键盘之

间选择所需键盘。

FreeWriter - 书写网格模式

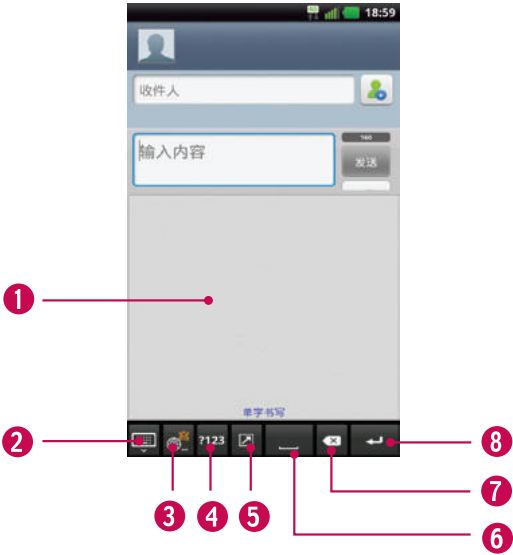

- ① **手写区域** - 在手写区域写字符。识别的结果将插入光标位置。
- ② **设置/输入法菜单** - 轻触  以关闭 FreeWriter，或轻触并按住此图标以打开 FreeWriter 设置和输入法。
- ③ **在 FreeWriter 输入法之间切换** - 轻触  以在 English 键盘、Zhuyin 键盘、Pinyin 键盘、Cangjie 键盘和简体 Cangjie 键盘之间切换。
- ④ **数字和符号** - 轻触  以打开数字和符号键盘。

- ⑤ **全屏模式** - 轻触  文本字段，然后轻触此按钮以切换到全屏模式。
- ⑥ **空格键** - 轻触  以输入空格。
- ⑦ **删除键** - 轻触  以删除光标左侧的字符。
- ⑧ **确认键** - 轻触  以将光标移至下一行。

FreeWriter - 屏上键盘



- ① **Shift 键** - 轻触一次以使键入的下一字母变为大写字母。轻触并按住此键以全部变成大写字母。
- ② **设置/输入法菜单** - 轻触  以关闭 FreeWriter，或轻触并

按住此图标以打开 FreeWriter 设置和输入法。

- ③ **在 FreeWriter 输入法之间切换** - 轻触  以在 English 键盘、Zhuyin 键盘、Pinyin 键盘、Cangjie 键盘和简体 Cangjie 键盘之间切换。
- ④ **数字和符号** - 轻触  以打开数字和符号键盘。
- ⑤ **语音转文本键** - 轻触  以使用语音输入功能。
备注：使用语音输入功能需要网络连接。
- ⑥ **空格键** - 轻触  以输入空格。
- ⑦ **删除键** - 轻触  以删除光标左侧的字符。
- ⑧ **确认键** - 轻触  以将光标移至下一行。

主屏

LG 键盘 - QWERTY - 字母输入



- ❶ **Shift 键** - 轻触一次以使键入的下一字母变为大写字母。轻触两次表示全部为大写字母。
- ❷ **数字和符号/设置键** - 轻触以将输入更改为数字和符号输入。点触并按住以设置各种 LG 键盘设置。
- ❸ **删除键** - 轻触以删除光标左侧的字符。
- ❹ **隐藏键盘键** - 轻触以隐藏键盘。
- ❺ **确认键** - 轻触以将光标移至下一行。

LG 键盘 - QWERTY - 数字和符号输入



- ❶ **Alt 键** - 轻触以输入其他符号。键盘将更改为替换字符。
- ❷ **字母/设置键** - 轻触以将输入更改为字母输入。点触并按住以设置各种 LG 键盘设置。
- ❸ **空格键** - 轻触以输入空格。
- ❹ **删除键** - 轻触以删除光标左侧的字符。
- ❺ **隐藏键盘键** - 轻触以隐藏键盘。
- ❻ **下一个键** - 轻触以将光标移至下一字段。

LG 键盘 - 手机键盘

要在 LG 键盘上切换至手机键盘，请点触并按住 。轻触 **LG 键盘设置 > 键盘布局**，然后点触**手机键盘**。手机键盘允许通过轻触标示有所需字母的按键来输入字母，与传统的 12 键手机输入法类似。要键入所需字母或数字，可能最多要轻触按键四次。



- ❶ **Shift 键** - 轻触一次以使键入的下一字母变为大写字母。轻触两次表示全部为大写字母。
- ❷ **空格键** - 轻触以输入空格。
- ❸ **删除键** - 轻触以删除光标左侧的字符。
- ❹ **数字和符号/设置键** - 轻触以将输入更改为数字和符号输入。

点触并按住以设置各种 LG 键盘设置。

❺ 确认键

- 轻触以将光标移至下一行。

❻ 隐藏键盘键

- 轻触以隐藏键盘。

❼ T9 键

- 轻触以打开 T9 输入模式。

输入文本

 **Shift 键** - 轻触一次以使键入的下一字母变为大写字母。轻触两次表示全部为大写字母。按钮上不同颜色的圆圈分别指示：大写锁定开启  或仅对一个字符开启 。

 **数字和符号/设置键** - 轻触以更改为 123 模式和输入数字及符号。点触并按住以设置各种 LG 键盘设置。

 **确认键** - 输入文本时添加另外一行。

 **隐藏键盘键** - 在屏幕上移除键盘。

 **删除键** - 删除任何已输入的文本。

主屏

要输入空格，请轻触 。

123 模式

使用此模式，您可以更快速地在文本信息中输入数字（例如电话号码）。点触与所需数字对应的按键，然后通过轻触  键，手动切换回适当的文本输入模式。

输入带注音的字母

当选择法语作为文本输入语言时，您可以输入特殊的法语字符（如“á”）。

从手机键盘

在相应的字母字符消失后，请重复按相同的按键，直至看到所需特殊字符。

从 Qwerty 键盘

要输入音调，按住“a”键。
带音调的字符出现后，轻触该字符以将其输入。

Google 帐户设置

当第一次在手机上打开 Google 应用程序时，需要使用现有的 Google 帐户登录。如果您没有 Google 帐户，则会提示您创建一个帐户。

创建 Google 帐户

- 1 从主屏轻触**应用程序键** 。
- 2 轻触 **Gmail** > **下一步** > **创建**以开始 Gmail™ 设置向导。
- 3 轻触文本字段以打开键盘，输入您的姓名和 Google 帐户的用户名。当完成输入文本时，可轻触键盘上的**下一步**移动到下一文本字段。
- 4 当完成输入姓名和用户名时，轻触**下一步**。您的手机将会与 Google 服务器通信，检查用户名的可用性。
- 5 输入并重新输入您的密码。然后按照说明输入有关帐户的必需和可选信息。服务器正在创建您的帐户，请稍候。

登录 Google 帐户

- 1 输入您的电子邮件地址和密码，然后轻触**登录**。
- 2 登录后，您可在手机上使用 Gmail™ 收发邮件和利用 Google 服务。
- 3 一旦设置了 Google 帐户，您的手机将自动与网络上的 Google 帐户同步。（取决于您的同步设置。）

登录后，手机将同步 Google 服务，如 Gmail™、联系人、Google Calendar 和 Picasa 相册。也可使用 Google Maps™ 从 Play 商店™ 下载应用程序，在 Google 服务器备份您的设置，及在手机上利用其他 Google 服务。

Google 帐户设置

重要

- 诸如日历等一些应用程序只适用于您添加的第一个 Google 帐户。如果您计划手机使用不止一个 Google 帐户，请确保登录到您想先使用此类应用程序的帐户。登录后，您的联系人、Gmail 消息、日历事件和来自网络上这些应用程序和服务的其它信息将与您的手机同步。如果在安装期间未登录 Google 帐户，则在首次启动需要 Google 帐户的应用程序（如 Gmail 或 Play 商店™）时会提示您登录或创建一个 Google 帐户。
- 如果您拥有公司或其他组织的企业帐户，则 IT 部门可能具有关于如何登录该帐户的特殊说明。

连接到网络和设备

Wi-Fi

要在手机上使用 Wi-Fi，您可以访问无线接入点或“热点”。一些接入点已打开，您只需连接即可。其他接入点处于隐藏状态或实施其他安全功能，因此您必须配置手机以便进行连接。

打开 Wi-Fi

从主屏中打开通知面板，轻触  以打开 Wi-Fi。

或者

轻触**菜单键** ，然后轻触**设置** > **无线和网络** > **Wi-Fi** .

连接 Wi-Fi 网络

禁用不使用的 Wi-Fi，以延长电池使用寿命。

- 1 从主屏轻触**菜单键** ，然后轻触**设置** > **无线和网络** > **Wi-Fi 设置**。
- 2 轻触 **Wi-Fi** 将其打开，开始扫描可用的 Wi-Fi 网络。
 - 将显示可用的 Wi-Fi 网络列表。锁图标表示受到安全保护的网路。
- 3 轻触某个网络进行连接。
 - 如果网络已打开，您会收到提

示，要求您轻触**连接**确认连接到该网络。

- 如果网络受到安全保护，您会收到提示，要求输入密码或其他凭据。（请咨询网络管理员获取详细信息）。

- 4 屏幕顶端的状态栏将显示一个图标，指示 Wi-Fi 的状态。

提示

如果您不在 Wi-Fi 网络范围内，使用网络连接可能产生额外的数据费用。

连接到网络和设备

备注

该设备支持 WEP、WPA/WPA2-PSK、WPA PSK、WPA2 Only PSK 和 802.1x EAP。（有些 EAP 方法不受支持。）如果您的 Wi-Fi 服务提供商或网络管理员为网络安全设置了加密，请在弹出窗口中输入密钥。如果未设置加密，不会显示此弹出窗口。您可以从您的 Wi-Fi 服务提供商或网络管理员处获得密钥。

蓝牙

使用蓝牙

- 1 在**无线和网络**屏幕，轻触**蓝牙**以打开蓝牙设置。
- 2 轻触**蓝牙设置** > **扫描设备**。
- 3 轻触要与之配对的设备，然后轻触**配对**进行配对和连接。

提示

有关配对模式和通行码（通常为 0 0 0 0 - 四个零）的信息，请参阅蓝牙设备附带的文档。

如何通过蓝牙从手机发送数据

与普通手机不同，您可以通过不从蓝牙菜单运行对应的应用程序，通过蓝牙发送数据。

- * **发送图片：**打开“图片库”应用程序，轻触一张图片。然后依次轻触**菜单** > **共享** > **蓝牙**。检查是否已打开蓝牙，并轻触**扫描设备**。然后从列表中轻触您要向其发送数据的设备。
- * **导出联系人：**打开“联系人”应用程序。轻触要共享的联系人，轻触**菜单键**  然后轻触**共享** > **蓝牙**。检查是否已打开蓝牙，并轻触**扫描设备**。然后从列表中轻触您要向其发送数据的设备。

- * **发送多个选定联系人：**打开“联系人”应用程序。要选择多个联系人，请点触**菜单键** ，然后点触**共享**。轻触要发送的联系人，或轻触**全选**。然后轻触**共享 > 蓝牙**。检查是否已打开蓝牙，并轻触**扫描设备**。然后从列表中轻触您要向其发送数据的设备。
- * **连接到 FTP（仅在此手机上支持 FTP 服务器）：**从主屏轻触“菜单键” ，然后轻触“设置”>“无线和网络”>“蓝牙设置”。请确保蓝牙已打开。轻触“可检测性”进行勾选，使手机对其他蓝牙设备可见。然后搜索其他设备。查找所需服务，并连接到 FTP 服务器。

提示

支持的蓝牙版本为 Bluetooth 3.0，并且已通过 Bluetooth SIG 认证。它与其他 Bluetooth SIG 认证设备兼容。

- 如果要从其他设备搜索此手机，从主屏轻触**菜单键** ，然后轻触**设置 > 无线和网络 > 蓝牙设置**。请确保蓝牙已打开。轻触“可检测性”进行勾选，使手机对其他蓝牙设备可见 120 秒。
- 支持的情景模式是 HFP/HSP、A2DP、AVRCP、OPP、FTP（服务器）和 PBAP。

数据绑定

激活数据绑定，使用 USB 数据线将手机连接到计算机，用手机可为计算机提供数据连接。

通过 USB 数据线将手机绑定到电脑

- 1** 使用 USB 数据线，将手机连接到电脑。
- 2** 您将看到 USB 连接模式弹出窗口，轻触“USB 绑定”及“确定”来确认，然后轻触“USB 绑定”。

连接到网络和设备

3 此时将出现一个蓝色的勾选标记，指示已激活此功能。

备注

- 数据绑定需要合适的 DataPro 数据计划。绑定连接的设备使用 DataPro 计划包含的数据。计划并非无限制，如果超出了所包含的数据限额，可能导致高额收费。根据连接的设备数目及其他因素，性能可能有所不同。
- 当使用 USB 绑定时，无法访问手机的 microSD 卡。
- 从主屏轻触**菜单键** ，然后轻触**设置 > 无线和网络 > 绑定与便携式热点 > USB 绑定**。

移动热点

您还可使用智能手机为最多 8 台其他设备提供移动宽带连接。创建热点，共享连接。

要创建便携式热点，轻触**菜单键**  **> 设置 > 无线和网络 > 绑定与便携式热点 > 便携式 Wi-Fi 热点**。首次使用时请设置密码。

备注

移动热点需要适当的 DataPro 数据计划。连接至移动热点的设备使用 DataPro 计划包含的数据。计划并非无限制，如果超出了所包含的数据限额，可能导致高额收费。根据连接的设备数目及其他因素，性能可能有所不同。如果不使用密码，他人将可以使用您的移动热点连接。

Wi-Fi Direct

了解如何使用 WLAN Direct 功能，通过无需接入点的 WLAN 连接两台设备。

将您的设备与另一 WLAN 设备相连

- 1 设置 > 无线和网络设置 > Wi-Fi Direct 设置 > Wi-Fi Direct
- 2 按菜单 > 扫描。
- 3 选择设备，然后选择**连接**。当其他设备的所有者接受连接时，配对即完成。
- 4 要停用 WLAN Direct 功能，请选择**断开 Wi-Fi Direct**。

Wi-Fi 共享

您可与连接到相同 Wi-Fi、Wi-Fi Directed 或便携式热点网络的用户共享音乐、图片和视频内容。

提前检查您的网络设置，并确保用户连接到相同的网络。

发送数据

- 1 应用程序键  > Wi-Fi 共享
- 2 添加要共享的文件。
- 3 在屏幕的顶端，您可以看到与手机连接的所有设备。

选择需要共享的设备，然后点触 。当对方设备接收请求后，即开始发送文件。

通过菜单键可使用更多功能。

接收数据

收到提示时，请选择**确定**以确认您愿意接收来自该设备的数据。

智能共享

SmartShare 使用 DLNA（数字生活网络联盟）技术，通过无线网络共享数字内容。

要支持此功能，双方设备都必须经过 DLNA 认证。

打开 SmartShare 并允许共享内容

- 1 轻触应用程序键  > SmartShare。
- 2 轻触菜单键  > 设置。
- 3 轻触可检测性复选框以打开。
 - 轻触**始终接收请求**，自动接受来自其他设备的请求。
 - 轻触**接收文件**，自动允许从其他设备上传文件到我的手机。
- 4 在“共享内容”部分，轻触您希望共享的每一种类型内容。从图

连接到网络和设备

片、视频和音乐中进行选择。

- 5 SmartShare 目前已激活，可以开始共享内容。

要从远程内容库向其他设备共享内容

允许您的图像生成设备（如 TV）播放来自远程内容库（如 PC）的多媒体内容

备注

请确保已正确配置您的设备（如 TV 和 PC）的 DLNA 功能。

- 1 轻触**应用程序键**  > SmartShare。
- 2 轻触右上角的按钮，或从图像生成设备列表中选择所需设备。
- 3 轻触左上角的按钮，选择远程内容库中的设备。
- 4 您可以浏览远程内容库。
- 5 轻触内容缩略图，或轻触**菜单键**  然后轻触**播放按钮**。

共享手机或图像生成设备（如电视）中的内容

备注

请确保已正确配置您的图像生成设备。

- 1 使用**我的文档**应用程序浏览您的图片或视频时，请点触并按住以选择文件。随后，您可以选择要共享的多个文件。
- 2 轻触**共享** > SmartShare。
SmartShare 将自动启动以共享选定文件。
- 3 从图像生成设备列表中选择设备以播放文件。

备注

遵循类似步骤使用音乐播放器、相机和视频播放器来共享内容。

注意

要使用此应用程序，请检查您的设备已通过 Wi-Fi 连接到主网络。部分启用了 DLNA 的设备（如 TV）仅支持 DLNA 的 DMP 功能，将不会显示在图像生成设备列表中。您的设备可能无法播放某些内容。

从远程内容库下载内容

- 1 轻触**应用程序键**  > SmartShare。
- 2 轻触左上角的按钮，选择远程内容库中的设备。
- 3 您可以浏览远程内容库。
- 4 轻触内容缩略图，然后轻触**下载菜单键**。

注意

有几种类型的内容不受支持。

从手机上传内容到远程内容库

备注

确保 SD 卡已正确安装，并且选中了设置菜单中的**接收文件**。

- 1 轻触**应用程序键**  > SmartShare。
- 2 轻触左上角的按钮，然后选择**我的手机**。
- 3 您可以浏览远程内容库。
- 4 轻触并按住内容缩略图，然后轻触**上传菜单键**。
- 5 选择要上传的远程内容库的设置。

注意

有些已启用 DLNA 的设备不支持 DMS 上传功能，将不会上传。有几种类型的内容不受支持。

通话

拨打电话

- 1 轻触  以打开键盘。
- 2 在键盘上输入号码。要删除一个数字，请轻触清除按钮 。
- 3 轻触**通话**图标  以拨打电话。
- 4 要结束通话，请轻触**结束**图标 。

提示

要输入“+”以拨打国际电话，请点触并按住 。

呼叫联系人

- 1 轻触  以打开联系人。
- 2 滚动浏览联系人列表，或轻触**搜索**框并输入要呼叫的联系人的第一个字母。
- 3 在显示的列表中，轻触要呼叫的联系人。
- 4 在“联系人信息”屏幕中，轻触要呼叫的电话号码。

接听和拒绝电话

屏幕锁定时

当手机响铃时，将**接听**图标  拖到右侧。

将**拒绝**图标  拖到左侧以拒接来电。如果要向主叫方发送信息，请将“借口信息”栏向上拖动。如果主叫未知，则借口信息栏不可用。

屏幕解锁时

手机响铃时，轻触**接听**图标 。轻触**拒绝**图标  可以拒接来电。

如果要向主叫方发送信息，请向上轻触“借口信息”栏。如果主叫未知，则**借口信息**栏不可用。

调节通话音量

要在通话期间调节通话音量，请使用手机左侧的音量调高和调低键。

拨打第二个电话

- 1 在第一次通话过程中，轻触**菜单键**  并选择 。或轻触**拨号盘**图标 。然后输入要呼叫的号码。
- 2 拨号或在电话本中搜索。
- 3 轻触**通话**图标  以连接通话。
- 4 此时呼叫屏幕上将显示两个呼叫。初始呼叫被锁定，通话方进入保持状态。
- 5 在屏幕上轻触联系人，以在呼叫间切换，或轻触  以合并通话。
- 6 要结束当前通话，请轻触**结束**。如果无当前通话，将结束保持的通话。

备注

您需要对每通电话付费。

查看通话记录

从主屏轻触**通话**图标  和**通话记录**选项卡。

查看所有拨电、已接来电和未接语音电话的完整列表。

提示

轻触任意单个通话记录条目，以查看通话日期、时间和时长。

提示

轻触**菜单键** ，然后轻触**全部删除**以删除所有记录项目。

通话设置

您可以配置通话设置（例如呼叫转移）以及运营商提供的其他特殊功能。

- 1 从主屏轻触**菜单键** ，然后轻触**设置**。
- 2 轻触**通话**设置。

联系人

您可以在手机上添加联系人，并将其与 Google 帐户或其他支持同步联系人的帐户中的联系人同步。

搜索联系人

- 1 从主屏轻触应用程序键 ，然后轻触  以打开联系人。
- 2 轻触**搜索**字段，使用键盘输入联系人姓名。

添加新联系人

- 1 轻触 ，输入新联系人的号码。轻触**菜单**键 ，然后依次轻触**添加到联系人**和**创建新联系人**。
- 2 如果您要为新联系人添加图片，请点触 。从**拍照**或**我的文档**中选择。
- 3 轻触  以选择联系人类型。
- 4 轻触联系人信息类别，并输入有关联系人的详细信息。
- 5 轻触**保存**以保存联系人条目。

常用联系人

您可以按收藏夹归类经常呼叫的联系人。

将联系人添加到收藏夹

- 1 从主屏轻触应用程序键 ，然后轻触  以打开联系人。
- 2 轻触联系人以查看其详细信息。
- 3 轻触联系人姓名右侧的星号。星号变为金色，联系人已添加到收藏夹。

从收藏夹列表中删除联系人

- 1 从主屏轻触应用程序键 ，然后轻触  以打开联系人。
- 2 轻触**群组**选项卡，然后轻触**收藏夹**。
- 3 轻触联系人以查看其详细信息。
- 4 轻触联系人姓名右侧的金色星号。星号变为灰色，联系人已从收藏夹中删除。

信息/电子邮件

信息

您的手机将短信和彩信结合到一个直观易用的菜单中。

线程框

与另一方交换的信息（短信和彩信）将按时间顺序显示，以便您查看对话概述。

发送信息

- 1 轻触主屏上的  图标，然后轻触**新建信息**，以创建新的信息。
- 2 在**收件人**字段中输入联系人姓名或电话号码。随着您输入联系人姓名，匹配的联系人将会显示。您可以轻触建议的收件人。您还可添加多个联系人。

备注

您将按每个收件人每条文本信息付费。

- 3 轻触文本字段，开始输入信息。
- 4 轻触**菜单键**  以打开“选项”菜单。从**呼叫**、**附加**、**放弃**、**添加主题**、**插入表情**以及**更多内容**（**模板**、**所有信息**、**键盘设置**）中选择。

- 5 轻触**发送**以发送信息。

- 6 信息屏幕将会打开，信息显示在收件人姓名/号码后。屏幕上会显示回复。当您查看并发送附加信息时，将创建信息会话。

警告

160 个字符的限制在不同国家/地区有所不同，具体取决于短信编码方式和短信使用的语言。

警告

如果在短信中添加图像、视频或音频文件，则短信将自动转换为彩信，您需要支付相应费用。

备注

在通话期间收到短信时，手机将发出通知声音。

使用笑脸

使用笑脸让您的信息更具趣味性。写新信息时，轻触**菜单键** ，然后轻触**插入表情符号**。

信息/电子邮件

更改信息设置

您的手机已预定义信息设置，因此，您可以立即发送信息。您可以根据喜好更改设置。

► 从主屏轻触  > 菜单键  > 设置。

电子邮件

您可以使用电子邮件应用程序读取 Gmail 以外其它提供商的电子邮件。电子邮件应用程序支持下列账户类型：POP3、IMAP 和 Microsoft Exchange ActiveSync（用于企业用户）。

打开电子邮件应用程序

► 从主屏轻触应用程序键  > 电子邮件。

首次打开电子邮件应用程序时，将打开一个设置向导，以帮助您添加电子邮件帐户。

Microsoft Exchange 电子邮件帐户

电子邮件地址 - 输入帐户电子邮件地址。

用户名 - 输入帐户用户名。

密码 - 输入帐户密码。

域 - 输入帐户域（可选）

服务器地址 - 输入服务器地址

使用 SSL - 选择是否要为 Microsoft Exchange 使用 SSL。

其他（POP3、IMAP）电子邮件帐户

电子邮件地址 - 输入帐户电子邮件地址。

密码 - 输入帐户密码。此时将出现设置完成页面，您需要输入“名称”。此时，帐户将出现在您的“电子邮件”文件夹列表中。

POP3 / IMAP4 - 选择协议类型，POP3 或 IMAP4。

接收服务器 - 输入接收邮件服务器的地址。

安全类型 - TLS/SSL/关。

端口号 - 通常会显示每个帐户的默认编码。

发送服务器 - 输入发出邮件服务器的地址。

SMTP 安全连接 - TLS/SSL/关。

端口号 - 通常显示每个帐户的默认编码。

轻触**下一步**按钮以连接服务器。此时将出现**设置完成**页面。您需要输入帐户显示的“名称”以及“我的名称”。然后，轻触**完成**。此时，帐户将出现在您的“电子邮件”文件夹列表中。

帐户屏幕

帐户屏幕列出了您的**合并的收件箱**以及您的每个电子邮件帐户。

► 轻触**应用程序键**  > **电子邮件**。此时将出现帐户列表。

提示

要创建帐户收件箱的快捷方式：

在帐户列表中，点触并按住一个电子邮件帐户。然后轻触**添加到主屏**。

您可以轻触帐户以查看其**收件箱**。您用于发送电子邮件的默认帐户将以勾选符号表示。

要打开您合并的收件箱

如果您已将电子邮件配置为从多个帐户收发电子邮件，则可以在全并

的收件箱中查看发送到您所有帐户的所有邮件。

► 轻触**电子邮件** > **合并的收件箱**（在**帐户**屏幕中）。

合并的收件箱中的信息将按帐户在左侧以不同颜色区分，每个帐户所用的颜色与您在**帐户**屏幕中所用的颜色完全一样。

当新电子邮件到达收件箱时，会发出声音或振动通知。点触电子邮件通知后，通知消失。

撰写和发送电子邮件

- 1 在**电子邮件**应用程序中，轻触**撰写**。
- 2 输入邮件目标收件人的地址。输入文字时，匹配的地址从您的联系人中提供。
- 3 轻触**抄送/密件抄送**字段，以便抄送或密件抄送给其他联系人/电子邮件地址。
- 4 输入邮件的正文。
- 5 轻触**附加**以附加想要在邮件中发送的文件。
- 6 轻触**发送**。

如果您尚未准备好发送邮件，轻触**保存**将其保存在**草稿箱**文件夹中。

信息/电子邮件

在**草稿箱**文件夹中点触邮件以继续编辑邮件。如果在发送前点触了**返回**键，邮件也会被另存为草稿。

轻触**取消**以舍弃或删除邮件，包括任何已保存的草稿。如果未连接至网络，例如正在飞行模式下工作，所发送的邮件将存储到**发件箱**文件夹中，直到重新连接至网络为止。如果包括任何未发送的邮件，**发件箱**就会显示在**帐户**屏幕上。

备注

使用 Exchange 帐户发送的邮件将不会保存在手机上，这些邮件将保存在 Exchange 服务器上。如果要查看**已发送**文件夹中（或带**已发送**标签）的已发送邮件，可能需要打开**已发送**文件夹/标签并从“选项”菜单选择**刷新**。

使用帐户文件夹

每个帐户都包括**收件箱**、**发件箱**、**已发送**、**草稿箱**、**垃圾箱**和**垃圾邮件文件夹**。取决于您帐户的服务提供商支持的功能，您可能具有其他文件夹。

添加或编辑电子邮件帐户

添加电子邮件帐户

1 轻触**应用程序键**  > **电子邮件**。

2 选择 **MS Exchange** 或其他。

如果已设置电子邮件帐户，则不会自动启动向导。

在此情形下，轻触**菜单键**  > **添加帐户**。

更改帐户设置

1 打开**帐户**屏幕。

2 轻触**菜单键**  > **设置**。

删除电子邮件帐户

1 打开**帐户**屏幕。

2 点触并按住您要删除的帐户。

3 轻触打开菜单中的**删除帐户**，然后轻触对话框中的**删除**以确认删除。

社交网络

通过手机，您可以体验社交网络并管理联机社区中的微型博客。您可以更新您的当前状态，上载照片，并查看朋友的实时状态更新。您可以将您的 Facebook、Twitter 和 Myspace 帐户添加到手机。如果没有帐户，您可以访问其站点设置帐户。

备注

备连接并使用在线服务时可能要花费额外的费用。查看网络提供商要求的数据付费。

在手机中添加帐户

- 1 在主屏中轻触菜单键  > 设置 > 帐户与同步。
- 2 轻触添加帐户。
- 3 轻触您要使用的任何社交网络服务。
- 4 输入为社交网络帐户设置的电子邮件地址和密码，然后轻触登录。

在主屏中添加社交网络小工具

如果在主屏上添加社交网络小工具，当手机从网络接收更新时，小工具将显示您的状态。您也可以通过轻触小工具来直接访问社区。

- 1 点触并按住主屏上的空位。

注： 如果在特定主屏面板上没有可用的空间，您无法添加任何小工具；必须先删除一项，才能添加另一项。在此情况下，您可以选择切换到另一主屏面板。

- 2 当出现多个小工具时，在小工具间滚动并轻触社交+ .

查看和更新状态

- 1 转至“社交+”小工具所在的主屏面板。您可看到您设置的社交应用程序的当前状态。
- 2 您可选择希望查看的每一社交应用程序。轻触 .
- 3 轻触“您现在在做什么？”字段，以评论或上传图片来更新您的状态。
 - 检查您希望更新的所有社交应用程序。这些程序将同时全部更新。

社交网络

- 4 输入评论和附件（如果有）后，轻触发布。

提示

您可只在社交网络网站中使用好友的信息或将所有数据同步到联系人。

同步手机上的帐户

您可将社交网络帐户的信息与联系人和手机中的其他功能进行同步（如果适用）。

- 1 在主屏中轻触**菜单键**  > **设置** > **帐户与同步**。选择要同步的帐户，输入所需信息。
- 2 检查**背景数据**和**自动同步**。
- 3 轻触要同步的帐户。
- 4 检查同步选项，如**同步联系人**。
“”表示已启用同步。

在手机上删除帐户

- 1 在主屏中轻触**菜单键**  > **设置** > **帐户与同步**。
- 2 轻触要删除的帐户，然后轻触**删除帐户**（两次）。

相机

要打开相机应用程序，请轻触**应用程序键**  > **相机** .

了解取景器

亮度 - 此选项定义并控制进入镜头的光量。

沿滚动条滑动亮度指示器，“-”对应亮度更低的图像，“+”对应亮度更高的图像。

缩放 - 放大或缩小。或者，您可以使用音量键。

相机切换 - 允许您在前置相机镜头与后置相机镜头之间切换。



视频模式 - 向下滑动此图标可切换到视频模式。

拍照 - 允许您拍照。

图片库 - 这使您可以在相机模式下访问保存的照片和视频。只需轻触，您的图片库就会出现在屏幕上。

设置 - 轻触此图标可以打开设置菜单。请参阅第 52 页的**使用高级设置**。

闪光灯 - 您可以在黑暗处拍照时打开闪光灯。

备注

您可以关闭所有快捷键选项，使取景器屏幕看起来干净利落。只需轻触一下屏幕中心。要调用选项，请再次轻触屏幕。

相机

拍照

- 1 在主屏中轻触**相机**。
- 2 水平拿稳手机，将镜头对准您要拍摄的物体。
- 3 点触并轻按拍摄按钮，取景器屏幕的中间会出现一个对焦框。
- 4 调整手机位置，以便您能看到物体处于对焦框中。
- 5 对焦框变绿时，表示相机已对好焦。
- 6 松开拍摄按钮

备注

由于相机自身限制，当尝试在室内拍照时，可能会遇到阴影问题。（阴影的含义是中心与边缘位置的细微色差。）

拍照后

如果自动查看设为“开”，拍摄的照片将显示在屏幕上。

共享

轻触以通过各种方法如**蓝牙**或**信息**共享图片。

备注

漫游时如果发送了彩信，可能会额外收费。

设为

轻触以将图像用作**联系人图标**或**墙纸**。

重命名

轻触以编辑选定图片的名称。



轻触可以删除图像。



轻触可以立即拍摄其它照片。 将保存您的当前照片。



轻触可查看已保存照片的图片库。

使用高级设置

从取景器中轻触  以打开高级选项。

滚动列表，您可以更改相机设置。选择选项后，轻触**返回键** 。

对焦 - 轻触选择对焦模式。

- **自动**：允许相机自动对焦。
- **人脸跟踪**：相机自动检测并在人脸上对焦。

图像大小 - 轻触可设置拍摄照片的尺寸（以像素为单位）。从以下选项中选择像素值：8M(3264X2448)

、W6M(3264X1836)、5M(2560X1920)、3M(2048X1536)、W3M(2304X1296)、1M(1280X960) 和 W1M(1536X864)

场景模式 - 选择适合当前环境的颜色和灯设置。

- **正常**：根据环境自动调整。
- **肖像**：适合拍摄人像。
- **风景**：适合拍摄自然风景，如树、花和天空。
- **运动**：适合拍摄运动场景。
- **日落**：适合拍摄日落景色。
- **夜间**：适合拍摄夜间景色。较慢的快慢速度用于检测夜间风景。

ISO - 的控制相机对光的感光性。从自动、400、200 和 100 中选择。

白平衡 - 从以下选项中选择：自动、白炽灯、日光、荧光灯和阴天。

色彩效果 - 选择新照片的色彩效果。

定时器 - 自拍器允许您设置按下

拍摄按钮后的延迟。选择关闭、3 秒、5 秒 或 10 秒。如果要为自己拍摄照片，此功能是理想之选。

拍摄模式 - 从以下选项选择：标准、连拍和全景拍摄。

快门声音 - 从四种快门声音中选择一种。

自动查看 - 如果将自动查看设置为“开启”，它将自动向您显示刚刚拍摄的照片。

标签位置 - 激活以使用手机基于位置的服务。拍照并添加所在位置以对其进行标记。如果将标记过的图片上传到支持相片定位功能的博客，您可以在地图上看到此照片。

备注

该功能使用无线网络。您需要勾选“使用无线网络”。

在主屏上轻触**菜单键**  > **设置** > **位置和安全** > **使用无线网络**。

相机

-  - 恢复所有相机默认设置。
-  - 无论您何时想要了解功能如何操作，均可轻触该选项。该选项为您提供快速指南。

备注

- 退出相机时，部分设置将返回默认值。拍摄下一张照片之前，请先检查相机设置。
- 设置菜单层叠在取景器之上，因此，当您更改图像颜色或质量时，您将在设置菜单下预览到图像更改效果。

查看保存的照片

您可以在相机模式下访问保存的照片。只需轻触“图片库”按钮



然后将显示图片库。

提示

向左或向右轻弹以查看其他照片或视频。

-  以幻灯片 - 轻触以查看幻灯片。
-  菜单 - 轻触访问以下选项：

共享以各种方法共享图片，如蓝牙或信息。

删除 - 删除图片。

更多 - 可访问选项如详细信息、设为、裁切、向左旋转和向右旋转。

将照片设为墙纸

- 1 轻触您要设为墙纸的照片两次，以打开它。
- 2 轻触屏幕，以打开选项菜单。
- 3 轻触菜单 > 更多 > 设为 > 墙纸。
- 4 根据需要裁切图像，然后轻触保存。

摄像机

了解取景器

亮度 - 此选项定义并控制进入镜头的光量。沿滚动条滑动亮度指示器，滑向“-”表示降低视频亮度，滑向“+”表示提高视频亮度。

缩放 - 放大或缩小。或者，您可以使用音量键。

相机切换 - 允许您在前置相机镜头与后置相机镜头之间切换。



相机模式 - 向上滑动此图标以切换到相机模式。

开始录制 - 允许您开始录制。

图片库 - 这使您可以在摄像机模式下访问保存的照片和视频。只需轻触，您的图片库就会出现在屏幕上。

设置 - 轻触此图标可以打开设置菜单。请参阅第 56 页的**使用高级设置**。

闪光灯 - 允许您在黑暗处录制视频时可打开闪光灯。

摄像机

录制视频

- 1 从主屏中轻触**相机**，滑动相机模式按钮，更改为视频模式。图标将更改为 .
- 2 屏幕上将显示摄像机的取景器。
- 3 水平放置相机，将镜头对准要拍摄的物体。
- 4 轻触一次录制图标  以开始录制。
- 5 REC 将显示在取景器底部，计时器将显示视频长度。
- 6 轻触屏幕上的停止图标  以停止录制。

录制视频后

屏幕上将显示所拍摄视频的静态图像。

播放

轻触以播放视频。

共享

轻触以通过各种方法如**蓝牙**或**信息**共享图片。

备注

漫游时如果下载了彩信，可能会额外收费。

重命名

轻触以编辑选定视频的名称。



轻触以删除刚刚录制的视频。轻触“确定”进行确认。此时将出现取景器。



轻触以立即录制另一段视频。将保存您的当前视频。



轻触可查看已保存视频的图片库。

使用高级设置

从取景器中点触  以打开高级选项。

滚动列表以调节摄像机设置。选择选项后，轻触**返回键** 。

视频大小 - 轻触以设置录制视频的大小（以像素为单位）。选择视频大小：Full HD(1920X1088)、HD(1280X720)、TV(720X480)、VGA(640X480)、QVGA(320X240)（彩信）和 QCIF(176X144)（彩信）。

白平衡 - 白平衡确保视频中的任何白色区域显示真实。要正确调整相机的白平衡，您需要确定光照条件。从自动、白炽灯、日光、荧光灯或阴天中选择。

色彩效果 - 选择用于新视频的色调。

录音 - 选择**静音**以录制视频而不录制声音。

自动查看 - 如果打开了自动查看，相机将自动播放您刚刚录制的视频。

 - 恢复所有摄像机默认设置。

 - 无论您何时想要了解功能如何操作，均可轻触该选项。该选项为您提供快速指南。

观看保存的视频

1 在取景器中，轻触 。

2 屏幕上将显示您的图片库。

3 轻触视频，可自动播放。

观看视频时调节音量

要在播放视频时调节音量，请使用手机左侧的音量键。

多媒体

您可以将多媒体文件保存在 microSD 卡中，以便轻松访问所有图像和视频文件。

图片库

轻触应用程序键  > 图片库。

视图模式

打开图片库时，图片将显示在文件夹视图中。一旦打开文件夹后，图片将显示在网格视图中。如果在网格视图中轻触照片，图片将以完整视图显示。

日历视图

在“文件夹”视图中，轻触  更改为“日历”视图。此时将打开日历，您将看到当天拍摄的照片。

时间线视图

手机的图片库提供了照片和视频的时间线视图。在网格视图模式，向右拖动 。此时将显示您拍摄照片的日期，其中从最新的照片开始。如果选择特定日期，在该日拍摄的所有照片将组织在一起。

图片库菜单选项

轻触照片，并轻触菜单键  以查看以下可用选项：共享、删除和更多。轻触“更多详情”以访问详细信息、设为、裁切、旋转和向右/向左。

发送照片

- 1 要发送照片，点触并按住所需照片。
- 2 轻触共享并选择任意可用应用程序。
- 3 当选择电子邮件、Gmail 或信息时，照片将附加到邮件中，您可以照常撰写和发送邮件。

提示

如果您的手机上设置了社交网络帐户，那么可与社交网络社区共享照片。

发送视频

- 1 要发送视频，点触并按住所需视频。
- 2 轻触共享并选择任意可用应用程序。

- 3 当选择电子邮件、Gmail 或信息时，视频将附加到邮件中，您可以照常撰写和发送邮件。

使用图像

选择要用作墙纸或用来识别呼叫者的图像。

- 1 点触并按住照片，然后轻触**更多** > **设为**。
- 2 从**联系人图标**或**墙纸**中选择。

观看幻灯片

要观看照片的幻灯片，请打开图片库并轻触一张照片。照片显示后，轻触屏幕以查看菜单。轻触**幻灯片**开始播放全部照片的幻灯片。

查看照片详细信息

您可以查看照片的详细信息，如名称、日期、时间、大小和类型。

当查看照片时，轻触**菜单** > **更多** > **详细信息**。

使用 USB 大容量存储设备传输文件

使用 USB 设备传输文件：

- 1 使用 USB 数据线将手机连接到 PC。
- 2 您将看到 USB 连接模式弹出窗口。（在主屏中轻触**菜单键**  然后轻触**设置** > **连接设置** > **USB 连接模式** > **大容量存储**。）
- 3 轻触**大容量存储**，并轻触**确定**确认。
- 4 您可以在 PC 中查看手机内容，并传输文件。

备注

如果您不想看到 USB 连接模式弹出窗口，请在 USB 连接模式弹出窗口中取消选择“不再询问”，或关闭“始终询问”（**设置** > **连接设置** > **始终询问**）。

多媒体

音乐

手机中有音乐播放器，您可以播放所有喜爱的曲目。要在主屏上访问音乐播放器，请轻触应用程序键  然后轻触音乐。

如何将音乐/视频文件保存到手机

使用 USB 数据线将手机连接到 PC。

您将收到通知，告知您 USB 已连接。您将看到 USB 连接模式弹出窗口。轻触“大容量储存”和“确定”。然后在计算机上打开希望查看的文件夹。

将音乐或视频文件从 PC 保存到手机的可移动存储设备。

- 您可以使用读卡器将文件从 PC 复制或移动到手机的可移动存储设备。
- 如果有视频文件和子标题文件（与视频文件具有相同名称的 .smi 文件），请将它们放在同一文件夹中以便在播放视频文件时自动显示子标题。
- 下载音乐或视频文件时，必须保护版权。 请注意损坏的文件

或带有错误扩展名的文件可能损坏手机。

如何将在手机上播放音乐/视频文件

播放音乐/视频文件

在图片库中找到您要播放的文件，轻触文件以播放。

播放歌曲

- 1 在主屏中轻触应用程序键 ，然后轻触音乐。
- 2 轻触歌曲选项卡。
- 3 轻触您要播放的歌曲。
- 4 轻触  暂停歌曲。
- 5 轻触  跳到下一首歌曲。
- 6 轻触  以返回到歌曲的开头。
轻触  两次以返回到上一首歌曲。

要在聆听音乐时更改音量，请按手机左侧的音量调高和音量调低键。要显示歌曲的选项，点触并按住列表中的任一首歌曲。 可看到以下选项：播放、添加到播放列表、用作手机铃声、删除、共享、搜索和详细信息。

使用播放列表

您可以创建播放列表来将音乐文件组织成歌曲集，以便按设置的顺序或随机顺序播放歌曲。

创建播放列表

- 1 在查看库中的歌曲列表时，点触并按住要添加到新播放列表的第一首歌曲。
- 2 轻触**添加到播放列表**。
- 3 轻触**新建播放列表**。
- 4 输入播放列表的名称，然后轻触**保存**。

新播放列表将添加到**播放列表库**中。

通过按**菜单键** ，然后轻触**添加到播放列表**或轻触**另存为播放列表**以将正在播放的专辑中的所有歌曲保存为播放列表，还可将正在“播放”屏幕中播放的歌曲添加为播放列表的第一首歌曲。

要在播放列表中删除歌曲

- 1 打开播放列表。
- 2 点触并按住您要删除的歌曲，然后轻触**从播放列表删除**，或当查看当前正在播放的播放列表时，轻触**菜单键** ，然后轻触**从播放列表**

删除，以从当前播放列表中删除所有歌曲。

要重命名播放列表或删除播放列表

- 1 打开**播放列表库**。
- 2 点触并按住播放列表以显示菜单，然后轻触**删除**或**重命名**。

备注

音乐文件的版权可能受国际条约和国家版权法保护。因此，可能需要获得许可或许可证才能复制音乐。在某些国家，国际法禁止私人复制版权所有的材料。在下载或复制文件之前，请检查相应国家关于使用此类材料的国家立法。

Google 应用程序

关于 Google 应用程序

Google 应用程序（包括 Gmail 移动版本、Google Talk、Google Calendar 和 Google Maps）已加载到您的手机中。

- 1 首先设置 Google 帐户。然后输入用户名和密码进行登录。
- 2 登录后，您的 Google 帐户中的联系人、电子邮件和日历将与手机自动同步。

Google Maps™

要打开 Google Maps 查看位置

- 1 在主屏中轻触应用程序键 ，然后轻触地图。
- 2 轻触地图中我的位置图标 。

地图以一个蓝色的点为中心，这个点表示您的位置。圆点周围的蓝色圆圈表示您的实际位置处在此圆圈以内。

要获得位置的地址和其他信息

- ▶ 点触并按住地图上的位置。在地址上方将打开一个带有地址和街道视图（如果有）缩略图的气球。
- ▶ 轻触气球，以访问更多选项。

要查看地图、卫星或交通层

- ▶ 轻触地图上的层图标 ，选择层的选项。您可以选择“交通”、“卫星”、“地面”、“维度”或“更多层”。

搜索位置和地方

您可在地图上搜索和查看一个位置。也可在正在查看的地图上搜索地方。

搜索位置

- 1 在查看地图时，轻触屏幕顶端的搜索字段。您也可以轻触菜单键  然后轻触搜索。
- 2 在搜索框中输入要查找的地方。可以输入地址、城市或企业或机构的类型。例如，“纽约的电影院”。
- 3 轻触“搜索”图标。
带有字母标示的标记表示地图上的搜索匹配项。

备注

如果关闭 GPS 和 Wi-Fi，位置信息可能不准确。请确保已打开 GPS 和 Wi-Fi。

获得方向指示

要获得方向指示

- 1 在查看地图时，轻触**菜单键**  然后轻触**方向**。
- 2 在第一个文本框中输入起点，在第二个文本框中输入终点。
要反转方向，轻触**菜单键**  然后轻触**反转开始点和结束点**。
- 3 轻触汽车、公共交通或步行方向的图标。
- 4 轻触**获得方向指示**。 去往目的地的指示出现在列表中。

查看列表中分段显示的方向指示

您可以将路线看做书面指示列表，以查看每一段指示。

查看指示列表时，轻触**导航图标**  以便在导航视图中查看分段指示。

要搜索路线中的位置

您可以搜索路线中的企业、兴趣点和其他特征。 在导航搜索时，结果包含了路线沿路的位置，而不是您当前位置附近的位置。

- 轻触**搜索键**，搜索感兴趣的位置。

这些结果显示为沿路的标记；第一个结果加了标签。 轻触标签，可了解关于标记的更多信息。

- 完成后，轻触**导航图标**  返回导航视图。

My Places

My Places 为您最喜欢的地方加了书签，如地址或本地企业，以便以后能够迅速找到。

查看 My Places

在查看地图时，轻触**菜单键**  然后轻触 **My Places**。

清除地图

从地图上清除任何信息，如路线和搜索结果。

要清除地图

在查看地图时，轻触**菜单键**  然后轻触**清除地图**。

纬度

使用 Google Latitude™ 寻找朋友

Google Latitude 可让您和您的朋友在地图上查看彼此的位置，并使用 Google Latitude 获得您的朋

Google 应用程序

友位置的方向指示。您的位置不会自动被分享。只有通过邀请才可分享。

您必须加入纬度，然后邀请朋友查看您的位置，或者接受朋友的邀请。

加入纬度

► 当查看地图时，轻触**菜单键**  然后轻触**加入纬度**。

首次加入纬度时，系统将提示您接受或拒绝 Google 隐私政策。

加入纬度后，“加入纬度”选项更改为**纬度**。

打开纬度

加入纬度后，您可以打开它，寻找您的朋友，查看他们的更新。

► 当查看地图时，轻触**菜单键**  然后轻触**纬度**。

邀请朋友共享他们的位置

加入纬度后，您可以开始与朋友共享您的位置。只有您明确邀请或接受的朋友才可看到您的位置。

- 1 打开纬度，轻触**菜单键**  然后轻触**添加好友**。
- 2 在打开的菜单中轻触**从联系人中选择**或**通过电子邮件地址添加**。
- 3 在屏幕底部轻触**添加好友**。如果

您的朋友已经使用纬度，他们将收到电子邮件请求和纬度的通知。如果他们还未加入纬度，他们将收到一封电子邮件，邀请他们使用 Google 帐户登录纬度。

地方

查找地方

在 Google 地图中轻触**地方**图标 ，查找不同的地点，如加油站、咖啡屋、酒吧、餐馆等等。

选择一个类别后，您可看到最接近匹配的列表，包含距离、方位、说明，甚至用户评论。您可自定义自己的位置搜索类别，甚至可将“地方”图标添加到主屏上。

提示

查看地图时，轻触**菜单键**  > **更多**有以下选项：**Labs**、**缓存设置**、**帮助**、**条款**、**隐私**和**注意和关于**。

Play 商店™

Play 商店™ 让您可浏览和下载数千个有趣而实用的应用程序和游戏。您可查看其他用户对应用程序的评价或者发布自己的评价。如果安装了来自 Play 商店™ 的应用程序和游戏，它们将出现在手机菜单中预加载应用程序的下方，用手指向下滚动可以找到。轻触菜单  > 我的应用程序，可打开从 Play 商店 下载的应用程序。

要下载应用程序和游戏

- 1 在 Play 商店 主页，轻触靠近屏幕顶端的类别。
- 2 滚动查看子类别，轻触您要了解的子类别。
- 3 轻触一个应用程序以打开其详细信息屏幕，或通过轻触“付费应用程序排行”、“免费应用程序排行”、“最畅销应用程序排行”、“最新付费应用程序排行”、“最新免费应用程序排行”、“趋势分析”进一步选择子类别。
- 4 轻触您要安装的应用程序。系统将显示该应用程序的说明和价格。
- 5 轻触屏幕右上方用于付费应用程序的**价格**按钮。对于免费应用程序，轻触**免费**按钮。然后将下载和安装该应用程序。

序，轻触**免费**按钮。然后将下载和安装该应用程序。

备注

要购买付费应用程序，您需要使用 Google Checkout™ 设置付款方法。您可选择使用信用卡，或通过运营商帐单支付。

备注

当您要退出游戏或应用程序时，请使用“主屏键”或“返回键”，以返回主屏。或在游戏或应用程序中选择“菜单”（或“选项”），然后选择“退出”。（根据不同的游戏/应用程序，“退出”选项可能有所不同）。结束继续在后台运行的应用程序（返回主屏之后），将有助于维护电池寿命，减少不必要的数据使用。

Google 应用程序

Gmail™

在首次设置手机时对 Gmail™ 进行配置。根据您的同步设置，Gmail™ 将通过手机自动与 Gmail™ 网络帐户同步。Gmail™ 默认视图为收件箱对话列表。

轻触**菜单键** ，然后轻触**刷新**，发送或接收新的电子邮件，并将电子邮件同步到 Gmail™ 网络帐户。轻触**菜单键**  有以下其他选项：**撰写**、**帐户**、**转到标签**、**搜索**和**更多**。

轻触**菜单键**  然后轻触 **帐户** > **添加帐户**以添加其他 Gmail 帐户。在帐户内的任何屏幕轻触**菜单键**  > **更多** > **设置**，还可更改设置。

Google Talk™

Google Talk™ 是 Google 的即时消息程序。通过 Google Talk™，您可以与同时也在使用它的其他人交谈。

轻触**菜单键**  有以下可用选项。

所有好友  - 显示所有可以通信的朋友。

添加好友  - 发送聊天邀请。

搜索  - 搜索可聊天的联系人，或含有输入文字的聊天记录。

注销  - 从聊天中注销。如果激活**自动登录**，则在轻触主屏中的“交谈”图标时，您将自动登录。

设置  - 允许调整各种设置。

更多  - 可选择“结束所有聊天”以关闭所有当前聊天，选择“邀请”以查看您已邀请聊天的好友列表，或选择“阻止”以查看您已阻止的好友列表。

更改 Google Talk 设置

可对 Google Talk 进行配置，对聊天中收到的每条信息发出通知，同时响铃或振动手机。

还可配置在手机开机时自动登录 Google Talk，并可设置在其他人的好友列表中是否显示您的姓名旁的手机指示器。

要配置 Google Talk 新信息的通知

- 1 在好友列表中轻触**菜单键** ，然后轻触**设置**。
- 2 勾选**通知**，以便在接收新聊天信息时，在状态栏接收通知。
- 3 轻触**选择铃声**，选择响铃通知新聊天信息的铃声。
- 4 轻触**振动**，在接收新聊天信息通知时选择振动设置。

要对朋友显示或隐藏手机指示器

- 1 在好友列表中轻触**菜单键** ，然后轻触**设置**。
- 2 勾选或取消勾选**手机指示器**。
如果勾选手机指示器，当您使用 Android 手机登录 Google Talk 时，您的朋友将在其好友列表中您的姓名旁看到 AndroidTM 的轮廓。

要设置是否自动登录 Google Talk

- 1 在好友列表中轻触**菜单键** ，然后轻触**设置**。
- 2 勾选或取消勾选**自动登录**。 当选择自动登录时，当手机开机时，您即登录到 Google Talk。

要设置 Google Talk 更改当前的状态

- 1 在好友列表中轻触**菜单键** ，然后轻触**设置**。
- 2 勾选或取消勾选**自动离开状态**。
当勾选自动离开状态时，屏幕关闭时您的状态将自动更改为“离开”。

实用工具

设置闹钟

- 1 在主屏中轻触**应用程序键** ，然后轻触**闹钟**。
- 2 要添加新闹钟，轻触  选项卡（如有必要）。
- 3 轻触**新闹钟**并设置闹钟时间。
- 4 设置其他任何所需选项，然后轻触**保存**。
- 5 轻触**菜单键**  以添加另一闹钟或调整闹钟设置。

使用计算器

- 1 在主屏中轻触**应用程序键** ，然后轻触**计算器**。
- 2 轻触数字键输入数字。
- 3 对于简单的计算，请轻触所需的功能（+、-、x 或 ÷），然后轻触 =。
- 4 对于更多复杂的计算，请轻触**菜单键** ，轻触**高级面板**，然后选择选项。

将事件添加到日程表中

备注

您必须创建 Google 帐户才能使用日历。

- 1 在主屏中轻触**应用程序键** ，然后轻触**日历**。
- 2 要查看活动，请轻触日期。在此日期发生的活动显示在日历的下方。轻触该活动以查看详细信息。如果要添加活动，轻触日历右上角的 。
- 3 轻触**名称**字段，输入活动的名称。查看日期并输入所需的活动开始和结束的时间。
- 4 轻触**地点**字段，输入位置。
- 5 要为事件添加备注，请轻触**说明**字段，然后输入详细信息。
- 6 要重复活动，设置**重复**，必要时设置**提醒**。
- 7 轻触**保存**以在日历中保存事件。日历中带颜色的方框将标记所有已保存活动的日期。如果已设置，在活动开始时间，将响起闹钟。

更改日历视图

- 1 在主屏中轻触**应用程序键** ，然后轻触**日历**。
- 2 在日历的顶端，轻触**天、周、议程或月**。

Polaris Office

使用 Polaris Office 可在设备上查看、创建和编辑文档文件。加载的文件可能来源于 microSD 卡，或来源于已下载的电子邮件附件。Polaris Office 应用程序支持一下文件格式：txt、doc、docx、xls、xlsx、ppt、pptx 和 pdf。

创建一个新的文档

- 1 在主屏中轻触**应用程序键**  > **Polaris Office**。
- 2 在“用户注册”页面注册您的姓名和电子邮件地址。如果想跳过注册流程，请轻触**稍后**。
- 3 轻触**我的文件夹**，以查看 microSD 卡上的文件夹和文档。
- 4 轻触**菜单键**  > **新建文件**以打开一个新文档。
- 5 轻触文档类型。
- 6 使用屏幕底部的工具在文档中输

入内容。

- 7 当文档完成时，轻触**菜单键**  > **文件** > **保存**（或**另存为**以输入新文档名称）进行保存。
- 8 轻触**返回键**  退出。

在设备中查看和编辑文档

- 1 在主屏中轻触**应用程序键**  > **Polaris Office**。
- 2 轻触**我的文件夹**，以查看 microSD 卡上的文件夹和文档。
- 3 如果要打开的文件未在根目录内，请移至含有该文件的文件夹。轻触要查看或编辑的文档。

备注

轻触电子邮件中的附件，也可打开此附件。

- 4 文档将打开，供您查看。如果要编辑此文档，轻触**菜单键**  然后选择**编辑模式**。
- 要在文档各页间移动或扫视整个文档，请在相应方向滚动。
- 要更改缩放级别，轻触**菜单键**  > **缩放**，然后轻触需要的缩放等级，或只使用双指缩放方法来获得所需的缩放等级。

实用工具

- ▶ 使用屏幕底部的工具栏编辑文档（Word、Excel 或 PowerPoint 文件）。
- ▶ 轻触**菜单键**  可查看其他菜单选项，如回流文本、书夹、发送文件和设置
- 5 当完成编辑时，轻触保存。然后，轻触**返回键**  退出。

Polaris Office 文档工具

当创建文档时，Polaris Office 应用程序有一个自动出现的工具栏。

- 1 要在现有文档中显示工具栏，轻触**菜单键**  然后选择**编辑模式**。
- 2 轻触工具栏图标，相应的工具选项将显示在弹出的气球中，可轻触使用。
- 3 要隐藏工具选项弹出气球，请再次轻触工具栏。工具栏上向左和向右的箭头表示可以水平滚动，查看更多图标。根据不同的文档类型，工具栏中的工具有所不同。

在线管理文档

- 1 在主屏中轻触**应用程序键**  > Polaris Office。
- 2 轻触**添加帐户** > Box.net 以访问

您的在线帐户。

- 3 输入您的电子邮件帐户和密码，访问您的帐户，然后轻触**添加**。
- 4 根据需要在服务器上查看和管理您的文档。

语音控制

只需轻触语音控制图标，即可使用语音搜索及完成其他语音操作，如呼叫或给一个联系人发短信、发送电子邮件、创建备注或获得方向指示。

- 1 在主屏中轻触**应用程序键**  > **语音控制**。
- 2 请等待“**请说命令**”提示，然后请说出您的询问。
- 3 询问的搜索结果将显示在网络浏览器中。轻触您想要的结果或继续搜索。

语音备忘录

使用录音机录制录音机或其他音频文件。

录制声音或语音

- 1 在主屏中轻触**应用程序键** ，然后轻触**语音控制**。
- 2 轻触  以开始录音。
- 3 轻触  以结束录音。

备注

轻触  以访问您的录音。
您可以收听保存的录音。

发送录音

- 1 录音完成后，您可以发送音频剪辑。轻触**共享**。
- 2 在**蓝牙**、**Wi-Fi 共享**、**电子邮件**、**Gmail** 和**信息**中进行选择。
选择**电子邮件**、**Gmail** 或**信息**时，录音将添加到邮件中，您可以照常撰写和发送邮件。

应用程序管理器

您可以使用应用程序管理器管理程序。

- 1 您可以通过轻触“正在运行的应用程序”选项卡查看当前正在使用的应用程序。 占用系统资源大的应用程序的说明显示为红色。 点触停止按钮可终止应用程序。
- 2 您可以通过轻触“已安装的应用程序”选项卡查看已安装的应用程序。
- 3 您可以通过轻触“存储”选项卡查看系统内存和 SD 卡的容量。
- 4 您可以将应用程序管理器小工具放在主屏上，从而轻松查看当前正在运行的应用程序数量。

网络

浏览器

浏览器为您提供了一个涵盖游戏、音乐、新闻、体育、娱乐等更多内容的缤纷世界，您可以快速、直接地通过手机访问。

备注

连接这些服务并下载内容时，将产生额外费用。 查看网络提供商要求的数据付费。

<工具栏>

以下屏幕上的图标栏将方便您使用浏览器。

浏览器允许以和在计算机上相似的方式查看网页。

 返回 - 移至上一网页。

 向前 - 与“返回”键配合使用。在无须打开多个窗口的情况下，这些键允许在页面间返回或向前。

 窗口 - 显示所有打开的窗口。

 新建窗口 - 打开一个新的窗口。

 设置 - 转至“浏览器设置”。

使用选项

轻触菜单键  以查看以下选项：

 稍后读取 - 在“稍后读取”中添加当前网页。

 添加 RSS 源 - 添加您喜爱的网页。当网站上出现新项目时，Google 阅读器会自动通知您。

备注

RSS（简易供稿）是一种网络订阅源格式，可用于发布最近更新的内容，如博客、新闻标题或播客。RSS 文档通常被称为订阅源、网络订阅源或频道，它包含相关网站的内容摘要或完整文本。RSS 使人们可以以主动方式随时关注其感兴趣的网站，而无需手动查看。用户订阅源的方式：将订阅源的链接输入阅读器，或单击浏览器中的 RSS 图标即可开始订阅流程。阅读器将定期检查用户订阅的源以查看新内容并下载找到的任何更新。对于无法使用的 RSS 源网页，“添加 RSS 源”图标菜单将会禁用。



共享页面 - 轻触以分享网页。



在页面上查找 - 允许在当前网页中查找文本。



选择文本 - 在网页上选择文本。用手指突出显示需要的文本。将突出显示的文本复制到剪贴板上，可将其粘贴在允许输入文本的任何位置。



更多

- **主页** - 转至主页。
- **设置主页** - 将当前页面设置成主页。
- **在主页上添加快捷方式** - 将当前页面作为快捷方式添加到主屏。
- **页面信息** - 查看网页详细信息。
- **下载** - 查看下载历史记录。

提示

要返回上一个网页，请轻触**返回键** .

添加书签

1 轻触 URL 字段旁的 .

- 在**缩略图视图**中，轻触**添加**，输入名称和 URL，然后轻触**确定**。
- 在**列表视图**中，轻触**添加书签**，输入名称和 URL，然后轻触**确定**。

更改浏览器设置

轻触  并设置任何所需选项。

屏幕手机

LG 屏幕手机 2.0

屏幕手机可让您通过 USB、蓝牙或 Wi-Fi 连接从 PC 中查看手机屏幕。您也可以使用鼠标或键盘从您的 PC 控制手机。

屏幕手机图标

-  将手机连接至 PC 或断开连接。
-  旋转屏幕手机窗口（仅在应用程序支持旋转功能时可用）。
-  启动 LG 主屏全景，或更改屏幕手机首选项。
-  最大化屏幕手机窗口。
-  退出屏幕手机程序。
-  最小化屏幕手机窗口。

屏幕手机功能

- **实时传输和控制：**在连接至 PC 时显示并控制您的手机。
- **鼠标控制：**允许您使用鼠标在 PC 屏幕上单击或拖动来控制您的手机。
- **使用键盘输入文本：**允许您使用电脑键盘撰写短信或备注。
- **文件传输（手机到 PC）：**从手机发送文件（例如图片库、

视频播放器、音乐和 Polaris Office）到 PC。只需右键单击并拖动即可将文件发送到 PC。

- **文件传输（PC 到手机）：**从 PC 发送文件到手机。只需选择您要传输的文件并将其拖放到屏幕手机窗口即可。您发送的文件存储在 OSP 文件夹中。
- **LG 主屏全景：**显示 LG 主屏的整个工作区。通过双击该快捷方式，您可以轻松地组织图标或小工具，以及执行应用程序。

备注：请确保 LG 主屏是默认的启动器。某些小工具在 LG 主屏全景中可能无法正常工作。

如果在 PC 上安装屏幕手机

请访问 LG 主页 (<http://www.lg.com>) 并转至 **支持 > 手机支持 > 选择型号 (LG-P936) > 单击 OSP (屏幕手机) 进行下载**。您即可在 PC 上安装屏幕手机。

如何将手机连接至 PC

屏幕手机 2.0 提供 USB、蓝牙和 Wi-Fi 连接。请按照 OSP 程序的连接向导说明。

备注

请确保已选中**设置 > 连接 > 屏幕手机**中的“屏幕手机”复选框。

请注意，如果通过 Wi-Fi 连接屏幕手机，因为电流消耗，电池电量会消耗的更快。

通过移动热点将手机连接到 PC 并在 PC 上访问 Internet 时，根据您的 DataPro 数据计划，可能产生额外的数据费用。

使用 Wi-Fi 网络访问 Internet，根据网络的流量情况，效果可能不理想。当放大屏幕手机窗口时，屏幕上的显示可能会变慢。

断开手机与 PC 的连接

单击屏幕手机窗口左上角的 。

或者，将主屏上方的状态栏向下拖动，并选择“**已连接的屏幕手机**”>“**断开屏幕手机**”。在断开连接对话框中点触**断开连接**。

检查手机与 PC 的连接

设备一旦建立连接，请将主屏上方的状态栏向下拖动以检查屏幕手机连接状态。

设置

无线和网络

此菜单允许管理 Wi-Fi 和蓝牙连接、便携式热点和数据绑定、飞行模式和 VPN 连接。要访问此菜单，请在主屏中轻触**菜单键**  > **设置** > **无线和网络**。

飞行模式

飞行模式允许迅速关闭所有无线连接。

1 在**无线和网络**屏幕中，轻触**飞行模式**复选框，将其打开（此时将出现一个蓝色的勾选标记）。

2 再次轻触将其关闭。

或者

1 按住**电源/锁定键**  并轻触**飞行模式**。

2 按住**电源/锁定键**  并再次轻触**飞行模式**将其关闭。

Wi-Fi - 打开 Wi-Fi 以连接到可用的 Wi-Fi 网络。

WLAN 设置 - 允许您设置和管理无线接入点。设置网络通知，或添加 Wi-Fi 网络。从 Wi-Fi 设置屏幕可访问高级 Wi-Fi 设置屏幕。按菜单键然后点触**高级**。

Wi-Fi Direct 设置 - 勾选复选框，激活 Wi-Fi Direct。设置 Wi-Fi Direct 设备名称，然后扫描其他设备。

蓝牙 - 开启或关闭蓝牙无线功能。

蓝牙设置

- **设备名称**：为您的设备设置蓝牙名称。
- **可检测性**：将您的设备设置为对其他蓝牙设备可见。
- **扫描设备**：将您的设备设置为对其他蓝牙设备可见。

绑定与便携式热点 - 您可以配置绑定与便携式 Wi-Fi 热点的设置。

VPN 设置 - 显示您之前配置的虚拟专用网 (VPN) 的列表。允许您添加不同类型的 VPN。

移动网络 - 为数据漫游、网络模式和运营商、接入点名称 (APN) 等项设置选项。

通话设置

您可设置固定拨号、语音邮件和其他呼叫设置，包含 TTY 模式、助听器、拒接来电、来电显示、附加设置、发送信息、呼叫限制和通话时间。

声音

调整声音、通知默认设置和振动模式。您还可以管理声音和触觉反馈。

静音模式 - 勾选此项，使除媒体和闹钟之外的所有声音静音。

振动 - 设置是否使手机以振动进行反馈。

音量 - 调整手机的音量设置，以适合您和环境的需要。

手机铃声 - 选择来电的铃声。

通知铃声 - 选择用于通知（如接收新信息或日历活动）的铃声。

触摸提示音 - 选择在使用拨号盘时是否要听到提示音。

声音选择 - 选择在轻触按钮、图标和其他屏幕项目时是否要听到提示音。

屏幕锁定提示音 - 选择在屏幕锁定或解锁时是否要听到提示音。

触觉反馈 - 当按软键和进行某些用户界面交互时进行振动。

显示

亮度 - 调整屏幕的亮度。

自动旋转 - 设置为在旋转手机时自动切换方向。

动画 - 设置允许动画。

屏幕超时 - 设置屏幕自动关闭前的延迟时间。

显示字体 - 更改显示字体。

前置 LED 键超时 - 设置手机正面的 LED 自动关闭前的时间延迟。

屏幕优化 - 更改已下载应用程序的分辨率大小，以适应屏幕大小。

校准动作传感器 - 允许重置运动传感器的校准。

手势

移动光标 - 勾选此项，设置设备通过轻触设备的任一侧来移动光标，以便在键入内容时移动光标。

重新分配项目 - 如果您勾选此项，则您可通过按住某项和倾斜设备，将某项重新分配至其他主屏。

静音 - 勾选此项后，您可在手机响铃时将手机翻转对来电静音。

设置

暂停（停止） - 勾选此项可允许您通过将手机翻转来暂停（停止）闹钟。

上一个/下一个项目 - 勾选此项，通过轻触手机的左/右侧可显示图片库中的上一张/下一张照片。

暂停 - 勾选此项后，您可通过将手机翻转来暂停视频。

位置和安全

使用无线网络 - 如果选中使用无线网络，您的手机将使用 Wi-Fi 和移动网络确定您的大概位置。当选中此选项时，您将被询问在提供这些服务时是否允许 Google 使用您的位置。

使用 GPS 卫星 - 如果选择使用 GPS 卫星，您的手机将确定您的位置并精确到街道级别。

设置屏幕锁定 - 设置解锁图样以确保您的手机安全。打开一组屏幕，它们可指导您绘制屏幕解锁图样。您可设置 PIN 或密码，而不要使用图样或保持其值为无。

在您打开手机或唤醒屏幕时，系统将提示您画出解锁图样以解除屏幕锁定。

屏幕锁定计时器 - 在屏幕锁定启用之前设置屏幕的闲置时间。

设置 SIM 卡锁定 - 设置 SIM 卡锁定或更改 SIM PIN。

可见的密码 - 选择该选项可在您键入时显示密码，而取消选择则在您键入时隐藏密码。

选择设备管理器 - 添加或删除管理器。

使用安全凭据 - 允许您访问安全证书。

从 SD 卡安装 - 选择从 microSD 卡安装加密的证书。

设置密码 - 设置或更改凭据存储密码。

清空存储空间 - 清除所有内容的凭据存储，并且重置其密码

使用解锁图样、PIN 码或密码

设置解锁图样、PIN 码或密码以保护您的手机安全。要设置屏幕锁定，请遵循以下流程。

轻触**菜单键** ，轻触**设置** > **位置和安全** > **设置屏幕锁定**，然后在**图样、PIN 码或密码**之间选择。

警告

使用某个解锁图样、PIN 码 或密码时，采取预防措施。请务必记住您设置的屏幕解锁信息。允许您有 5 次机会输入您的屏幕解锁信息。如果您用完所有 5 次机会，您必须等待 30 秒才能再次尝试解锁手机。

在无法调用解锁图样、PIN 码或密码时：

如果您在手机上登录 Google 帐户并尝试使用图样 5 次均失败，请轻触**忘记图样？**系统将要求使用您的 Google 帐户登录并提示您创建新的解锁图样。如果未在手机上创建 Google 帐户或者忘记了 PIN 码或密码，则需要执行硬重置。

警告

如果执行硬重置，所有用户应用程序和用户数据将被删除。在执行硬重置之前，请记得备份任何重要数据。

- 1 关机。
- 2 同时按住以下按键（持续 8 秒钟）：**电源/锁定键 + 音量调低键**。
- 3 当显示出厂硬重置屏幕时，释放以上按键。
- 4 按**电源/锁定键**，确认删除所有用户数据，然后按**音量键**取消。

应用程序

未知源 - 勾选此项，以允许安装来自于网站、电子邮件或任何其他 Play 商店 以外地方的应用程序。

警告

手机可能无法正常运行，并可能会被非法用于建立您的位置，并能通过互联网访问个人信息，具体取决于您所安装的应用程序。

为保护您的手机和个人数据，请只从信任的来源（如 Play 商店）下载应用程序。

设置

管理应用程序 – 管理和删除安装的应用程序。

正在运行的服务 – 检查当前正在运行的服务。

存储空间使用情况 – 查看应用程序所用的存储空间。

电池使用情况 – 查看耗电情况。

开发 – 设置应用程序开发选项。

帐户与同步

允许您启用背景数据、自动同步和同步或添加新的帐户。

隐私

允许执行出厂数据重置。 请小心，因为这将删除您的所有数据。

SD 卡和手机存储器

允许您查看 microSD 卡的总计可用空间。 您还可取消安装 microSD 卡，以安全地进行删除或格式化。

语言和键盘

选择语言，自定义输入法和键盘设置。

语音输入与输出

设置语音识别程序设置，并使用文字转语音设置来为可以使用文字转语音的应用程序配置 Android 文字转语音合成器。

辅助功能

使用辅助功能可配置您在手机上安装的任何辅助功能插件。

备注

需要额外的插件才能变成可选。

连接设置

USB 连接模式 – 只有插入存储卡时，您的手机才可以用作大容量存储设备。 您可将大容量存储设置为 USB 连接模式的默认设置。

屏幕手机 – 轻触此项以使用屏幕手机。 请参阅第 74 页上的屏幕手机。

日期和时间

设置日期、时间、时区及日期和时间格式。

关于手机

查看法律信息，检查手机状态和软件版本，并执行软件更新。

软件更新

手机软件更新

此功能帮助您方便地从互联网将手机固件更新为最新版本，而无需访问服务中心。

有关使用此功能的详细信息，请访问：

<http://www.lg.com>

由于手机固件更新要求用户在更新过程期间保持全部注意力，因此，在继续执行操作之前，请留意每一个步骤中出现的所有说明和提示。请注意，在升级过程中移除 USB 数据线或取出电池将严重损坏您的手机。

通过空中下载（OTA）的 LG 手机软件更新

此功能允许您通过空中下载（OTA）方便地将手机的固件更新为最新版本，而无需连接 USB 数据线。仅当 LG 提供可供手机使用的固件新版本时，此功能可用。

首先，您可以在手机上检查软件版本：

轻触**菜单键**  > **设置** > **关于手机**。您可在列表底部查看软件的版本。

要执行手机软件更新，轻触**菜单键**  > **设置** > **关于手机** > **软件更新** > **现在检查更新**。

备注

LG 保留根据自行判断决定固件更新仅可用于指定型号的权利，不保证所提供的固件更新版本可供所有手机型号使用。

版权所有和商标

备注

您的个人数据（包括有关您 Google 帐户、其他任何帐户、您的系统和应用程序数据及设置、下载的任何应用程序和 DRM 许可信息）可能会在手机软件的更新过程中遗失。因此，LG 建议您在更新手机软件之前，先备份个人数据。对于任何个人数据的遗失，LG 概不负责。

备注：

打开源软件

要获取 GPL、LGPL、MPL 及其他开源证书下的相应源代码，请访问

<http://opensource.lge.com/>
可使用源代码下载所有相关许可条款、声明和通知。

DivX 移动

关于 DIVX 视频：DivX® 是由 DivX, LLC（Rovi Corporation 的子公司）开发的一种数码视频格式。本手机是播放 DivX 视频的

DivX Certified® 官方设备。有关详细信息以及要获取将文件转换为 DivX 格式的工具，请访问 divx.com。

关于 DIVX VIDEO-ON-DEMAND：要播放购买的 DivX Video-on-Demand (VOD) 电影，必须先注册此 DivX Certified® 设备。要获取您的注册码，请在设备安装目录下找到 DivX VOD 部分。转到 vod.divx.com 以获得关于如何完成注册的更多信息。

DivX Certified® 可播放高达 HD 720p 的 DivX® 视频，包括额外付费内容。

DivX®, DivX Certified® 及相关徽标是 Rovi Corporation 或其子公司的商标，使用必须经过许可。

Dolby Mobile



由 Dolby Laboratories 许可生产。Dolby 和 double-D 符号是 Dolby Laboratories 的商标。

技术参数

外部环境

最高温度：+55° C（放电），+45° C（充电）

最低温度：-10° C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20,Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band , WCDMA and LTE Terminal Equipment

Model Name

LG-P936

Trade Name

LG

CE 0168



Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.8.1 / EN 301 489-7 V 1.3.1/ EN 301 489-17 V 2.1.1 / EN 301 489-19 V 1.2.1 / EN 301 489-24 V1.5.1
EN 60950-1:2006+A11:2009
EN 50360:2001 / AC:2006 / EN62209-1:2006 / EN62209-2:2010 / EN 62311:2008 / EN 62479:2010
EN 300 328 V1.7.1
EN 301 511 V9.0.2
EN 301 908-1 V5.2.1 / EN 301 908-2 V5.2.1/EN 301 908-13 V5.2.1

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands

Name

Doo Haeng Lee/Director

Issued Date

19. Mar. 2012




Signature of representative

配件


以下配件可用于 LG-P936（下面配件可能为可选配件）。

旅行适配器

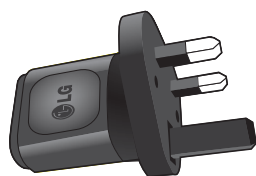

数据线

连接 LG-P936 和 PC。

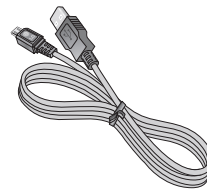


用户手册

了解更多关于 LG-P936 的信息。



立体声耳机

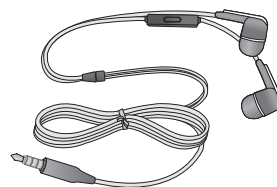

备注：

- 务必使用正品 LG 配件。 否则可能导致保修失效。
- 配件可能因地区不同而有所变化。

故障排除

本章列出了您在使用手机过程中可能遇到的一些问题。 有些问题可能需要您致电服务提供商，但大多数问题您可自行解决。

信息	可能原因	可行解决措施
SIM 卡错误	手机中没有安装 SIM 卡或 SIM 卡插入不正确。	请确保正确插入 SIM 卡。
没有网络连接/网络断开	信号弱，或者您在运营商网络范围之外。 运营商应用了新服务。	将手机移到窗边或开放的区域中。 检查网络运营商覆盖地图。 检查 SIM 卡使用时间是否超过 6~12 个月。 如果是，请前往最近的网络提供商营业厅更换 SIM 卡。请与服务提供商联系。
代码不匹配	要更改安全码，您需要在此输入以确认新代码。 两次输入的代码不匹配。	如果忘记代码，请联系您的服务提供商。
任何应用程序均无法设置	服务提供商不支持或需要注册。	请与服务提供商联系。
无法拨打电话	拨号错误。 已插入新 SIM 卡。 达到预付费上限。	新网络未获得授权。 查看新的限制。 与服务提供商联系或重新设置 PIN 2 的限制。

信息	可能原因	可行解决措施
手机无法打开	按开/关键时间过短。 电池未充电。 电池触点脏。	请按开/关键至少两秒钟。 为电池充电。 检查显示屏上的充电指示灯。 清洁电池触点。
充电错误	电池未充电。 外部温度太热或太冷。 触点问题 无电压 充电器故障 错误充电器 电池故障	为电池充电。 确保手机在正常温度下充电。 检查充电器以及到手机的连接。 检查电池触点，如果需要，请清洁。 将充电器插入其它插座。 如果充电器不发热，请替换。 请仅使用原装 LG 配件。 替换电池。
不允许输入号码	已打开固定拨号功能。	检查“设置”功能表并关闭该功能。
无法接收/发送短信和图片	内存已满	删除手机中的部分信息。
未打开的文件	不受支持的文件格式	检查支持的文件格式。
存储卡不起作用	仅支持 FAT 16、FAT32 文件格式	通过读卡器检查 SD 卡文件系统，或使用手机格式化 SD 卡。

故障排除

信息	可能原因	可行解决措施
我收到来电时，屏幕未打开。	近程传感器问题	如果使用任何保护带或保护套，请检查其是否盖住近程传感器周围的区域。确保近程传感器周围的区域干净。
无声音	振动模式	检查声音菜单的设置状态以确保您不处于振动或静音模式下。
挂机或死机	间歇性软件问题	卸下电池，将它再次插入并将手机开机。 尝试通过网站执行软件更新。
电话锁定并且未工作。	重新启动手机	1. 关机。 2. 卸下电池盖。 3. 安装电池。 4. 关闭插槽盖。 5. 重新开机。



English

LG-P936 User Guide

This guide helps you get started using your phone.

If you need more information, please visit www.lg.com.

- Some of the contents of this manual may not apply to your phone. This depends on your phone's software and your service provider.
- This handset is not recommended for the visually impaired because of its touch screen keyboard.
- Copyright ©2012 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.
- Google™, Maps™, Gmail™, YouTube™, Google Talk™ and Play Store™ are trademarks of Google, Inc.



Table of Contents

Guidelines for safe and efficient use	5	123 Mode	33
Getting to know your phone	11	Entering accented letters	33
Your Phone.....	17	Google Account Set-up	34
Getting Started	19	Creating your Google account	34
Installing the SIM card and battery ...	19	Signing into your Google account	34
Charging your phone	20	Connecting to Networks and Devices	36
Inserting a micro SD card	20	Wi-Fi	36
Removing the micro SD card	21	Bluetooth	37
Formatting the microSD card	22	Data Tethering	38
Switching between and exiting applications	23	Mobile Hotspots	39
MHL	23	Wi-Fi Direct	40
Your Home screen	24	Wi-Fi Share	40
Touch screen tips	24	Smartshare	40
Proximity sensors	25	Calls.....	43
Lock your phone	25	Making a call	43
Quick Switch to Silent Mode	25	Calling your contacts	43
Home	26	Answering and rejecting a call	43
Customizing your Home screen	26	Adjusting the in-call volume	43
Getting back to a recently used application	27	Making a second call	44
Notifications panel	27	Viewing your call logs	44
Viewing the Status bar	28	Call settings	44
On-screen Keyboard	29	Contacts.....	45
		Searching for a contact	45
		Adding a new contact	45

Favourite Contacts	45	Adjusting the volume when viewing a video	58
Messaging/Email	46	Multimedia.....	59
Messaging.....	46	Gallery	59
Email.....	47	Sending a video	59
Social Networking	50	Using an image.....	60
Adding an account to your phone	50	Viewing a slideshow	60
Adding a social networking widget on the home screen	50	View photo details.....	60
Viewing and updating your status	51	Transferring files using USB mass storage devices.....	60
Syncing accounts on your phone.....	51	Music.....	61
Removing accounts on your phone...	51	How to save music/video files to the phone	61
Camera	52	How to play music/video files on the phone	61
Getting to know the viewfinder	52	Playing a song	61
Taking a photo	53	Working with Playlists.....	62
Once you've taken the photo	53	To remove a song from a playlist.....	62
Using the advanced settings	53	To rename or delete a playlist	62
Viewing your saved photos	55	Google Applications	63
Setting a photo as wallpaper.....	55	About Google applications	63
Video Camera	56	Google Maps™	63
Getting to know the viewfinder	56	Searching For Locations and Places ..	63
Recording a video	57	Getting Directions	64
After recording a video	57	My Places	64
Using the advanced settings	57	Clear Map	64
Watching your saved videos.....	58		

Table of Contents

Latitude.....	65	Location & security	81
Places.....	65	Applications.....	83
Play Store™.....	66	Accounts & sync	83
Gmail™.....	67	Privacy	83
Google Talk™.....	67	SD card & phone storage.....	83
Utilities.....	70	Language & keyboard	83
Setting the alarm	70	Voice input & output.....	84
Using the calculator	70	Accessibility.....	84
Adding an event to your calendar	70	Connectivity settings	84
Polaris Office	71	Date & time	84
Voice Control	73	About phone	84
Voice recorder	73	Software Update.....	85
App Manager.....	73	Phone Software Update.....	85
The Web.....	74	LG Mobile Phone Software update via Over-the-Air (OTA).....	85
Browser.....	74	Copyrights and trademarks	86
Using options.....	74	DivX Mobile	86
Adding bookmarks	75	Dolby Mobile.....	86
Changing the Browser settings	75	Accessories	87
On-Screen Phone.....	76	Technical data.....	88
LG On-Screen Phone 2.0	76	Troubleshooting	89
Settings	79		
Wireless & networks	79		
Call settings.....	80		
Sound	80		
Display	80		
Gesture	81		

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information. This mobile phone model LG-P936 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to ensure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.567 W/kg (10 g) and when worn on the body is 0.872 W/kg (10 g).
- This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 1.5 cm away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the product at least 1.5 cm away from your body. In order to transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

Guidelines for safe and efficient use

Product care and maintenance



Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Repairs under warranty, at LG's discretion, may include replacement parts or boards that are either new or reconditioned, provided they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required to do so by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or

moisture.

- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.
- Do not use, touch or attempt to remove or fix broken, chipped or cracked glass. Damage to the glass display due to abuse or misuse is not covered under the warranty.
- Your phone is an electronic device that generates heat during normal operation. Extremely prolonged, direct skin contact in the absence of adequate ventilation may result in discomfort or minor burns. Therefore, use care when handling your phone during or immediately after operation.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.
- Road safety
- Check the laws and regulations on the use of mobile phones in the area when you drive.
- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.

Guidelines for safe and efficient use

- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn the handset on or off when close to your ear. We also recommend that music and call volumes are set to a reasonable level.

- When using headphones, turn the volume down if you cannot hear the people speaking near you, or if the person sitting next to you can hear what you are listening to.

NOTE: Excessive sound pressure from earphones can cause hearing loss.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorised service provider.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refuelling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It contains small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places as this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.

Guidelines for safe and efficient use

- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

Getting to know your phone

Before you start using the phone, please read this!

Please check to see if any problems you have encountered with your phone are described in this section before taking the phone in for service or calling a service representative.

1. Phone Memory

In order to make more memory available, you will have to manage your applications and delete some data, such as applications or messages.

Managing Applications

- 1 From the Home screen, tap the **Menu Key**  and tap **Settings > Applications > Manage applications**.
- 2 When the list of applications appears, scroll and tap the application you want to uninstall.
- 3 Tap **Uninstall** and then tap **OK** to confirm that you want to uninstall the desired application.

2. Optimizing Battery Life

You can extend your battery's life between charges by turning off features that you don't need to run constantly in the background. You can also monitor how applications and system resources consume battery power.

To extend the life of your battery

- Turn off radio communications that you aren't using, such as Wi-Fi, Bluetooth, or GPS.
- Lower screen brightness and set a shorter screen timeout.
- Turn off automatic syncing for Gmail™, Calendar, Contacts, and other applications.
- Some applications you have downloaded may cause your battery power to be reduced.
- While using downloaded applications, check the battery charged level.

To view the battery charge level

- 1 From the Home screen, tap the **Menu Key**  and tap **Settings > About phone > Status**.
- 2 The battery status (charging or not charging) and level are displayed on the

Getting to know your phone

top menu of the screen.

To monitor and control what uses the battery

- 1 From the Home screen, tap the **Menu Key**  and tap **Settings > About phone > Battery use**.
- 2 The top of the screen displays battery usage time. Either how long since last connected to a power source, or if connected to a power source, how long you were last running on battery power. The screen also lists applications or services using battery power from greatest amount to least.

3. Installing an Open Source Operating System

Installing an open source operating system on your phone and not using the operating system provided by the manufacturer can cause your phone to malfunction.

Warning

- If you install and use an OS other than the one provided by the manufacturer, your phone is no longer covered by the warranty.
- To protect your phone and personal data, download applications only from trusted sources, such as Play Store. If some applications are not properly installed on your phone, your phone may not work properly- or serious errors may occur. You will need to uninstall those applications and all of its data and settings from the phone.

4. Using the Unlock Pattern, PIN, or Password

Set an unlock Pattern, PIN, or Password to secure your phone. To set the screen lock, follow the process below.

Tap the **Menu Key** , tap **Settings > Location & security > Set up screen lock** and select among **Pattern, PIN or Password**.

Warning

Take precautions when using an Unlock Pattern, PIN, or Password. It is very important that you remember the screen unlock information you set. You are allowed 5 attempts to enter your screen unlock information. If you used up all 5 opportunities, you will have to wait 30 seconds to attempt unlocking the phone again.

When you can't recall your Unlock Pattern, PIN, or Password:

If you logged into a Google account on the phone and failed to use the correct pattern 5 times, tap **Forgot Pattern?** You will be required to sign in with your Google account and prompted to create a new unlock pattern.

If you haven't created a Google account on the phone or you forgot your PIN or Password, you need to perform a hard reset.

5. Using Hard Reset (Factory Reset)

If your phone needs to be restored to its original condition, use a **Hard Reset** to initialize your phone.

- 1 Turn the power off.
- 2 Press and hold the following keys at the same time for 8 seconds: **Power/Lock Key + Down Volume Key**.
- 3 When FACTORY HARD RESET screen is displayed, release the keys.

Warning

If you perform a Hard Reset, all user applications and user data will be deleted. Please remember to back up any important data before performing a **Hard Reset**.

Getting to know your phone

6. Using a micro SD Card

Pictures, Music and Video files, can be saved to external memory. Before saving these files to external memory, you need to insert a micro SD card. If you have not inserted a micro SD card, you will not be able to save these items on external memory.

Warning

Do not remove the micro SD card without unmounting it first. Otherwise, it may damage the micro SD card as well as your phone, and the data stored on the micro SD card may be corrupted. To remove the micro SD card safely, from the Home screen, tap the **Menu Key**  and tap **Settings > SD card & phone storage > Unmount SD card**.

7. Connecting your phone to a computer via USB

- 1 Use the USB cable that was provided with your phone to connect the phone to a USB port on your computer. You'll receive a notification that the USB is connected and can see USB connection mode popup.
- 2 Tap **Mass storage** and **OK** to confirm that you want to transfer files between your phone's micro SD card and the computer.

When the phone is connected as USB storage, you receive a notification. Your phone's micro SD card is installed as a drive on your computer. You can now copy files to and from the micro SD card.

TIP

You cannot access the micro SD card from your phone while connected as USB storage. So you cannot use applications that rely on the micro SD card, such as Music.

8. Synchronising your phone to a Computer (LG PC Suite)

LG PC Suite IV is a program that helps you connect your mobile phone to a PC using a USB data communication cable. Once connected, you can use the functions of your mobile phone on your PC.

Major functions of LG PC Suite IV

- Easily create, edit and delete phone data
- Synchronise mobile phone data with PC data (contacts, calendar, SMS messages, bookmarks and call log)
- Easily transfer multimedia files (photos, videos, music) by simply dragging and dropping between a PC and your phone

Installing “LG PC Suite” PC application

“LG PC Suite” PC application can be downloaded from the webpage of LG.

- 1 Go to www.lg.com and select a country of your choice.
- 2 Go to **Support > Mobile Phone Support**
> Select the Model (LG-P936)

- 3 Click **PC Sync** from **Download**, and click **WINDOW PC Sync Download** to download “LG PC Suite” PC software.

Or you can download the program from the preinstalled microSD card.

- 1 Connect the USB data cable to your PC. Make sure that **Mass storage** mode is enabled on your phone.
- 2 Copy the LGPCSuiteIV folder from mass storage to your PC.
- 3 Run the LGInstaller.exe file on your PC and follow the instructions.
- 4 When LG PC Suite IV installation is complete, disable **Mass storage** mode to run LG PC Suite IV.

NOTE: Do not remove or delete other program files installed on your memory card. This may damage your preinstalled applications.

NOTE: LG integrated USB driver is required to connect an LG device and PC and installed automatically when you install “LG PC Suite” PC software.

Getting to know your phone

9. Unlock screen when using data connection

Your screen will go dark if untouched for a period of time when using a data connection. To turn on your LCD screen, press the Power/Lock Key.

10. Hold the phone straight up

Please hold the mobile phone straight up as a regular phone.

While making/receiving calls or sending/receiving data, try to avoid holding the lower part of the phone where the antenna is located. It may affect call quality.

11. When the screen freezes

If the phone does not respond to user input or the screen freezes:

Press and hold the **Power/Lock Key** for 12 seconds to turn it off. Then, press and hold the **Power/Lock Key** again for 3 seconds to reboot the phone.

12. Do not connect your phone when you power on/off your PC


Make sure to disconnect your phone from the PC when powering your PC on or off as it might result in PC errors.

Your Phone

To turn on the phone, press and hold the Power/Lock Key for 3 seconds.

To turn off the phone, press the Power/Lock Key for 3 seconds and tap **Power off** and **OK** to confirm.

Front view

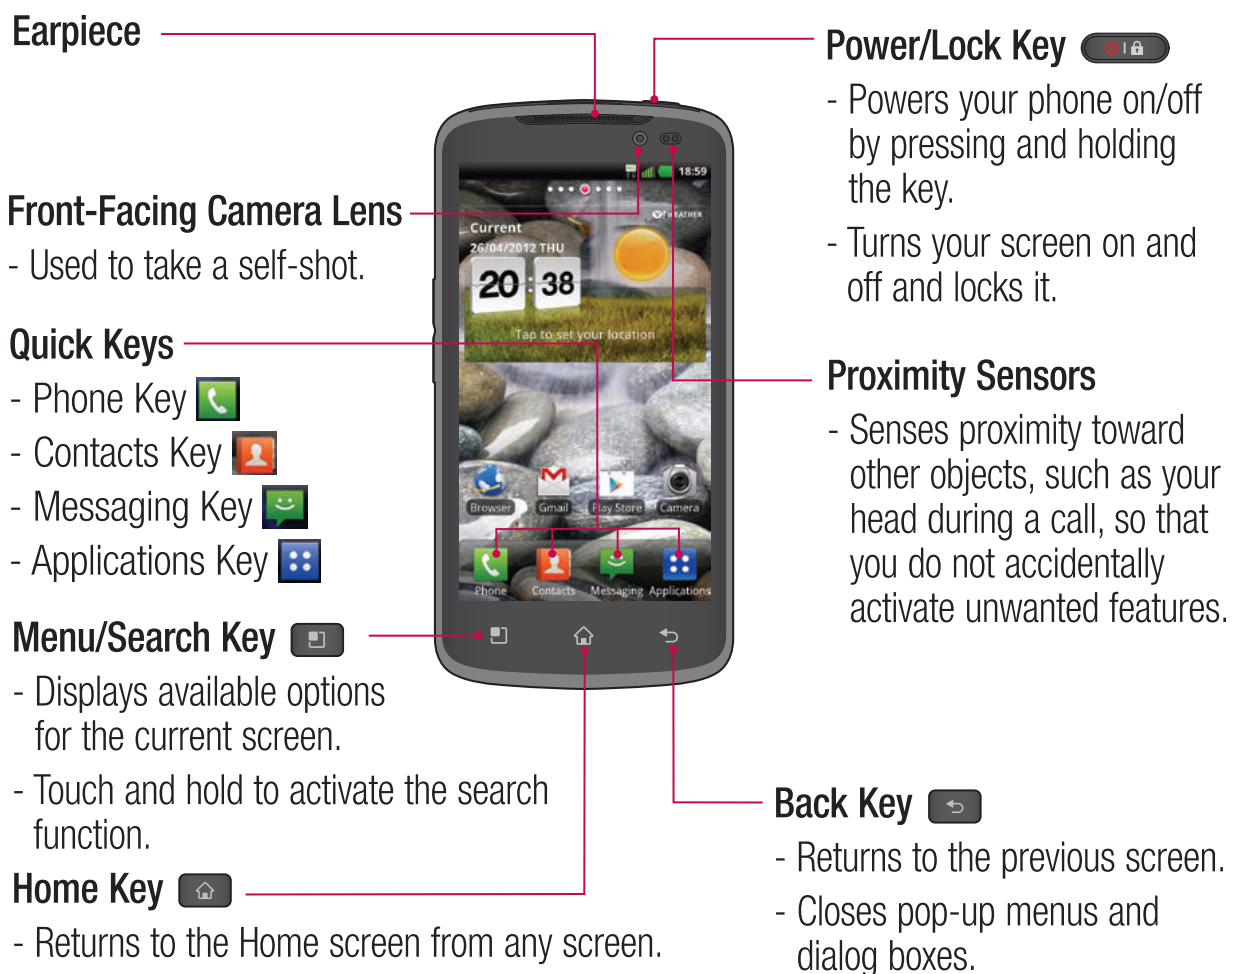

Warning


Placing a heavy object on the phone or sitting on it can damage its LCD and touch screen functionalities. Do not cover the LCD's proximity sensor with a protective film. This can cause the sensor to malfunction.

Your Phone


TIPS

- Tap the Menu Key  whenever you open an application to check what options are available.
- If your phone has errors when you use it or you cannot turn it on, remove the battery, install it again and turn it on after 5 seconds.

Side view

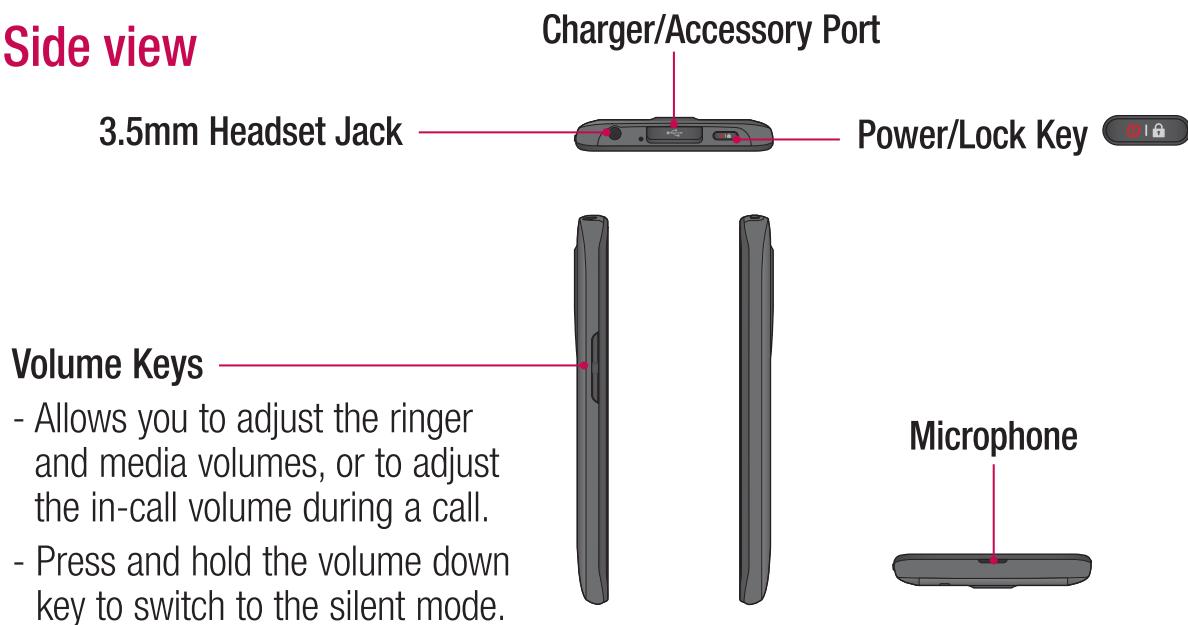

Rear view

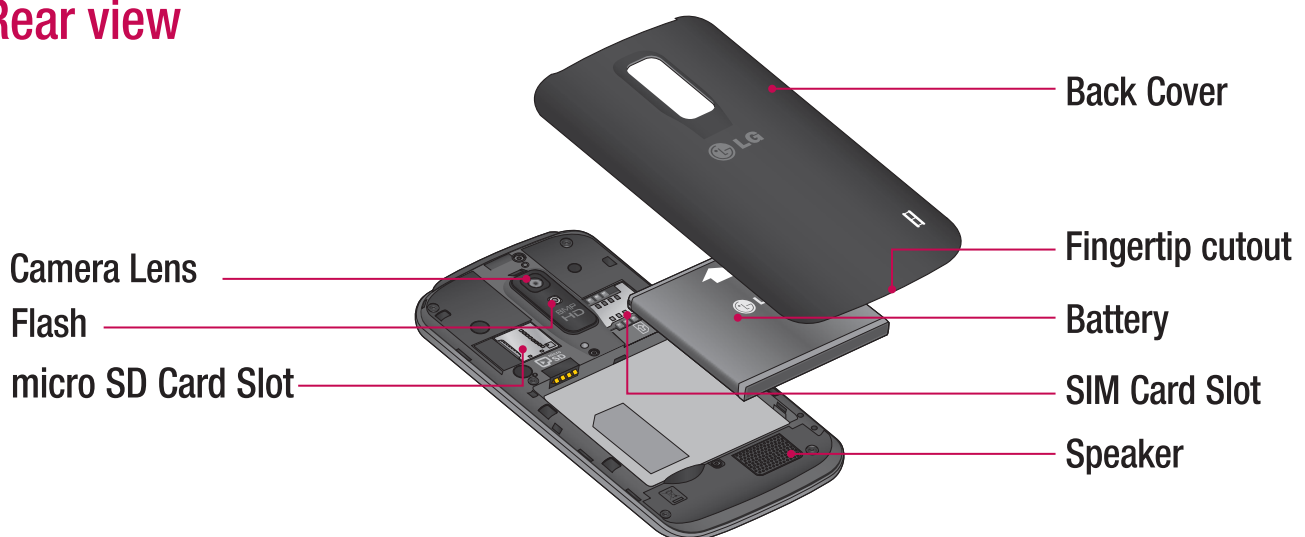

Getting Started


Installing the SIM card and battery

Before you can start exploring your new phone, you'll need to set it up. To insert the SIM card and battery:


- 1 Hold the phone on your hand firmly. With the other hand, lift the back cover using the fingertip cutout located on the bottom of the cover and remove it.



- 2 Slide the SIM card into the SIM card slot. Make sure the gold contact area on the card is facing downwards.

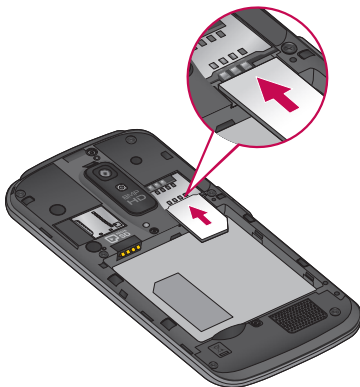

- 3 Insert the battery into place by aligning the gold contacts on the phone and the battery.

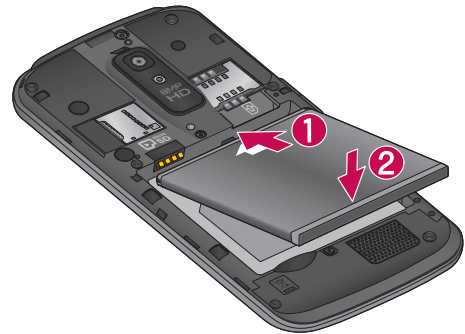

- 4 Replace the back cover of the phone (as demonstrated below). Apply a steady downward pressure until the battery cover clicks into place.



Getting Started

Charging your phone

- 1 Connect the cableless wall adapter and USB cable.
- 2 Plug the USB cable (as shown below) into the phone's charger/accessory port. Make sure the USB symbol is facing upwards.



NOTE

The battery must be fully charged initially to improve battery lifetime.

NOTE

Your phone has an internal antenna. Be careful not to scratch or damage this rear area, as that will cause loss of performance.

If the phone is turned off as the battery is fully discharged, the battery is called a weak battery. In this case when the phone connect to the charger(TA or USB) cable, the keypad LED at the bottom of the phone will be blinking. This is normal operation in the weak battery to prevent over-current flowing because the phone is designed to provide reasonable protection algorithm for against damage of battery. And after a few minutes, the LCD is turned on normally.


Inserting a micro SD card

Insert a micro SD™ card to use the camera and other multimedia features. Multimedia contents can be saved in the micro SD card. LG-P936 has a micro SD card pre-installed.



NOTE

This device supports up to a 32GB micro SD card.

- 1 Turn the phone off before inserting or removing the micro SD card. Remove the back cover.

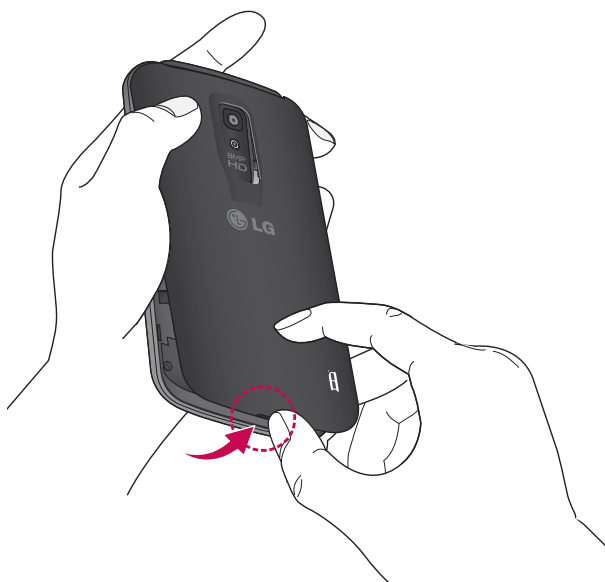

- 2 Then insert the micro SD card into the slot. Make sure the gold contact area is facing downwards.

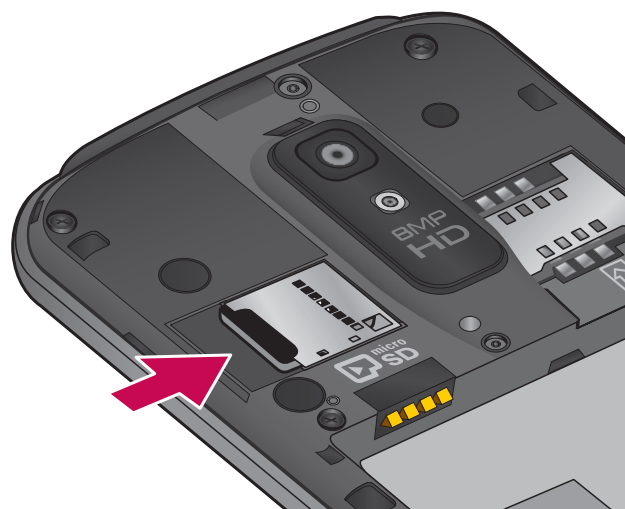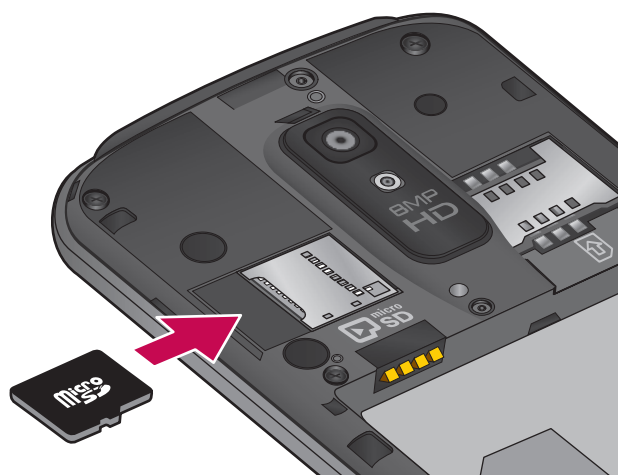

Removing the micro SD card

To safely remove the micro SD card from your phone, first you need to unmount it.

Getting Started

NOTE

On Android OS 2.3 and above, you can download applications from Play Store and store them on a micro SD card as well as on the phone. Due to this feature, if you skip the unmount procedure, it can cause an error because information between the micro SD card and the phone is not accorded properly. In the worst case, the micro SD card can be corrupted or damaged.

- 1 From the Home screen, tap the **Menu Key**  and tap **Settings > SD card & phone storage > Unmount SD card**.
- 2 Remove the battery cover and gently pull the microSD card from the slot.

Warning

Do not remove the micro SD card without unmounting it first. Otherwise, it may damage the micro SD card as well as your phone, and the data stored on the micro SD card may be corrupted.

Formatting the microSD card

Your microSD card may already be formatted. If it isn't, you must format it before you can use it.

NOTE

All files on the card are deleted when you format the micro SD card.

- 1 From the Home screen, tap the **Menu Key**  and tap **Settings > SD card & phone storage > Unmount SD card**.
- 2 Tap **Erase SD card** and **Erase SD card** button.
- 3 If you set an unlock pattern, enter it and tap **Erase everything**. The card will then be formatted and ready to use.

NOTE

If there is content on your micro SD card, the folder structure may be different after formatting since all the files will have been deleted.

Switching between and exiting applications

Multi-tasking is easy with Android because open applications keep running even when you open another application. There is no need to quit an application before opening another. Use and switch among several open applications. Android manages each application, stopping and starting them as needed, to ensure that idle applications don't consume resources unnecessarily.

Switching between applications

- Touch and hold the **Home Key** . A list of recently used applications will be displayed. Then tap the application you want to access.

To stop/exit an application

- 1 From the Home screen, tap the **Menu Key**  and tap **Settings** > **Applications** > **Manage applications**.
- 2 Tap the desired application and tap **Force stop** to exit.

MHL

MHL(Mobile High-Definition Link) is a mobile audio/video interface standard for connecting mobile phones and other portable consumer electronics devices to high-definition televisions and displays. The MHL standard features a single cable with a 5-pin interface able to support up to 1080p HD video and digital audio. you can see the image and video file through the TV/monitor when the video player or image viewer is visible on your phone screen.

NOTE

When your device is connected to an MHL-enabled HDTV, the cable will simultaneously charge the device and output media. If connected to an HDTV without MHL, the cable will not charge the connected device unless an MHL-HDMI adapter is used.

Your Home screen

Touch screen tips

With the touch of your finger, you can access available applications, make menu selections, and access data saved to your phone. The following terms are used for describing the different available actions using the touchscreen:

Tap - A single finger tap selects items, links, shortcuts and letters on the on-screen keyboard.

Touch and hold - Touch and hold an item on the screen by touching it and not lifting your finger until an action occurs. For example, to open a contact's available options, touch and hold the contact in the Contacts list until the context menu opens.

Drag - Touch and hold an item for a moment and then, without lifting your finger, move your finger on the screen until you reach the target position. You can drag items on the Home screen to reposition them.

Swipe or slide - To swipe or slide, quickly move your finger across the surface of the screen, without pausing when you first touch it (so you don't drag an item instead). For example, you can slide the screen up or down to scroll through a list, or browse

through the different Home screens by swiping from left to right (and vice versa).

Double-tap - Double-tap to zoom on a Web page or a map. For example, quickly double-tap a section of a Web page to adjust that section to fit the width of the screen. You can also double-tap to zoom in and out when taking a picture (using the Camera), and when using Maps.

Pinch-to-Zoom - Use your index finger and thumb in a pinch or spread motion to zoom in or out when using the browser, Maps, or browsing pictures.

Rotate the screen - From many applications and menus, the orientation of the screen adjusts to the device's physical orientation.

NOTE

- To select an item, tap the center of the icon.
- Do not press too hard; the touch screen is sensitive enough to pick up a light, firm touch.
- Use the tip of your finger to tap the option you want. Be careful not to tap any other keys or icons.

Proximity sensors

When receiving and making calls, this sensor automatically turns the backlight off and locks the touch keypad by sensing when the phone is near your ear. This extends battery life and prevents the touch keypad from activating unintentionally during calls.

Lock your phone

When you are not using the LG-P936 press the **Power/Lock Key**  to lock your phone. This helps prevent accidental presses and saves battery power.

Also, if you do not use the phone for a while, the Home screen or other screen you are viewing, is automatically replaced with the lock screen after 30 seconds of inactivity to conserve the battery and prevent pocket dialing.

To wake up your phone, press the **Power/Lock Key** . The lock screen will appear. Slide the lock screen up. The last screen you were working on opens.

NOTE

- The automatic screen timeout can be configured manually in Settings.
- If there are any programs running when you lock the phone, they may still be running in lock mode. It is recommended that you exit all programs before entering the lock mode to avoid unnecessary charges (e.g., phone call, web access and data communications).

Setting an unlock pattern:

You can draw your own unlock pattern by connecting four or more dots.

To unlock the phone, draw the pattern you set on the screen.

Caution

If there are more than 5 pattern drawing errors in a row, you will be required to wait for 30 seconds to retry.

Quick Switch to Silent Mode

To quickly set your phone to silent mode, press and hold the **Volume Down Key** until you see  on the Status Bar.

Your Home screen

Home

Simply swipe your finger to the left or right to view the different panels.

You can also customize each panel with shortcuts, and folders. You can also customize each panel with widgets, which are shortcuts to your Favourite applications.

NOTE

On the Home screen, you can view quick keys at the bottom of the screen. The quick keys provide easy, one-tap access to the functions you use the most.

Customizing your Home screen

You can customize your Home screen by adding quick access elements, such as shortcuts, widgets, folders to it, or changing the wallpaper.

- **Widgets:** Add dynamically updating widgets to your Home screen to allow quick access to applications without opening the full application.
- **Shortcuts:** Add application, web bookmark, contact, email, and music playlist shortcuts to the Home screen.

- **Folders:** Add folders to organize contacts and shortcuts.
- **Wallpaper:** Change the Home screen wallpaper.

To add Widgets, Shortcuts, and Folders on the Home screen:

- 1 Select a location (Home screen panels) to add an item by swiping the Home screen from left to right or vice versa.
- 2 Tap the **Menu Key**  > **Add**.
Or, touch and hold an empty part of the Home screen.
- 3 Tap the type of item you want to add on the screen: **Widgets**, **Shortcuts**, **Folders**, or **Wallpaper**.
- 4 Tap an available widget, shortcut, or folder.
- 5 You will see a new icon on the Home screen. To place it on a different panel, drag it to the desired location on the desired panel and release your finger from the screen.

TIP

To add a preloaded application or an application you have downloaded from Play Store to the Home screen, simply touch and hold the icon you want in the Applications Screen to add to the Home screen.

NOTE

If there is no available space on a particular Home screen panel, **Add** will not be available; you must delete or remove an item before you can add another item. In this case, you have the option of switching to another Home screen panel.

To delete an application icon from the Home screen, touch and hold the shortcut icon you want to delete and drag to  at the bottom of the screen.

You cannot delete the preloaded applications. (Only their icons can be deleted from the screen).



Getting back to a recently used application

- 1 Touch and hold the **Home Key** . The screen will display the icons of applications that you have used recently.
- 2 Tap an icon to open its application or tap the **Back Key**  to return to the current application.

Notifications panel

Notification icons on the Status Bar report the arrival of new messages, calendar events, alarms, as well as ongoing events, such as when you are in a call. You can view a list of all recent notifications.

The Notifications panel runs across the top of your screen.

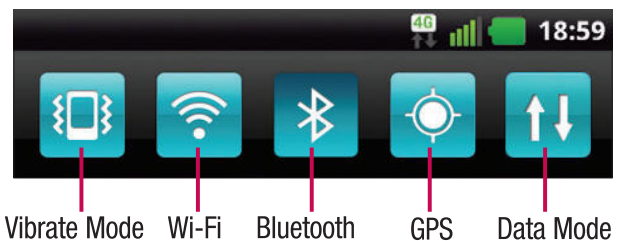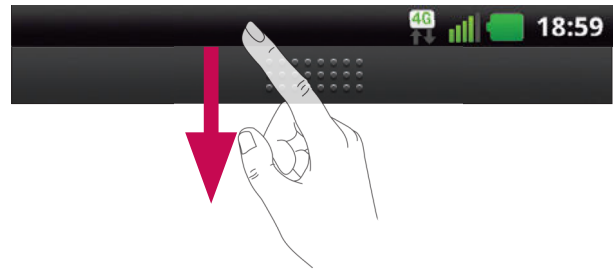

Touch and hold the Status Bar and slide it down with your finger. Or, from the Home screen, tap the **Menu Key**  > **Notifications**. From here, you can check and quickly turn on and off Silent (Vibrate) mode, Wi-Fi, Bluetooth, GPS, and Data Mode.

Your Home screen

Viewing the Status bar

The Status bar uses different icons to display phone information, such as signal strength, new messages, battery life, and active Bluetooth and data connections.

Below is a table explaining the meaning of icons you are likely to see in the Status bar.

[Status bar]



Icon	Description
	No SIM card inserted
	No network signal available
	Airplane mode is on
	Connected to a Wi-Fi network
	Wired headset connected
	Call in progress
	Call on hold
	Speakerphone is on
	Phone microphone is muted

Icon	Description
	Missed call
	Bluetooth is on
	Connected to a Bluetooth device
	Alarm is set
	New voicemail available
	Ringer is silenced
	Vibrate mode is on
	Battery fully charged
	Battery is charging
	Phone is connected to PC via USB cable
	Downloading data
	Uploading data
	GPS is on
	Receiving location data from GPS
	On-Screen Phone connected

Icon	Description
	3 more notifications not displayed
	Data is synchronizing
	Download finished
	New email available
	New Gmail available
	New Google Talk message available
	New text/multimedia message available
	Song is playing
	Upcoming event
	USB tethering is active.
	Portable Wi-Fi hotspot is active
	USB tethering & Portable Wi-Fi hotspot are active.
	Data in and out

On-screen Keyboard

You can enter text using the on-screen keyboard. The on-screen keyboard displays automatically on the screen when you need to enter text. To manually display the keyboard, simply tap a text field where you want to enter text.


There are two types of keypads that you can use: FreeWriter and LG keyboard.

To select the keyboard:

- 1 Tap the **Menu Key**  > **Settings** > **Language & keyboard** > **Input method**.
- or -
Touch and hold the the text entry field and tap **Input Method**.
- 2 Select the desired keyboard between **FreeWriter** and **LG keyboard**.

Your Home screen


FreeWriter - Writing grid mode

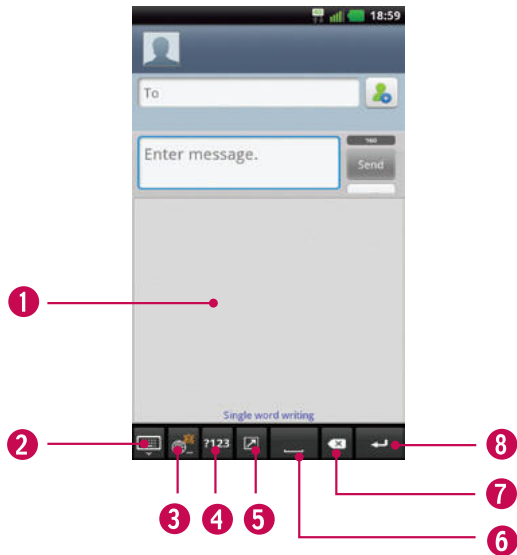

- ❶ **Handwriting Area** - Write a character at the handwriting area. The recognized result will be inserted to the cursor position.
- ❷ **Settings/Input method menu** - Tap  to close FreeWriter or Tap and hold this icon to open FreeWriter settings and Input method.
- ❸ **Switch among Freewriter input methods** - Tap  to switch among English keypad, Zhuyin keypad, Pinyin keypad, Cangjie keypad, simplified Cangjie keypad.
- ❹ **Number and Symbol** - Tap  to open the number and symbol keypad.

- ❺ **Fullscreen mode** - Tap  the text field and tap this button to switch to the fullscreen mode.
- ❻ **Space key** - Tap  to enter space.
- ❼ **Delete Key** - Tap  to delete characters to the left of the cursor.
- ❽ **Enter key** - Tap  to move cursor to the next line.

FreeWriter - Onscreen Keyboards

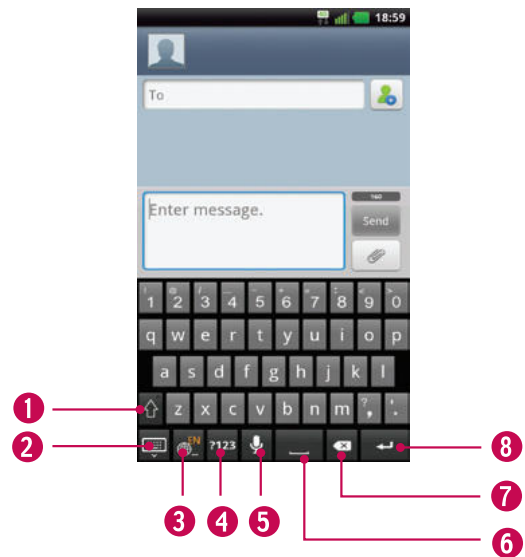

- ❶ **Shift Key** - Tap once to capitalize the next letter you type. Tap and hold the key for all caps.
- ❷ **Settings/Input method menu** - Tap  to close FreeWriter or Tap and hold this icon to open FreeWriter settings and Input method.

③ Switch among Freewriter input methods

- Tap  to switch among English keypad, Zhuyin keypad, Pinyin keypad, Cangjie keypad, simplified Cangjie keypad.

④ Number and Symbol - Tap to open the number and symbol keypad.

⑤ Voice to Text Key - Tap to use the voice input function.


Note: A network connection is required for the function of voice input.

⑥ Space key - Tap to enter space.

⑦ Delete Key - Tap to delete characters to the left of the cursor.

⑧ Enter key - Tap to move cursor to the next line.

LG keyboard - QWERTY - Letters Entry

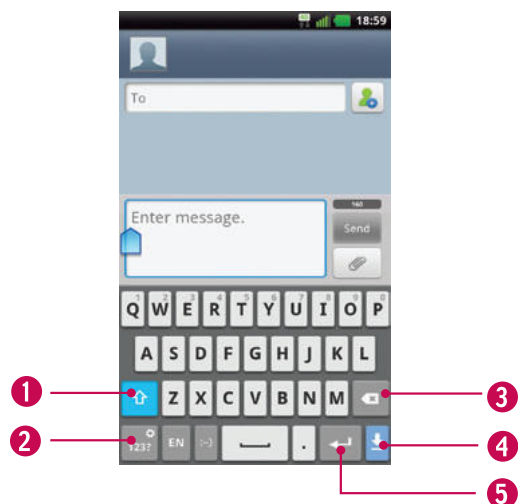

① Shift Key - Tap once to capitalize the next letter you type. Double-tap for all caps.

② Number and Symbols/ Settings Key - Tap to change input to number and symbol entry. Touch and hold to set various LG keyboard settings.


③ Delete Key - Tap to delete characters to the left of the cursor.

④ Hide Keyboard Key - Tap to hide the keyboard.

⑤ Enter Key - Tap to move the cursor to the next line.

Your Home screen


LG keyboard - QWERTY - Numbers and Symbols Entry

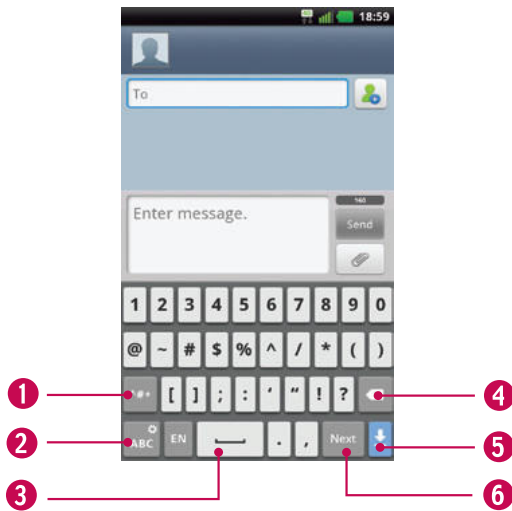

- ❶ **Alt Key** - Tap to enter additional symbols. The keyboard will change to alternate characters.
- ❷ **Letters/ Settings Key** - Tap to change input to letters entry. Touch and hold to set various LG keyboard settings.
- ❸ **Space Key** - Tap to enter space.
- ❹ **Delete Key** - Tap to delete characters to the left of the cursor.
- ❺ **Hide Keyboard Key** - Tap to hide the keyboard.
- ❻ **Next Key** - Tap to move the cursor to the next field.

LG keyboard – Phone keypad

To switch to the phone keypad on LG keyboard, touch and hold . Tap **LG keyboard settings > Keyboard layout**, then tap **Phone keypad**. The Phone keypad allows you to enter letters by tapping the key labeled with the desired letters, similar to how you would on a traditional 12 key phone. You may have to tap a key up to four times to type the desired letter or number.

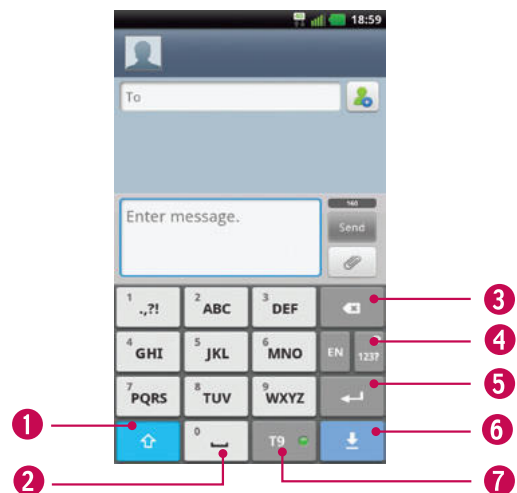

- ❶ **Shift Key** - Tap once to capitalize the next letter you type. Double-tap for all caps.
- ❷ **Space Key** - Tap to enter space.
- ❸ **Delete Key** - Tap to delete characters to the left of the cursor.

4 Number and Symbols/ Settings

Key - Tap to change input to number and symbol entry. Touch and hold to set various LG keyboard settings.

5 **Enter Key** - Tap to move the cursor to the next line.

6 **Hide Keypad Key** - Tap to hide the keypad.

7 **T9 Key** - Tap to turn on the T9 entry mode.

TIP

To switch quickly between the Android keyboard and LG keyboard, touch and hold the text entry field. When the Edit text menu pops up, tap **Input method**. Then tap the keyboard you wish to use.

123 Mode

This mode allows you to enter numbers in a text message (a telephone number, for example) more quickly. Tap the keys corresponding to the required digits before manually switching back to the appropriate text entry mode by tapping the  key.

Entering accented letters

When you select French as the text entry language, you can enter special French characters (e.g., “á”).

From Phone Keypad

After the corresponding letter character disappears, press the same key repeatedly until you see the special character you want.

From Qwerty keyboard

To input the accent, press and hold the “a” key.

After the accented character appears, tap it to enter it.

Google Account Set-up

The first time you open a Google application on your phone, you will be required to sign in with your existing Google account. If you do not have a Google account, you will be prompted to create one.

Creating your Google account

- 1 From the Home screen, tap the **Applications Key** .
- 2 Tap **Gmail > Next > Create** to start the Gmail™ setup wizard.
- 3 Tap a text field to open the keyboard and enter your name and username for your Google account. When you finish entering the text, you can move to the next text field by tapping **Next** on the keyboard.
- 4 When you're finished entering your name and username, tap **Next**. Your phone will communicate with Google servers and check for username availability.
- 5 Enter and re-enter your password. Then follow the instructions and enter the required and optional information about the account. Wait while the server creates your account.

Signing into your Google account

- 1 Enter your email address and password, then tap **Sign in**.
- 2 After signing in, you can use Gmail™ and take advantages of Google services on your phone.
- 3 Once you have set up your Google account, your phone will be automatically synchronized with your Google account on the web. (Depending on your synchronization settings.)

After signing in, your phone will sync with your Google services, such as Gmail™, Contacts, Google Calendar, and Picasa photo albums. You can also use Google Maps™, download applications from Play Store™, back up your settings to Google servers, and take advantage of other Google services on your phone.

IMPORTANT

- Some applications, such as Calendar, work only with the first Google Account you add. If you plan to use more than one Google Account with your phone, be sure to sign into the one you want to use with such applications first. When you sign in, your contacts, Gmail messages, Calendar events, and other information from these applications and services on the web are synchronized with your phone. If you don't sign into a Google Account during setup, you will be prompted to sign in or to create a Google Account the first time you start an application that requires one, such as Gmail or Play Store™.
- If you have an enterprise account through your company or other organization, your IT department may have special instructions on how to sign into that account.

Connecting to Networks and Devices

Wi-Fi

To use Wi-Fi on your phone, you need access to a wireless access point, or "hotspot." Some access points are open and you can simply connect to them. Others are hidden or implement other security features, so you must configure your phone in order to connect to them.

Turn on Wi-Fi

From the Home Screen, open the Notifications panel and tap  to turn Wi-Fi on.

OR

Tap the **Menu Key**  and tap **Settings** > **Wireless & networks** > **Wi-Fi** .

To connect to a Wi-Fi Network

Turn off Wi-Fi when you're not using it to extend the life of your battery.

- 1 From the Home screen, tap the **Menu Key**  and tap **Settings** > **Wireless & networks** > **Wi-Fi settings**.
- 2 Tap **Wi-Fi** to turn it on and begin scanning for available Wi-Fi networks.
 - A list of available Wi-Fi networks will be displayed. Secured networks are indicated by a lock icon.

- 3 Tap a network to connect to it.
 - If the network is open, you are prompted to confirm that you want to connect to that network by tapping **Connect**.
 - If the network is secured, you are prompted to enter a password or other credentials. (Ask your network administrator for details).
- 4 The Status Bar at the top of your screen will display an icon that indicates your Wi-Fi status.

TIP

If you are not in range of a Wi-Fi network and use a network connection. Additional data charges may apply.

NOTE

This device supports WEP, WPA/ WPA2- PSK, WPA PSK, WPA2 Only PSK and 802.1x EAP. (Some EAP methods are not supported.) If your Wi-Fi service provider or network administrator sets encryption for network security, enter the key in the pop-up window. If encryption is not set, this pop-up window will not be shown. You can obtain the key from your Wi-Fi service provider or network administrator.

TIP

Please consult documentation included with Bluetooth device for information on pairing mode and passcode (typically 0 0 0 0 – four zeroes).

Bluetooth

Using Bluetooth

- 1 From the **Wireless & networks** screen, tap **Bluetooth** to turn on the Bluetooth setting.
- 2 Tap **Bluetooth settings > Scan for devices**.
- 3 Tap the name of the device you wish to pair with, and then tap **Pair** to pair and connect.

How to send data from your phone via Bluetooth

You can send data via Bluetooth by running a corresponding application, not from Bluetooth menu, unlike regular mobile phones.

- * **Sending pictures:** Open the Gallery application and tap a picture. Then tap **Menu > Share > Bluetooth**. Check if Bluetooth is turned on and tap **Scan for devices**. Then tap the device you want to send data to from the list.
- * **Exporting contacts:** Open the Contacts application. Tap the contact you want to share, tap the **Menu Key**  and tap **Share > Bluetooth**. Check if Bluetooth is turned on and tap **Scan for devices**. Then tap the device you want to send data to from the list.

Connecting to Networks and Devices

- * **Sending multi-selected contacts:** Open the Contacts application. To select more than one contact, tap the **Menu Key**  and tap **Share** . Tap the contacts you want to send or tap **Select all**. Then tap **Share > Bluetooth**. Check if Bluetooth is turned on and tap **Scan for devices**. Then tap the device you want to send data to from the list.
- * **Connecting to FTP (Only the FTP server is supported on this handset):** From the Home screen, tap the Menu Key  and tap Settings > Wireless & networks > Bluetooth settings. Make sure Bluetooth is turned on. Tap Discoverable to place a checkmark and make the phone visible to other Bluetooth devices. Then search for other devices. Find the service you want and connect to the FTP server.

TIP

The supported Bluetooth version is Bluetooth 3.0 and certified by Bluetooth SIG. It is compatible with other Bluetooth SIG certified devices.

- If you want to search for this phone from other devices, from the Home screen, tap the **Menu Key**  and tap **Settings > Wireless & networks > Bluetooth settings**. Make sure Bluetooth is turned on. Tap Discoverable to place a checkmark and make the phone visible to other Bluetooth devices for 120 seconds.
- Supported profiles are HFP/HSP, A2DP, AVRCP, OPP, FTP(Server) and PBAP.

Data Tethering

You can use your phone to provide a data connection to a computer by activating data tethering and connecting them with a USB cable.

To tether your phone with your computer using the USB

- 1 Connect your phone to your computer with a USB cable.
- 2 You can see USB connection mode popup and tap USB tethering and OK to confirm then tap USB tethering.
- 3 A blue check mark will appear, indicating that the function is activated.

NOTE

- Data Tethering requires an appropriate DataPro data plan. Devices connected by tethering use data from your DataPro plan. Plans are not unlimited and significant charges may be incurred if the included data allowance is exceeded. Performance may vary depending on the number of devices connected and other factors.
- You cannot access your phone's micro SD card on your computer when using USB tethering.
- From the Home screen, tap the **Menu Key**  and tap **Settings > Wireless & networks > Tethering & portable hotspot > USB tethering**.

Mobile Hotspots

You can also use your smartphone to provide a mobile broadband connection for up to 8 other devices. Create a hotspot and share your connection.

To create a portable hotspot, tap the **Menu Key**  > **Settings > Wireless & networks > Tethering & portable hotspot > Portable Wi-Fi hotspot**. Set a password upon first use.

NOTE

Mobile Hotspots requires an appropriate DataPro data plan. Devices connected to your Mobile Hotspot use data from your DataPro plan. Plans are not unlimited and significant charges may be incurred if the included data allowance is exceeded. Performance may vary depending on the number of devices connected and other factors. If you do not use a password, others will be able to use your Mobile Hotspot connection.

Connecting to Networks and Devices

Wi-Fi Direct

Learn to use the WLAN Direct feature to connect two devices via a WLAN without requiring an access point.

Connect your device to another WLAN device

- 1 **Settings > Wireless & network settings > Wi-Fi Direct settings > Wi-Fi Direct**
- 2 Press **Menu > Scan**.
- 3 Select a device and then select **Connect**.
When the owner of the other device accepts the connection, pairing is complete.
- 4 To deactivate the WLAN Direct feature, select **Disconnect Wi-Fi Direct**.

Wi-Fi Share

You can share your music, picture and video content between users connected via the same Wi-Fi, Wi-Fi Directed or portable hotspot network.

Check your network settings in advance and make sure the users are connected to the same network.

Send data

- 1 **Applications Key**  **> Wi-Fi Share**

- 2 Add files you want to share.

- 3 On the top of the screen, you can see all devices connected with your phone. Select devices you want to share with and then touch the . When the other device accepts the request, it starts sending.

Use menu key to use more of its functions.

Receive data

When prompted, select **OK** to confirm that you are willing to receive data.

Smartshare

SmartShare uses DLNA (Digital Living Network Alliance) technology to share digital content through a wireless network. Both devices must be DLNA certified to support this feature.

To turn SmartShare on and allow sharing contents

- 1 Tap the **Applications Key**  **> SmartShare**.
- 2 Tap the **Menu Key**  **> Settings**.
- 3 Tap **Discoverable** checkbox to turn on.
 - Tap **Always accept request** to automatically accept sharing requests from other devices.

- Tap **Receive files** to allow automatically allow upload files to my phone from other devices.

- 4 Under the Sharing contents section, tap each type of content you would like to share. Choose from **Pictures**, **Videos**, and **Music**.
- 5 **SmartShare** is now activated and ready to share contents.

To share contents from remote content library to other devices

Let your renderer device (e.g. TV) play multimedia contents from your remote content library (e.g. PC)

NOTE

Make sure that the DLNA functionality of your devices is properly configured (e.g. TV and PC)

- 1 Tap the **Applications Key**  > **SmartShare**.
- 2 Tap the top right button to or select the device from renderer lists.
- 3 Tap the top left button and select the device of the remote content library.
- 4 You can browse the content library.

- 5 Tap a content thumbnail or tap the **Menu Key**  and tap **Play** button.

To share contents from your phone to your renderer device(e.g. TV)

NOTE

Make sure that your renderer device is properly configured.

- 1 While browsing your pictures or videos using the **Gallery** application, touch and hold to select files. Then you will be able to select multiple files to be shared.
- 2 Tap **Share** > **SmartShare**. **SmartShare** is automatically launched with the selected files.
- 3 Select the device from renderer lists to play the files.

NOTE

Follow the similar steps to use the Music player, Camera and Video player to share contents.

Connecting to Networks and Devices

NOTICE

Check that your device is connected with your home network using Wi-Fi connection to use this application. Some DLNA enabled devices (e.g. TV) support only the DMP feature of DLNA and will not appear in the renderer device list. Your device might not be able to play some contents.

To download contents from remote content library

- 1 Tap the **Applications Key**  > **SmartShare**.
- 2 Tap the top left button and select the device of the remote content library.
- 3 You can browse the content library.
- 4 Tap a content thumbnail then tap **download menu key**.

NOTICE

A few types of contents are not supported.

To upload contents from my phone to remote content library

NOTE

Make sure that SD card is correctly mounted and the **Receive files** in settings menu is checked.

- 1 Tap the **Applications Key**  > **SmartShare**.
- 2 Tap the top left button and select **My phone**.
- 3 You can browse the content library.
- 4 Touch and hold a content thumbnail and then tap the **upload menu key**.
- 5 Select a device of remote content library to be uploaded.

NOTICE

Some DLNA enabled devices do not support DMS upload functionality and will not be uploaded. A few types of contents are not supported.

Calls

Making a call

- 1 Tap  to open the keypad.
- 2 Enter the number on the keypad. To delete a digit, tap the **Clear** icon .
- 3 Tap the **Call** icon  to make a call.
- 4 To end a call, tap the **End** icon .

TIP

To enter “+” to make international calls, touch and hold .

Calling your contacts

- 1 Tap  to open your contacts.
- 2 Scroll through the contact list or tap the **Search** box and enter the first letter(s) of the contact you want to call.
- 3 In the list that is displayed, tap the contact you want to call.
- 4 In the Contact Info screen, tap the phone number you wish to call.

Answering and rejecting a call

When the screen is locked

When your phone rings, drag the **Answer** icon  to the right.

Drag the **Decline** icon  to the left to reject an incoming call. Drag the Excuse Msg bar upwards if you want to send a message to the caller. If the caller is unknown, this **Excuse Msg bar** is not available.

When the screen is unlocked

When your phone rings, tap the **Answer** icon . Tap **Decline** icon  to reject an incoming call.

Tap the Excuse Msg bar upwards if you want to send a message to the caller. If the caller is unknown, the **Excuse Msg bar** is not available.

Adjusting the in-call volume

To adjust the in-call volume during a call, use the volume up and down keys on the left side of the phone.

Calls

Making a second call

- 1 During your initial call, tap the **Menu Key**  and select . Or, tap the **Dialpad** icon . Then enter the number you want to call.
- 2 Dial the number or search your contacts.
- 3 Tap the **Call** icon  to connect the call.
- 4 Both calls will be displayed on the call screen. Your initial call will be locked and put on hold.
- 5 Tap the Contact on the screen to toggle between calls or tap  to merge the calls.
- 6 To end active calls, tap **End**. If there is no active call, it will end the call on Hold.

NOTE

You will be charged for each call you make.

Viewing your call logs

From the Home screen, tap the **Call icon**  and the **Call log** tab.

View a complete list of all dialed, received, and missed voice calls.

TIP

Tap any single call log entry to view the date, time, and duration of the call.

TIP

Tap the **Menu Key** , then tap **Delete all** to delete all the recorded items.

Call settings

You can configure phone call settings, such as call forwarding, and other special features offered by your carrier.

- 1 From the Home screen, tap the **Menu Key**  and tap **Settings**.
- 2 Tap **Call settings**.

Contacts

You can add contacts on your phone and synchronize them with the contacts in your Google Account or other accounts that support syncing contacts.

Searching for a contact

- 1 From the Home screen, tap the **Applications Key**  and then tap  to open your contacts.
- 2 Tap the **Search field** and enter the contact name using the keypad.

Adding a new contact

- 1 Tap  and enter the new contact's number. Tap the **Menu Key** , tap **Add to contacts** and then **Create new contact**.
- 2 If you want to add a picture to the new contact, tap . Choose from **Capture picture** or **Pick from Gallery**.
- 3 Select the contact type by tapping .
- 4 Tap a category of contact information and enter the details about your contact.
- 5 Tap **Save** to save the contact entry.

Favourite Contacts

You can classify frequently called contacts as favourites.

To add a contact to your favourites

- 1 From the Home screen, tap the **Applications Key**  and then tap  to open your contacts.
- 2 Tap a contact to view its details.
- 3 Tap the star to the right of the contact's name. The star turns gold and the contact is added to your favourites.

To remove a contact from your favourites list

- 1 From the Home screen, tap the **Applications Key**  and then tap  to open your contacts.
- 2 Tap the **Groups** tab and tap **favourites**.
- 3 Tap a contact to view its details.
- 4 Tap the gold star to the right of the contact's name. The star turns grey and the contact is removed from your favourites.

Messaging/Email

Messaging

Your phone combines SMS and MMS into one intuitive, easy-to-use menu.

Threaded box

Messages (SMS and MMS) exchanged with another party can be displayed in chronological order so that you can conveniently see an overview of your conversation.

Sending a message

- 1 Tap the  icon on the Home screen, then tap **New message** to create a new message.
- 2 Enter a contact name or phone number in the **To** field. As you enter the contact name, matching contacts appear. You can tap a suggested recipient. You can also add multiple contacts.

NOTE

You will be charged for a text message for every person you send the message to.

- 3 Tap the text field to start entering your message.

- 4 Tap the **Menu Key**  to open the options menu. Choose from **Templates**, **Attach**, **Discard**, **Add subject**, **Insert smiley**, and **More (All messages, Keyboard settings)**.

- 5 Tap **Send** to send your message.

- 6 The message screen opens, with your message after recipient name/number. Responses appear on the screen. As you view and send additional messages, a message thread is created.

Warning

The 160-character limit may vary from country to country depending on how the SMS is coded and the language used in the message.

Warning

If an image, video, or audio file is added to an SMS message, it will be automatically converted into an MMS message and you will be charged accordingly.

NOTE

When you get an SMS message during a call, there will be an audible notification.

Using smilies

Liven up your messages using smilies. When writing a new message, tap the **Menu Key** , then tap **Insert smiley**.

Changing your message settings

Your phone's message settings are predefined, so you can send messages immediately. You can change the settings based on your preferences.

► From the Home screen, tap **Messaging**  > **Menu Key**  > **Settings**.

Email

You can use the **Email** application to read Email from providers other than Gmail. The Email application supports the following account types: POP3, IMAP and Microsoft Exchange ActiveSync (for Enterprise users).

To open the Email application

► From the Home screen, tap the **Applications Key**  > **Email**.

The first time you open the **Email** application, a setup wizard opens to help you add an Email account.

Microsoft Exchange Email Account

Email address – Enter the account email address.

User name – Enter the account username.

Password – Enter the account password.

Domain – Enter the account domain (optional)

Server address – Enter the server address

Use SSL – Choose whether or not to use SSL for Microsoft Exchange.

Other (POP3, IMAP) Email Account

Email address – Enter the account email address.

Password – Enter the account password. Setup complete page will appear and you will need to enter “name”. The account will now appear in the list of accounts in your Email folder.

POP3 / IMAP4 – Select protocol type, either POP3 or IMAP4.

Incoming server – Enter the incoming email server address.

Messaging/Email

Secure type – TLS/SSL/Off.

Port number – Normally each account's default number will be displayed.

Outgoing server – Enter the outgoing email server address.

SMTP Secure Connection – TLS/SSL/Off.

Port number – Normally each account's default number will be displayed.

Tap the **Next** button to connect the server.

Setup Completed page will appear. You will need to enter "name" for account display and My name. Then, tap **Done**.

The account will now appear in the list of accounts in your Email folder.

The Accounts Screen

The **Accounts** screen lists your **Combined Inbox** and each of your email accounts.

▶ Tap the **Applications Key**  > **Email**.
The Account list appears.

TIP

To make a shortcut to the Inbox of an account:

In the accounts list, touch and hold an email account. Then, tap **Add to**

homescreen.

You can tap an account to view its **Inbox**. The default account from which you send email is indicated with a checkmark.

To open your Combined Inbox

If you have configured email to send and receive email from more than one account, you can view all messages sent to all accounts in your Combined Inbox.

▶ Tap **Email** > **Combined Inbox** (on the **Accounts** screen).

Messages in the **Combined Inbox** are colour coded on the left, by account, using the same colours used for your accounts in the **Accounts** screen.

When a new email arrives in the inbox, there will be sound and vibration notification. Tap the email notification to end it.

Composing and Sending Email

- 1 In the **Email** application, tap the **Compose**.
- 2 Enter an address for the message's intended recipient. As you enter text, matching addresses will be offered from your contacts.
- 3 Tap the **Cc/Bcc** field to copy or blind copy to other contacts/email addresses.

- 4 Enter the text of the message.
- 5 Tap **Attach** to attach the file you want to send with your message.
- 6 Tap **Send**.

If you are not ready to send the message, tap **Save** to save it in a **Drafts** folder.

Touch a message in the **Drafts** folder to resume working on it. Your message will also be saved as a draft if you touch the **Back** key before sending it.

Tap **Cancel** to abandon and delete a message, including any saved drafts. If you are not connected to a network, for example if you're working in airplane mode, the messages you send are stored in your **Outbox** folder until you're connected to a network. If it contains any pending messages, the **Outbox** will be displayed on the **Accounts** screen.

NOTE

The messages sent using an Exchange account will not be stored on the phone; they will be stored on the Exchange server itself. If you want to see your sent messages in the **Sent** folder (or with the **Sent** label), you may need to open the **Sent** folder/label and select **Refresh** from the options menu.

Working with Account Folders

Each account has **Inbox**, **Outbox**, **Sent**, **Drafts**, **Trash** and **Junk** folders. Depending on the features your account service provider supports, you may have additional folders.

Adding and Editing Email Accounts

To add an email account

- 1 Tap the **Applications Key**  > **Email**.
- 2 Select **MS Exchange** or **Other**.

If an email account is already set up, the wizard is not activated automatically.

In this case, tap the **Menu Key**  > **Add account**.

To change account settings

- 1 Open the **Accounts** screen.
- 2 Tap the **Menu Key**  > **Settings**.

To delete an email account

- 1 Open the **Accounts** screen.
- 2 Touch and hold the account you want to delete.
- 3 Tap **Remove account** in the menu that opens and tap **Remove** in the dialogue box to confirm.

Social Networking

With your phone, you can enjoy social networking and manage your micro-blog in on-line communities. You can update your current status, upload photos, and view your friends' status updates in real-time. You can add your Facebook, Twitter, and MySpace accounts to your phone. If you don't have an account, you can visit their sites to set one up.

NOTE

Additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.

Adding an account to your phone

- 1 From the Home screen, tap the **Menu Key**  > **Settings** > **Accounts & sync**.
- 2 Tap **Add account**.
- 3 Tap any social networking service you want to use.
- 4 Enter your email address and password that you set up for your social networking account, then tap **Log in**.

Adding a social networking widget on the home screen

If you add a social networking widget on your Home screen, the widget will show your status when your phone receives updates from the network.

You can also access the social community directly by tapping the widget.

- 1 Touch and hold an empty spot on the Home screen.

NOTE : If there is no available space on a particular Home screen panel, you won't be able to add any widget; you must delete or remove an item before you can add another item. In this case, you have the option of switching to another Home screen panel.

- 2 When various Widgets appear, scroll through the widget and tap **Social+** .

Viewing and updating your status

- 1 Go to the Home screen panel where the Social+ widget is. You can see the current status of social applications you set.
- 2 You can select each social application you'd like to view. Tap the .
- 3 Tap "What are you doing?" field to update your status with comments or upload pictures.
 - Check all the social applications you'd like to update. It'll will simultaneously update all.
- 4 After entering comments with attachment (if any), tap **Post**.

TIP

You can use information about friends only in your social network(s) or sync all data to Contacts.

Syncing accounts on your phone

You can sync information from your social networking accounts with your Contacts and other functions on your phone, if applicable.

- 1 From the Home screen, tap the **Menu Key**  > **Settings** > **Accounts & sync**. Choose the account you want to synchronize and enter the necessary information.
- 2 Check **Background data** and **Auto-sync**.
- 3 Tap the account to sync.
- 4 Check sync options such as **Sync Contacts**.
"" indicates that synchronization has been enabled.

Removing accounts on your phone

- 1 From the Home screen, tap the **Menu Key**  > **Settings** > **Accounts & sync**.
- 2 Tap the account(s) you want to delete, then tap **Remove account** (twice).

Camera

To open the Camera application, tap **Applications Key**  > **Camera** .

Getting to know the viewfinder

Brightness – This defines and controls of the amount of sunlight entering the lens. Slide the brightness indicator along the bar, towards “-” for a lower brightness image, or towards “+” for a higher brightness image.

Zoom – Zoom in or zoom out. Alternatively you can use the Volume Keys.

Camera Switch - Allows you to switch between the front-facing and back-facing cameras.



Video mode – Slide this icon down to switch to video mode.

Taking a photo – Allows you to take a photo.

Gallery – This enables you to access your saved photos and videos within the camera mode. Simply tap and your Gallery will appear on the screen.

Settings – Tap this icon to open the settings menu. See **Using the advanced settings** on page 53.

Flash – Allows you turn on the flash when taking a photo in a dark place.

NOTE

You can close all the shortcut options to give a clearer viewfinder screen. Just tap the center of the screen once. To recall the options, tap the screen again.

Taking a photo

- 1 From the Home screen, tap **Camera**.
- 2 Holding the phone horizontally, point the lens towards the subject you want to photograph.
- 3 Touch and hold the capture button lightly, and a focus box will appear in the center of the viewfinder screen.
- 4 Position the phone so you can see the subject in the focus box.
- 5 When the focus box turns green, the camera has focused on your subject.
- 6 Release the Capture button.

NOTE

A shading issue may occur when you take a picture indoors, due to the characteristics of the camera. (Shading means a colour difference between the center and sides.)

Once you've taken the photo

Your captured photo will appear on the screen if Auto review is set to On.

Share Tap to share the picture via various methods such as **Bluetooth** or **Messaging**.

NOTE

Additional charges may apply when MMS messages are sent while roaming.

Set as Tap to use the image as **Contact icon** or **Wallpaper**.

Rename Tap to edit the name of the selected picture.



Tap to delete the image.



Tap to take another photo immediately. Your current photo will be saved.



Tap to view the Gallery of your saved photos.

Using the advanced settings

In the viewfinder, tap  to open the advanced options.

You can change the camera settings by scrolling the list. After selecting the option, tap the **Back key** .

Focus –Tap to select the focus mode.

- **Auto** : Allows the camera to focus automatically.
- **Face tracking** : The camera detects and focuses on human faces automatically.

Camera

Image size – Tap to set the size (in pixels) of the picture you take. Select a pixel value from the following options:

8M(3264X2448), W6M(3264X1836), 5M(2560X1920), 3M(2048X1536), W3M(2304X1296), 1M(1280X960), W1M(1536X864).

Scene mode – Select the colour and light settings appropriate for the current environment.

- **Normal** : Automatically adjusts according to the environment.
- **Portrait** : It's good to capture people.
- **Landscape** : It's good to capture natural scenery such as trees, flowers and sky.
- **Sports** : It's good to capture sports scenery.
- **Sunset** : It's good to capture the sunset scenery.
- **Night** : It's good to capture the night scenery. Slow shutter speeds are used to detect night landscape.

ISO - Control the camera's sensitivity to light. Choose from Auto, **400**, **200**, and **100**.

White balance – Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent**, and **Cloudy**.

Colour effect – Choose a colour tone for your new photo.

Timer – The self-timer allows you to set a delay after the shutter is pressed. Select **Off**, **3 sec**, **5 sec**, or **10 sec**. This is ideal if you want to be included in a photo.

Shot mode – Choose from **Normal**, **Continuous shot**, and **Panorama**.

Shutter sound – Select one of the four shutter sounds.

Auto review – If you set **Auto review on**, it will display the picture that was just taken automatically.

Tag location – Activate to use your phone's location-based services. Take pictures wherever you are and tag them with the location. If you upload tagged pictures to a blog that supports geotagging, you can see the pictures displayed on a map.

NOTE

This function uses wireless networks. You need to checkmark Use wireless networks.

From the Home screen, tap the **Menu Key**  > **Settings** > **Location & security** > **Use wireless networks**.

-  – Restore all camera default settings.
-  – Tap whenever you want to know how a function operates. This will provide you a quick guide.

NOTE

- When you exit the camera, some settings will return to their defaults. Check the camera settings before you take your next photo.
- The settings menu is superimposed over the viewfinder, so when you change elements of the image colour or quality, you will see a preview of the image change behind the settings menu.

Viewing your saved photos

You can access your saved photos from within the camera mode. Just tap the Gallery button  and your Gallery will be displayed.

TIP

Flick left or right to view other photos or videos.

 SlideShow – Tap to see slide show.

 Menu – Tap to access the following options:

Share to share the picture via various methods such as Bluetooth or Messaging.

Delete - to delete the picture.

More - to access options such as **Details**, **Set as**, **Crop**, **Rotate left**, **Rotate right**.

Setting a photo as wallpaper

- 1 Tap the photo you want to set as wallpaper to open it.
- 2 Tap the screen to open the options menu.
- 3 Tap **Menu** > **More** > **Set as** > **Wallpaper**.
- 4 Crop the image as desired and tap **Save**.

Video Camera

Getting to know the viewfinder

Brightness – This defines and controls of the amount of sunlight entering the lens. Slide the brightness indicator along the bar, towards “-” for a lower brightness video, or towards “+” for a higher brightness video.

Zoom – Zoom in or zoom out. Alternatively you can use the Volume Keys.

Camera Switch - Allows you to switch between the front-facing and back-facing cameras.



Camera mode – Slide this icon up to switch to camera mode.

Start recording – Allows you to start recording.

Gallery – This enables you to access your saved photos and videos from within the video camera mode. Simply tap and your Gallery will appear on the screen.

Settings – Tap this icon to open the settings menu. See **Using the advanced settings** on page 57.

Flash – Allows you turn on the flash when recording video in a dark place.

Recording a video

- 1 From the Home screen, tap **Camera** and slide the camera mode button to change to Video mode. The icon will change to .
- 2 The video camera's viewfinder will appear on the screen.
- 3 Holding the phone horizontally, point the lens towards the subject of the video.
- 4 Tap the Record icon  once to start recording.
- 5 REC will appear at the bottom of the viewfinder with a timer showing the length of the video.
- 6 Tap the Stop icon  on the screen to stop recording.

After recording a video

A still image representing your video will appear on the screen.

Play Tap to play the video.

Share Tap to share the picture via various methods such as **Bluetooth** or **Messaging**.

NOTE

Additional charges may apply when MMS messages are downloaded while roaming.

Rename Tap to edit the name of the selected video.

 Tap to delete the video you just recorded. Tap OK to confirm it. The viewfinder will reappear.

 Tap to record another video right away. Your current video will be saved.

 Tap to view the Gallery of your saved videos.

Using the advanced settings

Using the viewfinder, tap  to open the advanced options.

Adjust the video camera settings by scrolling the list. After selecting the option, tap the **Back key** .

Video size – Tap to set the size (in pixels) of the video you record. Select the video size from Full HD(1920X1088), HD(1280X720), TV(720X480), VGA(640X480), QVGA(320X240) (MMS) and QCIF(176X144)(MMS).

Video Camera

White balance – The white balance ensures any the white areas in your video are realistic. To enable your camera to adjust the white balance correctly, you may need to determine the light conditions. Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent**, and **Cloudy**.

Colour effect – Choose a colour tone to use for your new video.

Audio recording – Choose **Mute** to record a video without sound.

Auto review – If you turn Auto review on, it will play back the video you just recorded automatically.



– Restore all video camera default settings.



– Tap whenever you want to know how a function operates. This will provide you a quick guide.

Watching your saved videos

1 In the viewfinder, tap .

2 Your Gallery will appear on the screen.

3 Tap a video to play it automatically.

Adjusting the volume when viewing a video

To adjust the volume of a video while it is playing, use the Volume Keys on the left side of the phone.

Multimedia

You can store multimedia files to a micro SD card to have easy access to all your image and video files.

Gallery

Tap the **Applications Key**  > **Gallery**.

View mode

When you open the Gallery, your photos will be presented in Folder view. Once you open a folder, your photos will be in Grid view. When you tap a photo from Grid view, it will be displayed in Full view.

Calendar View

In Folder view, tap  to change to the Calendar view. The calendar will open and you will see with photos taken on the days.

Timeline view

The phone's **Gallery** provides a timeline view of your photos and videos. From the Grid view mode, drag  to the right. The date you took your photos will be displayed starting with the most recent. If you select a specific date, all the photos you took on that day will be grouped together.

Gallery menu options

Tap a photo and tap the **Menu Key**  to see the following available options: **Share**, **Delete**, and **More**. Tap **More** to access **Details**, **Set as**, **Crop**, **Rotate Right** and **Rotate left**.

Sending a photo

- 1 To send a photo, touch and hold the photo you want.
- 2 Tap **Share** and choose from **any of the available applications**.
- 3 When you choose **Email**, **Gmail** or **Messaging**, your photo will be attached to a message, which you can then write and send normally.

TIP

If you have a social networking account set up on your phone, you can share your photo with that social networking community.

Sending a video

- 1 To send a video, touch and hold the video you want.
- 2 Tap **Share** and choose from **any of the available applications**.

Multimedia

- 3 When you choose **Email**, **Gmail** or **Messaging**, your video will be attached to a message, which you can then write and send normally.

Using an image

Choose images to use as wallpaper or identify callers.

- 1 Touch and hold a photo, then tap **More** > **Set as**.
- 2 Choose from **Contact icon** or **Wallpaper**.

Viewing a slideshow

To view a slideshow of your photos, open the Gallery and tap a photo. Once the photo is displayed, tap the screen to see the menu. Tap **Slideshow** to begin the slideshow of all your photos.

View photo details

You can view a photo's detailed information, such as the name, date, time, size, and type.

While viewing a photo, tap **Menu** > **More** > **Details**.

Transferring files using USB mass storage devices

To transfer files using a USB device:

- 1 Connect the phone to a PC using a USB cable.
- 2 You can see USB connection mode popup. (From the Home screen, tap the **Menu Key**  and tap **Settings** > **Connectivity settings** > **USB connection mode** > **Mass storage**.)
- 3 Tap **Mass storage** and **OK** to confirm.
- 4 You can view the phone content on your PC and transfer the files.

NOTE

If you don't want to see USB connection mode popup, uncheck **Don't ask again on USB connection mode popup** or turn off **Always ask** (**Settings** > **Connectivity settings** > **Always ask**).

Music

Your phone has a music player that lets you play all your favourite tracks. To access the music player from the Home screen, tap the **Applications Key**  and tap **Music**.

How to save music/video files to the phone

Connect your phone to the PC using the USB cable.

You'll receive a notification that the USB is connected and can see USB connection mode popup. Tap Mass storage and OK. Then open the folder you wish to view from your computer.

Save music or video files from the PC to the phone's removable storage.

- You may copy or move files from the PC to the phone's removable storage using a card reader.
- If there is a video file with a subtitle file (.smi file with the same name as the video file), place them in the same folder to display the subtitle automatically when playing the video file.

- When downloading music or video files, copyright must be secured. Please note that a corrupted file or file with a wrong extension may cause damage to the phone.

How to play music/video files on the phone

Playing music/video files

Locate the file you want in the Gallery and tap it to play it.

Playing a song

- 1 From the Home screen, tap the **Applications Key**  and tap **Music**.
- 2 Tap the **Songs** tab.
- 3 Tap the song you want to play.
- 4 Tap  to pause the song.
- 5 Tap  to skip to the next song.
- 6 Tap  to go back to the beginning of the song. Tap  twice to go back to the previous song.

To change the volume while listening to music, press the up and down Volume Keys on the left side of the phone.

Multimedia

To display the options for a song, touch and hold any song in the list. You will see the following options: **Play, Add to playlist, Use as ringtone, Delete, Share, Search, and Details.**

Working with Playlists

You can create playlists to organize your music files into sets of songs, which you can play in the order you set or in a shuffle.

To create a playlist

- 1 When viewing a list of songs in the library, touch and hold the first song you want to add to the new playlist.
- 2 Tap **Add to playlist**.
- 3 Tap **New playlist**.
- 4 Enter a name for the playlist, then tap **Save**.

The new playlist is added to the **Playlists** library.

You can also add the song that is playing in the Playback screen as the first song in a playlist by pressing the **Menu Key** , then tapping **Add to playlist** or tapping **Save as playlist** to save all the songs in an album that you're playing as a playlist.

To remove a song from a playlist

- 1 Open a playlist.
- 2 Touch and hold the song you want to remove, then tap **Remove from playlist** or when viewing the currently playing playlist, tap the **Menu Key** , then tap **Remove from playlist** to remove all the songs from the current playlist.

To rename or delete a playlist

- 1 Open the **Playlist** library.
- 2 Touch and hold the playlist to display the menu, then tap **Delete** or **Rename**.

NOTE

Music file copyrights may be protected by international treaties and national copyright laws. Therefore, it may be necessary to obtain permission or a licence to reproduce or copy music. In some countries, national laws prohibit private copying of copyrighted material. Before downloading or copying the file, please check the national laws of the relevant country concerning the use of such material.

Google Applications

About Google applications

Google applications, including mobile versions of Gmail, Google Talk, Google Calendar, and Google Maps, are loaded on your phone.

- 1 First, set up a Google account. Then enter your user name and password and sign in.
- 2 After signing in, your contacts, email, and calendar in your Google account will automatically synchronize with your phone.

Google Maps™

To open Google Maps and view your location

- 1 From the Home screen, tap the **Applications Key**  and tap **Maps**.
- 2 Tap the **My location** icon  on the map. The map centers on a blue dot that indicates your location. A blue circle around the dot indicates that your actual location is within the circle.

To get an address and additional information for a location

- ▶ Touch and hold a location on the map. A balloon with the address and a thumbnail from Street View (if available)

opens over the location.

- ▶ Tap the balloon to access additional options.

To view map, satellite, or traffic layers

- ▶ Tap the **Layers** icon  on the map and select a layer option. You can choose from Traffic, Satellite, Terrain, Latitude, or More Layers.

Searching For Locations and Places

You can search for a location and view it on a map. You can also search for places on the map that you're viewing.

To search for a location

- 1 While viewing a map, tap the Search field at the top of the screen. You can also tap the **Menu Key**  and tap **Search**.
- 2 In the search box, enter the place you're looking for. You can enter an address, a city, or a type of business or establishment. For example, "theater in New York".
- 3 Tap the Search icon.

Markers with letter labels indicate search matches on the map.

Google Applications

NOTE

Location information might be inaccurate if GPS and Wi-Fi is turned off. Please make sure that GPS and Wi-Fi is turned on.

Getting Directions

To get directions

- 1 While viewing a map, tap the **Menu Key**  and tap **Directions**.
- 2 Enter a starting point in the first text box and your destination in the second text box.
To reverse directions, tap the **Menu Key**  and tap **Reverse Start & End**.
- 3 Tap the icon for car, public transit, or walking directions.
- 4 Tap **Get directions**. The directions to your destination appear in a list.

To view turn-by-turn directions in a list

You can view each turn in your route as a list of written directions.

When viewing a list of directions, tap the **Navigation** icon  to view turn-by-turn directions in Navigation View.

To search for locations along your route

You can search for businesses, points of interest, and other features along your route. When you search while navigating, your results include locations along your route, rather than locations that are near your current location.

- ▶ Tap the **Search Key** and search for locations of interest.

The results are displayed as markers along your route; the first result is labeled. You can tap a label for more information about the marker.

- ▶ When you're finished, tap the **Navigation** icon  to return to Navigation View.

My Places

My Places bookmarks your favourite places, such as addresses or local businesses, to be able to find them quickly later.

To view My Places

While viewing a map, tap the **Menu Key**  and tap **My Places**.

Clear Map

Clear any information, such as routes and search results, from the map.

To clear a map

While viewing a map, tap the **Menu Key**  and tap **Clear Map**.

Latitude

Finding Your Friends with Google Latitude™

Google Latitude lets you and your friends view each others' locations on maps and get directions to your friends' locations using Google Latitude. Your location is not shared automatically. It is by invitation only. You must join Latitude and then invite your friends to view your location or accept invitations from your friends.

To join Latitude

► While viewing a map, tap the **Menu Key**  and tap **Join Latitude**.

The first time you join Latitude, you're prompted to accept or reject the Google privacy policy. After you've joined Latitude, the Join Latitude option changes to **Latitude**.

To open Latitude

After you join Latitude, you can open it to find your friends and view their updates.

► While viewing a map, tap the **Menu Key**  and tap **Latitude**.

To invite friends to share their locations

After you join Latitude, you can start sharing your location with your friends. Only friends whom you have explicitly invited or accepted can see your location.

- 1 Open Latitude, tap the **Menu Key**  and tap **Add friends**.
- 2 Tap **Select from Contacts** or **Add via email address** in the menu that opens.
- 3 Tap **Add friends** at the bottom of the screen. If your friends already use Latitude, they receive an email request and a notification on Latitude. If they have not yet joined Latitude, they receive an email inviting them to sign in to Latitude with their Google Account.

Places

To find places

Tap the **Places** icon  while in Google Maps to find different venues, such as gas stations, coffee shops, bars, restaurants, etc.

Google Applications

Once you select a category, you will see a list of closest matches, including their distance, compass bearing, description and even user reviews. You can customize your own location search categories, and even add the Places icon to your Home screen.

Tip

While viewing a map, tap the **Menu Key**  > **More** for the following options: **Labs, Cache Settings, Help, Terms, Privacy & Notices** and **About**.

Play Store™

Play Store™ lets you browse through and download thousands of fun and useful applications and games. You can check other users' comment regarding an application or you can post your own comments. If you install applications and games from Play Store™, they appear in the phone's menu below the preloaded applications, and you can find them by scrolling down with your finger. You can open downloaded applications from the Play Store by tapping the **Menu Key**  > **My apps**.

To download applications and games

- 1 From the Play Store home page, tap a category near the top of the screen.
- 2 Scroll to view subcategories and tap the one you want to explore.
- 3 Tap an application to open its details screen, or further sort the subcategory by tapping Top paid, Top free, Top Grossing, Top New paid, Top New Free, Trending.
- 4 Tap the application you desire to install. The descriptions and the prices of the application will be displayed.
- 5 Tap the **price** button at the top right of the screen for paid applications. For free applications, tap the **FREE** button. The applications will then be downloaded and installed.

NOTE

To purchase a paid app, you'll need to set up a payment method with Google Checkout™. You have the option to use a credit card or charge to your carrier bill.

NOTE

When you want to exit a game or application, use the Home or Back Key, which will return you to the Home screen. Or select Menu (or Options) within the game or application and select Exit. (Exit option may vary by game/application). Ending applications that continue to run in the background (after going back to the Home screen) will help conserve battery life and reduce unwanted data usage.

Gmail™

Gmail™ can be configured when you first set up your phone. Depending on your synchronization settings, Gmail™ on your phone is automatically synchronized with your Gmail™ account on the web. The inbox conversations list is your default Gmail™ view.

Tap the **Menu Key** , then tap **Refresh** to send or receive new email and to synchronize your email with your Gmail™ account on the web. Tap the **Menu Key**  for the following additional options:

Compose, Accounts, Go to labels, Search and More.

Tap the **Menu Key**  and tap **Accounts > Add account** to add another Gmail account. You can also change the settings by tapping the **Menu Key**  **> More > Settings** from any screen within an account.

Google Talk™

Google Talk™ is Google's instant messaging program. It lets you communicate with other people who also use Google Talk™.

Tap the **Menu Key**  for the following available options.

All friends  – Displays all friends you can communicate with.

Add friend  – Send invitations to chat.

Search  – It searches for contacts to chat with or any chat records that contain the word(s) you entered.

Sign out  – Sign out from chat. When you tap the Talk icon from the Home screen, you will be signed in automatically if you activate **Sign in automatically**.

Google Applications

Settings  – Allows you to adjust various settings.

More  – Choose from End all chats to close all the current chats, Invites to see a list of friends you have invited to chat, or Blocked to view a list of friends you have blocked.

Changing Google Talk Settings

You can configure Google Talk to send you a notification of each message that you receive in a chat and also to sound a ringtone or vibrate the phone.

You can also configure Google Talk to sign you in automatically when you turn on your phone, and you can set whether the mobile indicator is displayed next to your name in other people's Friends lists.

To configure notifications for new Google Talk messages

- 1 From the Friends list, tap the **Menu Key** , then tap **Settings**.
- 2 Checkmark **notifications** to receive a notification in the Status Bar when a new chat message arrives.
- 3 Tap **Select ringtone** to choose a ringtone that will ring to notify you of a new chat.

- 4 Tap **Vibrate** to choose the vibration setting when you receive a notification of a new chat.

To show or hide the mobile indicator to friends

- 1 From the Friends list, tap the **Menu Key** , then tap **Settings**.
- 2 Checkmark or uncheck **Mobile indicator**. If Mobile indicator is checkmarked, your friends see an outline of an Android™ next to your name in their Friends list when you are signed into Google Talk on an Android phone.

To set whether you sign into Google Talk automatically

- 1 From the Friends list, tap the **Menu Key** , then tap **Settings**.
- 2 Checkmark or uncheck **Automatically sign in**. When Automatically sign in is checked, you are signed into Google Talk when you turn on your phone.

To set Google Talk to change your status

- 1 From the Friends list, tap the **Menu Key** , then tap **Settings**.
- 2 Checkmark or uncheckmark **Automatic away-status**.

When Automatic away-status is checkmarked, your status will automatically be changed to Away when the screen is turned off.

Utilities

Setting the alarm

- 1 From the Home screen, tap the **Applications Key**  and tap **Alarm/Clock**.
- 2 To add a new alarm, tap the  tab (if necessary).
- 3 Tap **New alarm** and set the alarm time.
- 4 Set any other desired options and tap **Save**.
- 5 Tap the **Menu Key**  to add another alarm or adjust the alarm settings.

Using the calculator

- 1 From the Home screen, tap the **Applications Key**  and tap **Calculator**.
- 2 Tap the number keys to enter numbers.
- 3 For simple calculations, tap the function you want (+, −, x, or ÷), followed by =.
- 4 For more complex calculations, tap the **Menu Key** , tap the **Advanced panel**, then choose an option.

Adding an event to your calendar

NOTE

You must create a Google account to use Calendar.

- 1 From the Home screen, tap the **Applications Key**  and tap **Calendar**.
- 2 To view an event, tap the date. The events occurring on that date are displayed below the Calendar. Tap the event to view its details. If you want to add an event, tap  at the top right corner of the Calendar.
- 3 Tap the **What** field and enter the event name. Check the date and enter the start and end time you want your event to begin and finish.
- 4 Tap the **Where** field to enter the location.
- 5 To add a note to your event, tap the **Description** field and enter the details.
- 6 To repeat the event, set **Repetition**, and set **Reminders**, if necessary.

- 7 Tap **Save** to save the event in the calendar. A coloured square in the calendar will mark all days that have saved events. An alarm will sound at the event start time if you set it.

Changing your calendar view

- 1 From the Home screen, tap the **Applications Key**  and tap **Calendar**.
- 2 At the top of the Calendar, tap **Day, Week, Agenda,** or **Month**.

Polaris Office

With Polaris Office, you can view, create and edit document files on your device. The loaded files can be from micro SD cards of your device, or from downloaded email attachments. The Polaris Office application supports the following file formats: txt, doc, docx, xls, xlsx, ppt, pptx, pdf.

Create a New Document

- 1 From the Home screen, tap the **Applications Key**  > **Polaris Office**.
- 2 Register your name and email address on the User Registration page. If you want to skip the registration process, tap **Later**.
- 3 Tap **My Files** for folders and documents on your micro SD card.

- 4 Tap the **Menu Key**  > **New File** to start a new document.
- 5 Tap a document type.
- 6 Enter contents in the document using the tools at the bottom of the screen.
- 7 When you're done working on the document, tap the **Menu Key**  > **File** > **Save** (or **Save as** to enter a new document name) to save.
- 8 Tap the **Back Key**  to exit.

View and edit a document on your device

- 1 From the Home screen, tap the **Applications Key**  > **Polaris Office**.
- 2 Tap **My Folders** for folders and documents on your micro SD card.
- 3 Move to the folder that contains the file that you want to open if it is not in the root directory.
Tap the document that you want to view or edit.

Utilities

NOTE

You can also open an attachment in an email by tapping the attachment in the message.

- 4 The document opens for you to view. If you want to edit it, Tap the **Menu Key**  then select **Edit Mode**.
- ▶ To move between pages or pan through the document, scroll in the corresponding direction.
- ▶ To change the zoom level, tap the **Menu Key**  > **Zoom**, then tap the zoom level you want or simply pinch-to zoom to achieve the zoom level you want.
- ▶ Use the toolbar at the bottom of the screen to edit the document (Word, Excel, or PowerPoint file).
- ▶ Tap the **Menu Key**  for additional menu options such as Reflow text, Bookclip, Send file, and Setting
- 5 When you're finished editing, tap Save. Then, tap the Back Key  to exit.

Polaris Office document tools

The Polaris Office application has a toolbar that appears automatically when you create

a document.

- 1 To display the toolbar in an existing document, Tap the **Menu Key**  then select **Edit Mode**.
- 2 Tap a toolbar icon and the corresponding tool options will be displayed in a pop-up balloon for you to tap and use.
- 3 To hide the tool options pop-up balloon, tap the toolbar icon again. Left and right arrows on the toolbar indicate that you can scroll horizontally for more icons. The tools in the toolbar vary depending on the document type.

Manage documents online

- 1 From the Home screen, tap the **Applications Key**  > **Polaris Office**.
- 2 Tap **Add account** > **Box.net** for access to your online account.
- 3 Enter your Email account and password to access your account then tap **Add**.
- 4 View and manage your documents on the server as desired.

Voice Control

You can search by voice and complete other voice actions, such as calling or texting a contact, sending an email, creating a note or getting directions with just a simple tap of the Voice Control icon.

- 1 From the Home screen, tap the **Applications Key**  > **Voice Search**.
- 2 Wait for the "**Say a command**" prompt, then say your query.
- 3 For a query, the search results will be displayed in the web browser. Tap the result you want or continue searching.

Voice recorder

Use the voice recorder to record voice memos or other audio files.

Recording a sound or voice

- 1 From the Home screen, tap the **Applications Key**  and tap **Voice Recorder**.
- 2 Tap  to begin recording.
- 3 Tap  to end recording.

NOTE

Tap  to access your voice recordings. You can listen to the saved recordings.

Sending the voice recording

- 1 Once you have finished recording, you can send the audio clip. Tap **Share**.
- 2 Choose from **Bluetooth**, **Wi-Fi share**, **Email**, **Gmail** and **Messaging**. When you select **Email**, **Gmail** or **Messaging**, the voice recording will be added to a message that you can write and send normally.

App Manager

You can manage your programs with App Manager.

- 1 You are allowed to see the currently using applications by tapping on the Running apps tab. The applications with high consumption of resource will have descriptions in red. Touch stop icon to terminate the applications.
- 2 You are allowed to see the installed applications by tapping on the Installed apps tab.
- 3 You are allowed to see the capacity of System memory and SD card by tapping the Storage tab.
- 4 You can place the App Manager widget on the homescreen and easily check the number of currently running applications.

The Web

Browser

The Browser gives you a fast, full-colour world of games, music, news, sports, entertainment, and much more, right on your mobile phone.

NOTE

Additional charges apply when connecting to these services and downloading content. Check data charges with your network provider.

< Tool bar >

The icons bar on the screen below makes it easier to use the browser.

The browser that allows you to look at webpages similarly to how you would on a computer.



Back – Moves to the previous web page.



Forward – Used in conjunction with the Back Key. This allows you to go back and forth between web pages without opening multiple windows.



Windows – Shows all your open windows.



New windows – Opens a new window.



Settings – Moves to Browser settings.

Using options

Tap the **Menu Key**  to view the following options:



Read it later – To add the current web page in Read it later.



Add RSS Feed – To add your favourite web page. When a new item appears on the web site, you are automatically notified with Google reader.

NOTE

RSS (Really Simple Syndication) is a family of web feed formats used to publish frequently updated content, such as blog entries, news headlines or podcasts. An RSS document, called a feed, web feed or channel, contains either a summary of content from an associated website or its full text. RSS makes it possible for people to keep up-to-date with their favourite websites in an automated way that is easier than checking manually. The user subscribes to a feed by entering its link into the reader or clicking an RSS icon in a browser that starts the subscription process. The reader checks the user's subscribed feeds regularly for new content, and downloads any updates it finds. For unavailable RSS Feed web pages, the 'Add RSS Feed' icon menu will be disabled.



Share page – Tap to share the web page.



Find on page – Allows you to find text on the current web page.



Select text – To select text on the web page. Highlight the text you want with your finger. The highlighted text is copied to the clipboard and you can paste it anywhere that allows text to be entered.



More

- **Home page** – To move to the Home page.
- **Set home page** – To set the current page as your home page.
- **Add shortcut to home** – Add the current page as shortcut to home screen.
- **Page info** – To view the web page details.
- **Downloads** – To view downloaded history.

TIP

To return to the previous web page, tap the **Back key** .

Adding bookmarks

1 Tap  next to the URL field.

- From **Thumbnail view**, tap **Add**, enter a name and URL, and tap **OK**.
- From **List view**, tap **Add bookmark**, enter a name and URL, and tap **OK**.

Changing the Browser settings

Tap  and set any desired options.

On-Screen Phone

LG On-Screen Phone 2.0

On-Screen Phone allows you to view your mobile phone screen from a PC via a USB, Bluetooth, or Wi-Fi connection. You can also control your mobile phone from your PC, using the mouse or keyboard.

On-Screen Phone icons

-  Connects your mobile phone to your PC, or disconnects it.
-  Rotates the On-Screen Phone window (only available with applications that support rotation).
-  Launches LG Home Panorama or changes the On-Screen Phone preferences.
-  Maximizes the On-Screen Phone window.
-  Exits the On-Screen Phone program.
-  Minimizes the On-Screen Phone window.

On-Screen Phone features

- **Real-time transfer and control:** displays and controls your mobile phone screen when connected to your PC.
- **Mouse control:** allows you to control your mobile phone by using the mouse to

click and drag on your PC screen.

- **Text input with keyboard:** allows you to compose a text message or note using your computer keyboard.
- **File transfer (mobile phone to PC):** sends a File from your mobile phone (e.g. Gallery, Video Player, music and Polaris Office) to your PC. Simply right-click and drag to send a File to your PC.
- **File transfer (PC to mobile phone):** sends files from your PC to your mobile phone. Simply select the files you wish to transfer and drag and drop into the on-Screen phone window. the files you send are stored on OSP folder.
- **LG Home Panorama:** Shows the whole work spaces of LG Home. You can easily organise icons or widgets and run an application by double-clicking the shortcut.

NOTE: Please make sure that LG Home is the default launcher. Some widgets may not work properly on the LG Home Panorama.

How to install On-Screen Phone on your PC

Visit LG Home (<http://www.lg.com>) and go to **Support > Mobile Phone Support > Select the Model (LG-P936)**
> Click OSP (On-Screen Phone) to download. You can install the On-Screen Phone on your PC.

How to connect your mobile phone to your PC

On-Screen Phone 2.0 provides USB, Bluetooth and Wi-Fi connection. Please follow the instruction on Connection Wizard of OSP program.

NOTE

Please make sure that On-Screen Phone check box in **Settings > Connectivity > On-Screen Phone** is selected.

Please make sure that the battery may run out more quickly due to the current consumption if On-Screen Phone is connected via Wi-Fi.

When you connect your mobile phone to your PC via Mobile Hotspot and access to the Internet on the PC, additional data charges may be incurred depending on your DataPro data plan.

Access to the Internet using Wi-Fi networks may not work well depending on the network's traffic. When you enlarge the On-Screen Phone window, the display on the screen might become slow.

On-Screen Phone

To check the phone-to-PC connection

Once the devices have been connected, drag down the Status Bar at the top of the Home screen to check the On-Screen Phone connection status.

To disconnect your phone from your PC

Click  in the top left of the On-Screen Phone window. Alternatively, drag down the Status Bar at the top of the Home screen and select **"On-Screen Phone connected" > "Disconnect On-Screen Phone"**. Touch **"Disconnect"** in the disconnect dialog.

Settings

Wireless & networks

This menu allows you to manage Wi-Fi and Bluetooth connections, portable hotspot and data tethering, airplane mode and VPN connections. To access this menu, from the Home Screen, tap **Menu Key**  > **Settings > Wireless & networks**.

Airplane mode

Airplane mode allows you to quickly turn off all wireless connections.

1 From the **Wireless & networks** screen, tap the **Airplane mode** checkbox to turn it on (a blue checkmark will appear).

2 Tap again to turn it off.

OR

1 Press and hold the **Power/Lock Key**  and tap **Airplane mode**.

2 Press and hold the **Power/Lock Key**  and tap **Airplane mode** again to turn it off.

Wi-Fi – Turns on Wi-Fi to connect to available Wi-Fi networks.

Wi-Fi settings – Allows you to set up and manage wireless access points. Set network notification or add a Wi-Fi network. The advanced Wi-Fi settings screen is accessed from the Wi-Fi settings screen. Press the **Menu** key and touch **Advanced**.

Wi-Fi Direct settings – Tick the check box to make Wi-Fi Direct active. Set Wi-Fi Direct device name and scan for other devices.

Bluetooth – Turn the Bluetooth wireless feature on or off.

Bluetooth settings

- **Device name:** Set a Bluetooth name for your device.
- **Discoverable:** Set your device to be visible to other Bluetooth devices.
- **Scan for devices:** Set your device to be visible to other Bluetooth devices.

Tethering & portable hotspot – You can configure the tethering and portable Wi-Fi hotspot settings.

VPN settings – Displays the list of Virtual Private Networks (VPNs) that you've previously configured. Allows you to add different types of VPN.

Settings

Mobile networks – Set options for data roaming, network mode & operators, access point names (APNs) and so on.

Call settings

You can set Fixed Dialing Numbers, Voicemail and Other call settings including Call reject, Call forwarding, Additional settings, Send Messages, Call duration.

Sound

Adjust sound, notification default settings and vibrate mode. You can also manage audible and Haptic feedback.

Silent mode - Checkmark this to silence all sounds except media and alarms.

Vibrate - Set the option of whether to let the phone feedback you with vibration.

Volume - Adjust the phone's volume settings to suit your needs and your environment.

Phone ringtone - Select the ringtone for incoming calls.

Notification ringtone - Select the ringtone for notifications such as new messages receipt or calendar events.

Audible touch tones - Select whether to hear tones when you use the dialpad.

Audible selection - Select whether to hear sound when you tap buttons, icons, and other onscreen items.

Screen lock sounds - Select whether to hear sound when the screen is locked or unlocked.

Haptic feedback – Vibrate when pressing soft keys and on certain user interface interactions.

Display

Brightness – Adjust the brightness of the screen.

Auto-rotate rotation – Set to switch orientation automatically when you rotate the phone.

Animation – Set to allow animations.

Screen timeout – Set the time delay before the screen automatically turns off.

Display font - Change the display font.

Front Key LED timeout - Set the time delay before the LED on the front side of your phone automatically turns off.

Screen optimization - Change the resolution size of downloaded applications to fit the screen size.

Motion sensor calibration - Allows you to reset calibration for motion sensor.

Gesture

Move cursor - Checkmark to set the device to move the cursor by tapping on any side of the device to move the cursor while typing.

Relocate item - If you checkmark this, you can relocate an item to other home screens by touching and holding an item and tilting the device.

Mute - Checkmark this to mute the incoming call by flipping the phone over while the phone is ringing.

Snooze (stop) - Checkmark this to snooze(stop) the alarm by flipping the phone over.

Previous/Next item - Checkmark this to display a previous/next photo in Gallery by tapping on the left/right side of the phone.

Pause - Checkmark this to pause the video by flipping the phone over.

Location & security

Use wireless networks – If you check Use wireless networks, your phone will determine your approximate location by

using Wi-Fi and mobile networks. When you check this option, you're asked whether you consent to allowing Google to use your location when providing these services.

Use GPS satellites – If you check Use GPS satellites, your phone will determine your location to street-level accuracy.

Set up screen lock – Set an unlock pattern to secure your phone. Opens a set of screens that guide you through drawing a screen unlock pattern. You can set a PIN or Password instead of a Pattern or leave it as None.

When you turn on your phone or wake up the screen, you're prompted to draw your unlock pattern to unlock the screen.

Screen lock timer - Set the amount of idle time before the screen lock is enabled.

Set up SIM card lock – Set up SIM card lock or change SIM PIN.

Visible passwords – select to show passwords as you type them or deselect to hide passwords as you type them.

Select device administrators – Add or remove administrators.

Use secure credentials – Allows you to access secure certificates

Settings

Install from SD card – Choose to install encrypted certificates from your micro SD card.

Set password – Set or change the credential storage password.

Clear storage - Clear credential storage of all contents and reset its password

Using the Unlock Pattern, PIN, or Password

Set an unlock Pattern, PIN, or Password to secure your phone. To set the screen lock, follow the process below.

Tap the **Menu Key** , tap **Settings** > **Location & security** > **Set up screen lock** and select between **Pattern, PIN or Password**.

Warning

Take precautions when using an Unlock Pattern, PIN, or Password. It is very important that you remember the screen unlock information you set. You are allowed 5 attempts to enter your screen unlock information. If you used up all 5 opportunities, you will have to wait 30 seconds to attempt unlocking the phone again.

When you can't recall your Unlock Pattern, PIN, or Password:

If you logged into a Google account on the phone and failed to use the correct pattern 5 times, tap **Forgot Pattern?** You will be required to sign in with your Google account and prompted to create a new unlock pattern. If you haven't created a Google account on the phone or you forgot your PIN or Password, you need to perform a hard reset.

Caution

If you perform a hard reset, all user applications and user data will be deleted. Please remember to back up any important data before performing a hard reset.

- 1 Turn the power off.
- 2 Press and hold the following keys at the same time for 8 seconds: **Power/Lock Key + Down Volume Key**.
- 3 When FACTORY HARD RESET screen is displayed, release the keys.
- 4 Press the **Power/Lock Key** to confirm -- delete all user data, and press the Volume Keys to cancel.

Applications

Unknown sources - Checkmark to permit the installation of applications you get from Web sites, email or any other locations other than Play Store.

Warning

Depending on the applications you install, the mobile phone may not operate correctly and could be illegally used to establish your location and gain access to personal information via the Internet.

To protect your phone and personal data, only download applications from trusted sources such as Play Store.

Manage Applications – Manage and remove installed applications.

Running services - Check currently running services.

Storage use – View storage used by applications.

Battery use – See what has been using the battery.

Development – Set options for application development.

Accounts & sync

Allows you to enable Background data, Auto-sync and synchronize or add new accounts.

Privacy

Allows you to perform a Factory data reset. Be careful as this will erase all your data.

SD card & phone storage

Allows you to check total available micro SD card space. You can also unmount the micro SD card to safely remove it or format it.

Language & keyboard

Select language and customize the input method and keyboard settings.

Settings

Voice input & output

Set Voice recognizer settings and use the Text-to-Speech settings to configure the Android text-to-speech synthesiser, for applications that can take advantage of it.

Accessibility

Use the Accessibility settings to configure any accessibility plug-ins you have installed on your phone.

NOTE

Requires additional plug-ins to become selectable.

Connectivity settings

USB connection mode - Your phone can be used as a mass storage device if you have a memory card inserted. You can set Mass storage as a default setting for USB connection mode.

On-Screen Phone - Tap this icon to use On-Screen Phone. See On-Screen Phone on page 76.

Date & time

Set date, time, time zone and date and time formats.

About phone

View legal information, check phone status and software versions, and perform the software update.

Software Update

Phone Software Update

This feature allows you to update the firmware of your phone to the latest version conveniently from the internet without the need to visit a service center.

For more information on how to use this function, please visit:

<http://www.lg.com>

As the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure to check all instructions and notes that appear at each step before proceeding. Please note that removing the USB cable or battery during the upgrade may seriously damage your mobile phone.

LG Mobile Phone Software update via Over-the-Air (OTA)

This feature allows you to update the firmware of your phone to the newer version conveniently via OTA without connecting the USB data cable. This feature is only available if and when LG makes the newer version of the firmware available for your device.

First, you can check the software version on your mobile phone:

Tap the **Menu Key**  > **Settings** > **About phone**. You can check the software

version at the bottom of the list.

To perform the phone software update, tap the **Menu Key**  > **Settings** > **About phone** > **Software update** > **Check now for update**.

NOTE

LG reserves the right to firmware updates available only for selected models at its own discretion and does not guarantee the availability of the newer version of the firmware for all handset models.

NOTE

Your personal data—including information about your Google account and any other accounts, your system/application data and settings, any downloaded applications and your DRM licence—might be lost in the process of updating your phone's software. Therefore, LG recommends that you back up your personal data before updating your phone's software. LG does not take responsibility for any loss of personal data.

Copyrights and trademarks

Notice:

Open Source Software

To obtain the corresponding source code under GPL, LGPL, MPL and other open source licences, please visit

<http://opensource.lge.com/>

All referred licence terms, disclaimers and notices are available for download with the source code.

DivX Mobile

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

DivX Certified® to play DivX® video up to HD 720p, including premium content.

DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.


Dolby Mobile

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

Accessories

These accessories are available for use with the LG-P936. (Items described below may be optional.)

Travel adaptor

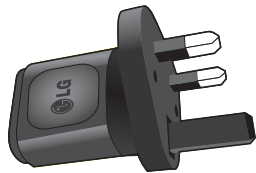


User Guide

Learn more about your LG-P936.




Data cable

Connect your LG-P936 and PC.

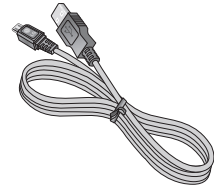

Stereo headset

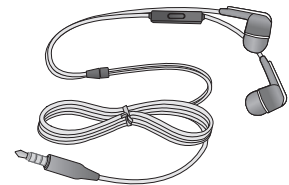

NOTE:

- Always use genuine LG accessories. Failure to do this may invalidate your warranty.
- Accessories may vary in different regions.

Technical data

Ambient Temperatures

Max: +55°C (discharging), +45°C (charging)

Min: -10°C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band , WCDMA and LTE Terminal Equipment

Model Name

LG-P936

Trade Name

LG

CE 0168 !

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.8.1 / EN 301 489-7 V 1.3.1 / EN 301 489-17 V 2.1.1 /
EN 301 489-19 V 1.2.1 / EN 301 489-24 V1.5.1
EN 60950-1:2006+A11:2009
EN 50360:2001 / AC:2006 / EN62209-1:2006 / EN62209-2:2010 / EN 62311:2008 / EN 62479:2010
EN 300 328 V1.7.1
EN 301 511 V9.0.2
EN 301 908-1 V5.2.1 / EN 301 908-2 V5.2.1 / EN 301 908-13 V5.2.1

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility
that the product mentioned above to which this
declaration relates complies with the above mentioned
standards and Directives

LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands

Name

Doo Haeng Lee/Director

Issued Date

19. Mar. 2012

Signature of representative

Troubleshooting

This chapter lists some problems you might encounter while using your phone. Some problems require you to call your service provider, but most are easy to fix yourself.

Message	Possible causes	Possible corrective measures
SIM error	There is no SIM card in the phone or it is inserted incorrectly.	Make sure that the SIM card is correctly inserted.
No network connection/ Losing network	Signal is weak or you are outside the carrier network. Operator applied new services.	Move towards a window or into an open area. Check the network operator coverage map. Check whether the SIM card is more than 6~12 months old. If so, change your SIM at your network provider's nearest branch. Contact your service provider.
Codes do not match	To change a security code, you will need to confirm the new code by re-entering it. The two codes you have entered do not match.	If you forget the code, contact your service provider.
Any application cannot be set	Not supported by service provider or registration required.	Contact your service provider.
Calls not available	Dialing error New SIM card inserted. Pre-paid charge limit reached.	New network not authorised. Check for new restrictions. Contact service provider or reset limit with PIN2.

Troubleshooting

Message	Possible causes	Possible corrective measures
Phone cannot be switched on	On/Off key pressed too briefly. Battery is not charged. Battery contacts are dirty.	Press the On/Off key down for at least two seconds. Charge battery. Check charging indicator on the display. Clean the battery contacts.
Charging error	Battery is not charged. Outside temperature is too hot or cold. Contact problem No voltage Charger defective Wrong charger Battery defective	Charge battery. Make sure phone is charging at a normal temperature. Check the charger and connection to the phone. Check the battery contacts and clean them if necessary. Plug the charger into a different socket. If the charger does not warm up, replace it. Only use original LG accessories. Replace battery.
Number not permitted	The Fixed dialling number function is on.	Check the Settings menu and turn the function off.
Impossible to receive / send SMS & picture	Memory full	Delete some messages from the phone.
Files not opening	Unsupported file format	Check the file formats that can be supported.
SD card not working	FAT16, FAT32 file system supported	Check SD card file system via card reader, or format SD card using the phone.

Message	Possible causes	Possible corrective measures
The screen does not turn on when I receive a call.	Proximity sensor problem	If you use any protection tape or case, check to see if it has covered the area around the proximity sensor. Make sure that the area around the proximity sensor is clean.
No sound	Vibration mode	Check the settings status of the sound menu to make sure you are not in vibrate or silent mode.
Hang up or freeze	Intermittent software problem	Remove the battery, insert it again and switch on the phone. Try to perform a software update via the website.
Phone locked and does not function.	Restarting the phone	1. Turn the phone off. 2. Remove the battery cover. 3. Install the battery. 4. Close the cover. 5. Turn the phone on again.





