

ZTE Vec 4G
Mobile Phone
Quick Start Guide

LEGAL INFORMATION

Copyright © 2014 ZTE CORPORATION.

All rights reserved.

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

ZTE Corporation reserves the right to make modifications on print errors or update specifications in this guide without prior notice.

Trademarks

ZTE and the ZTE logos are trademarks of the ZTE Corporation. Google and Android are trademarks of Google, Inc. The *Bluetooth*[®] trademark and logos are owned by the Bluetooth SIG, Inc. and any use of such trademarks by ZTE Corporation is under license.

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

Other trademarks and trade names are the property of their respective owners.

We offer self-service for our smart terminal device users. Please visit the ZTE official website (at www.ztedevice.com) for more information on self-service and supported product models. Information on the website takes precedence.

Visit <http://www.ztedevice.com> to download the user manual. Just click **Support > Manuals** from the home page and then select your location, product type, and name to search for related support information.

Disclaimer

ZTE Corporation expressly disclaims any liability for faults and damages caused by unauthorized modifications of the software.

Version No. : R1.0

Edition Time : 4,2014


Manual No. : 079584506731

Product Safety Information

	Do not use hand-held while driving
	Do not use while re-fuelling
	For body-worn operation maintain a separation of 15 mm
	This device may produce a bright or flashing light
	Small parts may cause a choking hazard
	Do not dispose of it in a fire
	This device may produce a loud sound
	To prevent possible hearing damage, do not listen at high volume levels for long periods.

	Avoid contact with magnetic media
	Avoid Extreme Temperatures
	Keep away from pacemakers and other personal medical devices
	Avoid any contact with liquid, keep it dry
	Switch off when instructed in hospitals and medical facilities
	Do not attempt to disassemble
	Switch off when instructed in aircrafts and airports
	Only use approved accessories
	Switch off in explosive environments
	Do not rely on this device for emergency communications

Getting to Know Your Phone

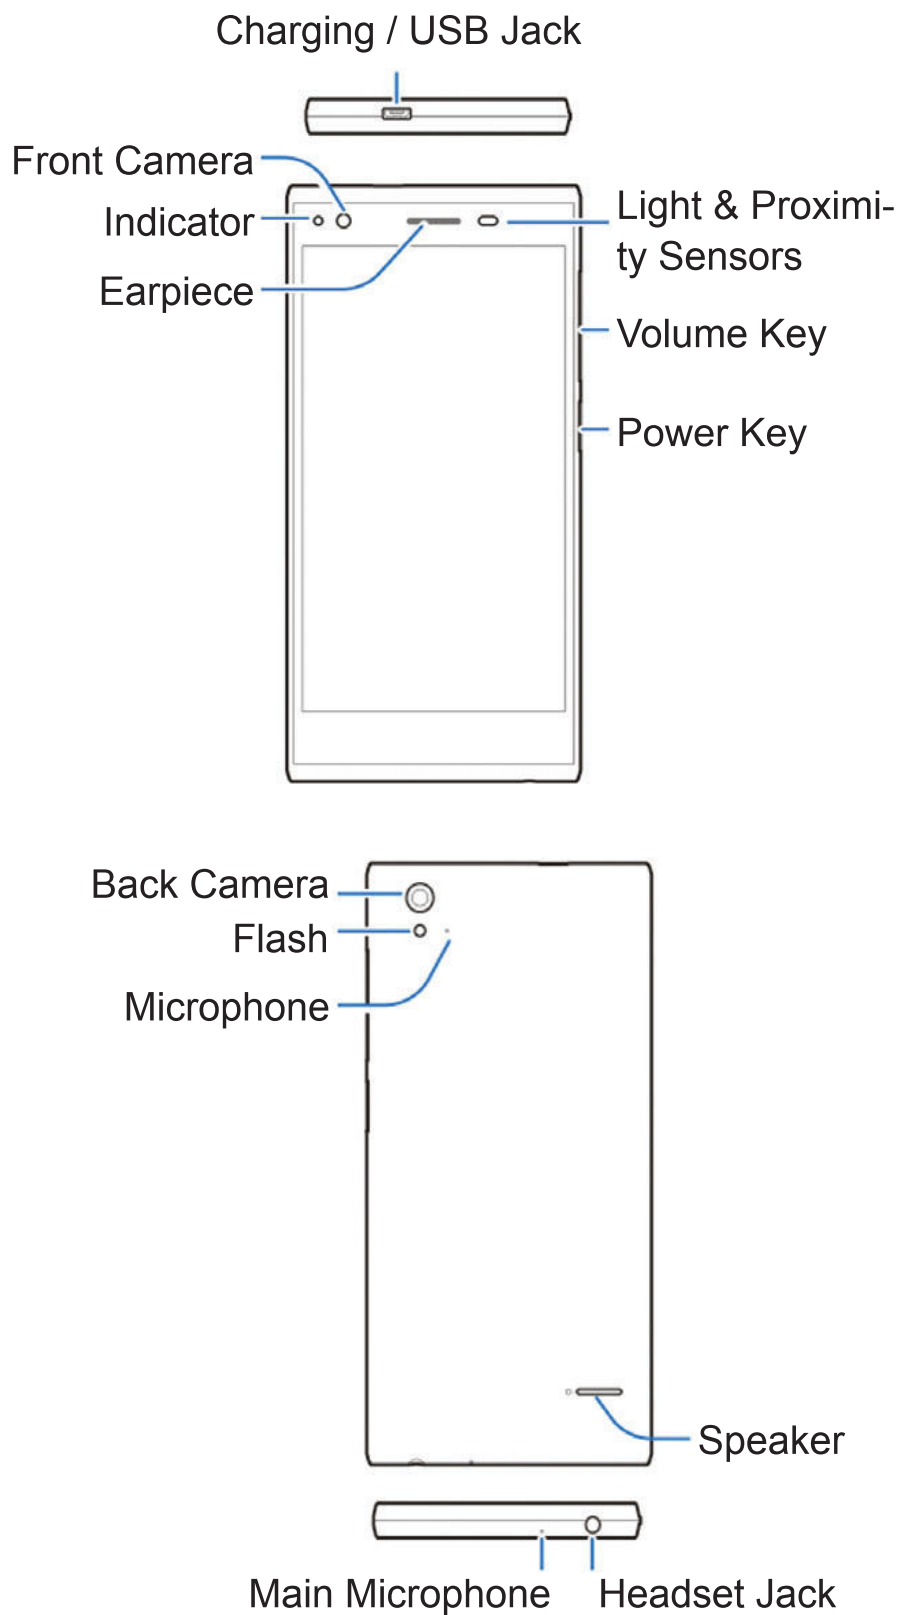

Power Key

- Press and hold to turn on or off airplane mode, enable silent mode, vibration mode or sound, restart, or to power off.
- Press to switch your phone to sleep mode or wake it up.

Volume Key

- Press and hold to turn the volume up or down.

On-screen Keys

(Home)

- Touch to return to the home screen from any application or screen.
- Drag to Google to open Google Search.

(Back)

Touch to go to the previous screen.

(Recent Apps)


Touch to see recently used applications.

Before Getting Started


Installing the micro-SIM Card

Switch off your phone before installing the micro-SIM card.

1. Using the thimble take out the card holder.

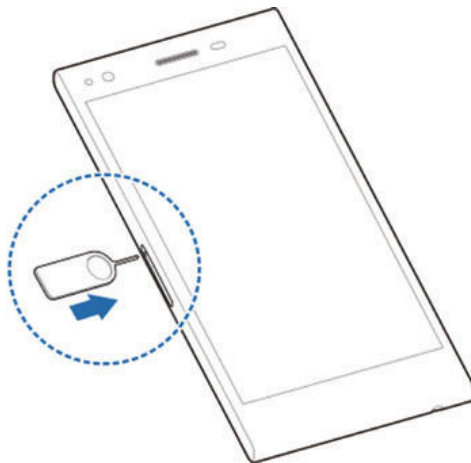


2. Hold the micro-SIM card with the cut corner oriented as shown and slip it into the card holder.

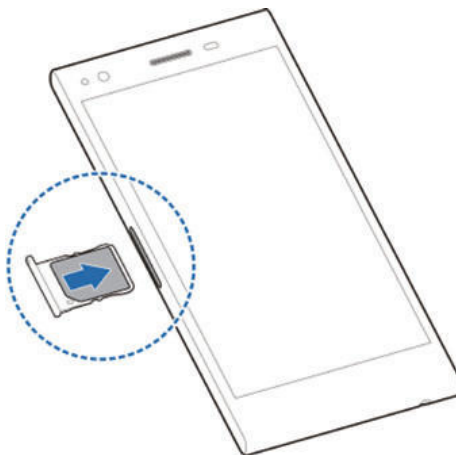

CAUTION: To avoid damage to the phone, please do not use other kinds of SIM cards, and do not use a non-standard micro-SIM card cut from a SIM card. You can get the standard micro-SIM card from your service provider.

Charging the Battery

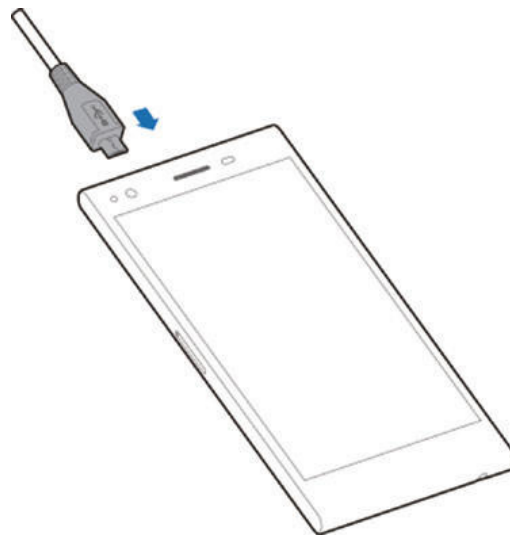

When you first get your new phone you'll need to charge the battery like this:

1. Connect the adapter to the charging jack.
2. Connect the charger to a standard AC power outlet.
3. Disconnect the charger when the battery is fully charged.

WARNING! Use only ZTE-approved chargers and cables. The use of unapproved accessories could damage your phone or cause the battery to explode.

CAUTION: Do not change the built-in rechargeable battery in your phone by yourself. The battery can only be changed by ZTE or ZTE authorised service provider.

NOTE: If the battery is extremely low, you may be unable to power on the phone even when it is being charged. In this case, try again after charging the phone for at least 10 minutes. Contact customer service if you still cannot power on the phone after prolonged charging.

Powering On/Off Your Phone

Make sure the battery is charged before powering on.

- Press and hold the **Power Key** to turn on your phone.
- To turn it off, press and hold the **Power Key** to open the options menu. Touch **Power off > OK**.

Waking Up Your Phone

1. Press the **Power Key** to activate your screen display.
2. Long press the screen to unlock.

NOTE:

If you have set an 'unlock pattern', or a PIN/password for your phone, you'll need to draw the pattern or enter the PIN/password to unlock your screen.

Using the Touch Screen

Your phone's touch screen lets you control actions through a variety of touch gestures.

- **Touch**
When you want to type using the onscreen keyboard, select items onscreen such as application and settings icons, or press onscreen buttons, simply touch them with your finger.
- **Touch and Hold**
To open the available options for an item (for example, a message or link in a Web page), touch and hold the item.
- **Swipe or Slide**
To swipe or slide means to quickly drag your finger vertically or horizontally across the screen.

- Drag
To drag, press and hold your finger with some pressure before you start to move your finger. While dragging, do not release your finger until you have reached the target position.
- Pinch
In some apps (such as Maps, Browser, and Gallery), you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in).
- Rotate the screen
For most screens, you can automatically change the screen orientation from portrait to landscape by turning the phone sideways.

יורוקום

פרטי היבואן:

שם: יורוקום תקשורת סלולרית בע"מ

כתובת: רח' הנחושת 4 תל אביב

ח.פ: 511795247

טלפון: 03-7699000 \ *3131

פקס: 05779433936

הוראות בטיחות לסוללה

- זהירות סכנה! החלפה שגויה עלולה לגרום לפיצוץ. יש להחליף אך ורק בסוללה שאושרה על ידי היצרן לשימוש בדגם זה.
- יש להשתמש רק בסוללות, במטענים ובאביזרים שאושרו על ידי היצרן לשימוש בדגם זה. שימוש באביזרים אחרים עלול לגרום לתפוגת כל אישור או אחריות, ועלול להיות מסוכן. במיוחד שימוש במטענים ובסוללות שאינם מאושרים עלול לגרום לשריפה, פיצוץ, נזילה או מפגע אחר.
- אין לחשוף את הסוללה או מארז הסוללה לחום גבוה כגון אור שמש, אש וכד'.
- אין להשליך את הסוללה לאשפה אלא במתקני מחזור המיועדים לכך.

הוראות בטיחות לשימוש במטען

- מנע חדירת מים או לחות.
- הרחק את המטען מטמפרטורות קיצוניות כגון: רדיאטור, תנור חם, או מקום הפתוח לשמש.
- הרחק את המטען מנרות דולקים, סיגריות וסיגרים דלוקים, להבה גלויה וכו'.
- מנע נפילת עצמים או התזת נוזלים כולל חומצות כלשהן על המטען.
- חבר את המטען רק לשקע המספק את רמת המתח המצוינת על המטען.
- כדי להקטין סכנת נזק לכבל החשמלי, אל תנתק את המטען מהשקע ע"י משיכת הכבל. אחוז את המטען ומשוך אותו מהשקע.
- ודא שהכבל מנותב כך שאין סכנה שידרכו עליו או שייכשלו בו.
- אזהרה: לעולם אין להחליף את הפתיל או התקע בתחליפים לא מקוריים.
- אם התקע אינו מתאים לשקע, השתמש במתאם מתאים לפי המלצת היצרן.
- חיבור לקוי עלול לגרום להתחשמלות המשתמש.
- בשימוש עם כבל מאריך יש לוודא תקינות מוליך הארקה שבכבל.
- מיועד לשימוש פנים בלבד ולא במקום החשוף לשמש, גשם וכו'.
- יש להקפיד ולתחזק את התקן ניתוק במצב תפעולי מוכן לשימוש.

שימוש במסך מגע

מסך המגע של הטלפון שלך מאפשר לך להשתמש בו בצורות ובתנועות שונות

- מגע
אם אתה מעוניין להקליד במקלדת, להיכנס לאפליקציה מסוימת או ללחוץ על כל מקש שהוא – פשוט גע במסך
- גע והחזק
כדי להציג אפשרויות מסוימות של יישום\ אובייקט מסוים (כגון הודעה, כתובת אינטרנט וכו') גע והחזק במסך משוך או החלק
- החלקה או משיכה משמעותה משיכת האצבע על גבי המסך בכיוון אופקי או אנכי גרירה
- כדי לגרור, לחץ והחזק את האצבע שלך לפני שאתה מזיז אותה. בזמן הגרירה, אל תשחרר את האצבע לפני שהגעת למיקום הרצוי
- צביטה
בחלק מהאפליקציות (כמו מפות, דפדפן, גלריית תמונות) באפשרותך לבצע הגדלה או הקטנה ע"י מיקום 2 אצבעות על המסך ביחד ולבצע צביטה על המסך. הצמדת האצבעות תוביל להקטנה, הרחבת האצבעות תוביל להגדלה
- סיבוב מסך
ברוב המסכים, תוכל לסובב את המכשיר לכיוון אופקי או אנכי כדי לשנות את תצוגת המסך

הפעלה וכיבוי

וודא כי כרטיס ה-Micro-SIM נמצא בתוך הטלפון וכי הסוללה טעונה.

- לחץ והחזק את מקש ההדלקה והכיבוי כדי להפעיל את הטלפון.
- כדי לכבות את הטלפון, לחץ לחיצה ארוכה על מקש ההדלקה והכיבוי ובחבר באפשרות "כיבוי" במסך התצוגה. לאחר מכן יש לאשר את הפעולה במסך.

הער את הטלפון


הטלפון שלך ייכנס למצב שינה לאחר זמן מה שלא היה בשימוש. זאת כדי לחסוך בסוללה ולמנוע לחיצות לא רצוניות.

באפשרותך להעיר את הטלפון כך:

1. לחיצה קצרה על מקש הדלקה וכיבוי.
2. לחץ לחיצה ארוכה על המסך כדי לשחרר את הנעילה.

הערה: אם הפעלת נעילה או הצפנה אחרת למכשירך, תידרש להזינה כעת.

טעינת הסוללה

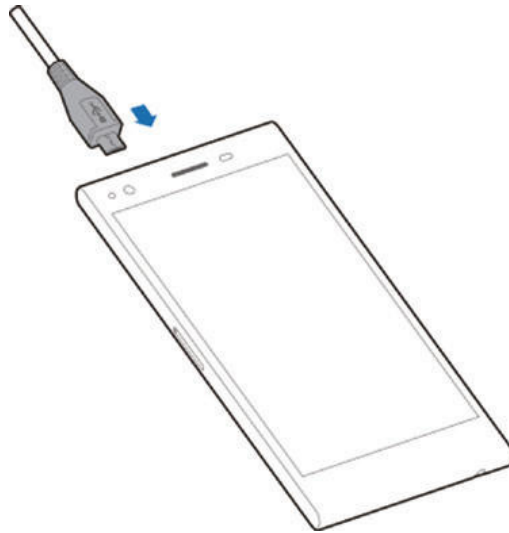

עליך לטעון את הסוללה כדי שתוכל להתחיל ולהשתמש בטלפון.

אזהרה! יש להשתמש אך ורק במטענים וכבלים שאושרו ע"י ZTE. שימוש באביזרים לא מאושרים יכולים לגרום לנזק לטלפון שלך או להתפוצצות הסוללה.

שים לב! אין לנסות ולהחליף את הסוללה המובנית לבד. החלפת הסוללה מתבצעת רק על ידי ZTE או נציגתה.

1. חבר את כבל הטעינה לטלפון.
2. חבר את המטען לשקע החשמל.
3. נתק את המטען מהחשמל שהסוללה טעונה במלואה.


הערה: אם הסוללה חלשה בצורה קריטית, ייתכן כי לא תוכל להפעיל את מכשירך אפילו כשהוא נמצא בטעינה. במקרה כזה, יש להשאיר את המכשיר בטעינה למשך כ-10 דקות. אם מכשירך עדיין איננו פועל – אנא פנה לתמיכה ושירות לקוחות.

לפני שמתחילים


הכנסת כרטיס ה-MicroSIM

וודא כי הטלפון כבוי לפני הכנסת כרטיס ה-MicroSIM.

1. בעזרת המחט, לחץ והוצא את מגירת ה-MicroSIM החוצה.

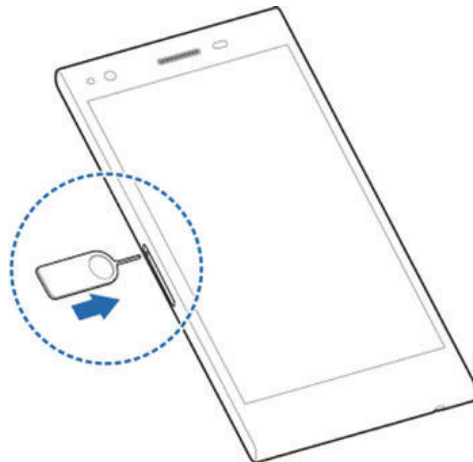

2. מקם את כרטיס ה-MicroSIM כפי שמתואר באיור והשחל אותו חזרה פנימה.

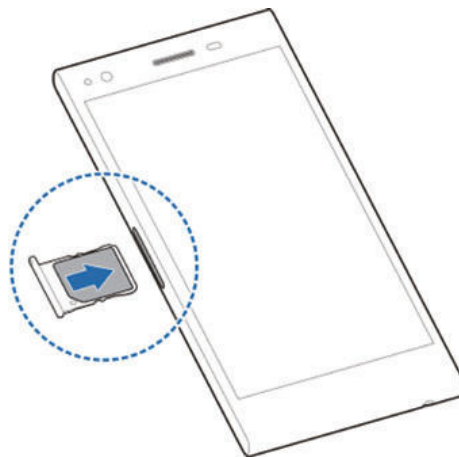

אזהרה:

כדי להימנע מגרימת נזק למכשירך, אין להשתמש בכרטיסי SIM שונים ולא סטנדרטיים.

יש להשתמש בכרטיס **MicroSIM** מקורי אשר הונפק ע"י הרשת הסלולארית.

מקש הפעלה

- לחץ והחזק כדי להפעיל או לכבות מצב טיסה, להפעיל מצב שקט, לבחור בין מצב רטט או שמע או לכבות את הטלפון.
- לחיצה קצרה כדי להכניס את הטלפון למצב שינה.
- לחיצה קצרה כדי לעורר את הטלפון.

מקשי עוצמת שמע

- לחיצה במקש העליון כדי להגביר את עוצמת השמע, מקש תחתון כדי להנמיך.

מקשים וירטואליים

(מקש בית)

- לחץ כדי לחזור חזרה למסך הבית מכל אפליקציה או מסך.
- משיכה כדי לפתוח את מסך חיפוש Google.


(חזרה)

- לחץ כדי לחזור למסך הקודם.

(אפליקציות אחרונות)

- לחץ כדי להציג את האפליקציות האחרונות שהיו בשימוש לאחרונה.

הכר את מכשירך

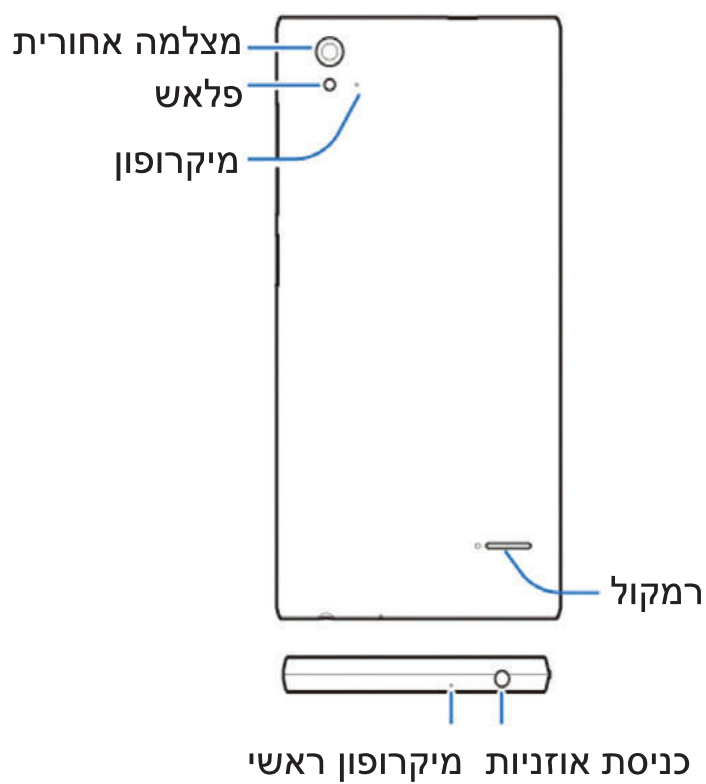

מידע בטיחותי בנוגע למוצר

	אין להשתמש בזמן תדלוק.
	אין לאחוז במכשיר בזמן נהיגה.
	התקן זה עשוי לפלוט אור בהיר או בוהק.
	בעת נשיאה על הגוף יש להקפיד על הפרדה של 15 מ"מ.
	אין להשליך לאש.
	חלקים קטנים עלולים לגרום לחנק.
	יש להרחיק מהתקני אחסון מגנטיים.
	התקן זה עשוי לפלוט רעש חזק.
	אין לחשוף לטמפרטורות קיצוניות.
	כדי להימנע מנזק אפשרי לשמיעה, אין להאזין בעוצמות שמע גבוהות למשך זמן ממושך.
	יש להרחיק מקוצבי לב וציוד רפואי אישי אחר.
	יש להימנע ממגע עם נוזלים, ולשמור על המכשיר יבש.
	יש לכבות על פי הנדרש בבתי חולים ובמתקנים רפואיים.
	אין לפרק את המכשיר.
	יש לכבות על פי הנדרש בכלי טייס ובשדות תעופה.
	אין להסתמך על התקן זה לתקשורת בשעת חירום.
	יש לכבות בסביבות נפיצות.
	יש להשתמש אך ורק באביזרים נלווים מאושרים.

מידע משפטי

**זכויות יוצרים © 2014 תאגיד ZTE
כל הזכויות שמורות.**

אין לצטט, לשכפל, לתרגם או להשתמש בכל צורה אחרת ובכל אמצעי, אלקטרוני או מכני, לרבות צילום ומיקרופילם, בשום חלק ממסך זה ללא הסכמה כתובה מראש של תאגיד ZTE. תאגיד ZTE שומר על הזכות לבצע תיקוני שגיאות דפוס או לעדכן את המפרטים במדריך ללא הודעה מוקדמת. אנו מציעים שירותים נוספים ללקוחותינו באתר הרשמי של ZTE, למידע נוסף על השירותים ופירוט דגמי המוצרים הנתמכים בכתובת www.zte.com.cn המידע המעודכן מופיע באתר. למידע נוסף, אנא בקרו באתר www.ztedevices.com והורידו את מדריך ההפעלה המלא.

ZTE Vec 4G
טלפון נייד
מדריך הפעלה מהיר

מהדורה 1.2